

2004 BUELL FIREBOLT

SERVICE MANUAL

Part Number 99493-04Y

Section 1: Maintenance

Section 2: Chassis

Section 3: Engine


Section 4: Fuel System

Section 5: Starter


Section 6: Drive/Transmission

Section 7: Electrical


Appendices

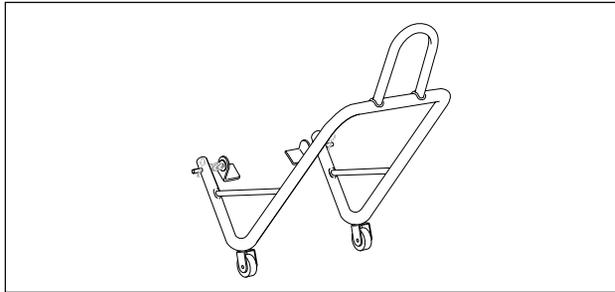


**Part No. B-41174 Rear Wheel Support Stand and
Part No. B-41174-2 Replacement Pad**

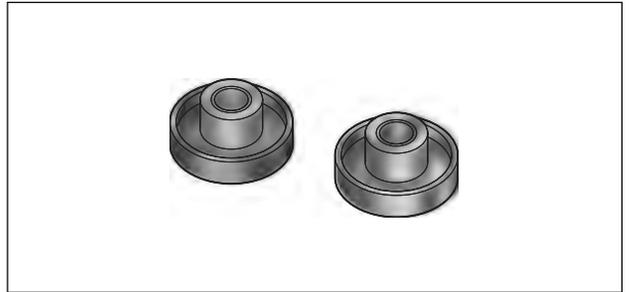


**Part No. B-45521 Steering Head Bearing Remover/
Installer**

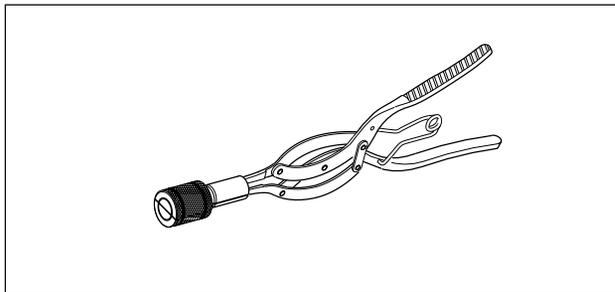


Part No. B-42887 Brake Caliper Piston Remover

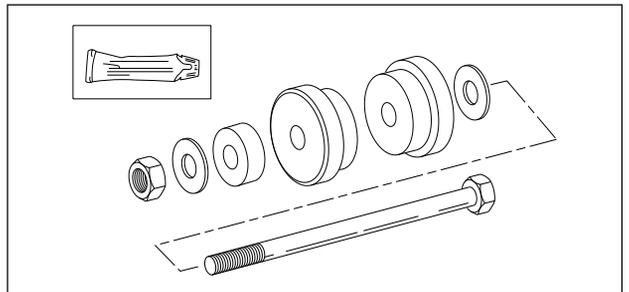


Part No. 39302

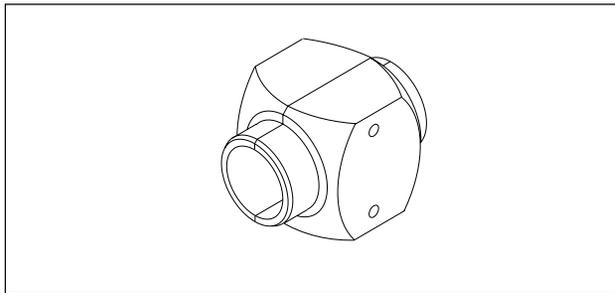


Part No. B-43721 Front Fork Seal Driver

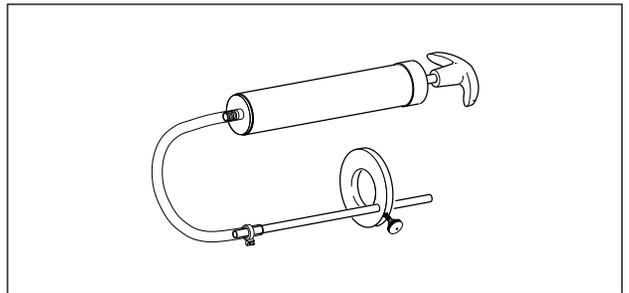


Part No. B-59000A Pro Level Oil Gauge

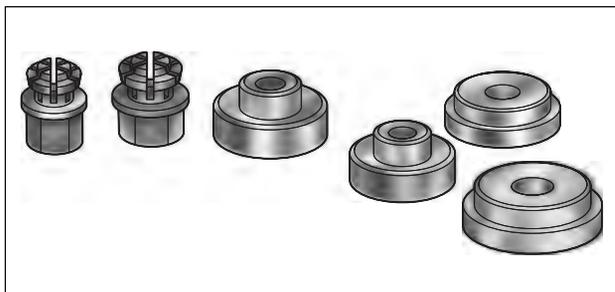


Part No. B-43993-7/-8 Wheel Bearing Collets

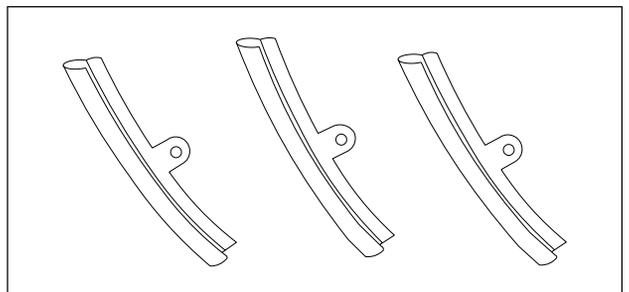


Part No. HD-01289 Rim Protectors

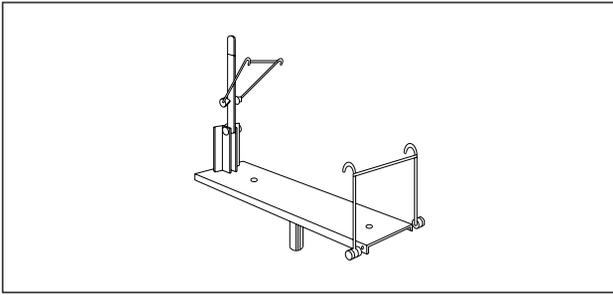


Part No. HD-21000 Tire Spreader

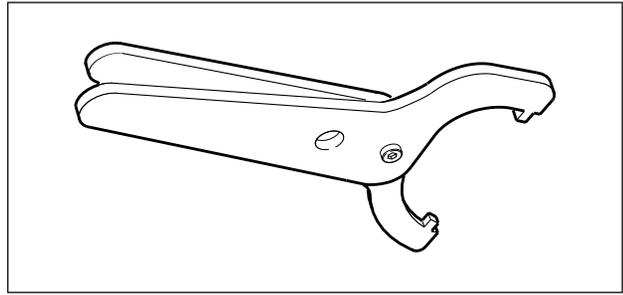


Part No. HD-94700-52C Shock Spanner Preload Adjustment Tool

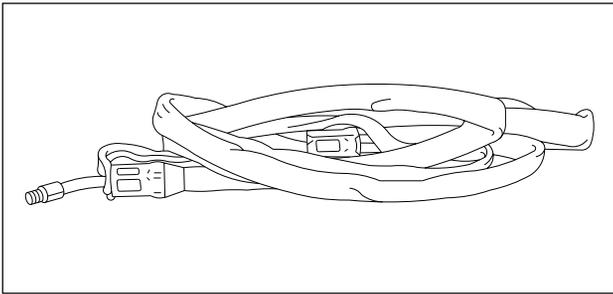


Part No. HD-28700 Tire Bead Expander

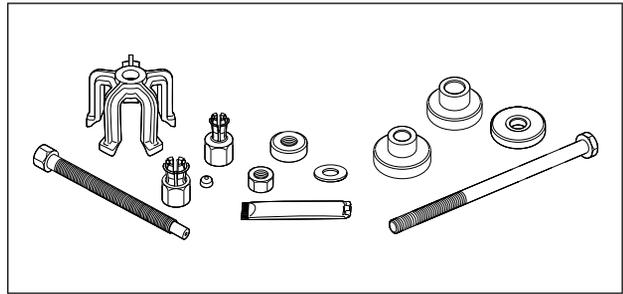


Part No. HD-44060

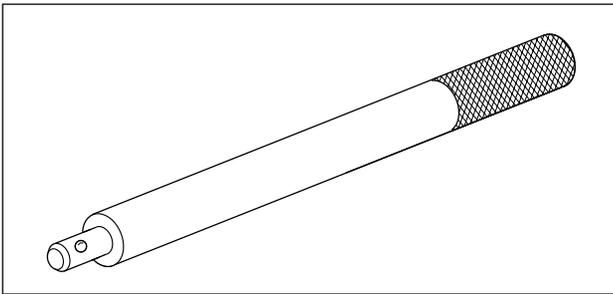


Part No. HD-33416 Universal Driver Handle

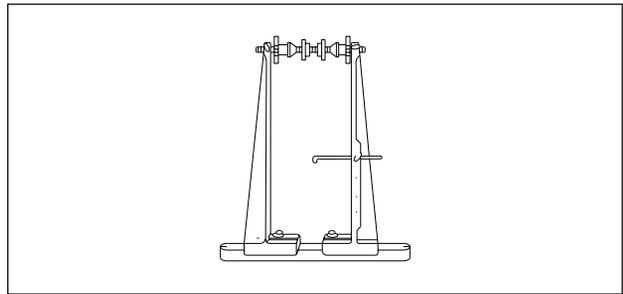


Part No. HD-99500-80 Wheel Truing and Balancing Stand

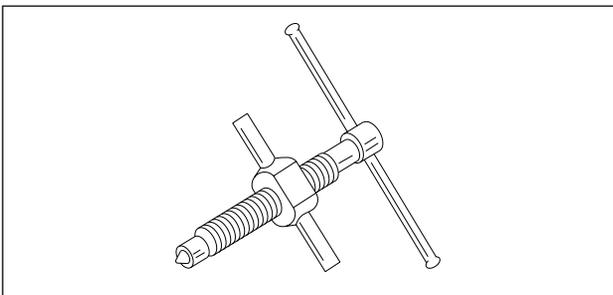


Part No. HD-33418 Universal Puller Forcing Screw

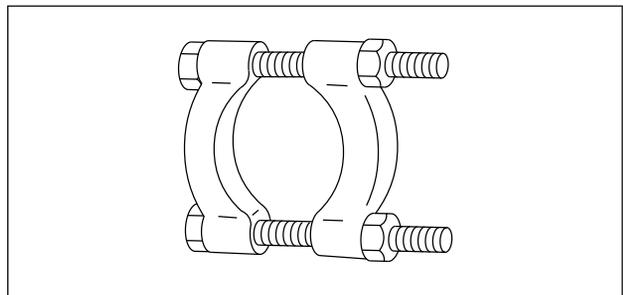


Part No. HD-95637-46A Wedge Attachment for Claw Puller. Use with HD-95635-46.

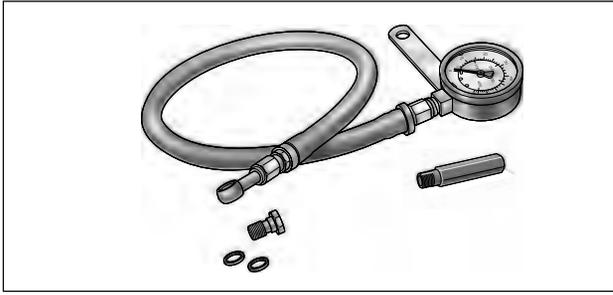


Part No. HD-96921-52A Oil Pressure Gauge

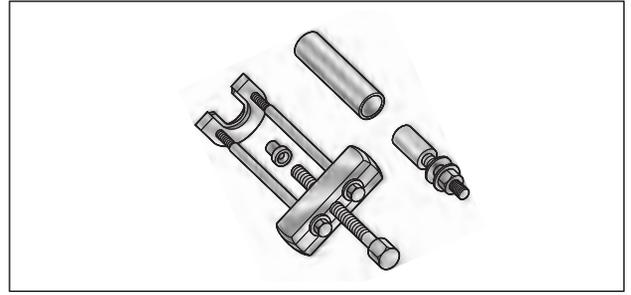


Part No. HD-34902-B

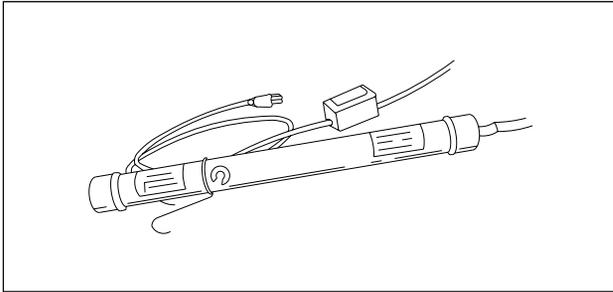


Part No. HD-35457 Black Light Leak Detector

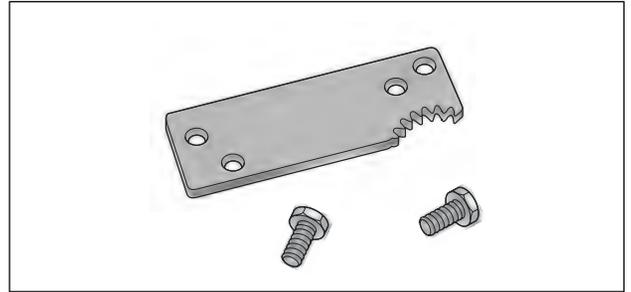


Part No. HD-43984 Crankshaft Locking Tool

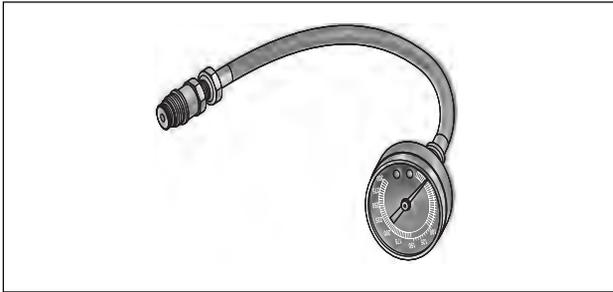


Part No. HD-33223-1 Cylinder Compression Gauge

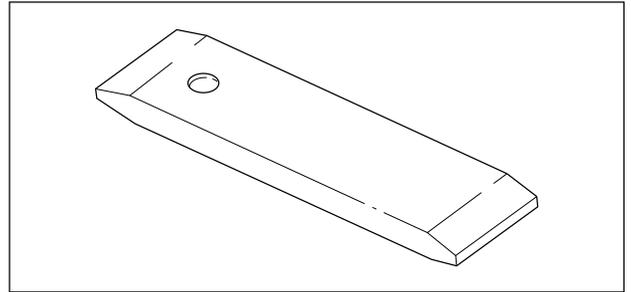


Part No. HD-38362 Sprocket Locking Link (XB9R)
Part No. HD-46283 Sprocket Locking Link (XB12R)

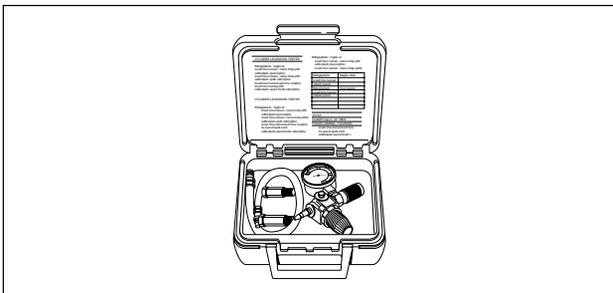


Part No. HD-35667A Cylinder Leakdown Tester

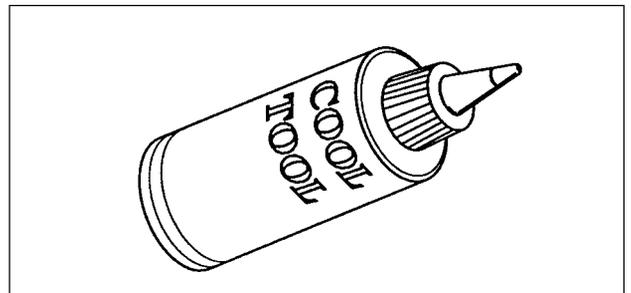


Part No. HD-39964 Reamer Lubricant (Cool Tool)

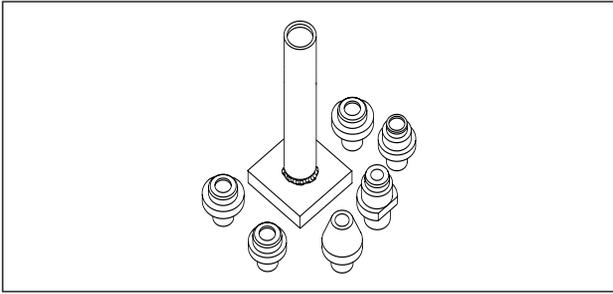


Part No. HD-39782 Cylinder Head Support

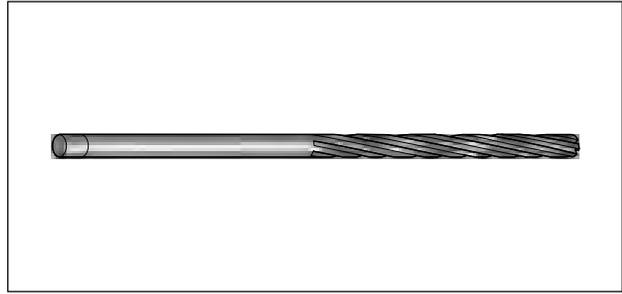


Part No. B-45523 Valve Guide Reamer (7mm)

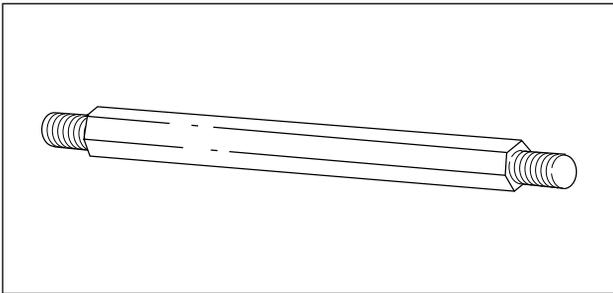


Part No. HD-39786 Cylinder Head Holding Fixture

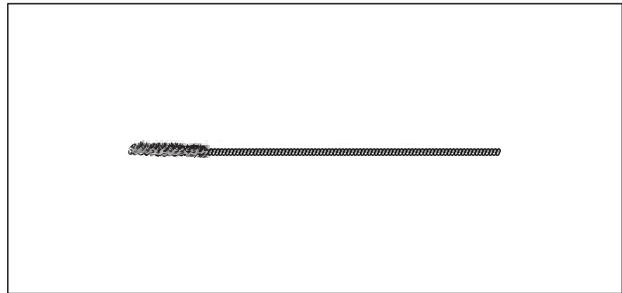


Part No. B-45525 Valve Guide Hone

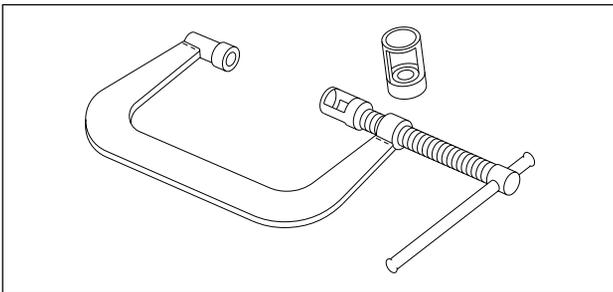


Part No. HD-34736B Valve Spring Compressor

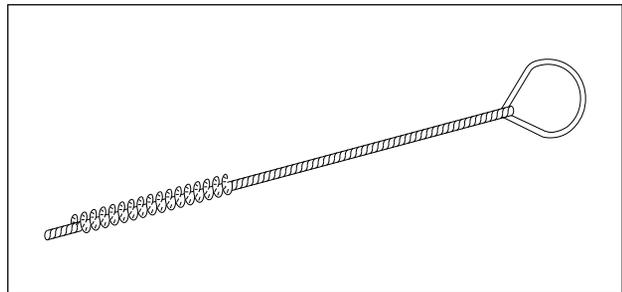


Part No. HD-34751 Nylon Valve Guide Brush

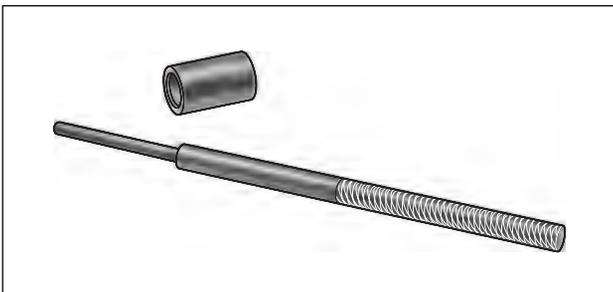


Part No. B-45524 Valve Guide Installer

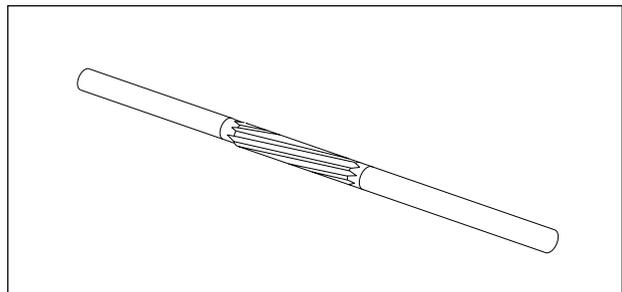


Part No. HD-94804-57 Rocker Arm Bushing Reamer

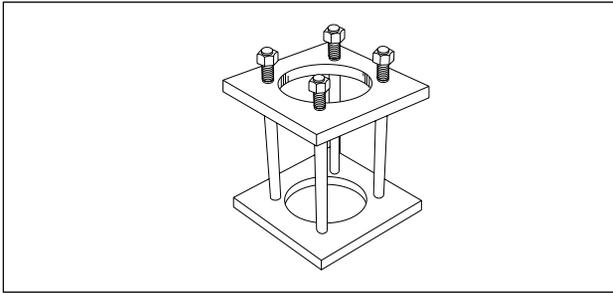


Part No. HD-33446A Cylinder Torque Plates and Torque Plate Bolts Part No. HD-33446-86

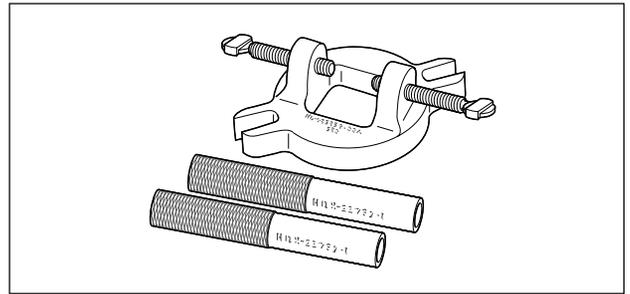


Part No. HD-95952-33B Connecting Rod Clamping Tool

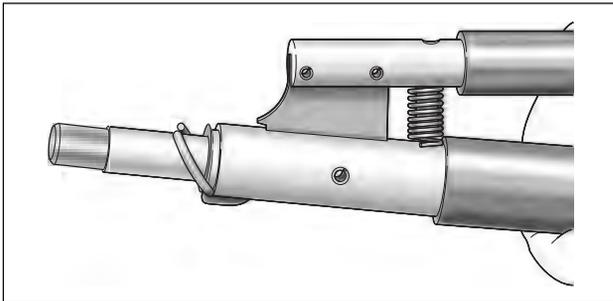


Part No. HD-34623C Piston Pin Retaining Ring Installer/Remover

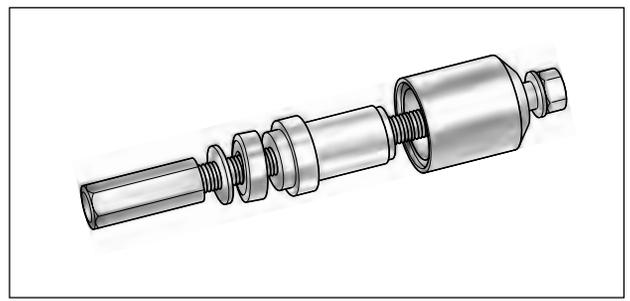


Part No. HD-95970-32D Piston Pin Bushing Tool

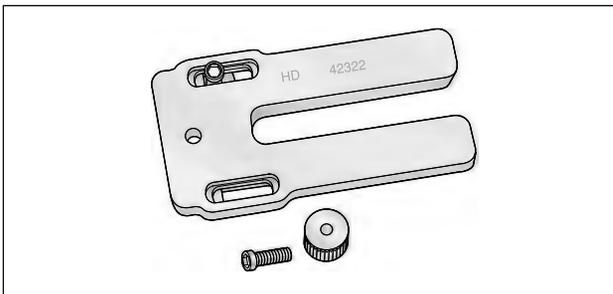


Part No. HD-42322 Piston Support Plate

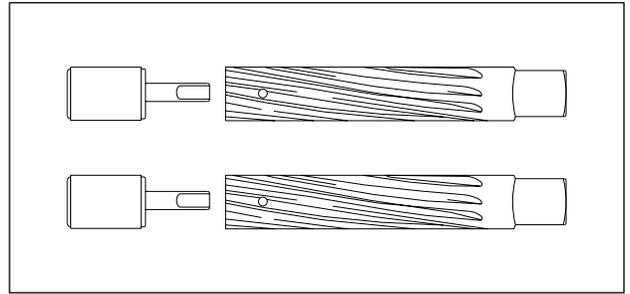


Part No. HD-94800-26A Connecting Rod Bushing Reamers and Pilots

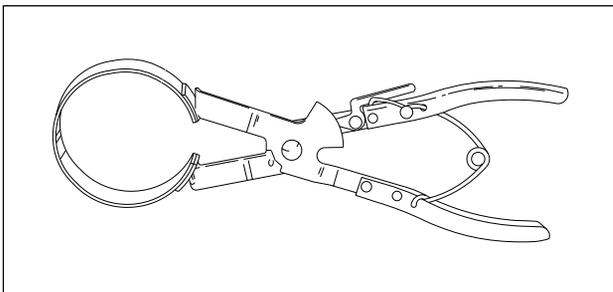


Part No. HD-96333-51C Piston Ring Compressor

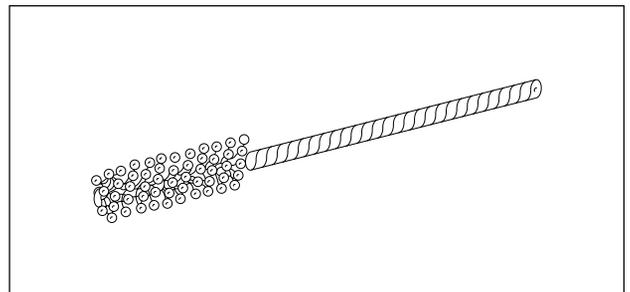


Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)

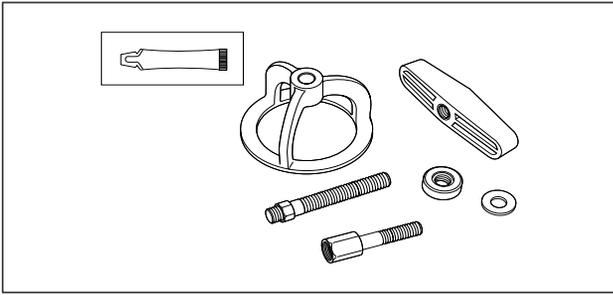

Part No. HD-38515-A Clutch Spring Compressing Tool and Part No. HD-38515-91 Forcing Screw

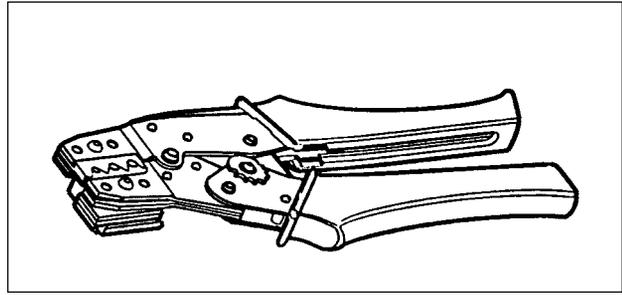


Part No. HD-39965 Deutsch Terminal Crimp Tool

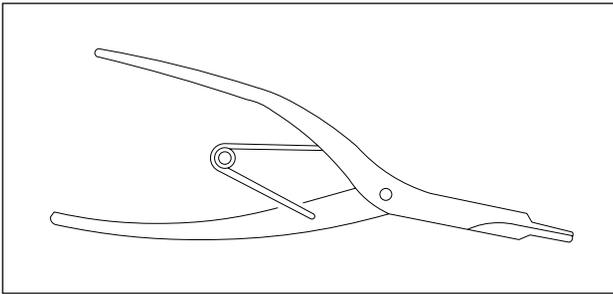


Part No. J-5586 Transmission Shaft Retaining Ring Pliers




Part No. HD-41354

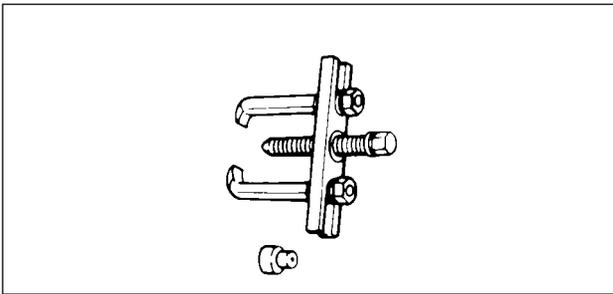

Part No. HD-97292-61 Two Claw Puller

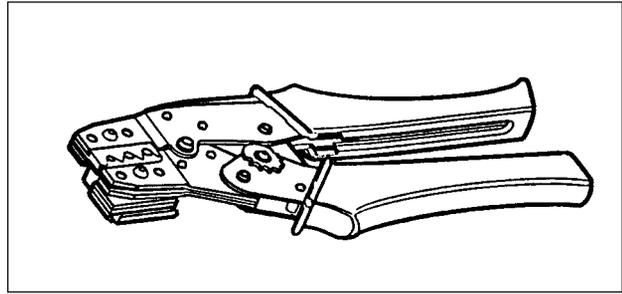

Part No. HD-41609 Amp Terminal Crimp Tool

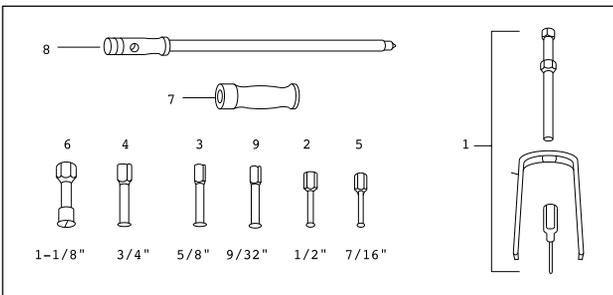

Part No. HD-95760-69A Bushing/Bearing Puller Tool Set. Set includes items 1-7. Items 8 (HD-95769-69), 9 (HD-95770-69) and 10 (HD-95771-69) are optional.

REMOVING SOCKET/PIN TERMINALS

1. Remove connector from the retaining device, either attachment or rosebud clip.
2. Depress the button on the socket terminal side of the connector (plug) and pull apart the pin and socket halves.
3. Bend back the latch slightly and free one side of secondary lock, then repeat the step to release the other side. Rotate the secondary lock outward on hinge to access terminals in chambers of connector housing.
4. Looking in the terminal side of the connector (opposite the secondary lock), take note of the cavity next to each terminal.
5. See [Figure B-1](#). With the flat edge against the terminal, insert the pick tool (Snap-On TT600-3) into the cavity until it stops. Pivot the end of the pick away from the terminal (locktab is inside housing) and gently tug on wire to pull terminal from chamber. Do not tug on the wire until the tang is released or the terminal will be difficult to remove. A "click" is heard if the tang is engaged but then

inadvertently released. Repeat the step without releasing the tang.

NOTES

- If pick tool is not available, a push pin/safety pin may be used instead.
- An *ELECTRICAL TERMINAL CRIMP TOOL* (Part No. HD-41609) is used to install Amp Multi lock pin and socket terminals on wires. If new terminals must be installed, see *Crimping Instructions* on the next page.

INSTALLING SOCKET/PIN TERMINALS

NOTE

For wire location purposes, numbers are stamped into the secondary locks of both the socket and pin housings. See [Figure B-2](#).

1. From the secondary lock side of the connector, insert the terminal into its respective numbered chamber until it snaps in place. For proper fit, the slot in the terminal must face the tang in the chamber.

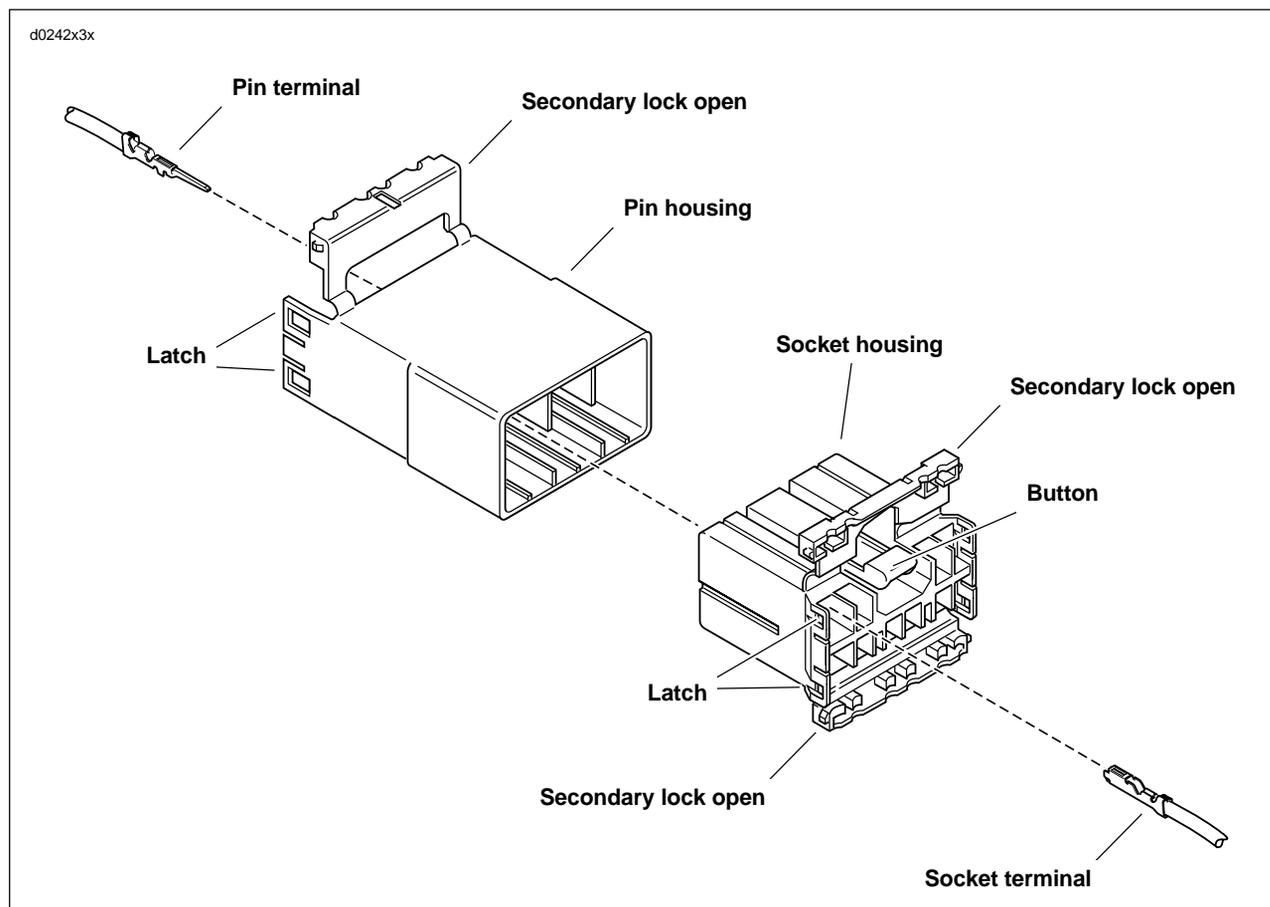


Figure B-1. 10-Place Amp Multilock Connector

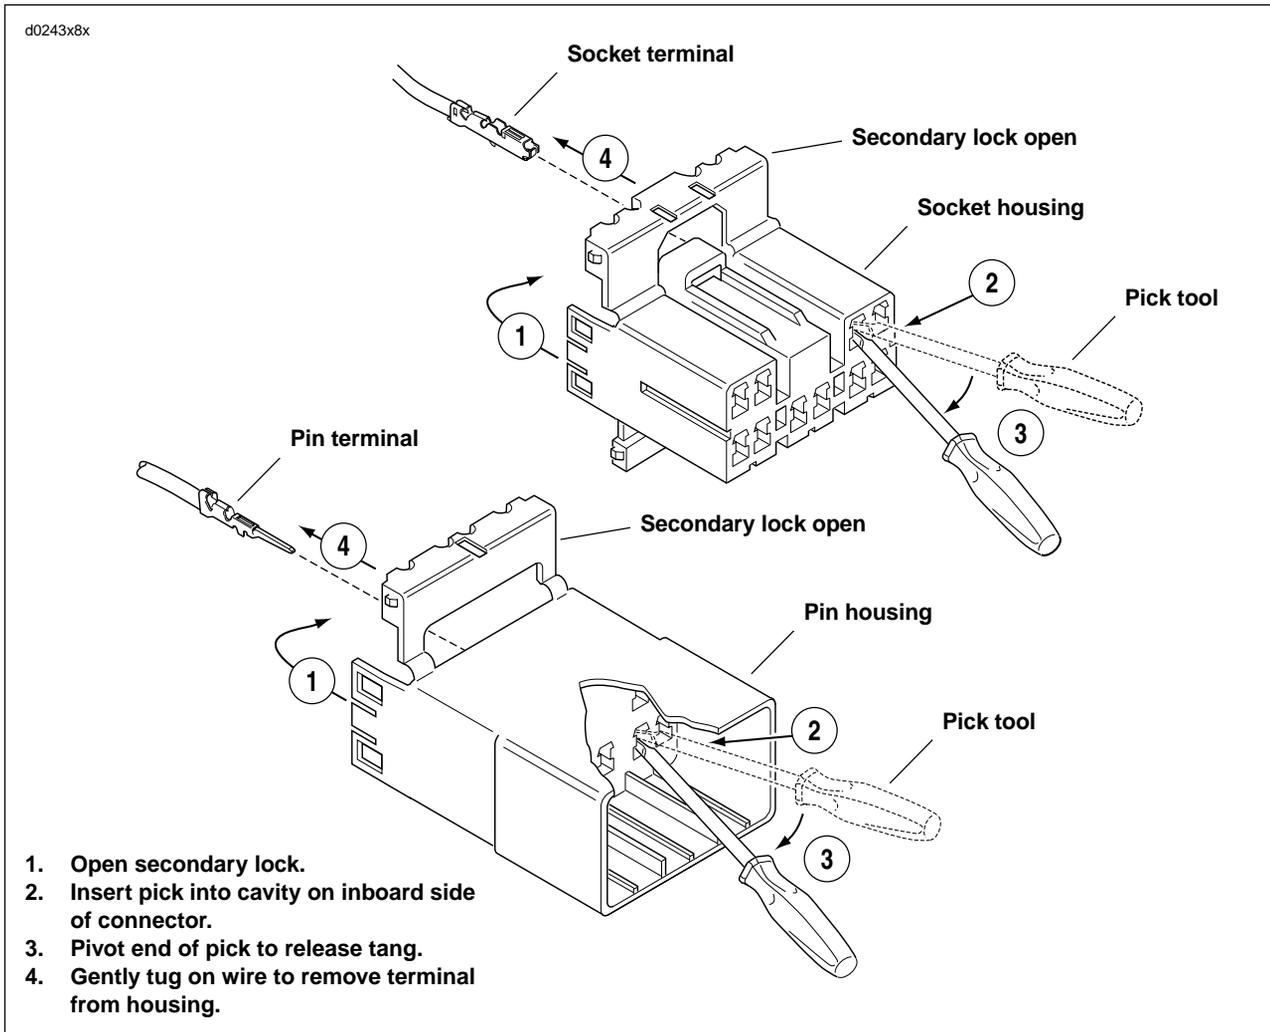


Figure B-2. Release Tang and Back Out Terminals

NOTES

- See [Figure B-3](#). The tang in the chamber engages the slot to lock the terminal in position.
 - On the pin side of the connector, tangs are positioned at the bottom of each chamber, so the slot in the pin terminal (on the side opposite the crimp tails) must face downward.
 - On the socket side, tangs are at the top of each chamber, so the socket terminal slot (on the same side as the crimp tails) must face upward.
 - Up and down can be determined by the position of the release button (used to separate the pin and socket halves). Consider the button to always be on top of the connector.
2. Gently tug on wire end to verify that the terminal is locked in place and will not back out of chamber.
 3. Rotate the hinged secondary lock inward until tabs fully engage latches on both sides of connector.
 4. Insert the socket housing (plug) into the pin housing (receptacle) until it snaps in place.
 5. Install connector on retaining device, either attachment or rosebud clip.


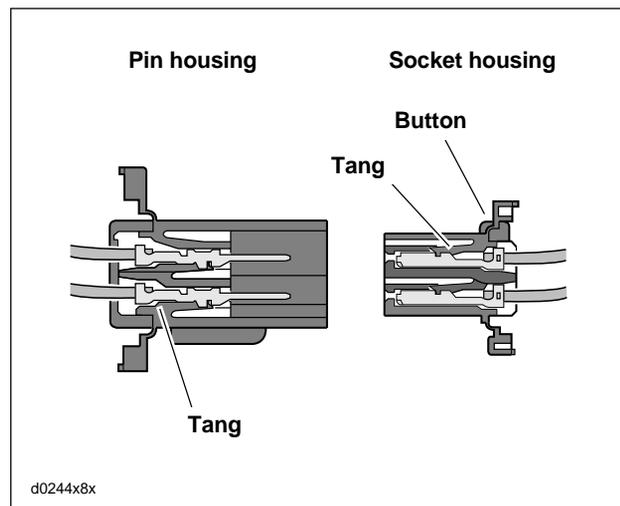



Figure B-3. Multilock Connector Cutaway View

Secondary locks open (socket housings shown)


Stamped numbers on secondary locks indicate wire color locations

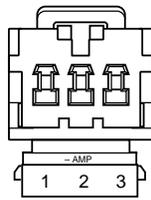


3-place

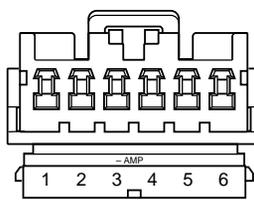

6-place

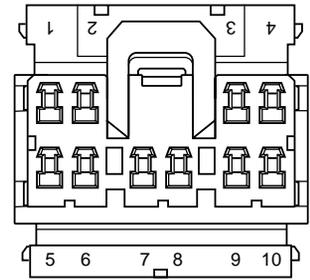

12-place

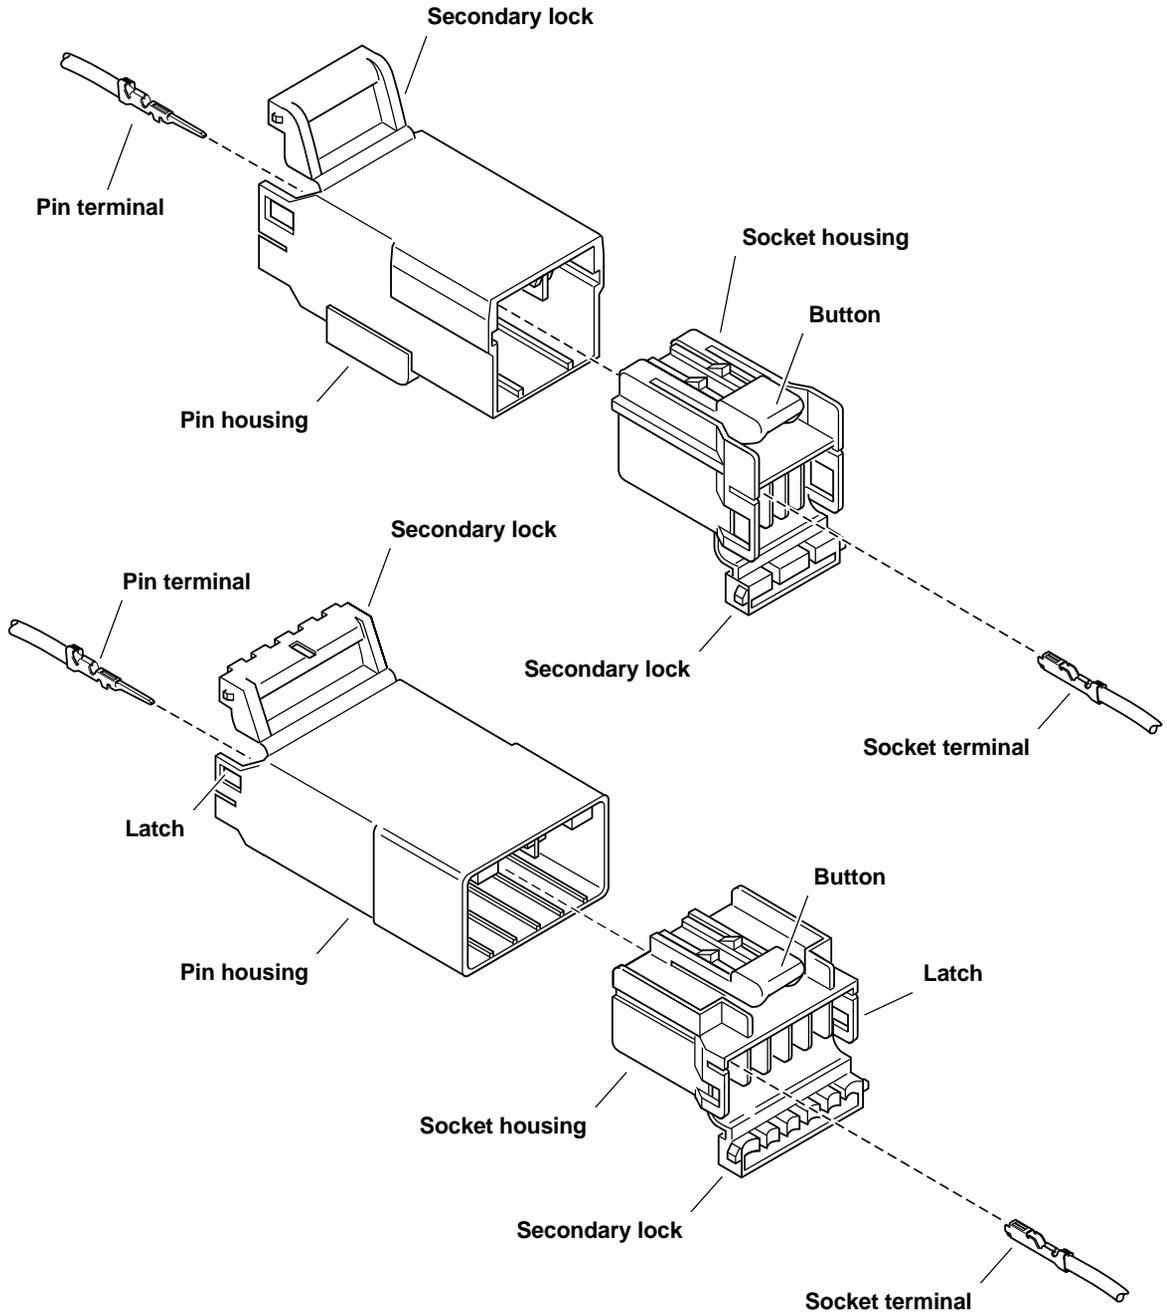

d0245x2x

Figure B-4. 3-Place and 6-Place Amp Multilock Connectors

CRIMPING INSTRUCTIONS

1. Squeeze the handles to cycle the crimp tool (Part No. HD-41609) to the fully open position.
2. Raise locking bar by pushing up on bottom flange. With the crimp tails facing upward, insert contact (socket/pin) through locking bar, so that the closed side of the contact rests on the front nest (concave split level area of the crimp tool). See Figure B-3.
3. Release locking bar to lock position of contact. When correctly positioned, the locking bar fits snugly in the space at the front of the core crimp tails.
4. Strip lead removing 5/32 in. (4 mm) of insulation. Insert wires between crimp tails until ends make contact with locking bar. Verify that wire is positioned so that short pair of crimp tails squeeze bare wire strands, while long pair folds over insulation material.
5. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete. Raise up locking bar and remove contact.
6. Inspect the quality of the core and insulation crimps. Distortion should be minimal.

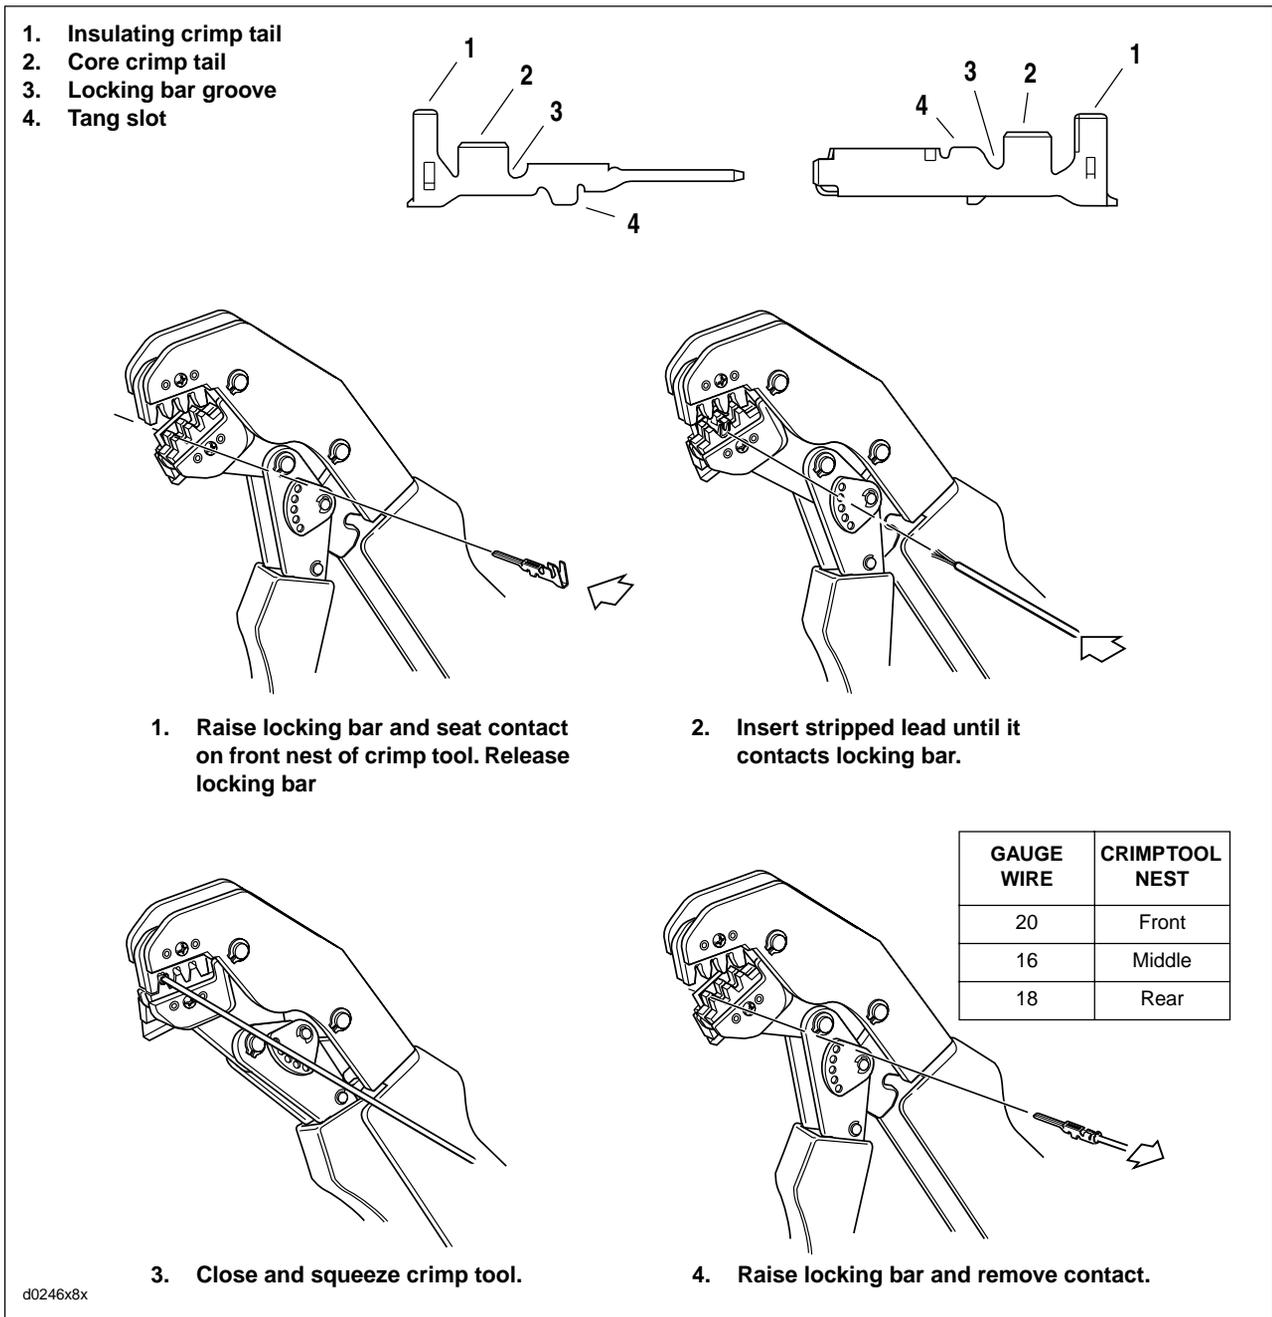


Figure B-5. Amp Multilock Crimping Procedure

GENERAL

Deutsch Connectors feature a superior seal to protect electrical contacts from dirt and moisture in harsh environments. The connector also provides superior pin retention.

See [Figure B-8](#). This 12-pin connector illustrates the various parts of the Deutsch connector. The following instructions may be followed for all 2-pin through 12-pin Deutsch connectors.

Socket housing: alignment tabs and/or external latch, secondary locking wedge, internal seal, wire seal, seal pin.

NOTE

Seal pins or plugs are installed in the wire seals of unused pin and socket locations. If removed, seal pins must be replaced to maintain the integrity of the environmental seal.

Pin housing: alignment grooves and/or external latch cover, attachment clip, secondary locking wedge, wire seal, seal pin.

REMOVING/DISASSEMBLING

Attachment clips are attached to the pin housings of most connectors. The clips are then attached to T-studs on the motorcycle frame. T-studs give positive location to electrical connectors and wire harness. Consistent location reduces electrical problems and improves serviceability.

1. Push the connector to disengage small end of slot on attachment clip from T-stud. Lift connector off T-stud.
2. Depress the external latch(es) on the socket housing side and use a rocking motion to separate the pin and socket halves. Two-, three-, four- and six-pin Deutsch connectors have one external latch, while eight- and twelve-pin connectors have two, both of which must be pressed simultaneously to separate the connector halves.

NOTE

With few exceptions, the socket housing can always be found on the accessory side, while the pin side of the connector is connected to the wiring harness.

REMOVING/INSTALLING SOCKETS

1. See [Figure B-7](#). Remove the secondary locking wedge. Insert the blade of a small screwdriver between the socket housing and locking wedge inline with the groove (inline with the pin holes if the groove is absent). Turn the screwdriver 90 degrees to pop the wedge up.
2. See [Figure B-8](#). Gently depress terminal latches inside socket housing and back out sockets through holes in rear wire seal.



Figure B-6. Remove Secondary Locking Wedge

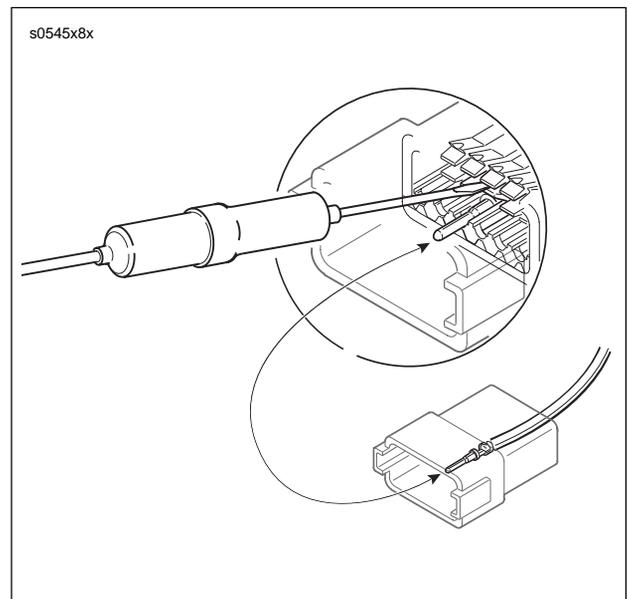


Figure B-7. Depress Terminal Latches/Back Out Pins

NOTE

*An ELECTRICAL TERMINAL CRIMP TOOL (Part No. HD-39965) is used to install Deutsch pin and socket terminals on wires. If **new** terminals must be installed, follow the instructions included with the crimping tool or see *Crimping Instructions* in this section.*

Fit rear wire seal into back of socket housing, if removed. Grasp socket approximately 1.0 in. (25.4 mm) behind the contact barrel. Gently push sockets through holes in wire seal into their respective chambers. Feed socket into chamber until it “clicks” in place. Verify that socket will not back out of chamber; a slight tug on the wire will confirm that it is properly locked in place.

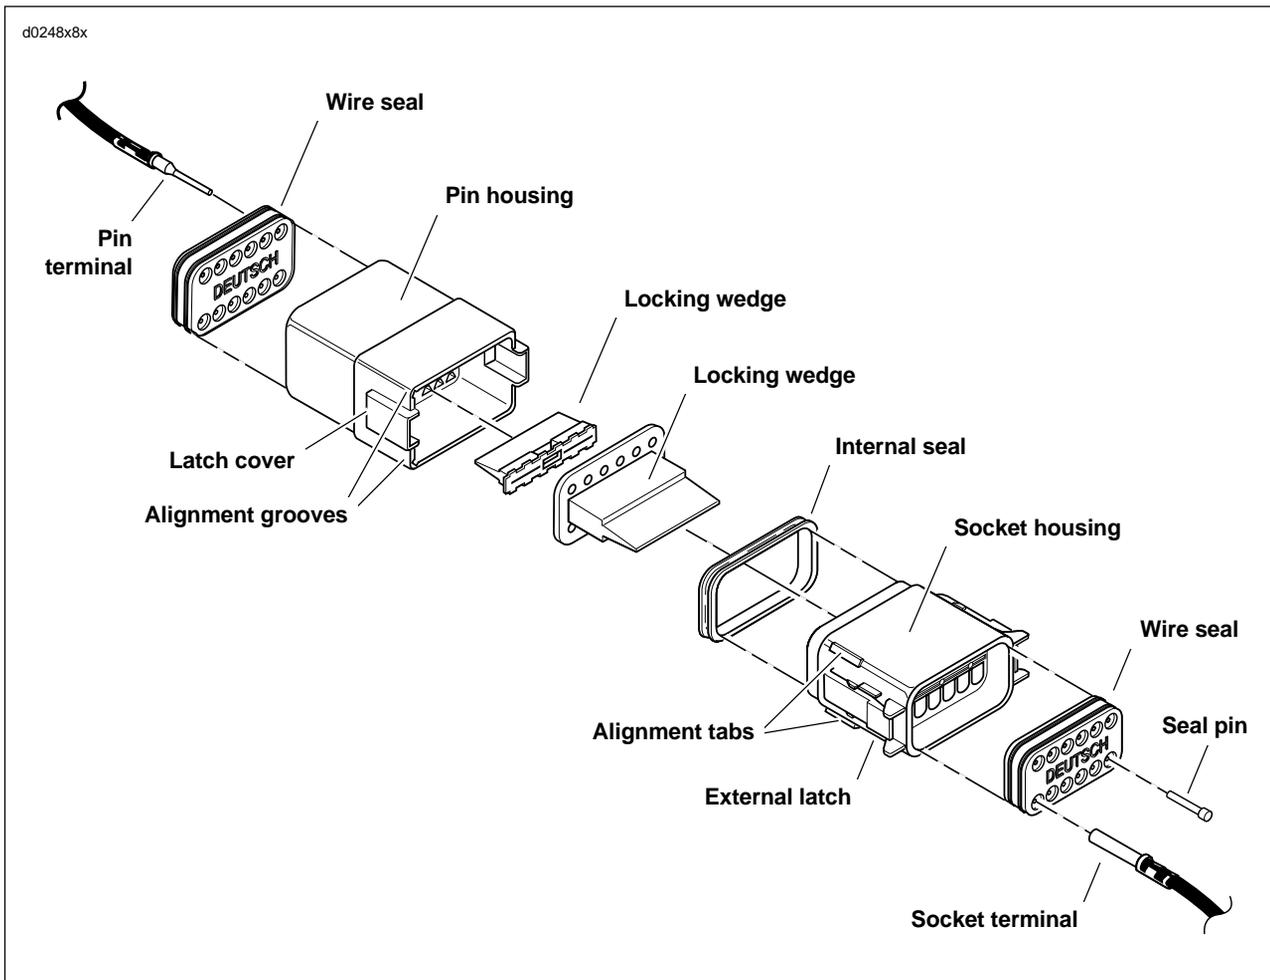


Figure B-8. 12-pin Deutsch Connector (Exploded View)

3. Install internal seal on lip of socket housing, if removed. Insert tapered end of secondary locking wedge into socket housing and press down until it snaps in place. The wedge fits into the center groove within the socket housing and holds the terminal latches tightly closed.

NOTES

- While rectangular wedges do not require a special orientation, the conical secondary locking wedge of the 3-pin connector must be installed with the arrow pointing toward the external latch. See [Figure B-9](#).
- If the secondary locking wedge does not slide into the installed position easily, verify that all terminals are fully installed in the socket housing. The lock indicates when terminals are not properly installed by not entering its fully installed position.

REMOVING/INSTALLING PINS

1. Remove the secondary locking wedge. Use the hooked end of a stiff piece of mechanics wire or a needle nose pliers, or a suitable pick tool (Part No. HD-41475-100). See [Figure B-10](#).
2. Gently depress terminal latches inside pin housing and back out pins through holes in wire seal.

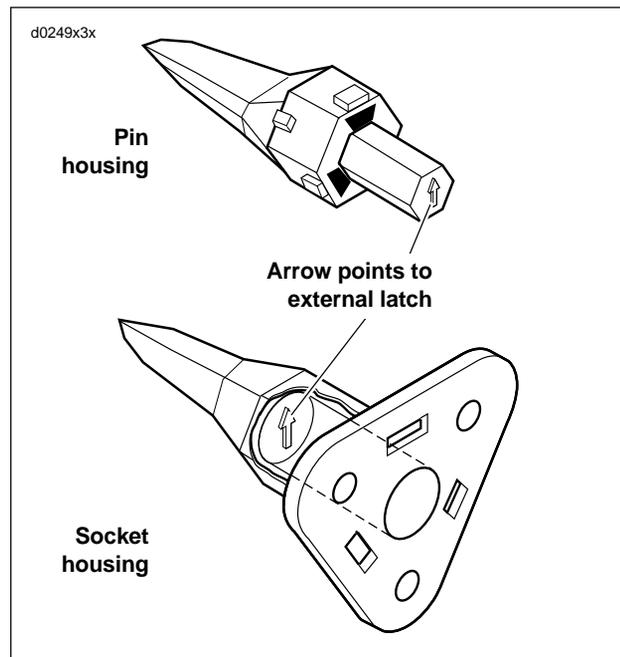


Figure B-9. Depress Terminal Latches/Back Out Pins

NOTE

An **ELECTRICAL TERMINAL CRIMP TOOL** (Part No. HD-39965) is used to install Deutsch pin and socket terminals on wires. If **new** terminals must be installed, see *Crimping Instructions* in this section.

- Fit wire seal into back of pin housing. Grasp crimped pin approximately 1.0 in. (25.4 mm) behind the contact barrel. Gently push pins through holes in wire seal into their respective numbered locations. Feed pin into chamber until it “clicks” in place. Verify that pin will not back out of chamber; a slight tug on the wire will confirm that it is properly locked in place.
- Insert tapered end of secondary locking wedge into pin housing and press down until it snaps in place. The wedge fits in the center groove within the pin housing and holds the terminal latches tightly closed.

NOTES

- While rectangular wedges do not require a special orientation, the conical secondary locking wedge of the 3-pin connector must be installed with the arrow pointing toward the external latch. See [Figure B-9](#).
- If the secondary locking wedge does not slide into the installed position easily, verify that all terminals are fully installed in the pin housing. The lock indicates when terminals are not properly installed by not entering its fully installed position.

ASSEMBLING/INSTALLING

- Insert socket housing into pin housing until it snaps in place. Two-, three-, four- and six-pin Deutsch connectors have one external latch on the socket half of the connector. To fit the halves of the connector together, the latch on the socket side must be aligned with the latch cover on the pin side.

For those connectors with two external latches (8-pin and 12-pin), a different system is used to prevent improper assembly. Align the tabs on the socket housing with the grooves on the pin housing. Push the connector halves together until the latches “click.” If latches do not click (latch), press on one side of the connector until that latch engages, then press on the opposite side to engage the other latch.

NOTE

Deutsch connectors are color coded for location purposes. Those connectors associated with **left** side accessories, such as the front and rear **left** turn signals, are **gray**. All other connectors, including those associated with right side accessories, are black.

If it should become necessary to replace a plug or receptacle, please note that the 8-pin and 12-pin gray and black connectors are not interchangeable. Since location of the alignment tabs differ between the black and gray connectors, plugs or receptacles must be replaced by those of the same color. If replacing both the socket and pin halves, then the black may be substituted for the gray, and vice versa. The socket and pin halves of all other connectors are interchangeable, that is, the black may be mated with the gray, since the alignment tabs are absent and the orientation of the external latch is the same.

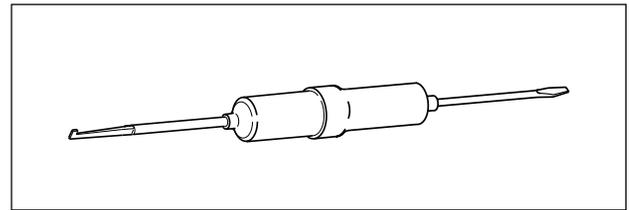


Figure B-10. Deutsch Connector Pick Tool (Part No. HD-41475-100)

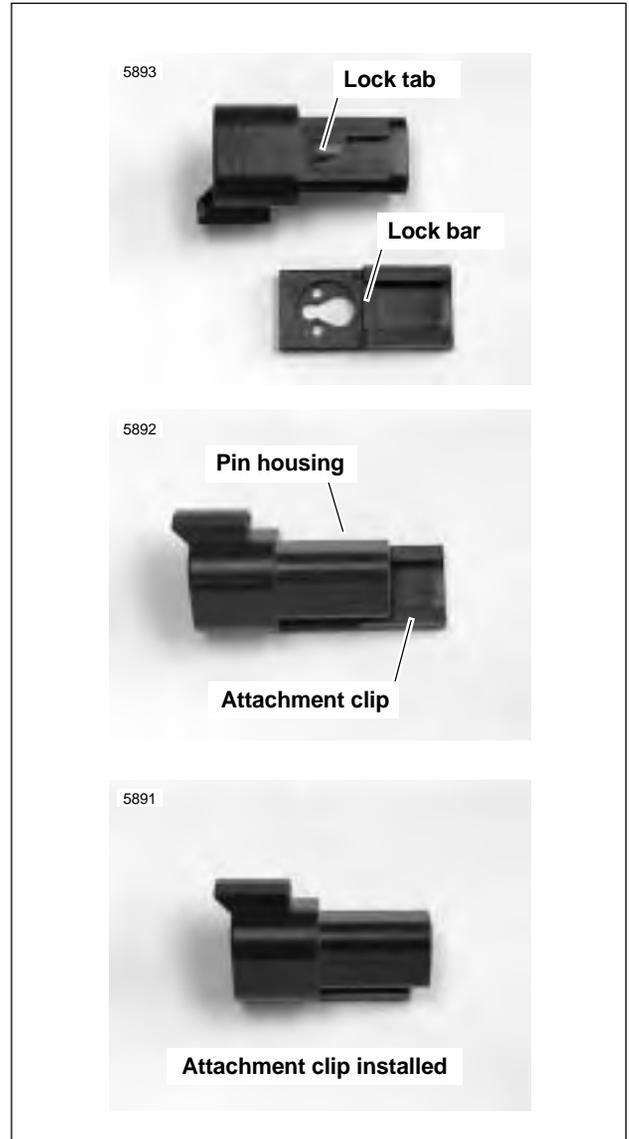


Figure B-11. Attachment Clip Installation

- See [Figure B-11](#). Fit the attachment clip to the pin housing, if removed. Place large end of slot on attachment clip over T-stud on frame. Push assembly forward to engage small end of slot.

d0250x8x


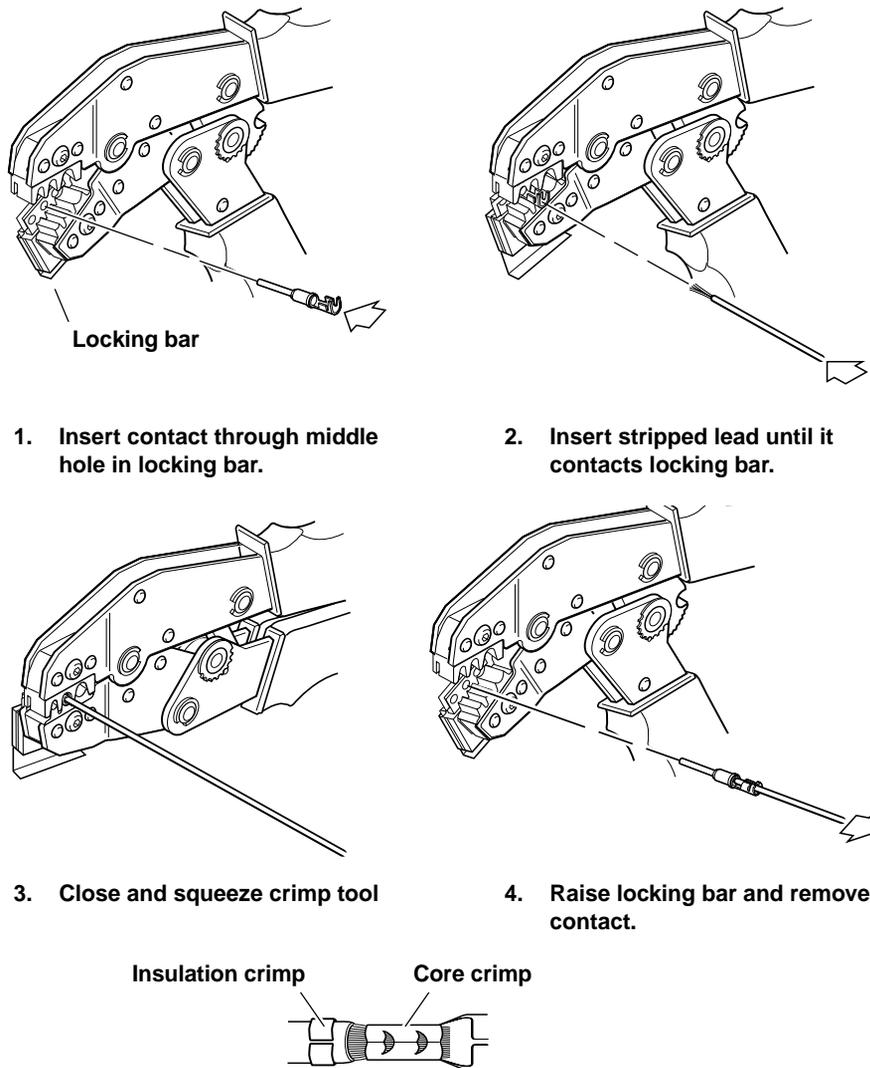


Figure B-12. Deutsch Crimping Procedure

CRIMPING INSTRUCTIONS

1. See Figure B-12. Squeeze the handles to cycle the crimp tool to the fully open position.
2. Raise locking bar by pushing up on bottom flange. With the crimp tails facing upward and the rounded side of the contact barrel resting on the concave split level area of the crimp tool, insert contact (socket/pin) through middle hole of locking bar.
3. Release locking bar to lock position of contact. If the crimp tails are slightly out of vertical alignment, the crimp tool automatically rotates the contact so that the tails face straight upward. When correctly positioned, the locking bar fits snugly in the space between the contact band and the core crimp tails.
4. Strip lead removing 5/32 in. (4 mm) of insulation. Insert wires between crimp tails until ends make contact with locking bar. Verify that wire is positioned so that short pair of crimp tails squeeze bare wire strands, while long pair folds over insulation material.
5. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete. Raise up locking bar and remove contact.
6. Inspect the quality of the core and insulation crimps. Distortion should be minimal.

d0251x3x

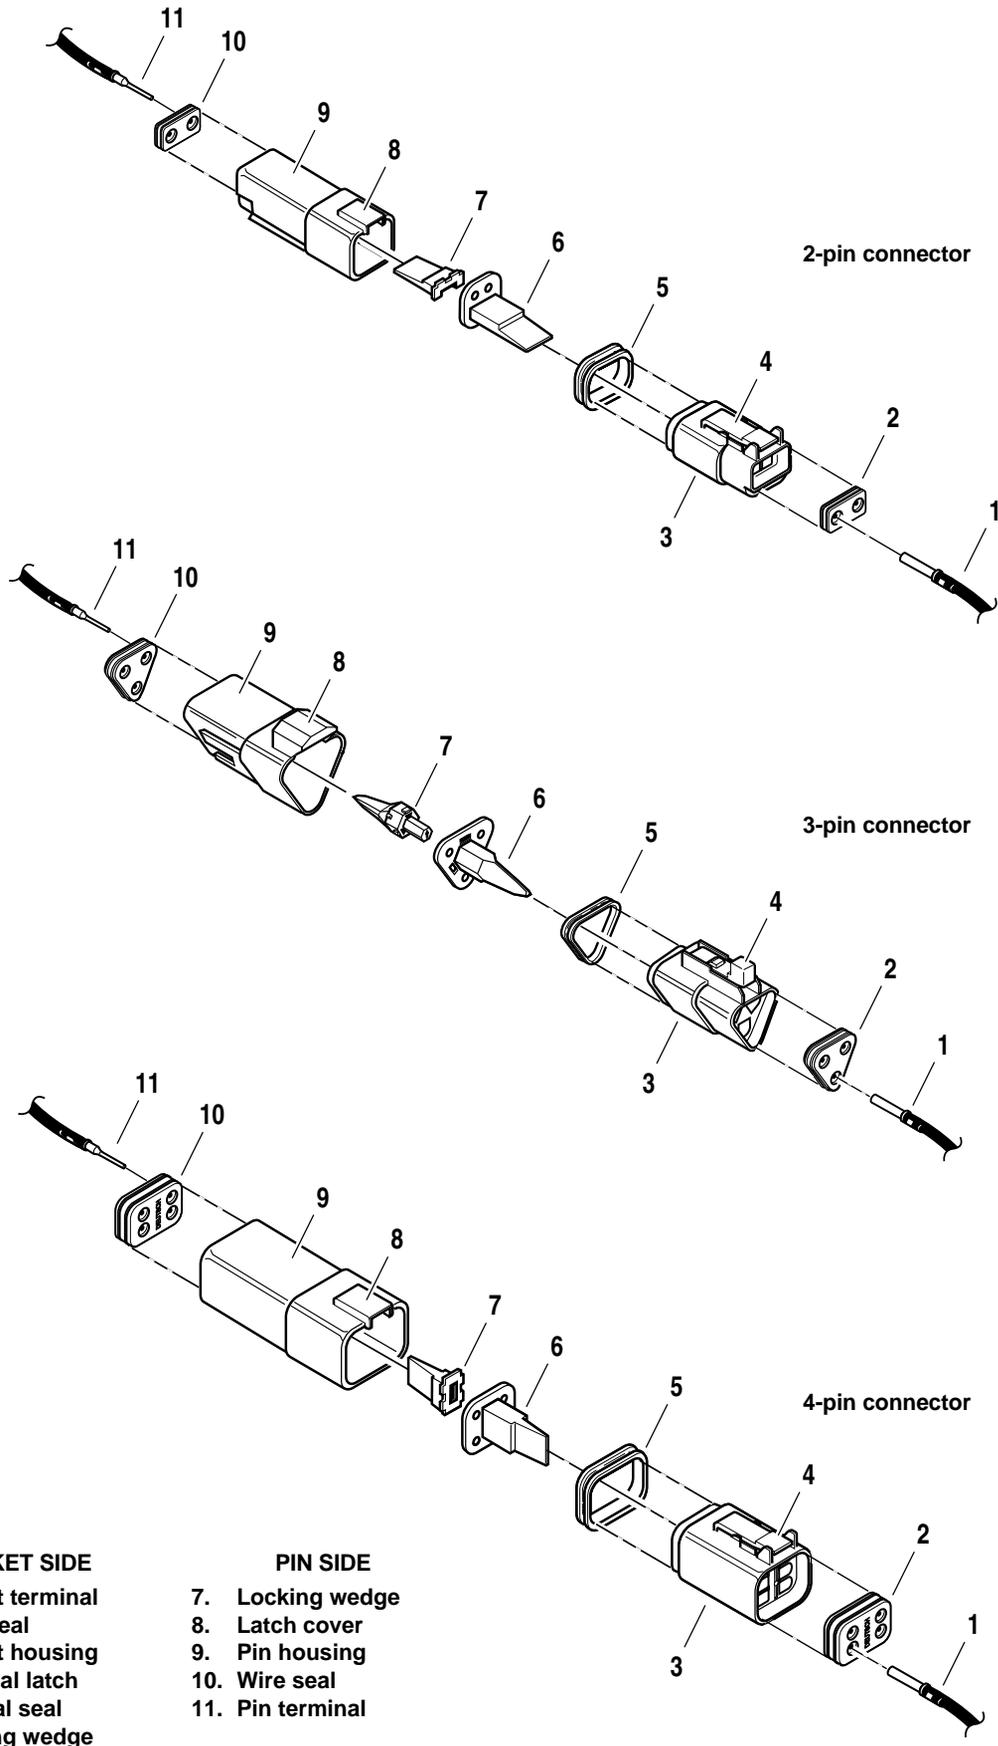

SOCKET SIDE

- 1. Socket terminal
- 2. Wire seal
- 3. Socket housing
- 4. External latch
- 5. Internal seal
- 6. Locking wedge

PIN SIDE

- 7. Locking wedge
- 8. Latch cover
- 9. Pin housing
- 10. Wire seal
- 11. Pin terminal

Figure B-13. 2-Pin, 3-pin and 4-pin Deutsch Connectors

GENERAL

From a servicing standpoint, there are two basic types of Packard electrical connectors, those with pull-to-seat terminals and those with push-to-seat terminals.

Look into the mating end of the connector. If it appears that the terminal can be extracted from this side, then it is probably the pull-to-seat type.

At least one Packard pull-to-seat terminal can be easily recognized by the presence of a locking ear. The ear engages a slot in the connector housing and prevents the terminal from being removed from the wire end side of the connector. The ear also acts as a strain relief in the event that the wires are pulled and further inhibits movement of the terminal inside the chamber. For an example of this type of connector, note the MAP sensor connector [80].

Unlike most connectors, where the terminals are pulled out the wire end of the connector, to remove the terminals from the pull-to-seat connectors, the terminal is pushed out the mating end of the connector. Once a **new** terminal is crimped onto the end of the wire, the wire is pulled to draw the terminal back inside the chamber of the connector housing.

Two types of Packard pull-to-seat electrical connectors are used. One type has an external latch to lock the pin and socket halves together, while the other makes use of a wire-form. See [Figure B-14](#). The manner in which the terminals are picked differs between these two types of connectors, as further described below.

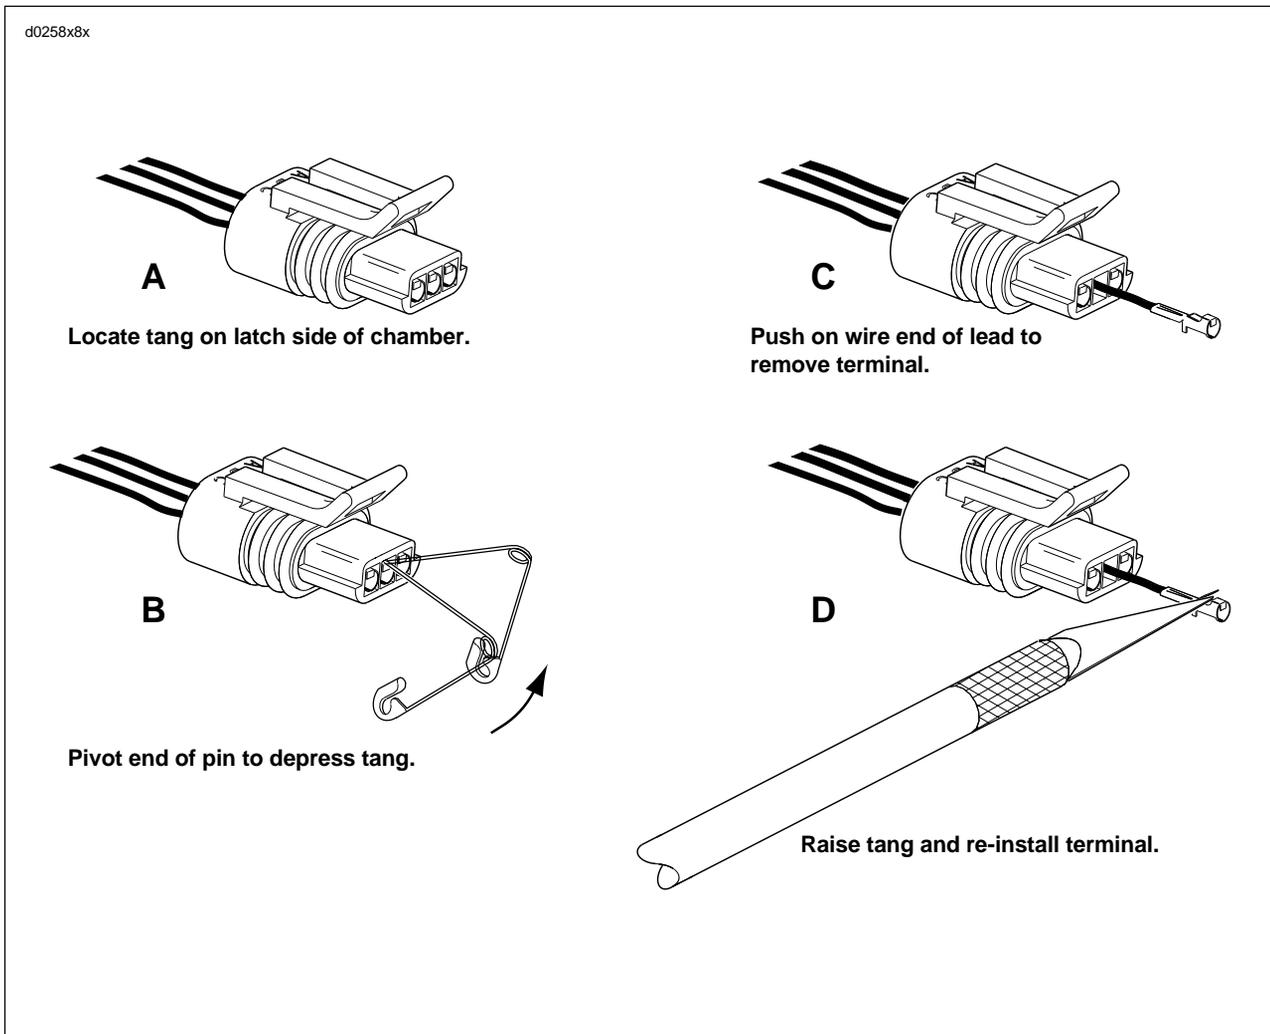


Figure B-14. Packard Connectors

PULL-TO-SEAT TERMINALS

Removing External Latch Type

To remove a pull-to-seat terminal from connectors with external latches, proceed as follows:

1. Remove the connector from the retaining device, if present.
2. Bend back the external latch(es) slightly and separate the pin and socket halves of the connector.
3. To free a pull-to-seat terminal from the connector housing, first look into the mating end of the connector to find the locking tang. See A in [Figure B-14](#). The tangs are always positioned in the middle of the chamber and are on the same side as the external latch. On those connectors with locking ears, the tang is on the side opposite the ear.
4. At a slight angle, gently insert the point of a one inch safety pin down the middle of the chamber (about 1/8 inch) and pivot the end of the pin toward the terminal body. When a click is heard, remove the pin and repeat the procedure. See B in [Figure B-14](#). The click is the sound of the tang returning to the locked position as it slips from the point of the pin. Pick at the tang in this manner until the clicking stops and the pin seems to slide in at a slightly greater depth than it had previously. This is an indication that the tang has been depressed.

NOTES

- *On those terminals that have been extracted on a previous occasion, no clicking sound may be heard when the pin is pivoted to depress the tang, but proceed as if the clicking is audible and then push on the wire end of the lead to check if the terminal is free.*
 - *When picking multiple terminals, the end of the pin may become malleable. For best results, continue the procedure with a new safety pin.*
5. Remove the pin and push on the wire end of the lead to extract the terminal from the mating end of the connector. See C in [Figure B-14](#). If necessary, pull back the conduit and remove the wire seal at the back of the connector to introduce some slack in the wires.

NOTE

*A series of Packard Electrical Terminal Crimp Tools are available to install Packard pin and socket terminals on wires. If **new** terminals must be installed, see *Crimping Instructions*.*

Installing External Latch Type

NOTE

For wire location purposes, alpha characters are stamped into the socket housings.

1. To install a terminal back into the chamber of the connector housing, use a thin flat blade, like that on an X-Acto knife, and carefully bend the tang outward away from the terminal body. See D in [Figure B-14](#).
2. Gently pull on the lead at the wire end of the connector to draw the terminal back into the chamber. A click is heard when the terminal is properly seated.
3. Push on the lead to verify that the terminal is locked in place.
4. Push the pin and socket halves of the connector together until the latches "click."

PUSH-TO-SEAT TERMINALS

The Packard push-to-seat terminal connectors are Buell Firebolts.

Removing Push-to-Seat Terminals

Like most connectors, Packard push-to-seat terminals are pulled out the wire end of the connector. To remove a push-to-seat terminal, proceed as follows:

1. Remove the connector from the retaining device, if present.
2. Bend back the external latch(es) slightly and separate the pin and socket halves of the connector.

NOTE

Both the Ignition Light/Key Switch and the Main Power connectors are provided with secondary locks. The secondary lock, which may be molded onto the connector or exist as a separate piece, aids in terminal retention. Secondary locks must be opened (or removed) before the terminals can be extracted from the connector housing.

3. Open or remove the secondary lock. Bend back the latch slightly and free one side of the secondary lock, then repeat the step to release the other side. Rotate the secondary lock outward on hinge to access the terminals in the chambers of the connector housing.
4. Looking in the mating end or terminal side of the connector (opposite the secondary lock), take note of the larger cavity next to each terminal.
5. Insert the pick (Snap-On TT600-3) into the cavity until it stops. Pivot the end of the pick toward the terminal to depress the locking tang. Remove the pick and gently tug on the wire to pull the terminal from the wire end of the connector. Repeat the step if the terminal is still locked in place.

NOTE

A series of Packard Electrical Terminal Crimp Tools are available to install Packard pin and socket terminals on wires. If new terminals must be installed, see Crimping Instructions.

Installing Push-to-Seat Terminals

NOTE

For wire location purposes, alpha characters are stamped onto the secondary locks or onto the wire end of the connector housing.

1. To install a terminal back into the chamber of the connector housing, use a thin flat blade, like that on an X-Acto knife, and carefully bend the tang outward away from the terminal body.
2. Push the lead into the chamber at the wire end of the connector. A click is heard when the terminal is properly seated.
3. Gently tug on the wire end to verify that the terminal is locked in place and will not back out of the chamber.
4. Close or install the secondary lock. Rotate the hinged secondary lock inward until tabs fully engage latches on both sides of connector.
5. Push the pin and socket halves of the connector together until the latches "click."
6. Install connector on retaining device, if present.

CRIMPING INSTRUCTIONS

1. Strip wire lead removing 5/32 in. (4 mm) of insulation.
2. Compress handles until ratchet automatically opens.

NOTE

Always perform core crimp before insulation/seal crimp.

3. See [Table B-1](#). Determine the correct dye or nest for the core crimp.

NOTE

When the word "TIP" appears in the Crimp Table, use the tip of the tool specified to perform the core crimp procedure. See [Figure B-15](#).

4. Lay the back of the core crimp tails on the appropriate nest. Be sure the core crimp tails are pointing towards the forming jaws.
5. Gently apply pressure to handles of tool until crimpers slightly secure the core crimp tails.
6. Insert stripped wire between crimp tails. Verify that wire is positioned so that short pair of crimp tails squeeze bare wire strands, while long pair folds over insulation or seal material.
7. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete.
8. [Table B-1](#). Determine the correct dye or nest for the insulation/seal crimp.
9. Lay the back of the insulation/seal crimp tails on the appropriate nest. Be sure the insulation/seal crimp tails are pointing towards the forming jaws.
10. Squeeze handle of crimp tool until tightly closed. Tool automatically opens when the crimping sequence is complete.
11. See [Figure B-16](#). Inspect the quality of the core (3) and insulation/seal (2) crimps. Distortion should be minimal.

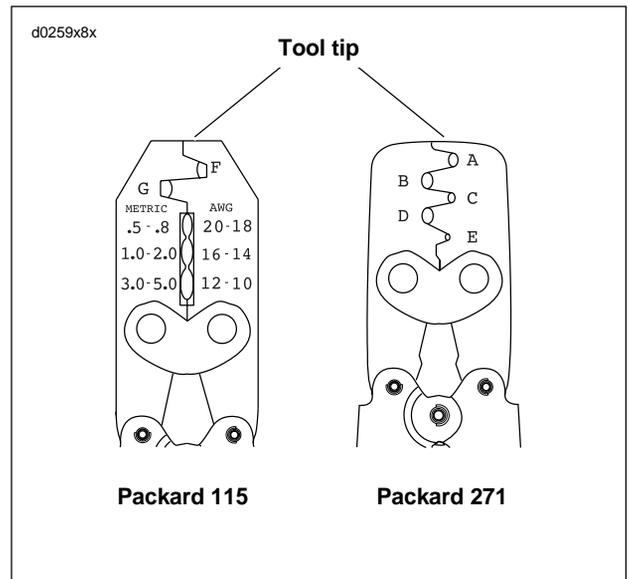


Figure B-15. Packard Terminal Crimp Tools

Table B-1. Packard Terminal Crimp Tools

| SPECIFICATION | PACKARD 115 | PACKARD 271 |
|---------------|------------------------------------|----------------------|
| Part No. | HD-38125-8 | HD-38125-7 |
| Type of Crimp | Non-sealed terminals, butt splices | Non-sealed terminals |
| Dye/nests | F-G | A-E |

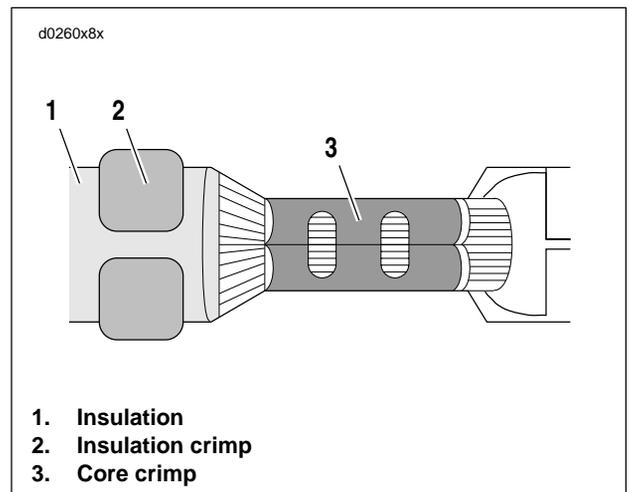


Figure B-16. Inspect Core and Insulation/Seal Crimps

GENERAL

Connector numbers are listed in [brackets] in this manual.

The following table provides a brief description of the connectors found on the Firebolt XB9R.

Table B-2. Electrical Connector and Location Table

| CONNECTOR | COMPONENT(S) | DESCRIPTION | LOCATION |
|-----------|-------------------------------|--|--|
| [5] | main fuse | spade terminals | under seat |
| [7] | tail lamp harness | 8-place Multilock | left side under tail section |
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [14] | cam position sensor | 3-place Deutsch | under sprocket cover |
| [18] | right rear turn signal | 2 1-place bullet | under tail section |
| [19] | left rear turn signal | 2 1-place bullet | under tail section |
| [22] | right hand controls | 4-place Multilock | beneath right side of fairing |
| [24] | left hand controls | 4-place Multilock | beneath left side of fairing |
| [30] | flasher | 5-place Amp | in fairing |
| [31] | right front turn signal | 2 1-place bullet | beneath right side of fairing |
| [31] | left front turn signal | 2 1-place bullet | beneath left side of fairing |
| [33] | ignition switch | 4-place Augat | beneath right side of fairing |
| [38] | headlamp connector | 4-place Amp | beneath fairing |
| [39] | instrument module | 20-place Multilock | in fairing |
| [46] | stator | 4-place Deutsch | under sprocket cover |
| [61] | fuse and diode assembly | spade terminals | right side of fairing |
| [62] | relay assembly | spade terminals | left side of fairing |
| [65] | vehicle speed sensor | 3-place Deutsch | under sprocket cover |
| [77] | voltage regulator | 2-place Packard | under sprocket cover |
| [83] | ignition coil | 3-place Packard | beneath airbox base |
| [84] | front fuel injector | 2-place Packard | underneath airbox base |
| [85] | rear fuel injector | 2-place Packard | underneath airbox base |
| [86] | fuel pump | 4-place Multilock | left side of rear shock absorber |
| [88] | throttle position sensor | 3-place Packard | right side of engine between cylinders |
| [89] | intake air temperature sensor | 2-place Amp | in airbox base |
| [90] | engine temperature sensor | 1-place bullet | beneath airbox base |
| [91A] | data link | 4-place Deutsch | beneath left side fairing |
| [93] | tail light | 2-place spade 1-place spade (ground) | back of tail light |

Table B-2. Electrical Connector and Location Table


| CONNECTOR | COMPONENT(S) | DESCRIPTION | LOCATION |
|------------------|---------------------|--------------------|----------------------------|
| [95] | clutch switch | 2-place Multilock | beneath fairing |
| [97] | cooling fan | 2-place Multilock | behind rear cylinder |
| [120] | oil pressure switch | post terminal | crankcase above oil filter |
| [121] | front brake switch | 2-place Multilock | beneath fairing |
| [121] | rear brake switch | 2-place Multilock | under seat |
| [122] | horn | spade terminals | in fairing |
| [128] | starter solenoid | spade terminals | top of starter |
| [131] | neutral switch | 1-place bullet | under sprocket cover |
| [134] | bank angle sensor | 6-place Sumitomo | in fairing |
| [137] | oxygen sensor | 1-place Packard | behind rear cylinder head |

Table B-3. Wiring Diagrams


| DIAGRAM | PAGE |
|--------------------------------|-------------|
| Main harness | B-17 |
| Engine management circuit | B-18 |
| Lighting circuit | B-19 |
| Horn and instruments circuit | B-20 |
| Starting circuit | B-21 |
| Starting and charging circuits | B-22 |
| Component circuits | B-23 |

bd0024xx



| IGNITION SWITCH WIRING DIAGRAM | | | | |
|--------------------------------|-------------------------------|------|---|------|
| KEY POSITION | A | C | D | B |
| PARK | 0 | 0 | 0 | 0 |
| LOCK | | | | |
| OFF | | | | |
| ON | 0 | 0 | 0 | 0 |
| WIRE COLOR | R | R/BK | R | R/GY |
| WIRE SECT mm | 1 | 1 | 1 | 1 |
| CONNECTING | BATTERY USER + BATTERY USER + | | | |

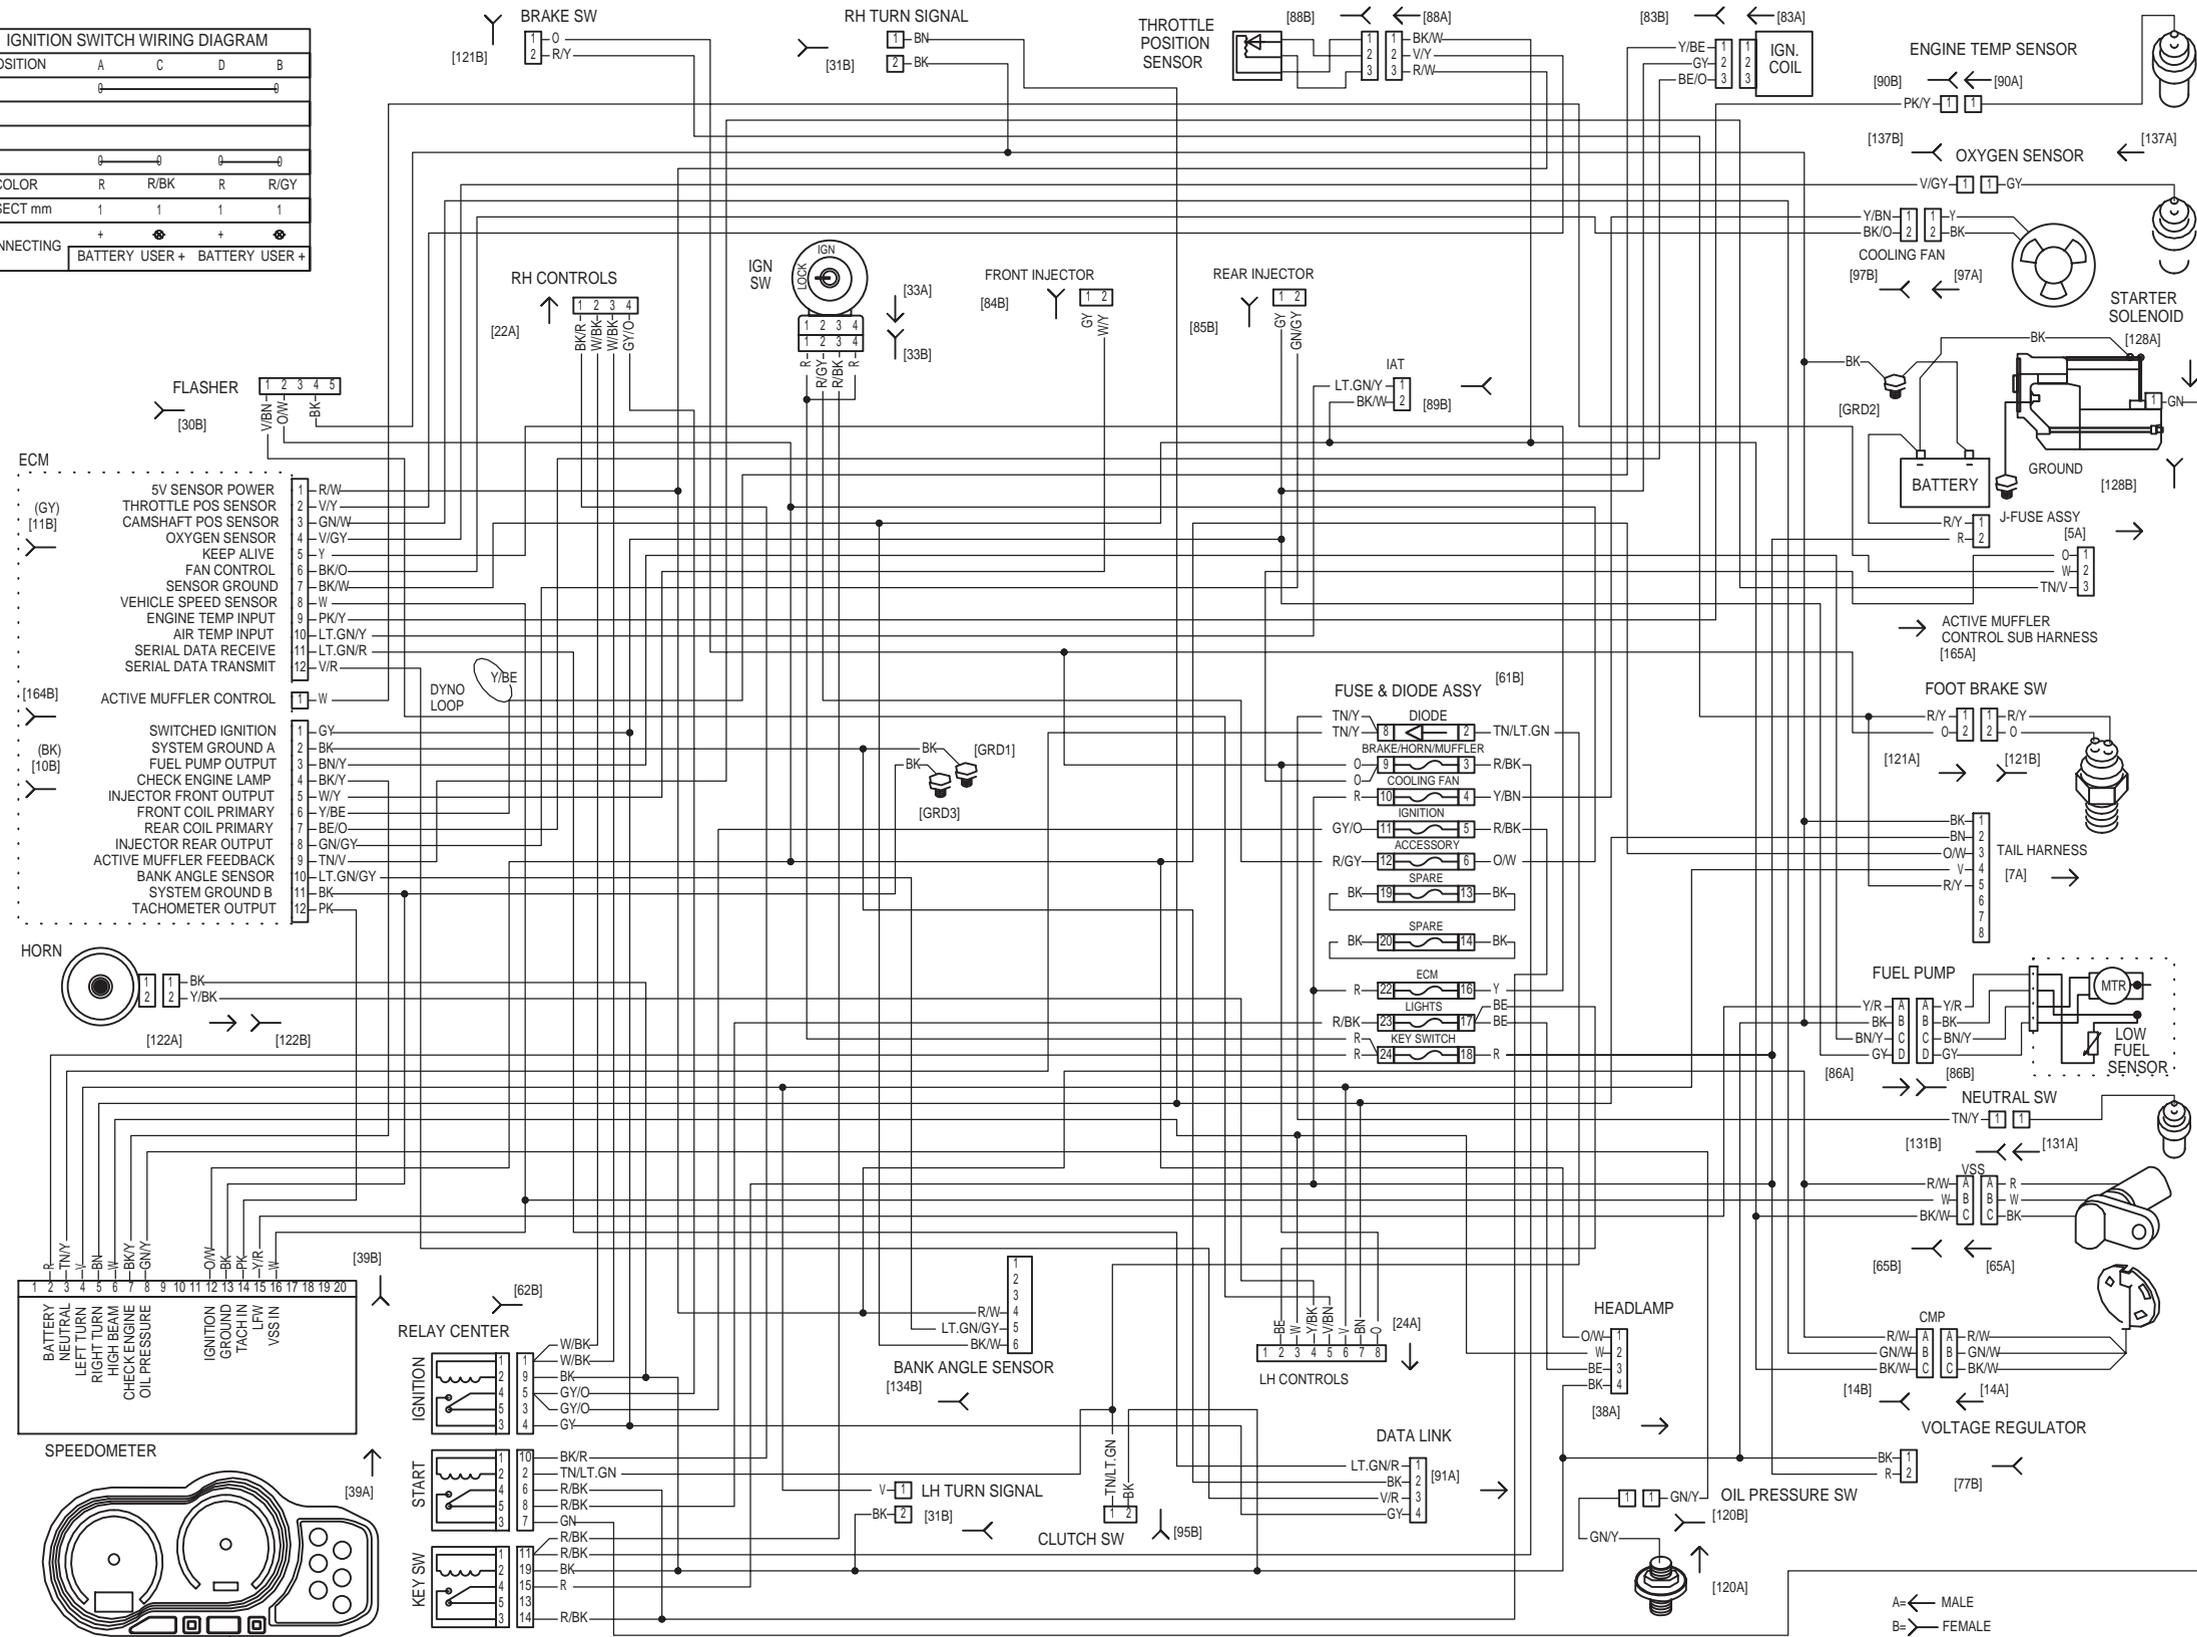

| ECM | |
|------------|--|
| (GY) [11B] | 1 - R/W 2 - V/Y 3 - GN/W 4 - V/GY 5 - Y 6 - BK/O 7 - BK/W 8 - W 9 - PK/Y 10 - LT.GN/Y 11 - LT.GN/R 12 - V/R |
| [164B] | ACTIVE MUFFLER CONTROL 1 - W |
| (BK) [10B] | SWITCHED IGNITION 1 - GY SYSTEM GROUND A 2 - BK FUEL PUMP OUTPUT 3 - BN/Y CHECK ENGINE LAMP 4 - BK/Y INJECTOR FRONT OUTPUT 5 - W/Y FRONT COIL PRIMARY 6 - Y/BE INJECTOR REAR OUTPUT 7 - BE/O ACTIVE MUFFLER FEEDBACK 8 - GN/GY BANK ANGLE SENSOR 9 - TN/V SYSTEM GROUND B 10 - LT.GN/GY TACHOMETER OUTPUT 11 - BK 12 - PK |




| RELAY CENTER | |
|--------------|--------------|
| 1 | BATTERY |
| 2 | NEUTRAL |
| 3 | LEFT TURN |
| 4 | RIGHT TURN |
| 5 | HIGH BEAM |
| 6 | CHECK ENGINE |
| 7 | OIL PRESSURE |
| 8 | IGNITION |
| 9 | GROUND |
| 10 | TACH IN |
| 11 | LFV |
| 12 | VSS IN |

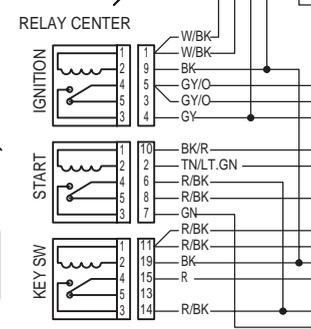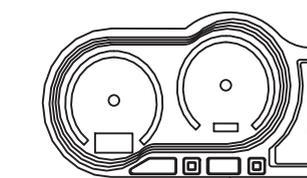

2004 XB Firebolt Main Harness

bd0022xx

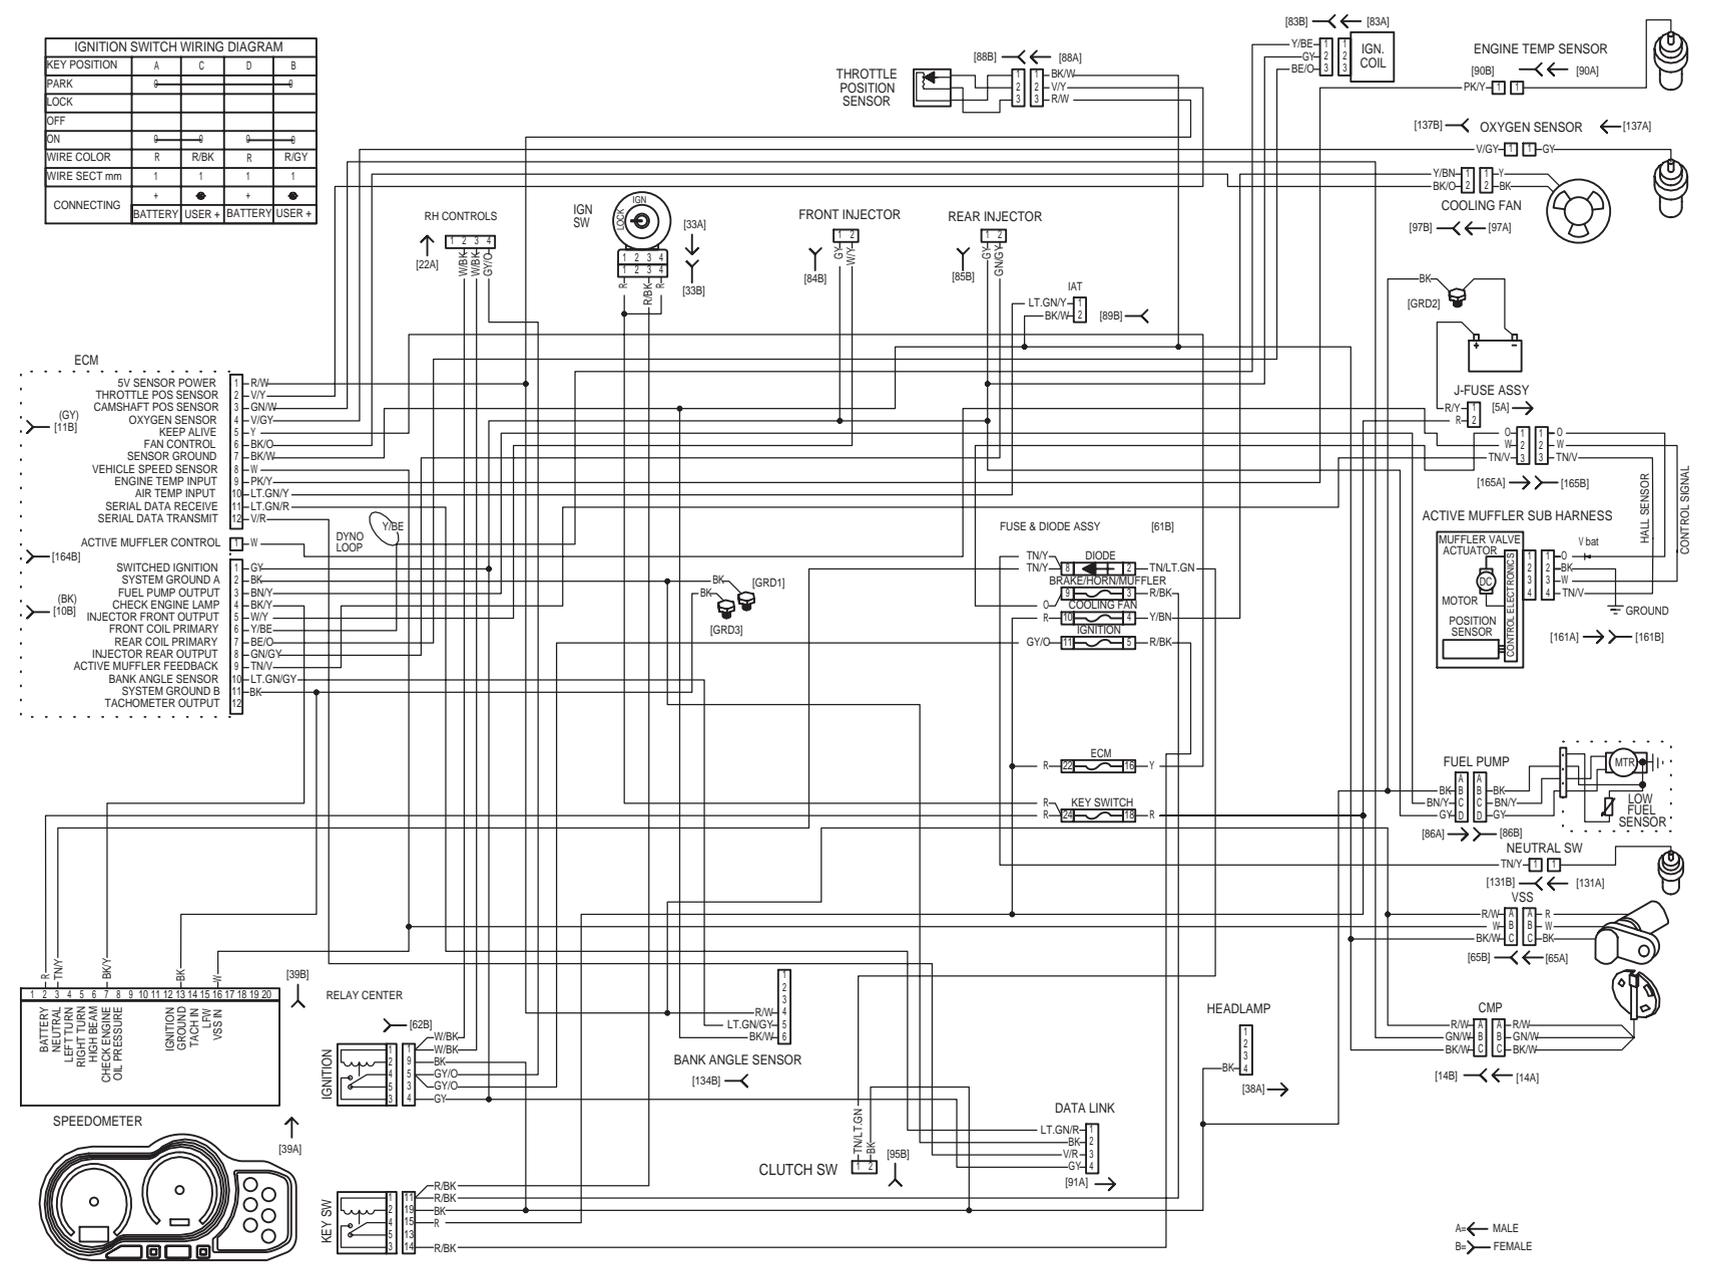

IGNITION SWITCH WIRING DIAGRAM

| KEY POSITION | A | C | D | B |
|--------------|----------------|----------------|----------------|----------------|
| PARK | — | — | — | — |
| LOCK | — | — | — | — |
| OFF | — | — | — | — |
| ON | — | — | — | — |
| WIRE COLOR | R | R/BK | R | R/GY |
| WIRE SECT mm | 1 | 1 | 1 | 1 |
| CONNECTING | BATTERY USER + | BATTERY USER + | BATTERY USER + | BATTERY USER + |

- ECM**
- 1 - 5V SENSOR POWER
 - 2 - THROTTLE POS SENSOR
 - 3 - CAMSHAFT POS SENSOR
 - 4 - OXYGEN SENSOR
 - 5 - KEEP ALIVE
 - 6 - FAN CONTROL
 - 7 - SENSOR GROUND
 - 8 - VEHICLE SPEED SENSOR
 - 9 - ENGINE TEMP INPUT
 - 10 - AIR TEMP INPUT
 - 11 - SERIAL DATA RECEIVE
 - 12 - SERIAL DATA TRANSMIT
- ACTIVE MUFFLER CONTROL**
- 1 - W
- SWITCHED IGNITION SYSTEM**
- 1 - GY
 - 2 - BK
 - 3 - BN/Y
 - 4 - BK/Y
 - 5 - W/Y
 - 6 - Y/BE
 - 7 - BE/O
 - 8 - GN/GY
 - 9 - TNV
 - 10 - BANK ANGLE SENSOR
 - 11 - SYSTEM GROUND B
 - 12 - TACHOMETER OUTPUT




- RELAY CENTER**
- 1 - BATTERY
 - 2 - NEUTRAL
 - 3 - LEFT TURN
 - 4 - HIGH BEAM
 - 5 - CHECK ENGINE
 - 6 - OIL PRESSURE
 - 7 - IGNITION
 - 8 - GROUND
 - 9 - TACH IN
 - 10 - VSS IN
 - 11 - VSS N
 - 12 - 20

A ← MALE
B ← FEMALE

2004 XB Firebolt Engine Management Circuit

bd0021xx


| KEY POSITION | A | C | D | B |
|--------------|---------|--------|---------|--------|
| PARK | 0 | | | 0 |
| LOCK | | | | |
| OFF | | | | |
| ON | 0 | 0 | 0 | 0 |
| WIRE COLOR | R | R/BK | R | R/GY |
| WIRE SECT mm | 1 | 1 | 1 | 1 |
| CONNECTING | BATTERY | USER + | BATTERY | USER + |

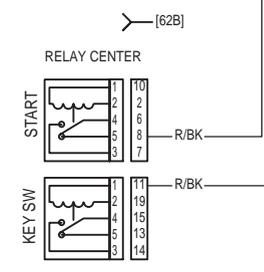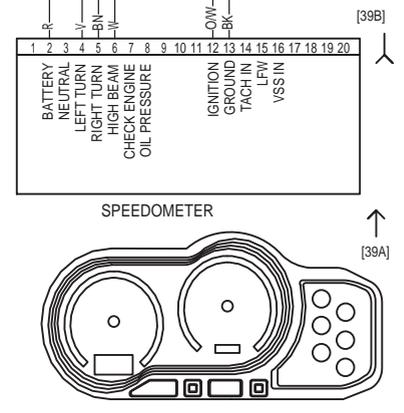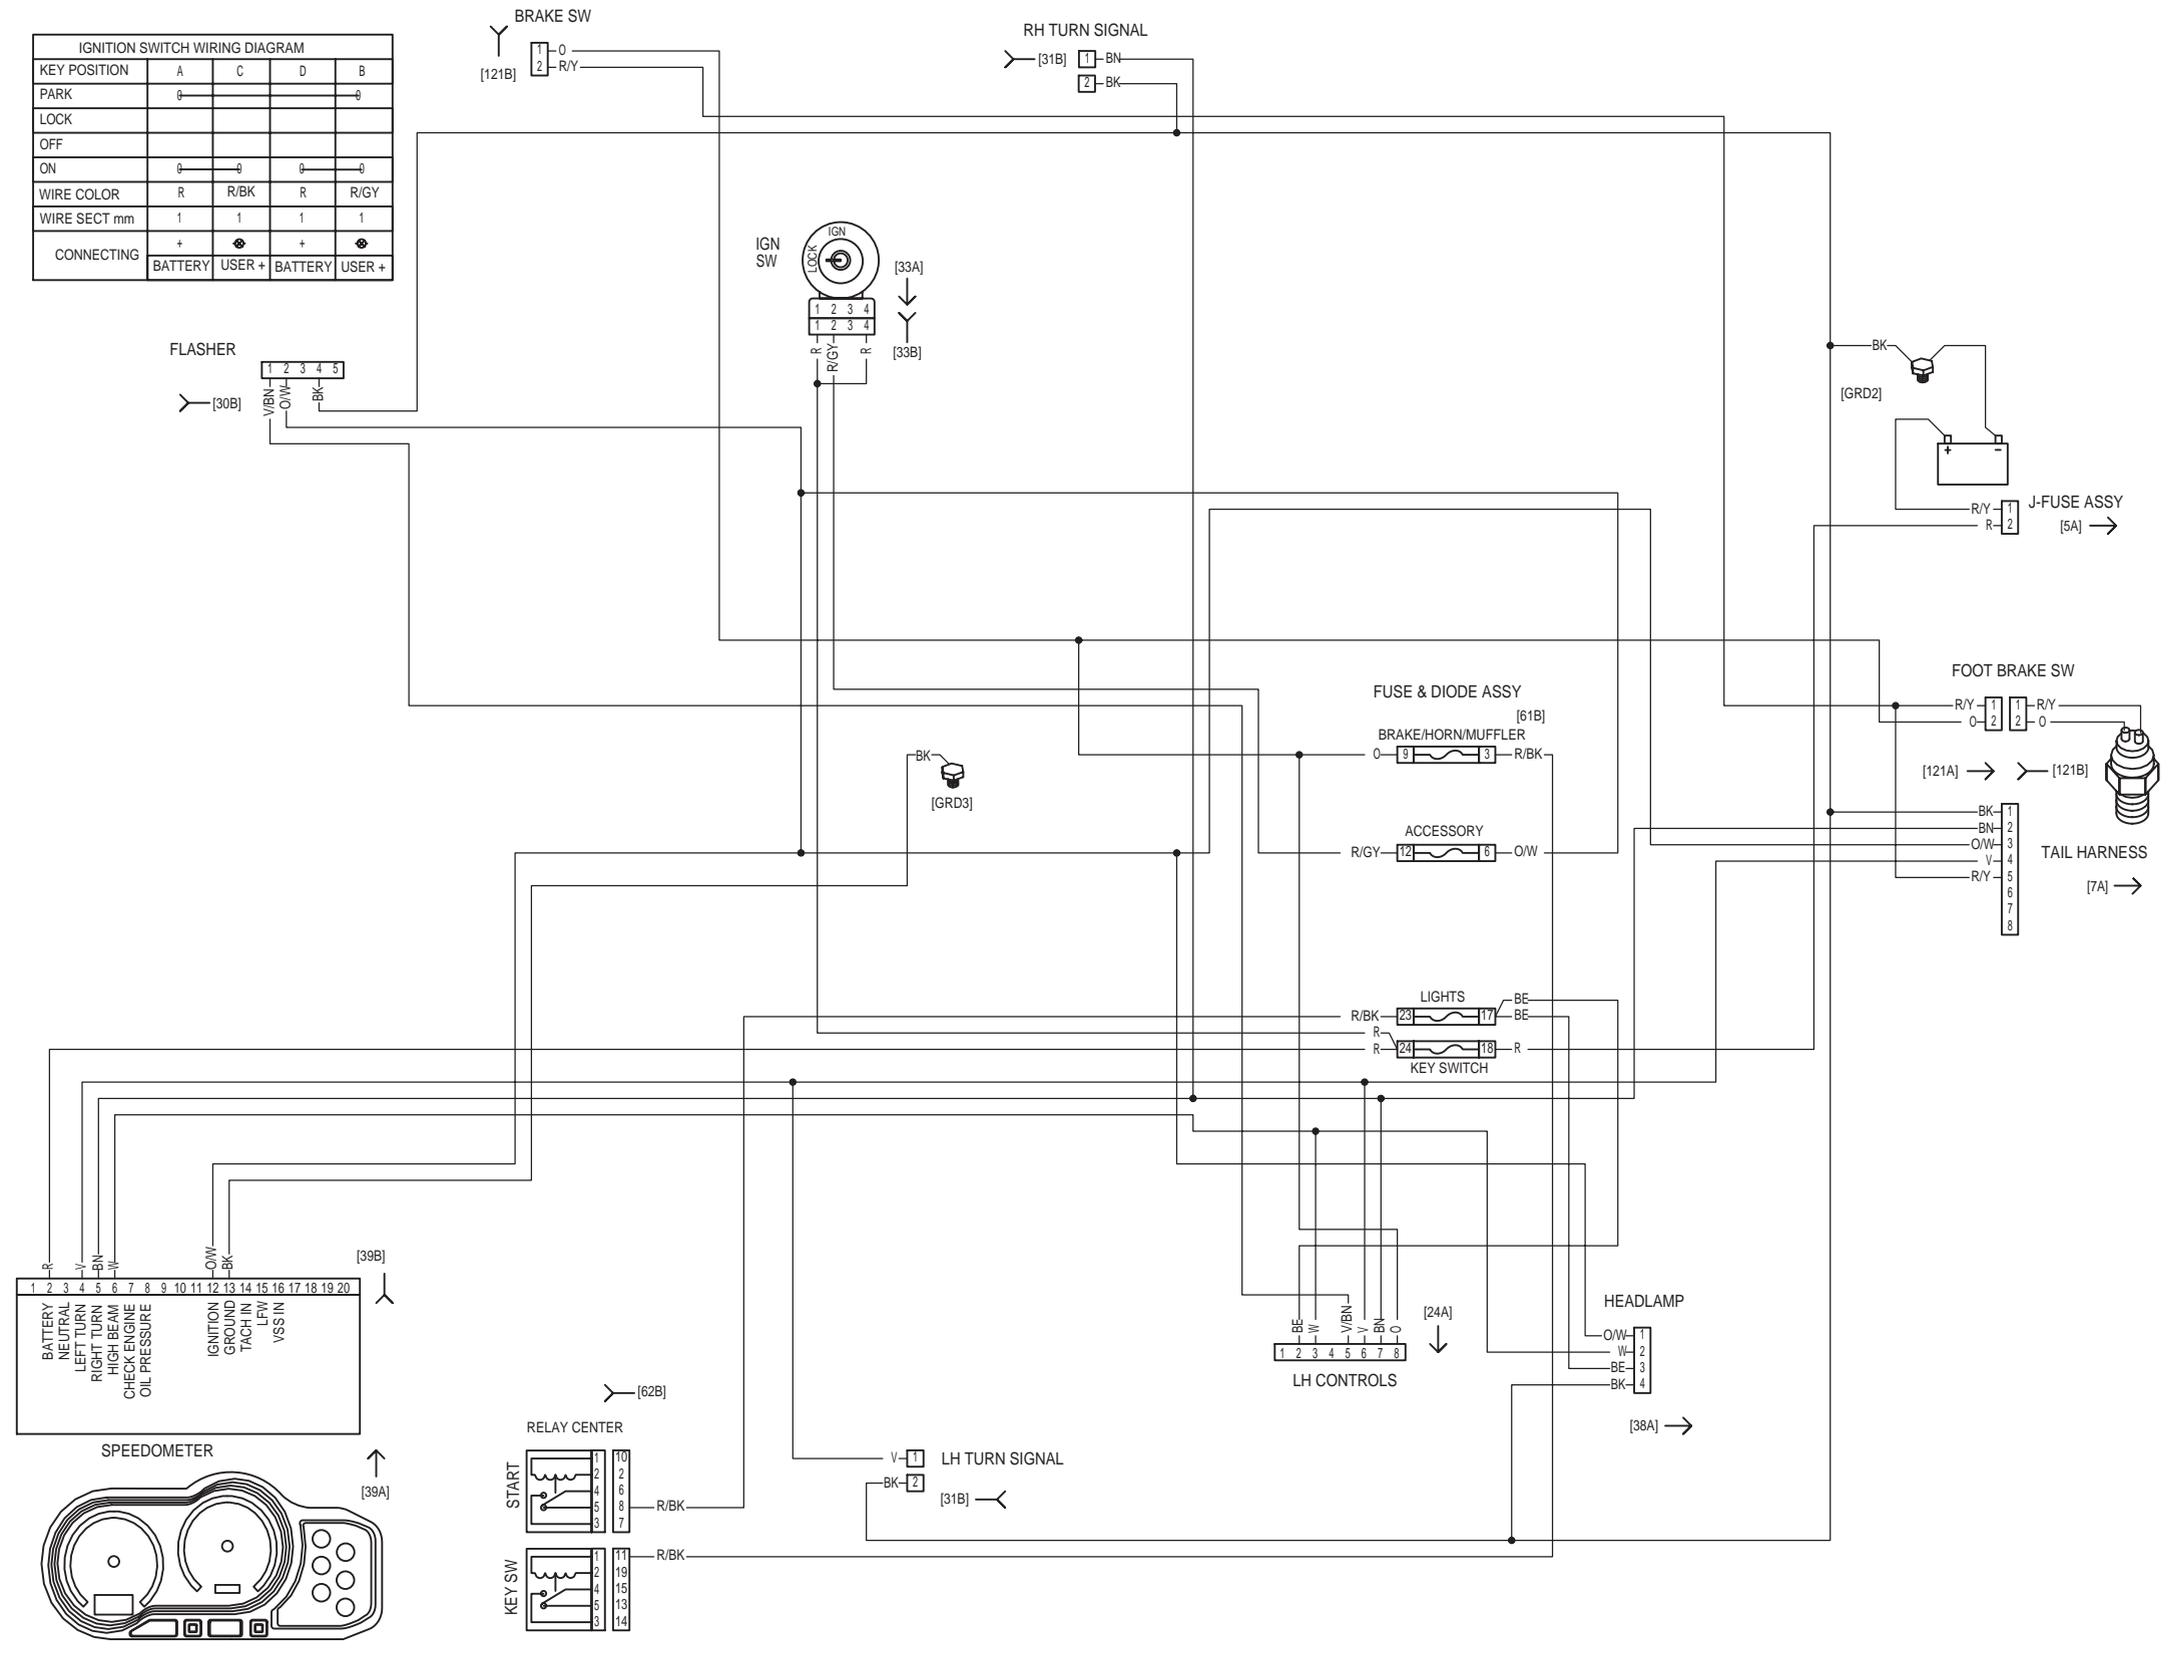

2004 XB Firebolt Lighting Circuit


bd0020ax

| IGNITION SWITCH WIRING DIAGRAM | | | | |
|--------------------------------|---------|--------|---------|--------|
| KEY POSITION | A | C | D | B |
| PARK | 0 | 0 | 0 | 0 |
| LOCK | | | | |
| OFF | | | | |
| ON | 0 | 0 | 0 | 0 |
| WIRE COLOR | R | R/BK | R | R/GY |
| WIRE SECT mm | 1 | 1 | 1 | 1 |
| CONNECTING | + | + | + | + |
| | BATTERY | USER + | BATTERY | USER + |

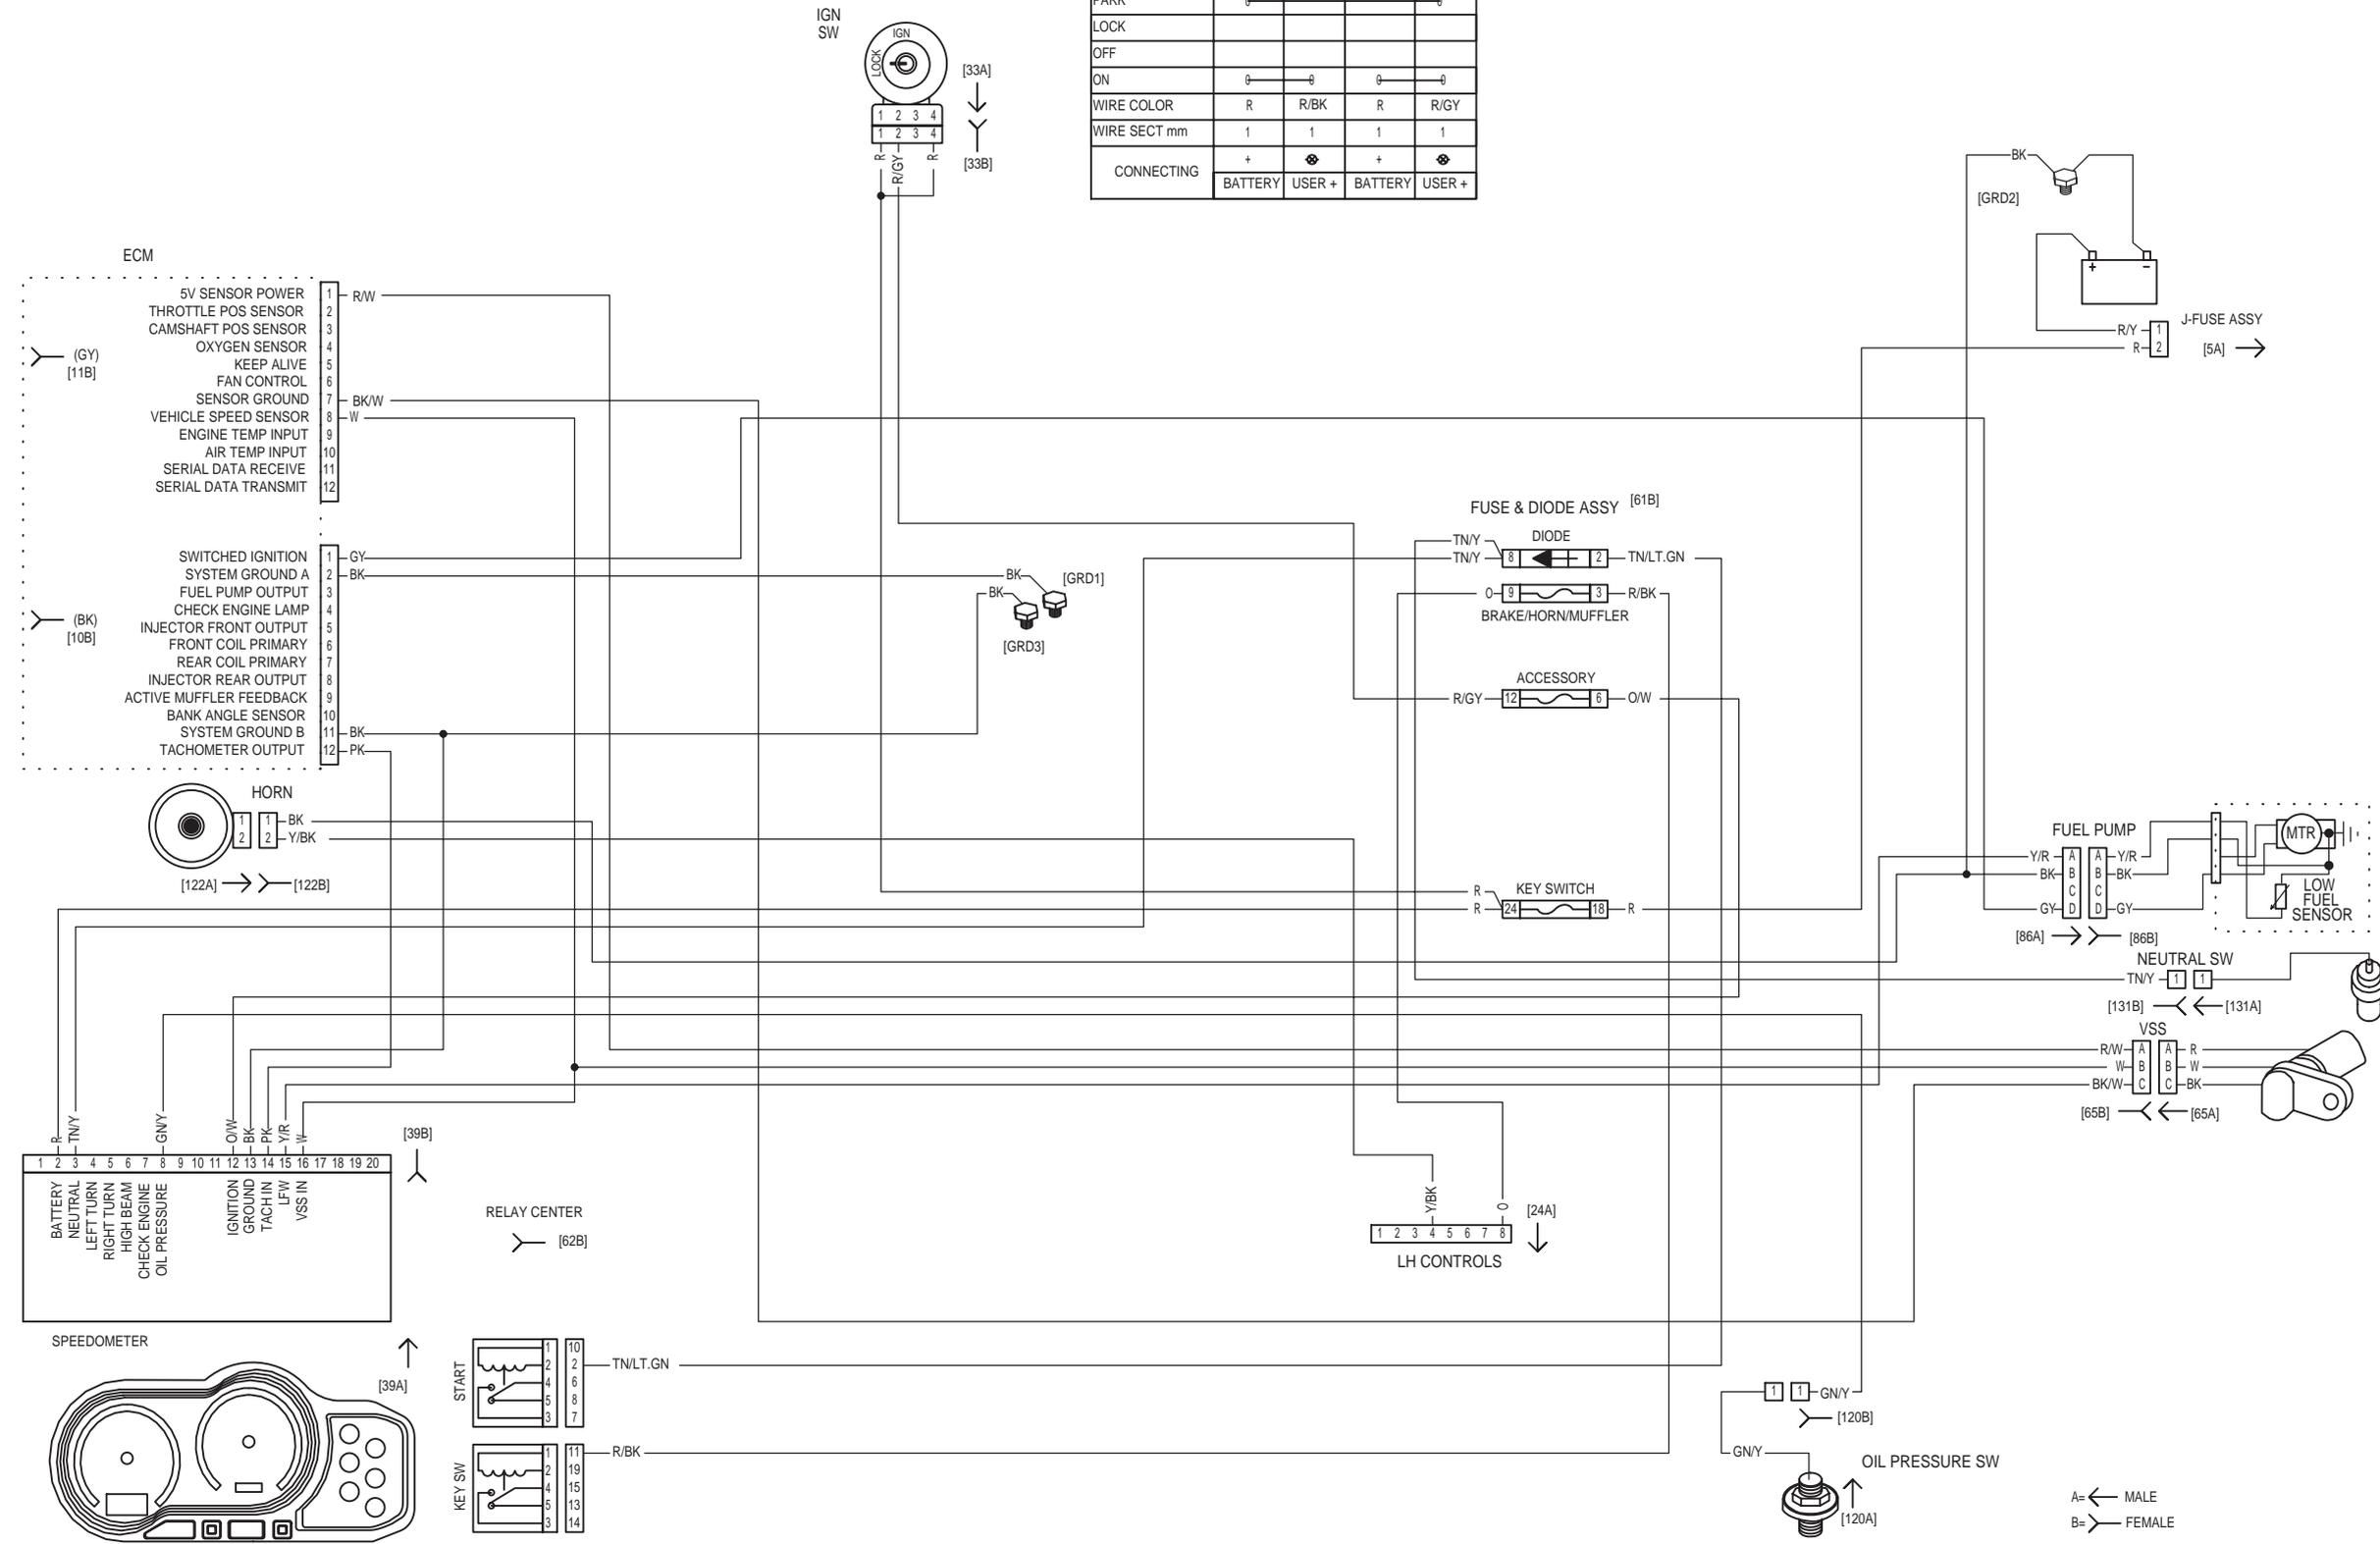

2004 XB Firebolt Horn & Instruments Circuit

bd0023xx

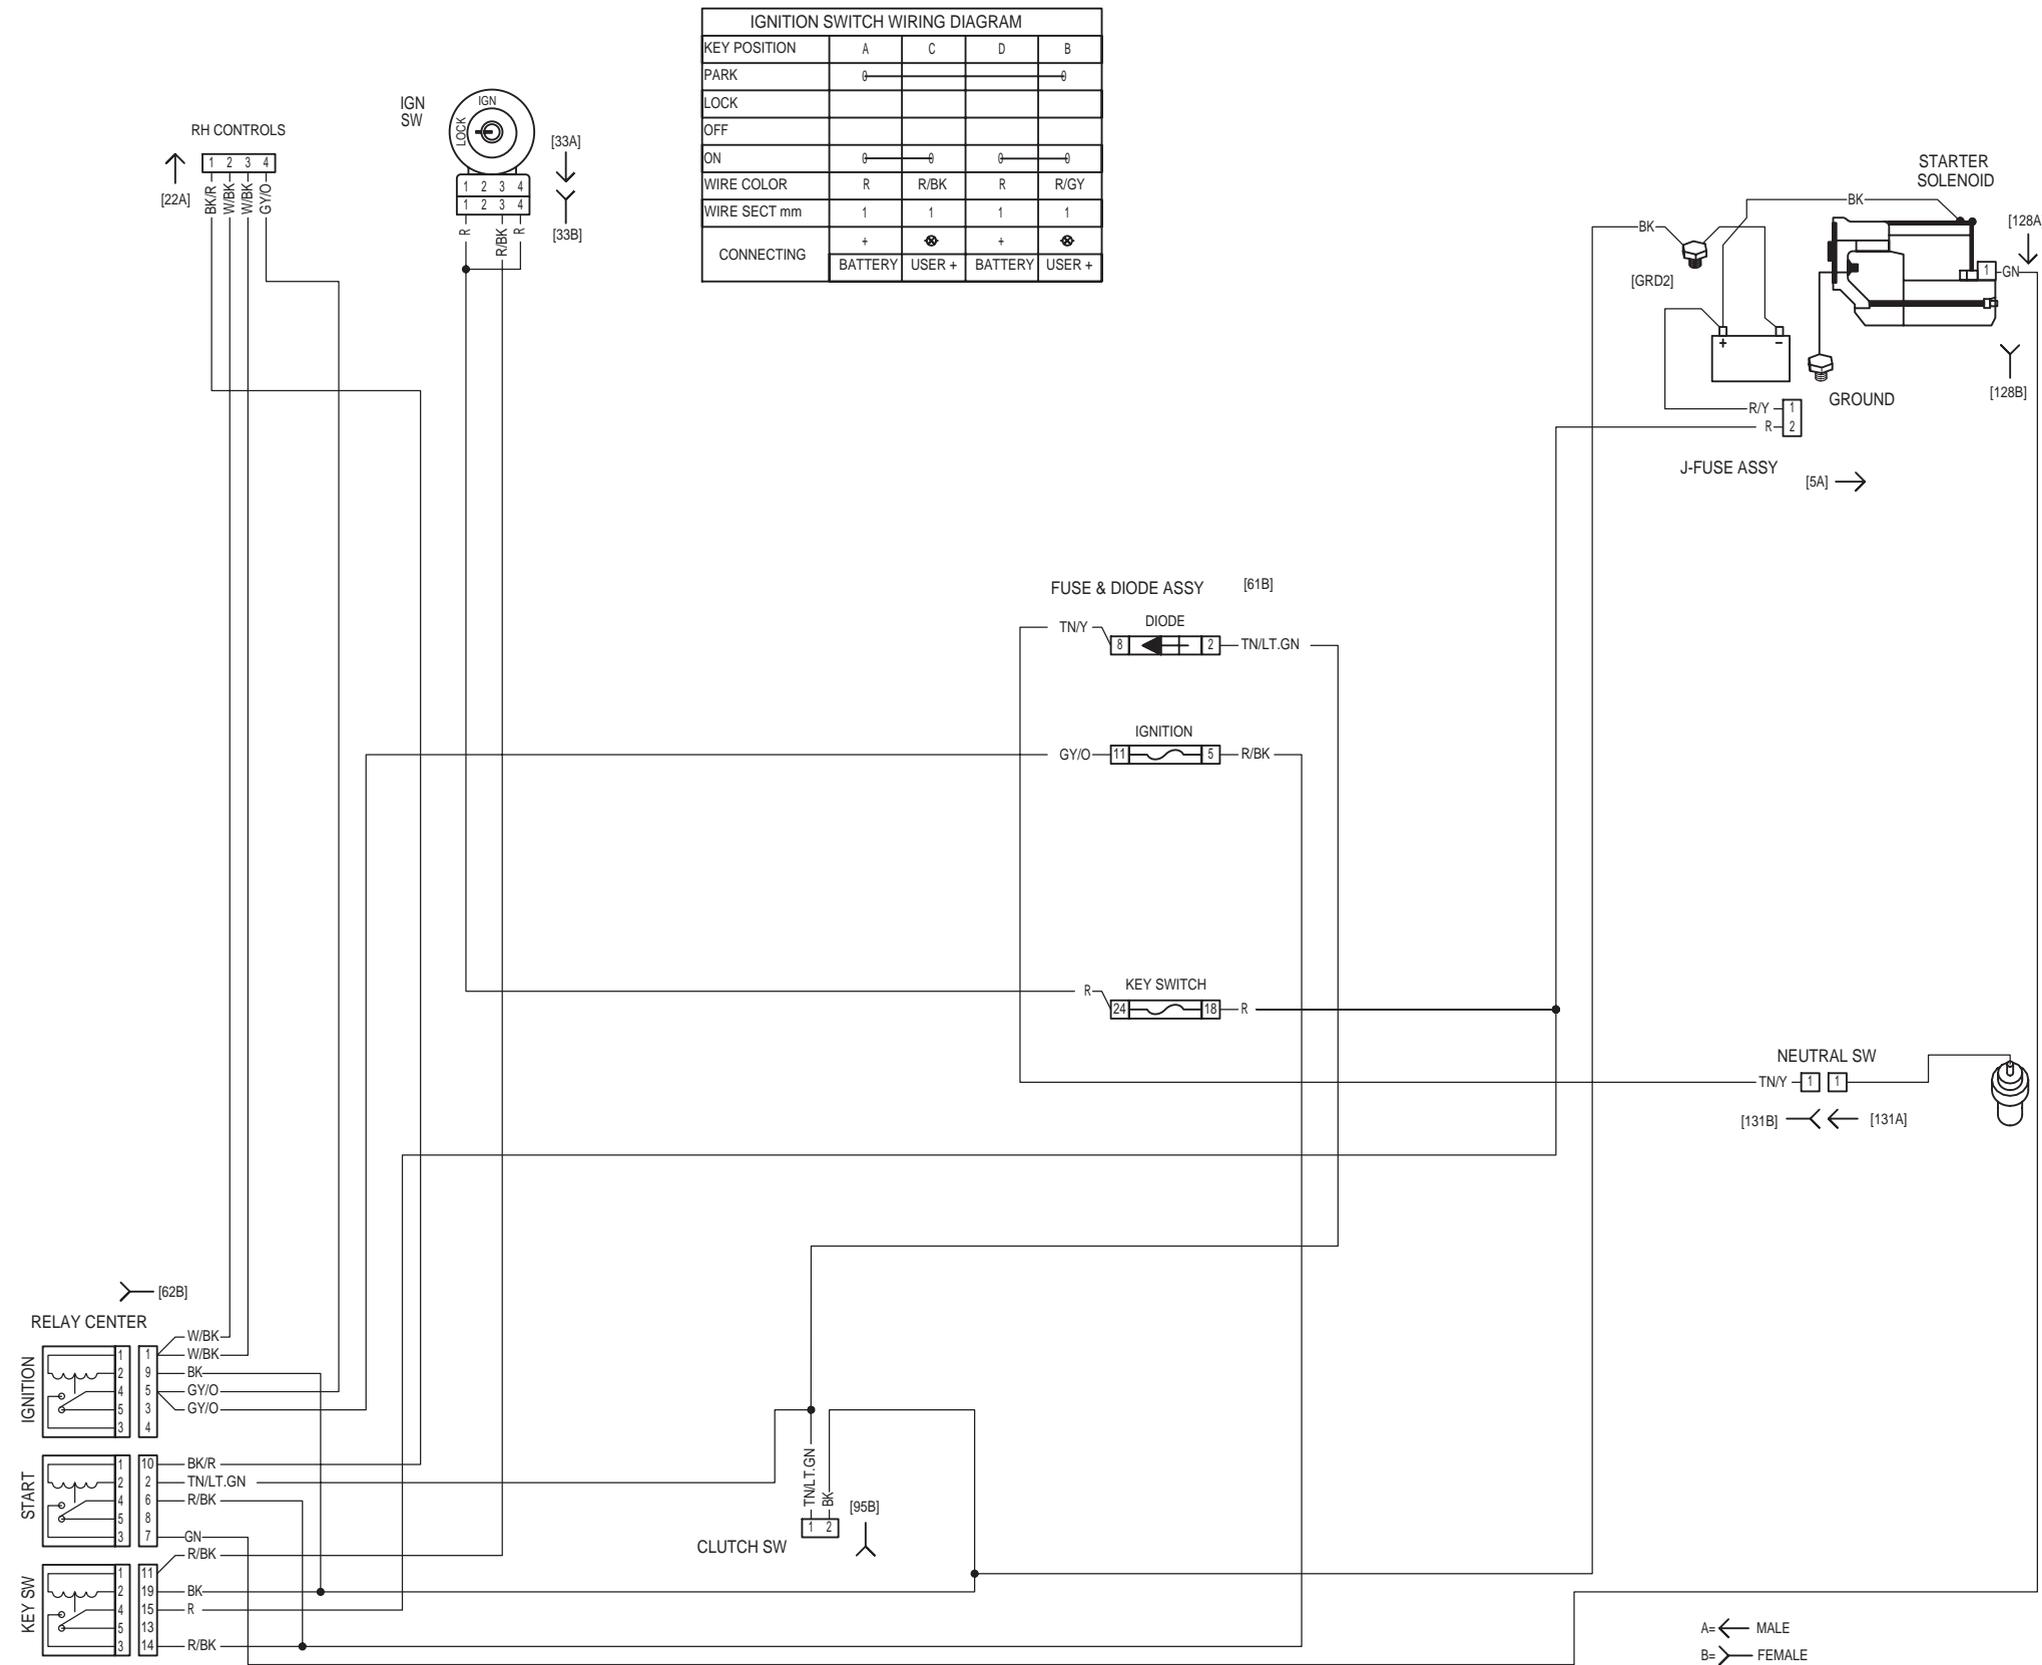


IGNITION SWITCH WIRING DIAGRAM

| KEY POSITION | A | C | D | B |
|--------------|---------|--------|---------|--------|
| PARK | 0 | | | 0 |
| LOCK | | | | |
| OFF | | | | |
| ON | 0 | 0 | 0 | 0 |
| WIRE COLOR | R | R/BK | R | R/GY |
| WIRE SECT mm | 1 | 1 | 1 | 1 |
| CONNECTING | + | ⊕ | + | ⊕ |
| | BATTERY | USER + | BATTERY | USER + |


2004 XB Firebolt Starting Circuit

bd0018xx

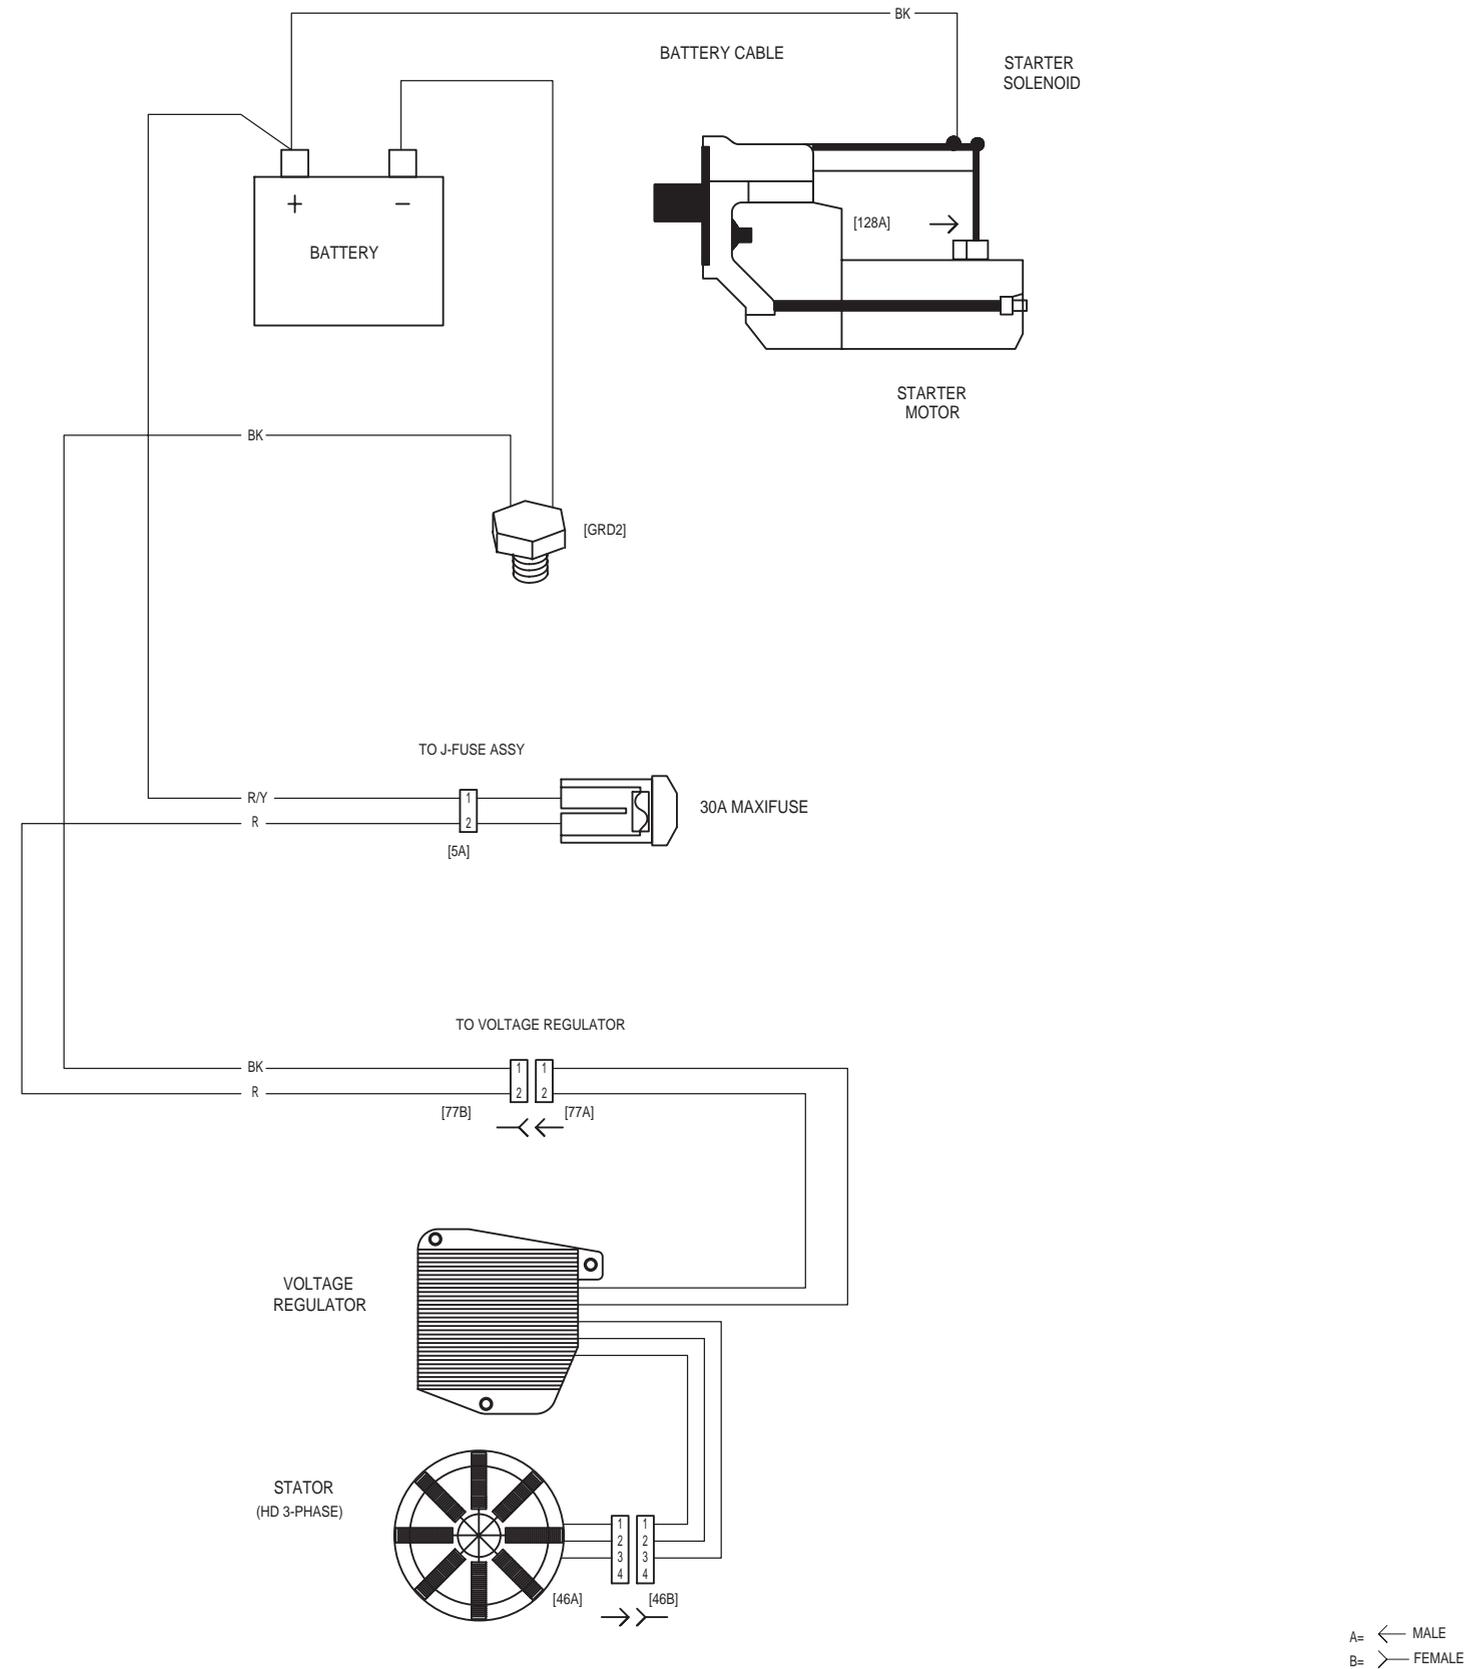

2004 XB Firebolt Starting & Charging Circuit

bd0019xx

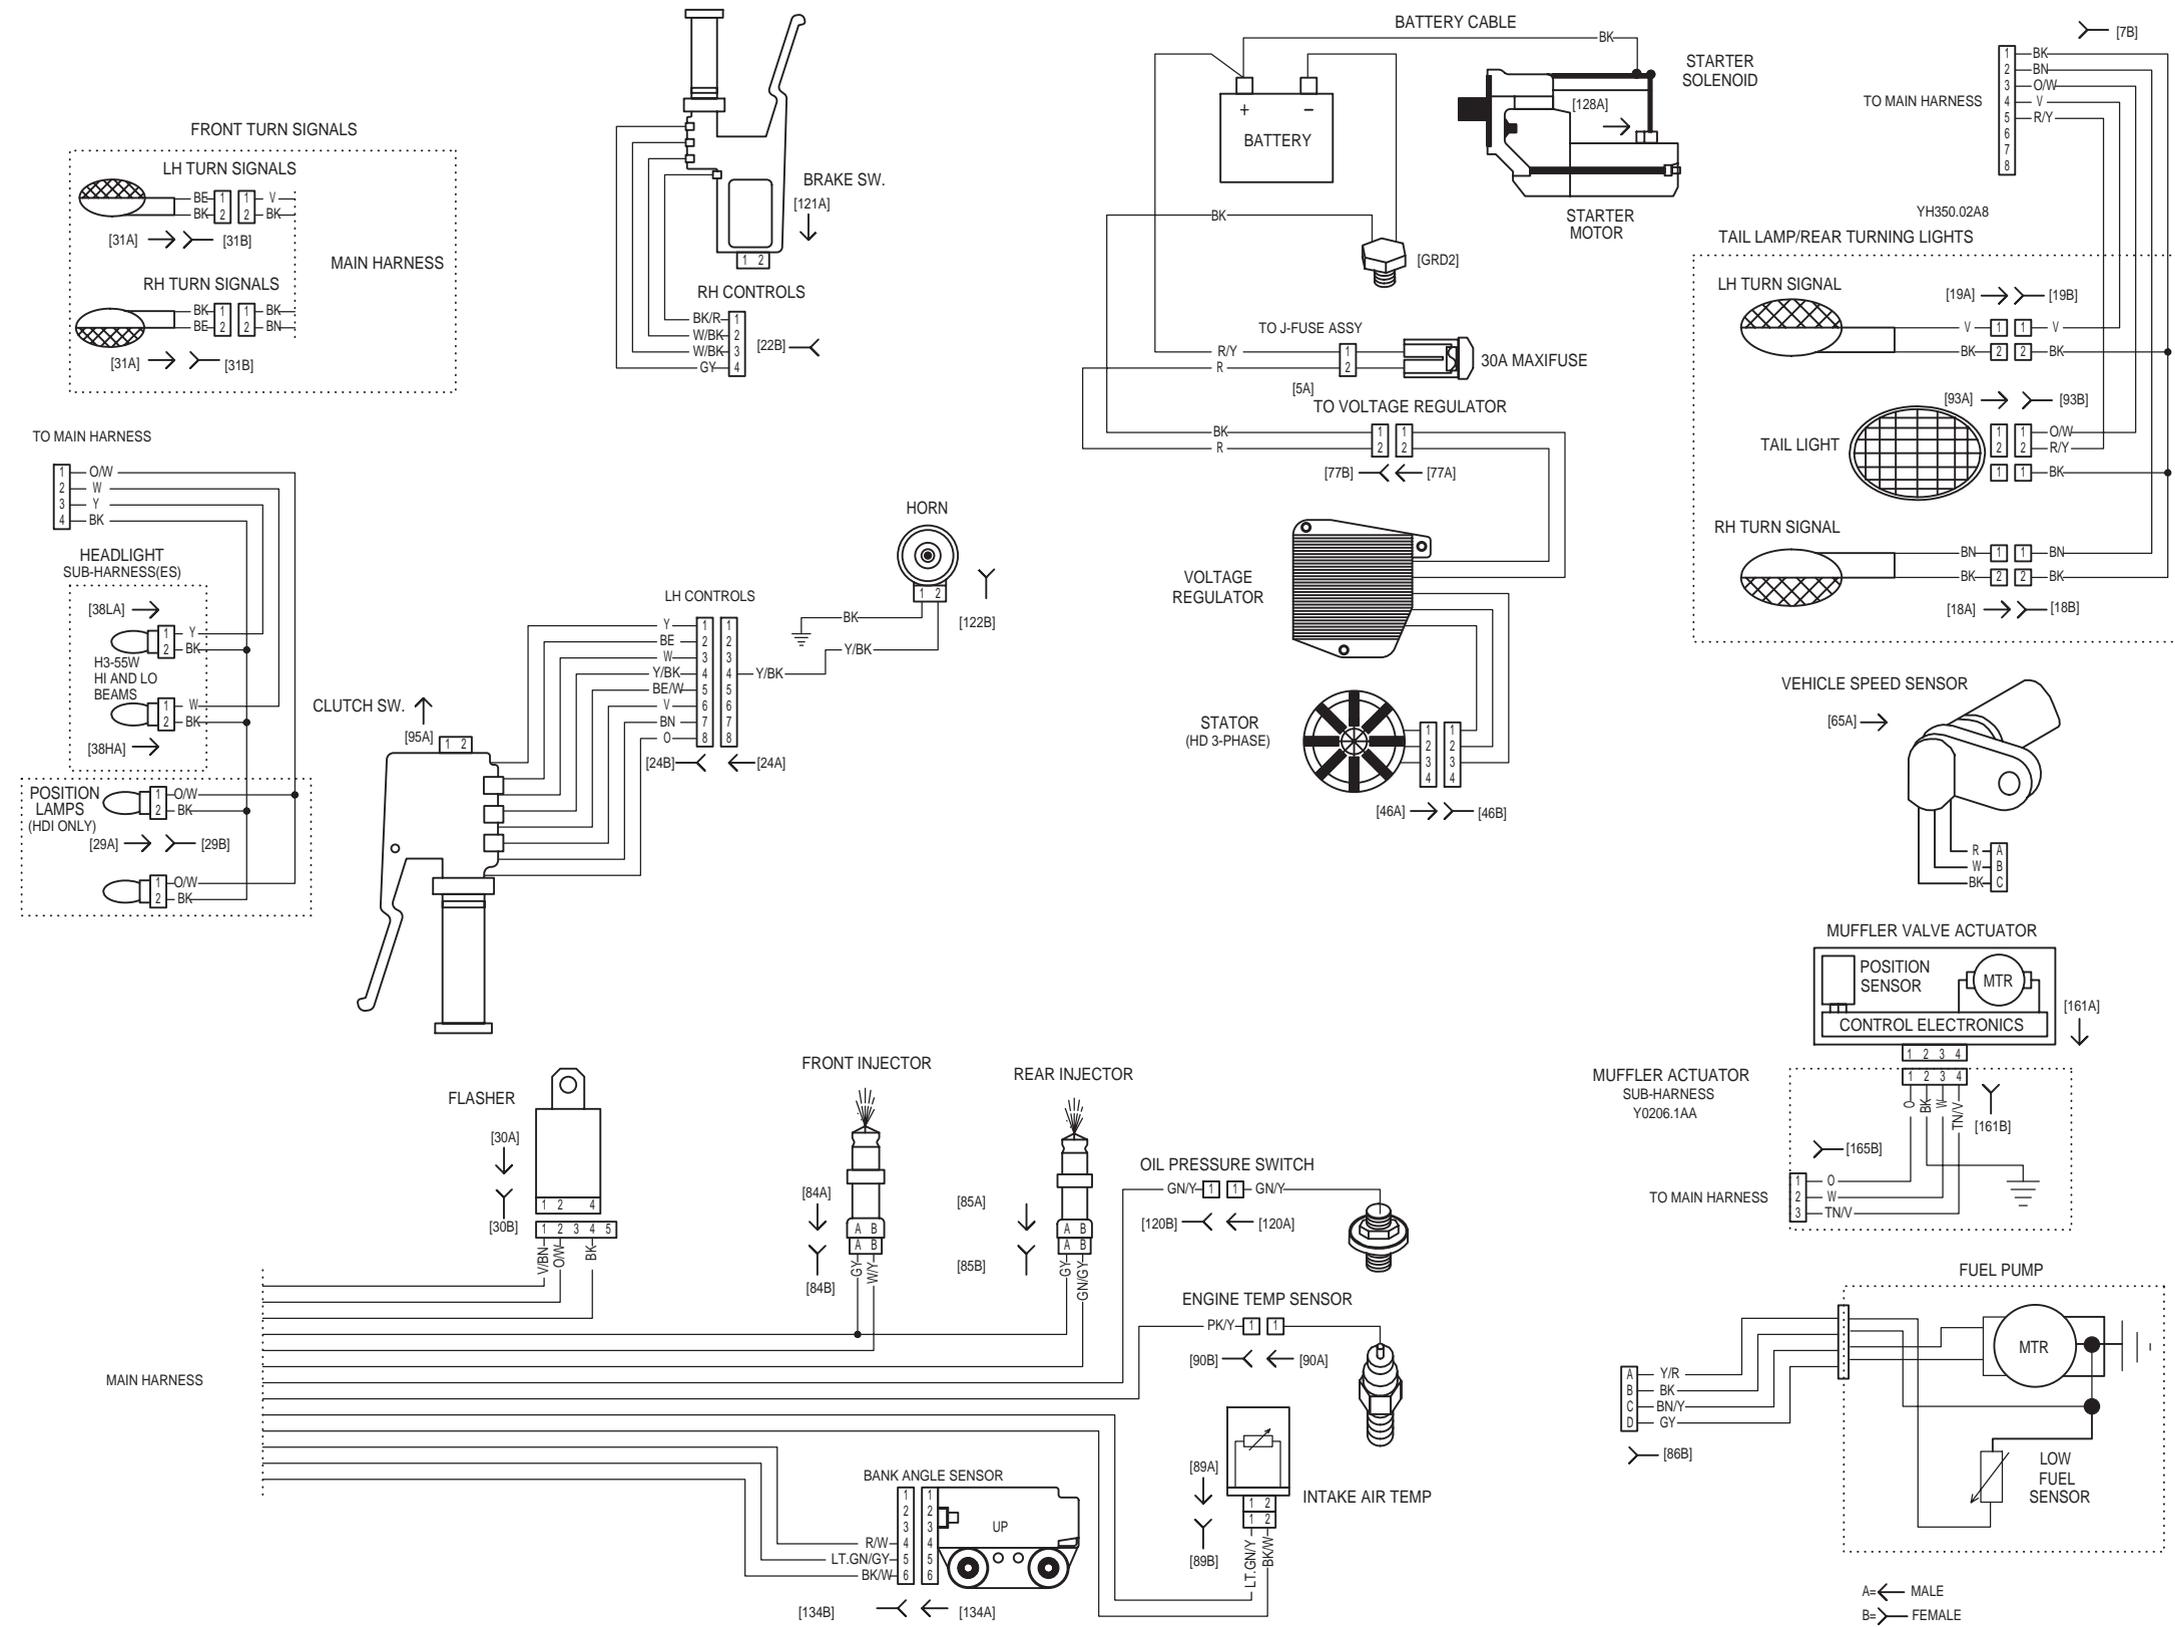

2004 XB Firebolt Component Circuits

APPENDIX C—METRIC CONVERSIONS

Table C-1. Metric Conversions

| MILLIMETERS TO INCHES (MM X 0.03937 = INCHES) | | | | | | | | INCHES TO MILLIMETERS (INCHES X 25.40 = MM) | | | | | | | |
|--|-------|----|-------|----|-------|-----|-------|--|--------|--------------------|--------|--------------------|-------|--------------------|--------|
| mm | in. | mm | in. | mm | in. | mm | in. | in. | mm | in. | mm | in. | mm | in. | mm |
| .1 | .0039 | 25 | .9842 | 58 | 2.283 | 91 | 3.582 | .001 | .025 | .6 | 15.240 | 1 ^{15/16} | 49.21 | 3 ^{5/16} | 84.14 |
| .2 | .0078 | 26 | 1.024 | 59 | 2.323 | 92 | 3.622 | .002 | .051 | 5/8 | 15.875 | 2 | 50.80 | 3 ^{3/8} | 85.72 |
| .3 | .0118 | 27 | 1.063 | 60 | 2.362 | 93 | 3.661 | .003 | .076 | 11/16 | 17.462 | 2 ^{1/16} | 52.39 | 3.4 | 86.36 |
| .4 | .0157 | 28 | 1.102 | 61 | 2.401 | 94 | 3.701 | .004 | .102 | .7 | 17.780 | 2.1 | 53.34 | 3 ^{7/16} | 87.31 |
| .5 | .0197 | 29 | 1.142 | 62 | 2.441 | 95 | 3.740 | .005 | .127 | 3/4 | 19.050 | 2 ^{1/8} | 53.97 | 3 ^{1/2} | 88.90 |
| .6 | .0236 | 30 | 1.181 | 63 | 2.480 | 96 | 3.779 | .006 | .152 | .8 | 20.320 | 2 ^{3/16} | 55.56 | 3 ^{9/16} | 90.49 |
| .7 | .0275 | 31 | 1.220 | 64 | 2.519 | 97 | 3.819 | .007 | .178 | 13/16 | 20.638 | 2.2 | 55.88 | 3.6 | 91.44 |
| .8 | .0315 | 32 | 1.260 | 65 | 2.559 | 98 | 3.858 | .008 | .203 | 7/8 | 22.225 | 2 ^{1/4} | 57.15 | 3 ^{5/8} | 92.07 |
| .9 | .0354 | 33 | 1.299 | 66 | 2.598 | 99 | 3.897 | .009 | .229 | .9 | 22.860 | 2.3 | 58.42 | 3 ^{11/16} | 93.66 |
| 1 | .0394 | 34 | 1.338 | 67 | 2.638 | 100 | 3.937 | .010 | .254 | 15/16 | 23.812 | 2 ^{5/16} | 58.74 | 3.7 | 93.98 |
| 2 | .0787 | 35 | 1.378 | 68 | 2.677 | 101 | 3.976 | 1/64 | .397 | 1 | 25.40 | 2 ^{3/8} | 60.32 | 3 ^{3/4} | 95.25 |
| 3 | .1181 | 36 | 1.417 | 69 | 2.716 | 102 | 4.016 | .020 | .508 | 1 ^{1/16} | 26.99 | 2.4 | 60.96 | 3.8 | 96.52 |
| 4 | .1575 | 37 | 1.456 | 70 | 2.756 | 103 | 4.055 | .030 | .762 | 1.1 | 27.94 | 2 ^{7/16} | 61.91 | 3 ^{13/16} | 96.84 |
| 5 | .1968 | 38 | 1.496 | 71 | 2.795 | 104 | 4.094 | 1/32 | .794 | 1 ^{1/8} | 28.57 | 2 ^{1/2} | 63.50 | 3 ^{7/8} | 98.42 |
| 6 | .2362 | 39 | 1.535 | 72 | 2.834 | 105 | 4.134 | .040 | 1.016 | 1 ^{3/16} | 30.16 | 2 ^{9/16} | 65.09 | 3.9 | 99.06 |
| 7 | .2756 | 40 | 1.575 | 73 | 2.874 | 106 | 4.173 | .050 | 1.270 | 1.2 | 30.48 | 2.6 | 66.04 | 3 ^{15/16} | 100.01 |
| 8 | .3149 | 41 | 1.614 | 74 | 2.913 | 107 | 4.212 | .060 | 1.524 | 1 ^{1/4} | 31.75 | 2 ^{5/8} | 66.67 | 4 | 101.6 |
| 9 | .3543 | 42 | 1.653 | 75 | 2.953 | 108 | 4.252 | 1/16 | 1.588 | 1.3 | 33.02 | 2 ^{11/16} | 68.26 | 4 ^{1/16} | 102.19 |
| 10 | .3937 | 43 | 1.693 | 76 | 2.992 | 109 | 4.291 | .070 | 1.778 | 1 ^{5/16} | 33.34 | 2.7 | 68.58 | 4.1 | 104.14 |
| 11 | .4331 | 44 | 1.732 | 77 | 3.031 | 110 | 4.331 | .080 | 2.032 | 1 ^{3/8} | 34.92 | 2 ^{3/4} | 69.85 | 4 ^{1/8} | 104.77 |
| 12 | .4724 | 45 | 1.772 | 78 | 3.071 | 111 | 4.370 | .090 | 2.286 | 1.4 | 35.56 | 2.8 | 71.12 | 4 ^{3/16} | 106.36 |
| 13 | .5118 | 46 | 1.811 | 79 | 3.110 | 112 | 4.409 | .1 | 2.540 | 1 ^{7/16} | 36.51 | 2 ^{13/16} | 71.44 | 4.2 | 106.68 |
| 14 | .5512 | 47 | 1.850 | 80 | 3.149 | 113 | 4.449 | 1/8 | 3.175 | 1 ^{1/2} | 38.10 | 2 ^{7/8} | 73.02 | 4 ^{1/4} | 107.95 |
| 15 | .5905 | 48 | 1.890 | 81 | 3.189 | 114 | 4.488 | 3/16 | 4.762 | 1 ^{9/16} | 39.69 | 2.9 | 73.66 | 4.3 | 109.22 |
| 16 | .6299 | 49 | 1.929 | 82 | 3.228 | 115 | 4.527 | .2 | 5.080 | 1.6 | 40.64 | 2 ^{15/16} | 74.61 | 4 ^{5/16} | 109.54 |
| 17 | .6693 | 50 | 1.968 | 83 | 3.268 | 116 | 4.567 | 1/4 | 6.350 | 1 ^{5/8} | 41.27 | 3 | 76.20 | 4 ^{3/8} | 111.12 |
| 18 | .7086 | 51 | 2.008 | 84 | 3.307 | 117 | 4.606 | .3 | 7.620 | 1 ^{11/16} | 42.86 | 3 ^{1/16} | 77.79 | 4.4 | 111.76 |
| 19 | .7480 | 52 | 2.047 | 85 | 3.346 | 118 | 4.645 | 5/16 | 7.938 | 1.7 | 43.18 | 3.1 | 78.74 | 4 ^{7/16} | 112.71 |
| 20 | .7874 | 53 | 2.086 | 86 | 3.386 | 119 | 4.685 | 3/8 | 9.525 | 1 ^{3/4} | 44.45 | 3 ^{1/8} | 79.37 | 4 ^{1/2} | 114.30 |
| 21 | .8268 | 54 | 2.126 | 87 | 3.425 | 120 | 4.724 | .4 | 10.160 | 1.8 | 45.72 | 3 ^{3/16} | 80.96 | 4 ^{9/16} | 115.89 |
| 22 | .8661 | 55 | 2.165 | 88 | 3.464 | 121 | 4.764 | 7/16 | 11.112 | 1 ^{13/16} | 46.04 | 3.2 | 81.28 | 4.6 | 116.84 |
| 23 | .9055 | 56 | 2.205 | 89 | 3.504 | 122 | 4.803 | 1/2 | 12.700 | 1 ^{7/8} | 47.62 | 3 ^{1/4} | 82.55 | 4 ^{5/8} | 117.47 |
| 24 | .9449 | 57 | 2.244 | 90 | 3.543 | 123 | 4.842 | 9/16 | 14.288 | 1.9 | 48.26 | 3.3 | 83.82 | 4 ^{11/16} | 119.06 |

UNITED STATES SYSTEM

Unless otherwise specified, **all fluid volume measurements in this Service Manual are expressed in United States (U.S.) units-of-measure.** See below:

- 1 pint (U.S.) = 16 fluid ounces (U.S.)
- 1 quart (U.S.) = 2 pints (U.S.) = 32 fl. oz. (U.S.)
- 1 gallon (U.S.) = 4 quarts (U.S.) = 128 fl. oz. (U.S.)

METRIC SYSTEM

Fluid volume measurements in this Service Manual include the metric system equivalents. In the metric system, 1 liter (L) = 1,000 milliliters (mL). Should you need to convert from U.S. units-of-measure to metric units-of-measure (or vice versa), refer to the following:

- fluid ounces (U.S.) x 29.574 = milliliters
- pints (U.S.) x 0.473 = liters
- quarts (U.S.) x 0.946 = liters
- gallons (U.S.) x 3.785 = liters
- milliliters x 0.0338 = fluid ounces (U.S.)
- liters x 2.113 = pints (U.S.)
- liters x 1.057 = quarts (U.S.)
- liters x 0.264 = gallons (U.S.)

BRITISH IMPERIAL SYSTEM

Fluid volume measurements in this Service Manual do not include the British Imperial (Imp.) system equivalents. The following conversions exist in the British Imperial system:

- 1 pint (Imp.) = 20 fluid ounces (Imp.)
- 1 quart (Imp.) = 2 pints (Imp.)
- 1 gallon (Imp.) = 4 quarts (Imp.)

Although the same unit-of-measure terminology as the U.S. system is used in the British Imperial (Imp.) system, the actual volume of each British Imperial unit-of-measure differs from its U.S. counterpart. The U.S. fluid ounce is larger than the British Imperial fluid ounce. However, the U.S. pint, quart, and gallon are smaller than the British Imperial pint, quart, and gallon, respectively. Should you need to convert from U.S. units to British Imperial units (or vice versa), refer to the following:

- fluid ounces (U.S.) x 1.042 = fluid ounces (Imp.)
- pints (U.S.) x 0.833 = pints (Imp.)
- quarts (U.S.) x 0.833 = quarts (Imp.)
- gallons (U.S.) x 0.833 = gallons (Imp.)
- fluid ounces (Imp.) x 0.960 = fluid ounces (U.S.)
- pints (Imp.) x 1.201 = pints (U.S.)
- quarts (Imp.) x 1.201 = quarts (U.S.)
- gallons (Imp.) x 1.201 = gallons (U.S.)

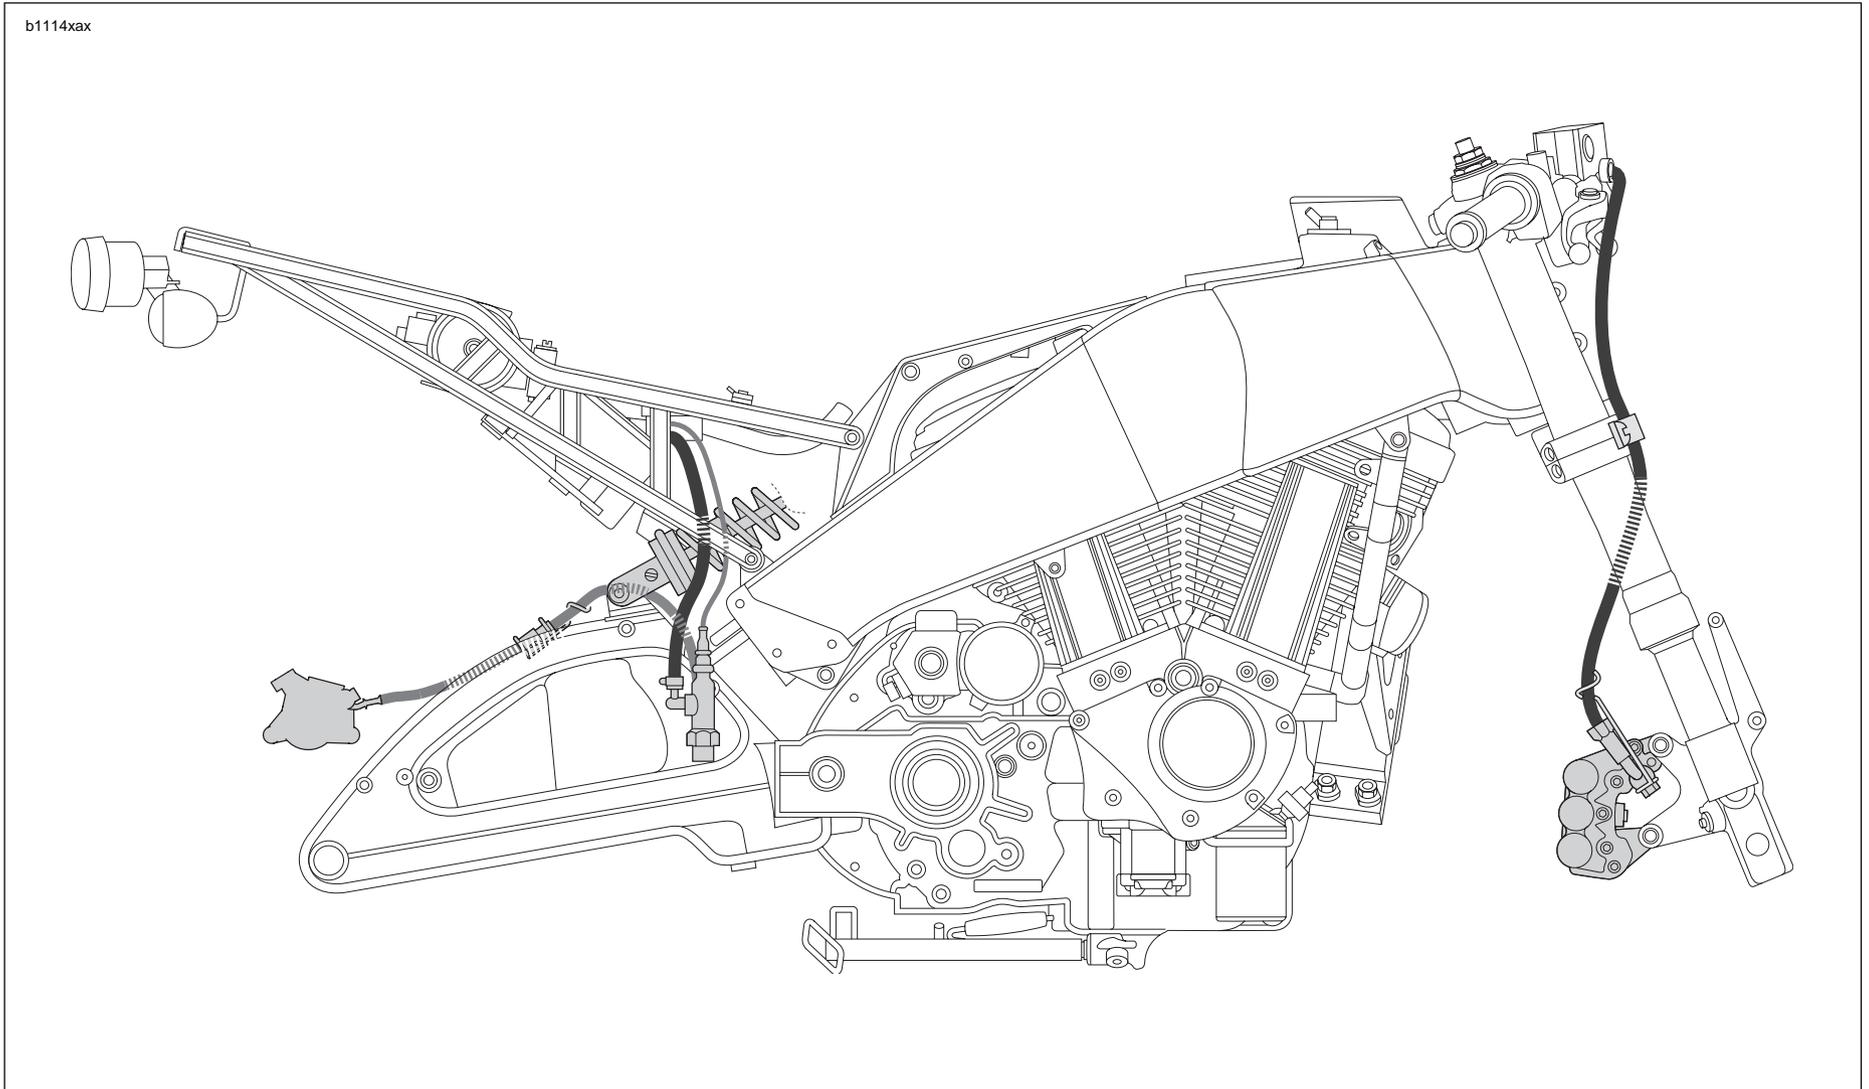


Figure D-1. Front and Rear Brake Systems, Right Side View

b1115xbx

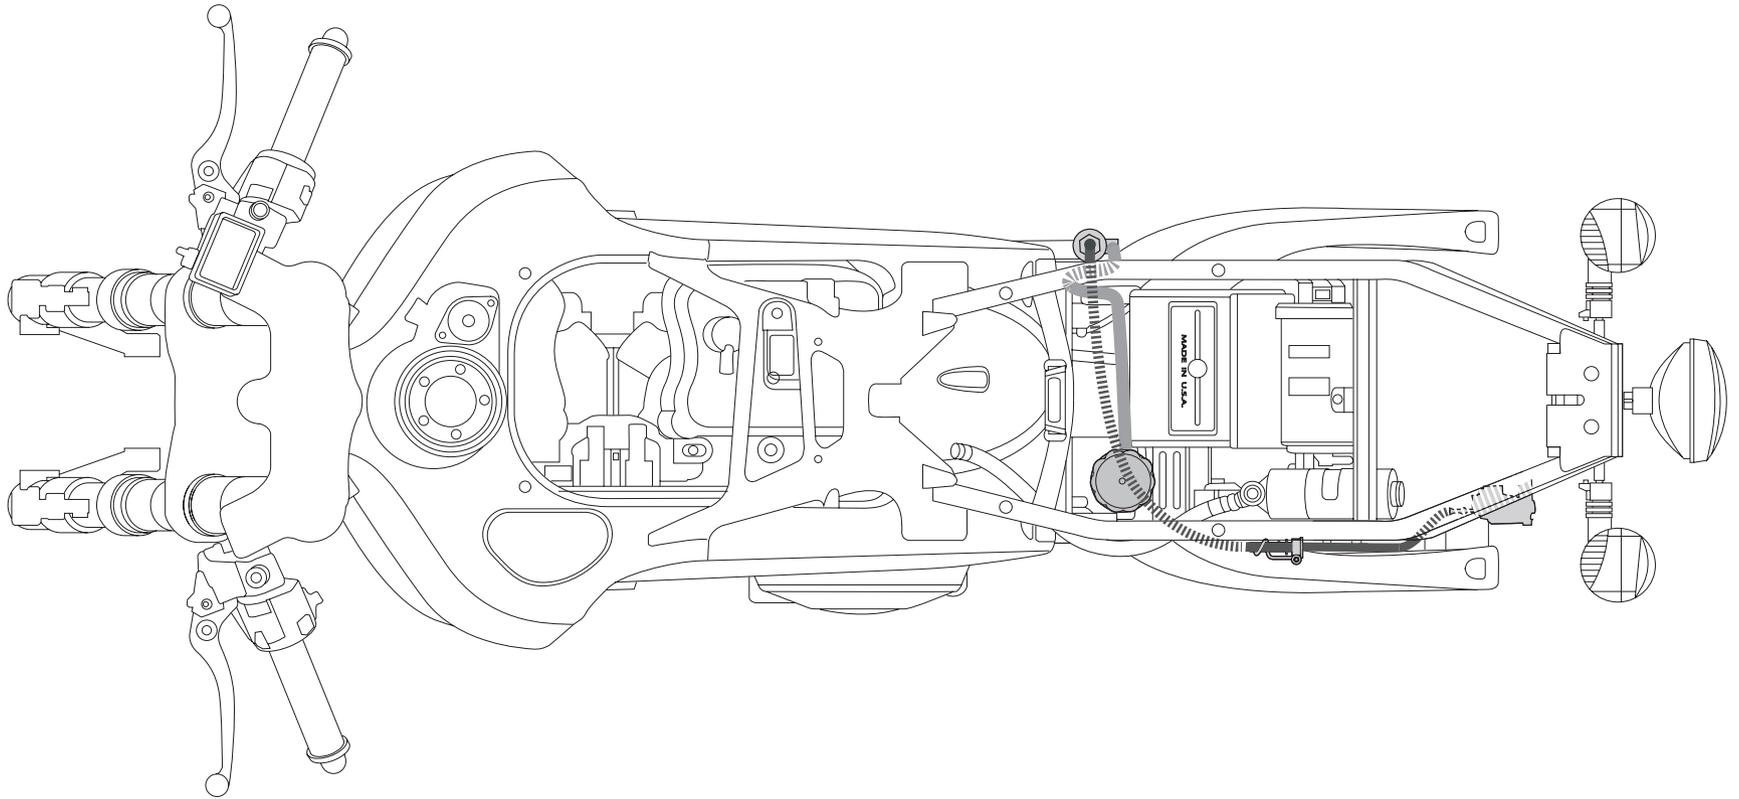


Figure D-2. Rear Brake Systems, Top View

b1116xcx

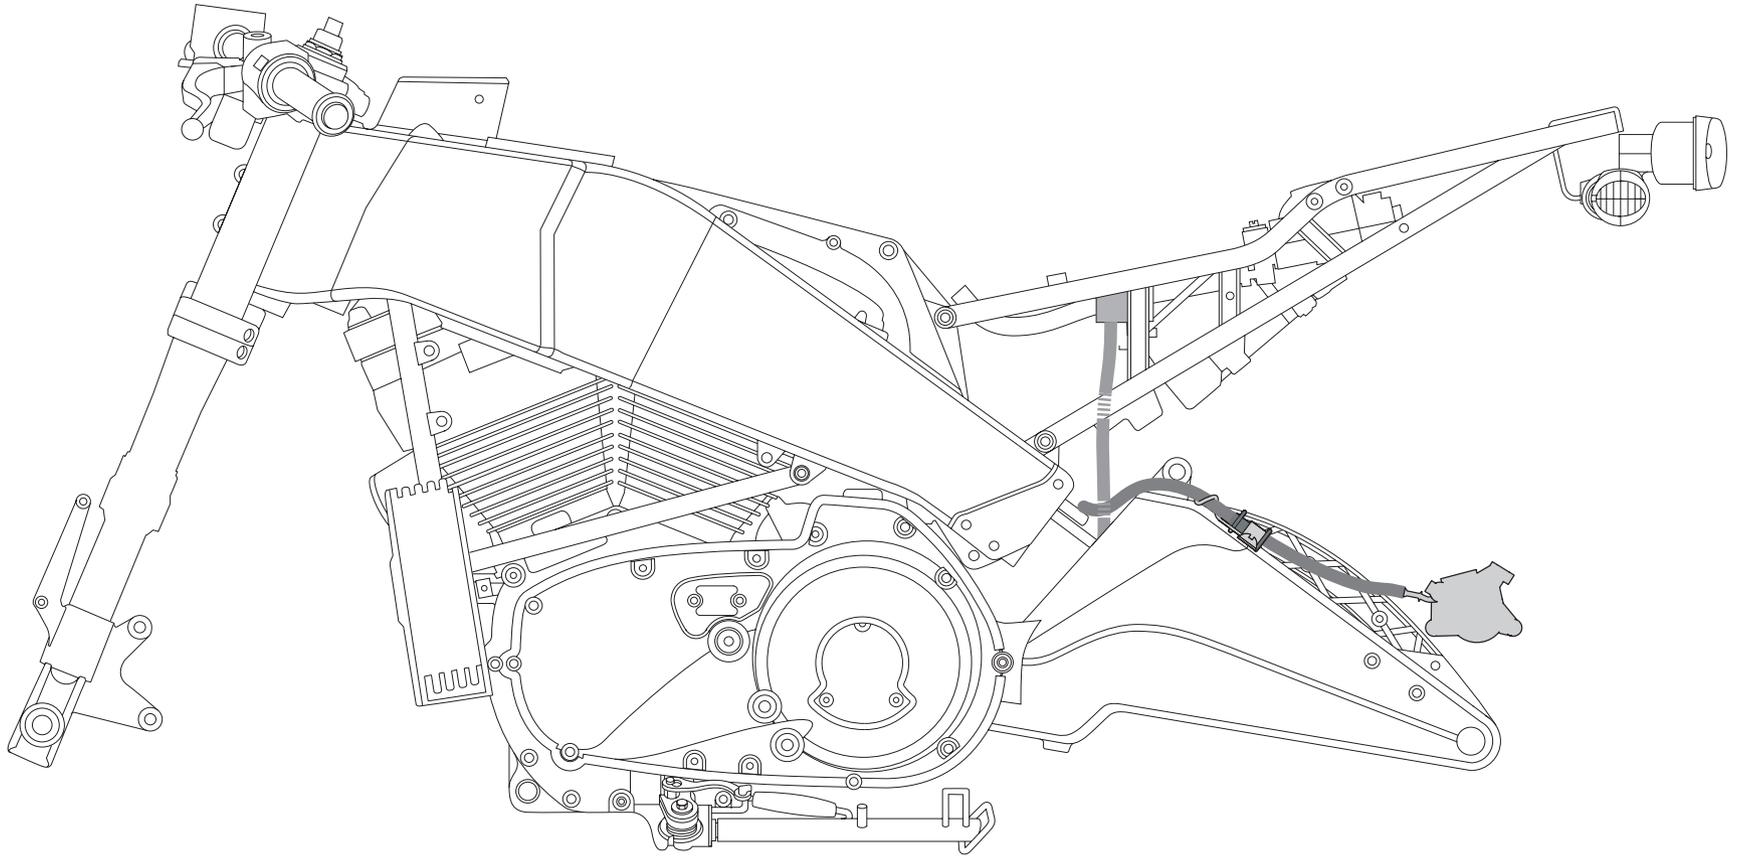


Figure D-3. Rear Brake Systems, Left Side View


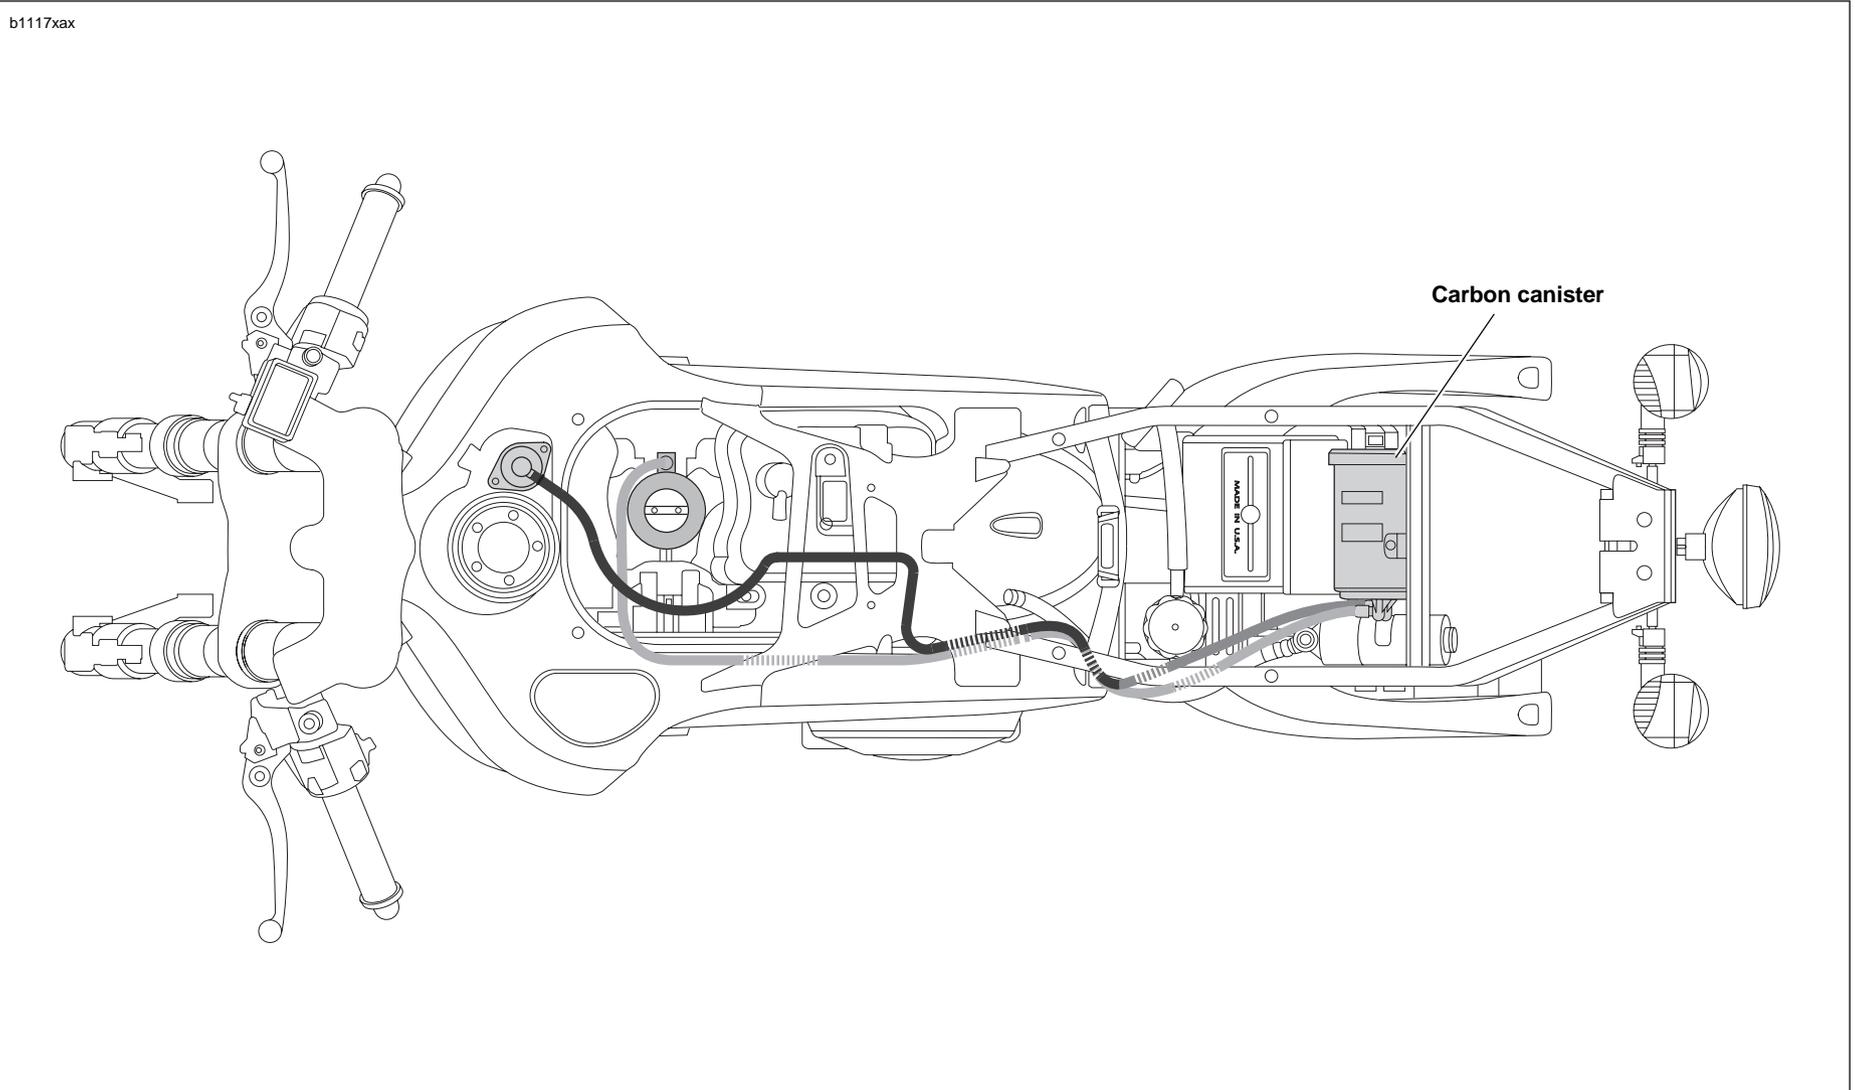


Figure D-4. Evaporative Emissions Control, California Models, Top View

b1118xbx

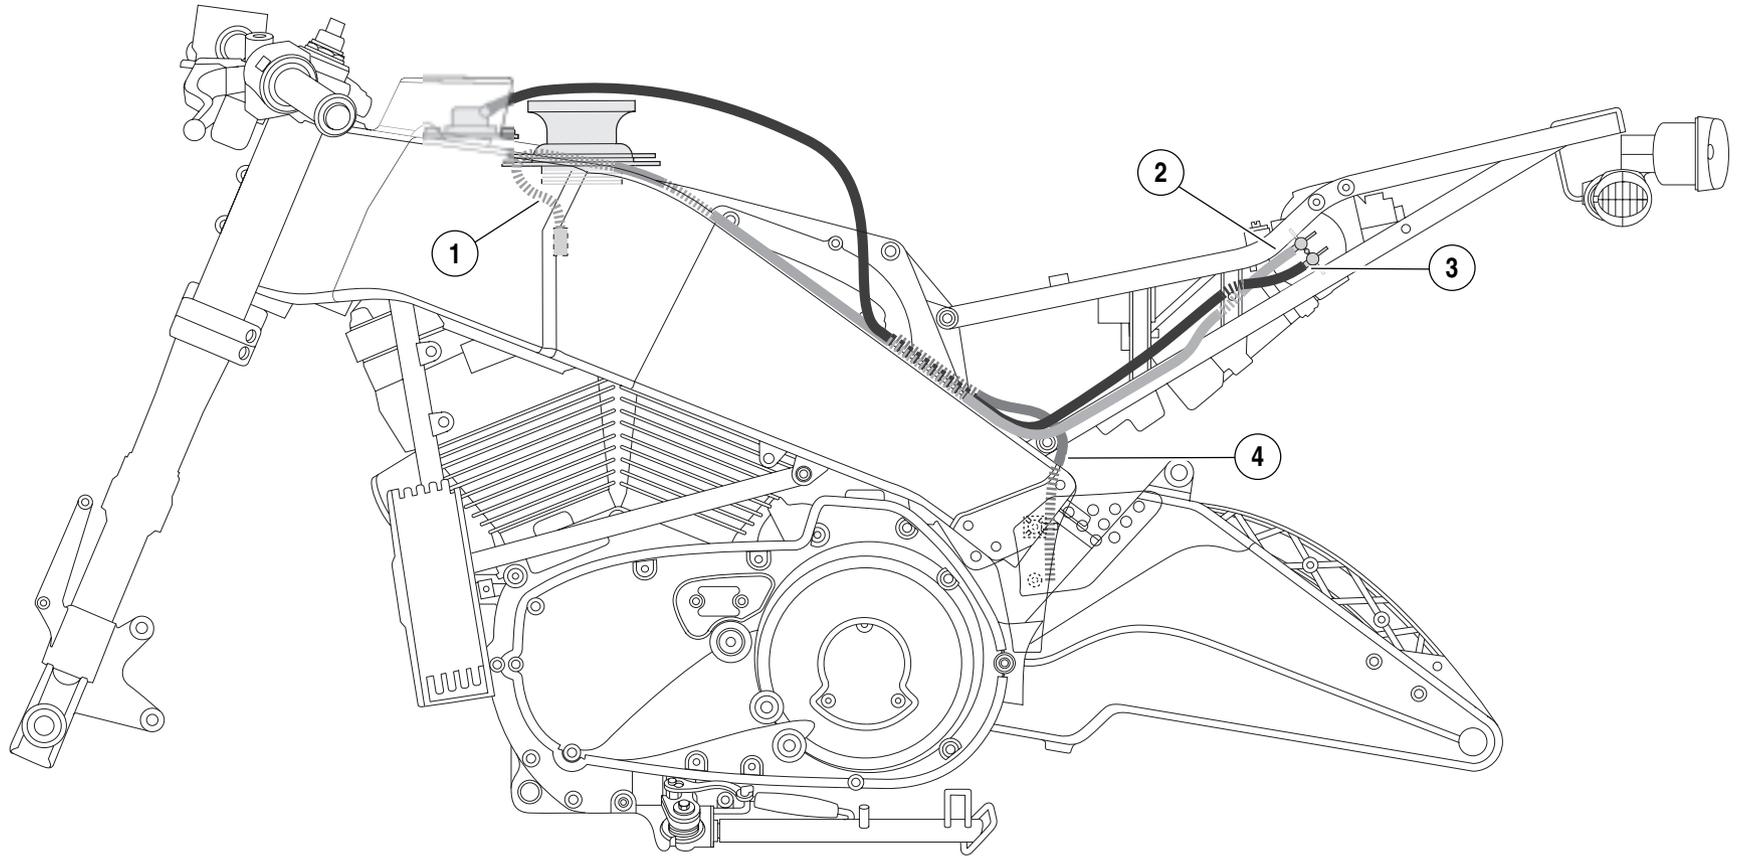


- 1. To induction module
- 2. From induction module (California)

- 3. From fuel tank (California)
- 4. From fuel tank to atmosphere (49 state)

Figure D-5. Evaporative Emissions Control, California and 49 State Models, Left Side View

b1119xdx

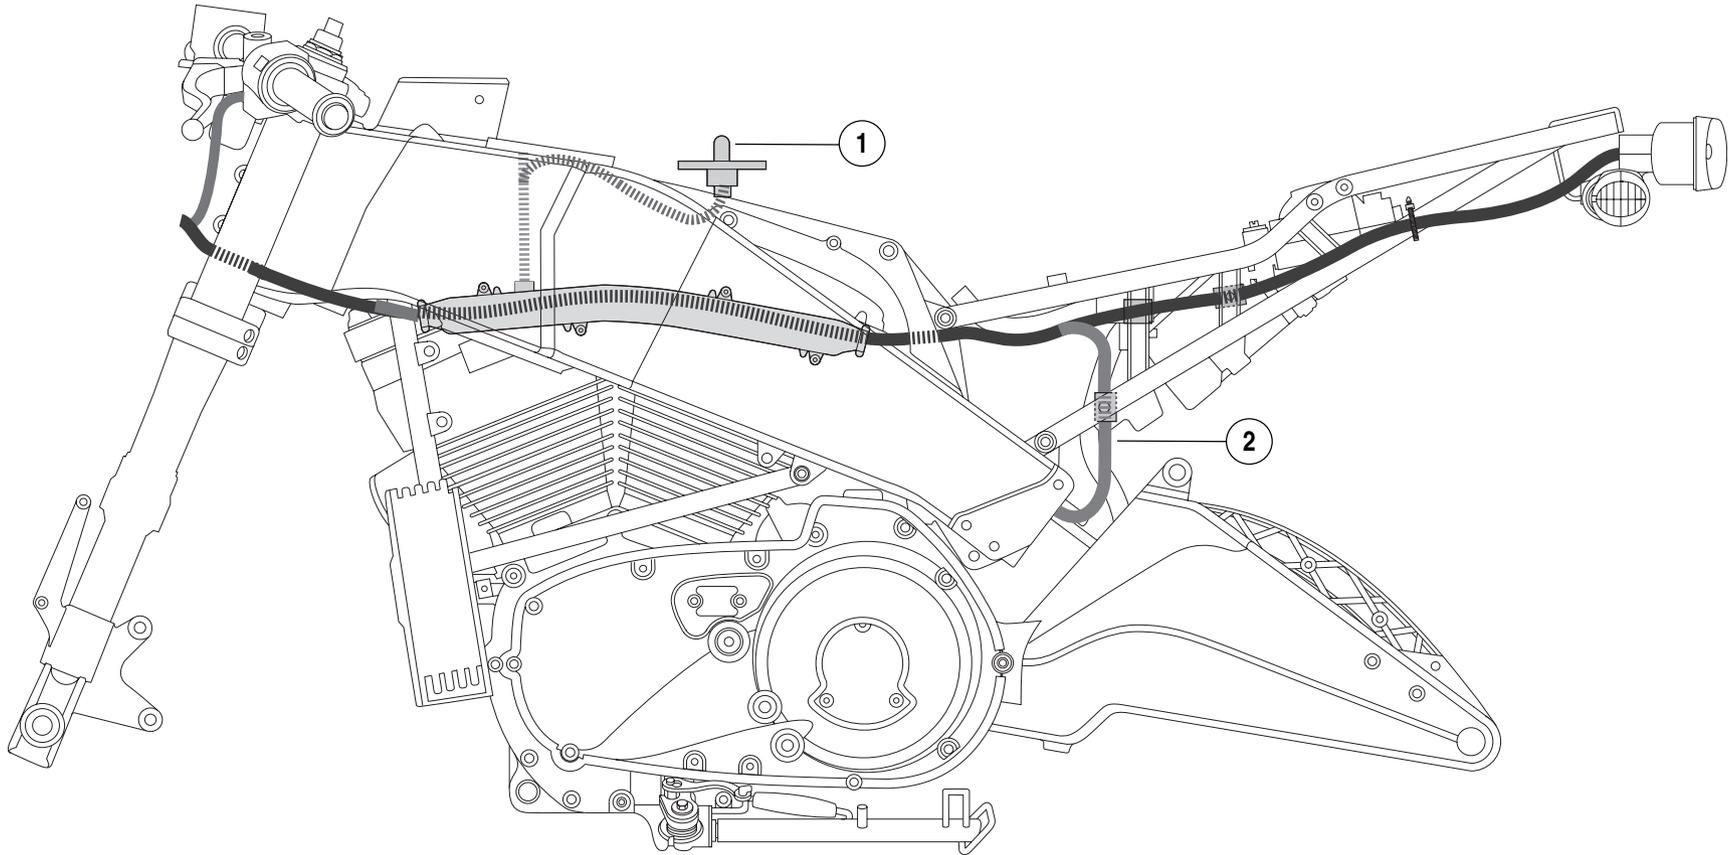


1. Intake air temperature sensor (IAT)

2. Fuel pump

Figure D-6. Wiring Harness, Left Side View

b1120xbx


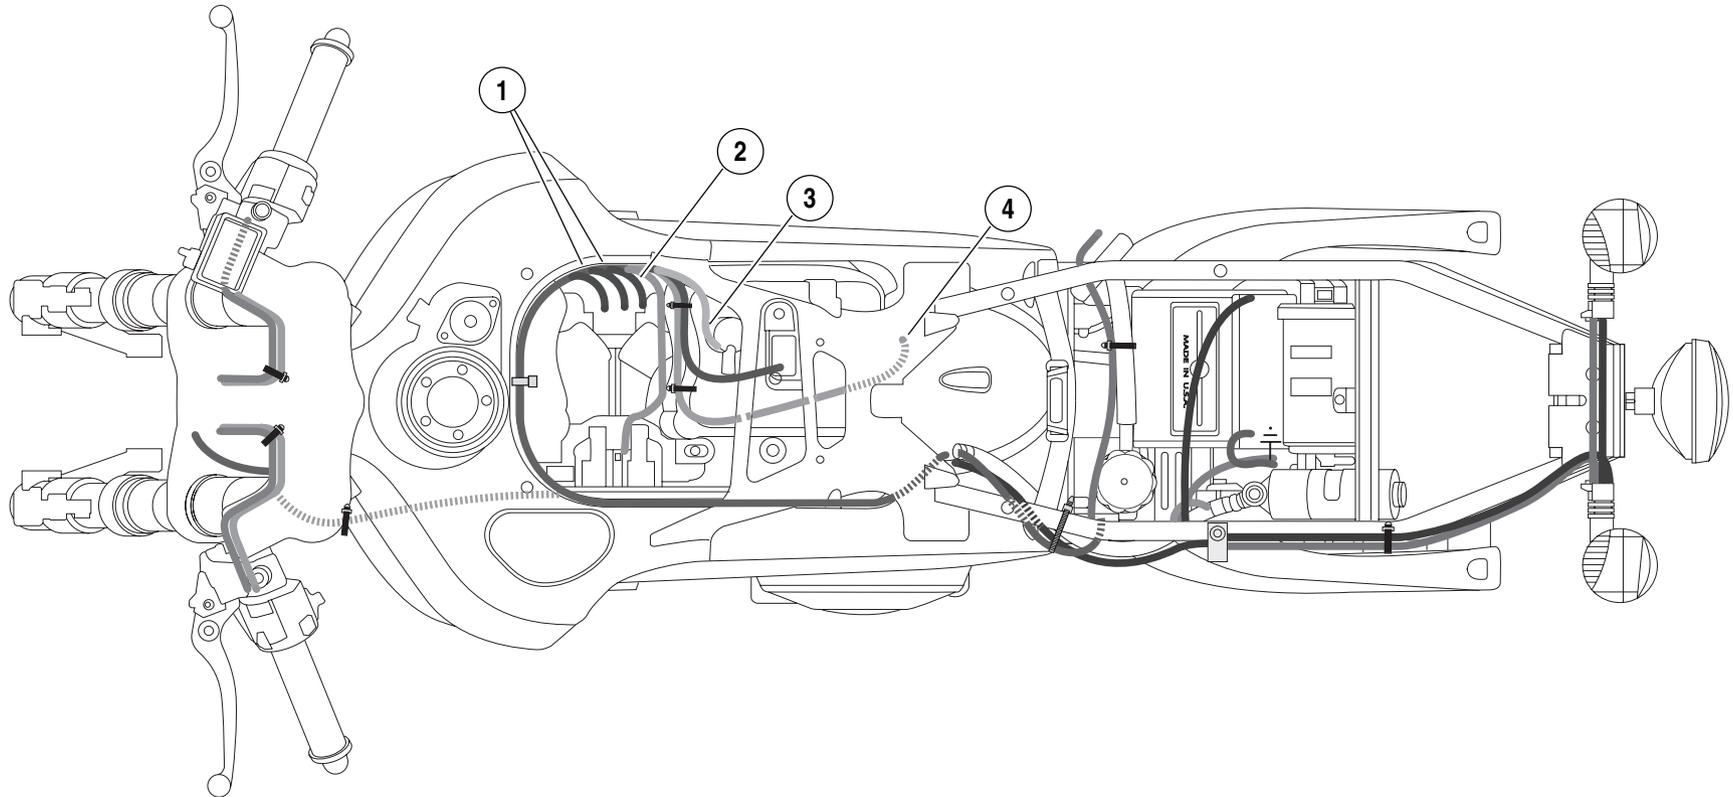


- 1. Fuel injector (2)
- 2. Throttle position sensor (TPS)

- 3. Intake air temperature (IAT) sensor
- 4. Oxygen (O2) sensor

Figure D-7. Wiring Harness, Top View


b1121xcx

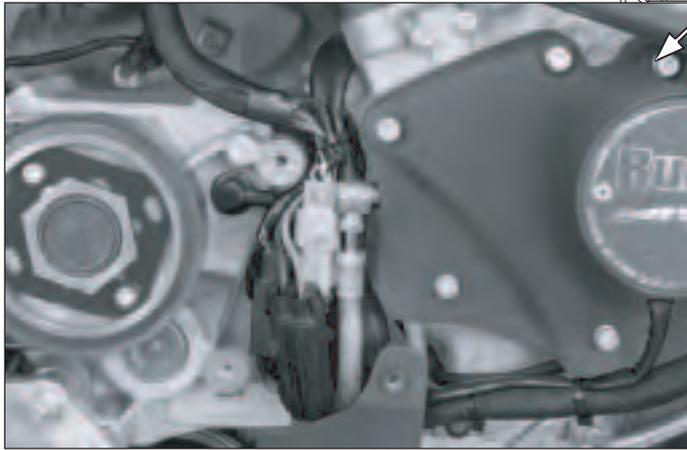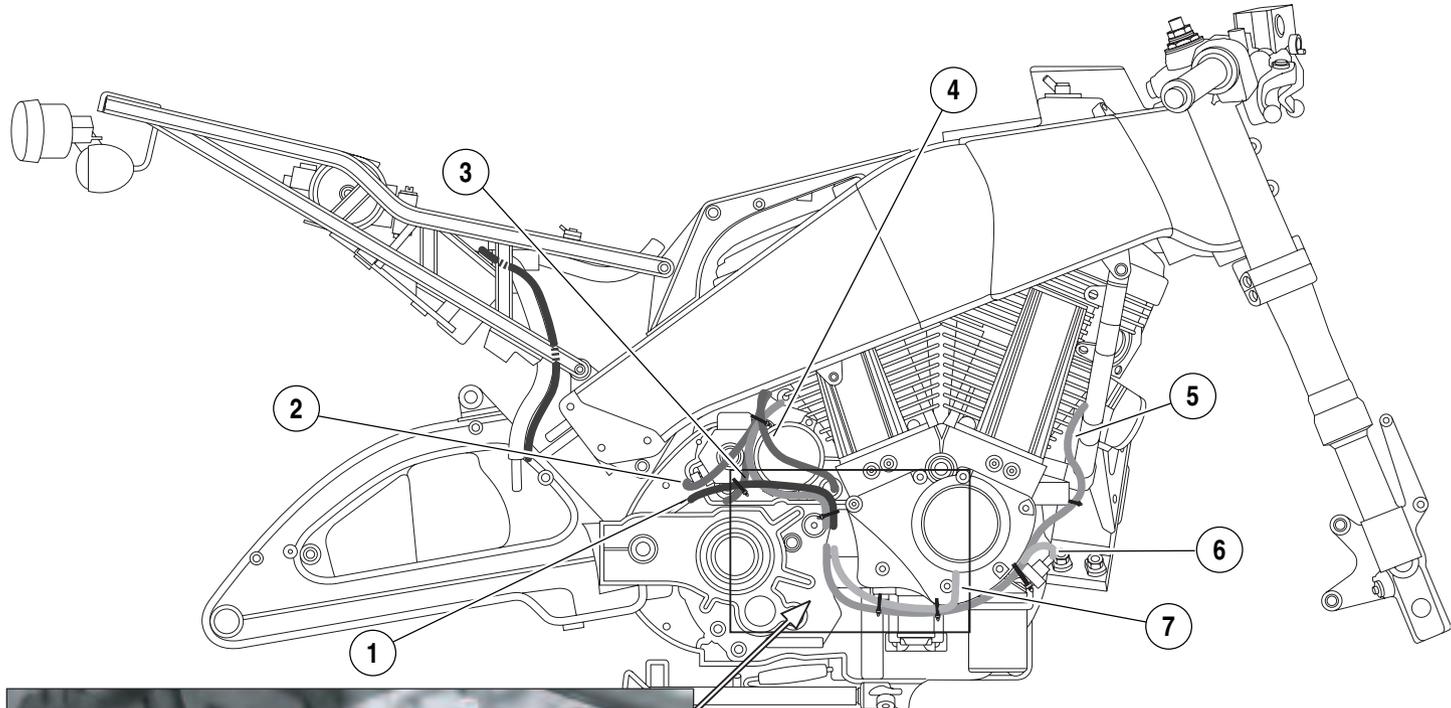

- 1. Speedometer sensor
- 2. Cable, starter to battery positive
- 3. Solenoid
- 4. Transmission vent line
- 5. Voltage regulator
- 6. Switch, oil pressure
- 7. Cam position sensor

Figure D-8. Wiring Harness, Right Side View

b1122xax

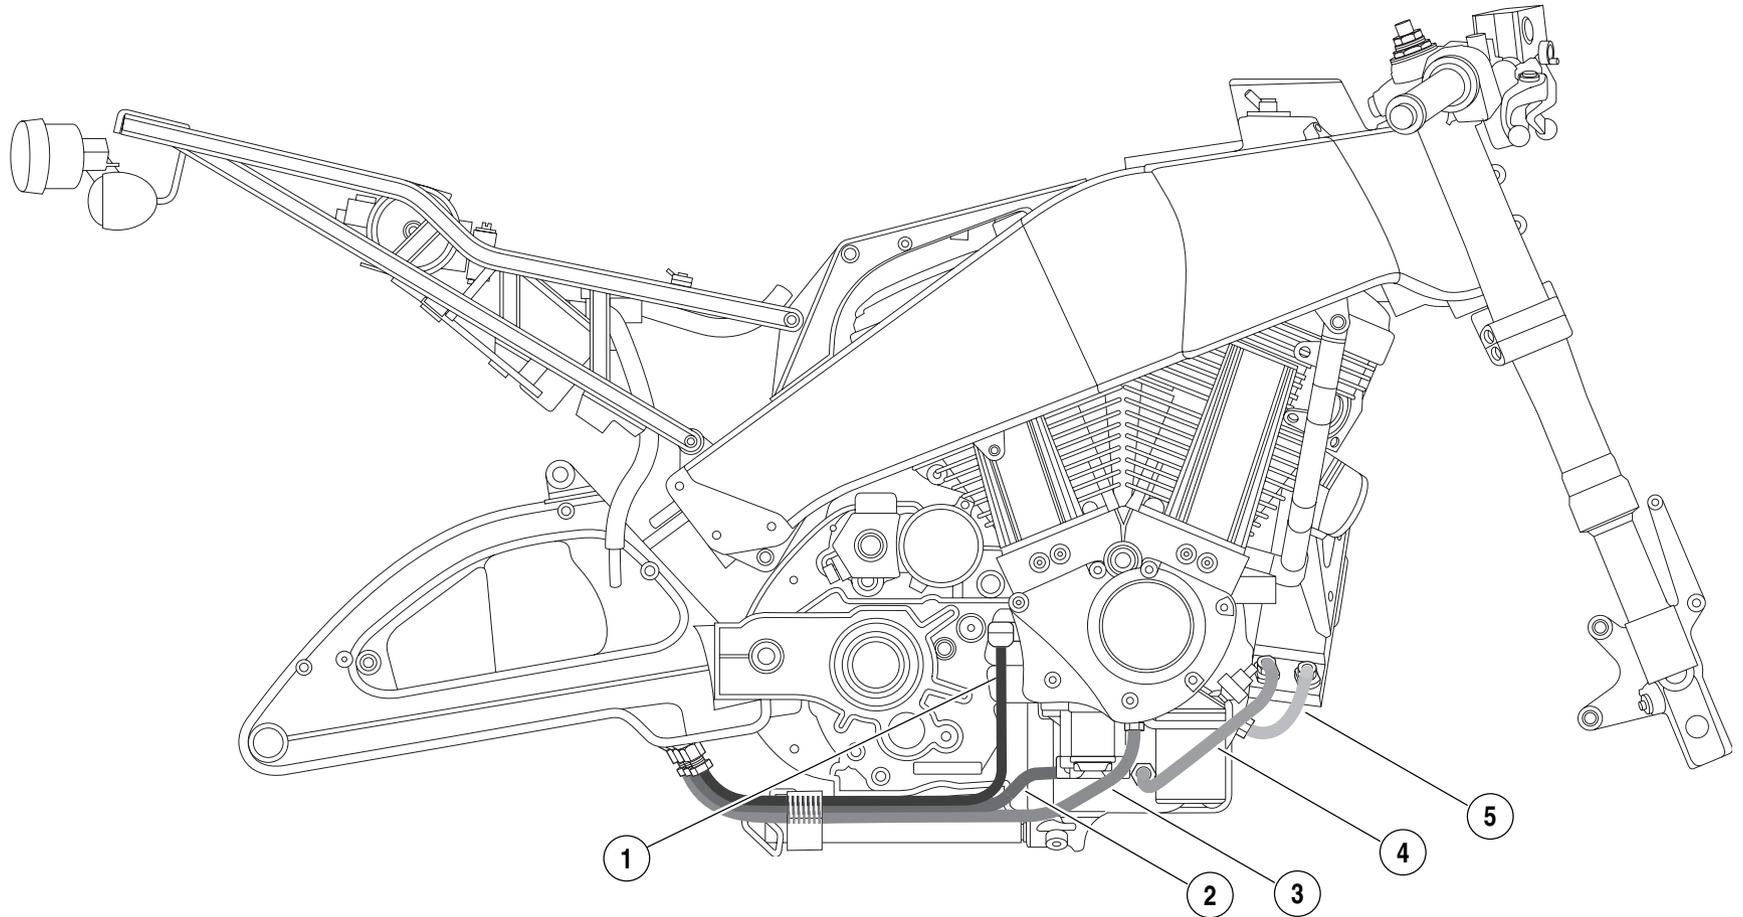


- 1. Vent line
- 2. Feed oil line
- 3. Return oil line

- 4. Feed oil line from the oil pump to the oil cooler
- 5. Return oil line from the oil cooler to the oil filter housing

Figure D-9. Oil Lines, Right Side View

b1123xbx

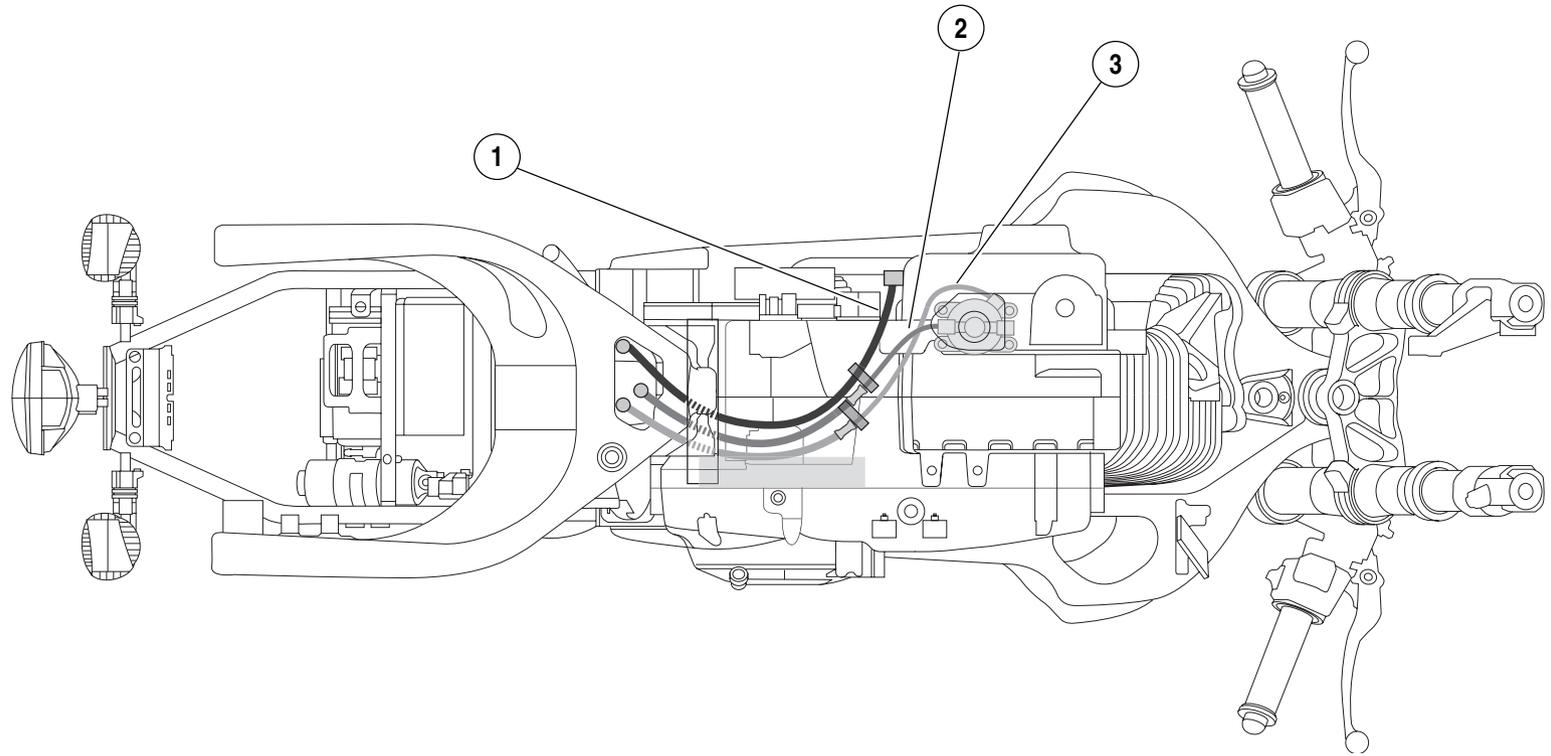

1. Vent line

2. Feed oil line

3. Return oil line

Figure D-10. Oil Lines, Bottom View

b1124xax

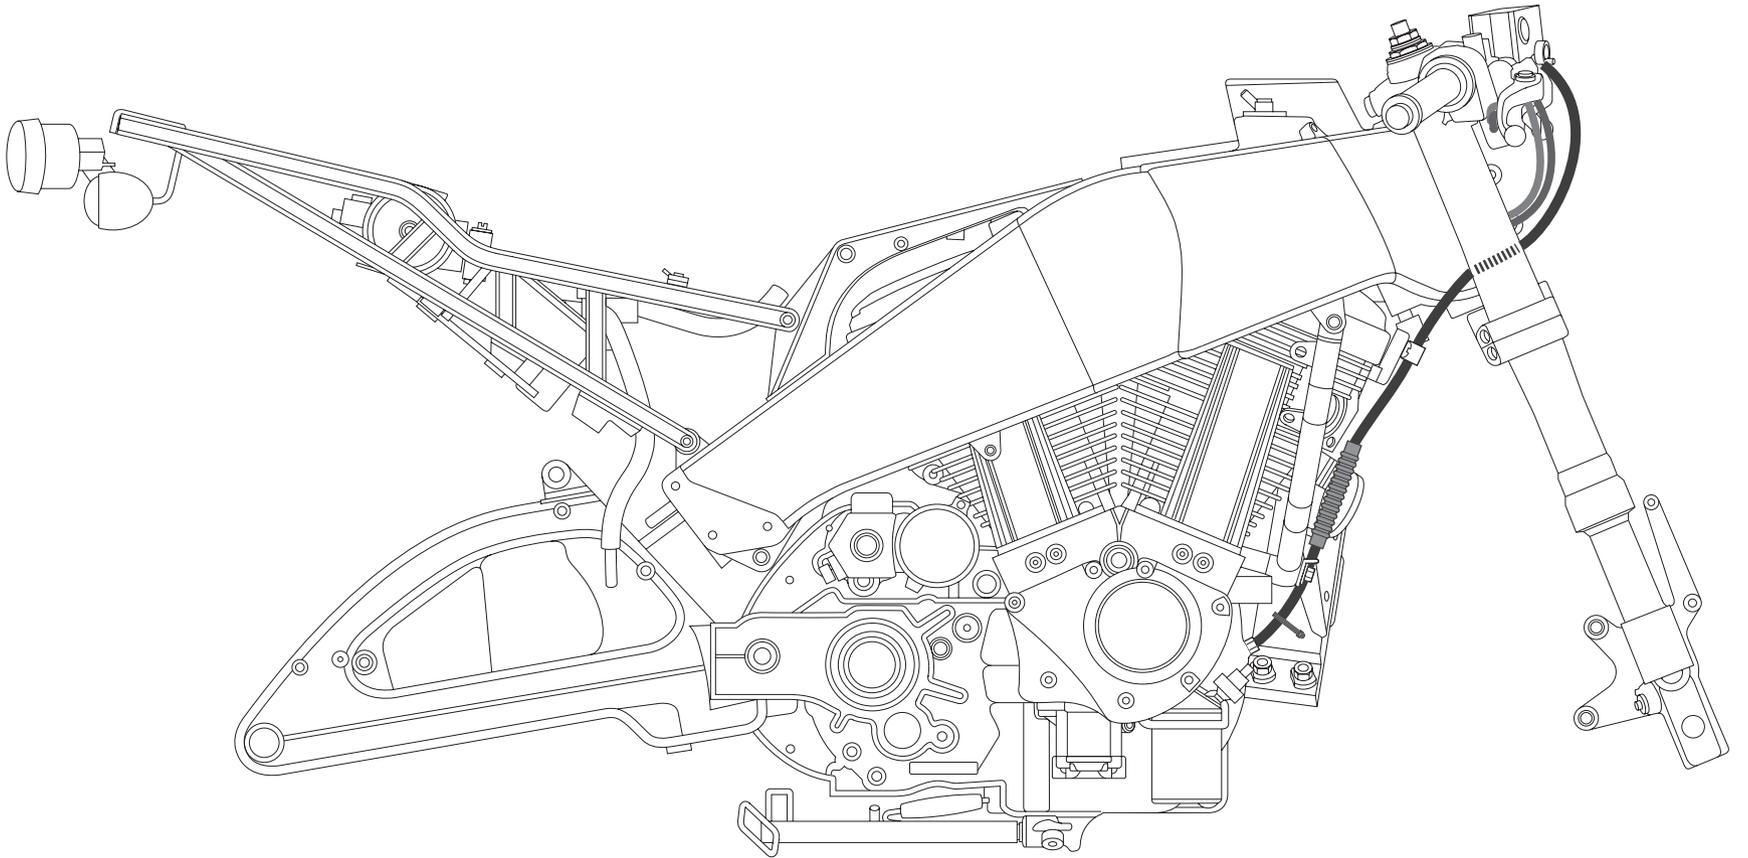


Figure D-11. Clutch and Throttle Cables, Right Side View

b1125xbx

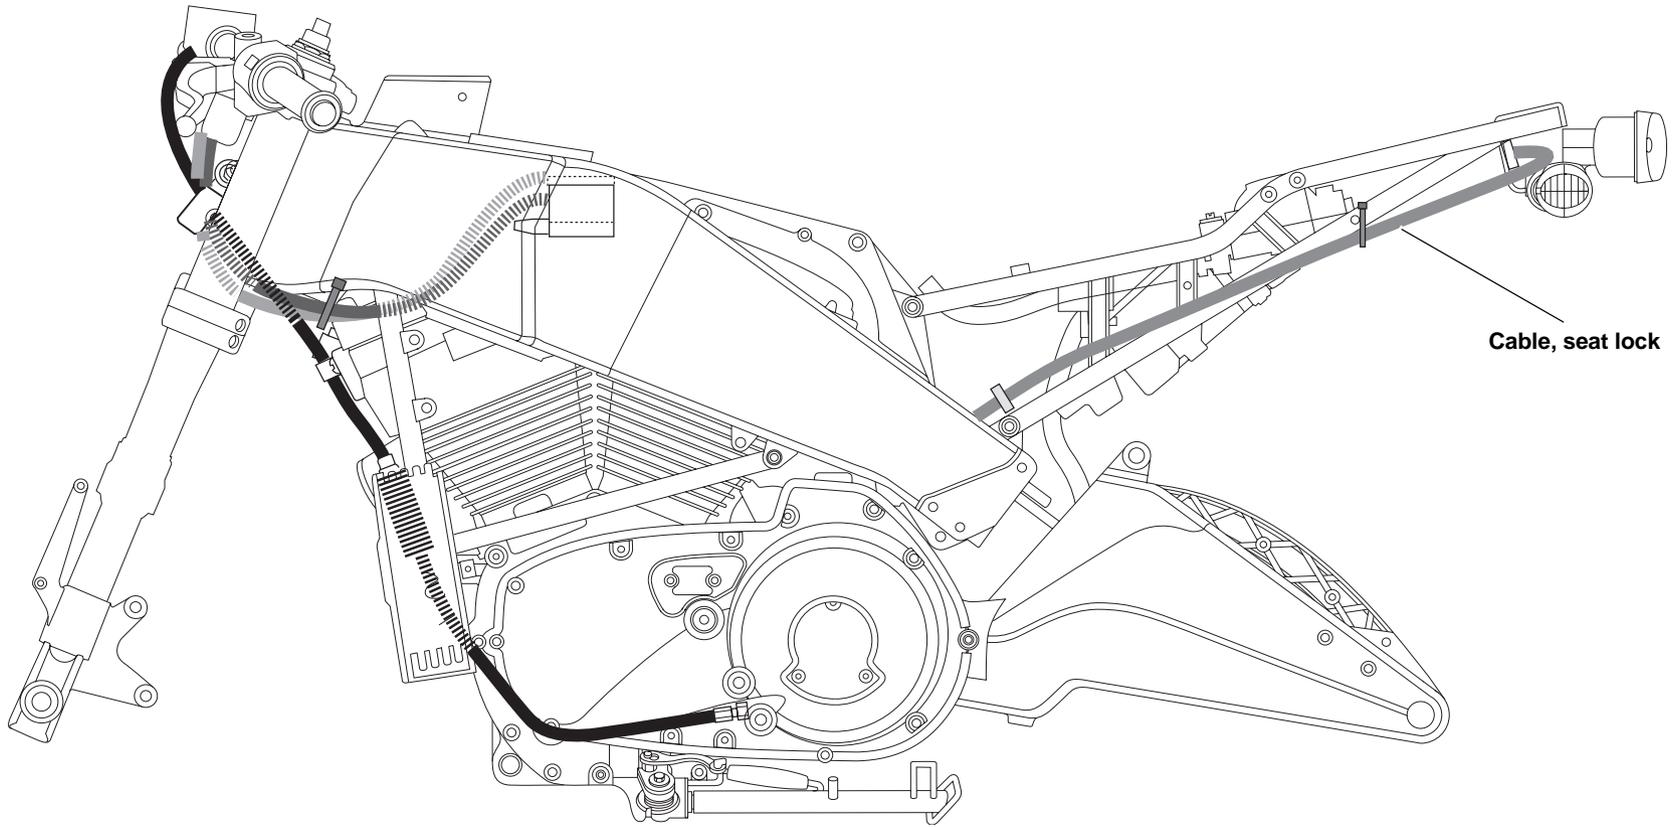


Figure D-12. Clutch, Throttle and Seat Release Cables, Left Side View

b1126xcx

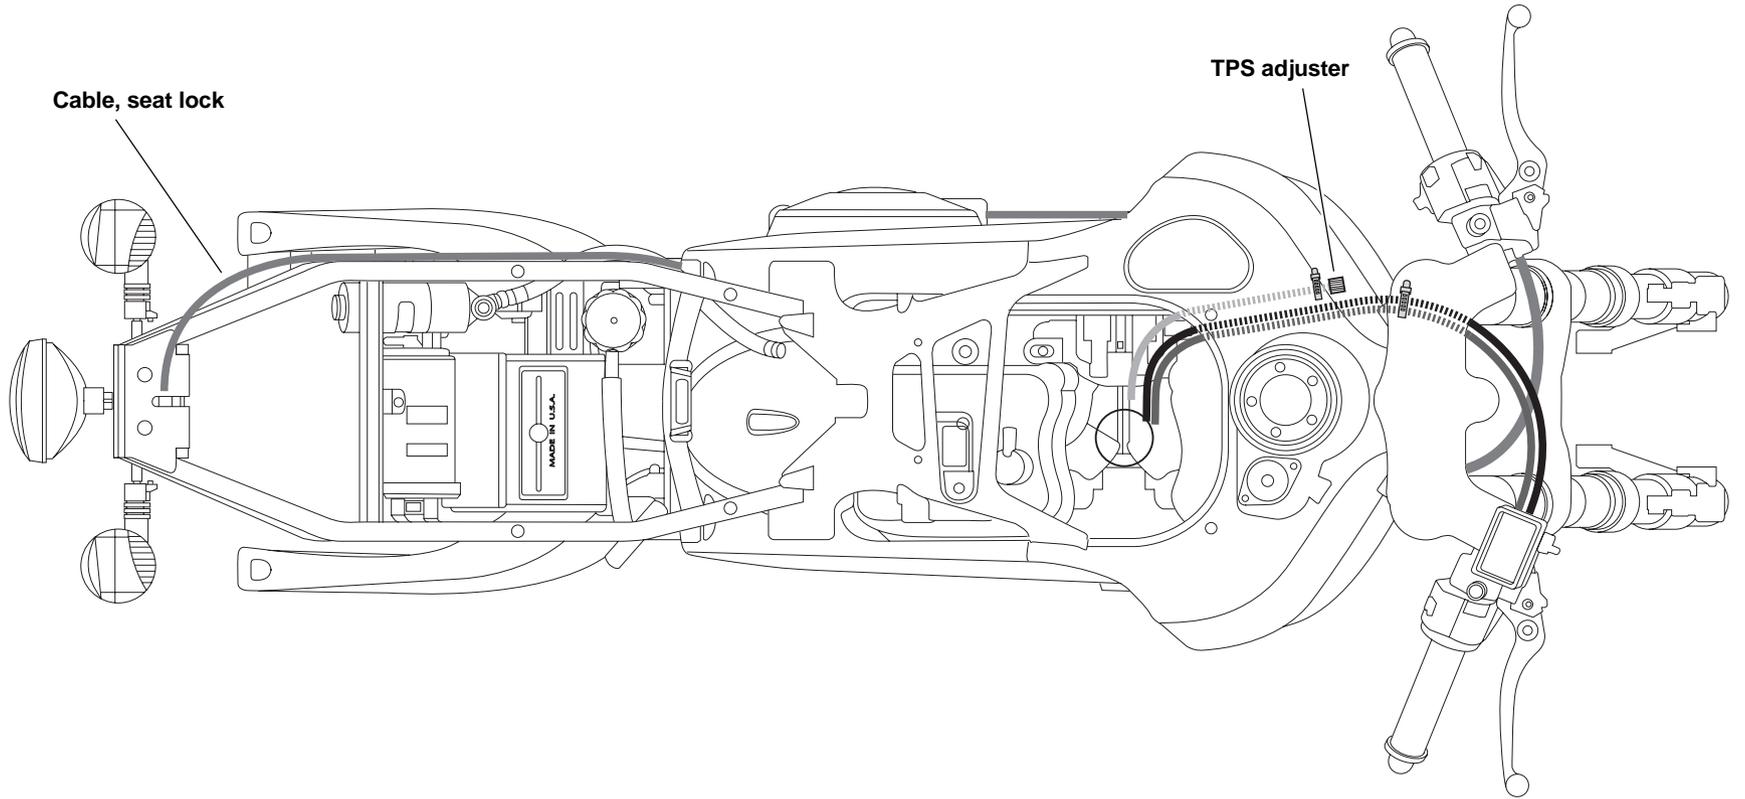


Figure D-13. Clutch, Throttle and Seat Release Cables, Top View

NOTES

[Table Of Contents](#)

| SUBJECT | PAGE NO. |
|---|-----------------|
| 1.1 General | 1-1 |
| 1.2 Fuel and Oil | 1-5 |
| 1.3 Maintenance Schedule | 1-6 |
| 1.4 Care of Molded-in-Color Body Panels | 1-7 |
| 1.5 Battery Maintenance | 1-8 |
| 1.6 Engine Lubrication System | 1-11 |
| 1.7 Brake System Maintenance | 1-14 |
| 1.8 Tires and Wheels | 1-22 |
| 1.9 Clutch | 1-23 |
| 1.10 Drive Belt System | 1-26 |
| 1.11 Primary Chain | 1-29 |
| 1.12 Suspension Damping Adjustments | 1-31 |
| 1.13 Steering Head Bearings | 1-35 |
| 1.14 Spark Plugs | 1-36 |
| 1.15 Air Cleaner Filter | 1-38 |
| 1.16 Throttle Cable and Idle Speed Adjustment | 1-40 |
| 1.17 Interactive Exhaust Cable (XB12R) | 1-41 |
| 1.18 Ignition Timing | 1-43 |
| 1.19 Headlights | 1-45 |
| 1.20 Throttle Position Sensor (TPS) | 1-47 |
| 1.21 Storage | 1-48 |
| 1.22 Troubleshooting | 1-49 |

SERVICING A NEW MOTORCYCLE

⚠ WARNING

Always follow the listed service and maintenance recommendations, because they affect the safe operation of the motorcycle and the personal welfare of the rider. Failure to follow recommendations could result in death or serious injury.

Service operations to be performed before customer delivery are specified in the applicable model year PREDELIVERY AND SETUP MANUAL.

The performance of new motorcycle initial service is required to keep warranty in force and to ensure proper emissions systems operation. See 1.3 MAINTENANCE SCHEDULE for details.

SAFE OPERATING MAINTENANCE

CAUTION

- Do not attempt to retighten engine head bolts. Retightening can cause engine damage.
- During the initial break-in period, use only Harley-Davidson 20W50 engine oil. Failure to use the recommended oil will result in improper break-in of the engine cylinders and piston rings.

A careful check of certain equipment is necessary after periods of storage, and frequently between regular service intervals, to determine if additional maintenance is required.

Check:

1. Tires for abrasions, cuts and correct pressure.
2. Secondary drive belt for proper tension and condition.
3. Brakes, steering and throttle for responsiveness.
4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Also, check brake pads and rotors for wear.
5. Cables for fraying, crimping and free operation.
6. Engine oil and transmission fluid levels.
7. Headlamp, passing lamp, tail lamp, brake lamp and turn signal operation.

SHOP PRACTICES

Repair Notes

NOTE

- General maintenance practices are given in this section.
- Repair = Disassembly/Assembly.
- Replace = Removal/Installation.

All special tools and torque values are noted at the point of use.

All required parts or materials can be found in the appropriate PARTS CATALOG.

Safety

Safety is always the most important consideration when performing any job. Be sure you have a complete understanding of the task to be performed. Use common sense. Use the proper tools. Protect yourself and bystanders with approved eye protection. Don't just do the job – do the job safely.

Removing Parts

Always consider the weight of a part when lifting. Use a hoist whenever necessary. Do not lift heavy parts by hand. A hoist and adjustable lifting beam or sling are needed to remove some parts. The lengths of chains or cables from the hoist to the part should be equal and parallel and should be positioned directly over the center of the part. Be sure that no obstructions will interfere with the lifting operation. Never leave a part suspended in mid-air.

⚠ WARNING

Always check the capacity rating and condition of hoists, slings, chains or cables before use. Failure to do so can lead to an accident which could result in death or serious injury.

Always use blocking or proper stands to support the part that has been hoisted. If a part cannot be removed, verify that all bolts and attaching hardware have been removed. Check to see if any parts are in the way of the part being removed.

When removing hoses, wiring or tubes, always tag each part to ensure proper installation.

Cleaning

If you intend to reuse parts, follow good shop practice and thoroughly clean the parts before assembly. Keep all dirt out of parts; the unit will perform better and last longer. Seals, filters and covers are used in this vehicle to keep out environmental dirt and dust. These items must be kept in good condition to ensure satisfactory operation.

Clean and inspect all parts as they are removed. Be sure wall holes and passages are clean and open. After cleaning, cover all parts with clean lint-free cloth, paper or other material. Be sure the part is clean when it is installed.

Always clean around lines or covers before they are removed. Plug, tape or cap holes and openings to keep out dirt, dust and debris.

Disassembly and Assembly

Always assemble or disassemble one part at a time. Do not work on two assemblies simultaneously. Be sure to make all necessary adjustments. Recheck your work when finished. Be sure that everything is done.

Operate the vehicle to perform any final check or adjustments. If all is correct, the vehicle is ready to go back to the customer.

REPAIR AND REPLACEMENT PROCEDURES

Hardware and Threaded Parts

Install helical thread inserts when inside threads in castings are stripped, damaged or not capable of withstanding specified torque.

Replace bolts, nuts, studs, washers, spacers and small common hardware if missing or in any way damaged. Clean up or repair minor thread damage with a suitable thread chaser.

Replace all damaged or missing lubrication fittings.

Use Teflon pipe sealant on pipe fitting threads.

Wiring, Hoses and Lines

Replace hoses, clamps, electrical wiring, electrical switches or fuel lines if they do not meet specifications.

Instruments and Gauges

Replace broken or defective instruments and gauges. Replace dials and glass that are so scratched or discolored that reading is difficult.

Bearings

Anti-friction bearings must be handled in a special way. To keep out dirt and abrasives, cover the bearings as soon as they are removed from the package.

Wash bearings in a non-flammable cleaning solution. Knock out packed lubricant inside by tapping the bearing against a wooden block. Wash bearings again. Cover bearings with clean material after setting them down to dry. Never use compressed air to dry bearings.

Coat bearings with clean oil. Wrap bearings in clean paper.

Be sure that the chamfered side of the bearing always faces the shoulder (when bearings installed against shoulders). Lubricate bearings and all metal contact surfaces before pressing into place. Only apply pressure on the part of the bearing that makes direct contact with the mating part. Install bearings with numbered side facing out.

Always use the proper tools and fixtures for removing and installing bearings.

Bearings do not usually need to be removed. Only remove bearings if necessary.

Bushings

Do not remove a bushing unless damaged, excessively worn or loose in its bore. Press out bushings that must be replaced.

When pressing or driving bushings, be sure to apply pressure in line with the bushing bore. Use a bearing/bushing driver or a bar with a smooth, flat end. Never use a hammer to drive bushings.

Inspect the bushing and the mated part for oil holes. Be sure all oil holes are properly aligned.

Gaskets

Always discard gaskets after removal. Replace with **new** gaskets. Never use the same gasket twice. Be sure that gasket holes match up with holes in the mating part.

Lip Type Seals

Lip seals are used to seal oil or grease and are usually installed with the sealing lip facing the contained lubricant. Seal orientation, however, may vary under different applications.

Seals should not be removed unless necessary. Only remove seals if required to gain access to other parts or if seal damage or wear dictates replacement.

Leaking oil or grease usually means that a seal is damaged. Replace leaking seals to prevent overheated bearings.

Always discard seals after removal. Do not use the same seal twice.

O-Rings (Preformed Packings)

Always discard O-rings after removal. Replace with **new** O-rings. To prevent leaks, lubricate the O-rings before installation. Apply the same type of lubricant as that being sealed. Be sure that all gasket, O-ring and seal mating surfaces are thoroughly clean before installation.

Gears

Always check gears for damaged or worn teeth.

Lubricate mating surfaces before pressing gears on shafts.

Shafts

If a shaft does not come out easily, check that all nuts, bolts or retaining rings have been removed. Check to see if other parts are in the way before using force.

Shafts fitted to tapered splines should be very tight. If shafts are not tight, disassemble and inspect tapered splines. Discard parts that are worn. Be sure tapered splines are clean, dry and free of burrs before putting them in place. Press mating parts together tightly.

Clean all rust from the machined surfaces of new parts.

Part Replacement

Always replace worn or damaged parts with **new** parts.

CLEANING

Part Protection

Before cleaning, protect rubber parts (such as hoses, boots and electrical insulation) from cleaning solutions. Use a grease-proof barrier material. Remove the rubber part if it cannot be properly protected.

Cleaning Process

Any cleaning method may be used as long as it does not result in parts damage. Thorough cleaning is necessary for proper parts inspection. Strip rusted paint areas to bare metal before repainting.

Rust or Corrosion Removal

Remove rust and corrosion with a wire brush, abrasive cloth, sand blasting, vapor blasting or rust remover. Use buffing crocus cloth on highly polished parts that are rusted.

TOOL SAFETY

Air Tools

- Always use approved eye protection equipment when performing any task using air-operated tools.
- On all power tools, use only recommended accessories with proper capacity ratings.
- Do not exceed air pressure ratings of any power tools.
- Bits should be placed against work surface before air hammers are operated.
- Disconnect the air supply line to an air hammer before attaching a bit.
- Never point an air tool at yourself or another person.
- Protect bystanders with approved eye protection.

Wrenches

- Never use an extension on a wrench handle.
- If possible, always pull on a wrench handle and adjust your stance to prevent a fall if something lets go.
- Never cock a wrench.
- Never use a hammer on any wrench other than a STRIKING FACE wrench.
- Discard any wrench with broken or battered points.
- Never use a pipe wrench to bend, raise or lift a pipe.

Pliers/cutters/prybars

- Plastic- or vinyl-covered pliers handles are not intended to act as insulation; don't use on live electrical circuits.
- Don't use pliers or cutters for cutting hardened wire unless they were designed for that purpose.
- Always cut at right angles.
- Don't use any prybar as a chisel, punch or hammer.

Hammers

- Never strike one hammer against a hardened object, such as another hammer.
- Always grasp a hammer handle firmly, close to the end.
- Strike the object with the full face of the hammer.
- Never work with a hammer which has a loose head.
- Discard hammer if face is chipped or mushroomed.
- Wear approved eye protection when using striking tools.
- Protect bystanders with approved eye protection.

Punches/chisels

- Never use a punch or chisel with a chipped or mushroomed end; dress mushroomed chisels and punches with a file.
- Hold a chisel or a punch with a tool holder if possible.
- When using a chisel on a small piece, clamp the piece firmly in a vise and chip toward the stationary jaw.
- Wear approved eye protection when using these tools.
- Protect bystanders with approved eye protection.

Screwdrivers

- Don't use a screwdriver for prying, punching, chiseling, scoring or scraping.
- Use the right type of screwdriver for the job; match the tip to the fastener.
- Don't interchange POZIDRIV[®], PHILLIPS[®] or REED AND PRINCE screwdrivers.
- Screwdriver handles are not intended to act as insulation; don't use on live electrical circuits.
- Don't use a screwdriver with rounded edges because it will slip – redress with a file.

Ratchets and Handles

- Periodically clean and lubricate ratchet mechanisms with a light grade oil. Do not replace parts individually; ratchets should be rebuilt with the entire contents of service kit.
- Never hammer or put a pipe extension on a ratchet or handle for added leverage.
- Always support the ratchet head when using socket extensions, but do not put your hand on the head or you may interfere with the action of its reversing mechanism.
- When breaking loose a fastener, apply a small amount of pressure as a test to be sure the ratchet's gear wheel is engaged with the pawl.

Sockets

- Never use hand sockets on power or impact wrenches.
- Select the right size socket for the job.
- Never cock any wrench or socket.
- Select only impact sockets for use with air or electric impact wrenches.
- Replace sockets showing cracks or wear.
- Keep sockets clean.
- Always use approved eye protection when using power or impact sockets.

Storage Units

- Don't open more than one loaded drawer at a time. Close each drawer before opening up another.
- Close lids and lock drawers and doors before moving storage units.
- Don't pull on a tool cabinet; push it in front of you.
- Set the brakes on the locking casters after the cabinet has been rolled to your work.

FUEL

⚠ WARNING

Remove filler cap slowly and fill fuel tank slowly to prevent spillage; do not overfill or fill above the bottom of the filler neck insert. In addition, leave air space to allow for fuel expansion. Expansion can cause an overfilled tank to overflow gasoline through the filler cap onto surrounding areas. After refueling, be sure filler cap is securely tightened. Failure to comply may cause an explosion or fire which could result in death or serious injury.

Use a good quality leaded or unleaded gasoline (91 pump octane or higher). Pump octane is the octane number usually shown on the gas pump.

GASOLINE BLENDS

CAUTION

Using gasoline that has an alcohol additive, such as methanol, may cause fuel system rubber components' failure and/or engine damage.

Harley-Davidson motorcycles were designed to give the best performance using unleaded gasoline. Some fuel suppliers sell gasoline/alcohol blends as a fuel. The type and amount of alcohol added to the fuel is important.

- **DO NOT USE GASOLINES CONTAINING METHANOL.** Using gasoline/methanol blends will result in starting and driveability deterioration and damage to critical fuel system components.
- **ETHANOL** is a mixture of 10% ethanol (Grain alcohol) and 90% unleaded gasoline. Gasoline/ethanol blends can be used in your motorcycle if the ethanol content does not exceed 10%.
- **REFORMULATED OR OXYGENATED GASOLINES (RFG):** "Reformulated gasoline" is a term used to describe gasoline blends that are specifically designed to burn cleaner than other types of gasoline. Your motorcycle will run normally using this type of gas.

You may find that some gasoline blends adversely affect the starting, driveability or fuel efficiency of your bike. If you experience one or more of these problems, we recommend you try a different brand of gasoline or gasoline with a higher octane rating.

ENGINE OIL

Use the proper grade of oil for the lowest temperature expected before the next oil change.

If it is necessary to add oil and Harley-Davidson oil is not available, use an oil certified for diesel engines. Acceptable diesel engine oil designations include CF-4, CG-4, CH-4 and CI4. The preferred viscosities for the diesel engine oils, in descending order, are 20W-50, 15W-40 and 10W-40. At the first opportunity, see a Harley-Davidson dealer to change back to 100 percent Harley-Davidson oil.

See [1.6 ENGINE LUBRICATION SYSTEM](#) for all service information.

WINTER LUBRICATION

Combustion in an engine produces water vapor. During starting and warm-up in cold weather, especially in freezing temperatures, the vapor condenses to water before the crankcase is hot enough to exhaust it through the breather system. If the engine is run long enough for the crankcase to become thoroughly heated, the water returns to vapor and is then exhausted.

An engine used for only short trips, and seldom allowed to thoroughly warm up, accumulates increasing amounts of water in the oil pan. Water mixed with oil forms a sludge that causes accelerated engine wear. In freezing temperatures, the water becomes slush or ice, which may clog oil lines and result in engine failure.

Always change the engine oil more often in winter. If the engine is used for short runs, change the oil even more frequently. The farther below freezing the temperature drops the more often the oil should be changed.

Table 1-1. Regular Service Intervals

| ODOMETER READING SERVICE OPERATIONS (See Chart Code Below) | 1 0 0 0 mi | 5 0 0 0 mi | 1 0 0 0 mi | 1 5 0 0 mi | 2 0 0 0 mi | 2 5 0 0 mi | 3 0 0 0 mi | 3 5 0 0 mi | 4 0 0 0 mi | 4 5 0 0 mi | 5 0 0 0 mi | |
|---|------------------------|------------------------|------------------------|-------------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|--|
| | 1 6 0 0 km | 8 0 0 0 km | 1 6 0 0 km | 2 4 0 0 km | 3 2 0 0 km | 4 0 0 0 km | 4 8 0 0 km | 5 6 0 0 km | 6 4 0 0 km | 7 2 0 0 km | 8 0 0 0 km | |
| Change engine oil and filter. | R | R | R | R | R | R | R | R | R | R | R | |
| Inspect air cleaner, service as required. | I | I | I | I | R | I | I | I | R | I | I | |
| Inspect brake pads and rotors for wear. | I | I | I | I | I | I | I | I | I | I | I | |
| Adjust primary chain. | A | A | A | A | A | A | A | A | A | A | A | |
| Change transmission/primary chaincase lube and clean drain plug. | RI | RI | RI | RI | RI | RI | RI | RI | RI | RI | RI | |
| Check ignition timing. | | | I | | I | | I | | I | | I | |
| Replace spark plugs. | | | R | | R | | R | | R | | R | |
| Zero throttle position sensor (TPS). | A | | A | | A | | A | | A | | A | |
| Check engine idle speed. | I | I | I | I | I | I | I | I | I | I | I | |
| Steering head bearing resistance test. | | X | X | X | X | X | X | X | X | X | X | |
| Adjust throttle cables. | A | A | A | A | A | A | A | A | A | A | A | |
| Adjust clutch and clutch cable. | A | A | A | A | A | A | A | A | A | A | A | |
| Check rear belt and idler pulley. Replace belt and idler pulley every 25,000 mi (40,000 km). | I | I | I | I | I | R | I | I | I | I | R | |
| Check front and rear tire pressure and inspect tread. | I | I | I | I | I | I | I | I | I | I | I | |
| Clean oil cooler fins. | X | X | X | X | X | X | X | X | X | X | X | |
| Change front fork oil. | | | X | | X | | X | | X | | X | |
| Check brake fluid reservoir levels and condition. | I | I | I | I | I | I | I | I | I | I | I | |
| Inspect front and rear brake caliper and master cylinder for leaks every 2500 mi (4000 km) or two years. | | I | I | I | I | I | I | I | I | I | I | |
| Check operation of all electrical equipment & switches. | I | I | I | I | I | I | I | I | I | I | I | |
| Inspect oil lines and brake system for leaks. | I | I | I | I | I | I | I | I | I | I | I | |
| Lubricate front brake hand lever, throttle control cables, clutch control cables (and hand lever), sidestand pivot, and rear brake pedal bushing (if applicable). | IL | IL | IL | IL | IL | IL | IL | IL | IL | IL | IL | |
| Check tightness of all critical fasteners: hand controls, brake system, front and rear axles, upper and lower triple clamps, front fork components, engine mounts, stabilizers, rear shock. | | | T | | T | | T | | T | | T | |
| Inspect motorcycle: Check front and rear brake lines, oil lines, front forks, rear shock, exhaust system, exhaust system mounting. | X | X | X | X | X | X | X | X | X | X | X | |
| Road test. | X | X | X | X | X | X | X | X | X | X | X | |
| Chart Codes: | | | | | | | | | | | | |
| I - Inspect, & if necessary correct, clean or replace. | | | | R - Replace or change. | | | | A - Adjust. | | | | |
| L - Lubricate with specified lubricant. | | | | T - Tighten to proper torque. | | | | X - Perform. | | | | |

GENERAL

Special care and maintenance are required for the molded-in-color body panels that are standard on your Buell motorcycle.

Molded-in-color surfaces look like painted surfaces, but are not. The color pigment is mixed in with the material when the part is made, not applied over the surface. Molded-in-color panels require different maintenance than painted surfaces to maintain their original shine. Using methods that work on painted surfaces may ruin the finish of molded-in-color parts.

CAUTION

Use of abrasive products or powered buffing equipment will cause permanent cosmetic damage to molded-in-color body panels. Use only the recommended products and techniques outlined in this section to avoid damaging molded-in-color body panels.

CAUTION

Do not use touch-up paint on molded-in-color panels.

RECOMMENDED PRODUCTS

Products recommended for the proper care and maintenance of molded-in-color body panels are available at your Buell dealer and are listed below:

- Harley Wash (Part No. 99715-90) or Harley Sun Wash (Part No. 94659-98)
- Harley Gloss (Part No. 94627-98)
- Harley Glaze Polish and Sealant (Part No. 99701-84)
- Harley Swirl and Scratch Treatment (Part No. 94655-98)
- Harley Softcloth (Part No. 94656-98)

CARE AND MAINTENANCE

Washing

To wash molded-in-color panels:

1. Rinse surface with water.
2. Wash with Harley Wash or Harley Sun Wash.
3. Rinse surface thoroughly with water.
4. Dry with a clean chamois or soft dry natural fiber cloth.

Cleaning Between Washings

Untreated molded-in-color body panels sometimes have a static charge that attracts dust. Applying Harley Gloss or Harley Glaze Polish and Sealant to molded-in-color surfaces will eliminate this condition.

To keep a high gloss finish on molded-in-color panels between washings:

1. Spray Harley Gloss onto surface and wipe with a clean soft natural fiber cloth or Harley Softcloth.

NOTE

Rain or water will remove Harley Gloss from body panels.

2. Reapply Harley Gloss as described above to keep surfaces looking their best.

Polishing

Polishing molded-in-color body panels results in greater surface gloss and a protective coating.

1. Apply Harley Glaze Polish and Sealant every six months or as required to keep molded-in-color panels protected and looking their best.
2. Clean and dry surfaces to be polished (see *Washing*).
3. Apply Harley Glaze Polish and Sealant to clean, slightly dampened cloth or sponge and apply to surface with a light overlapping motion. Make sure to cover all areas.
4. Let Harley Glaze Polish and Sealant dry to a haze and buff off residue with a clean soft cloth or Harley Softcloth.

Minor Scratch Removal

To remove minor scratches from body panels:

1. To remove light surface scratches and rubs, use Harley Swirl and Scratch Treatment as recommended.
2. Make sure Swirl and Scratch Treatment is applied with a moist cloth and by hand (not by machine).
3. After scratch or rub has been repaired, polish surface lightly with Harley Glaze.

Major Scratches

There is no repair procedure for severely scratched surfaces. Severely scratched body panels must be replaced.

GENERAL

Buell motorcycle batteries are permanently sealed, maintenance-free, valve-regulated, lead/calcium and sulfuric acid batteries. The batteries are shipped pre-charged and ready to be put into service. Do not attempt to open these batteries for any reason.

Inspect the battery for damage or leaks and for clean, non-corroded connections:

- At the 1000 mile (1600 km) service interval.
- At every scheduled service interval thereafter.

WARNING

All batteries contain electrolyte. Electrolyte is a sulfuric acid solution that is highly corrosive and can cause severe chemical burns. Avoid contact with skin, eyes, and clothing. Avoid spillage. Always wear protective face shield, rubberized gloves and protective clothing when working with batteries.

WARNING

A warning label is attached to the top of the battery. See [Figure 1-1](#). Never remove warning label from battery. Failure to read and understand all precautions contained in warning label before performing any service on batteries could result in death or serious injury.

WARNING

Battery posts, terminals and related accessories contain lead and lead components, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Table 1-2. Battery Electrolyte Antidotes

| CONTACT | SOLUTION |
|----------|---|
| External | Flush with water. |
| Internal | Drink large quantities of milk or water, followed by milk of magnesia, vegetable oil or beaten eggs. Call doctor immediately. |
| Eyes | Flush with water, get immediate medical attention. |

BATTERY TESTING

Voltmeter Test

See [Table 1-3](#). The voltmeter test provides a general indicator of battery condition. Check the voltage of the battery to verify that it is in a 100% fully charged condition. If the open circuit (disconnected) voltage reading is below 12.6V, charge the battery and then recheck the voltage after the battery has set for one to two hours. If the voltage reading is 12.8V or above, perform the load test described under [7.11 BATTERY](#).

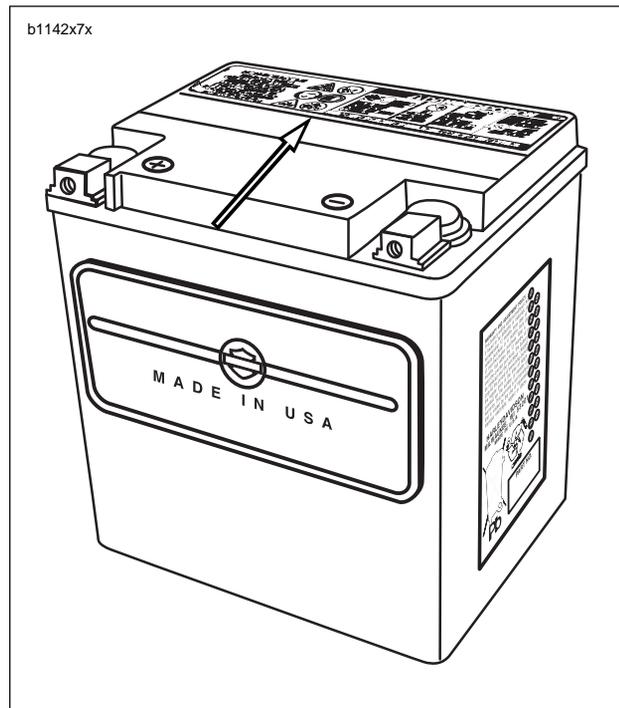


Figure 1-1. Battery Warning Label

Table 1-3. Voltmeter Test

| BATTERY CHARGE CONDITIONS | |
|---------------------------|------|
| 12.8 | 100% |
| 12.6 | 75% |
| 12.3 | 50% |
| 12.0 | 25% |
| 11.8 | 0% |

BATTERY DISCONNECTION AND REMOVAL

1. Remove seat. See [2.38 SEAT](#).

⚠ WARNING

Always disconnect the negative battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury. (49)

2. Unthread fastener and remove battery negative cable (black) from battery negative (-) terminal.
3. Pull back terminal cover boot.
4. Unthread fastener and remove battery positive cable (red) from battery positive (+) terminal.
5. Unhook strap and remove battery.

CLEANING AND INSPECTION

1. Battery top must be clean and dry. Dirt and electrolyte on top of the battery can cause battery to self-discharge. Clean battery top with a solution of baking soda (sodium bicarbonate) and water (5 teaspoons baking soda per quart or liter of water). When the solution stops bubbling, rinse off the battery with clean water.
2. Clean cable connectors and battery terminals using a wire brush or sandpaper. Remove any oxidation.
3. Inspect the battery screws, clamps and cables for breakage, loose connections and corrosion. Clean clamps.
4. Check the battery posts for melting or damage caused by overtightening.
5. Inspect the battery for discoloration, raised top or a warped or distorted case, which might indicate that the battery has been frozen, overheated or overcharged.
6. Inspect the battery case for cracks or leaks.

STORAGE

⚠ WARNING

Always store batteries where they cannot be reached by children. Contact with the battery's sulfuric acid could result in death or serious injury.

CAUTION

The electrolyte in a discharged battery will freeze if exposed to freezing temperatures. Freezing may crack the battery case and buckle battery plates.

If the motorcycle will not be operated for several months, such as during the winter season, remove the battery from the motorcycle and fully charge. See [7.11 BATTERY](#).

See [Figure 1-2](#). Self-discharge is a normal condition and occurs continuously at a rate that depends on the ambient temperature and the battery's state of charge. Batteries discharge at a faster rate at higher ambient temperatures. To reduce the self-discharge rate, store battery in a cool (not freezing), dry place.

Charge the battery every month if stored at temperatures below 60° F. (16° C). Charge the battery more frequently if stored in a warm area above 60° F. (16° C).

NOTE

The H-D Battery Tender Automatic Battery Charger (Part No. 99863-93TA) may be used to maintain battery charge for extended periods of time without risk of overcharging or boiling.

When returning a battery to service after storage, fully charge the battery. See [7.11 BATTERY](#).

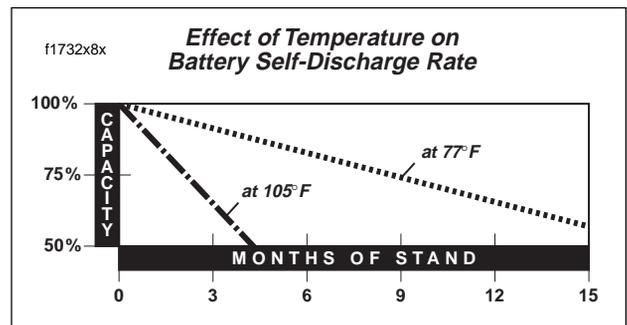


Figure 1-2. Battery Self-Discharge Rate

BATTERY INSTALLATION AND CONNECTION

1. Place the fully charged battery in the mounting position, terminal side to the rear of motorcycle.
2. Hook rubber strap around body of battery.

CAUTION

Connect the cables to the correct battery terminals or damage to the motorcycle electrical system will occur.

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

CAUTION

Overtightening fasteners can damage battery terminals.

3. Insert fastener through battery positive cable (red) into threaded hole of battery positive (+) terminal and tighten fastener to 72-96 **in-lbs** (8-11 Nm).
4. Install terminal cover boot.
5. Insert fastener through battery negative cable (black) into threaded hole of battery negative (-) terminal and tighten fastener to 72-96 **in-lbs** (8-11 Nm).
6. Apply a light coat of petroleum jelly or corrosion retardant material to both battery terminals.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

7. Install seat. See [2.38 SEAT](#).

GENERAL

Check engine oil level (hot check) at every refueling stop.

Inspect oil lines and filter for leaks:

- At 1000 mi (1600 km) initial service and every 5000 mi (8000 km) service interval thereafter.

Change engine oil and filter under **normal service** conditions in warm or moderate temperatures:

- At 1000 mi (1600 km) initial service and every 5000 mi (8000 km) service interval thereafter.
- When storing or removing the motorcycle for the season.

Change engine oil and filter under **severe service** conditions in warm or moderate temperatures (severe dust, temperatures above 80°F/27°C, extensive idling or speeds in excess of 65 mph/105 km/h):

- At 1000 mi (1600 km) initial service and every 2500 mi (4000 km) interval thereafter.
- When storing or removing the motorcycle for the season.

NOTE

The colder the weather, the shorter the recommended oil change interval. A vehicle used only for short runs in cold weather must have the engine oil drained more frequently.

CHECKING ENGINE OIL LEVEL

An accurate engine oil level reading can only be obtained with the engine at normal operating temperature (hot check). The engine will require a longer warm up period in colder temperatures.

For pre-ride inspection, simply verify that there are no oil leaks from the oil filter and oil lines prior to operating the motorcycle.

- Perform a hot check of the engine oil level at each fuel stop.

CAUTION

Do not allow hot oil level to fall below lower mark on dipstick. To do so may result in equipment damage and/or malfunction.

CAUTION

Do not overfill oil tank. Overfilling oil tank may result in oil carryover to the air cleaner, equipment damage and/or equipment malfunction.

CAUTION

Do not switch oil brands indiscriminately because some oils interact chemically when mixed. Use of inferior oils or non-detergent oils can damage the engine.

Ride motorcycle for approximately 10 minutes to ensure the oil is hot and the engine is at normal operating temperature.

1. The motorcycle must be on level ground, on the side-stand, with the engine off.



Figure 1-3. Dipstick Location/Engine Oil Level

2. See [Figure 1-3](#). Unscrew and remove dipstick from oil tank/swingarm filler hole. Wipe dipstick clean.
3. Insert dipstick into oil tank filler hole, screwing dipstick in completely. **DO NOT OVER TIGHTEN.**

NOTE

The area between the upper and lower registration marks is the operating range.

4. See [Figure 1-5](#). Unscrew and remove dipstick and note oil level.
 - a. Oil level should be within the operating range (between upper and lower registration marks) on dipstick.
 - b. If oil level is below lower registration mark, add only enough oil to bring oil level between lower and upper registration marks.

CHANGING ENGINE OIL AND FILTER

Ride motorcycle for approximately 10 minutes to ensure the oil is hot and the engine is at normal operating temperature. Turn engine off.

NOTE

Secure rear wheel on lift or place scissor jack under jacking point.

Draining Oil

1. See [Figure 1-4](#). Place a suitable container under the drain plug.



Figure 1-4. Oil Tank Drain Plug

2. Using a 5/8 in. wrench, remove drain plug from under oil tank/swingarm. Wipe any accumulated debris from magnetic tip on drain plug.



Figure 1-5. Dipstick Location

3. See [Figure 1-5](#). Unscrew and remove dipstick from oil fill hole on top of oil tank/swingarm.

Changing Filter

1. Remove chin fairing. See [2.33 CHIN FAIRING](#).

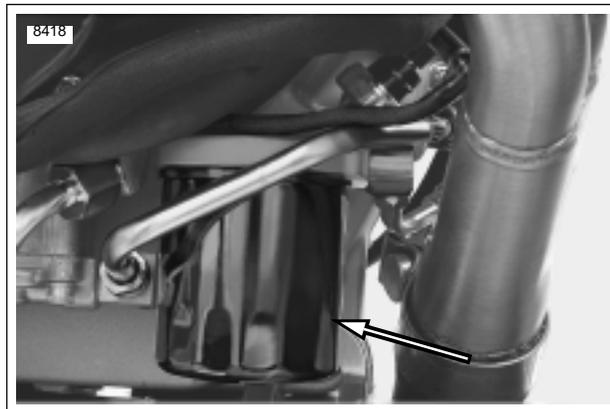


Figure 1-6. Oil Filter

2. See [Figure 1-6](#). Remove oil filter using pliers or belt type OIL FILTER WRENCH.
3. Clean filter gasket contact surface on crankcase. Surface should be smooth and free of any debris or old gasket material.
4. Apply a thin film of clean engine oil to filter gasket.
5. Pour 4.0 ounces (0.12 liter) of clean engine oil into **new** filter when changing oil (until filter is approximately 1/2 full).
6. Screw filter onto adapter until filter gasket touches crankcase surface. Rotate filter another 1/2-3/4 turn by hand.

WARNING

Be sure no oil gets on tires when changing oil and filter. Traction will be adversely affected which may lead to loss of control which could result in death or serious injury.

Replacing Oil

1. Inspect drain plug o-ring for tears or damage. Replace if required. Wipe any foreign material from drain plug.
 2. Install drain plug and tighten to 29-31 ft-lbs (40-42 Nm).
 3. Fill oil tank through filler (dipstick) hole with recommended oil from [Table 1-4](#). Oil tank capacity with filter change is approximately 2.5 quarts (2.4 liters) and includes the 4.0 ounces (0.12 liter) poured into the filter. Always verify proper hot oil level on dipstick. Do not over-fill.
 4. Inspect o-ring on dipstick for rips or tears. Replace as required.
- NOTE**
- For ease of installation, apply a light film of clean engine oil to the dipstick o-ring.*
5. Install dipstick into oil tank/swingarm fill hole. Make sure dipstick is installed completely. DO NOT OVER TIGHTEN.
 6. Remove left side oil cooler scoop. See [2.35 AIR SCOOPS](#).
 7. Inspect oil cooler fins for debris or damage. Blow out any debris from fins with compressed air from the inside of the cooler outward.
 8. Wipe up any spilled oil on muffler.
 9. Start engine. Verify that oil pressure signal light on instrument support turns off after a few seconds when engine speed is 1000 RPM or above.
 10. Check for oil leaks at oil filter, drain plug, hoses and oil cooler.
 11. Install chin fairing. See [2.33 CHIN FAIRING](#).
 12. Install air scoop [2.35 AIR SCOOPS](#).
 13. Check (hot) oil level. See [CHECKING ENGINE OIL LEVEL](#).

Table 1-4. Recommended Oil Grades

| HARLEY-DAVIDSON TYPE | VISCOSITY | HARLEY-DAVIDSON RATING | LOWEST AMBIENT TEMP °F | COLD WEATHER STARTS BELOW 50° F |
|----------------------|-----------|------------------------|------------------------|---------------------------------|
| H.D. Multi-Grade | SAE 10W40 | HD 360 | Below 40° (4°C) | Excellent |
| H.D. Multi-Grade | SAE 20W50 | HD 360 | Above 40° (4°C) | Good |
| H.D. Regular Heavy | SAE 50 | HD 360 | Above 60° (16°C) | Poor |
| H.D. Extra Heavy | SAE 60 | HD 360 | Above 80° (27°C) | Poor |

GENERAL

Check brake fluid level and condition:

- When storing or removing the motorcycle for the season.

Replace **D.O.T. 4 BRAKE FLUID**:

- Every 2 years.

Front brake hand lever and rear brake foot pedal must have a firm feel when brakes are applied. If not, bleed system as described.

Inspect front and rear brake lines and replace as required:

- Every 4 years.

Inspect caliper and master cylinder seals and replace as required:

- Every 2 years.

If determining probable causes of poor brake operation, refer to [Table 1-5](#).

BLEEDING BRAKES

WARNING

D.O.T. 4 brake fluid can cause irritation of eyes and skin, and may be harmful if swallowed. If large amount of fluid is swallowed, induce vomiting by administering two tablespoons of salt in a glass of warm water. Call a doctor. In case of contact with skin or eyes, flush with plenty of water. Get medical attention for eyes. **KEEP BRAKE FLUID OUT OF THE REACH OF CHILDREN.** Failure to comply could result in death or serious injury.

WARNING

Never mix D.O.T. 4 with other brake fluids (such as D.O.T. 5). Use only D.O.T. 4 brake fluid in motorcycles that specify D.O.T. 4 fluid on the reservoir cap. Mixing different types of fluid may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

WARNING

Use only fresh, uncontaminated D.O.T. 4 fluid. Cans of fluid that have been opened may have been contaminated by moisture in the air or dirt. Use of contaminated brake fluid may adversely affect braking ability and lead to brake failure which could result in death or serious injury

WARNING

Use only copper crush banjo washers (See Parts Catalog for Part No.) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

WARNING

Clean brake system components using denatured alcohol. Do not use mineral-base cleaning solvents, such as gasoline or paint thinner. Use of mineral-base solvents causes deterioration of rubber parts that continues after assembly. This may result in improper brake operation which could result in death or serious injury.

WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified technician.

CAUTION

Cover molded-in-color surfaces and right handlebar switches and use care when removing brake reservoir cover and adding D.O.T. 4 brake fluid. Spilling D.O.T. 4 brake fluid on molded-in-color surfaces will result in cosmetic damage. Spilling brake fluid on switches may render them inoperative.

Table 1-5. Brake Troubleshooting

| CONDITION | CHECK FOR | REMEDY |
|---|---|---|
| Excessive lever/pedal travel or spongy feel. | Air in system. Master cylinder low on fluid. | Bleed brake(s). Fill master cylinder with approved brake fluid. |
| Brake fade | Moisture in system. | Bleed brake(s). Replace fluid in master cylinder with approved brake fluid. |
| Chattering sound when brake is applied. | Worn pads. Worn D shape bushings. Loose mounting bolts. Warped rotor. | Replace brake pads. Replace rotor and bushings as set. Tighten bolts. Replace rotor and bushings as set. |
| Ineffective brake – lever/pedal travels to limit. | Low fluid level. Piston cup not functioning. | Fill master cylinder with approved brake fluid, and bleed system. Rebuild cylinder. |
| Ineffective brake – lever/pedal travel normal. | Distorted or glazed rotor. Distorted, glazed or contaminated brake pads. | Replace rotor and bushings as set. Replace pads. |
| Brake pads drag on rotor – will not retract. | Cup in master cylinder not uncovering relief port. Rear brake pedal linkage out of adjustment. | Inspect master cylinder. Adjust linkage. |

Bleeding Front Brake

NOTE

Hydraulic brake fluid bladder-type pressure equipment can be used to fill the brake master cylinder through the bleeder valve if master cylinder reservoir cover is removed to prevent pressurization.

1. See [Figure 1-7](#). With motorcycle in upright position, install end of plastic tubing over front caliper bleeder valve; place other end in a clean container.

CAUTION

Cover molded-in-color surfaces and right handlebar switches and use care when removing brake reservoir cover and adding D.O.T. 4 brake fluid. Spilling D.O.T. 4 brake fluid on molded-in-color surfaces will result in cosmetic damage. Spilling brake fluid on switches may render them inoperative.

2. Cover body surfaces, right handlebar switches and instrument panel to protect from spillage.
3. See [Figure 1-8](#). Remove two fasteners from front master cylinder cover.
4. Add **D.O.T. 4 BRAKE FLUID** to master cylinder reservoir. Bring fluid level to within 1/8 in. (3.2 mm) of molded boss inside front master cylinder.

NOTE

Do not reuse brake fluid.

5. Slowly depress and release hand lever several times to build up hydraulic pressure, then hold brake hand lever in the depressed position.
6. While holding brake hand lever in the depressed position, open bleeder valve about 1/2-turn counterclockwise. Brake fluid will flow from bleeder valve and through tubing into clean container. When brake lever has moved 1/2 to 3/4 of its full range of travel, close bleeder valve (clockwise). Allow brake lever to return slowly to its released position.
7. Repeat steps 5-6 until all air bubbles are purged.
8. Tighten front caliper bleeder valve (metric) to 36-60 **in-lbs** (4-7 Nm).
9. Verify master cylinder fluid level as described in step 4.
10. Attach cover to front master cylinder reservoir and tighten fastener to 9-13 **in-lbs** (1.0-1.5 Nm).
11. Remove cover from molded-in-color surfaces, right handlebar switches and instrument panel.



Figure 1-7. Front Caliper Bleeder Valve

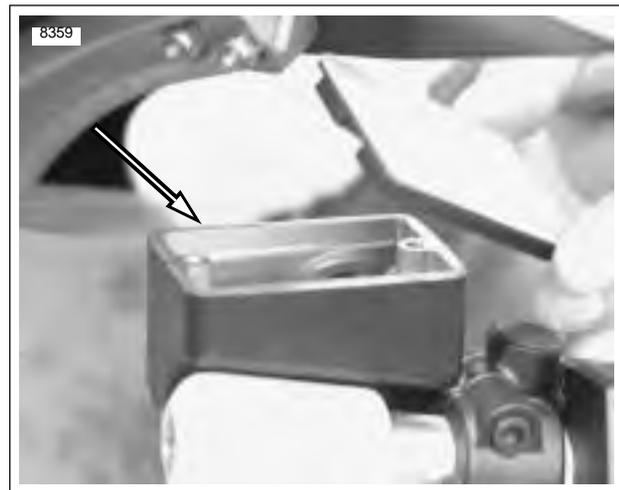


Figure 1-8. Front Master Cylinder Reservoir

Bleeding Rear Brake

NOTE

Hydraulic brake fluid bladder-type pressure equipment can be used to fill the brake master cylinder through the bleeder valve if master cylinder reservoir cover is removed to prevent pressurization.

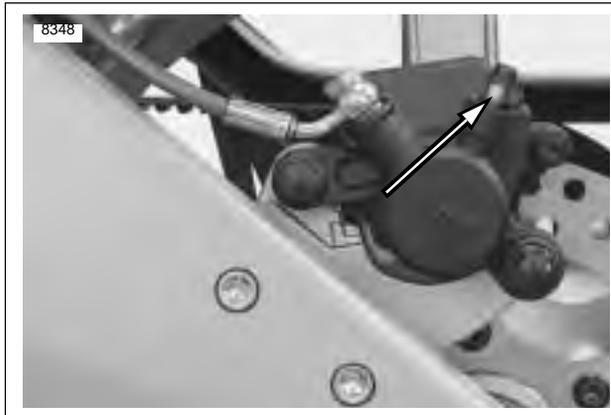


Figure 1-9. Rear Caliper Bleeder Valve

1. See [Figure 1-9](#). Install end of plastic tubing over rear caliper bleeder valve; place other end in a clean container. Stand motorcycle upright.

CAUTION

Cover molded-in-color surfaces and use care when removing brake reservoir cover and adding D.O.T. 4 brake fluid. Spilling D.O.T. 4 brake fluid on molded-in-color surfaces will result in cosmetic damage.

2. Remove seat. See [2.38 SEAT](#).



Figure 1-10. Rear Master Cylinder Reservoir

3. See [Figure 1-10](#). Remove cap and gasket from rear master cylinder reservoir.
4. Add **D.O.T. 4 BRAKE FLUID** to master cylinder reservoir with motorcycle upright (not on sidestand). Bring fluid level between upper and lower marks on reservoir.

NOTE

Do not reuse brake fluid.

5. Slowly depress and release brake pedal several times to build up hydraulic pressure, then hold brake pedal in the depressed position.
6. While holding brake pedal in the depressed position, open bleeder valve about 1/2-turn counterclockwise. Brake fluid will flow from bleeder valve and through tubing into clean container. When brake pedal has moved 1/2 to 3/4 of its full range of travel, close bleeder valve (clockwise). Allow brake pedal to return slowly to its released position.
7. Repeat steps 5-6 until all air bubbles are purged.
8. Tighten rear caliper bleeder valves (metric) to 36-60 **in-lbs** (4-7 Nm).
9. Verify master cylinder fluid level as described in step 4.
10. Attach covers to master cylinder reservoirs and tighten cap on rear master cylinder reservoir securely.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

11. Install seat. See [2.38 SEAT](#).

BRAKE PEDAL ADJUSTMENT

WARNING

After completing repairs or bleeding the system, always test motorcycle brakes at low speed. If brakes are not operating properly or braking efficiency is poor, testing at high speeds could result in death or serious injury.

Check rear brake pedal operation:

- Before every ride.

NOTES

- See [Figure 1-11](#). On the very end of the threaded brake rod, are two flat sides (2). To ensure proper thread engagement with the clevis (3), the flat sides must extend below the extruded nut (1) in the clevis by at least one full thread. This is the minimum rod engagement.
- Also, there should be a minimum of 0.030 in. (0.8 mm) between brake rod end and brake pedal.

WARNING

Threaded rod should not be adjusted to the point of contacting brake pedal. Improper adjustment could result in death or serious injury.

1. See [Figure 1-12](#). Inspect for minimum and maximum brake rod engagement in brake clevis (4). Adjust as required.
2. Adjust brake pedal.
 - a. See [Figure 1-12](#). Loosen locknut (3) while holding rod adjuster (2). Move locknut away from top surface of clevis (4).
 - b. Turn rod adjuster to set pedal height.
 - c. Return locknut (3) to fit flush against top surface of clevis and tighten to 130-173.5 in-lbs (14.7-19.6 Nm).

NOTE

Brake pedal has no free play adjustment.

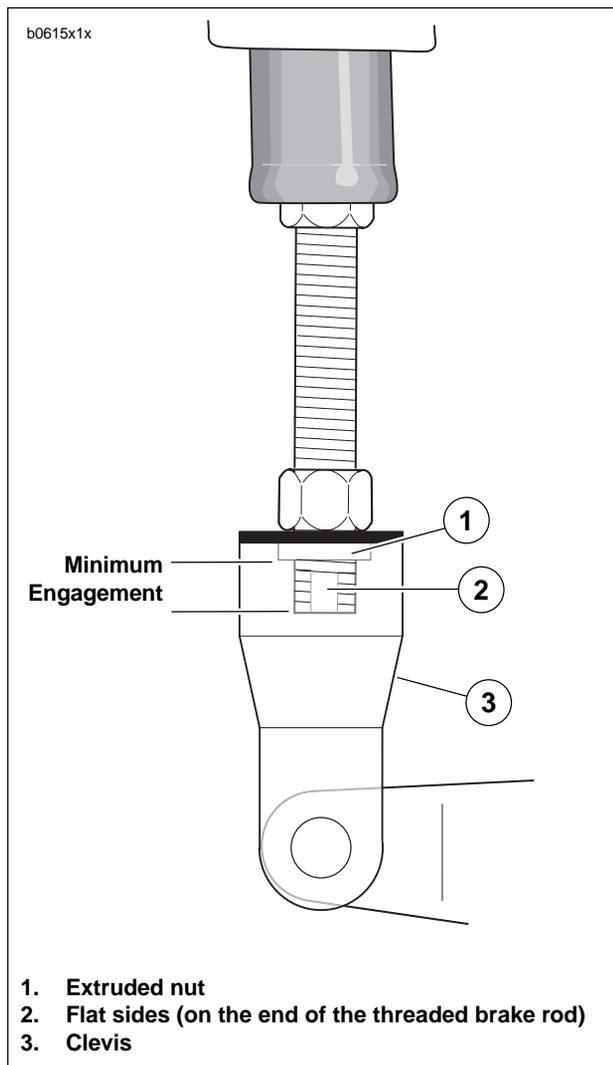


Figure 1-11. Critical Measurements with Typical Brake Pedal

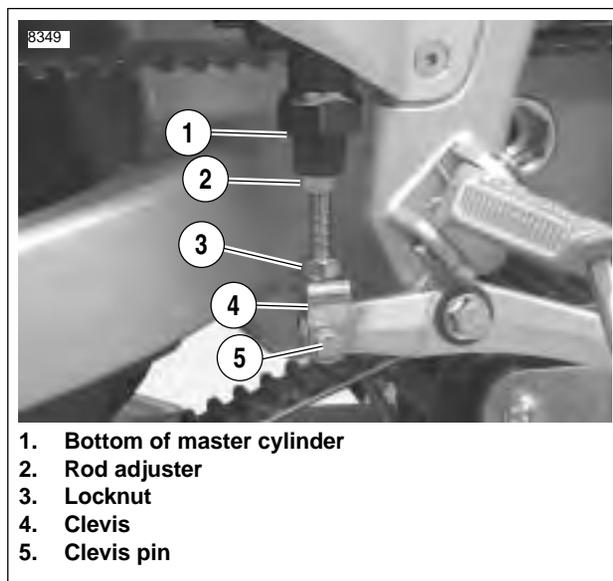


Figure 1-12. Pushrod Adjustment

BRAKE PAD THICKNESS

WARNING

Always replace brake pads in complete sets for correct brake operation. Never replace just one brake pad. Failure to install brake pads as a set could result in death or serious injury.

See [Figure 1-13](#). Inspect brake pads for damage or excessive wear. Replace both pads as a set if friction material of either pad is worn to 0.040 in. (1.0 mm) or less. If this amount of wear occurs, wear grooves will disappear from friction material surface.

BRAKE ROTOR THICKNESS

WARNING

Do not allow brake fluid, bearing grease, lubricants, etc. to contact brake rotor when servicing motorcycle or reduced braking ability will occur, which could result in death or serious injury.

See [Figure 1-14](#). Check brake rotors for minimum thickness:

- At the 1000 mile (1600 km) service interval.
 - At every 5000 mi (8000 km) service interval thereafter.
 - At every scheduled service interval:
1. Measure rotor thickness. Replace rotor if minimum thickness is less than 0.18 in. (4.5 mm). Replace drive bushings, fasteners, washers and springs whenever rotor is replaced.
 2. Check rotor surface. Replace if warped or badly scored. See [2.5 FRONT WHEEL](#) or [2.6 REAR WHEEL](#) for procedure.

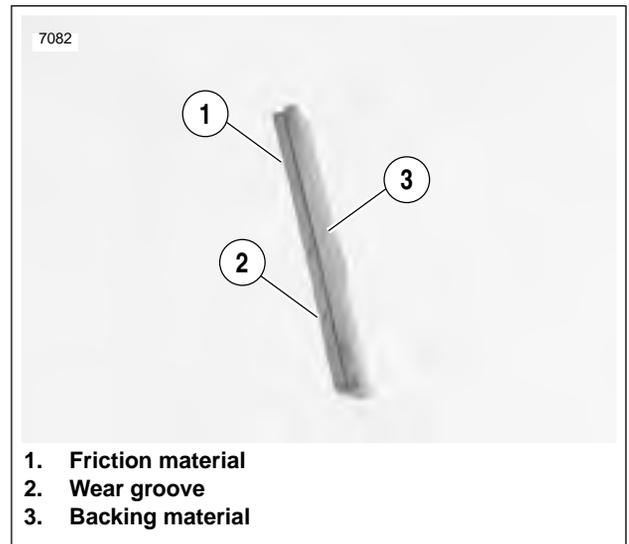


Figure 1-13. Brake Pad Thickness



Figure 1-14. Front Brake Rotor

BRAKE PAD REPLACEMENT

Front Pad Removal

1. See [Figure 1-15](#). Loosen pin (2) but do not remove.
2. Rotate wheels so that caliper is centered between rotor mounting fasteners (1).
3. Remove lower caliper mounting fastener (4) that secures caliper to fork lower.
4. Loosen but do not remove upper caliper mounting fastener (3) that secures caliper to fork lower.
5. Remove pin (2).
6. Rotate caliper counterclockwise to allow access to outer pad.
7. Remove outer pad from right side.
8. Remove inner pad from left side by pulling rearward, rotating pad 90 degrees and pulling through wheel opening.

Front Pad Installation

1. Push pistons in with suitable tool such as a clean paint scraper until fully seated in bores. Be careful not to damage rotor.
2. Install **new** inner side pad from left side of motorcycle.
3. Install **new** outer pad from right side of motorcycle.
4. See [Figure 1-15](#). Install pin (2) making sure it engages hole on both pads and spring clip.
5. Rotate caliper clockwise to align mounting fastener hole.
6. See [Figure 1-15](#). Install lower caliper mounting fastener (4).
7. Tighten both caliper mounting fasteners (3, 4) to 35-37 ft-lbs (48-50 Nm).
8. Tighten pin (2) to 11-14 ft-lbs (15-19 Nm).

NOTE

*Avoid making hard stops for the first 100 miles (160 km) to allow **new** brake pads to "wear in" properly with the rotor.*

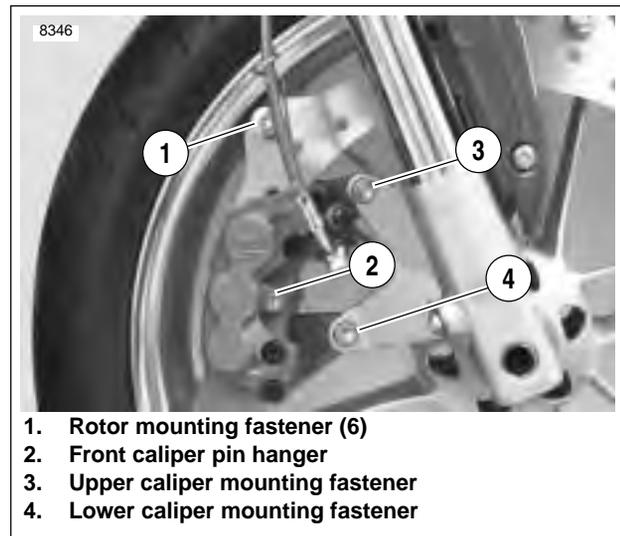


Figure 1-15. Front Brake Caliper

Rear Pad Removal

1. See [Figure 1-16](#). Remove rear caliper pin plug (3) and loosen pin (4).
2. Remove fastener securing p-clamp, wire form and brake line assembly to swingarm.
3. Remove two mounting fasteners (1) securing brake caliper and carrier assembly to swingarm.
4. Lift caliper and carrier assembly up and off of rotor.
5. Remove hanger pin (4).
6. Remove inner and outer pads, being careful not to dislodge pad spring.

Rear Pad Installation

1. See [Figure 1-16](#). Check that retainer (2) is present.
2. See [Figure 1-17](#). Check that pad spring is present. Should pad spring become dislodged, install with widest area of spring towards piston side of caliper.
3. Push piston in with suitable tool such as a clean paint scraper until fully seated in bore.
4. Install **new** inner and outer brake pads
5. See [Figure 1-16](#). Install hanger pin (4) making sure pin engages hole on both pads.
6. Install brake caliper and carrier assembly over rotor.
7. Install two mounting fasteners (1) through swingarm into carrier and tighten to 35-37 ft-lbs (48-50 Nm).
8. Apply LOCKTITE 272 and tighten hanger pin to 11-14 ft-lbs (14.9-18.9 Nm).
9. Install pin plug (3). Tighten plug to 18-25 **in-lbs** (2-3 Nm).
10. Install fastener securing p-clamp, wire form and brake line assembly to swingarm and tighten to 36-60 **in-lbs** (4.1-6.8 Nm).

NOTE

Avoid making hard stops for the first 100 miles (160 km) to allow **new** brake pads to "wear in" properly with the rotor.

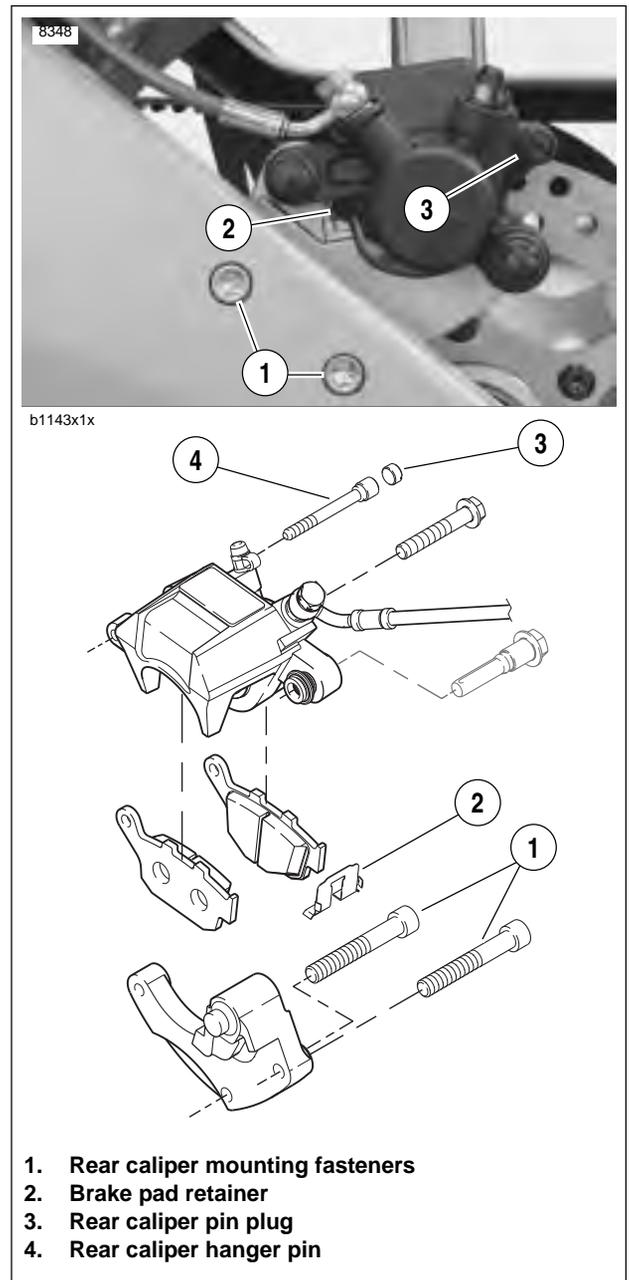


Figure 1-16. Rear Brake Caliper



Figure 1-17. Rear Brake Pad Spring

TIRE INFLATION

⚠ WARNING

Do not inflate any tire beyond its maximum inflation pressure as specified on tire sidewall. Overinflation may cause tire to suddenly deflate which could result in death or serious injury.

Check tire pressure and tread:

- Before every ride.

Check for proper front and rear tire pressures when tires are cold. Compare pressure against [Table 1-6](#).

Table 1-6. Tire Pressures

| TIRE | PRESSURE FOR SOLO RIDING | | PRESSURE AT GVWR |
|-------|--------------------------|---------|---------------------|
| Front | 36 PSI | 248 kPa | Same as solo riding |
| Rear | 38 PSI | 262 kPa | |

TIRE REPLACEMENT

See [Figure 1-18](#). Arrows on tire sidewall pinpoint location of wear bar indicators on the tire tread. Tire wear indicator bars will appear on tire tread surfaces when 1/32 in. (0.8 mm) or less of tire tread remains.

Replace the tires when the tire wear indicator bars appear.

New tires are needed if any of the following conditions exist.

1. Tire wear indicator bars become visible on the tread surfaces.
2. Tire cords or fabric become visible through cracked sidewalls, snags or deep cuts.
3. A bump, bulge or split in the tire.
4. Puncture, cut or other damage to the tire that cannot be repaired.

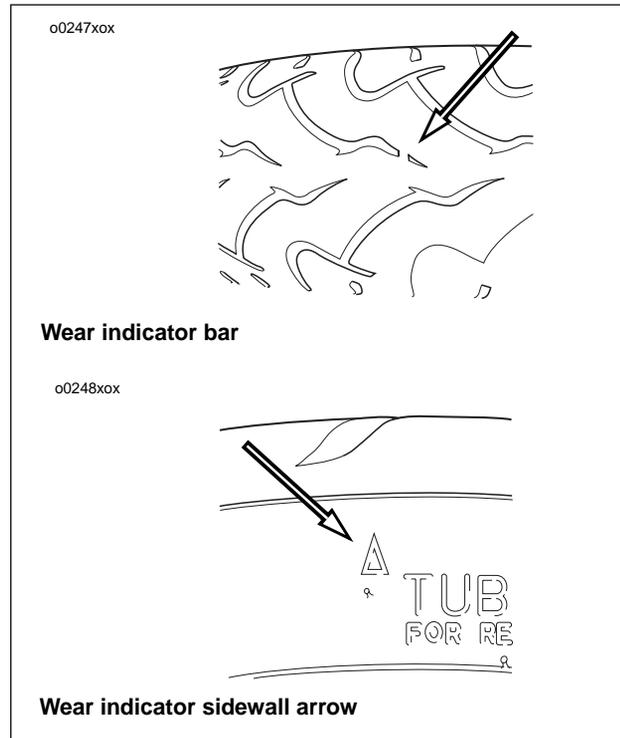


Figure 1-18. Tire Wear Indicator Bars

WHEEL BEARINGS

⚠ WARNING

Never use compressed air to “spin-dry” bearings. Very high bearing speeds can damage unlubricated bearings. Spinning bearings with compressed air can also cause a bearing to fly apart, which could result in death or serious injury.

Check front and rear wheel bearings for wear:

- Every time a wheel is removed.
- When storing or removing the motorcycle for the season.

Check wheel bearings for wear and corrosion. Excessive play or roughness indicates worn bearings. Replace bearings in sets only.

TRANSMISSION FLUID

Transmission fluid capacity is approximately 1.0 quart (0.95 liter). For best results, drain fluid while hot.

1. On level surface, stand vehicle upright (not leaning on sidestand) to prevent chaincase lubricant from draining out of clutch cover opening when refilled.
2. See [Figure 1-20](#). Position a suitable container under drain plug. Remove plug and drain fluid.
3. Wipe any foreign material from the magnetic drain plug. Reinstall plug and tighten to 11-15 ft-lbs (14.9-20.3 Nm).
4. Remove three fasteners and washers from clutch inspection cover. Remove clutch inspection cover with gasket from primary cover.

CAUTION

Do not overfill the transmission with fluid. Overfilling may cause rough clutch engagement and incomplete disengagement, clutch drag and/or difficulty finding neutral at engine idle.

5. See [Figure 1-21](#). Add SPORT-TRANS FLUID (Part No. 98854-96 quart size; Part No. 98855-96 gallon size) as required until fluid level (4) is even with bottom of clutch diaphragm spring (1).
6. Install **new** clutch cover gasket.
7. See [Figure 1-19](#). Install clutch inspection cover tightening three fasteners and washers to 84-108 **in-lbs** (10-12 Nm).
8. Clean up any fluid that may have spilled on muffler.

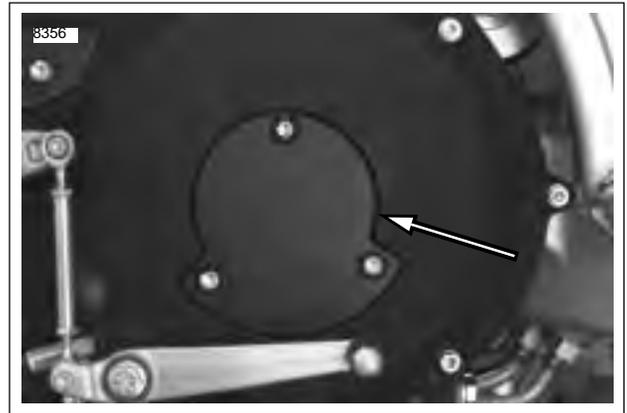


Figure 1-19. Clutch Inspection Cover

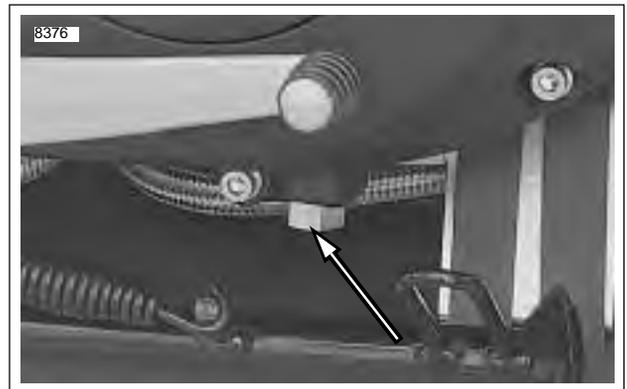


Figure 1-20. Primary Drain Plug

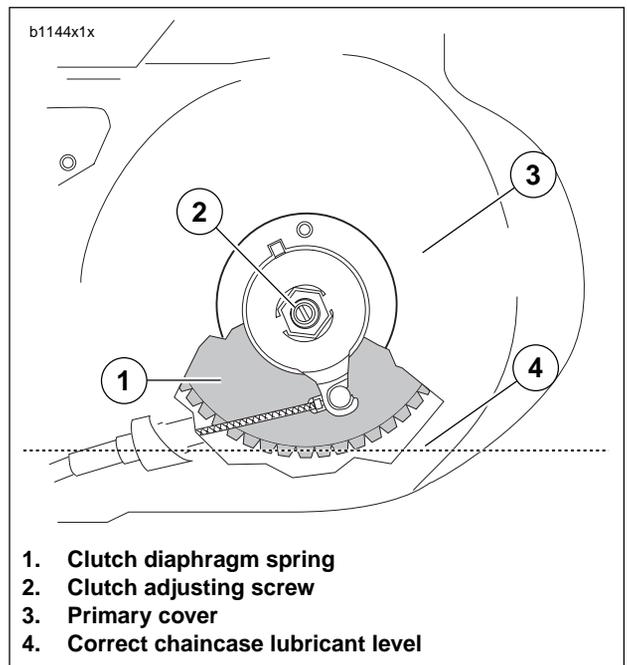


Figure 1-21. Fluid Level

ADJUSTMENT

If clutch slips under load or drags when released, first check control cable adjustment. If cable adjustment is within specifications, adjust clutch mechanism as described below.

When necessary, lubricate cable with LUBIT-8 TUFOIL® CHAIN AND CABLE LUBE (Part No. HD-94968-85TV).

1. Raise rear wheel off floor using REAR WHEEL SUPPORT STAND (Part No. B-41174).
2. See Figure 1-22. Slide rubber boot (1) upward to expose adjuster mechanism. Loosen jam nut (3) from adjuster (4). Turn adjuster to shorten cable housing until there is a large amount of free play at clutch hand lever.
3. See Figure 1-19. Remove three fasteners and washers from clutch inspection cover. Remove clutch inspection cover and gasket from primary cover.
4. See Figure 1-23. Remove spring (1) and lockplate (2). Using a flat tip screwdriver, turn adjusting screw (3) counterclockwise until it lightly bottoms.
5. Turn adjusting screw clockwise 1/4-1/2 turn. Install lockplate and spring on adjusting screw flats. If hex on lockplate does not align with recess in outer ramp, rotate adjusting screw clockwise until it aligns.

NOTE

Spring installs on outboard side of hex lockplate.

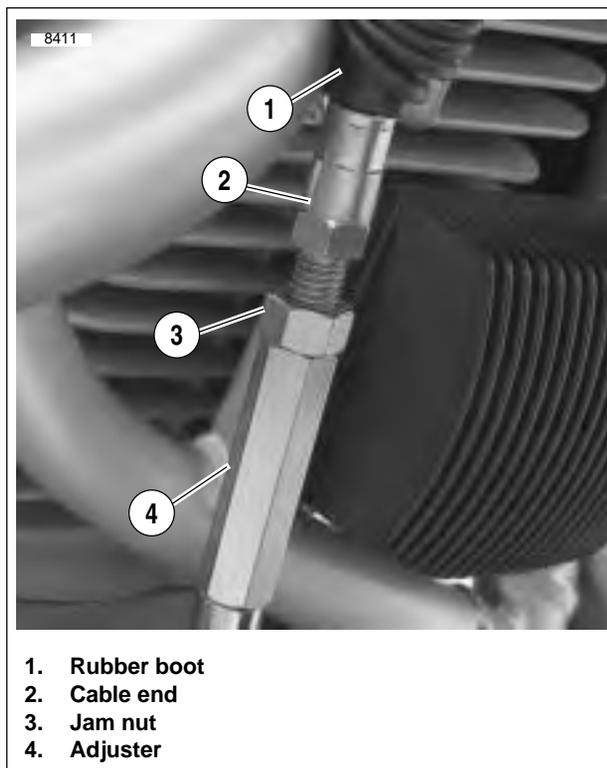


Figure 1-22. Clutch Cable Adjuster Mechanism

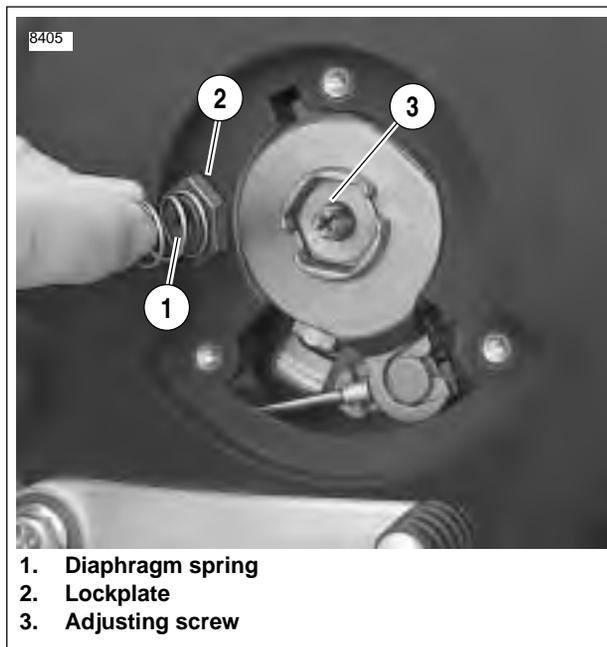


Figure 1-23. Clutch Adjustment

6. Squeeze clutch hand lever to maximum limit three times. This sets the ball and ramp mechanism. Pull outer cable conduit and at the same time adjust cable adjuster to provide 1/16-1/8 in. (1.6-3.2 mm) free play at clutch hand lever. Adjust as follows:
 - a. See [Figure 1-24](#). Pull ferrule (end of cable housing) away from bracket. Gap between ferrule and bracket should be 1/16-1/8 in. (1.6-3.2 mm).
 - b. See [Figure 1-22](#). Set free play by turning adjuster (4).
 - c. Tighten jam nut (3) against adjuster (4).
 - d. Slide boot (1) over cable adjuster mechanism.
7. Change or add transmission fluid if necessary.
8. See [Figure 1-19](#). Install clutch inspection cover and **new** gasket using three fasteners and washers and tighten to 84-108 **in-lbs** (10-12 Nm).
9. Check clutch cable free play. See Step 6 above.

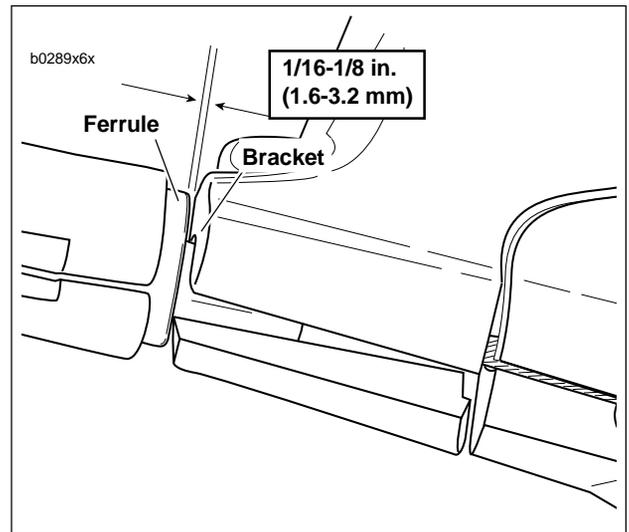


Figure 1-24. Adjusting Clutch Free Play

GENERAL

The drive belt tension on a new belt will loosen after approximately 1000 mi (1600 km). The drive belt tension is automatically adjusted by the idler pulley. Axle alignment is not adjustable.

Replace drive belt and idler pulley assembly:

- At every 25,000 mi (40,000 km) service interval.

INSPECTION

Rear Sprocket

NOTE

If chrome chips or gouges to rear sprocket are large enough to be harmful, they will leave a pattern on the belt face.

1. Inspect each tooth of rear sprocket for:
 - a. Major tooth damage.
 - b. Large chrome chips with sharp edges.
 - c. Gouges caused by hard objects.
 - d. Excessive loss of chrome plating (see Step 2).
2. To check if chrome plating has worn off, drag a scribe or sharp knife point across the bottom of a groove (2) (between two teeth) with medium pressure.
 - a. If scribe or knife point slides across groove without digging in or leaving a visible mark, chrome plating is still good.
 - b. If scribe or knife point digs in and leaves a visible mark, it is cutting the bare aluminum. A knife point will not penetrate the chrome plating.
3. Replace rear sprocket if major tooth damage or loss of chrome exists.

Drive Belt

See [Table 1-7](#). Inspect drive belt for:

- Cuts or unusual wear patterns on both sides of belt.
- Outside edge bevelling (8). Some bevelling is common, but it indicates that sprockets are misaligned.
- Outside surface for signs of stone puncture (7). If cracks/damage exists near edge of belt, replace belt immediately. Damage to center of belt will require belt replacement eventually, but when cracks extend to edge of belt, belt failure is imminent.
- Inside (toothed portion) of belt for exposed tensile cords (normally covered by nylon layer and polyethylene layer). This condition will result in belt failure and indicates worn transmission sprocket teeth. Replace belt and transmission sprocket.
- Signs of puncture or cracking at the base of the belt teeth. Replace belt if either condition exists.

Idler Pulley

Inspect idler pulley for signs of uneven wear. Excessive lateral side play of 0.020 in. (0.5 mm) or roughness indicates worn bearings. Replace idler pulley as an assembly. See [6.6 DRIVE BELT SYSTEM](#).



Figure 1-25. Checking Lateral Sideplay on Idler Pulley with a Dial Indicator

CLEANING

Keep dirt, grease, oil, and debris off the belt, idler pulley and sprockets. Clean the drive belt with a mild soap and water spray solution as required. Dry thoroughly. Do not immerse belt in solution.

Table 1-7. Potential Limits to Belt Drive Service Life

| CONDITION | ROOT CAUSE | REQUIRED ACTION | |
|-----------------------------------|---|---|---|
| Excessive Edge Wear (mistracking) | Misalignment or bent drive structure | Check structure (bad bearing, bent members, etc.) | |
| | Bent or rough flange | Repair flange/replace sprocket | |
| | Damage due to handling (pry on, etc.) | Follow proper handling/installation procedure | |
| | Debris damage to edge of belt | | Inspect/replace belt |
| | | | Inspect for damaged or missing guards |
| | Belt hitting obstruction | | Check structure (bad bearing, bent members, etc.) |
| | | | Inspect for loose/missing fasteners |
| | | | Inspect for damaged or missing guards |
| | Bent or loose idler bracket | | Replace idler assembly |
| | | | Inspect for loose/missing fasteners |
| Broken or loose guards | | Check structure (bad bearing, bent members, etc.) | |
| | | Inspect for loose/missing fasteners | |
| | | Inspect for damaged or missing guards | |
| Excessive tooth wear | Rough or damaged sprocket | Inspect/replace sprocket | |
| | Worn sprocket | Inspect/replace sprocket | |
| | Debris in sprocket | | Clean and protect drive |
| | | | Inspect for damaged or missing guards |
| | Abrasive environment | | Eliminate or control exposure |
| | | Inspect for damaged or missing guards | |
| Apparent belt stretch | Worn sprocket | Inspect/replace sprocket | |
| | Debris in sprocket | | Clean and protect drive |
| | | | Inspect for damaged or missing guards |
| | Idler bearing failure | Replace idler assembly | |
| | Aggressive riding/hard use | Riding practice/operator choice | |
| | Exposure to oils, solvents, harsh chemicals | | Eliminate or control exposure |
| | | Clean and protect drive | |
| Cracks in back of belt | Idler/bearing binding | Replace idler assembly | |
| | Exposure to oils, solvents, harsh chemicals | | Eliminate or control exposure |
| | | | Clean and protect drive |
| | Cut by sharp debris (not at belt edge) | | Inspect/replace sprocket |
| | | | Continue to run but monitor condition frequently |
| | Cut by sharp debris at belt edge | | Inspect/replace sprocket |
| | | Inspect/replace belt | |

Table 1-7. Potential Limits to Belt Drive Service Life

| CONDITION | ROOT CAUSE | REQUIRED ACTION |
|---------------------------------------|---------------------------------------|---|
| Tooth shear/cracks | Excessive load/shock load | Inspect/replace belt |
| | | Riding practice/operator choice |
| | Worn sprocket | Inspect/replace sprocket |
| | Debris damage | Inspect/replace sprocket |
| | | Clean and protect drive |
| | | Inspect/replace belt |
| | | Continue to run but monitor condition frequently |
| Inspect for damaged or missing guards | | |
| Belt breakage | Excessive load/Shock load | Inspect/replace belt |
| | | Riding practice/operator choice |
| | Damage due to handling (pry-on, etc.) | Follow proper handling/installation procedure |
| | Debris in sprocket or belt | Inspect/replace sprocket |
| | | Clean and protect drive |
| | | Inspect/replace belt |
| Excessive drive noise | Worn/damaged sprocket | Inspect/replace sprocket |
| | Damaged flange | Repair flange/replace sprocket |
| | Damaged idler | Check structure (bad bearing, bent members, etc.) |
| | | Replace idler assembly |
| | Damaged belt | Follow proper handling/installation procedure |
| | | Inspect/replace belt |
| | Debris stuck in belt | Inspect/replace sprocket |
| | | Clean and protect drive |
| | | Inspect/replace belt |
| | Debris stuck in sprocket | Inspect/replace sprocket |
| | | Follow proper handling/installation procedure |
| Inspect/replace belt | | |

INSPECTION

See [Figure 1-26](#). Measure primary chain tension through the inspection cover opening. Adjust primary chains not meeting vertical free play specifications.

1. See [Figure 1-26](#). Remove two fasteners with captive washers and primary chain inspection cover with gasket from primary cover.
2. See [Figure 1-27](#). Check primary chain tension by measuring vertical free play.
 - a. Measure vertical free play through chain inspection cover opening.
 - b. Rotate engine to move primary chain to a different position on sprockets.
 - c. Measure vertical free play several times, each time with primary chain moved so that the measurement is taken with sprockets rotated to the tightest chain position.
3. The tightest measurement taken in Step 2 must be within the specifications listed in [Table 1-8](#). If necessary, adjust as described under [1.11 PRIMARY CHAIN](#) in [ADJUSTMENT](#).

NOTE

The initial primary chain vertical free play specification used at the assembly plant is 1/4-1/2 in. (6.4-12.7 mm) with a cold engine. The 1/4 in. (6.4 mm) minimum is only allowed at the absolute tightest point in the drive, as measured with specialized factory equipment. If a chain has less than 1/4 in. (6.4 mm) vertical free play (with a cold engine), adjust free play to the "field" specification of 3/8-1/2 in. (9.5-12.7 mm). The looser specification will avoid overtightening, which might otherwise occur during adjustment using "non-factory" equipment and methods.

4. See [Figure 1-26](#). Install primary chain inspection cover and **new** gasket to primary cover using two fasteners with captive washers. Tighten fasteners to 40-60 in-lbs (5-7 Nm).

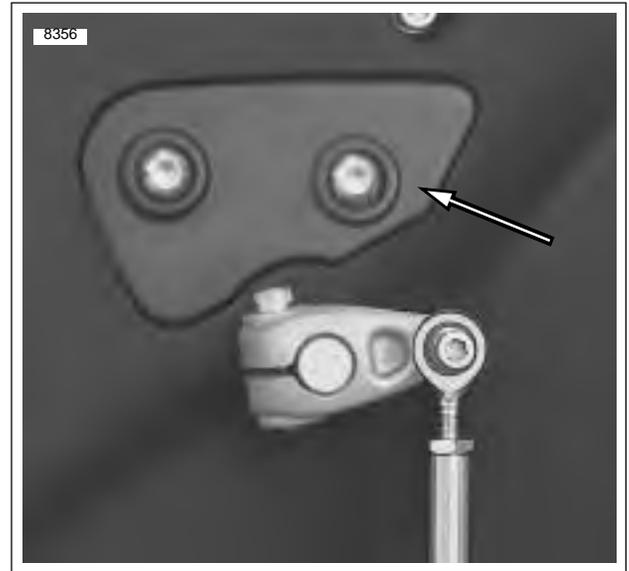


Figure 1-26. Primary Chain Inspection Cover

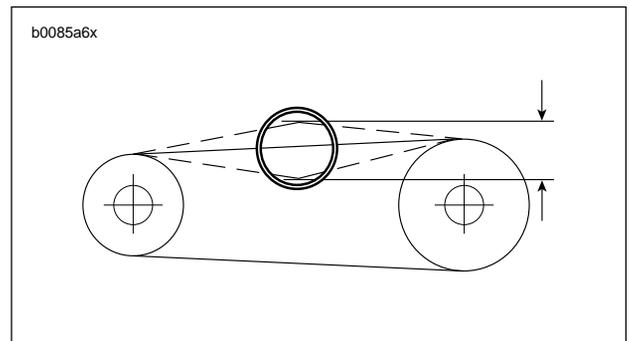


Figure 1-27. Measuring Primary Chain Tension

Table 1-8. Primary Chain Tension

| ENGINE TEMPERATURE | FREE PLAY | |
|----------------------------------|-------------|-------------|
| | Cold | 3/8-1/2 in. |
| Hot (normal running temperature) | 1/4-3/8 in. | 6.4-9.5 mm |

ADJUSTMENT

NOTE

If vertical free play cannot be set within the limits specified, then primary chain and/or chain adjuster are worn beyond adjustment limits. Replace parts as necessary. See 6.2 PRIMARY COVER.

1. See [Figure 1-28](#). Loosen locknut (1).
2. Turn adjusting fastener (2):
 - a. Clockwise (inward) to reduce free play.
 - b. Counterclockwise (outward) to increase free play.
3. Tighten locknut (1) to 20-25 ft-lbs (27-34 Nm).

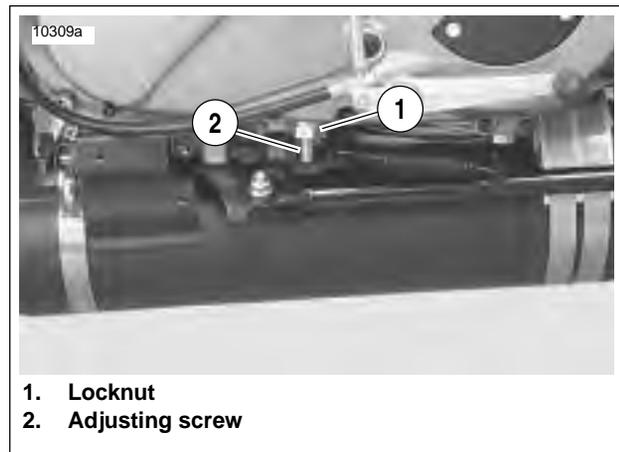


Figure 1-28. Chain Tension Adjusting Fastener

GENERAL

WARNING

Before evaluating and adjusting suspension settings, check the motorcycle's tires. Tires must be in good condition and properly inflated. Failure to check the tires could result in death or serious injury.

Make all suspension adjustments in one or two click increments. Adjusting more than one or two clicks at a time may cause you to skip the best adjustment. Test ride after each adjustment. When an adjustment makes no difference, return to the previous adjustment and try a different approach.

If both preload adjustments are correct, and you have the rebound and compression damping set at the factory recommended points, the motorcycle should handle and ride properly. If you wish to fine tune these settings they can be changed according to the following procedures.

NOTE

Evaluating and changing the rebound and compression damping is a very subjective process. Many variables affect motorcycle handling under different circumstances. Approach all changes carefully and consult [Table 1-9](#).

Table 1-9. Recommended Suspension Settings for Rider and Weight

| RIDER AND CARGO WEIGHT | | FRONT FORK | | | REAR SHOCK | | |
|------------------------|----------|--------------------|--------------|----------|------------------|--------------|----------|
| LB | KG | PRELOAD # OF LINES | *COMPRESSION | *REBOUND | PRELOAD POSITION | *COMPRESSION | *REBOUND |
| Less than 140 | 64 | 7 | 2 | 1.625 | 1 | 2 | 1.75 |
| 140-160 | 64-73 | 6 | 1.75 | 1.625 | 2 | 1.75 | 1.50 |
| 160-180 | 73-82 | 5.5 | 1.50 | 1.50 | 3 | 1.50 | 1.25 |
| 180-200 | 82-91 | 5 | 1.50 | 1.50 | 4 | 1.25 | 1.25 |
| 200-220 | 91-100 | 4.5 | 1.25 | 1.25 | 5 | 1.25 | 1 |
| 220-240 | 100-109 | 4 | 1.25 | 1.25 | 6 | 1 | 0.75 |
| 240-GVWR | 109-GVWR | 3.5 | 1 | 1 | 7 | 1 | 0.75 |

* Note all compression and rebound settings are # of turns out from maximum.

SUSPENSION ADJUSTMENTS

⚠ WARNING

Always adjust each fork leg to the same settings. Uneven adjustment between left and right forks may lead to a loss of control which could result in death or serious injury.

NOTE

All “turn settings” in [Table 1-9](#). are “turns out from maximum”. That is, first gently turn adjustment screws fully clockwise (until they stop), then turn adjustment screws counterclockwise.

The recommended rebound and compression damping settings for various road and riding conditions are given in [Table 1-9](#).

Setting Front Fork Preload

1. Check number of lines (3) to be showing for your load condition. Refer to [Table 1-9](#).
2. See [Figure 1-29](#). Adjust preload by turning the adjuster nut (2) with a wrench.

Setting Front Fork Rebound Damping

1. See [Figure 1-29](#). Using a screwdriver, turn the slotted dial (1) clockwise until it stops. This is the maximum rebound damping setting.
2. Then turn the dial counterclockwise the recommended amount specified in [Table 1-9](#).

Setting Front Fork Compression Damping

1. See [Figure 1-29](#). Using a screwdriver, turn the slotted dial clockwise until it stops. This is the maximum compression damping setting.
2. Then turn the dial counterclockwise the recommended amount specified in [Table 1-9](#).

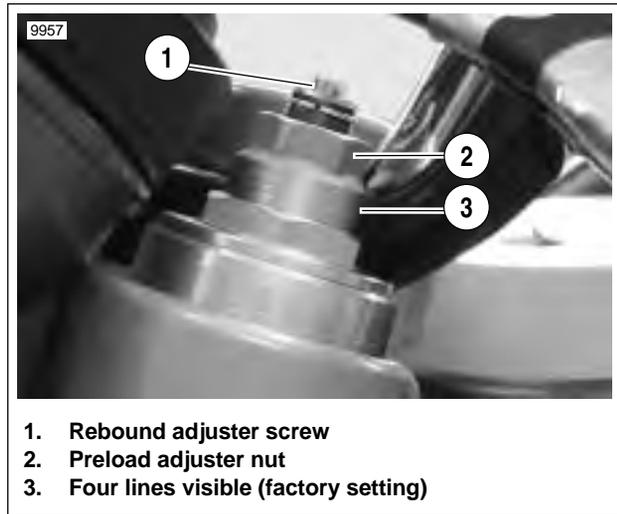


Figure 1-29. Front Fork Preload And Rebound Adjuster

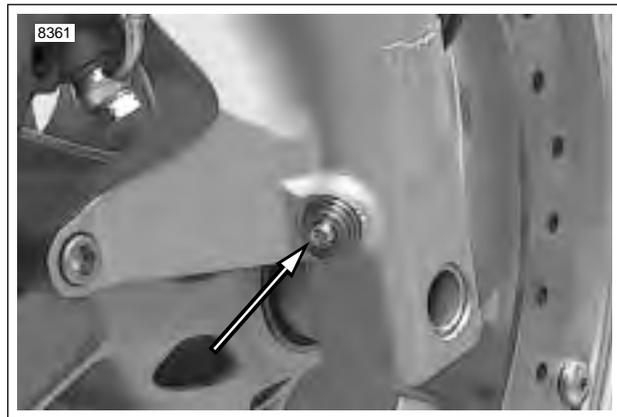


Figure 1-30. Front Fork Compression Damping Adjuster

Setting Rear Shock Preload

The factory setting is ramp number 2 position (ramp number 7 position being the tallest ramp and maximum preload). For recommended spring preload refer to [Table 1-9](#).

1. Remove seat. See [2.38 SEAT](#).
2. See [Figure 1-31](#). Change the spring preload by turning the preload adjuster at the upper part of the shock with the SHOCK SPANNER WRENCH (HD-94700-52C) or the wrench included in the tool kit.
 - a. Turn adjuster to setting specified in [Table 1-9](#). Rotate adjuster clockwise to increase preload.
 - b. Rotate adjuster counterclockwise to decrease preload.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

3. Install seat. See [2.38 SEAT](#).

Setting Rear Shock Rebound Damping

1. See [Figure 1-32](#). Using a screwdriver, turn the slotted dial clockwise until it stops. This is the maximum rebound damping setting.
2. Then turn the dial counterclockwise the recommended amount specified in [Table 1-9](#).

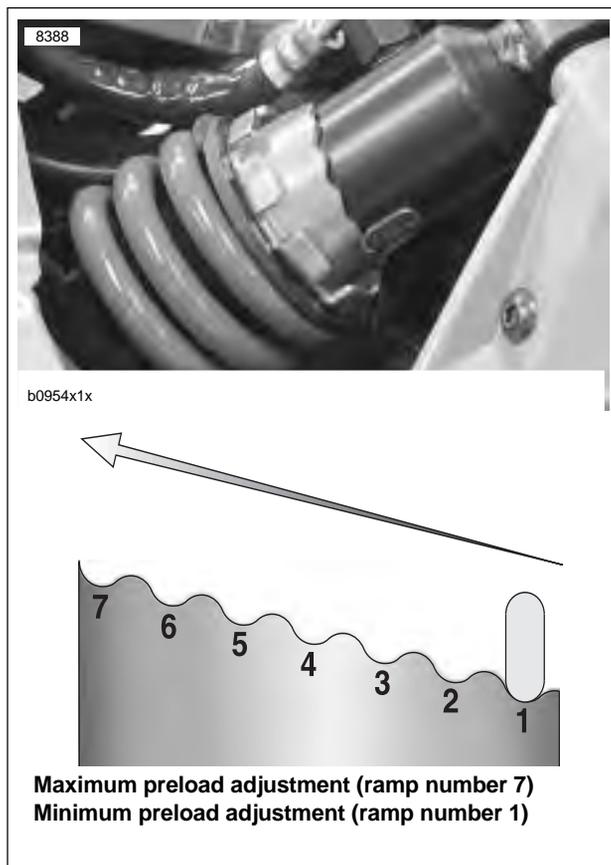


Figure 1-31. Rear Shock Preload Adjuster

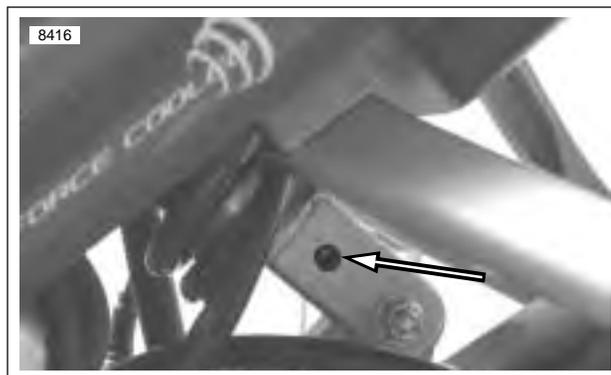


Figure 1-32. Rear Shock Rebound Adjustment

Setting Rear Shock Compression Damping

1. Remove seat. See [2.38 SEAT](#).
2. See [Figure 1-33](#). In order to access the rear shock compression adjuster pull back the left rear corner of the rider seat.
3. See [Figure 1-34](#). Using a screwdriver, turn the slotted dial clockwise until it stops. This is the maximum compression damping setting.
4. Then turn the dial counterclockwise the recommended amount specified in [Table 1-9](#).
5. Install seat.

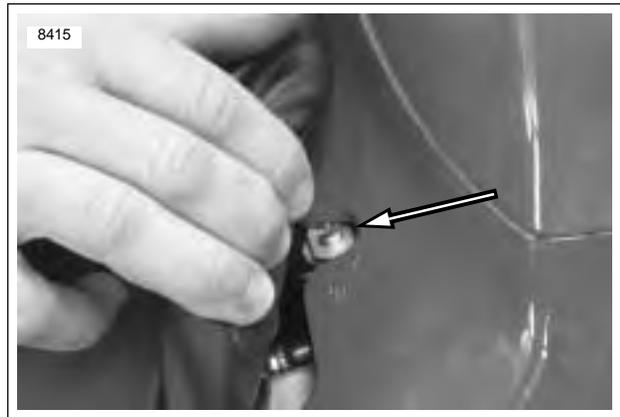


Figure 1-33. Accessing Rear Shock Compression Adjuster

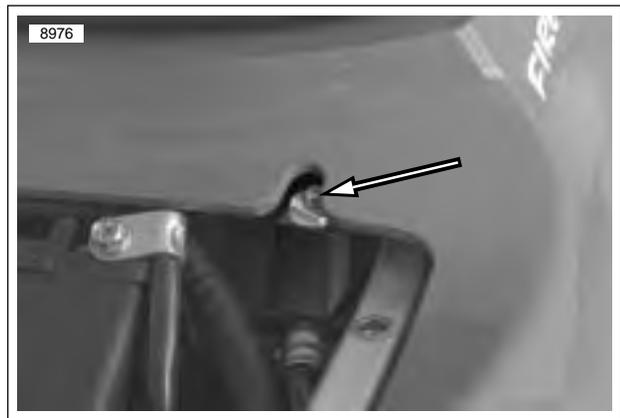


Figure 1-34. Rear Shock Compression Adjustment

GENERAL

The steering head bearings are sealed, angular contact bearings and do not require additional lubrication.

Check steering head bearing resistance:

- At every 5000 mile (8000 km) service interval.
- When storing or removing the motorcycle for the season.

INSPECTION

NOTES

- Check that throttle cables do not bind when measuring bearing resistance.
 - Steering head bearings are sealed and do not require additional lubrication.
 - Steering head bearing resistance is not adjustable. Replace bearings that do not meet resistance specifications.
1. Detach clutch cable at handlebar.
 2. Place a scissor jack under jacking point and raise front wheel off ground. For location of jacking point see [2.28 EXHAUST SYSTEM](#).

⚠ WARNING

Steering must be smooth and free with no binding or interference. Anything interfering with steering system operation may cause loss of vehicle control, which could result in death or serious injury.

3. Check steering stem bearings for notches by turning front wheel full right and then left. Repeat if necessary.
4. Next place wheel facing straight ahead and grabbing both fork sides at the bottom move front-end forward and back to check for steering head play.
5. To inspect for correct steering head resistance turn front wheel all the way to the right.
6. See [Figure 1-35](#). Hook a spring scale into the hole in the front axle. With scale 90 degrees from fork leg, pull front wheel to center position.
 - a. The desired resistance to pull front wheel to center is between 1-7 lbs (0.5-3.2 kg).
 - b. If steering head resistance measurement is not within specification, see [ADJUSTMENT](#).
7. When adjustment is complete, attach clutch cable and adjust. See [1.9 CLUTCH](#).

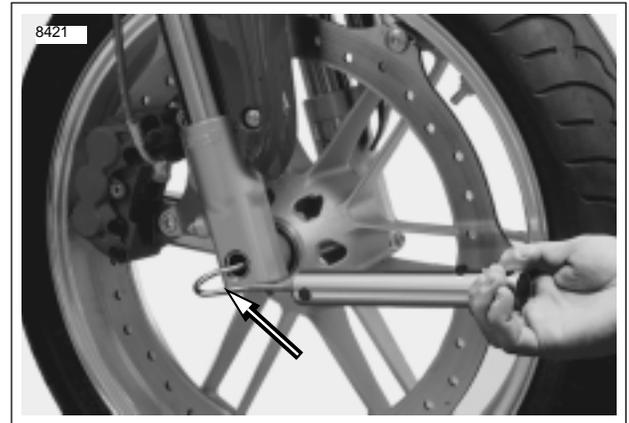


Figure 1-35. Measuring Steering Head Bearing Resistance

ADJUSTMENT

1. Detach clutch cable at handlebar and ensure that throttle cables do not bind before measuring steering head bearing resistance.
2. Remove steering stem pinch fastener at upper fork clamp.
3. Loosen steering stem capnut and back off several turns.
4. Remove lower fork clamp pinch fasteners, two per side.
5. Tighten steering stem capnut to 38-42 ft-lbs (52-57 Nm).
6. Turn front wheel all the way to the right.
7. See [Figure 1-35](#). Hook a spring scale into the hole in the front axle. With scale 90 degrees from fork leg, pull front wheel to center position.
8. The desired resistance is between 1-7 lbs (0.5-3.2 kg).

NOTE

If the correct specification cannot be achieved, the steering head bearings must be replaced. See [2.18 STEERING HEAD BEARINGS](#).

9. Once correct steering head resistance has been verified, apply LOCTITE 272 to steering stem pinch bolt, install and tighten to 17-19 ft-lbs (23-26 Nm).
10. Apply LOCTITE 272 to lower triple clamp fasteners, install and tighten to 13-15 ft-lbs (18-20 Nm).
11. When adjustment is complete, attach clutch cable and adjust. See [1.9 CLUTCH](#).
12. Remove scissor jack.

INSPECTION

Check spark plugs:

- Replace every 10,000 mile (16,000 km) service interval.
 - Use only Harley-Davidson 10R12A spark plugs.
1. Remove left side air scoop to access front cylinder spark plug. See [2.35 AIR SCOOPS](#).
 2. Disconnect cable from front spark plug.
 3. Using a 5/8 in. box end wrench and 5/8 in. spark plug socket, remove front spark plug.
 4. Remove seat. See [2.38 SEAT](#).
 5. Remove airbox assembly. See [4.30 AIRBOX](#).
 6. Disconnect cable from rear spark plug (use automotive spark plug boot remover/installer if required).
 7. Using a 5/8 in. wobble socket and 12 in. extension, remove rear spark plug.
 8. See [Figure 1-36](#). Compare your observations of the plug deposits with the descriptions provided below.
 - a. A wet, black and shiny deposit on plug base, electrodes and ceramic insulator tip indicates an oil fouled plug. The condition may be caused by one or more of the following: worn pistons, worn piston rings, worn valves, worn valve guides, worn valve seals, a weak battery or a faulty ignition system.
 - b. A dry, fluffy or sooty black deposit indicates an air-fuel mixture that is too rich and/or engine idling for excessive periods.
 - c. A light brown, glassy deposit indicates an overheated plug. This condition may be accompanied by cracks in the insulator or by erosion of the electrodes and is caused by an air-fuel mixture that is too lean, a hot-running engine, valves not seating or improper ignition timing. The glassy deposit on the spark plug is a conductor when hot and may cause high-speed misfiring. A plug with eroded electrodes, heavy deposits or a cracked insulator must be replaced.
 - d. A plug with a white, yellow, tan or rusty brown powdery deposit indicates balanced combustion. Clean off spark plug deposits at regular intervals.



Figure 1-36. Typical Spark Plug Deposits

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

9. If the plugs require cleaning between tune-ups and replacement plugs are not available, proceed as follows:
 - a. Degrease firing end of spark plug using ELECTRICAL CONTACT CLEANER. Dry plug with compressed air.
 - b. Use a thin file to flatten spark plug electrodes. A spark plug with sharp edges on its electrodes requires 25-40% less firing voltage than one with rounded edges.
10. If the plugs cannot be cleaned, replace with 10R12A spark plugs.
11. Check electrode gap with a wire-type feeler gauge. Gap should be 0.035 in. (0.9 mm).
12. Apply LOCTITE ANTI-SEIZE to threads of spark plugs. Install and tighten spark plugs to 11-18 ft-lbs (15-24 Nm).

NOTES

- *Start threading rear spark plug with 3/8" fuel hose being careful not to cross thread spark plug.*
 - *Start front spark plug with fingers.*
 - *An extension may be needed to push on rear spark plug boot to ensure it is seated properly.*
13. Connect spark plug cables. Verify that cables are securely connected to coil and spark plugs. See [7.4 SPARK PLUG CABLES](#).
 14. Install left side air scoop. See [2.35 AIR SCOOPS](#).
 15. Install airbox assembly. See [4.30 AIRBOX](#).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

16. Install seat. See [2.38 SEAT](#).

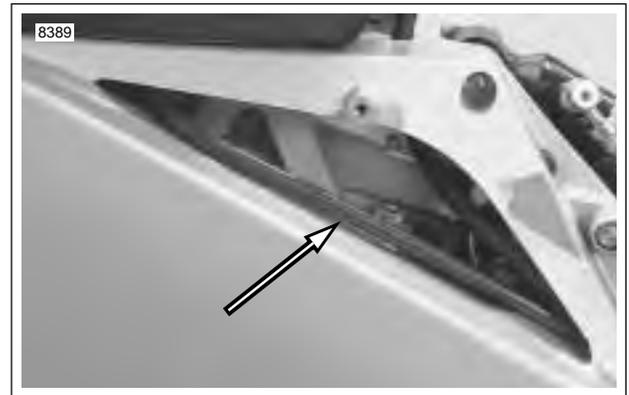


Figure 1-37. Rear Spark Plug Access

REMOVAL

CAUTION

Do not run engine without filter element in place. Debris could be drawn into the engine causing damage.

Check air cleaner filter element:

- Inspect at the 1000 mile (1600 km) service interval and at every 5000 mile (8000 km) service interval thereafter.
- Replace at every 20,000 mile (32,000 km) service interval.

NOTE

Inspect and replace air cleaner filter element more often if the motorcycle is run in a dusty environment.

1. Remove seat. See 2.38 SEAT.
2. Remove four fasteners, nylon washers and intake cover assembly. See 2.34 INTAKE COVER ASSEMBLY.
3. See Figure 1-38. Remove fuel vent tube (4) from vapor valve at front of air cleaner cover and groove on top of air cleaner cover (1).

NOTE

The following steps are for the XB12R with the interactive exhaust system.

4. Remove upper isolator (2) and actuator (3) along with cable (5) and harness (6) from top of air cleaner cover and lay to one side.
5. See Figure 1-38. Unlatch six latching tabs (7) and remove air cleaner cover from base plate.
6. See Figure 1-40. Remove the filter element (1) from base plate (2). Inspect and replace if necessary.

CAUTION

See Figure 1-40. Cover the air horn so nothing can drop into the motor.

CLEANING AND INSPECTION

WARNING

Do not use gasoline or solvents to clean the filter element. Volatile/flammable cleaning agents may cause an intake system fire which could result in death or serious injury.

1. Check filter element. Hold filter element up to strong light source. The element can be considered sufficiently clean if light is uniformly visible through the element.
2. Thoroughly clean base plate and inside of air cleaner cover.
3. See Figure 1-41. Make sure two crankcase breather hoses (1) and intake air sensor (2) are captured in base plate behind velocity stack (3).

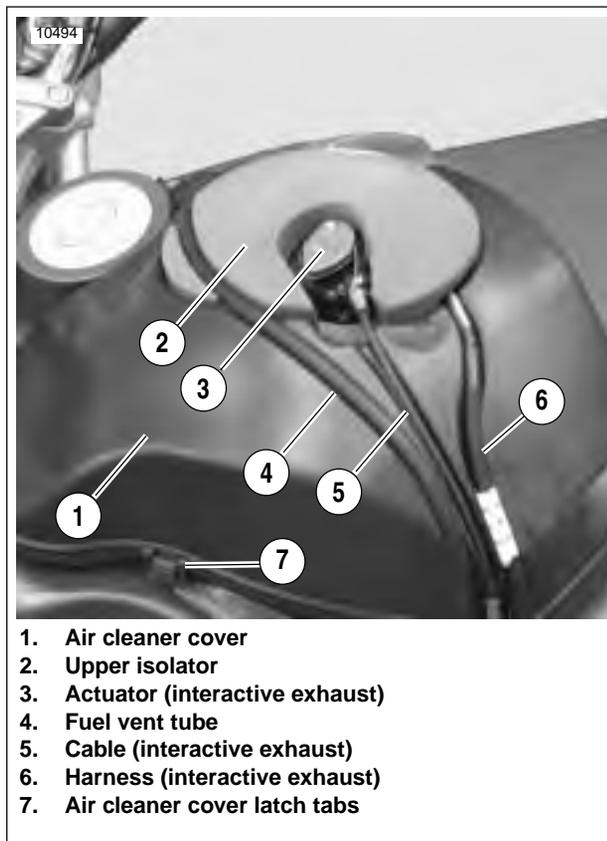


Figure 1-38. Air Cleaner Cover, Fuel Vent Tube and Fuel Vapor Valve (XB12)

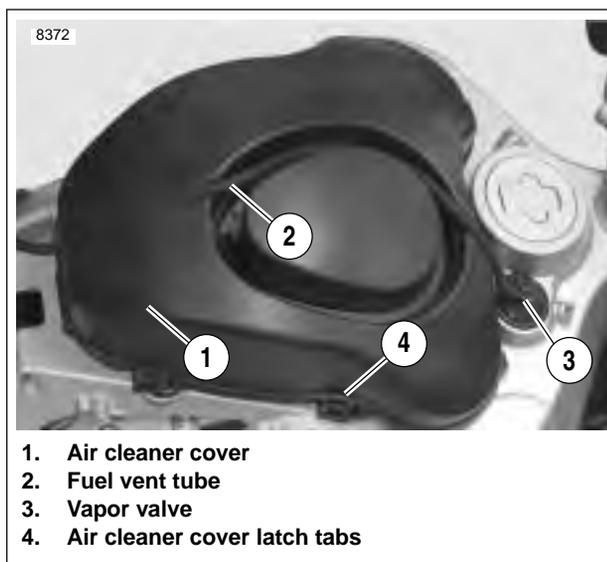


Figure 1-39. Air Cleaner Cover, Fuel Vent Tube and Fuel Vapor Valve (XB9)

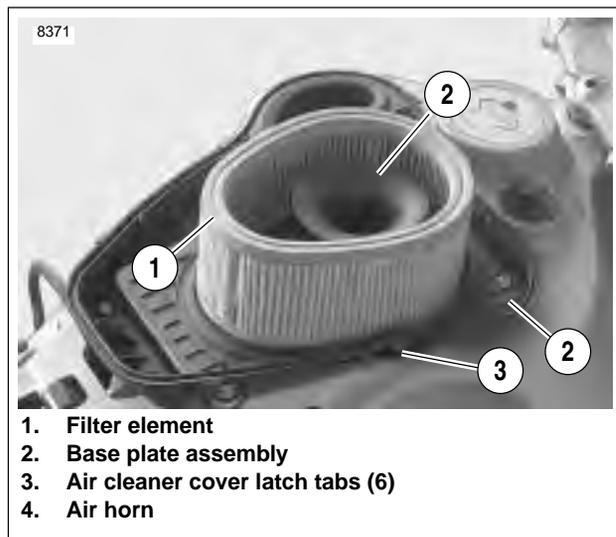


Figure 1-40. Installed Air Cleaner Filter Element

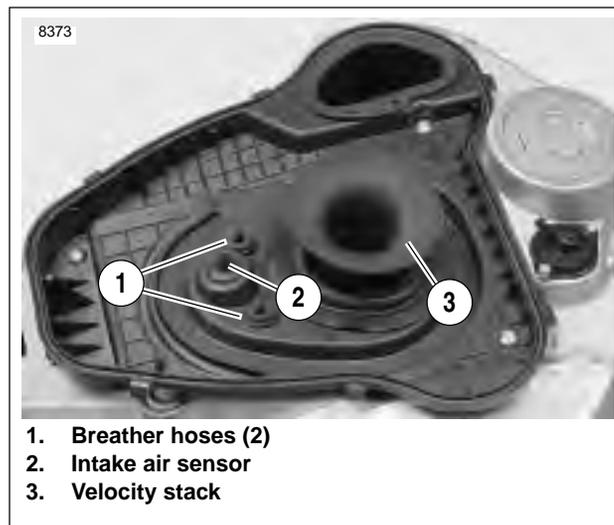


Figure 1-41. Air Cleaner Base Plate Assembly

INSTALLATION

1. See [Figure 1-40](#). Place filter element (1) on base plate (2).
2. See [Figure 1-38](#). Position air cleaner cover (1) over base plate. Make sure air filter remains correctly positioned.
3. Install air cleaner cover by latching six latch tabs (4) to base plate.
4. Install actuator and position cable and harness in grooves on air cleaner cover.
5. Position fuel vent tube (2) in groove on top of air cleaner cover and connect to fuel vent valve (3). Secure vent tube to vent valve with **new** cable strap.
6. Install intake cover assembly with four fasteners and nylon washers. Tighten fasteners to 12-36 **in-lbs** (4-4 Nm).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

7. Install seat. See [2.38 SEAT](#).

THROTTLE CABLE

WARNING

Throttle cables must not pull tight when handlebars are turned fully to left or right fork stops. Be sure wires and throttle cables are clear of fork stops at steering head so they will not be pinched when fork is turned against stops. Steering must be smooth and free with no binding or interference. Anything interfering with steering system operation may cause loss of vehicle control, which could result in death or serious injury.

Check throttle cable adjustment:

- Before every ride.
- At every scheduled service interval.

With engine running, turn handlebars through full range of travel. If engine speed changes during this maneuver, turn engine OFF and adjust throttle cables as follows:

1. Remove airbox and base plate. See [4.30 AIRBOX](#).
2. See [Figure 1-42](#). Loosen cable adjuster lock (thick disc) on each cable.
3. Turn adjusters (thin disc) in direction which will shorten cable housings to minimum length.
4. Point front wheel straight ahead. Twist throttle control grip to fully open position; hold in position.
5. Turn adjuster on throttle control cable until throttle cam stop touches stop plate. Tighten jam nut on throttle control cable adjuster; release throttle control grip.
6. Turn handlebars fully to right. Turn adjuster on idle control cable until end of cable housing just touches the cable guide.
7. Twist and release throttle control grip a few times. Throttle plate must return to idle position each time throttle grip is released. If this is not the case, turn adjuster on idle control cable (shortening cable housing) until throttle control functions properly.
8. Tighten cable adjuster lock on idle control cable. Recheck operation of throttle control.
9. Recheck engine slow idle speed; adjust if required.
10. Install airbox, base plate and intake cover assembly. See [4.30 AIRBOX](#).

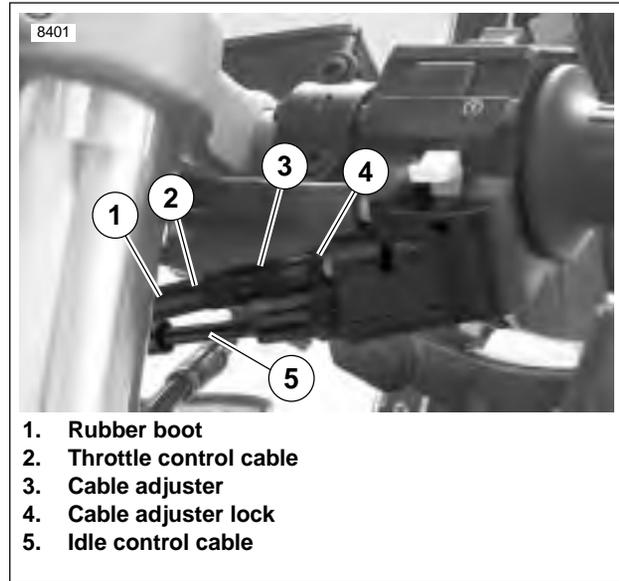


Figure 1-42. Throttle Cable Adjusters

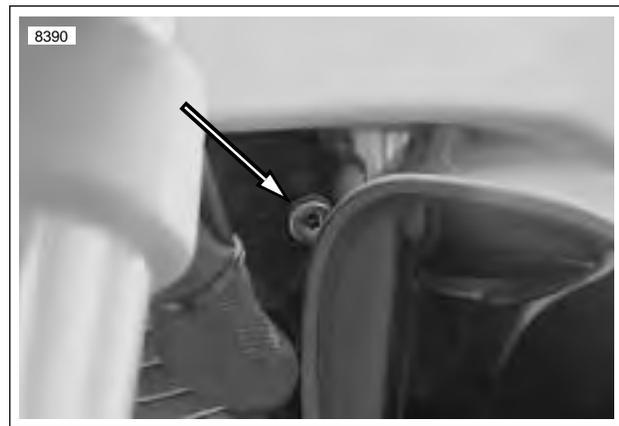


Figure 1-43. Idle Adjuster (behind left fork)

IDLE SPEED

See [Figure 1-43](#). Regular idle speed is 1050-1150 RPM. Set idle speed using idle adjuster. Turn adjuster clockwise to increase idle speed or counterclockwise to decrease idle speed.

ADJUSTMENT

1. Remove four fasteners, nylon washers and intake cover assembly. See 2.34 INTAKE COVER ASSEMBLY.

NOTE

When the ignition/light switch is turned off with the interactive exhaust valve in motion, the valve will stop partially open which will cause an inaccurate adjustment. For a description of the inactive exhaust operation, see 7.6 INTERACTIVE EXHAUST SYSTEM (XB12R).

2. To close the valve in the muffler, cycle the actuator:
 - a. Hold the throttle wide open.
 - b. Turn the engine cut-off switch to RUN.
 - c. Turn the ignition/light key switch ON.
 - d. Watch the actuator cycle close/open/close.



1. Adjuster
2. Interactive exhaust cable
3. Jam nut
4. Cable wheel

Figure 1-44. Interactive Exhaust Cable

3. See Figure 1-44. Loosen jam nut (3).
4. Remove cable (2) from bracket and cable wheel (4).

NOTE

For the next step in the procedure it will be necessary to obtain a permanent marker.

5. Using a pair of pliers, fully open the exhaust valve in the muffler by pulling the cable core by the ferule that was disconnected from the cable wheel in the previous step until resistance is felt. Be careful not to damage the cable core.
6. Mark the cable core with the marker all the way around where it comes out of the housing.
7. Release the cable core and reattach the cable to the cable wheel and bracket.
8. Tighten jam nut.

CAUTION

Do not overtighten jam nut on interactive exhaust cable.

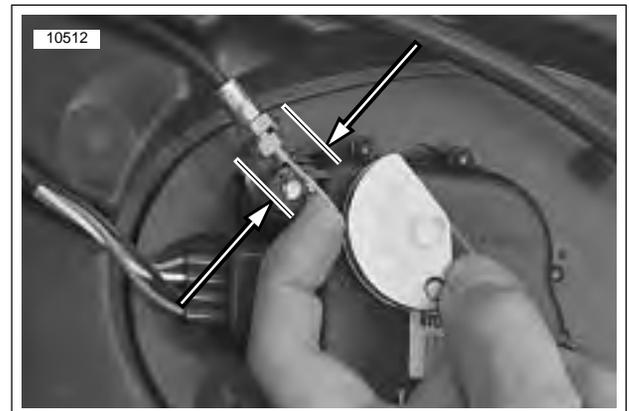


Figure 1-45. Checking For 1/8 in. (3.18) Maximum Free Play In Either Direction For Proper Adjustment

9. See Figure 1-45. Adjust interactive exhaust cable as follows:
 - a. See Figure 1-44. Move cable with your fingers from side to side. There should be no more than 1/8 in. (3.18 mm) sideplay in cable in either direction with 1/4 in. (6.36) maximum overall sideplay.
 - b. Adjust cable as needed using cable adjuster (1).
10. Cycle the actuator to verify cable and valve operation:
 - a. Hold the throttle wide open.
 - b. Turn the engine cut-off switch to RUN.
 - c. Turn the ignition/light key switch ON.
 - d. Watch the actuator cycle close/open/close.

CAUTION

DO NOT start vehicle in this mode.

NOTE

In this mode the exhaust valve in the interactive exhaust should cycle from the closed position to the wide open position and back to the closed. When the exhaust valve moves to the open position, you should see the mark on the cable core made previously. This ensures the system is working properly. If you do not see the mark, verify previous cable adjustment.

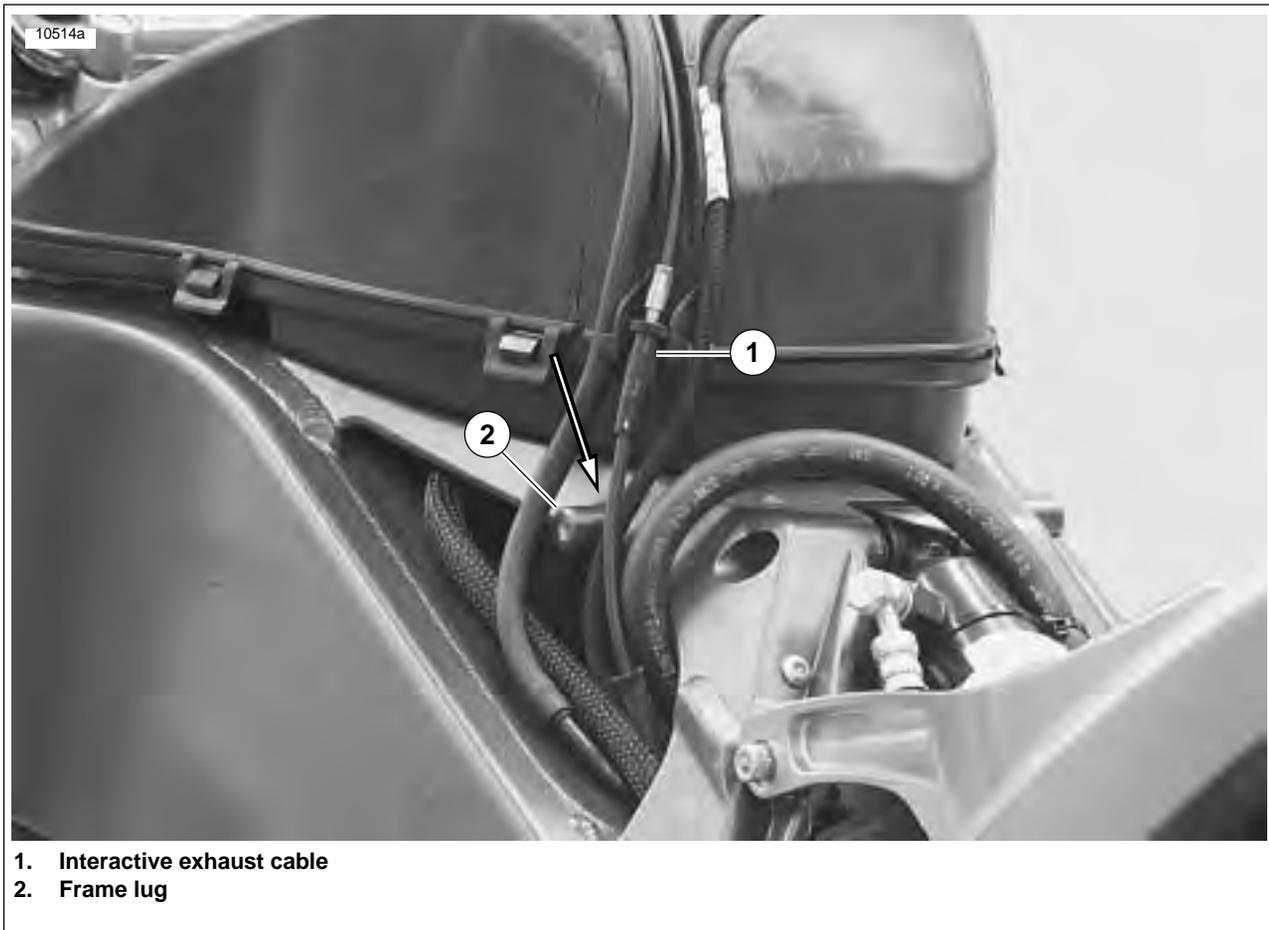


Figure 1-46. Correct Cable Routing Behind Frame Lug

11. See [Figure 1-44](#). Verify that the interactive exhaust cable (1) is routed behind the frame lug (2) before installing air intake cover.

CAUTION

If cable is routed in front of the frame lug it will cause the muffler valve to stay open not allowing it to work properly.

12. Install air intake cover.

INSPECTION

Check ignition timing:

- After each removal of the cam position sensor.

CHECKING STATIC TIMING

CAUTION

Always wear proper eye protection when drilling. Flying debris may result in minor or moderate injury.

CAUTION

Carefully drill hole, applying minimum pressure to drill out timer plate cover rivets. Applying too much pressure will damage cam position sensor and/or timer plate and cover.

NOTES

- It is not necessary to remove the spark plug to determine TDC compression stroke of the front cylinder in the following procedure.
 - Do not remove the timing inspection cover to check the static timing. If timing must be corrected, the inspection plate will then be removed.
1. Raise rear wheel using a lift or jacking point. Tie down motorcycle for additional support.
 2. Remove timing inspection plug.
 3. Place transmission in 5th gear.
 4. Raise sidestand.

NOTE

Sidestand must be raised to enable the starter interlock system.

5. Connect Digital Technician to data port on motorcycle and select the Static Timing procedure screen.
6. Turn on ignition and move handlebar stop switch to the run position. Listen for fuel pump cycling to confirm ignition is active.
7. Turn or gently bump the flywheel in a forward direction using the rear wheel. Position the flywheel TDC mark at the very left edge of the inspection hole.
8. If the engine is coming up on the compression stroke for the FRONT (correct) cylinder, the screen will be displaying LOW - 0 volts with timing mark at left edge of window.
9. Gently bump flywheel forward in tiny increments.
10. See [Figure 1-48](#). If the static timing is correct, the screen will switch to HIGH - 5 volts at the precise moment the timing mark exactly centers in the inspection window.

11. If engine is coming up on the compression stroke for the REAR (incorrect) cylinder, the screen will be displaying HIGH - 5 volts as timing mark is just coming into view at left edge of window and will switch to LOW - 0 volts at same point as the timing mark continues through the window. (If this is observed, turn flywheel forward one revolution to bring engine to compression stroke for front cylinder.)

NOTES

- If timing mark check point is overshot, bump flywheel backwards till TDC mark is at left edge of inspection window and repeat test bumping flywheel in forward (normal) direction.
 - Never confirm timing while bumping flywheel backwards. This will give you an incorrect reading.
12. If timing is correct, install timing inspection plug and tighten to 120-180 **in-lbs** (14-20 Nm). If timing is not correct, see [ADJUST TIMING](#) in this section.

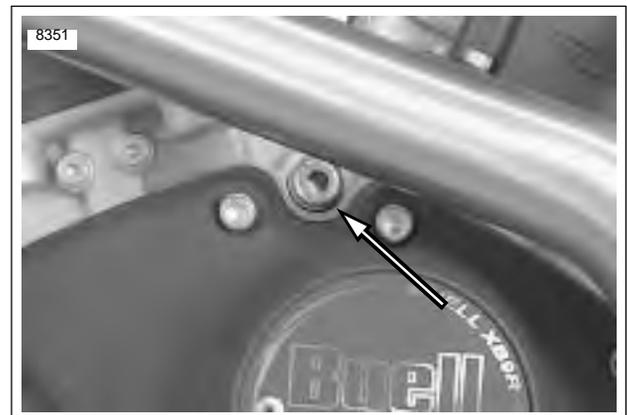


Figure 1-47. Timing Plug

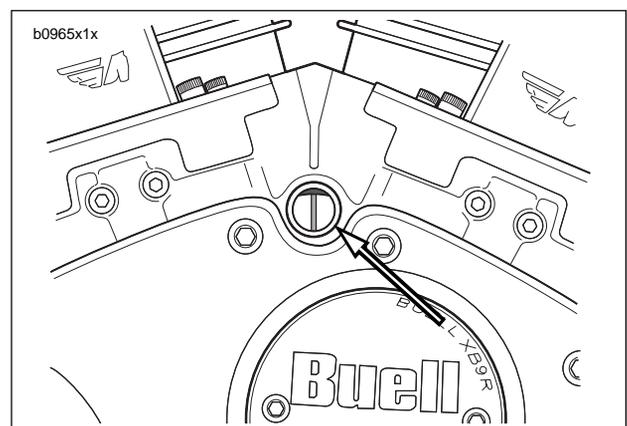


Figure 1-48. Correct Timing

ADJUST TIMING

1. See [Figure 1-48](#). Remove timing plate cover.
 - a. Drill rivets holding the timing plate cover.
 - b. Using a hook, remove timing plate cover.
2. See [Figure 1-51](#). If timing is advanced (mark appears on left side of window) rotate timing plate counterclockwise.
3. Check timing. See [CHECKING STATIC TIMING](#).
4. See [Figure 1-52](#). If timing is retarded (mark appears on right side of window) rotate timing plate clockwise.
5. Recheck timing.

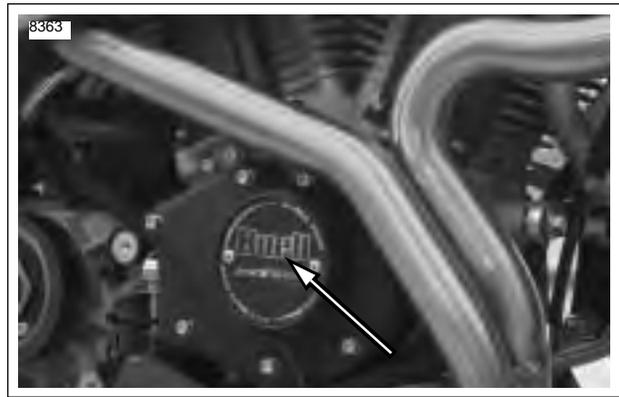


Figure 1-49. Timer Cover

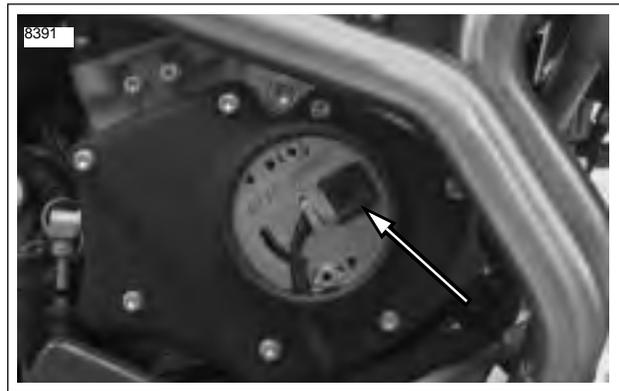


Figure 1-50. Cam Position Sensor

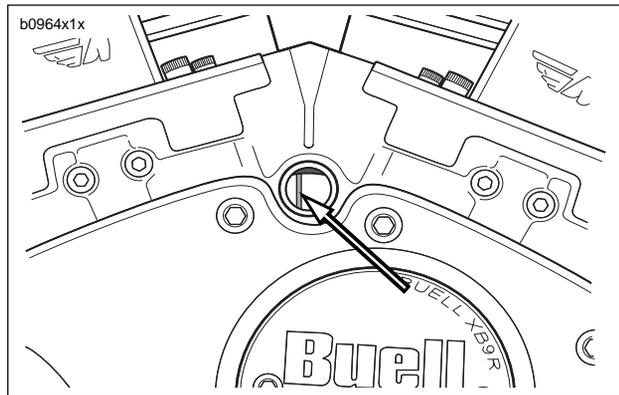


Figure 1-51. Advanced Timing

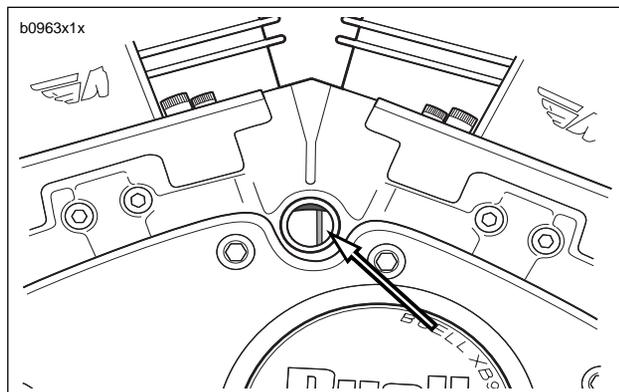


Figure 1-52. Retard Timing

INSPECTION

⚠ WARNING

Do not modify ignition/light switch wiring to circumvent the automatic-on headlight feature. High visibility is an important consideration for motorcycle riders. Failure to have headlight on at all times could cause an accident, resulting in death or serious injury.

Check headlights for proper alignment:

- When the new owner takes delivery of the motorcycle.
 - When there is a change in load (adding luggage, etc.).
1. In a location with low light, draw a horizontal line on a screen or wall that measures 34-36 in. (86-91 cm) above floor.
 2. See [Figure 1-53](#). Position motorcycle 25 ft (7.6 m) away from a screen or wall by measure the distance from the front axle to the screen/wall.
 3. Verify correct front and rear tire pressure. See [1.8 TIRES AND WHEELS](#).
 4. Load vehicle with rider/passenger/cargo/accessories. Weight will compress vehicle suspension slightly.
 5. Stand motorcycle upright with front fairing aimed straight forward.
 6. Check LOW beam (right lens) for alignment.
 - a. See [Figure 1-54](#). Turn ignition switch to IGN. Set handlebar headlamp switch to LOW beam position.
 - b. Turn engine stop switch to the run position.
 - c. Check that the correct pattern of light is a double rectangular pattern and is aligned with the horizontal line as shown in [Figure 1-53](#).
 - d. Adjust headlight alignment. See [ADJUSTMENT](#) which follows.
 7. Check HIGH beam (left lens) for alignment.
 - a. See [Figure 1-54](#). Set handlebar headlamp switch to HIGH beam position.

NOTE

Low beam lamp will stay illuminated.

- b. Check that the correct pattern of light is a circular pattern and is centered on the horizontal line as shown in [Figure 1-53](#).
- c. Adjust headlamp alignment. See [ADJUSTMENT](#) section.


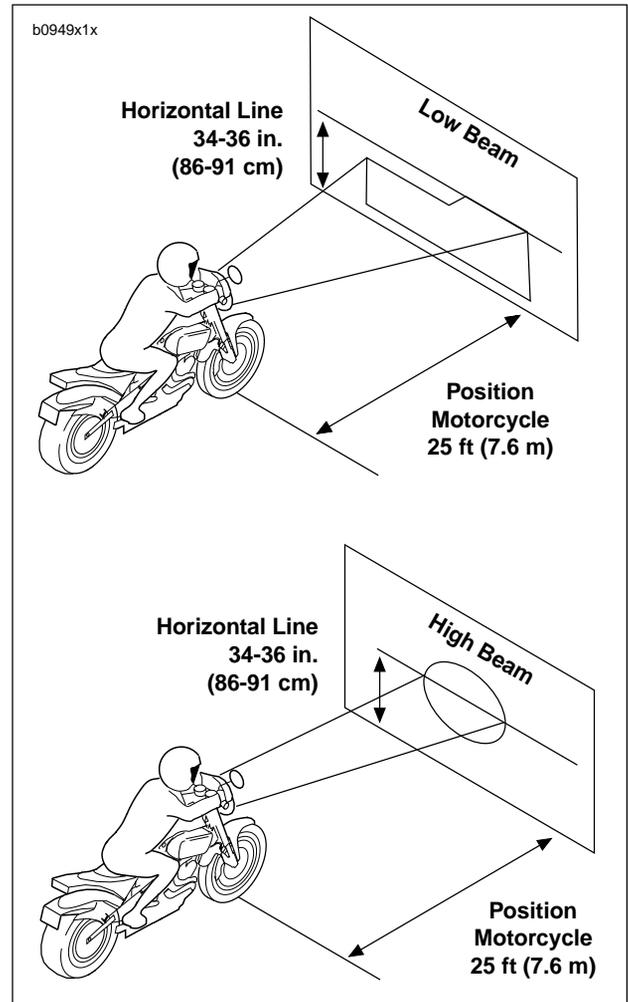


Figure 1-53. Checking Headlight Alignment

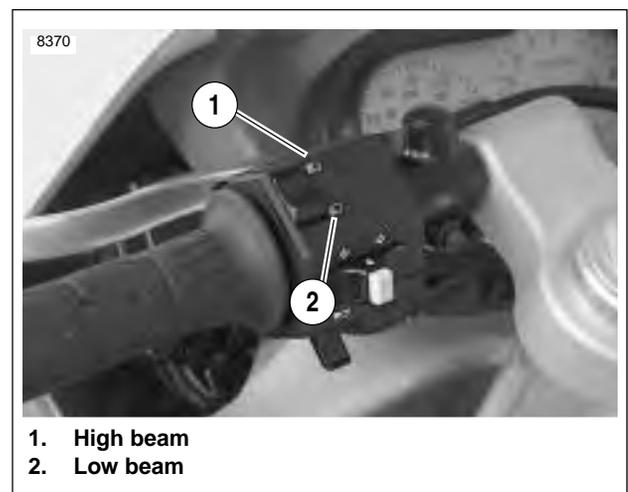

1. High beam
2. Low beam

Figure 1-54. Headlamp Switch

ADJUSTMENT


HIGH beam and LOW beam have independent adjuster screws.

See [Figure 1-55](#). The HIGH Beam adjuster (1) is on the left and the LOW Beam adjuster (2) is on the right underneath the front fairing.

If headlamp requires adjustment, perform the following:

NOTE

- *To lower beam, turn adjuster clockwise.*
- *To raise beam, turn adjuster counterclockwise.*

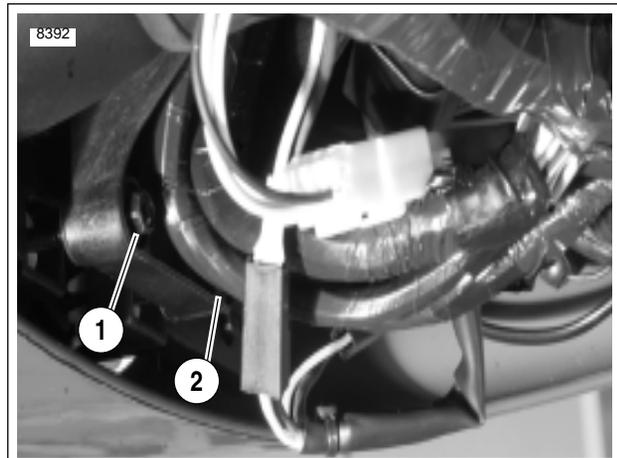

1. High beam adjuster (left)
2. Low beam adjuster (right)

Figure 1-55. Headlamp Height Adjustment

INSPECTION

1. Connect vehicle to Digital Technician.
2. Select data monitor screen.
3. Select TP degrees on screen.
4. Ignition and run switch should be in the on position with engine off and throttle in the closed position.

NOTE

If closed throttle TP degree reading is not between 5.1° - 6.2°, TPS should be recalibrated. See *ADJUSTMENT* below.



Figure 1-56. Idle Adjuster (behind left fork)

ADJUSTMENT

1. Connect vehicle to Digital Technician.
2. Select calibrations screen/TPS Function.
3. Select Buell TPS zero tab.
4. Select TP volts on screen.
5. See [Figure 1-56](#). Back off idle adjustment until TP volts stop decreasing and then continue to back out one full turn.
6. Open and **snap shut** throttle control grip 2-3 times.

NOTE

This is to ensure that the throttle plate is completely closed before beginning recalibration.

7. With ignition and run switch in the on position with engine off and throttle in the closed position press the TPS zero button at the bottom of the screen.
8. Select TPS zero button and perform TPS zero.

NOTE

When calibration is complete, dialogue box will appear on Digital Tech screen with message display "Command Sent Successfully". Press OK.

9. Turn idle adjustment cable screw clockwise until TPS degrees read 5.2-5.6 degrees.
10. Run vehicle until engine temperature is at 285 °F (140° C).
11. Set idle to 1050-1150 RPM.

GENERAL

WARNING

Gasoline is flammable. Do not store motorcycle having gasoline in tank within the home or garage where open flames, pilot lights, sparks or electric motors are present. Inadequate safety precautions may cause an accident which could result in death or serious injury.

If the motorcycle will not be operated for several months, such as during the winter season, there are several things which should be done to protect parts against corrosion, to preserve the battery and to prevent the buildup of gum and varnish in the fuel system.

1. Fill fuel tank and add a gasoline stabilizer. Use one of the commercially available gasoline stabilizers following the manufacturer's instructions. Run engine until treated gasoline has had a chance to reach fuel injectors.
2. Remove battery and charge as needed to maintain the correct voltage. See [1.5 BATTERY MAINTENANCE](#).
3. Remove the spark plugs, inject a few squirts of engine oil into each cylinder and crank the engine 5-6 revolutions. Reinstall spark plugs. See [1.14 SPARK PLUGS](#).
4. Adjust primary chain. See [1.11 PRIMARY CHAIN](#).
5. Check tire inflation. See [1.8 TIRES AND WHEELS](#). If the motorcycle will be stored for an extended period of time, securely support the motorcycle so that all weight is off the tires.

WARNING

Do not apply any oil to brake rotors or brake pads. Oil on brake pads degrades braking efficiency and can result in an accident which could result in death or serious injury.

6. Wash molded-in-color and chrome-plated surfaces. Apply a light film of oil to exposed uncoated metal surfaces.
7. If motorcycle is to be covered, use a material that will breathe, such as light canvas. Plastic materials that do not breathe promote the formation of condensation.

REMOVAL FROM STORAGE

WARNING

After extended periods of storage and prior to starting vehicle, place transmission in gear, disengage clutch and push vehicle back and forth a few times to ensure proper clutch disengagement. Improper clutch disengagement could result in death or serious injury.

1. Charge and install battery. See [1.5 BATTERY MAINTENANCE](#).
2. Remove and inspect spark plugs. Replace if necessary. See [1.14 SPARK PLUGS](#).
3. Inspect air filter element. Replace if necessary. See [1.15 AIR CLEANER FILTER](#).
4. If fuel tank was drained, fill fuel tank with fresh gasoline.
5. Start the engine and run until it reaches normal operating temperature. Check fluids and refill to proper levels if required.
 - a. Check engine oil level. See [1.6 ENGINE LUBRICATION SYSTEM](#).
 - b. Check transmission fluid level. See [1.9 CLUTCH](#).
6. Perform all of the checks in the PRE-RIDING CHECK LIST in the Owner's Manual.

GENERAL

The following check list can be helpful in locating most operating troubles. Refer to the appropriate sections in this Service Manual for detailed procedures.

ENGINE

Starter Motor Does Not Operate or Does Not Turn Engine Over

1. Engine stop switch in OFF position.
2. Ignition key switch not ON.
3. Discharged battery or loose or corroded connections. (Solenoid chatters.)
4. Starter control relay or solenoid not functioning.
5. Electric starter shaft pinion gear not engaging or over-running clutch slipping.
6. Clutch lever not pulled in. Vehicle in gear.
7. Starter interlock circuit malfunction.

Engine Turns Over But Does Not Start

NOTE

See [4.11 ENGINE CRANKS BUT WILL NOT START](#) for specific tests.

1. Fuel tank empty.
2. Discharged battery, loose or broken battery terminal connections.
3. Fouled spark plugs.
4. Loose or shorting spark plug cables or connections.
5. Ignition timing badly out of adjustment.
6. Loose wire connection at coil or battery connection or plug between ignition sensor and module. See Section 4.
7. Ignition coil not functioning.
8. Ignition module not functioning.
9. Ignition sensor not functioning.
10. Sticking or damaged valve or valves.
11. Engine oil too heavy (winter operation).
12. Ignition circuit interlock malfunction.
13. No output from the ECM. See dealer.
14. Inadequate fuel pressure in fuel lines (possible leak). See dealer.
15. Clogged fuel filter. See dealer.
16. Clogged fuel injectors. See dealer.
17. Tripped bank angle sensor. Turn key to OFF, wait 15 seconds, and then back to IGN again to start bike.
18. TP Sensor/fast idle screw not set properly. See dealer.
19. No output from CMP sensor. See dealer.
20. Inoperative fuel pump. See dealer.

Starts Hard

1. Spark plugs in bad condition, have improper gap or are partially fouled.
2. Spark plug cables in bad condition and shorting.
3. Battery nearly discharged.
4. Loose wire connection at one of the battery terminals, at coil or at plug between ignition sensor and module.
5. Throttle controls not adjusted correctly.
6. Ignition coil not functioning.
7. Engine oil too heavy (winter operation).
8. Ignition not timed properly. See dealer.
9. Vapor vent valve plugged or fuel line closed off restricting fuel flow.
10. Water or dirt in fuel system.
11. Air leak at intake manifold.
12. Valves sticking.
13. TP Sensor and/or fast idle screw not set properly. See dealer.
14. Oxygen, IAT or ET sensors damaged or malfunctioning. See dealer.

Starts But Runs Irregularly or Misses

NOTE

See [4.15 MISFIRE](#) for specific tests.

1. Spark plugs in bad condition or partially fouled.
2. Spark plug cables in bad condition and shorting.
3. Spark plug gap too close or too wide.
4. Ignition coil not functioning.
5. Ignition module not functioning.
6. Ignition sensor not functioning.
7. Battery nearly discharged.
8. Damaged wire or loose connection at battery terminals or coil.
9. Intermittent short circuit due to damaged wire insulation.
10. Water or dirt in fuel system and throttle body or filter.
11. Vapor vent valve plugged.
12. Throttle controls improperly adjusted.
13. Air leak at intake manifold or air filter.
14. Damaged intake or exhaust valve.
15. Weak or broken valve springs.
16. Incorrect valve timing.
17. Oxygen, IAT or ET sensors damaged or malfunctioning. See dealer.
18. TP Sensor not set properly. See dealer.
19. Fuel level too low. Add gasoline.
20. Inoperative fuel injector. See dealer.
21. Obstructed fuel tank vent valve or pinched vent tube. See dealer.

Spark Plug Fouls Repeatedly

1. Incorrect spark plug.
2. Piston rings badly worn or broken.
3. Valve stem seals worn or damaged.
4. Valve guides badly worn.
5. Sensors damaged.

Pre-Ignition or Detonation (Knocks or Pings)

1. Excessive carbon deposit on piston head or combustion chamber.
2. Incorrect heat range spark plug.
3. Spark plugs not firing.
4. Ignition timing advanced.
5. Fuel octane rating too low.
6. Intake manifold vacuum leak.

Overheating

1. Insufficient oil supply or oil not circulating.
2. Clogged or damaged fins on oil cooler.
3. Cooling fan not operating properly.
4. Leaking valves.
5. Heavy carbon deposit.
6. Ignition timing retarded.

Valve Train Noise

1. Hydraulic lifter not functioning properly.
2. Bent push rod.
3. Cam, cam gears or cam bushings worn.
4. Rocker arm binding on shaft.
5. Valve sticking in guide.

Excessive Vibration

1. Engine tie-bars loose, broken or improperly spaced.
2. Isolator mounting fasteners loose.
3. Broken frame.
4. Primary chain badly worn or links tight as a result of insufficient lubrication.
5. Wheels not aligned and/or tires worn.
6. Internal engine problem.
7. Wheels not balanced correctly.

ENGINE LUBRICATION SYSTEM

Oil Does Not Return To Oil Tank

1. Oil tank empty.
2. Return pump gears damaged.
3. Oil feed pump not functioning.
4. Restricted oil lines or fittings.

Engine Uses Too Much Oil or Smokes Excessively

1. Piston rings badly worn or broken.
2. Valve stem seals worn or damaged.
3. Valve guides worn.

Engine Leaks Oil From Cases, Push Rods, Hoses

1. Loose parts.
2. Imperfect seal at gaskets, push rod cover, washers, etc. To aid locating leaks, use BLACK LIGHT LEAK DETECTOR (Part No. HD-35457).
3. Restricted oil return line to tank.
4. Restricted breather passage(s) to air cleaner.

ELECTRICAL SYSTEM

Alternator Does Not Charge

1. Regulator-rectifier module not functioning.
2. Rectifier not grounded.
3. Engine ground wire loose or broken.
4. Loose or broken wires in charging circuit.
5. Stator not functioning.
6. Rotor not functioning.

Alternator Charge Rate Is Below Normal

1. Regulator-rectifier module not functioning.
2. Stator not functioning.
3. Rotor not functioning.
4. Weak battery.
5. Loose connections.

FUEL SYSTEM

Poor Fuel Economy

1. Oxygen sensor damaged or malfunctioning (bike running rich). See dealer.

TRANSMISSION

Shifts Hard

1. Clutch dragging slightly.
2. Shifter forks (inside transmission) damaged.
3. Corners worn off shifter clutch dogs (inside transmission).

Jumps Out of Gear

1. Shifter pawl improperly adjusted.
2. Shifter engaging parts (inside transmission) badly worn and rounded.
3. Shifter forks bent.
4. Damaged gears.

CLUTCH

Slips

1. Clutch controls improperly adjusted.
2. Worn friction plates.

Drags or Does Not Release

1. Clutch controls improperly adjusted.
2. Clutch plates excessively warped.

Chatters

1. Friction or steel plates worn, warped or dragging.

CHASSIS

Irregular/Inadequate Brake Action

1. Master cylinder low on fluid.
2. Brake line contains air bubbles or moisture.
3. Master or wheel cylinder piston worn.
4. Brake pads covered with grease or oil.
5. Brake pads badly worn to minimum lining thickness.
6. Brake rotor badly worn or warped.
7. Brake pads dragging or excessive braking (brake fades due to heat buildup).
8. Insufficient brake pedal or hand lever free play (brake drags).

Handling Irregularities

1. Tires improperly inflated. See [1.8 TIRES AND WHEELS](#). Do not overinflate.
2. Loose wheel axle. Tighten front axle to 39-41 ft-lbs (53-56 Nm). Tighten rear axle to 48-52 ft-lbs (65-70 Nm).
3. Excessive wheel hub bearing play.
4. Rims and tires out-of-true sideways (tire runout should not be more than 0.080 in. (2.03 mm)).
5. Rims and tires out-of-round or eccentric with hub (tire runout should not be more than 0.060 in. (1.5 mm)).
6. Irregular or peaked front tire tread wear.
7. Tire and wheel unbalanced or weights on wrong side of wheel. (Front wheel weights must be on brake rotor side of wheel.)
8. Steering head bearings improperly tightened or worn. See [1.13 STEERING HEAD BEARINGS](#). Check for proper torque and replace worn bearings. See [2.17 FORK CLAMPS, UPPER AND LOWER](#).
9. Shock absorber or front forks not functioning normally.
10. Heavy front end loading. Non-standard equipment on the front end (such as heavy radio receivers, extra lighting equipment or luggage) tends to cause unstable handling.

SUSPENSION

When making adjustments, remember there are two mediums in setting up a bike, geometry and suspension. Both components work together because suspension is a part of geometry. In order to solve handling problems, it is important to diagnose the problem's true nature.

Chattering, sliding or an uncomfortable feeling are suspension-related. Handling and a swinging fork are geometry-related, but often these unwanted characteristics can be solved by suspension adjustments.

The following tables list possible suspension and operating troubles and their probable causes.

Table 1-10. General Suspension Problems

| TROUBLESHOOTING CONDITION | ADJUSTMENT SOLUTION |
|--|-------------------------------|
| Bike wallows through turns. Feels loose or vague after bumps. Wheel tends to "pogo" after passing over a bump. This is noticeable by watching the bike continue to bounce as it travels over multiple bumps. | Increase rebound damping. |
| Wheel responds to bump, but doesn't return to ground quickly after bumps. This is more pronounced over a series of bumps and is often referred to as "packing down." | Reduce rebound damping. |
| The bike bottoms out or dips while cornering. Bike has excessive brake dive. | Increase compression damping. |
| Harsh ride particularly over washboard surfaces. Bumps kick through handlebars or seat. Suspension seems not to respond to bumps. This is evidenced by tire chattering (a movement with short stroke and high frequency) through corners or by jolting the rider over rough roads. | Reduce compression damping. |

Table 1-11. Rear Suspension Problems

| TROUBLESHOOTING CONDITION | ADJUSTMENT SOLUTION |
|--|---|
| "Pumping on the Rear" occurs when you are accelerating out of a corner. This problem occurs in two varieties. 1. The first type has a movement with a long stroke and a high frequency. 2. The second version has a movement with a short stroke and high frequency. | 1. The shock is too soft. Increase compression damping. If the adjuster is already set to the maximum, add more preload to the spring (one turn maximum). 2. In this case the shock is too hard. Decrease compression damping. |
| Chattering during braking. | Decrease the compression damping. If the problem persists, decrease rebound damping for a faster rebound rate. Less spring preload may also help. |
| Lack of tire feedback. | The suspension is too soft. Increase compression damping. |
| Sliding during cornering. Sliding may occur going into the corner or accelerating out of the corner. | The suspension is too hard. Decrease compression damping. |

Table 1-12. Front Suspension Problems

| TROUBLESHOOTING CONDITION | ADJUSTMENT SOLUTION |
|---------------------------|--|
| Not absorbing bumps. | A good suspension is a balance between damping and track condition. Finding this balance requires exploring all possible compression settings. |
| Lack of tire feedback. | Increase compression damping. |
| Tire slides. | Decrease compression damping. |

| SUBJECT | PAGE NO. |
|---|-----------------|
| 2.1 Specifications | 2-1 |
| 2.2 Tire Specifications | 2-5 |
| 2.3 Vehicle Identification Number | 2-6 |
| 2.4 Wheels | 2-7 |
| 2.5 Front Wheel | 2-9 |
| 2.6 Rear Wheel | 2-16 |
| 2.7 Checking Cast Rim Runout | 2-20 |
| 2.8 Tires | 2-21 |
| 2.9 Brake Pedal | 2-25 |
| 2.10 Front Brake Master Cylinder | 2-26 |
| 2.11 Front Brake Line | 2-30 |
| 2.12 Front Brake Caliper | 2-32 |
| 2.13 Rear Brake Master Cylinder | 2-35 |
| 2.14 Rear Brake Line | 2-39 |
| 2.15 Rear Brake Caliper | 2-41 |
| 2.16 Front Fork | 2-44 |
| 2.17 Fork Clamps, Upper and Lower | 2-53 |
| 2.18 Steering Head Bearings | 2-55 |
| 2.19 Swingarm and Brace | 2-57 |
| 2.20 Front and Rear Isolator | 2-61 |
| 2.21 Frame | 2-62 |
| 2.22 Rear Shock Absorber | 2-63 |
| 2.23 Throttle Control | 2-65 |
| 2.24 Clutch Hand Lever | 2-66 |
| 2.25 Headlight Assembly and Support Bracket | 2-67 |
| 2.26 Fairing Support Bracket | 2-70 |
| 2.27 Handlebars | 2-72 |
| 2.28 Exhaust System | 2-74 |
| 2.29 Footpeg, Heel Guard, and Mount | 2-76 |
| 2.30 Sprocket Cover | 2-78 |
| 2.31 Fenders | 2-79 |
| 2.32 Belt Guards | 2-80 |
| 2.33 Chin Fairing | 2-82 |
| 2.34 Intake Cover Assembly | 2-83 |
| 2.35 Air Scoops | 2-84 |
| 2.36 Subframe Tail Assembly and Body Work | 2-85 |
| 2.37 Front Fairing, Windshield, and Mirrors | 2-89 |
| 2.38 Seat | 2-90 |
| 2.39 Passenger Seat Lock | 2-91 |
| 2.40 Sidestand | 2-92 |

Table 2-1. Dimensions

| DIMENSIONS | IN. | MM |
|--------------------------|------------|--------|
| Wheel base | 52.0 | 1320.8 |
| Seat height (XB9R/XB12R) | 31.9 | 810.3 |
| Ground clearance | 4.35 | 110.0 |
| Trail | 3.3 | 83.8 |
| Rake | 21 Degrees | |

Table 2-2. Weight Specifications (XB12R)

| WEIGHT-U.S. MODELS | LBS. | KG |
|--------------------|------|-----|
| Wet weight | 460 | 204 |
| GVWR | 850 | 386 |
| GAWR - front | 325 | 147 |
| GAWR - rear | 525 | 238 |
| Load capacity | 400 | 181 |

Table 2-3. Weight Specifications (XB9R)

| WEIGHT-U.S. MODELS | LBS. | KG |
|--------------------|------|-----|
| Wet weight | 450 | 204 |
| GVWR | 850 | 386 |
| GAWR - front | 325 | 147 |
| GAWR - rear | 525 | 238 |
| Load capacity | 400 | 181 |

NOTE

Gross Vehicle Weight Rating (GVWR) (maximum allowable loaded vehicle weight) and corresponding Gross Axle Weight Ratings (GAWR) are given on an information decal located on the steering head.

Table 2-4. Capacities

| CAPACITIES | U.S. | LITERS |
|---|-------------|--------|
| Fuel tank (inc. reserve) | 3.7 gallons | 14.0 |
| Reserve/Low fuel light at | 0.7 gallons | 2.6 |
| Oil tank (wet - for normal oil change) | 2.5 quarts | 2.4 |
| Fork oil | 14 ounces | 0.41 |
| Transmission | 1.0 quart | 0.95 |

Table 2-5. Tire and Positions

| TIRE AND POSITION | SOLO RIDING | GVWR |
|--|---------------------|-----------------|
| Front Dunlop Sportmax Radial II 120/70 ZR 17 D207FY | 36 PSI (248 kPa) | Same as Solo |
| Rear Dunlop Sportmax Radial II 180/55 ZR 17 D207U | 38 PSI (262 kPa) | |

Table 2-6. Brake Rotor Runout

| RUNOUT | IN. | MM |
|---------------|--------|------|
| Front radial | 0.0177 | 0.45 |
| Front lateral | 0.0248 | 0.63 |
| Rear radial | 0.0177 | 0.45 |
| Rear lateral | 0.0154 | 0.39 |

 **WARNING**

Do not inflate any tire beyond its maximum inflation pressure as specified on tire sidewall. Overinflation may cause tire to suddenly deflate which could result in death or serious injury.

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|---------------------------------------|-----------------------|--------------|--|
| | | | |
| Airbox cover fasteners | 12-36 in-lbs | 1-4 Nm | page 2-81 |
| Airhorn fastener | 72-96 in-lbs | 8-10 Nm | page 2-68 |
| Axle pinch fastener, rear | 40-45 ft-lbs | 54-61 Nm | page 2-17 |
| Axle pinch fasteners, front | 20-22 ft-lbs | 27-30 Nm | page 2-15 |
| Axle, front | 39-41 ft-lbs | 53-56 Nm | ANTI-SEIZE, Left handed thread, page 2-8 |
| Axle, rear | 48-52 ft-lbs | 65.1-70.5 Nm | ANTI-SEIZE, Follow special instructions, page 2-17 |
| Bank angle sensor | 12-36 in-lbs | 1-4 Nm | page 2-66 |
| Brake hand lever housing fasteners | 80-90 in-lbs | 9-10 Nm | page 2-28 |
| Brake lamp switch fastener, front | 7-10 in-lbs | 0.8-1.0 Nm | page 2-28 |
| Brake line p-clamp fastener, front | 36-60 in-lbs | 4-7 Nm | page 2-30 |
| Brake line p-clamp fastener, rear | 36-60 in-lbs | 4-7 Nm | page 2-39 |
| Brake pedal fastener | 22-24 ft-lbs | 30-33 Nm | LOCTITE 272, page 2-24 |
| Brake pin hanger set, front | 11-14 ft-lbs | 15-19 Nm | page 2-32 |
| Brake pin hanger set, rear | 11-14 ft-lbs | 15-20 Nm | page 2-41 |
| Brake pin plug, rear | 22-26 in-lbs | 2-3 Nm | page 2-41 |
| Brake reservoir fastener, rear | 96-120 in-lbs | 11-14 Nm | page 2-85 |
| Caliper banjo bolt, front | 16-20 ft-lbs | 22-27 Nm | metric, page 2-30 |
| Caliper banjo bolt, rear | 16-20 ft-lbs | 22-27 Nm | page 2-39 |
| Caliper bleeder valves | 36-60 in-lbs | 4-7 Nm | metric, page 2-25 |
| Caliper carrier, rear | 24-26 ft-lbs | 32-35 Nm | page 2-17 |
| Caliper fasteners, front | 15-19 ft-lbs | 20-26 Nm | page 2-32 |
| Caliper mounting fasteners, front | 35-37 ft-lbs | 47-50 Nm | page 2-32 |
| Caliper mounting large fastener, rear | 18-21 ft-lbs | 24-28 Nm | page 2-42 |
| Caliper mounting small fastener, rear | 14-18 ft-lbs | 19-24 Nm | page 2-42 |
| Chin fairing fasteners | 36-48 in-lbs | 4-5 Nm | page 2-80 |
| Clutch cable p-clamp | 12-36 in-lbs | 1-4 Nm | page 2-59 |
| Clutch lever clamp pinch fastener | 36-60 in-lbs | 4-7 Nm | page 2-64 |
| Clutch lever pivot fastener | 39-48 in-lbs | 4-5 Nm | page 2-64 |
| Electronic control module fasteners | 72-96 in-lbs | 8-11 Nm | page 2-67 |
| Engine shroud air scoop | 12-36 in-lbs | 1-4 Nm | page 2-82 |
| Exhaust header mounting nut | 72-96 in-lbs | 8-11 Nm | page 2-73 |
| Fairing support bracket fastener | 16-18 ft-lbs | 22-26 Nm | page 2-68 |
| Flasher fastener | 30-40 in-lbs | 3-5 Nm | page 2-66 |
| Footpeg mount fasteners, rider | 108-132 in-lbs | 12-15 Nm | page 2-74 |
| Footpeg mount, passenger | 25-28 ft-lbs | 34-38 Nm | LOCTITE 272 (red), page 2-75 |
| Fork cap | 22-30 ft-lbs | 30-40 Nm | page 2-49 |
| Fork center bolt | 22-30 ft-lbs | 30-40 Nm | page 2-48 |
| Fork clamp, lower | 13-15 ft-lbs | 18-20 Nm | LOCTITE 272 (red), page 2-50 |
| Fork clamp, upper | 17-19 ft-lbs | 23-26 Nm | LOCTITE 272 (red), page 2-52 |
| Fork damper locknut | 22-30 ft-lbs | 30-40 Nm | page 2-48 |
| Front fender fasteners | 12-36 in-lbs | 1-4 Nm | page 2-77 |
| Front isolator bolt | 49-51 ft-lbs | 66-69 Nm | page 2-59 |

| ITEM | TORQUE | | NOTES |
|--|-----------------------|--------------|-------------------------------------|
| | | | |
| Front isolator bracket mounting fastener | 49-51 ft-lbs | 66-69 Nm | page 2-59 |
| Front isolator snubber, upper | 12-36 in-lbs | 1-4 Nm | page 2-59 |
| Front isolator threaded frame insert | 49-51 ft-lbs | 66.4-69.1 Nm | LOCTITE 222 (purple), page 2-59 |
| Fuse block and relay fasteners | 72-96 in-lbs | 8-11 Nm | page 2-68 |
| Hand lever pivot fastener | 60-120 in-lbs | 9-14 Nm | page 2-27 |
| Handlebar clipon fastener, left | 24-26 ft-lbs | 33-35 Nm | LOCTITE 272 (red), page 2-70 |
| Handlebar clipon fastener, right | 24-26 ft-lbs | 33-35 Nm | LOCTITE 272 (red), page 2-70 |
| Headlight fasteners | 20-25 in-lbs | 2.3-2.8 Nm | page 2-66 |
| Headlight support bracket pivot fasteners | 72-96 in-lbs | 8-11 Nm | page 2-67 |
| Heel guard fasteners, passenger | 48-72 in-lbs | 5-8 Nm | page 2-75 |
| Heel guard fasteners, rider | 72-96 in-lbs | 8-11 Nm | page 2-74 |
| License plate fasteners | 36-48 in-lbs | 4-5 Nm | page 2-86 |
| Main battery ground fastener | 72-96 in-lbs | 8-11 Nm | page 2-85 |
| Master cylinder banjo bolt, front | 16-20 ft-lbs | 22-27 Nm | page 2-30 |
| Master cylinder banjo bolt, rear | 16-20 ft-lbs | 22-27 Nm | page 2-39 |
| Master cylinder cover fasteners, front | 9-13 in-lbs | 1.0-1.5 Nm | page 2-28 |
| Master cylinder mounting fasteners, rear | 72-96 in-lbs | 8-11 Nm | page 2-37 |
| Mirror fasteners | 72-96 in-lbs | (8-11 Nm) | page 2-87 |
| Muffler mounting block fastener, front | 16-18 ft-lbs | 21.7-24.4 Nm | page 2-73 |
| Muffler mounting block fastener, rear | 32-36 ft-lbs | 43-49 Nm | page 2-73 |
| Muffler strap fastener, front | 108-120 in-lbs | 12-14 Nm | page 2-73 |
| Muffler strap fastener, rear | 48-60 in-lbs | 5-7 Nm | page 2-73 |
| Oil cooler air scoop | 120-144 in-lbs | 14-16 Nm | page 2-82 |
| Oil drain plug | 29-31 ft-lbs | 39-42 Nm | page 2-57 |
| Oil line fittings | 29-31 ft-lbs | 39-42 Nm | page 2-57 |
| Passenger seat latch | 60-96 in-lbs | 7-11 Nm | page 2-86 |
| Pivot shaft pinch bolt | 17-19 ft-lbs | 23-26 Nm | page 2-58 |
| Ram air scoop | 12-36 in-lbs | 1-4 Nm | page 2-82 |
| Rear fender fastener | 12-36 ft-lbs | 1-4 Nm | page 2-77 |
| Rear remote master cylinder reservoir fastener | 48-72 in-lbs | 11-14 Nm | page 2-37 |
| Rotor mounting fasteners, front | 25-27 ft-lbs | 34-37 Nm | metric, Replace with new, page 2-14 |
| Rotor mounting fasteners, rear | 25-27 ft-lbs | 34-37 Nm | metric, Replace with new, page 2-17 |
| Safety interlock fastener | 7-10 in-lbs | 0.8-1.1 Nm | page 2-64 |
| Seat fasteners | 12-36 in-lbs | 1-4 Nm | page 2-88 |
| Shock mounting fastener, lower | 15-17 ft-lbs | 20.3-23 Nm | page 2-62 |
| Shock mounting fastener, upper | 49-51 ft-lbs | 66-69 Nm | page 2-62 |
| Shock reservoir clamp, rear | 120-144 in-lbs | 14-16 Nm | page 2-85 |
| Sidestand bracket fasteners | 25-27 ft-lbs | 34-37 Nm | page 2-91 |
| Sidestand pivot bolt | 18-20 ft-lbs | 24-27 Nm | page 2-91 |
| Sidestand switch fastener | 36-60 in-lbs | 4-7 Nm | page 2-91 |
| Sprocket cover fastener | 12-36 in-lbs | 1-4 Nm | page 2-76 |
| Sprocket fasteners | 35-37 ft-lbs | 48-50 Nm | Replace with new, page 2-17 |

| ITEM | TORQUE | | NOTES |
|-----------------------------------|---------------------|-----------|------------------------------|
| Steering stem cap | 38-42 ft-lbs | 52-57 Nm | page 2-52 |
| Steering stem pinch fastener | 17-19 ft-lbs | 23-26 Nm | LOCTITE 272 (red), page 2-52 |
| Swingarm brace mounting fasteners | 25-27 ft-lbs | 34-37 Nm | page 2-58 |
| Swingarm pivot shaft | 24-26 ft-lbs | 32-35 Nm | page 2-58 |
| Switch housing fasteners, right | 25-33 in-lbs | 3-4 Nm | page 2-63 |
| Tail body work, lower | 36-48 in-lbs | 4-5 Nm | page 2-86 |
| Tail body work, upper | 12-36 in-lbs | 1-4 Nm | page 2-86 |
| Tail frame to frame | 21-23 ft-lbs | 28-31 Nm | LOCTITE 272 (red), page 2-85 |
| Torca clamp | 40-45 ft-lbs | 54-61 Nm | page 2-73 |
| Valve stem nut | 40-44 in-lbs | 4-5 Nm | page 2-21 |
| Wear Peg, rider | 36-48 in-lbs | 4.1-5.4 m | page 2-74 |

GENERAL

⚠ WARNING

Tires must be correctly matched to wheel rims. Only the tires listed in the fitment tables below can be used for replacement. Mismatching tires and rims can cause damage to the tire bead during mounting. Using tires other than those specified can adversely affect motorcycle handling and could result in death or serious injury.

See [Figure 2-1](#). Tire sizes are molded on the sidewall. Rim size and contour are marked on the rim's exterior surface.

Example: **MT 3.5 x 17.0 DOT**

- **MT** designates the rim contour.
- **3.5** is the width of the bead seat measured in inches.
- **17.0** is the normal diameter of the rim in inches, measured at the bead seat diameter.
- **DOT** means that the rim meets Department of Transportation Federal Motor Vehicle Safety Standards. See [Table 2-7](#).

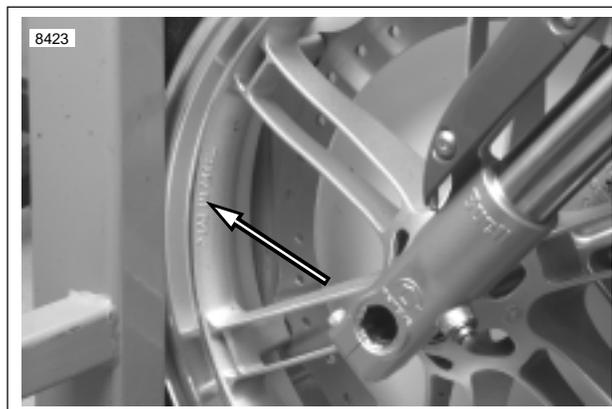


Figure 2-1. Rim Markings

Table 2-7. Tire Fitment-Tubeless Cast Wheels

| WHEEL SIZE & POSITION | CONTOUR & RIM SIZE | RIM VALVE HOLE DIAMETER | DUNLOP SPORTMAX RADIAL II TIRE SIZE |
|-----------------------|--------------------|-------------------------|-------------------------------------|
| 17 in. – Front | MT 3.5 x 17.0 DOT | 0.33 in. | 120/70 ZR17 D207FY |
| 17 in. – Rear | MT 5.5 x 17.0 DOT | 0.33 in. | 180/55 ZR17 D207U |

GENERAL

The full 17 digit serial or Vehicle Identification Number (V.I.N.) is stamped on the steering head and on an information decal at the same location.

See Figure 2-2. An abbreviated V.I.N. is stamped on the front left side of the crankcase.

NOTE

See Figure 2-3. Always give the V.I.N. or abbreviated V.I.N. when ordering parts or making inquiries about your Buell motorcycle.

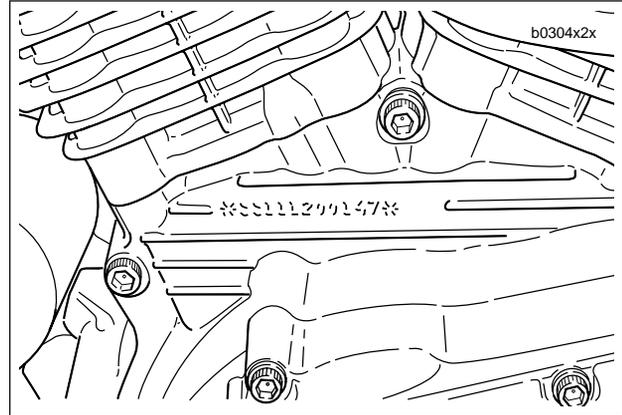


Figure 2-2. Abbreviated V.I.N. Location

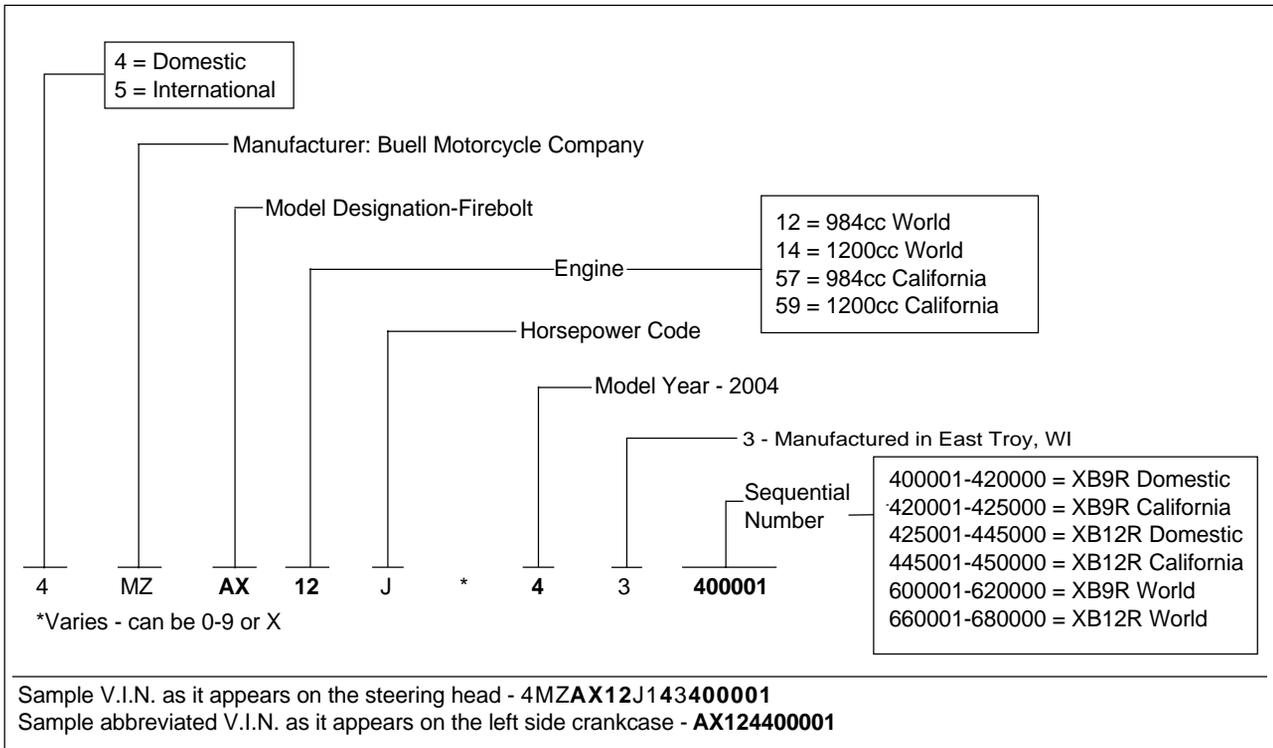


Figure 2-3. Vehicle Identification Number (V.I.N.)

GENERAL

Good handling and maximum tire mileage are directly related to the care of wheels and tires. Regularly inspect wheels and tires for damage and wear. If handling problems occur, see [1.22 TROUBLESHOOTING](#) or [Table 2-8](#).

See [1.8 TIRES AND WHEELS](#) for tire pressures. Keep tires inflated to the recommended air pressure. Always balance the wheel after replacing a tire.

WARNING

Do not inflate any tire beyond its maximum inflation pressure as specified on tire sidewall. Overinflation may cause tire to suddenly deflate which could result in death or serious injury.

TROUBLESHOOTING

See [Figure 2-4](#). Check tire inflation pressure at least once each week. At the same time, inspect tire tread for punctures, cuts, breaks and other damage. Repeat the inspection before long trips.

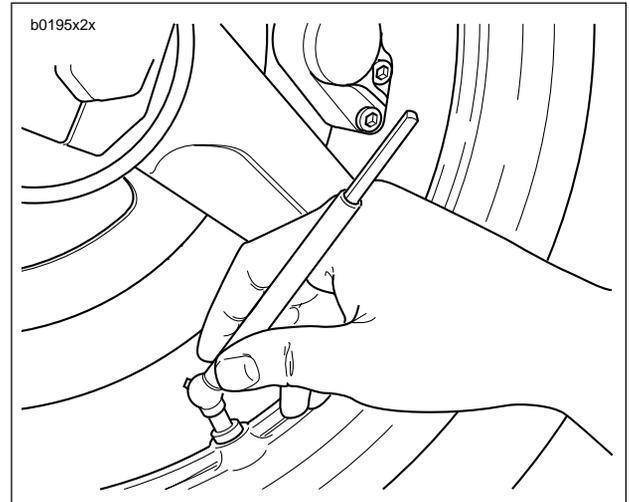


Figure 2-4. Checking Tire Inflation Pressure

Table 2-8. Wheel Service

| CHECK FOR | REMEDY |
|---|---|
| Loose axles. | Tighten front axle. See 2.5 FRONT WHEEL . Tighten rear axle. See 2.6 REAR WHEEL . |
| Excessive side-play or radial (up-and-down) play in wheel hubs. | Replace wheel bearings. |
| Rims and tires out-of-true sideways; should not be more than 0.080 in. (2.03 mm). | Replace rims. See 2.8 TIRES . |
| Rims and tires out-of-round or eccentric with hub; should not be more than 0.090 in. (2.29 mm). | Replace rims. See 2.8 TIRES . |
| Irregular or peaked front tire wear. | Replace as described under 2.5 FRONT WHEEL , 2.6 REAR WHEEL and 2.8 TIRES . |
| Correct tire inflation. | Inflate tires to correct pressure. See 1.8 TIRES AND WHEELS . |
| Correct tire and wheel balance. | Static balance may be satisfactory if dynamic balancing facilities are not available. However, dynamic balancing is strongly recommended. |
| Steering head bearings. | Check for proper torque and replace worn or damaged bearings. See 1.13 STEERING HEAD BEARINGS . |
| Damper tubes. | Check for leaks. See 2.16 FRONT FORK . |
| Shock absorbers. | Check damping action and mounts. See 1.12 SUSPENSION DAMPING ADJUSTMENTS . |
| Swingarm bearings. | Check for proper torque and replace worn or damaged bearings. See 2.19 SWINGARM AND BRACE . |

⚠ WARNING

To prevent death or serious injury, use the following guidelines when installing a new tire or repairing a flat:

1. Always locate and eliminate the cause of the original tire failure.
2. Do not patch or vulcanize a tire casing. These procedures weaken the casing and increase the risk of a blowout.
3. The use of tires other than those specified can adversely affect handling which could result in death or serious injury.
4. Tires and wheels are critical items. Since the servicing of these components requires special tools and skills, Buell recommends that you see your dealer for these services.

⚠ WARNING

Buell recommends replacement of any tire punctured or damaged. In some cases small punctures in the tread area may be repaired from within the demounted tire by your Buell dealer. Speed should not exceed 50 mph (80 km/h) for the first 24 hours after repair and the repaired tire should NEVER be used over 80 mph (129 km/h). In emergency situations, if a temporary repair is made, ride slowly with as light of a load as possible until the tire is permanently repaired or replaced. Failure to follow this warning could result in death or serious injury.

⚠ WARNING

Replace excessively worn tires. Excessively worn tires adversely affect motorcycle traction, steering and handling and could result in death or serious injury.

At regular intervals of 5000 miles (8000 km) or whenever handling irregularities are noted, perform the recommended service checks. See [Table 2-8](#).

If tires must be replaced, same as original equipment tires must be used. Other tires may not fit correctly and may be hazardous to use.

REMOVAL

1. Place a scissor jack under jacking point and raise front wheel off ground. For location of jacking point see [Figure 2-104](#).

NOTE

Do not operate front brake lever with front wheel removed or caliper pistons may be forced out. Reseating pistons requires caliper disassembly.

2. Remove the right side fender fasteners. See [2.31 FENDERS](#).
3. See [Figure 2-5](#). Loosen front axle pinch fasteners (2) (metric) on front fork.
4. Remove axle (1).

NOTE

The front axle is left handed thread.

CAUTION

To prevent cosmetic damage to the wheel, center caliper between spokes before removal.

5. See [Figure 2-6](#). Raise the wheel up until the rotor clears the caliper and rotate the fork leg counterclockwise allowing wheel clearance for removal.
6. Remove wheel.

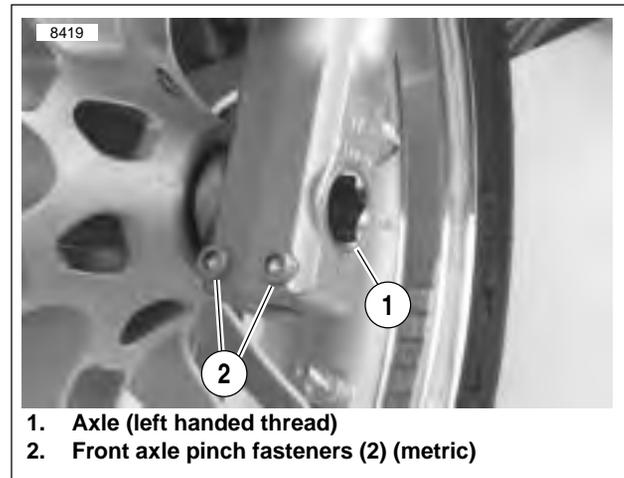


Figure 2-5. Front Wheel Mounting



Figure 2-6. Front Wheel Removal and Installation

DISASSEMBLY

Bearing Removal

NOTE

On single disc wheels, always remove the brake disc side first. If the wheel has two brake discs, remove the left bearing first.

1. See [Figure 2-7](#). Remove wheel bearings using BUSHING AND BEARING PULLER (Part No. B43993-7) and WHEEL BEARING REMOVER AND INSTALLER (Part No. HD-44060).
2. Sparingly apply Extreme Pressure Lubricant (J-23444-A) to the threads of the short forcing screw (1) to prolong service life and ensure smooth operation.

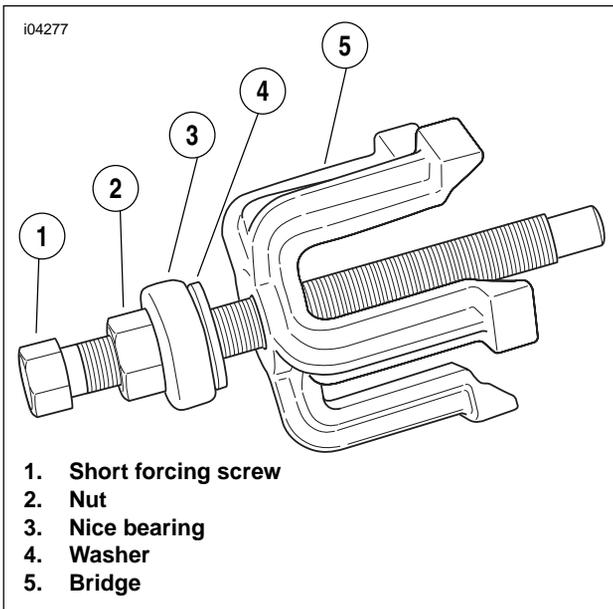


Figure 2-7. Assemble Puller

3. Assemble the short forcing screw (1), nut (2), Nice bearing (3), washer (4) and bridge (5) from the WHEEL BEARING INSTALLER/REMOVER (HD-44060).
4. See [Figure 2-8](#). Insert the FRONT WHEEL BEARING REMOVER COLLET (B-43993-7) into the wheel bearing until it fully seats against the bearing.

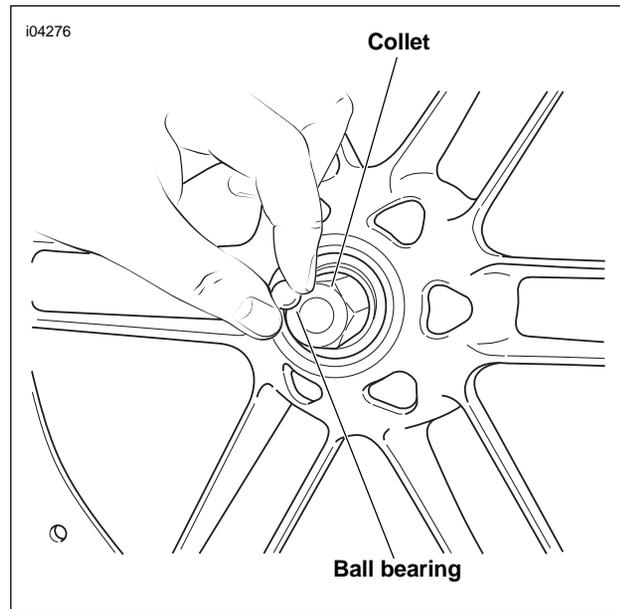


Figure 2-8. Install Collet and Ball Bearing

5. Insert the ball bearing into the collet.
6. See [Figure 2-9](#). Thread the puller assembly (1) into the collet (2).
7. Hold the collet (2), and turn the forcing screw (3) to expand the collet.

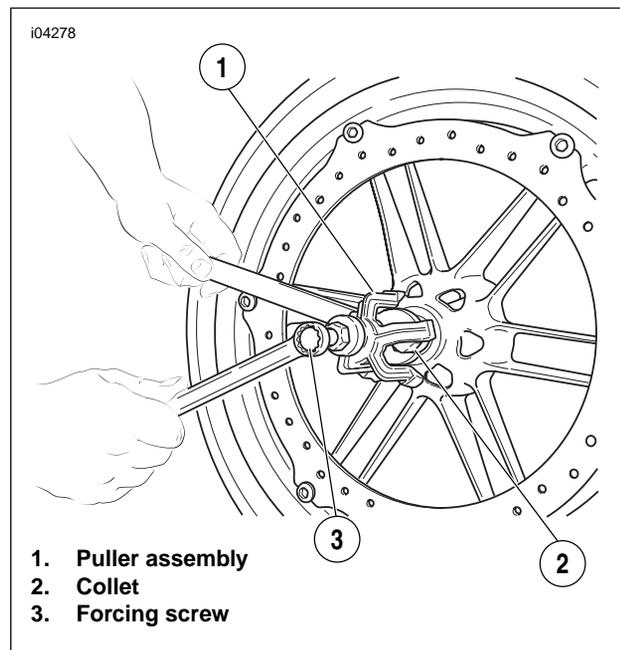


Figure 2-9. Expand the Collet

8. See [Figure 2-10](#). Place the bridge (1) against the wheel hub.
9. Hold the forcing screw (2), and turn the nut (3) clockwise until the bearing is free of the hub.

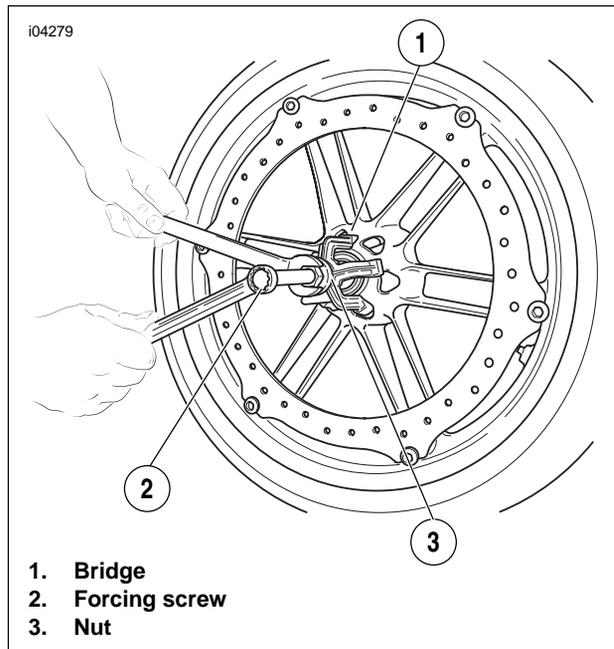


Figure 2-10. Remove the Bearing

10. See Figure 2-11. Loosen the nut (1), and back off the bridge (2). Hold the forcing screw (3) while holding the collet (4) to remove the forcing screw from the collet.
11. Remove the ball bearing (5) and wheel bearing (6) from the collet (4).

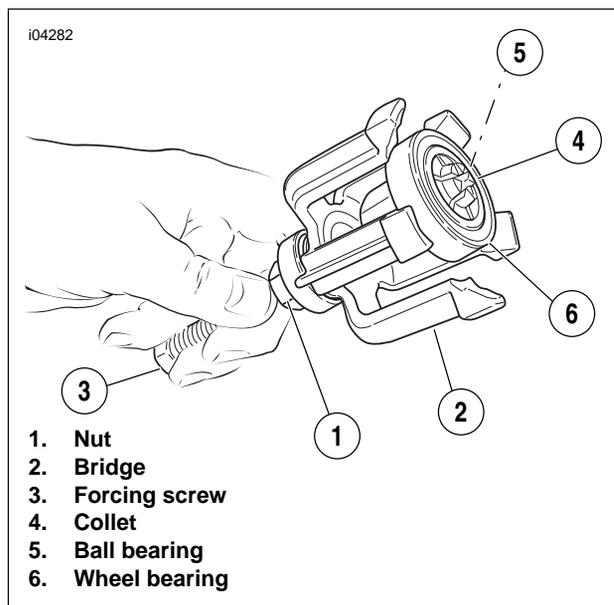


Figure 2-11. Removing Bearing from Puller

12. See Figure 2-12. Remove the spacer.

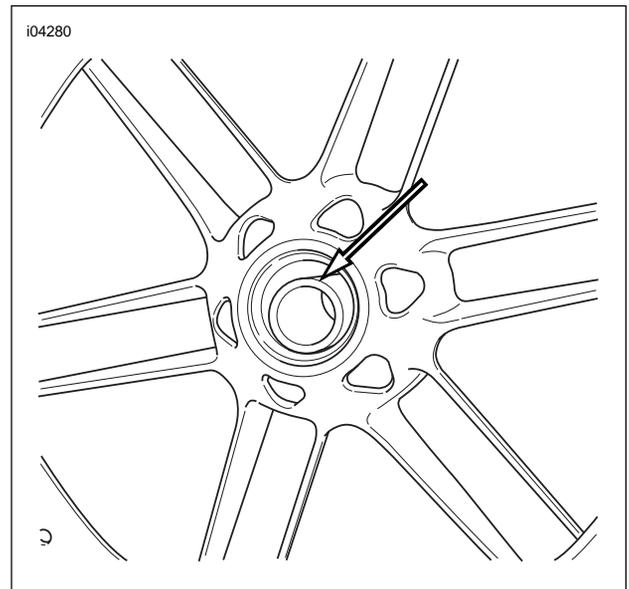


Figure 2-12. Remove the Spacer

13. Repeat Steps 4-12 for the bearing on the other side of the wheel.

Front Rotor Removal

1. See Figure 2-18. Remove and discard rotor mounting fasteners (7).
2. Remove and inspect brake rotor (6) for wear and warping. See 1.8 TIRES AND WHEELS.
3. Remove drive bushings (8) and discard.
4. Remove washers (9) and discard.
5. Remove rotor spring (4) and discard.

CLEANING AND INSPECTION

⚠ WARNING

Never use compressed air to “spin-dry” bearings. Very high bearing speeds can damage unlubricated bearings. Spinning bearings with compressed air can also cause a bearing to fly apart, which could result in death or serious injury.

1. Inspect all parts for damage or excessive wear.

NOTE

XB wheel bearings are designed as sealed bearings which are not intended to be disassembled, serviced or cleaned with solvents.

⚠ WARNING

Always replace brake pads in complete sets for correct brake operation. Never replace just one brake pad. Failure to install brake pads as a set could result in death or serious injury.

2. Inspect brake rotor and pads. See 1.7 BRAKE SYSTEM MAINTENANCE.

ASSEMBLY

1. See [Figure 2-18](#). Install spacer (5).
2. Install **new** wheel bearings (2) into hub using suitable driver. Press on outer race only.

NOTE

Press the rotor side bearings in first ensuring it is seated on the shoulder of the wheel. Followed by pressing the alternate side until it contacts the spacer.

WARNING

Do not allow brake fluid, bearing grease, lubricants, etc. to contact brake rotor or reduced braking ability will occur, which could result in death or serious injury.

Bearing Installation

NOTE

On single disc wheels, always install the brake disc side first. If the wheel has two brake discs, install the left bearing first.

The following procedure describes the bearing installation for the front wheel; the procedure for the rear wheel is the same.

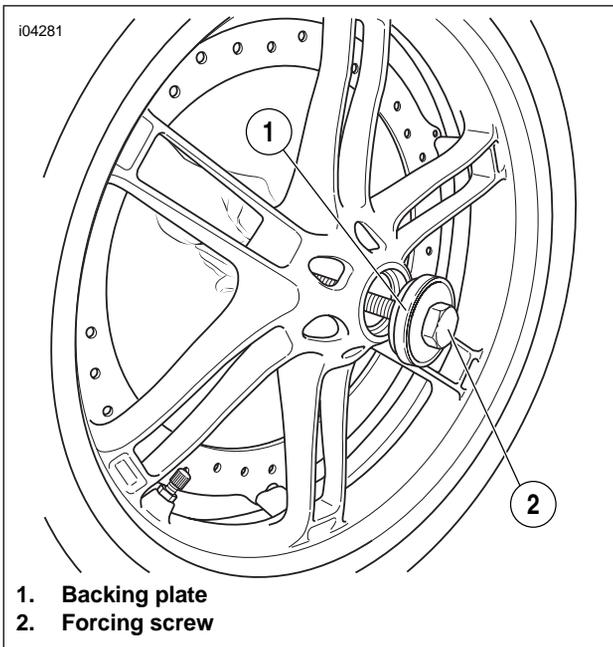


Figure 2-13. Install the Backing Plate (B-43993-11) and Forcing Screw

1. See [Figure 2-13](#). Install the Backing Plate (Part No. B-43993-11) onto the long forcing screw from the Wheel Bearing Installer/Remover (Part No. HD-44060), with the smaller diameter toward the wheel hub. Insert the forcing screw and backing plate into the wheel hub.

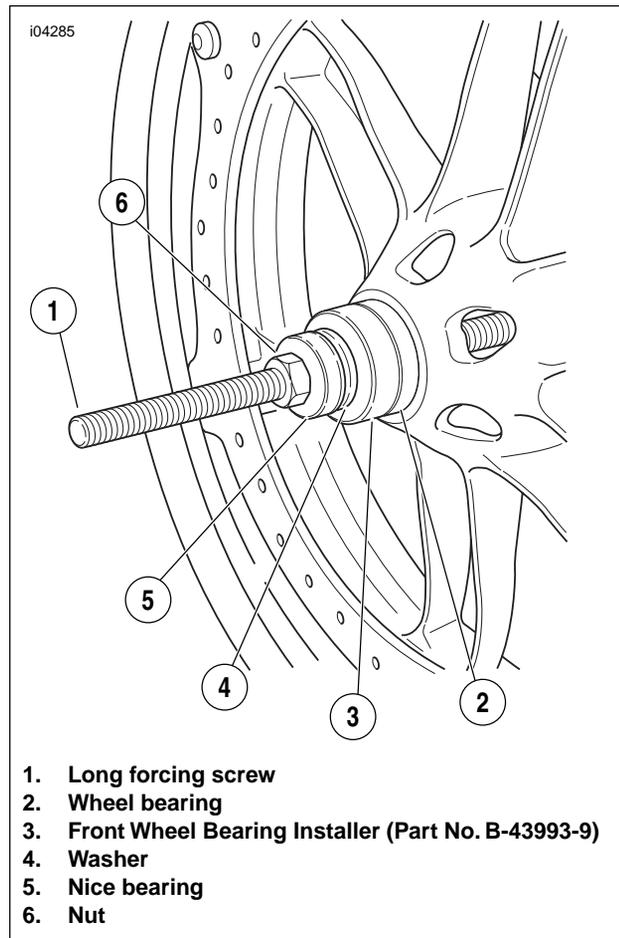


Figure 2-14. Installing Wheel Bearings

2. See [Figure 2-14](#). Sparingly apply EXTREME PRESSURE LUBRICANT (Part No. J-23444-A) to the threads of the long forcing screw (1) to prolong service life and ensure smooth operation.
3. Insert a **new** wheel bearing (2) squarely into the hub, with the lettered side pointing out (away from the wheel).
4. Slide the FRONT BEARING INSTALLER (Part No. B-43993-9, from kit Part No. B-43993-50) (3) onto the forcing screw (1), with the smaller diameter toward the bearing bore.
5. Install a washer (4), Nice bearing (5) and nut (6) onto the forcing screw (1).
6. While holding the forcing screw (1), tighten the nut (6) until the bearing is seated firmly against the shoulder inside the bearing bore in the wheel hub.


NOTE

The bearings in both front and rear wheels, will vary in depth from wheel to wheel. Bearing depth is established when the bearing is seated firmly against the shoulder inside the bearing bore inside the wheel hub.

WARNING

Always install the brake side bearing first with the lettering facing out from the hub.


7. Remove the nut, bearing, washer, FRONT BEARING INSTALLER (Part No. B-43993-9) and forcing screw.

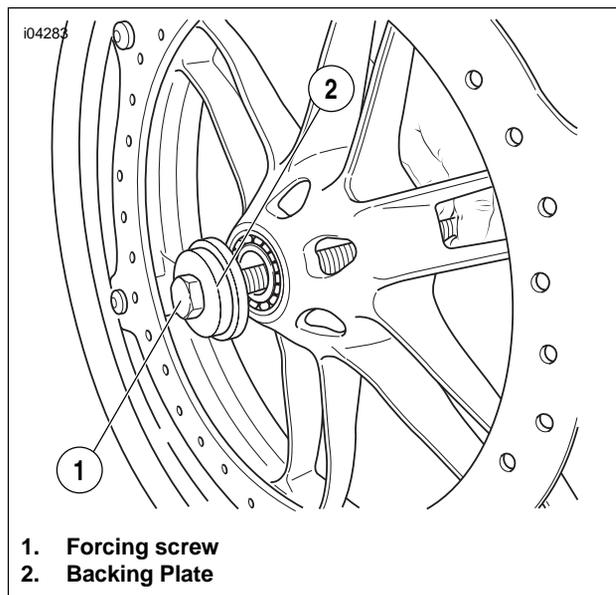

1. Forcing screw
2. Backing Plate

Figure 2-15. Insert Forcing Screw and Backing Plate

8. See [Figure 2-15](#). Remove the BACKING PLATE (Part No. B-43993-11) from the long forcing screw. Reinstall the Backing Plate onto the forcing screw, with the smaller diameter toward the hex-head.
9. Insert the forcing screw through the wheel hub on the opposite side of the wheel.

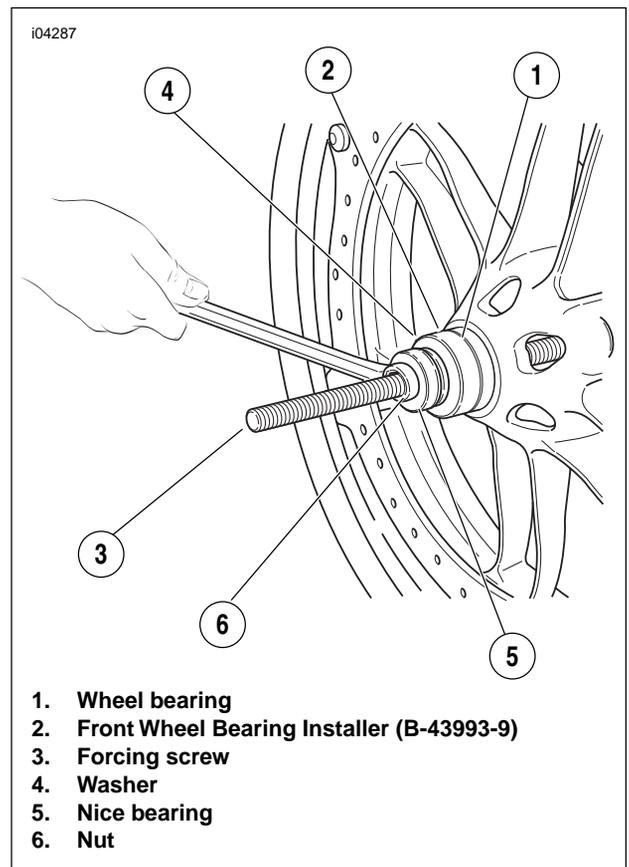

1. Wheel bearing
2. Front Wheel Bearing Installer (B-43993-9)
3. Forcing screw
4. Washer
5. Nice bearing
6. Nut


Figure 2-17. Install the Bearing

11. See [Figure 2-17](#). Insert a **new** wheel bearing (1) squarely into the hub, with the lettered side pointing out (away from the wheel).
12. Slide the FRONT BEARING INSTALLER (Part No. B-43993-9) (2) onto the forcing screw (3), with the smaller diameter toward the bearing bore.
13. Install a washer (4), Nice bearing (5) and nut (6) onto the forcing screw (3).

NOTE

See [Figure 2-16](#). Center the spacer while installing the wheel bearing. Failure to center the spacer could cause the bearing not to pull in straight.

14. While holding the forcing screw (3), tighten the nut (6) until the bearing is seated firmly.
15. Remove the nut, bearing, washer, FRONT BEARING INSTALLER (Part No. B-43993-10) and forcing screw.
16. Install the wheel. See [INSTALLATION](#) under **2.5 FRONT WHEEL**.

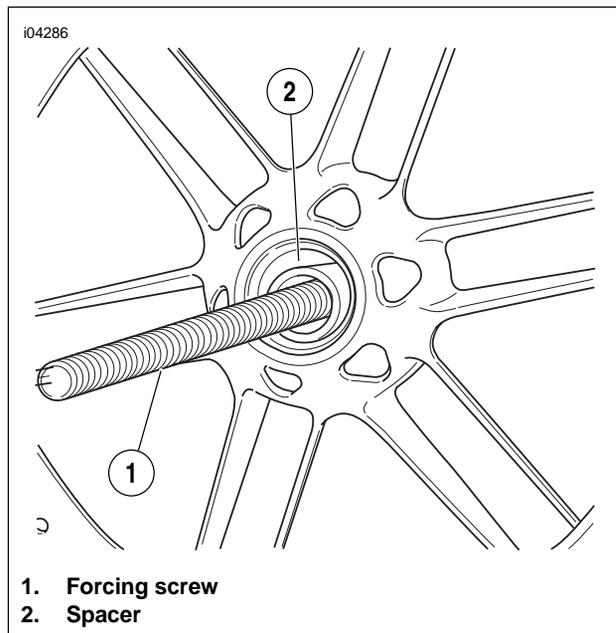

1. Forcing screw
2. Spacer

Figure 2-16. Install the Spacer

10. See [Figure 2-16](#). Install the spacer.

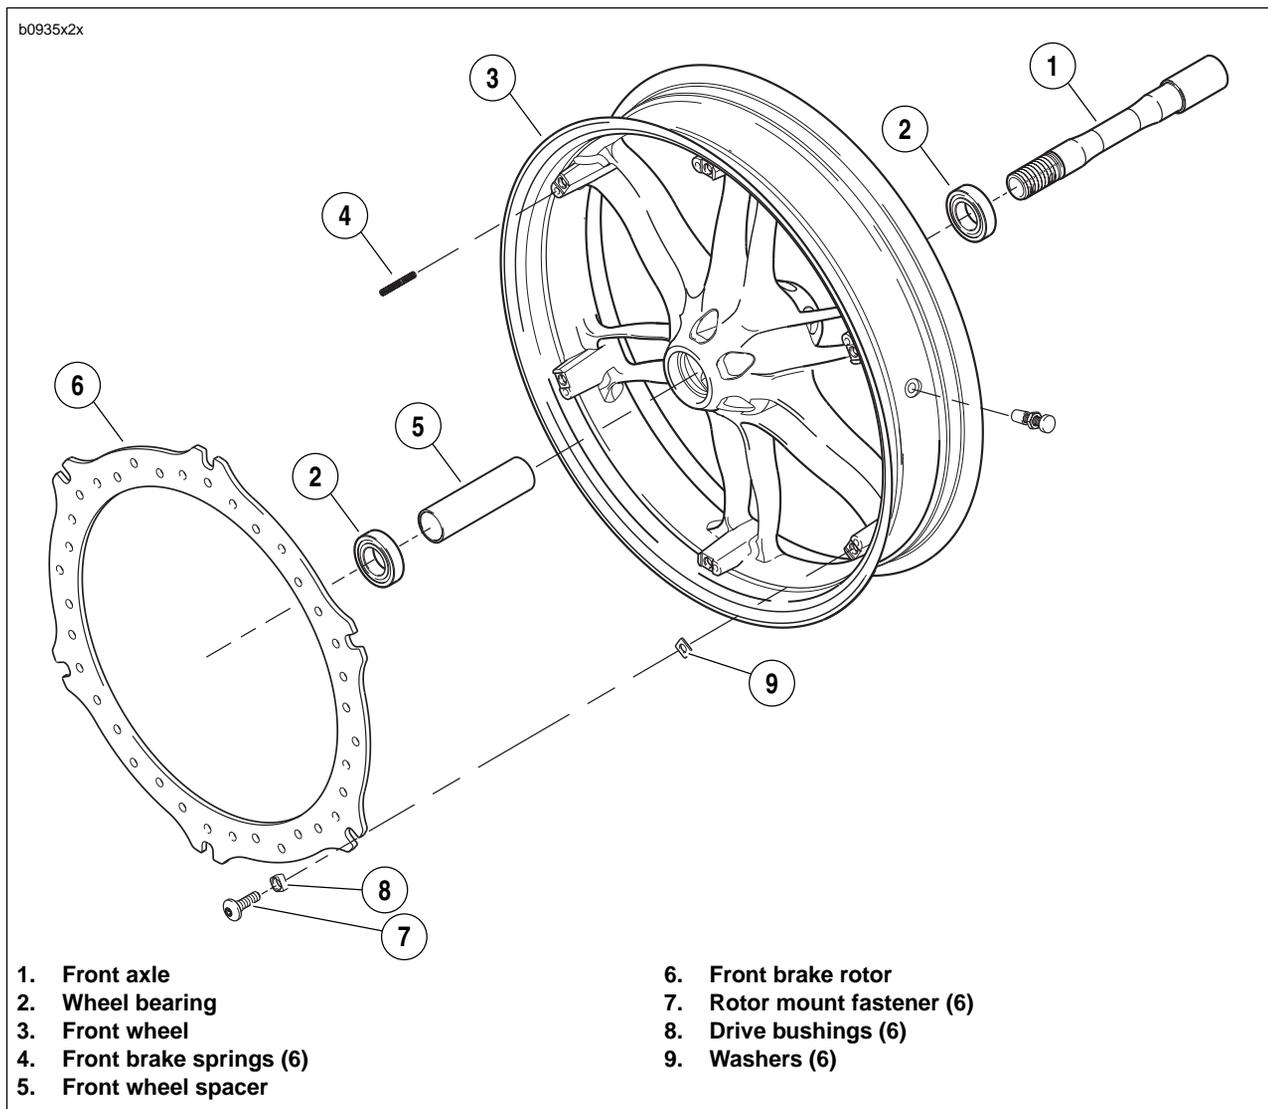


Figure 2-18. Front Wheel Assembly

Front Rotor Installation

1. See Figure 2-18. Install **new** spring (4).
2. Install **new** washers (9).
3. Install **new** drive bushings (8) into rotor.

NOTE

Note the identifying mark of rotor is up and radius end of drive bushing (8) toward center of wheel.

4. Align reference dot on front rotor with the valve stem.

5. Install **new** rotor mounting fasteners in a criss-cross pattern around the wheel to insure proper fitting between rotor, fastener and bushing. Tighten to 25-27 ft-lbs (34-37 Nm).

CAUTION

Rotor mounting fasteners must be seated into drive bushings and drive bushings must be fitted into rotor properly. Failure to comply may affect braking ability and lead to brake failure which could result in death or serious injury.

INSTALLATION

1. Raise front wheel to allow clearance for the caliper to swing under and inside the front rotor.

CAUTION

To prevent cosmetic damage to the wheel, center caliper between spokes before removal.

2. See [Figure 2-19](#). Install caliper.
 - a. Align wheel so that rotor mounting fasteners straddle caliper.
 - b. Rotate right front fork counterclockwise to align caliper with rotor.
 - c. Lower front wheel into caliper assembly.
3. Install front axle.
 - a. Apply LOCTITE ANTI-SEIZE LUBRICANT to axle.
 - b. See [Figure 2-20](#). With pinch fasteners (metric) loose, insert threaded end of axle (1) through left side fork, wheel hub and thread into right fork.
 - c. Compress the front suspension to make sure it is free and not binding.
 - d. Tighten axle (1) (metric) to 39-41 ft-lbs (53-56 Nm).

NOTE

The front axle is left handed thread.

4. See [Figure 2-20](#). Tighten the front axle pinch fasteners (2) to 20-22 ft-lbs (27-30 Nm).
5. Install right side fender fasteners. See [2.31 FENDERS](#).


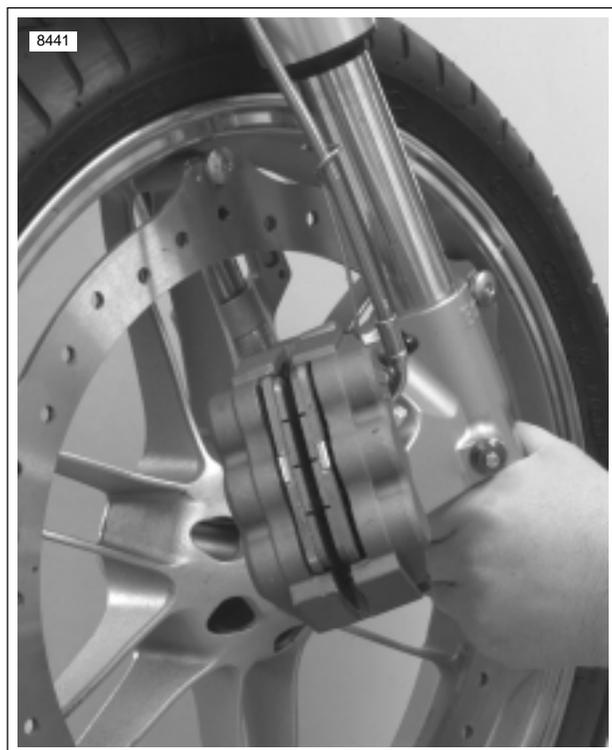


Figure 2-19. Front Wheel Installation

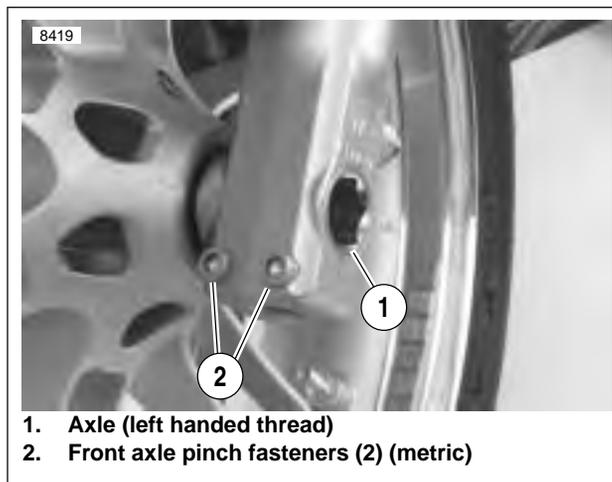

1. Axle (left handed thread)
2. Front axle pinch fasteners (2) (metric)

Figure 2-20. Front Wheel Mounting

REMOVAL

1. Place a scissor jack under jacking point and raise rear wheel off ground. For location of jacking point see [2.28 EXHAUST SYSTEM](#).

NOTE

Do not operate rear brake pedal with rear wheel removed or caliper piston may be forced out. Reseating piston requires caliper disassembly.


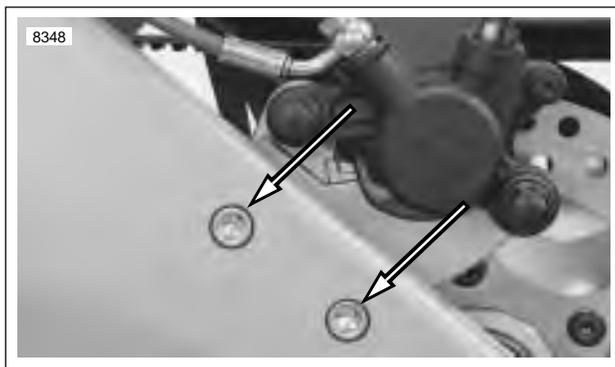


Figure 2-21. Rear Brake Caliper Carrier Fasteners

2. See [Figure 2-21](#). Remove caliper carrier from swingarm by removing caliper carrier fasteners. See [2.15 REAR BRAKE CALIPER](#).

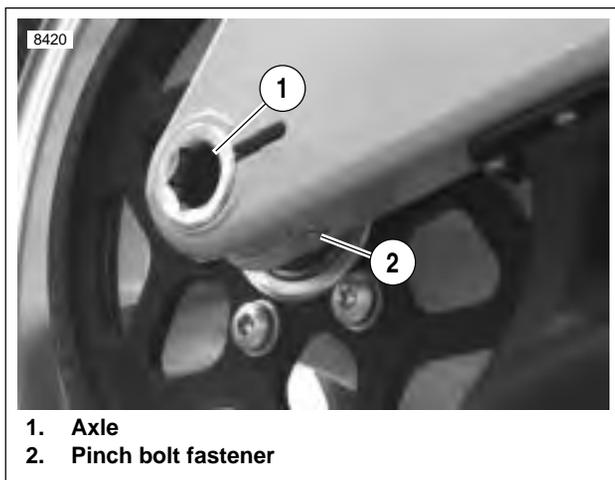

1. Axle
2. Pinch bolt fastener

Figure 2-22. Rear Wheel Mounting, Right Side

3. See [Figure 2-22](#). Loosen rear axle pinch fastener (2).
4. Loosen rear axle (1) approximately 15 rotations to allow partial tension to be removed from rear drive system.
5. Remove idler pulley assembly by removing nuts and washers. See [IDLER PULLEY REMOVAL](#) in [6.6 DRIVE BELT SYSTEM](#).
6. Remove rear axle.
7. Slide drive belt out of the way and remove rear wheel.

CLEANING AND INSPECTION

WARNING

Never use compressed air to “spin-dry” bearings. Very high bearing speeds can damage unlubricated bearings. Spinning bearings with compressed air can also cause a bearing to fly apart, which could result in death or serious injury.

1. Inspect all parts for damage or excessive wear.
2. Inspect brake rotor. See [1.7 BRAKE SYSTEM MAINTENANCE](#).

DISASSEMBLY

1. Remove sprocket.
 - a. Remove sprocket fasteners and washers. Discard fasteners.
 - b. Remove sprocket from wheel.
2. Remove rear rotor.
 - a. See [Figure 2-23](#). Remove and discard rotor mounting fasteners (1).
 - b. Remove and inspect brake rotor for wear and warping. See [BRAKE ROTOR THICKNESS](#) in [1.7 BRAKE SYSTEM MAINTENANCE](#).
3. Remove rear wheel bearings using [BUSHING AND BEARING PULLER](#) (Part No. B43993-8) and [WHEEL BEARING REMOVER AND INSTALLER](#) (Part No. HD-44060).

NOTE


The procedure for the rear wheel bearing removal is the same as front wheel bearing removal. See [Bearing Removal](#) in [2.5 FRONT WHEEL](#).

4. Remove rear wheel spacer (4).

NOTE

For wheel bearing removal follow identical procedure as used for front wheel.

b0936x2x

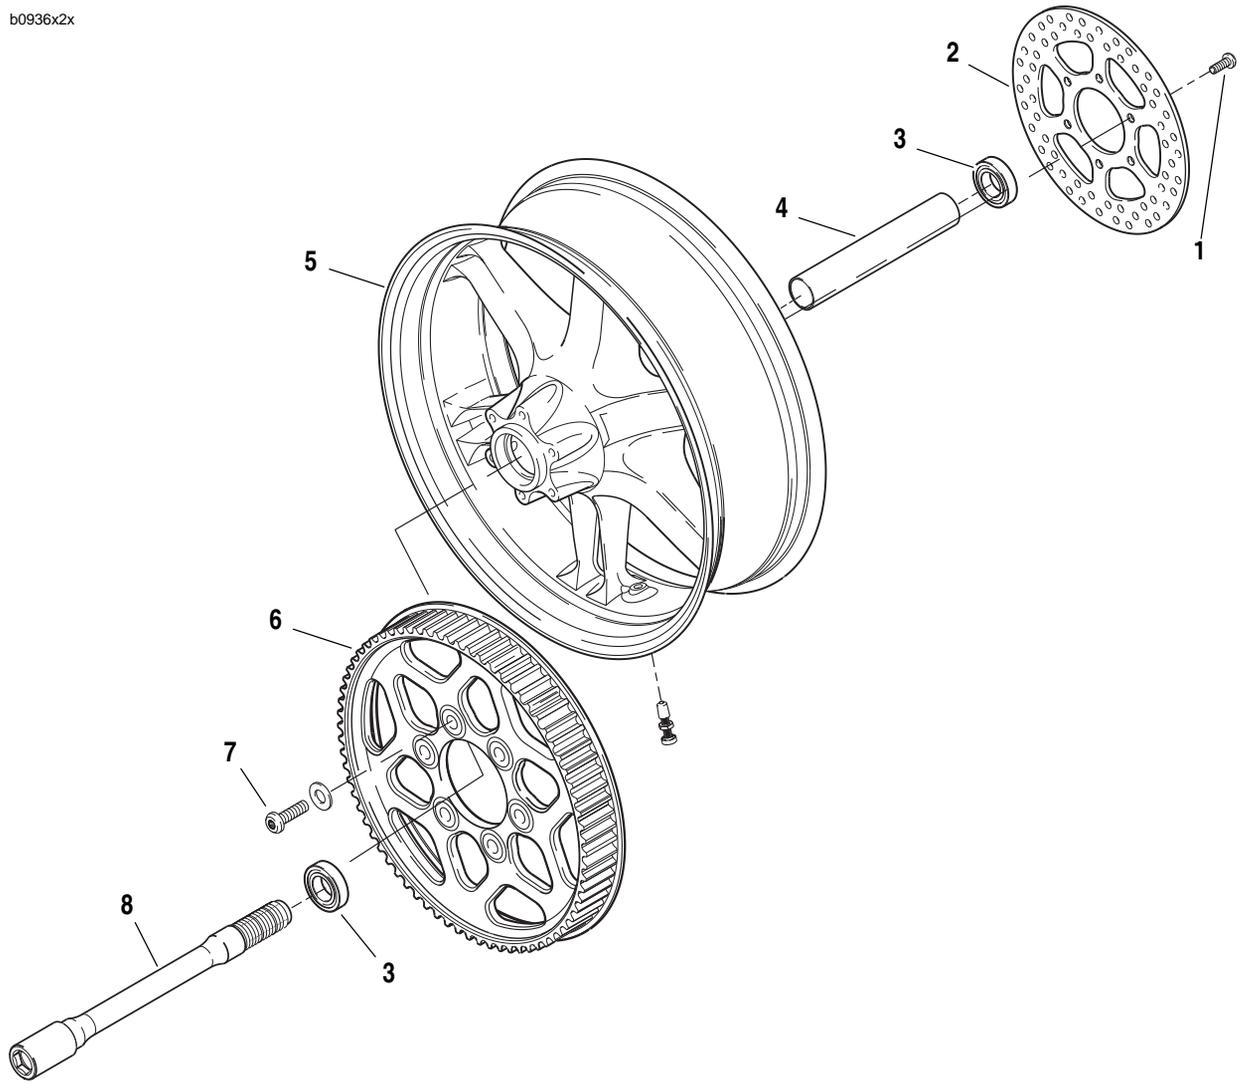


- 1. Rotor mounting fastener (6)
- 2. Brake rotor
- 3. Wheel bearing
- 4. Wheel spacer
- 5. Wheel
- 6. Sprocket
- 7. Sprocket fastener
- 8. Axle

Figure 2-23. Rear Wheel Assembly

ASSEMBLY

WARNING

Do not allow brake fluid, bearing grease, lubricants, etc. to contact brake rotor or reduced braking ability will occur, which could result in death or serious injury.

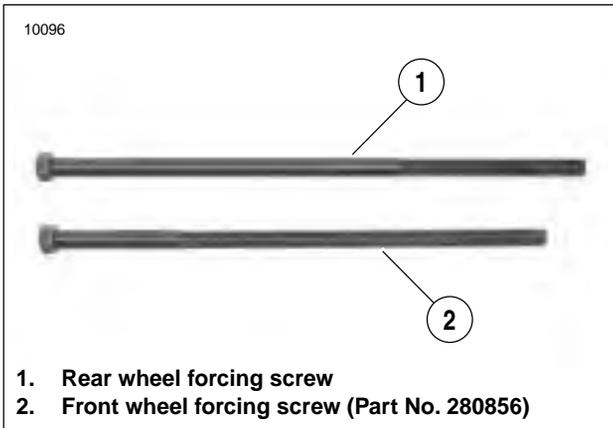

1. Rear wheel forcing screw
2. Front wheel forcing screw (Part No. 280856)

Figure 2-24. Forcing Screws Used for Front and Rear Wheel Bearing Installation

NOTES

- See [Figure 2-24](#). When installing rear wheel bearings it is necessary to use the FORCING SCREW (1) from the STEERING HEAD BEARING RACE INSTALLER (Part No. HD-39302).
 - The procedure for the rear wheel bearing installation is the same as front wheel bearing installation. See [Bearing Installation in 2.5 FRONT WHEEL](#).
 - Install rear wheel bearings using REAR BEARING INSTALLER (Part No. B-43993-10) and WHEEL BEARING REMOVER AND INSTALLER (Part No. HD-44060) and FORCING SCREW (Part No. HD-39302-2).
1. Install wheel bearing (3) on rotor side of motorcycle.
 2. Install rear wheel spacer (4).
 3. Install wheel bearing (3) on sprocket side of motorcycle.
 4. Install sprocket.
 - a. Position sprocket (6) on wheel (5) keeping lip of sprocket facing the inside.
 - b. Install **new** sprocket fasteners (7) and washers tightening to 35-37 ft-lbs (48-50 Nm).
 5. Install rear rotor (2).
 - a. Position rear brake rotor (2) on wheel (5).
 - b. Install brake rotor (2) with **new** rotor mounting fasteners (1) and tighten to 25-27 ft-lbs (34-37 Nm).

INSTALLATION

1. Center rear wheel in the swingarm at the same time sliding the drive belt onto the rear sprocket.
2. With wheel centered in swingarm, lower bike to align swingarm and wheel hub.

3. Apply ANTI-SEIZE LUBRICANT to hole in right side of swingarm where rear axle slides through.


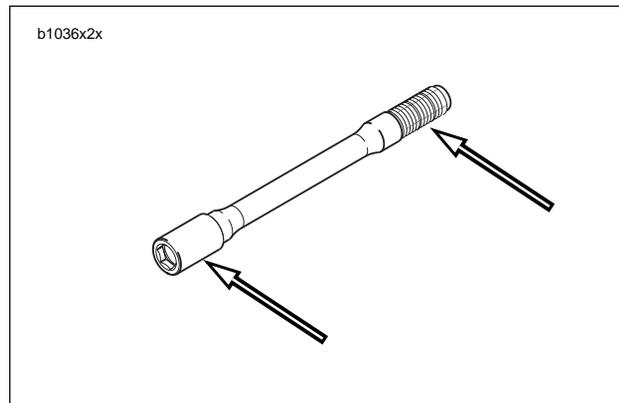


Figure 2-25. Anti-Seize Lubricant Location

4. See [Figure 2-25](#). Coat the axle with ANTI-SEIZE LUBRICANT.
5. Slide axle through right side of swing arm and wheel hub and thread partially into swingarm on left side.
6. Install idler pulley. See [IDLER PULLEY INSTALLATION](#) under [6.6 DRIVE BELT SYSTEM](#).

CAUTION

Never tighten rear axle with swingarm brace removed.

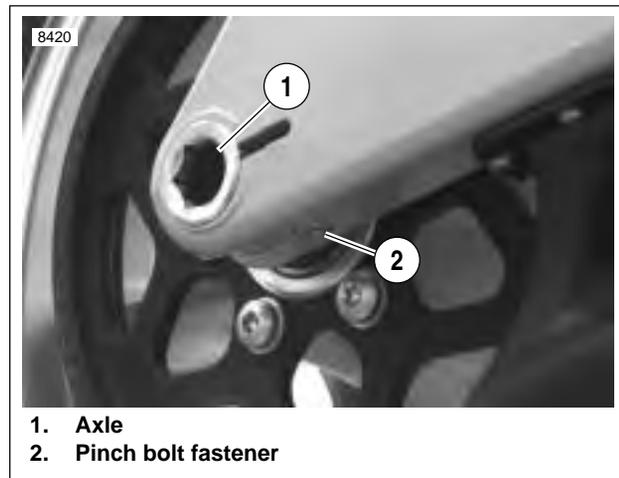

1. Axle
2. Pinch bolt fastener

Figure 2-26. Rear Wheel Mounting, Right Side

7. See [Figure 2-26](#). Tighten rear axle (1) to 23-27 ft-lbs (31.2-36.6 Nm), back off two full turns and then retighten to 48-52 ft-lbs (65.1-70.5 Nm).
8. Tighten pinch fastener (2) on right side of swingarm to 40-45 ft-lbs (54-61 Nm).

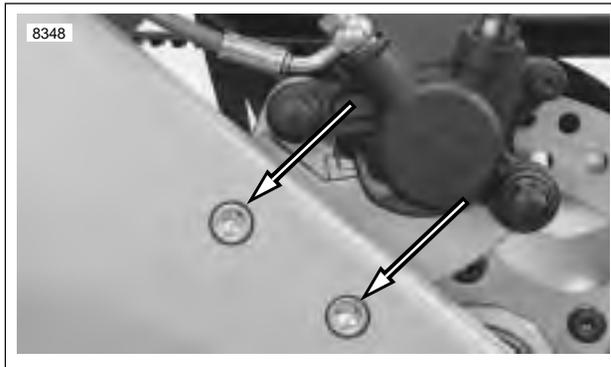


Figure 2-27. Rear Brake Caliper Carrier Fasteners

9. See [Figure 2-27](#). Install caliper carrier and tighten fastener to 24-26 ft-lbs (32-35 Nm). See [2.15 REAR BRAKE CALIPER](#).

NOTE

The brake pads may become cocked and will not allow the rotor to slide into the caliper. Press on the brake pad from the outside of the caliper to straighten out the pad.

⚠ WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified mechanic.

GENERAL

Check wheels for lateral and radial runout before installing a new tire.

Rim Lateral Runout

1. See Figure 2-28. Install truing arbor in wheel hub and place wheel in WHEEL TRUING AND BALANCING STAND (Part No. HD-99500-80).
2. Tighten arbor nuts so hub will turn on its bearings.
3. Check rim lateral runout by placing a gauge rod or dial indicator near the rim bead. Replace wheel if lateral runout exceeds specification shown in Table 2-9.

Rim Radial Runout

1. See Figure 2-29. Install truing arbor in wheel hub and place wheel in WHEEL TRUING AND BALANCING STAND (Part No. HD-99500-80).
2. Tighten arbor nuts so hub will turn on its bearings.
3. Check radial runout as shown. Replace wheel if runout exceeds specification shown in Table 2-9.

Table 2-9. Wheel Rim Runout

| RUNOUT | IN | MM |
|-----------------|-------|------|
| Maximum lateral | 0.040 | 1.02 |
| Maximum radial | 0.030 | 0.76 |

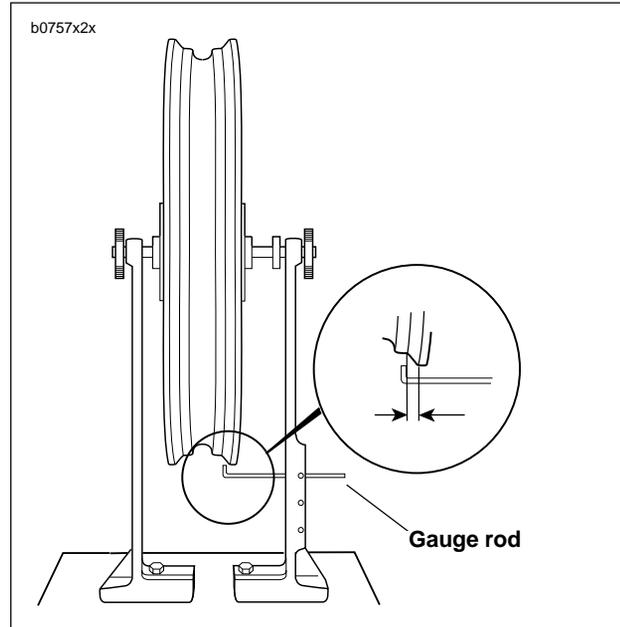


Figure 2-28. Checking Cast Rim Lateral Runout Using Wheel Truing and Balancing Stand (HD-99500-80)

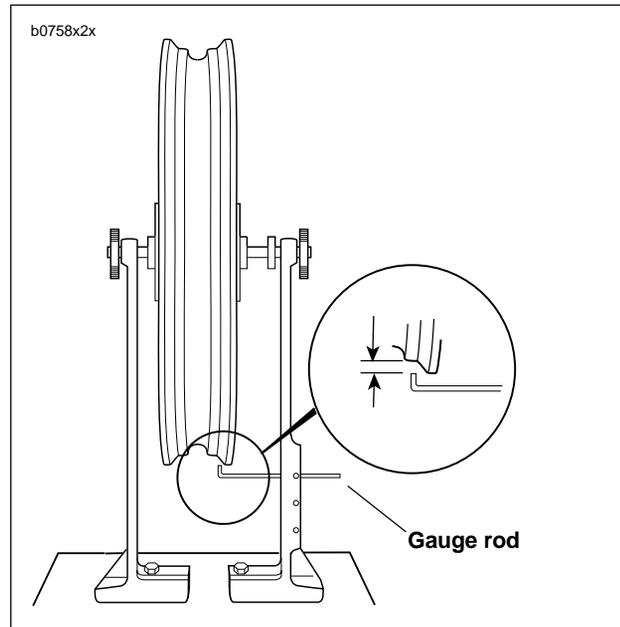


Figure 2-29. Checking Cast Rim Radial Runout Using Wheel Truing and Balancing Stand (HD-99500-80)

GENERAL

Inspect tires for punctures, cuts, breaks and wear at least weekly.

WARNING

- Always check both tire sidewalls for arrows indicating forward rotation. Some tires require different tire rotation depending on whether tire is used on front or rear wheel. Installing a tire with the wrong rotation could result in death or serious injury.
- Dunlop front and rear tires for Buell motorcycles are not the same. They are not interchangeable. Use front tire **ONLY** for a front tire. **DO NOT** put a rear tire on the front of a vehicle. Failure to follow this warning could result in death or serious injury.

CAUTION

Some tires have arrows molded into the tire sidewall. These tires should be mounted on the rim with the arrow pointing in the direction of forward rotation. The yellow circle on the sidewall is a balance mark and should be aligned 180 degrees from the balance mark (blue dot) on inside of rim.

REMOVAL

1. Remove wheel from motorcycle. See [2.5 FRONT WHEEL](#) or [2.6 REAR WHEEL](#).
2. Deflate tire.
3. See [Figure 2-30](#). Loosen both tire beads from rim flange.

WARNING

Do not use excessive force when starting bead over rim. Excessive force may damage tire or rim and adversely affect handling which could result in death or serious injury.

4. If a bead breaker machine is not available, attach RIM PROTECTORS (Part No. HD-01289) to the rim. Using tire tools (not sharp instruments), start upper bead over edge of rim at valve. Repeat all around rim until first bead is over rim.
5. See [Figure 2-31](#). Push lower bead into rim well on one side and insert tire tool underneath bead from opposite side. Pry bead over rim edge. Remove tire from rim.
6. Remove valve stem if it is damaged or leaks.
7. Mount tire on TIRE SPREADER (Part No. HD-21000) for inspection and repair procedures.

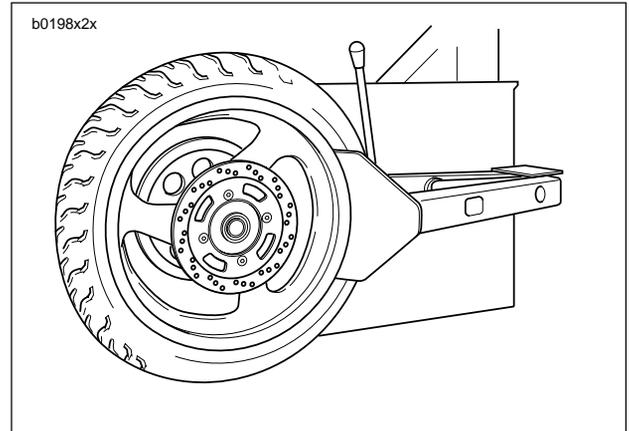


Figure 2-30. Loosening Beads from Rim Flange

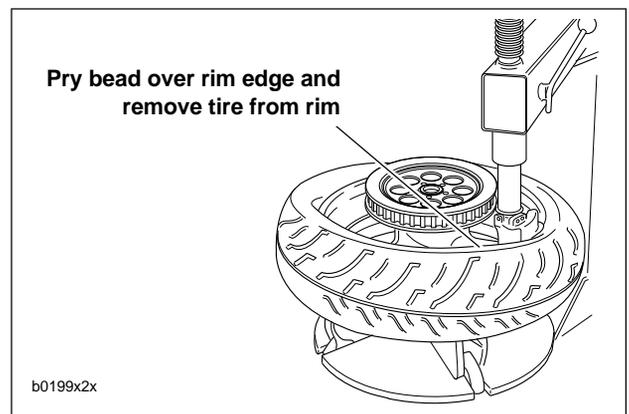


Figure 2-31. Starting Tire Off Rim

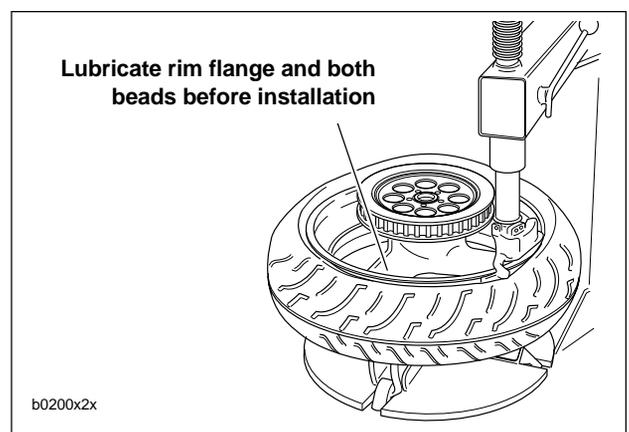


Figure 2-32. Starting Bead on Rim

CLEANING AND INSPECTION

1. Clean inside of tire with dry rag.
2. If rim is dirty or corroded, clean with a stiff wire brush.
3. Inspect tire for wear and damage. Replace worn or damaged tires. See [1.8 TIRES AND WHEELS](#).

INSTALLATION

WARNING

Only install original equipment (stock) tire valves and valve caps. A valve or valve and cap combination that is too long may interfere with (strike) adjacent components, damage the valve and cause rapid tire deflation. Rapid tire deflation could cause loss of control. These events could result in death or serious injury.

WARNING

Aftermarket valve caps that are heavier than the stock cap may have clearance at slow speeds; but, at high speed the valve/cap will be moved outward by centrifugal force. This outward movement could cause the valve/cap to strike the adjacent components, damage the valve and cause rapid tire deflation. Rapid tire deflation could cause loss of control. These events could result in death or serious injury.

1. Damaged or leaking valve stems must be replaced.
2. Install and tighten fastener to 40-44 **in-lbs** (4-5 Nm).
3. Thoroughly lubricate rim flanges and both beads of tire with tire lubricant.

WARNING

The yellow circle on the sidewall is a balance mark and should be aligned 180 degrees from the balance mark (blue dot) on inside of rim.

4. See [Figure 2-32](#). Starting at the valve stem, start first bead into the rim well using a bead breaker machine. If no machine is available, work bead on as far as possible by hand. Use a tire tool to pry the remaining bead over rim flange.
5. Start 180° from valve stem hole and place second bead on rim. Work bead onto rim with tire tools, working toward valve in both directions.

WARNING

Do not inflate over 40 psi (275 kPa) to seat the beads. Inflating the tire beyond 40 psi (275 kPa) to seat the beads can cause the tire rim assembly to burst with force sufficient to cause death or serious injury. If the beads fail to seat to 40 psi (275 kPa), deflate and relubricate the bead and rim and reinflate to seat the beads, but do not exceed 40 psi (275 kPa).

6. Apply air to stem to seat beads on rim. It may be necessary to use a TIRE BEAD EXPANDER (Part No. HD-28700) on the tire until beads seal on rim.

Checking Tire Lateral Runout

1. See [Figure 2-33](#). Turn wheel on axle and measure amount of displacement from a fixed point to tire sidewall.
2. Check tire tread for appropriate runout specification. See [Table 2-10](#). If runout is more than specification, remove tire from rim.
3. Check rim bead side runout. See [2.7 CHECKING CAST RIM RUNOUT](#). Replace rims not meeting specifications.
4. Install tire and check again for tire tread lateral runout.

Checking Tire Radial Runout

1. See [Figure 2-34](#). Turn wheel on axle and measure tread radial runout.
2. Check tire tread for appropriate runout specification. See [Table 2-10](#). If runout is more than specification, remove tire from rim.
3. Check rim bead runout. See [2.7 CHECKING CAST RIM RUNOUT](#). Replace rims not meeting specifications.
4. Install tire and check tire tread radial runout again.

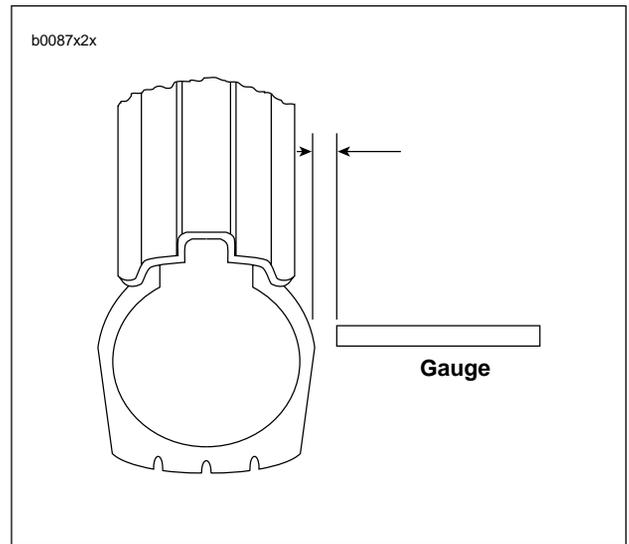


Figure 2-33. Checking Tire Lateral Runout

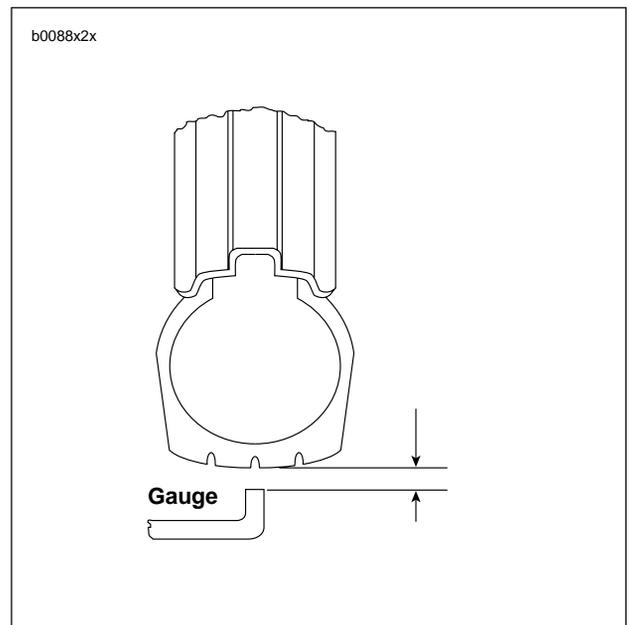


Figure 2-34. Checking Tire Radial Runout

Table 2-10. Tire Runout

| RUNOUT | IN. | MM |
|---------|-------|------|
| Radial | 0.060 | 1.52 |
| Lateral | 0.080 | 2.03 |

ADJUSTMENT

Wheel Balancing

Wheel balancing is recommended to improve handling and reduce vibration, especially at high road speeds.

In most cases, static balancing using WHEEL TRUING AND BALANCING STAND (Part No. HD-99500-80) will produce satisfactory results. However, dynamic balancing, utilizing a wheel spinner, can be used to produce finer tolerances for better high-speed handling characteristics. Follow the instructions supplied with the balance machine you are using.

NOTE

If the rear wheel on the XB Firebolt will not fit on a stock dynamic spin balance shaft, use the Carlson wheel balance shaft (Part No. AF15).

WEIGHTS FOR CAST WHEELS

The maximum weight permissible to accomplish balance is:

- 1.0 oz. (28 g) total weight applied to the front wheel.
- 2.0 oz. (56 g) total weight applied to the rear wheel.

Wheels should be balanced to within 1/4 oz. (7 g) at 60 MPH (97 KM/H).

See [Figure 2-35](#). Use only WHEEL WEIGHTS (Part No. 43692-94Y) which have special self-adhesive backings. Apply WHEEL WEIGHTS to the flat surface of the wheel rim.

1. Make sure that area of application is completely clean, dry and free of oil and grease.
2. Remove paper backing from weight. For additional adhesive strength, apply three drops of LOCTITE SUPER-BONDER 420 to adhesive side of weight.

WARNING

Do not install balancing weights under the stand offs for the front brake rotor. Contact could push rotor out of round. Braking could result in brake failure resulting in death or serious injury.

3. On the front wheel, locate a flat surface on the **right side** of the wheel rim. On the rear wheel locate a flat surface. Press weight firmly in place, holding for ten seconds.
4. Allow eight hours for adhesive to cure completely before using wheel.

NOTE

If wheel assembly is out of specification (1 oz. front, 2 oz. rear) rotate tire on rim and rebalance until wheel is within specification.

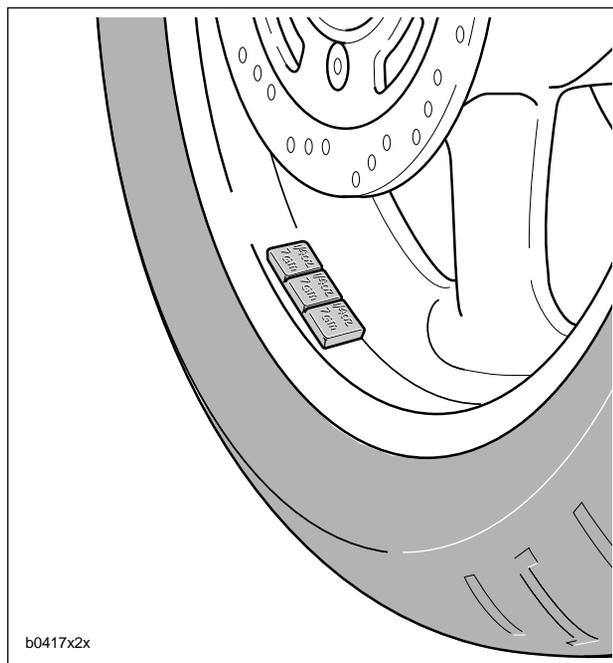


Figure 2-35. Wheel Weights

REMOVAL

1. See [Figure 2-36](#). Remove cotter pin (7) and discard.
2. Remove clevis pin (2).
3. Remove pedal fastener (5).
4. Remove shift brake pedal sleeve (4).
5. Remove pedal bushings (3).
6. Remove brake pedal (6).

INSTALLATION

1. See [Figure 2-36](#). Install pedal bushings (3).
2. Install shift brake pedal sleeve (4).
3. Install brake pedal (6) using LOCTITE 272 (Red) and tighten fastener (5) to 22-24 ft-lbs (30-33 Nm).
4. Install clevis pin (2).
5. Install **new** cotter pin (7).

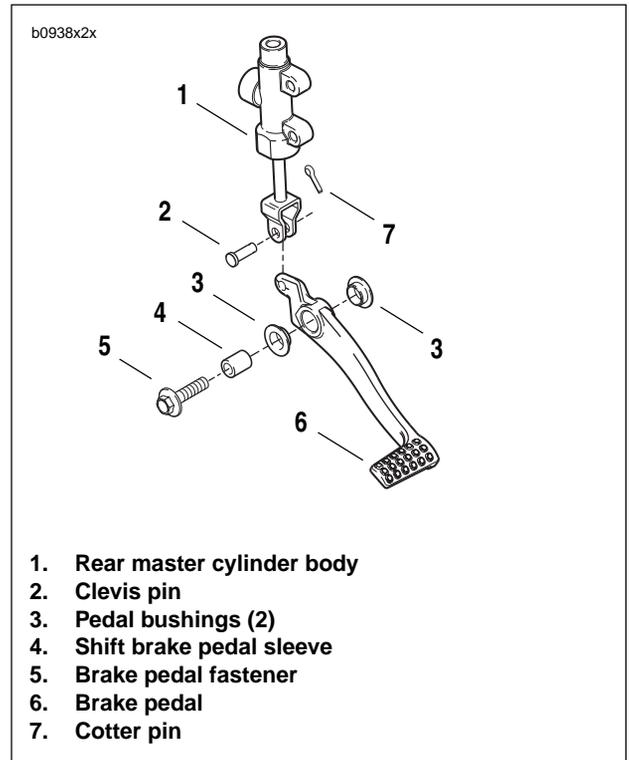


Figure 2-36. Brake Pedal Assembly

FRONT BRAKE MASTER CYLINDER AND HAND LEVER 2.10

REMOVAL

NOTE

Steps 1 is not required for removing the master cylinder assembly from the handlebars. Do not disassemble master cylinder unless problems are experienced.

1. Drain brake fluid into a suitable container. Discard used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake hand lever to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 **in-lbs** (4-7 Nm).

CAUTION

Damaged banjo bolt seating surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

2. See Figure 2-37. Remove the banjo bolt (13) (metric) and two copper washers (15) to disconnect brake line (14) from master cylinder (4). Discard copper washers.
3. Unplug terminal (12) to detach brake lamp switch (11).

NOTE

The individual parts of the brake lamp switch are not serviceable. Replace switch upon failure.

4. Remove mounting clamp fasteners (5) (metric) to detach master cylinder reservoir (4) from handlebar.

b0979x2x

1. Reservoir cover fasteners
2. Reservoir cover
3. Reservoir cover gasket
4. Master cylinder reservoir
5. Master cylinder housing fasteners (metric)
6. Piston assembly
7. Rubber boot
8. Brake hand lever
9. Pivot bolt nut (metric)
10. Brake switch fastener
11. Brake switch
12. Brake switch terminal
13. Banjo bolt (metric)
14. Brake line
15. Copper washers
16. Pivot bolt

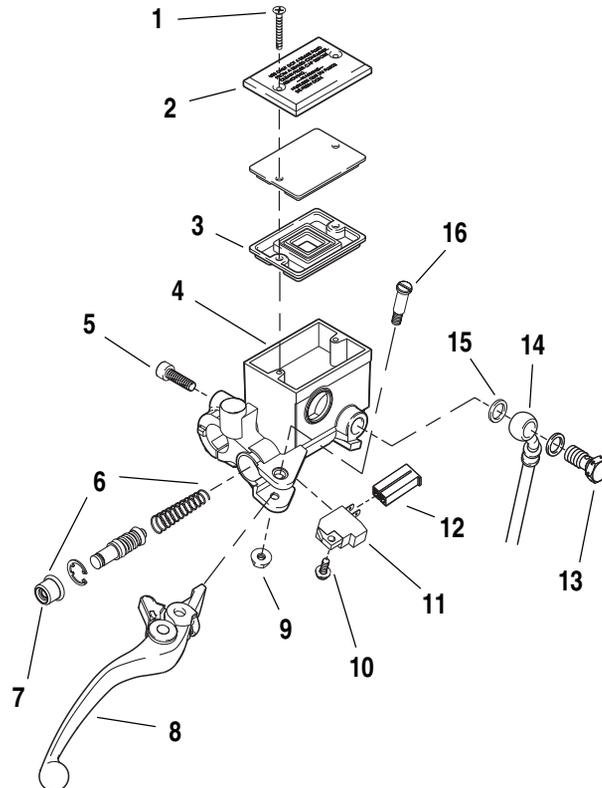


Figure 2-37. Front Brake Hand Lever Assembly

DISASSEMBLY

Brake Hand Lever

1. See [Figure 2-37](#). Remove pivot bolt nut (9) (metric) and pivot bolt (16) from hand lever pivot.
2. Detach front brake hand lever assembly (8) from hand lever pivot.
3. Detach front brake lamp switch (11) by removing the switch fastener (10).

Front Master Cylinder

1. See [Figure 2-37](#). Remove master cylinder cover (2) by removing cylinder cover fasteners (1).
2. Discard excess brake fluid.
3. Remove rubber boot (7) and discard.

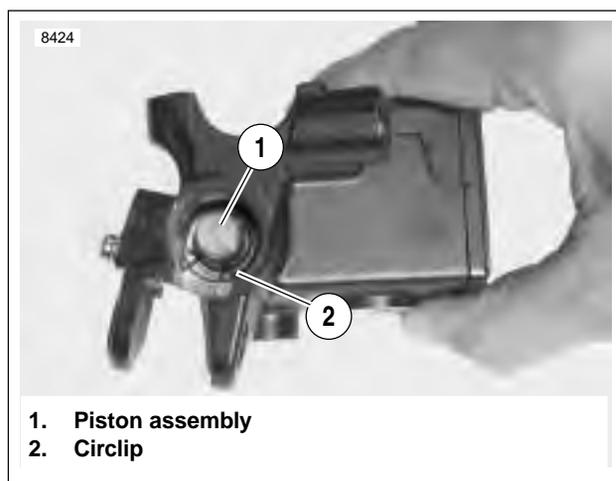


Figure 2-38. Piston Assembly in Master Cylinder

4. See [Figure 2-38](#). Depress piston assembly (1) and remove internal circlip (2) and discard.
5. See [Figure 2-37](#). Remove piston assembly (6) from front master cylinder reservoir (4) and discard.

CLEANING AND INSPECTION

⚠ WARNING

Clean brake system components using denatured alcohol. Do not use mineral-base cleaning solvents, such as gasoline or paint thinner. Use of mineral-base solvents causes deterioration of rubber parts that continues after assembly. This may result in improper brake operation which could result in death or serious injury.

1. Clean all parts with denatured alcohol or **D.O.T. 4 BRAKE FLUID**. Do not contaminate with mineral oil or other solvents. Wipe dry with a clean, lint free cloth. Blow out drilled passages and bore with a clean air supply. Do not use a wire or similar instrument to clean drilled passages in bottom of reservoir.
2. Inspect piston bore in master cylinder housing for scoring, pitting or corrosion. Replace housing if any of these conditions are found.
3. Inspect outlet port that mates with brake line fitting. As a critical sealing surface, replace housing if any scratches, dents or other damage is noted.

ASSEMBLY

Front Master Cylinder

1. Obtain PISTON ASSEMBLY KIT.

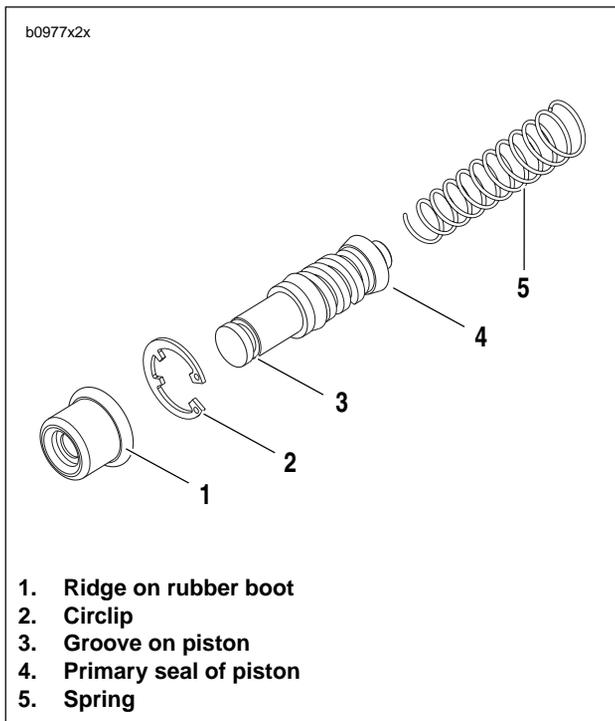


Figure 2-39. Front Master Cylinder Piston Assembly

2. See Figure 2-39. Assemble **new** piston components placing small end of spring (5) behind primary seal of piston (4).
3. Lubricate master cylinder body and piston seals with special lubricant found in the service parts kit.

⚠ WARNING

When installing circlip to secure master cylinder, be sure the circlip snaps into place. Failure to do so can result in improper brake operation which could result in death or serious injury.

4. See Figure 2-37. Insert piston assembly (6), spring first, into master cylinder reservoir (4).
5. See Figure 2-38. Secure piston assembly (1) with a **new** circlip (2).
6. See Figure 2-39. Install ridge on boot (1) into groove on piston (3).

Brake Hand Lever

1. See Figure 2-37. Lubricate pivot bolt (16) with LOCTITE ANTI-SEIZE.
2. Align hole in hand lever (8) with hole in hand lever pivot and install pivot bolt (16) through top of hand lever pivot and tighten nut to 80-120 **in-lbs** (9-14 Nm).

INSTALLATION

1. See [Figure 2-37](#). Install front brake lamp switch (11).
 - a. Install brake lamp switch (11) with switch fastener (10) and tighten to 7-10 **in-lbs** (0.8-1.0 Nm).
 - b. Connect brake switch terminal (12) to brake lamp switch (11).
 - c. Test switch action. Tang on switch must release when hand lever is moved.
2. Install master cylinder to handlebar by fastening clamp with fasteners. Position for rider posture and tighten to 80-90 **in-lbs** (9-10 Nm).

WARNING

Use only copper crush banjo washers (See Parts Catalog for Part No.) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

WARNING

To avoid leakage, verify that banjo washers, banjo bolt, hydraulic brake line and master cylinder bore are completely clean.

3. See [Figure 2-37](#). Connect brake line to master cylinder using two **new** copper washers (15) and banjo bolt (13) (metric) and tighten to 16-20 **ft-lbs** (22-27 Nm).
4. See [Figure 2-40](#). Verify brake lamp switch wires are tight.
5. See [Figure 2-37](#). Remove two master cylinder cover screws (1), cover (2) and cover gasket (3).
6. Protect body work from brake fluid.
7. See [Figure 2-41](#). With the master cylinder in a level position, add **D.O.T. 4 BRAKE FLUID**. Bring fluid level to within 1/8 in. (3.2 mm) of molded boss inside front master cylinder reservoir.

WARNING

Verify proper operation of the master cylinder relief port. A plugged or covered relief port can cause brake drag or lockup, which could result in loss of vehicle control which could result in death or serious injury.

8. Verify proper operation of the master cylinder relief port. Actuate the brake lever with the reservoir cover removed. A slight spurt of fluid will break the surface if all internal components are working properly.
9. Bleed brake system. See [1.7 BRAKE SYSTEM MAINTENANCE](#).
10. See [Figure 2-37](#). Attach master cylinder cover (2) and cover gasket (3). Tighten two cover fasteners (1) to 9-13 **in-lbs** (1.0-1.5 Nm).
11. Pump lever to raise pressure to operating level.

WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified technician.

WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

12. Turn ignition key switch to ON. Apply brake hand lever to test brake lamp operation. Turn ignition key switch to OFF.

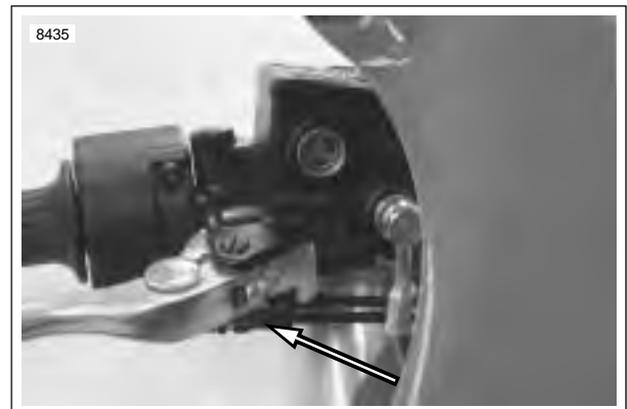


Figure 2-40. Front Brake Light Switch Connector

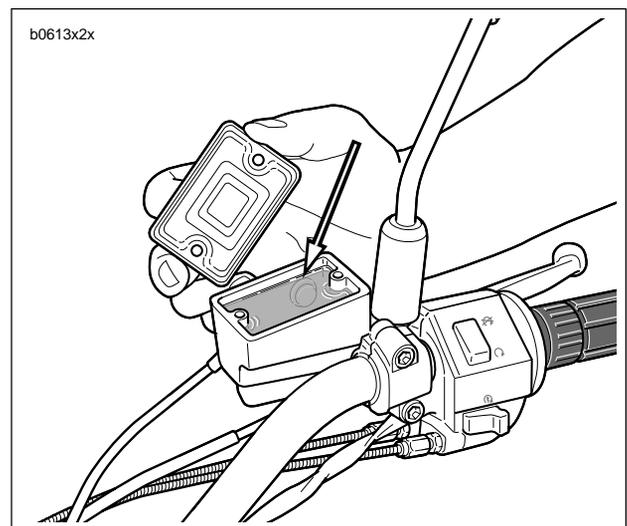


Figure 2-41. Brake Fluid Level
(Standard Brake Reservoir Shown)

REMOVAL

1. Drain brake fluid into a suitable container. Discard of used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake hand lever to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 **in-lbs** (4-7 Nm).
2. See [Figure 2-42](#). Remove p-clamp (1) detaching brake line from right side of lower fork clamp.

CAUTION

Damaged banjo bolt seating surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

3. See [Figure 2-37](#). Remove master cylinder banjo bolt (12) (metric) and two copper washers (14) to disconnect brake line from master cylinder (4). Discard copper washers.
4. See [Figure 2-42](#). Remove caliper banjo bolt (5) (metric), two copper washers and wire form (3) to disconnect brake line (2) from caliper. Discard copper washers.
5. Carefully inspect the brake line for dents, cuts, chaffing or other defects. Replace the brake line if any damage is noted.

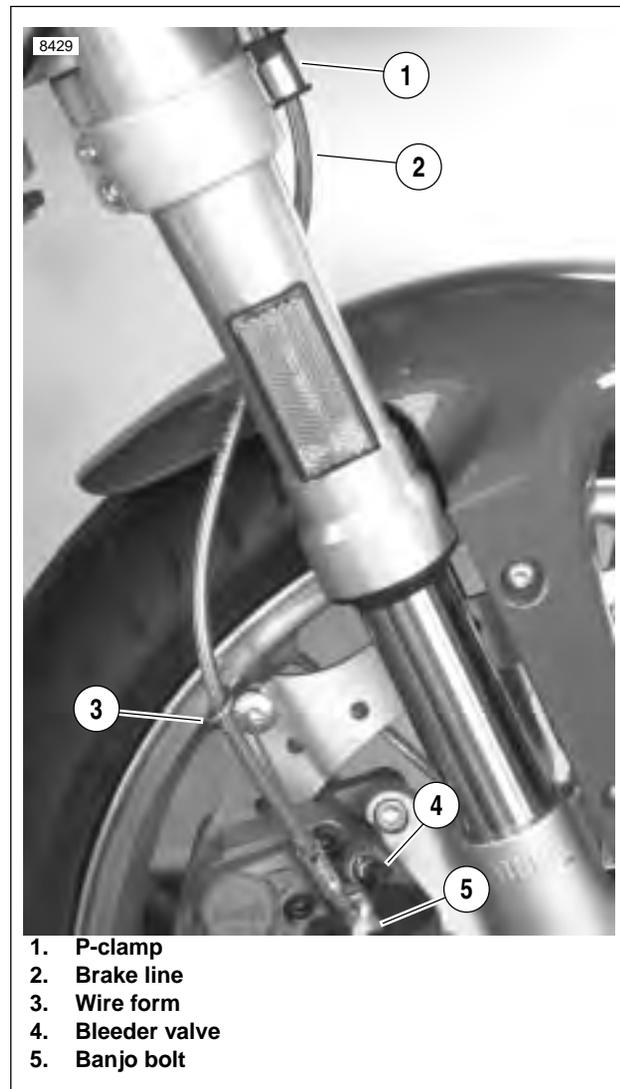


Figure 2-42. Front Brake Line

INSTALLATION

CAUTION

To avoid leakage, verify that gaskets, banjo bolt, hydraulic brake line and master cylinder bore are completely clean.

1. See [Figure 2-37](#). Connect brake line (13) to master cylinder (4) using two **new** copper washers (14) and a banjo bolt (12) (metric). Loosely install bolt into master cylinder.
2. Route the brake line from the master cylinder to the caliper. See [D.1 HOSE AND WIRE ROUTING](#) for front brake line routing.

WARNING

Use only copper crush banjo washers (See Parts Catalog for Part No.) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

CAUTION

To avoid leakage, verify that gaskets, banjo bolt, hydraulic brake line and caliper bore are completely clean.

3. Install brake line to caliper.
 - a. See [Figure 2-42](#). Install **new** copper washer, brake line (2), **new** copper washer and wire form (3) onto banjo bolt (5).
 - b. Finger tighten banjo bolt (5) onto front caliper being careful not to pinch wire form (3) while tightening, wire form should rotate around banjo bolt freely.
 - c. Twist brake line (2) into wire form (3) spiral and clock wire form against bleeder valve (4).
4. Tighten p-clamp with fastener (1) on lower triple clamp to 36-60 **in-lbs** (4-7 Nm).
5. See [Figure 2-37](#). Tighten master cylinder banjo bolt (12) (metric) to 16-20 ft-lbs (22-27 Nm).
6. See [Figure 2-42](#). Tighten brake caliper banjo bolt (5) (metric) to 16-20 ft-lbs (22-27 Nm).

WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified mechanic.

7. Install bleeder valve if removed. Refill master cylinder and bleed brakes. See [1.7 BRAKE SYSTEM MAINTENANCE](#).

WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

8. Turn ignition key switch to ON. Apply brake hand lever to test brake lamp operation. Turn ignition key switch to LOCK.

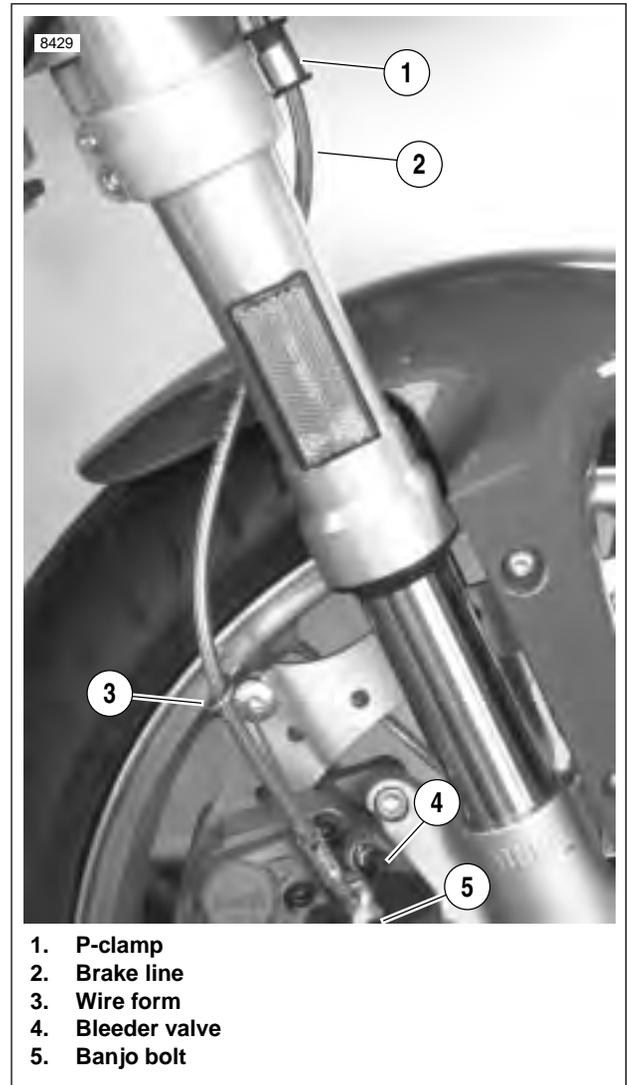


Figure 2-43. Front Brake Line

REMOVAL

1. Drain brake fluid into a suitable container. Discard used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake hand lever to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 in-lbs (4-7 Nm).

CAUTION

Damaged banjo bolt seating surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

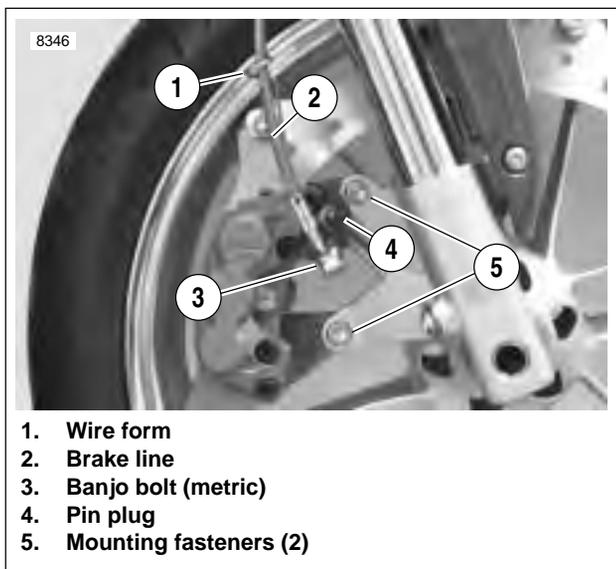


Figure 2-44. Front Brake Caliper Mounts

2. See Figure 2-44. Disconnect brake line at caliper. See 2.11 FRONT BRAKE LINE.
3. Remove caliper mounting fasteners (5).
4. Slide caliper down the rotor to clear fork lower and then remove off rotor.

DISASSEMBLY

1. See Figure 2-45. Remove pin hanger set (1), caliper pad spring (2) and brake pads.

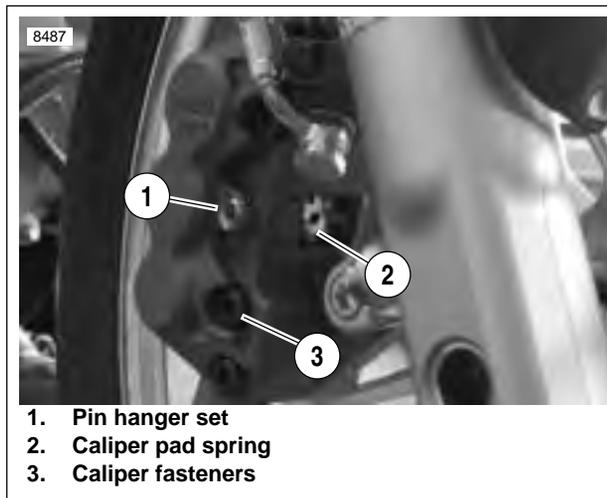


Figure 2-45. Pad Spring (Typical)

2. Split caliper by removing caliper fasteners (3).
3. See Figure 2-47. Remove and discard o-rings (6).
4. See Figure 2-46. Remove pistons using a BRAKE PISTON REMOVER (Part No. B-42887).
5. Remove and discard top and bottom seal.

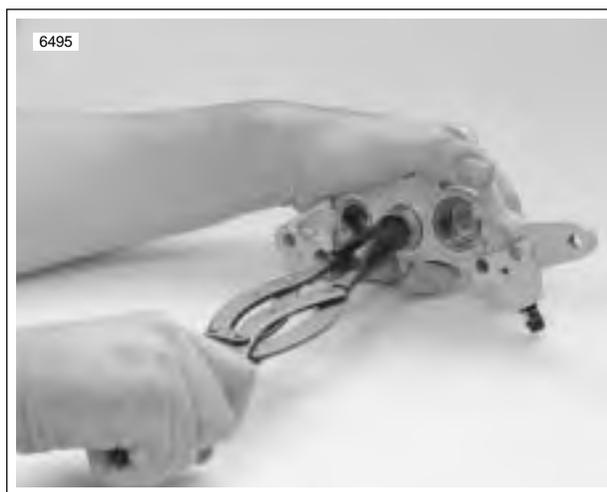


Figure 2-46. Removing Pistons (B-42887)

CLEANING AND INSPECTION

WARNING

Clean brake system components using denatured alcohol. Do not use mineral-base cleaning solvents, such as gasoline or paint thinner. Use of mineral-base solvents causes deterioration of rubber parts that continues after assembly. This may result in improper brake operation which could result in death or serious injury.

1. Clean all parts with denatured alcohol or **D.O.T. 4 BRAKE FLUID**. Do not contaminate with mineral oil or other solvents. Wipe dry with a clean, lint free cloth. Blow out drilled passages and bore with a clean air supply. Do not use a wire or similar instrument to clean drilled passages.
2. Carefully inspect all components. Replace any parts that appear damaged or worn. Do not hone caliper piston bore.

WARNING

Always replace brake pads in complete sets for correct brake operation. Never replace just one brake pad. Failure to install brake pads as a set could result in death or serious injury.

3. Inspect brake rotor and pads. See [1.7 BRAKE SYSTEM MAINTENANCE](#).
4. Check rotor surface. Replace if warped or badly scored. See [Table 2-11](#).

Table 2-11. Front Rotor Runout

| RUNOUT | IN. | MM |
|---------|--------|------|
| Radial | 0.0177 | 0.45 |
| Lateral | 0.0248 | 0.63 |

ASSEMBLY

1. See [Figure 2-47](#). Install pistons and o-rings.
 - a. Lubricate **new** o-rings (6), pistons (5), and caliper piston bores with **D.O.T. 4 BRAKE FLUID**.
 - b. Install two **new** o-rings (6) in grooves of each piston bore.
 - c. Install pistons (5) in each piston bore.
2. Install **new** o-rings (8) between caliper halves.
3. Clamp caliper together with caliper fasteners (11) and tighten to 15-19 ft-lbs (20-26 Nm).

INSTALLATION

1. See [Figure 2-47](#). Install brake pads (10).
2. Install pin hanger set (1) and tighten to 11-14 ft-lbs (15-19 Nm).
3. Rotate front fork counterclockwise and install caliper on caliper mount. Using LOCTITE 272 (red), tighten fasteners (9) to 35-37 ft-lbs (47-50 Nm).
4. Rotate front fork/caliper clockwise and slide caliper onto rotor.

WARNING

Use only copper crush banjo washers (See [Parts Catalog for Part No.](#)) with **D.O.T. 4 brake fluid**. Earlier silver banjo washers are not compatible with **D.O.T. 4 fluid** and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.


5. Install brake line to caliper. See [2.11 FRONT BRAKE LINE](#).
6. Bleed front brakes. See [BLEEDING BRAKES](#) in [1.7 BRAKE SYSTEM MAINTENANCE](#).

WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

7. Turn ignition key switch to ON. Apply brake hand lever to test brake lamp operation.

b0976x2x

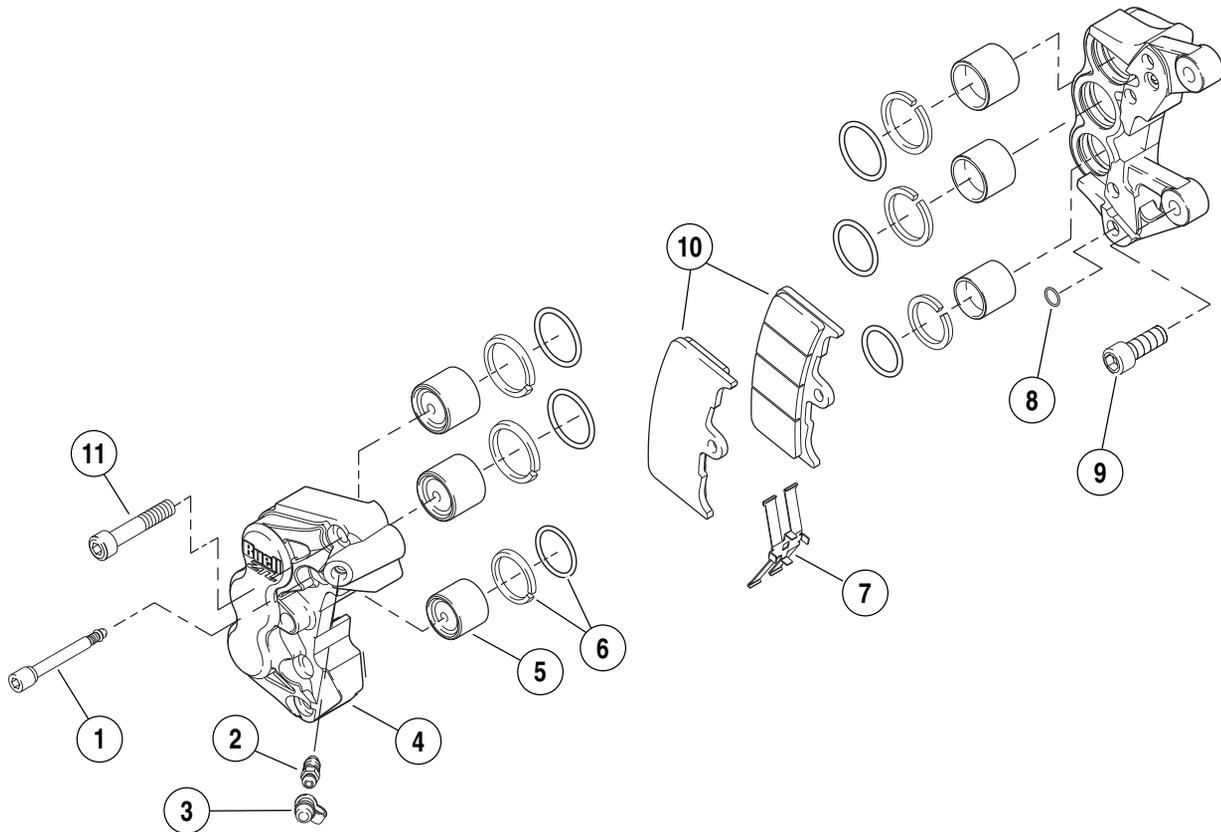

1. Pin hanger set
2. Brake bleeder
3. Bleeder cap
4. Caliper
5. Piston
6. Piston o-rings
7. Pad spring
8. Small o-ring
9. Caliper mounting fasteners
10. Brake pads
11. Caliper fasteners

Figure 2-47. Front Caliper Assembly

REMOVAL

1. See [Figure 2-48](#). Drain brake fluid into a suitable container. Discard used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake foot pedal to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 **in-lbs** (4-7 Nm).

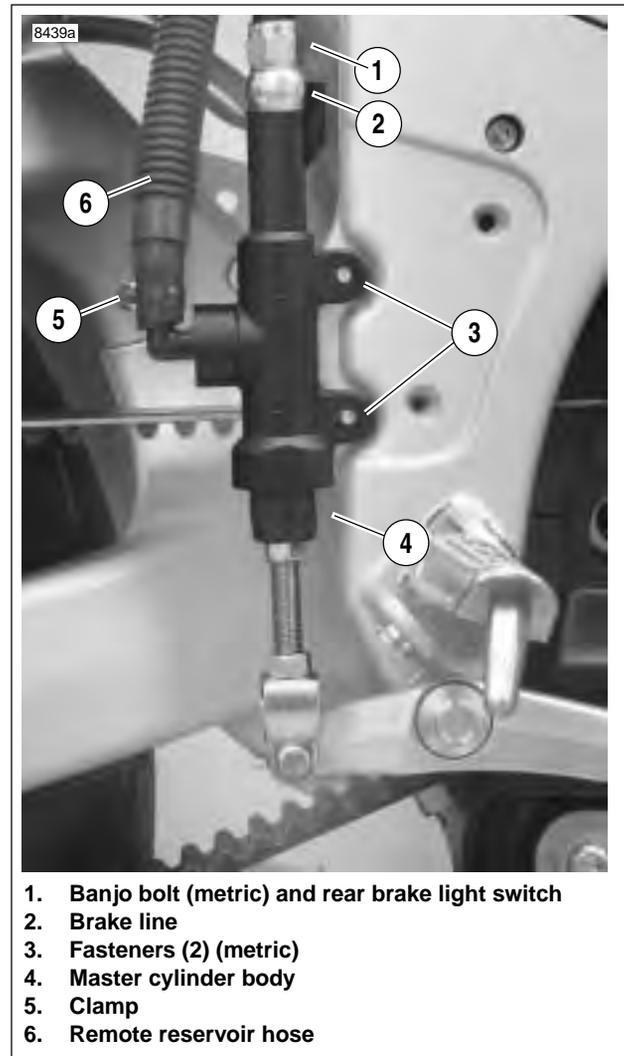


Figure 2-48. Brake Bleeder Valve, Rear Caliper

2. Remove brake pedal. See [2.9 BRAKE PEDAL](#).
3. Remove heel guard. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).

CAUTION

Damaged banjo bolt surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.



1. Banjo bolt (metric) and rear brake light switch
2. Brake line
3. Fasteners (2) (metric)
4. Master cylinder body
5. Clamp
6. Remote reservoir hose

Figure 2-49. Rear Master Cylinder On Vehicle

4. See [Figure 2-49](#). Remove brake reservoir hose at master cylinder.
5. Remove seat. See [2.38 SEAT](#).

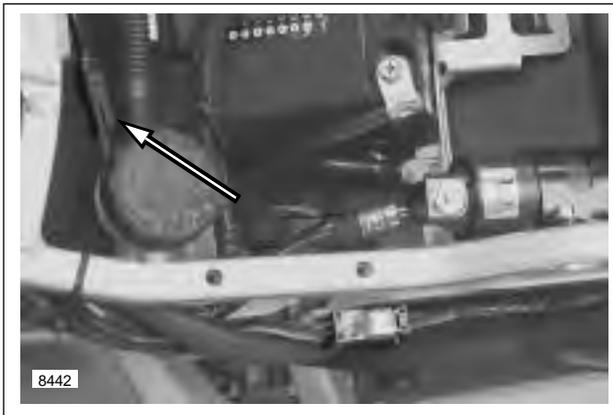


Figure 2-50. Brake Line Switch Connector

6. See [Figure 2-50](#). Disconnect brake light connector located under the seat.

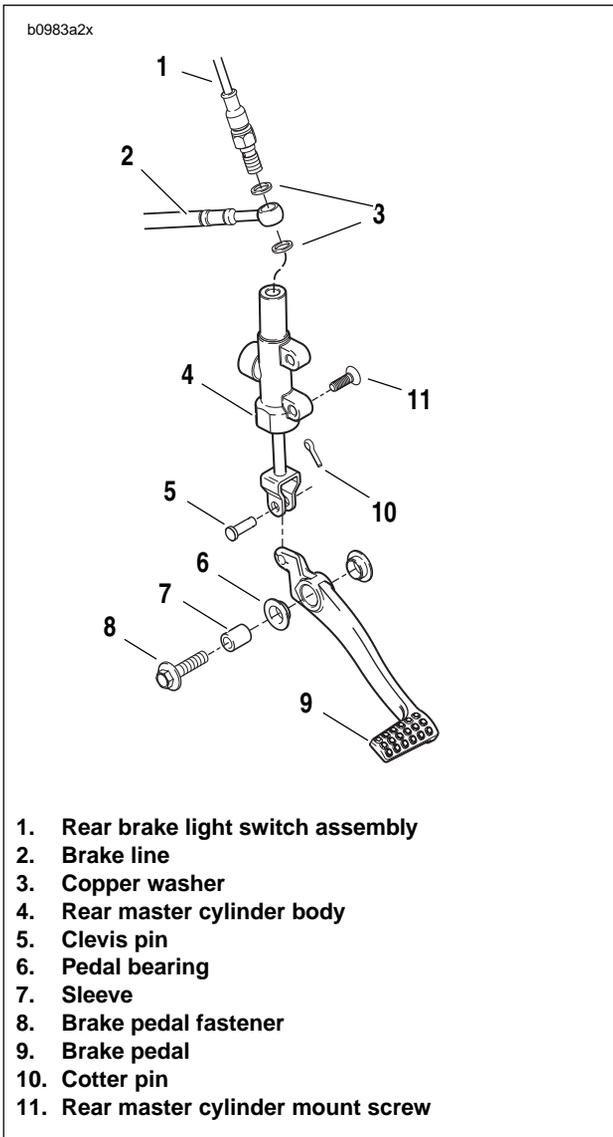


Figure 2-51. Rear Master Cylinder Assembly

7. See [Figure 2-51](#). Remove rear brake light switch (1) (metric) and two copper crush washers (3) to detach brake line (2) from master cylinder (4). Discard copper crush washers.
8. Remove right side rider footpeg mount. See [2.29 FOOT-PEG, HEEL GUARD AND MOUNT](#).
9. See [Figure 2-51](#). Remove fasteners (11) (metric) to detach master cylinder (4) from rider footpeg mount.

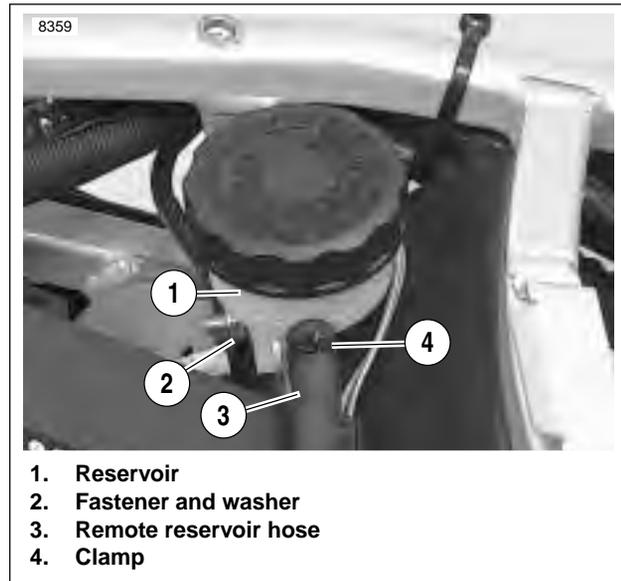


Figure 2-52. Remote Reservoir

10. See [Figure 2-52](#). Detach remote reservoir.
 - a. Remove top clamp (4) on hose connected to master cylinder.
 - b. Remove fastener (2) to detach reservoir (1) from frame if necessary.

DISASSEMBLY

1. See [Figure 2-53](#). Slide rubber boot on rod assembly (3) away from master cylinder body (1).
2. Depress rod assembly (3) and remove internal snap ring (2). Discard snap ring.
3. Remove piston assembly (4) from master cylinder body (1).
4. Loosen adjuster locknut on the rod assembly (3).
5. Remove the clevis from the rod assembly (3).

NOTE

Do not disassemble master cylinder unless problems are experienced. Discard all seals during the disassembly procedure. Install a complete rebuild kit upon assembly.

CLEANING AND INSPECTION

⚠ WARNING

Clean brake system components using denatured alcohol. Do not use mineral-base cleaning solvents, such as gasoline or paint thinner. Use of mineral-base solvents causes deterioration of rubber parts that continues after assembly. This may result in improper brake operation which could result in death or serious injury.

1. Thoroughly clean master cylinder and all brake system components. Stand master cylinder on wooden block or towel to protect seating surfaces.
 - a. Examine walls of master cylinder reservoir for scratches and grooves. Replace if damaged.
 - b. Verify that vent holes on master cylinder are completely open and free of dirt or debris.
2. Inspect boot on front of master cylinder for cuts, tears or general deterioration. Replace if necessary.

ASSEMBLY

1. Obtain PISTON ASSEMBLY KIT.

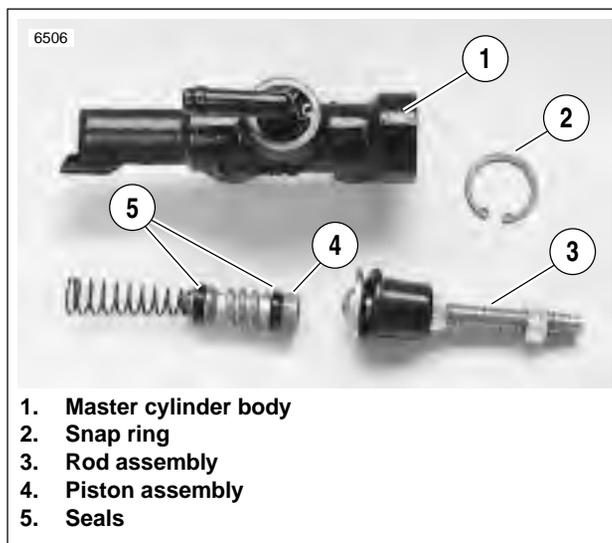


Figure 2-53. Master Cylinder Internal

2. See [Figure 2-53](#). Assemble **new** piston components placing small end of spring behind primary seal of piston (4).
3. Lubricate master cylinder body (1) and piston seals (5) with **D.O.T. 4 BRAKE FLUID**.
4. Place round side of rod assembly (3) over piston. Depress piston (4) into master cylinder body (1) and secure with a **new** snap ring (2).

⚠ WARNING

Circlip must be snapped into the groove of the master cylinder body. If the circlip is not properly installed, improper brake operation could result in death or serious injury.

5. Tuck rubber boot on rod assembly (3) into master cylinder body (1).

INSTALLATION

1. See [Figure 2-51](#). Install master cylinder (4) onto footpeg mount with fasteners (11). Tighten to 72-96 **in-lbs** (8-11 Nm).
2. Install rear brake switch (1) and banjo bolt (2) and **new** copper crush washers (3). Tighten to 16-20 ft-lbs (22-27 Nm).
3. Install footpeg mount to frame. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).

WARNING

Use only copper crush banjo washers (See [Parts Catalog for Part No.](#)) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

CAUTION

To avoid leakage after assembly, verify that banjo washers, banjo bolt, hydraulic brake line and bore of master cylinder are completely clean.

4. See [Figure 2-52](#). Connect remote reservoir.
 - a. If removed, attach remote reservoir (1) to frame using clamp fastener (2). Tighten to 48-72 **in-lbs** (5.4-8.1 Nm).
 - b. Attach hose (3) to rear brake reservoir using clamp.
5. See [Figure 2-50](#). Connect brake line switch connector under seat.
6. Install heel guard. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).

7. Install rear brake pedal. See [2.9 BRAKE PEDAL](#).
8. Adjust rear brake pedal. See [BRAKE PEDAL ADJUSTMENT](#) in [1.7 BRAKE SYSTEM MAINTENANCE](#).
9. Install master cylinder to brake pedal. See [2.9 BRAKE PEDAL](#).

WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified mechanic.

10. Add brake fluid and bleed brake system. See [1.7 BRAKE SYSTEM MAINTENANCE](#).

WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

11. Install seat. See [2.38 SEAT](#).

REMOVAL

1. Remove seat. See 2.38 SEAT.

WARNING

To protect against accidental start-up of vehicle and possible personal injury, disconnect the negative battery cable before proceeding. Inadequate safety precautions could cause a battery explosion, which could result in death or serious injury.

2. Disconnect battery by unthreading fastener removing negative cable (black) from battery first. See 1.5 BATTERY MAINTENANCE.

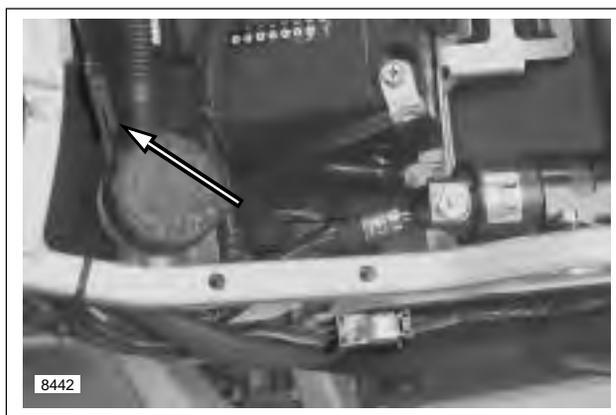


Figure 2-54. Brake Line Switch Connector

3. See Figure 2-54. Disconnect brake line connector from under seat in the front of the battery.
4. Remove right side heel guard. See 2.29 FOOTPEG, HEEL GUARD AND MOUNT.
5. Drain brake fluid into a suitable container. Discard used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake foot pedal to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 in-lbs (4-7 Nm).

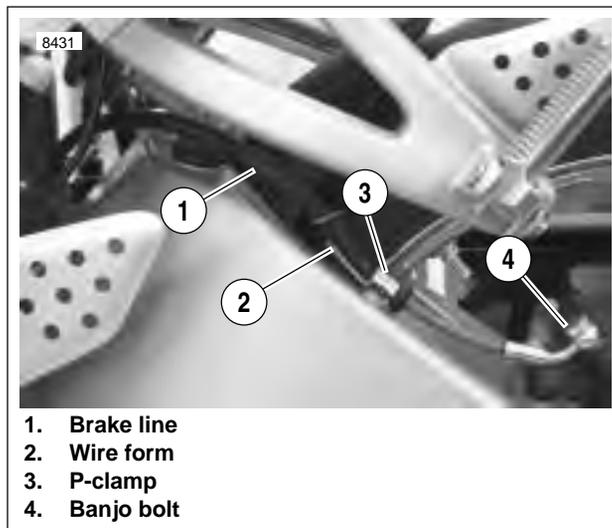


Figure 2-55. Rear Brake Line

6. See Figure 2-55. Remove p-clamp (3) and wire form (2) securing brake line (1) to the left side of swingarm.

CAUTION

Damaged banjo bolt seating surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

7. Remove banjo bolt (4) from rear caliper. Discard copper washers.



Figure 2-56. Rear Brake Line Switch/Banjo Bolt

8. See Figure 2-56. Remove brake line switch/banjo bolt from rear master cylinder. Discard copper washer.
9. Remove brake line from motorcycle.

INSTALLATION

1. See [Figure 2-56](#). Install brake line switch/banjo bolt with **new** copper washers to the master cylinder. Tighten to 16-20 ft-lbs (22-27 Nm).

NOTE

Tighten the right side banjo bolt with **FLARE NUT SOCKET** tool (SNAP-ON Part No. FRXM14) or a crow'sfoot.

WARNING

Use only copper crush banjo washers (See Parts Catalog for Part No.) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

2. Install brake line switch/banjo bolt and **new** copper washers to rear caliper. Tighten to 16-20 ft-lbs (22-27 Nm).
3. See [Figure 2-55](#). Secure brake line (1) to left side of swingarm with p-clamp (3), wire form (2), and tighten to 36-60 **in-lbs** (4-7 Nm). See [D.1 HOSE AND WIRE ROUTING](#) for brake line routing.
4. See [Figure 2-57](#). Connect brake line switch connector underneath seat. See [D.1 HOSE AND WIRE ROUTING](#) for brake line routing.
5. Install right heel guard. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
6. Bleed brakes. See [BLEEDING BRAKES](#) in [1.7 BRAKE SYSTEM MAINTENANCE](#).

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

7. Install negative battery cable and tighten to 72-96 **in-lbs** (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

8. Install seat. See [2.38 SEAT](#).

WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

9. Turn ignition key ON, depress rear brake pedal and check for proper brake light operation.

WARNING

After completing repairs or bleeding the system, always test motorcycle brakes at low speed. If brakes are not operating properly or braking efficiency is poor, testing at high speeds could result in death or serious injury.

10. Test ride motorcycle and check for proper brake operation.

REMOVAL


NOTE

Steps 1 and 2 are not required for detaching caliper from rotor. Drain fluid only when disassembling caliper.

CAUTION

Damaged banjo bolt seating surfaces will leak when reassembled. Prevent damage to seating surfaces by carefully removing brake line components.

1. Drain brake fluid into a suitable container. Discard used fluid according to local laws.
 - a. Install a length of plastic tubing over caliper bleeder valve. Place free end in a suitable container.
 - b. Open bleeder valve (metric) about 1/2-turn.
 - c. Pump brake foot pedal to drain brake fluid.
 - d. Tighten bleeder valve to 36-60 **in-lbs** (4-7 Nm).
2. Remove banjo bolt connecting brake line to rear caliper. See 2.14 REAR BRAKE LINE.

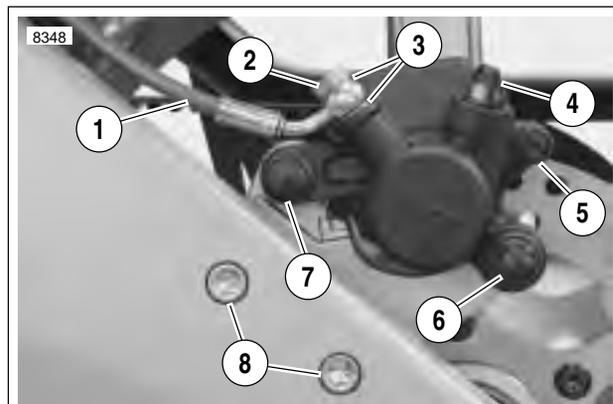


1. Brake line
2. Banjo bolt (metric)
3. Copper washers (2)
4. Bleeder valve (metric)
5. Pin plug
6. Small caliper fastener
7. Larger caliper fastener
8. Caliper mounting fasteners

Figure 2-57. Rear Brake Caliper

3. See Figure 2-57. Remove caliper mounting fasteners (6 and 7).

DISASSEMBLY


1. See Figure 2-57. Remove pin plug (5) and pad hanger (metric) to free brake pads.

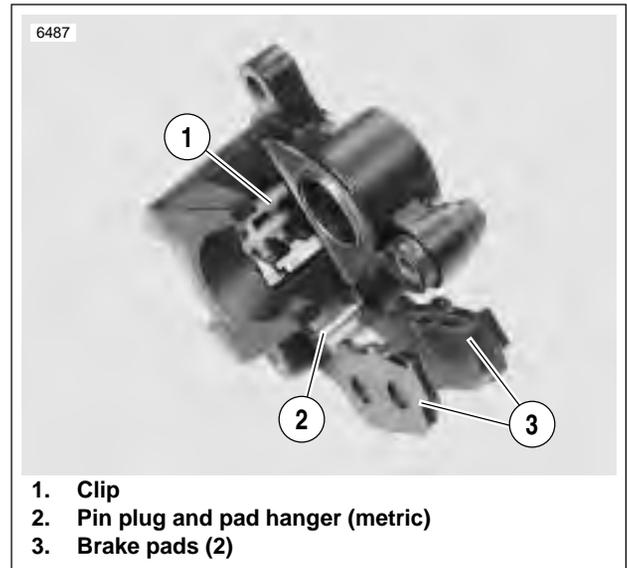

1. Clip
2. Pin plug and pad hanger (metric)
3. Brake pads (2)

Figure 2-58. Brake Pads

2. See Figure 2-58. Remove spring clip (1).

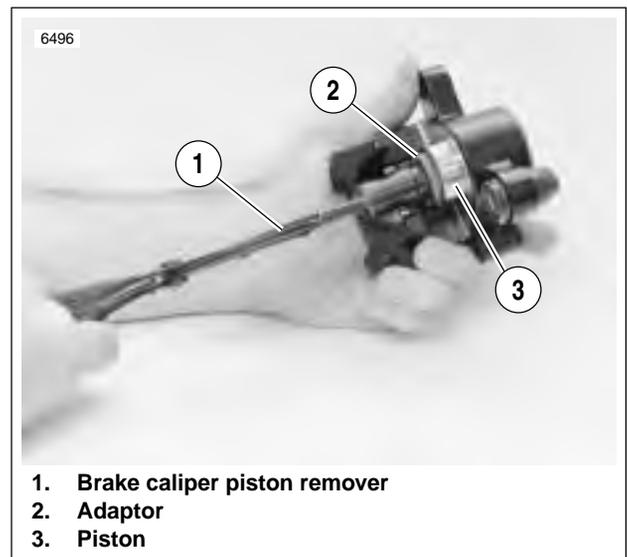

1. Brake caliper piston remover
2. Adaptor
3. Piston

Figure 2-59. Removing Rear Brake Caliper Piston

3. See Figure 2-59. Remove piston (3) using BRAKE CALIPER PISTON REMOVER (1) (Part No. B-42887) with adaptor (2).
4. Remove two o-rings from groove in caliper bore and discard.

CLEANING AND INSPECTION

WARNING

Clean brake system components using denatured alcohol. Do not use mineral-base cleaning solvents, such as gasoline or paint thinner. Use of mineral-base solvents causes deterioration of rubber parts that continues after assembly. This may result in improper brake operation which could result in death or serious injury.

- Clean all parts with denatured alcohol or **D.O.T. 4 BRAKE FLUID**. Do not contaminate with mineral oil or other solvents. Wipe dry with a clean, lint free cloth. Blow out drilled passages and bore with a clean air supply. Do not use a wire or similar instrument to clean drilled passages.
- Carefully inspect all components. Replace any parts that appear damaged or worn. Do not hone caliper piston bore.
- Inspect brake rotor.
 - Measure rotor thickness. Replace if minimum thickness is less than 0.18 in. (4.5 mm).
 - Check rotor surface. Replace if warped or badly scored. See [Table 2-12](#).

Table 2-12. Rear Rotor Runout

| RUNOUT | IN. | MM |
|---------|--------|------|
| Radial | 0.0177 | 0.45 |
| Lateral | 0.0154 | 0.39 |

WARNING

Always replace brake pads in complete sets for correct brake operation. Never replace just one brake pad. Failure to install brake pads as a set could result in death or serious injury.

- Inspect brake pads for damage or excessive wear. Replace both pads as a set if the friction material of either pad is worn to 0.04 in. (1.0 mm) or less.


ASSEMBLY

- See [Figure 2-58](#). Place clip (1) inside caliper body as shown.

NOTE

To ensure proper brake pad-to-brake rotor clearance when the caliper is installed, piston must be pressed all the way into the bore whenever **new** brake pads are used.

- Install pistons and o-rings.
 - Apply a light coat of **D.O.T. 4 BRAKE FLUID** to o-rings, piston and caliper piston bore.
 - Place two **new** o-rings inside grooves of piston bore.
 - Install piston inside caliper body.

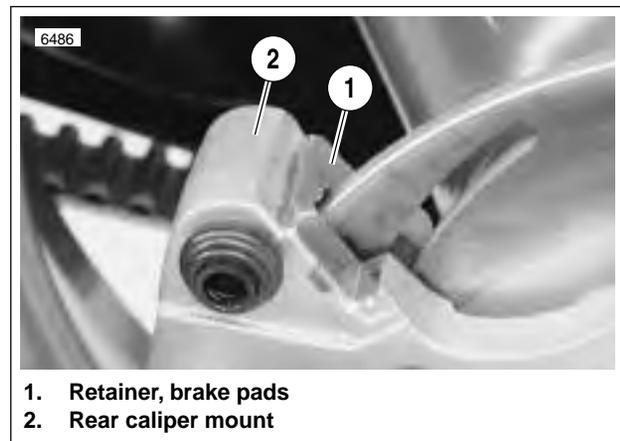

- Retainer, brake pads
- Rear caliper mount

Figure 2-60. Retainer, Brake Pads

NOTE

See [Figure 2-60](#). Always make sure brake pad retainer is in place on caliper mount before installing pads and caliper.

- See [Figure 2-58](#). Install brake pads (3) using pad hanger and pin plug (2).
 - Install pad hanger pin (metric). Tighten to 11-14 ft-lbs (15-19 Nm).
 - Install pin plug. Tighten to 22-26 **in-lbs** (2-3 Nm).
- Install a **new** bleeder valve (metric) if necessary and tighten to 36-60 **in-lbs** (4-7 Nm).

INSTALLATION

1. See [Figure 2-60](#). Install brake pad retainer (1) if removed.
2. See [Figure 2-57](#). Install caliper assembly on caliper mount. Brake pad surfaces must face rear brake rotor.
 - a. Install large caliper screw (7) (metric) tightening to 18-21 ft-lbs (24-28 Nm).
 - b. Install small caliper screw (6) (metric) tightening to 14-18 ft-lbs (19-24 Nm).
 - c. Install caliper carrier onto swingarm tightening caliper carrier fasteners (8) to 24-26 ft-lbs (33-35 Nm).

⚠ WARNING

Use only copper crush banjo washers (See Parts Catalog for Part No.) with D.O.T. 4 brake fluid. Earlier silver banjo washers are not compatible with D.O.T. 4 fluid and will not seal properly over time. Failure to comply may adversely affect braking ability and lead to brake failure which could result in death or serious injury.

CAUTION

To avoid leakage, verify that gaskets, banjo bolt, hydraulic brake line and caliper bore are completely clean.

3. See [Figure 2-57](#). Connect brake line (1) to caliper using two **new** copper washers (3) and banjo bolt (2) (metric). Tighten to 16-20 ft-lbs (22-27).
4. Depress rear brake pedal several times to set brake pads to proper position within caliper. Bleed brake system.

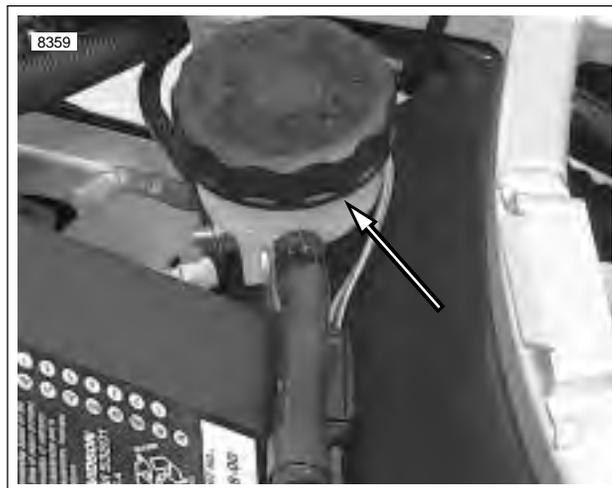


Figure 2-61. Rear Reservoir

5. See [Figure 2-61](#). Verify proper fluid level in reservoir.

⚠ WARNING

Always test motorcycle brakes at low speed after servicing or bleeding system. To prevent death or serious injury, Buell recommends that all brake repairs be performed by a Buell dealer or other qualified mechanic.

6. Turn ignition key switch to ON. Apply brake pedal to test brake lamp operation. Turn ignition key switch to LOCK.

⚠ WARNING

Check for proper brake lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper brake lamp operation could result in death or serious injury.

NOTE

Avoid making hard stops for the first 100 miles (160 km) to allow **new** brake pads to “wear in” properly with the brake rotor.

GENERAL

The front fork consists of two telescoping outer tube/inner slider assemblies. Each assembly has an internal compression spring which supports the forward weight of the vehicle and rider. The compression spring extends and retracts to cushion the ride over rough or irregular road surfaces. An oil filled damping mechanism controls the telescoping action of each tube/slider assembly.

See [1.12 SUSPENSION DAMPING ADJUSTMENTS](#) for more information.

REMOVAL

1. Remove front fender. See [2.31 FENDERS](#).
2. Remove front wheel. See [2.5 FRONT WHEEL](#).
3. Remove caliper mounting fasteners. See [2.12 FRONT BRAKE CALIPER](#).


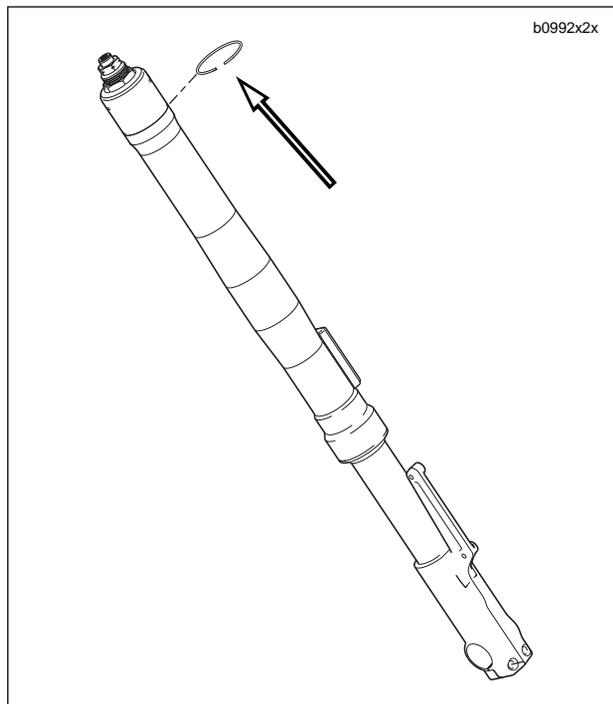


Figure 2-63. Stopper Ring

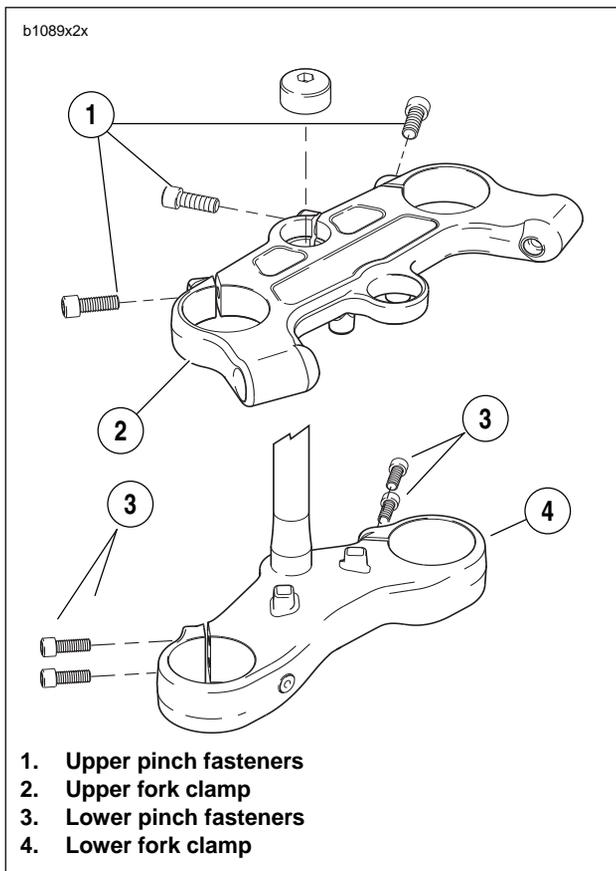

1. Upper pinch fasteners
2. Upper fork clamp
3. Lower pinch fasteners
4. Lower fork clamp

Figure 2-62. Upper and Lower Fork Clamp Pinch Fasteners

4. Loosen upper (1) and lower (3) fork clamp pinch fasteners.
5. Remove fork from upper fork clamp (2)
6. See [Figure 2-63](#). Slide the stopper ring up and over the top of the fork.
7. See [Figure 2-62](#). Remove fork from lower fork clamp (4).
8. Repeat 4 through 6 on opposite side.

DISASSEMBLY

NOTE

Record rider suspension settings before disassembly.

1. Remove front fork. See [REMOVAL](#) in [2.16 FRONT FORK](#).

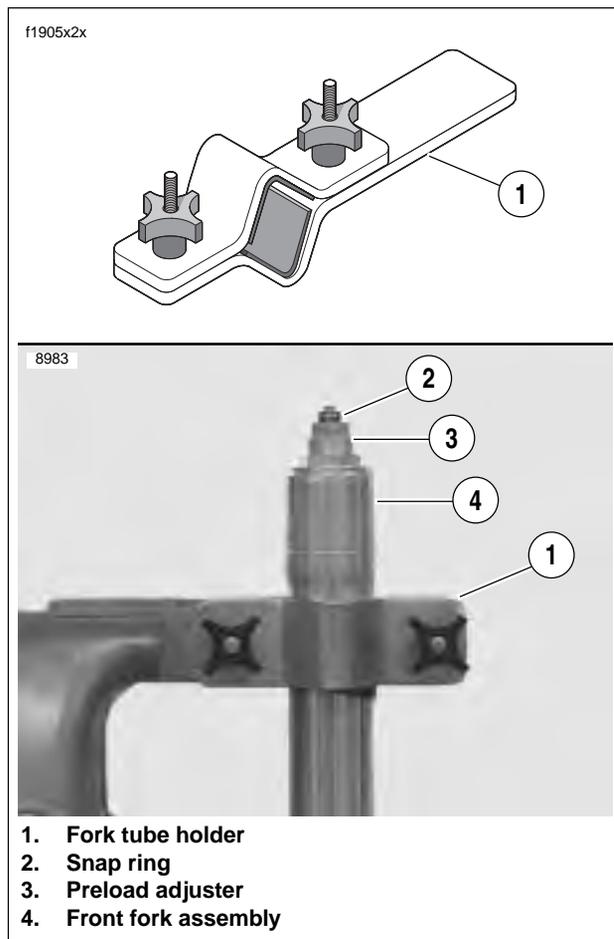


Figure 2-64. Fork Tube Holder (HD-41177)

2. See [Figure 2-64](#). Clamp the FORK TUBE HOLDER TOOL (1) (Part No. HD-41177) in a vise and install the upper part of the front fork in the holding tool.
3. Remove snap ring (2).

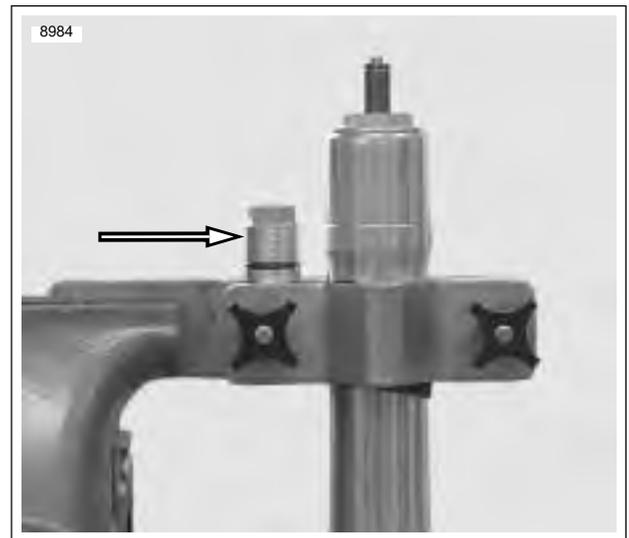


Figure 2-65. Removing Preload Adjuster

4. See [Figure 2-65](#). Remove preload adjuster by turning counterclockwise.

NOTE

After fully unthreading preload adjuster, gently pull on adjuster.

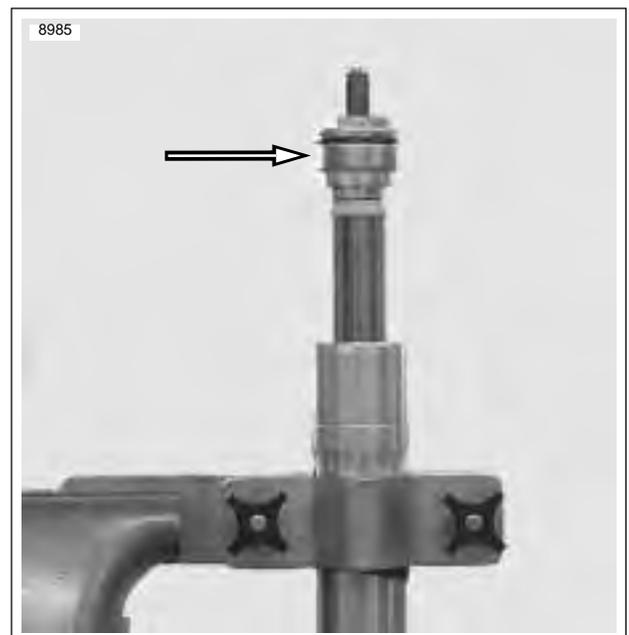


Figure 2-66. Removing Fork Cap From Outer Tube

5. See [Figure 2-66](#). Remove fork cap from outer tube.

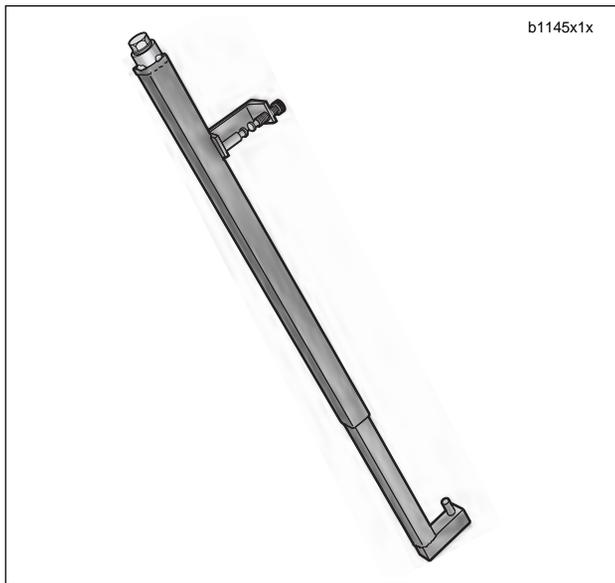


Figure 2-67. Fork Spring Compressing Tool (HD-45966)

6. See [Figure 2-67](#). Move the fork assembly from the holding tool and compress fork in the FORK SPRING COMPRESING TOOL.

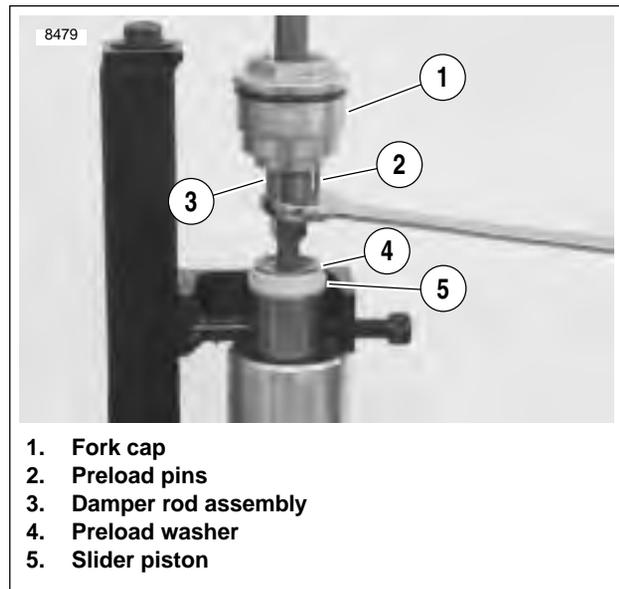


Figure 2-68. Holding Damper Rod Assembly


7. See [Figure 2-68](#). Hold damper rod assembly (3) and remove fork cap (1).

CAUTION

Careful not to damage preload pins while holding damper rod assembly.

8. Remove preload washer (4) and slider piston (5).
9. See [Figure 2-67](#). Uncompress fork and remove from FORK SPRING COMPRESING TOOL.

b0991x2x

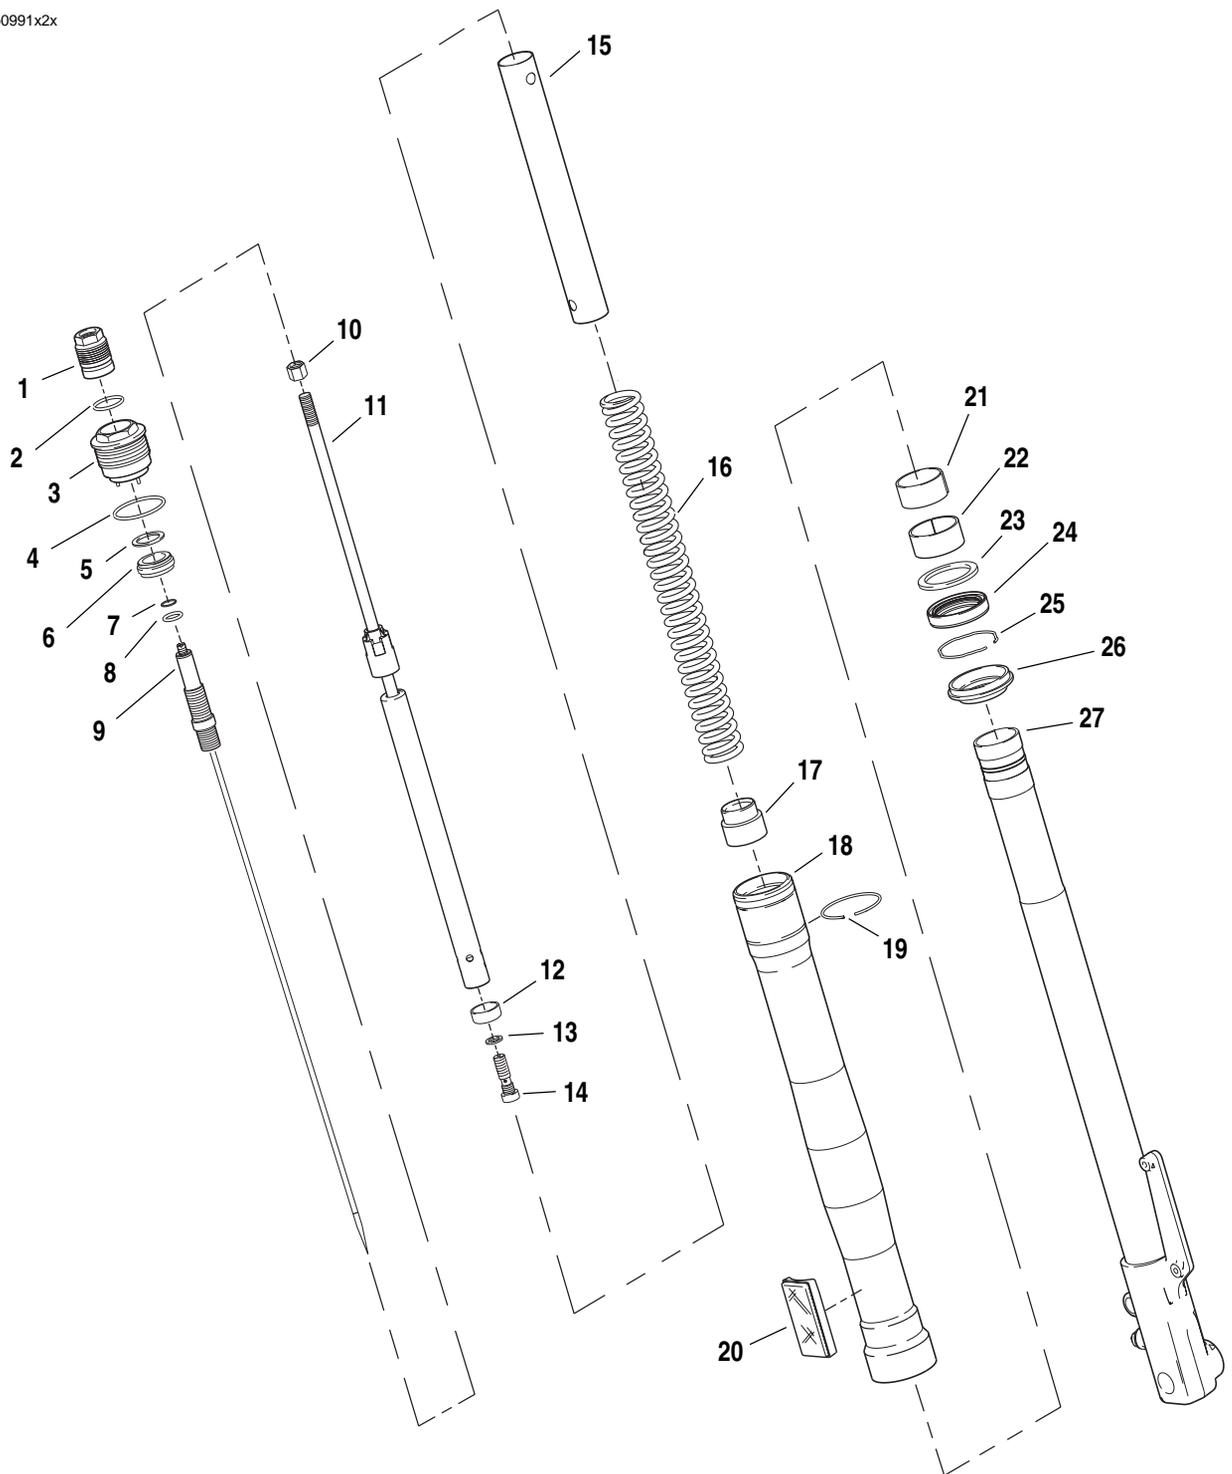

1. Preload adjuster
2. Preload adjuster o-rings
3. Fork cap
4. Fork cap o-ring
5. Preload washer
6. Slider piston
7. Inner slider piston o-ring
8. Snap ring
9. Rebound adjuster assembly

10. Damper locknut
11. Damper rod assembly
12. Centering plate
13. Ceiling washer
14. Center bolt
15. Collar
16. Spring
17. Spring joint
18. Outer tube

19. Stopper ring
20. Reflector assembly
21. Slide bushing
22. Guide bushing
23. Seal spacer
24. Oil seal
25. Oil seal stopper ring
26. Dust seal
27. Slider fork

Figure 2-69. Front Fork Assembly

10. See [Figure 2-69](#). Over drain pan, spring collar (15), remove spring (16) and drain fork oil.
11. Drain remaining fork oil by pumping the damping rod (11) approximately 8 to 10 times or until damping rod moves freely.
12. Clamp fork upside down in the FORK TUBE HOLDER TOOL (Part No. HD-41177) over drain pan allowing fork oil to drain.

NOTE

Be careful not to drop damping rod assembly into oil pan when removing center bolt.

13. Remove center bolt (14) to release damping rod assembly (11).
14. Remove centering plate (12) from dampening rod (11).

WARNING

Be careful not to scratch the slider fork or the outer tube. Improperly operating forks may lead to a loss of control which could result in death or serious injury.

15. Remove dust seal (26) to access oil seal stopper ring (25).
16. Release the oil seal stopper ring (25) out from the outer tube with a small pry tool.
17. Using a slide hammer action, remove the slider fork (27) from the outer tube (18).
18. Remove the slide bushing (21) from slider fork by prying the slide bushing at the split.

NOTE

Careful not to over expand slide bushing.

19. Remove guide bushing (22), seal spacer (23), oil seal (24), stopper ring (25) and dust seal (26).

Damper Rod Disassembly**IMPORTANT NOTES**

- **See [Figure 2-69](#). Disassembly of damper rod is not required unless damper locknut (10) has been moved. If damper rod needs servicing refer to the Parts Catalog for kit information.**
 - **If damper locknut has been moved, proceed with the following disassembly and assembly procedures for setting the correct range of motion.**
1. See [Figure 2-69](#). Lightly turn the rebound adjuster screw on top of the rebound adjuster assembly (9) counter clockwise till it stops.
 2. Holding the damper locknut (10), unscrew the rebound adjuster assembly (9) and remove from damper rod assembly (11).
 3. Remove damper locknut (10) from damper rod assembly (11).

CLEANING AND INSPECTION

1. Thoroughly clean and inspect all parts. Replace any parts that are bent, broken or damaged.
2. See [Figure 2-69](#). Check the slider fork (27) and outer tube (18) for score marks, scratches and excessive or abnormal wear. Replace if worn or damaged.
3. Check the slide bushing (21) and the guide bushing (22) for excessive wear or scratches. Replace if damaged or worn.
4. Replace the stopper ring (19) if distorted.
5. Measure spring (16) free length. Replace springs shorter than service wear limit of 9.13 in. (232 mm).
6. See [Figure 2-70](#). Measure slider fork runout. Replace pipe if runout exceeds the service wear limit of 0.008 in. (0.2 mm).

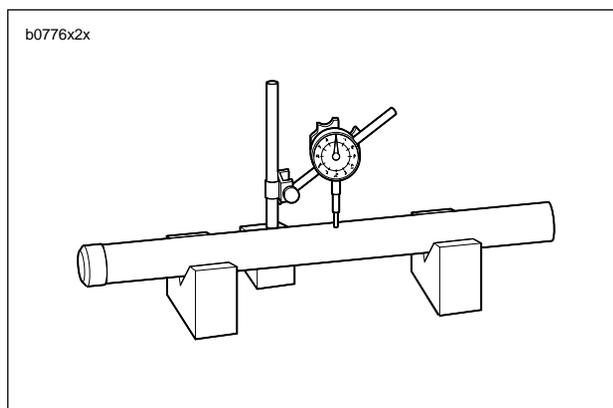


Figure 2-70. Slider Fork Runout

ASSEMBLY

Damper Rod Assembly

Note

Skip to fork assembly if damper rod assembly was not disassembled.

- See [Figure 2-69](#). Fully thread the damper rod locknut (10) on to damper rod (11) clockwise till it lightly bottoms.

NOTE

Set both forks to the exact same suspension settings.

- Adjust rebound assembly for proper range of motion.
 - Lightly turn the rebound adjuster screw on top of the rebound adjuster assembly (9) counterclockwise till it stops.
 - Turn the rebound adjuster screw three full turns clockwise.
- Fully thread rebound adjuster assembly (9) onto the damper rod assembly (11) until it lightly bottoms. Do not tighten.
- Thread the damper locknut (10) until bottoms lightly on the rebound adjuster assembly. Do not tighten
- Turning the rebound adjuster screw (9) counterclockwise three full turns or until stops.

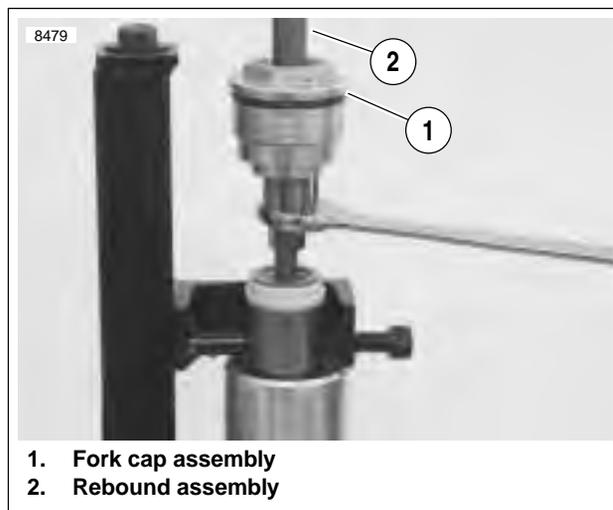


Figure 2-71. Rebound Assembly and Fork Cap Assembly

- See [Figure 2-71](#). Tighten the damper locknut (10) to 22-30 ft-lbs (30-40 Nm).
- Repeat for other fork assembly.

Fork Assembly

- See [Figure 2-69](#). Wrap the end of the slider fork (27) and the slide bushing channel with tape to avoid damaging the oil seal lip when installing.
- Install a **new** dust seal (26) and stopper ring (25) onto the slider fork (27).
- Coat the sealing lips of the **new** oil seal (24) with fork oil or sealing grease and install onto the slider fork with its marked side facing the dust seal (26).
- Remove the tape from the slider fork end.
- Install the seal spacer (23), the guide bushing (22) and the slide bushing (21) onto the slider fork (27).
- Coat the slide bushing (21) and the guide bushing (22) with fork oil.

CAUTION

The outer tube can move freely up and down on the slider fork. Always hold both the slider fork and outer tube to prevent damage to bushings and seals.

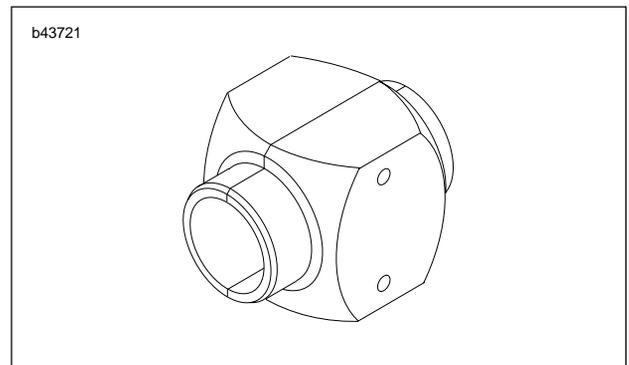


Figure 2-72. Fork Seal Driver (B-43721)

- See [Figure 2-69](#). Drive the guide bushing (22) with the seal spacer (23) and oil seal (24) into position in the outer tube using a FORK SEAL DRIVER (Part No. B-43721). See [Figure 2-72](#).
- Install the oil seal stopper ring (25) and a **new** dust seal (26).
- Place the fork in the FORK TUBE HOLDER TOOL (Part No. HD-41177) and clamp into vise horizontally.
- See [Figure 2-69](#). Install the centering plate (12) onto the damper assembly (11) and insert the damper assembly into the slider fork (27).
- Replace the sealing washer (13) and center bolt (14) (metric). Tighten the center bolt to 22-30 ft-lbs (30-40 Nm).

12. Move the front fork and the FORK TUBE HOLDER TOOL in the vise from the horizontal position to the vertical.

NOTES

- The recommended fork oil is hydraulic fork oil Type "E".
 - Use only TYPE E FORK OIL (Part No. HD-99884-80).
13. Pour 7 oz. (204 cc) into the fork pipe.
 14. Pump the damper rod approximately 12 to 15 times or until resistance is felt.
 15. Place the damper rod in the fully bottomed position and compress fork completely.
 16. Pour 7 oz. (204 cc) more fork oil into the slider fork.
 17. See [Figure 2-73](#). Adjust fork oil level with FRONT FORK OIL LEVEL GAUGE (Part No. B-59000A) so that it is 4.6 in. (118 mm) from the top of the fork tube.
 18. See [Figure 2-69](#). Install spring (16) and collar (15).
 19. Move fork assembly from holding tool to the FORK SPRING COMPRESSION TOOL.
 20. See [Figure 2-68](#). Install preload washer (4) and slider piston (5).
 21. Hold damper rod assembly (3) and install fork cap (1) from damper rod assembly (3) tightening to 22-30 ft-lbs (30-40 Nm).

NOTE

See [Figure 2-68](#). Careful not to damage preload pins (2) while holding damper rod assembly (3).

22. Apply fork oil or light grease to o-rings on preload adjuster and install preload adjuster (3).
23. Install snap ring (2).

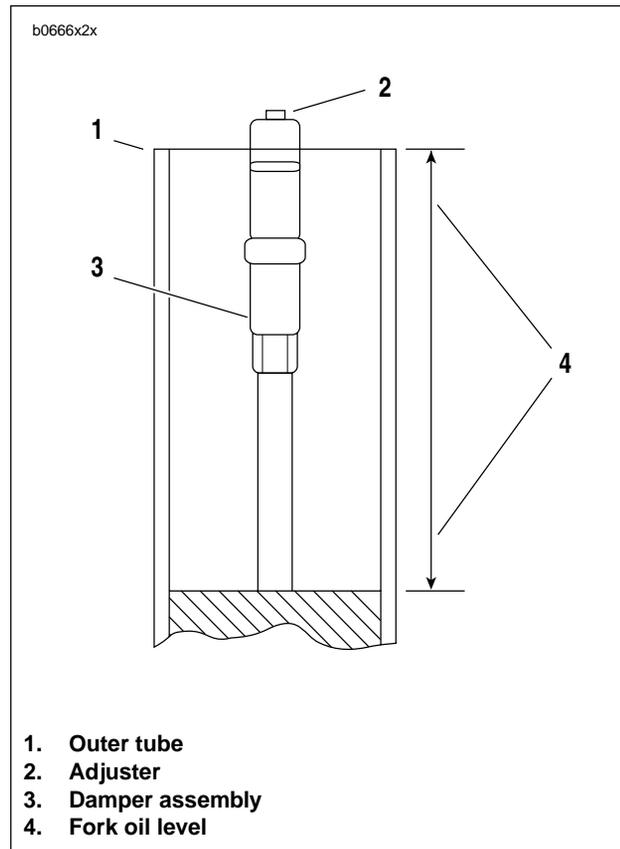


Figure 2-73. Measuring Fork Oil Level

INSTALLATION

1. See [Figure 2-63](#). Install one front fork assembly into lower fork clamp.
2. Slide the stopper ring over top of fork assembly and into groove.

⚠ WARNING

Carefully install the fork into the upper fork clamp. Forcing the fork into the upper fork clamp could move the stopper ring out of the groove which will not allow the correct upper fork clamp load resulting in possible loss of control of the motorcycle and could result in death or serious injury.

3. Install fork assembly into upper fork clamp.

⚠ WARNING

Both forks should display the same number of alignment lines. Forks that are not properly aligned may lead to a loss of control which could result in death or serious injury.

4. See [Figure 2-74](#). Position fork with alignment lines (4) visible and reflector facing to the side and tighten the lower fork clamp.
5. Repeat step 1 through 4 on second front fork.
6. Temporarily install front axle to the fork assemblies to verify correct alignment.
7. Use LOCTITE 272 on upper fork clamp fasteners and tighten to 17-19 ft-lbs (23-26 Nm).
8. Use LOCTITE 272 on lower fork clamp fasteners and tighten to 13-15 ft-lbs (18-20 Nm).
9. Repeat torque sequence in steps 7 and 8.
10. Install front brake caliper onto caliper mount. See [2.12 FRONT BRAKE CALIPER](#).
11. Install front wheel. See [2.5 FRONT WHEEL](#).
12. Install front fender. See [2.31 FENDERS](#).
13. Check headlamp alignment. See [1.19 HEADLIGHTS](#).
14. Adjust front forks suspension to rider preferences. See [1.12 SUSPENSION DAMPING ADJUSTMENTS](#).

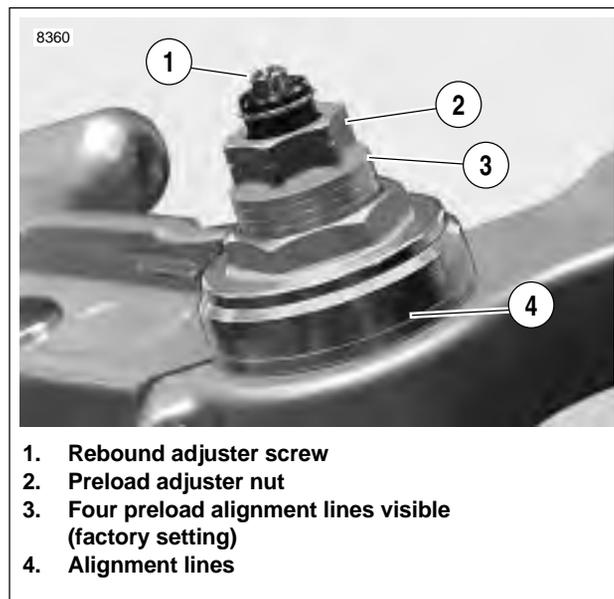


Figure 2-74. Front Fork Preload And Rebound Adjuster

NOTES

REMOVAL

1. Place a scissor jack under jacking point and raise front wheel off ground. For location of jacking point see [2.28 EXHAUST SYSTEM](#).
2. Remove handlebars. See [2.27 HANDLEBARS](#).
3. Remove cable straps securing wiring harnesses to the upper fork clamp.
4. Remove front fork assemblies. See [2.16 FRONT FORK](#).
5. See [Figure 2-75](#). Remove steering stem pinch fastener (2).
6. Under right side of front fairing, cut cable strap holding ignition switch, fuse block and right handlebar switch wires. See [7.3 IGNITION/HEADLIGHT KEY SWITCH](#).
7. Unplug the ignition switch. See [7.3 IGNITION/HEADLIGHT KEY SWITCH](#).
8. See [Figure 2-75](#). Hold or brace the lower fork clamp and remove steering stem cap (1).
9. Remove the upper fork clamp (4).
10. Remove the lower fork clamp (8).
11. Remove ignition switch. See [7.3 IGNITION/HEADLIGHT KEY SWITCH](#).
12. If steering head bearings need replacing, see [2.18 STEERING HEAD BEARINGS](#).

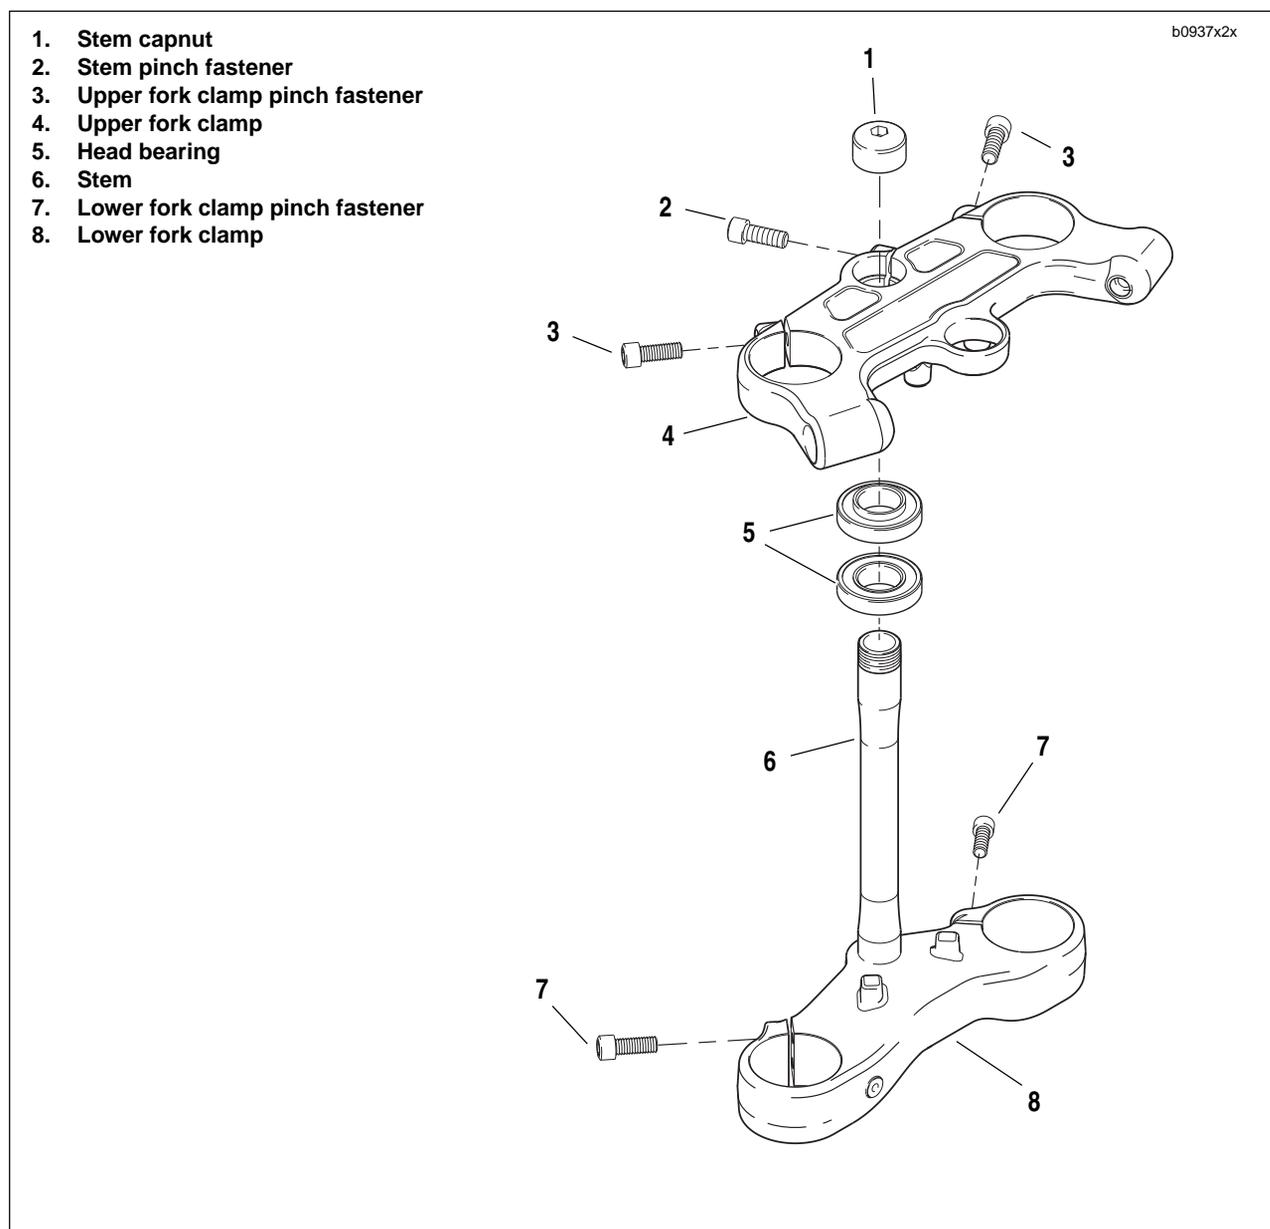


Figure 2-75. Steering Stem Assembly

INSTALLATION

1. See [Figure 2-75](#). Install the lower fork clamp (8) into the steering stem bore and install the upper fork clamp (4).
2. Install steering stem cap (1). Thread on by hand but do not torque.

WARNING

Carefully install the fork into the upper fork clamp. Forcing the fork into the upper fork clamp could move the stopper ring out of the groove which will not allow the correct clamp load causing a possible loss of control of the motorcycle which could result in death or serious injury.

3. Install one front fork assembly into lower fork clamp (8).
4. See [Figure 2-69](#). Slide the stopper ring (19) over top of fork assembly and into groove.
5. Install upper clamp on fork assembly. Tighten but do not torque lower fork clamp pinch fasteners.
6. Repeat previous two steps on second fork assembly.
7. Tighten steering stem cap to 38-42 ft-lbs (52-57 Nm).
8. Install steering stem pinch bolt applying LOCTITE 272 and tightening to 17-19 ft-lbs (23-26 Nm).

WARNING

Both forks should display the same number of alignment lines. Forks that are not properly aligned may lead to a loss of control which could result in death or serious injury.

9. See [Figure 2-74](#). Position both forks with same number alignment lines (4) visible and reflectors facing to the sides. Do not tighten.
10. Use LOCTITE 272 on upper fork clamp fasteners and tighten to 17-19 ft-lbs (23-26 Nm).
11. Use LOCTITE 272 on lower fork clamp fasteners and tighten to 13-15 ft-lbs (18-20 Nm).
12. Repeat torque sequence in steps 10 and 11.
13. Install handlebars. See [2.27 HANDLEBARS](#).
14. See [Figure 2-96](#). Install cable straps.
 - a. Install cable strap to the right of ignition switch securing right hand switch and brake line wires to upper fork clamp.
 - b. Install cable strap to the left of ignition switch securing left hand switch and clutch cable wires to upper fork clamp.

REMOVAL

1. Place a scissor jack under jacking point and raise front wheel off ground. For location of jacking point see [Figure 2-104](#).
2. Remove brake lever housing. See [2.10 FRONT BRAKE MASTER CYLINDER AND HAND LEVER](#).
3. Remove headlight assembly and support. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
4. Remove front forks, lower fork clamp, brake and wheel as front-end assembly.
 - a. See [Figure 2-75](#). Loosen steering stem pinch fastener (2) and upper and lower fork clamp pinch fasteners (3, 7).
 - b. Brace wheel while removing steering stem cap fastener (1).
 - c. Remove upper fork clamp (4) and front-end assembly which includes front wheel, steering stem/lower fork clamp.
5. Remove upper and lower steering head bearings (5).
 - a. See [Figure 2-76](#). Locate notches inside steering head stem bore (upper bearing removed for clarity).
 - b. Place a suitable tool in the notches of the steering stem bore and remove upper and lower steering head bearings.



Figure 2-76. Lower Steering Head Bearing Notches (upper bearing removed for clarity)

NOTE

Discard steering head bearings and replace with new. Steering head bearings are not reusable.

INSTALLATION

NOTE

For easier installation of bearing, lubricate the outer bearing with engine oil prior to installing into steering stem bore.

1. See [Figure 2-77](#). Install **new** upper and lower steering head bearings into the steering stem using STEERING HEAD BEARING RACE INSTALLER (Part No. HD-39302), and the STEERING HEAD BEARING INSTALLER (Part No. B-45521).

- a. See [Figure 2-78](#). Place the upper bearing squarely in the steering stem bore with the inner race lip pointing away from the steering head.
- b. See [Figure 2-77](#). Insert the steering head bearing installation tool into the upper bearing, with the shoulder into the bearing bore.
- c. Insert the forcing screw from the steering head bearing race installer through the steering head bearing installation tool.

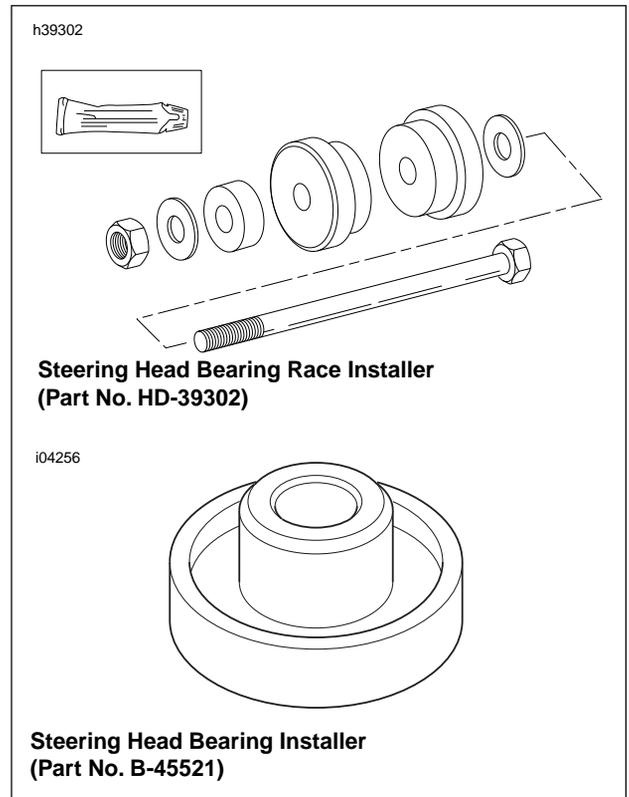


Figure 2-77. Steering Head Bearings Installation Tools

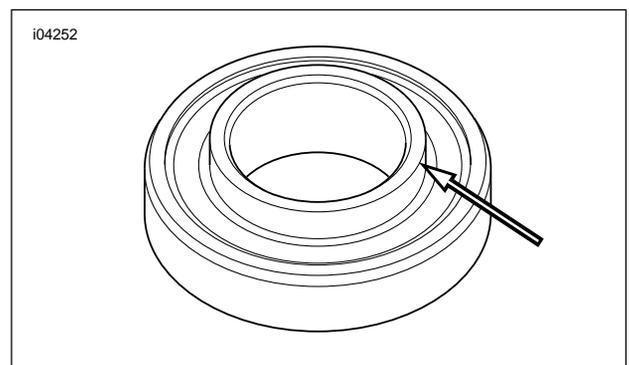


Figure 2-78. Steering Head Bearing Lip

- See [Figure 2-79](#). Sparingly apply Extreme Pressure Lubricant (J-23444-A) to the threads of the forcing screw (1) from the Steering Head Bearing Race Installer (HD-39302), to prolong service life and ensure smooth operation. Insert the forcing screw (1) through the Steering Head Bearing Installation Tool (B-45521) (2).

NOTE

For ease of steering head bearing installation, lubricate the outside of the steering head bearings.

- See [Figure 79](#). Place the lower bearing (3) onto the forcing screw (1), with the inner race lip pointing away from the steering head.
- Place the Steering Head Bearing Installation Tool (B-45521) (2) onto the forcing screw, with the shoulder into the bearing bore.
- Install the bearing (4), washer (5) and nut (6) from the Steering Head Bearing Race Installer (HD-39302) onto the forcing screw (1).
- Tighten the nut (6) by hand, until both bearings are started into the bores in the steering head.

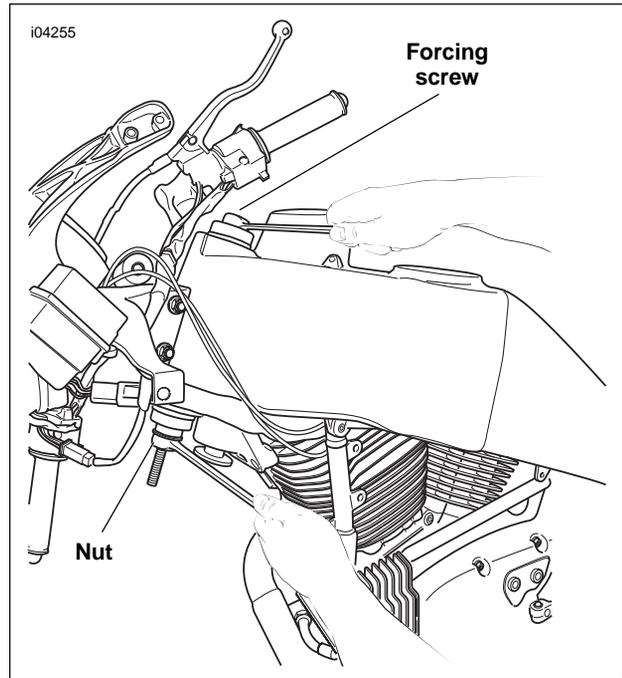


Figure 2-80. Install Bearings

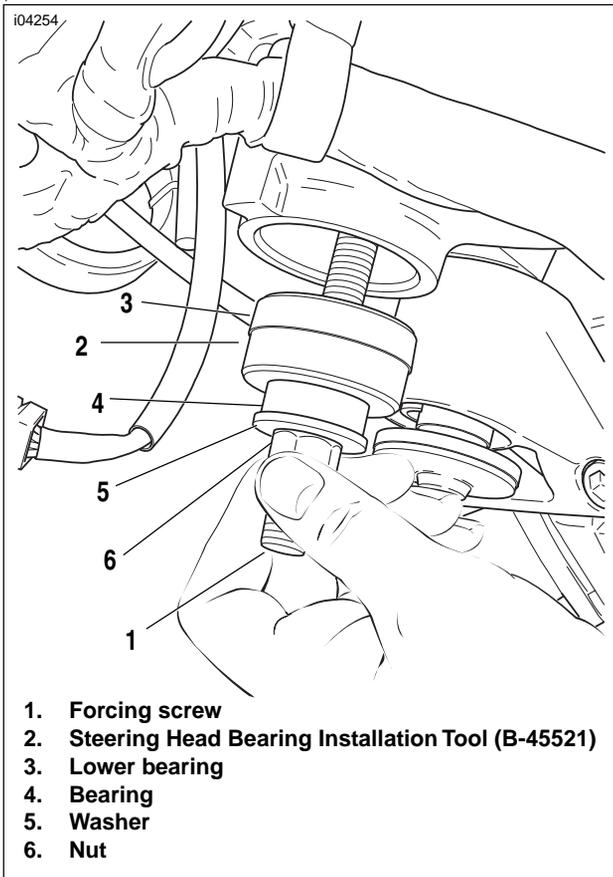


Figure 2-79. Lower Bearing

- Install forks, front wheel, and lower fork clamp/steering stem as an assembly.
- Install upper fork clamp.
- Tighten steering stem cap to 38-42 ft-lbs (52-57 Nm).
- Use LOCTITE 272 on steering stem pinch fastener and tighten to 17-19 ft-lbs (23-26 Nm).
- Install headlight assembly and support See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).

- See [Figure 2-80](#). Hold the forcing screw while tightening the nut to draw the bearings into the steering head. Continue tightening until both bearings are fully seated.
- Visually check to make sure the bearings are completely seated against the shoulders in the steering head.

GENERAL

The swingarm also serves as the oil tank. For information on the swingarm function as the oil tank, see [3.8 LUBRICATION SYSTEM](#).

The swingarm features a removable brace on the right side to allow drive belt replacement. Sealed bearings eliminate the need for preload adjustment.

REMOVAL

Brace

CAUTION

Before removing swingarm brace, always relieve belt tension first. Removing swingarm brace without releasing tension will cause swingarm brace damage.

1. Remove left side rider footpeg mount. See [2.29 FOOT-PEG, HEEL GUARD AND MOUNT](#).
2. See [Figure 2-81](#). Loosen rear axle pinch fastener (2).
3. Loosen rear axle (1) approximately 15 rotations to allow partial tension to be removed from rear drive system.


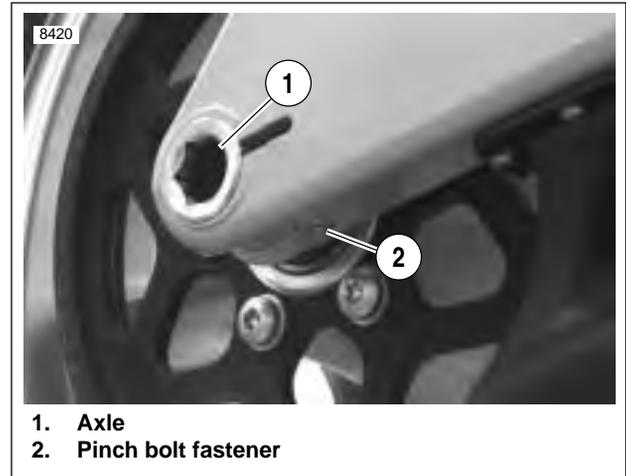



Figure 2-81. Rear Wheel Mounting, Right Side

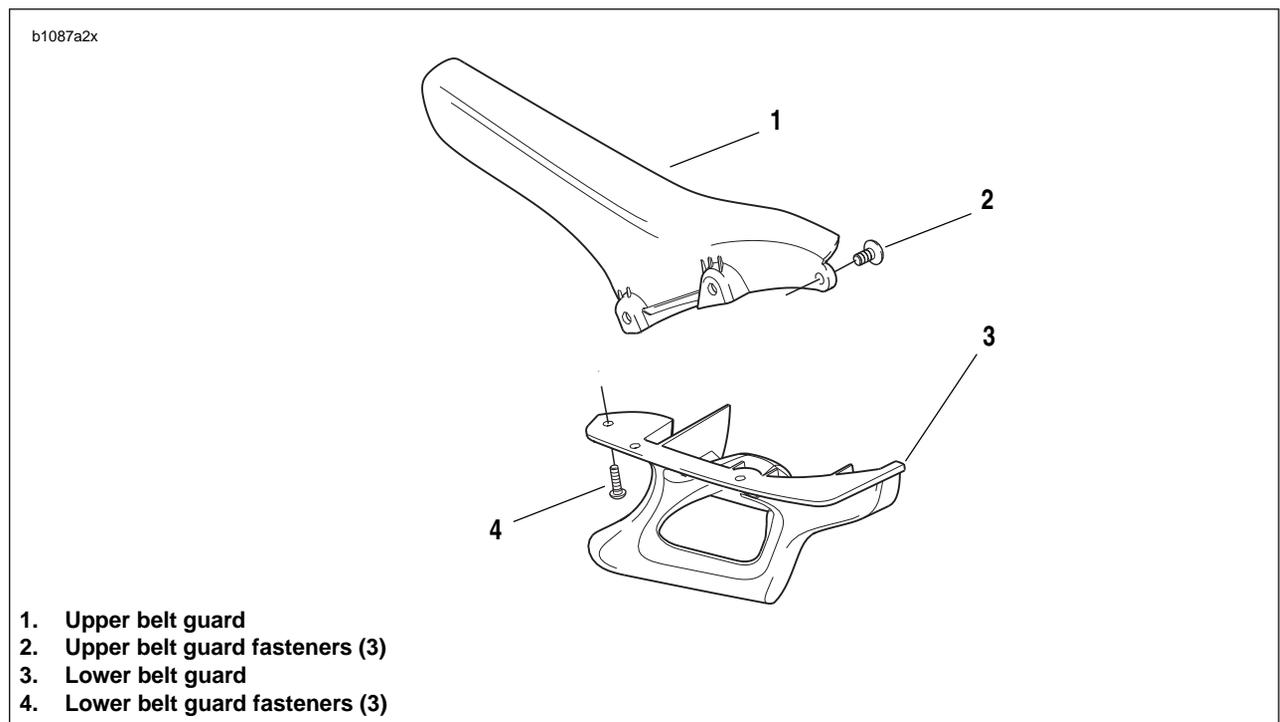

1. Upper belt guard
2. Upper belt guard fasteners (3)
3. Lower belt guard
4. Lower belt guard fasteners (3)

Figure 2-82. Belt Guard Assembly

b1167x2x

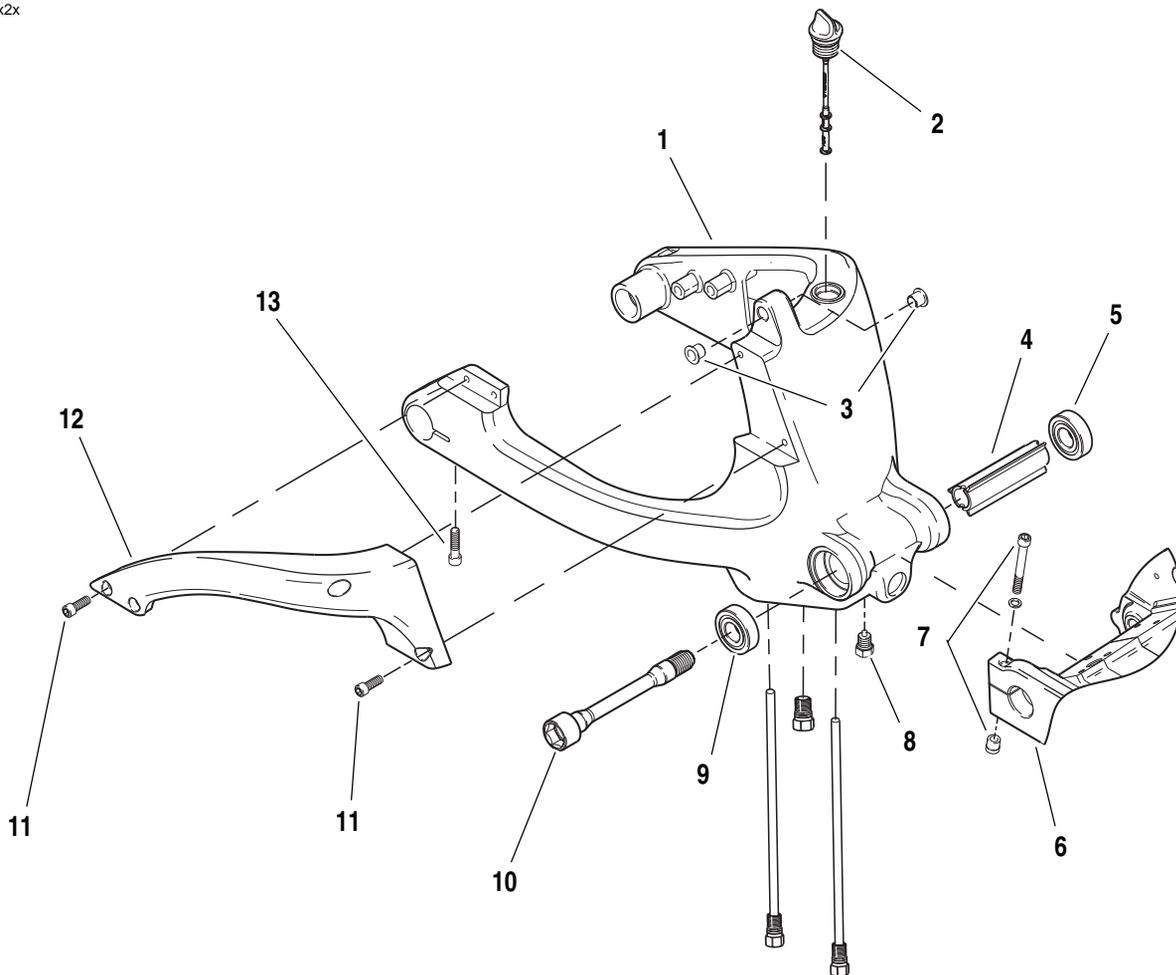

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Swingarm 2. Dipstick 3. Swingarm bushings 4. Swingarm spacers 5. Swingarm bearing 6. Engine crankcase 7. Pivot shaft pinch fastener w/nut | <ul style="list-style-type: none"> 8. Oil drain plug 9. Swingarm bearing 10. Pivot shaft 11. Brace fastener (4) 12. Swingarm brace 13. Rear axle pinch fastener |
|--|---|

Figure 2-83. Swingarm Assembly

4. See [Figure 2-83](#). Remove swingarm brace mounting fasteners (11, 12).
5. Remove swingarm brace (13).
6. Remove p-clamp and washer that secures rear brake line to swingarm.
7. See [Figure 2-89](#). Remove lower shock absorber mounting fastener (7) and spacer from shock absorber and swingarm.
8. See [Figure 2-83](#). Loosen pivot shaft pinch fastener (7).
9. Remove pivot shaft (10) with a special 7/8 in. hex tool located in tool kit.

Swingarm

1. Remove seat. See [2.38 SEAT](#).

WARNING

To protect against accidental start-up of vehicle and possible personal injury, disconnect the negative battery cable before proceeding. Inadequate safety precautions could cause a battery explosion, which could result in death or serious injury.

2. Disconnect battery by unthreading fasteners removing negative cable (black) from battery first. See [1.5 BATTERY MAINTENANCE](#).

DISASSEMBLY

CAUTION

Carefully mark all bearing components as they are removed so that they may be returned to their original locations. Do not intermix bearing components.

Swingarm

1. See [Figure 2-84](#). Remove oil line fittings from swingarm. See [Table 2-13](#).



Figure 2-84. Oil Line Fittings

Table 2-13. Oil line Fittings

| FITTINGS (FUNCTION) | HEX SIZE (SWINGARM) | HEX SIZE (HOSE) |
|------------------------|------------------------|--------------------|
| Right/Small (Vent) | 5/8" | 7/16" |
| Center/Large (Supply) | 13/16" | 5/8" |
| Left/Medium (Return) | 3/4" | 1/2" |

2. See [Figure 2-83](#). Remove swingarm bearings (5, 9) using slide hammer (SNAP-ON Part No. CJ1275 or equivalent) and 3/4 in. bearing remover and spacer.
3. Remove shock mount bushings (3) and sleeve.
4. Remove rear fender. See [2.31 FENDERS](#).

NOTE

See [Figure 2-83](#). Remove swingarm bearings (5, 9) only if replacement is required. The complete bearing assembly must be replaced as a unit when replacement is necessary. Do not intermix bearing components.

CLEANING AND INSPECTION

WARNING

Compressed air can pierce the skin and cause injury. Never use your hand to check for leaks or to determine air flow rates. Wear safety glasses to shield your eyes from flying dirt and debris. Failure to comply could result in death or serious injury.

1. Thoroughly clean all components in solvent. Blow dry with compressed air.
2. Carefully inspect all bearing components for wear and/or corrosion. Replace complete bearing assembly if any component is damaged.
3. Check that swingarm is not bent or twisted. Replace if damaged.

ASSEMBLY

Swingarm

1. See [Figure 2-83](#). Install **new** shock mount bushings (3).
2. Install **new** bearings (5, 9) and spacer (4) with BEARING INSTALLER (Part No. HD44060) by lightly seating spacer.

NOTE

Swingarm bearings should be replaced as a unit. Do not intermix components. Mark all components so they may be correctly installed.

3. See [Figure 2-84](#). Install oil line fittings on swingarm. Tighten to 29-31 ft-lbs (39-42 Nm). See [3.9 OIL HOSE ROUTING AND OIL RESERVOIR](#).
4. See [Figure 2-83](#). Install drain plug (8). Tighten to 29-31 ft-lbs (39-42 Nm).

INSTALLATION

Swingarm

1. See [Figure 2-83](#). Align swingarm (1) in pivot of engine crankcase (6).
2. Install pivot shaft (10) with a special 7/8 in. hex tool located in tool kit, ANTI-SEIZE and tighten to 24-26 ft-lbs (32-35 Nm).
3. Apply LOCKTITE 272 and tighten pivot shaft pinch fastener (7) to 17-19 ft-lbs (23-26 Nm).
4. See [Figure 2-89](#). Install lower shock absorber mounting fastener (7) and spacer from shock absorber and swingarm and tighten to 15-17 ft-lbs (20.3-23 Nm).
5. Install p-clamp and washer that secures rear brake line to swingarm and tighten to 36-60 **in-lbs** (4-7 Nm).
6. Install three oil lines from swingarm fittings. See [3.9 OIL HOSE ROUTING AND OIL RESERVOIR](#).
7. Install rear wheel. See [2.6 REAR WHEEL](#).

NOTE

Installing the rear wheel will include installation of the belt drive system. See [6.6 DRIVE BELT SYSTEM](#).

8. Fill motorcycle with recommended oil. See [1.6 ENGINE LUBRICATION SYSTEM](#).

Brace

1. See [Figure 2-82](#). Install the upper belt guard (1) and fasteners (2, 4).
2. Install the belt drive. See [6.6 DRIVE BELT SYSTEM](#).
3. See [Figure 2-83](#). Install swingarm brace (12) with swingarm brace mounting fasteners (11) loosely. Do not tighten.
4. Tighten swingarm brace fasteners (11) to 25-27 ft-lbs (34-37 Nm).
5. Tighten rear axle to 48-52 ft-lbs (65-70 Nm).
6. Tighten rear axle pinch fastener (13) to 40-45 ft-lbs (54-61 Nm).
7. Install left and right side passenger footpeg mounts. Tighten fasteners to 25-28 ft-lbs (34-37 Nm). See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
8. Install right side rider footpeg mount. Tighten fasteners to 108-132 **in-lbs** (12-15 Nm). See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
9. Install heel guard. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
10. Remove rear wheel support stand.

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

11. Install battery by threading positive cable (red) into threaded hole first tightening to 72-96 **in-lbs** (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

WARNING

After completing repairs or bleeding the system, always test motorcycle brakes at low speed. If brakes are not operating properly or braking efficiency is poor, testing at high speeds could result in death or serious injury.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

12. Install seat. See [2.38 SEAT](#).

Final Swingarm Inspection

1. Check oil level after starting motorcycle and allowing it to reach operating temperature.
2. Check rear brake operation.

FRONT ISOLATOR

Removal

CAUTION

Avoid cross-threading front isolator bolt or insert. Keep weight of motorcycle off front isolator by alternately loosening front isolator bolt and raising scissor jack to support engine.

1. Place a scissor jack under jacking point for supporting engine only. For location of jacking point see [Figure 2-104](#).
2. See [Figure 2-85](#). Remove clutch cable wire form.

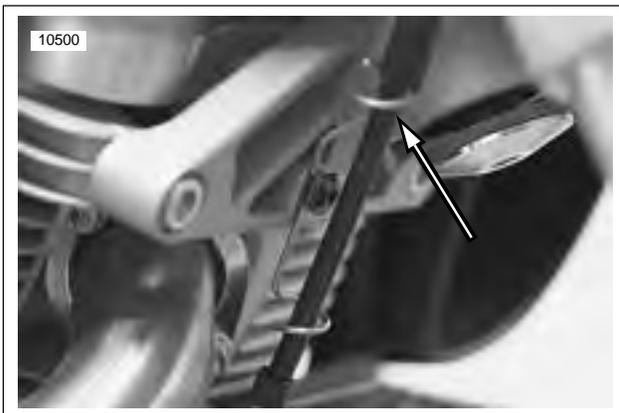


Figure 2-85. Clutch Cable Wire Form

3. See [Figure 2-86](#). Remove front isolator bolt (6).
4. Remove front isolator mount fasteners (5).
5. Remove front isolator bracket (4).
6. Remove upper snubber fastener (2) and remove upper snubber (1).

Installation

1. See [Figure 2-86](#). Install upper snubber (1) tightening snubber fastener (2) to 12-36 in-lbs (1-4 Nm).
2. See [Figure 2-87](#). Lubricate front isolator bolt with ANTI-SEIZE and loosely install.
3. See [Figure 2-86](#). Use LOCTITE 272 on front isolator bracket (4) and install. Tightening fastener (5) to 49-51 ft-lbs (66-69 Nm).

CAUTION

Avoid cross-threading front isolator bolt or insert. Keep weight of motorcycle off front isolator by alternately tightening front isolator bolt and raising scissor jack to support engine.

4. Tighten front isolator bolt (6) to 49-51 ft-lbs (66-69 Nm).
5. See [Figure 2-85](#). Install clutch cable wire form. Tighten fastener to 12-36 in-lbs (1-4 Nm).

NOTE

See [Figure 2-86](#). If the threaded insert (3) is damaged and needs to be replaced, install new insert with LOCTITE 272 and tighten to 49-51 ft-Lbs (66.4-69.1 Nm).

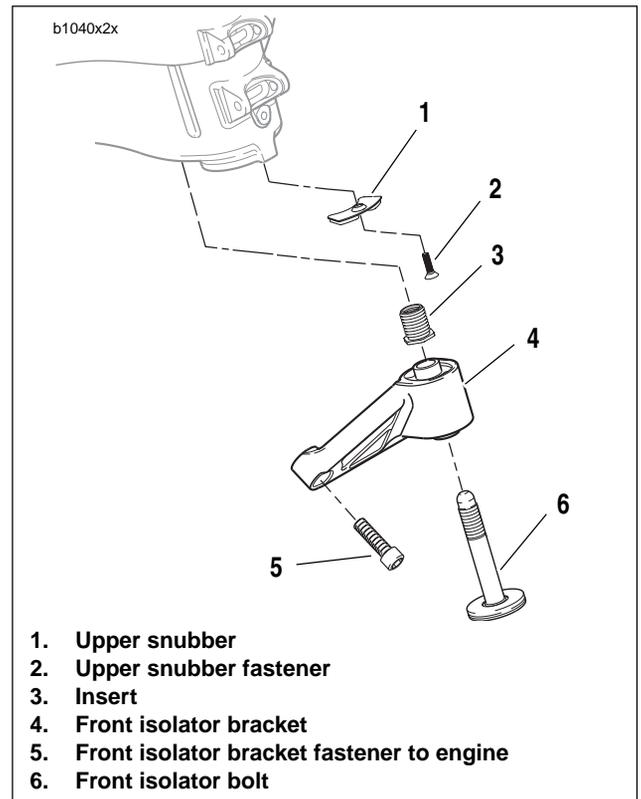


Figure 2-86. Front Isolator

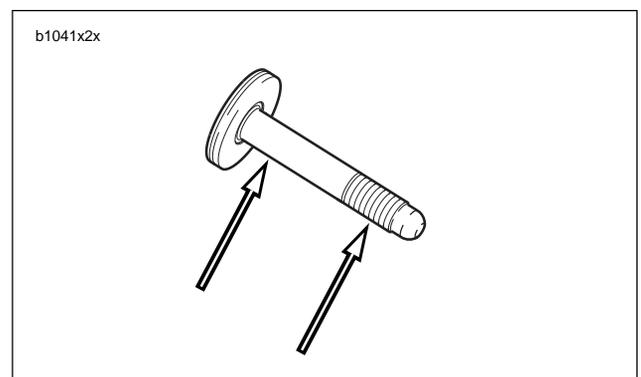


Figure 2-87. Lubrication Points on Front Isolator Bolt

REAR ISOLATOR

NOTE

It is necessary to remove engine to access rear isolator.

See [3.4 STRIPPING MOTORCYCLE FOR ENGINE SERVICE](#) to access the rear isolator.

REMOVAL

1. Remove fuel from frame. See [DRAINING FUEL TANK](#) in [4.25 FUEL PUMP](#).
2. Rotate engine. See [3.3 ENGINE ROTATION FOR SERVICE](#).
3. Remove exhaust header. See [2.28 EXHAUST SYSTEM](#).
4. Remove subframe tail assembly. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).
5. Remove rear shock. See [2.22 REAR SHOCK ABSORBER](#).
6. Remove upper and lower fork clamps. See [2.17 FORK CLAMPS, UPPER AND LOWER](#).
7. Remove main wire harness. See [7.23 MAIN WIRE HARNESS](#).
8. Remove rear isolator fastener. See [2.20 FRONT AND REAR ISOLATORS](#).
9. Lift and remove frame from the motorcycle.



Figure 2-88. Lift Frame Off Motorcycle

INSTALLATION

1. Place frame over the motorcycle.
2. Install rear isolator fastener. See [2.20 FRONT AND REAR ISOLATORS](#).
3. Install main wire harness. See [7.23 MAIN WIRE HARNESS](#).
4. Install upper and lower fork clamps. See [2.17 FORK CLAMPS, UPPER AND LOWER](#).
5. Install rear shock. See [2.22 REAR SHOCK ABSORBER](#).
6. Install subframe tail assembly. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).
7. Install exhaust header. See [2.28 EXHAUST SYSTEM](#).
8. Rotate engine. See [3.3 ENGINE ROTATION FOR SERVICE](#).

GENERAL

The rear suspension is controlled by the shock absorber. The shock allows adjustment of rear compression and rebound damping and spring preload.

The most important rear shock adjustment is the preload setting. Before making any damping adjustments, set the proper preload. See [1.12 SUSPENSION DAMPING ADJUSTMENTS](#).

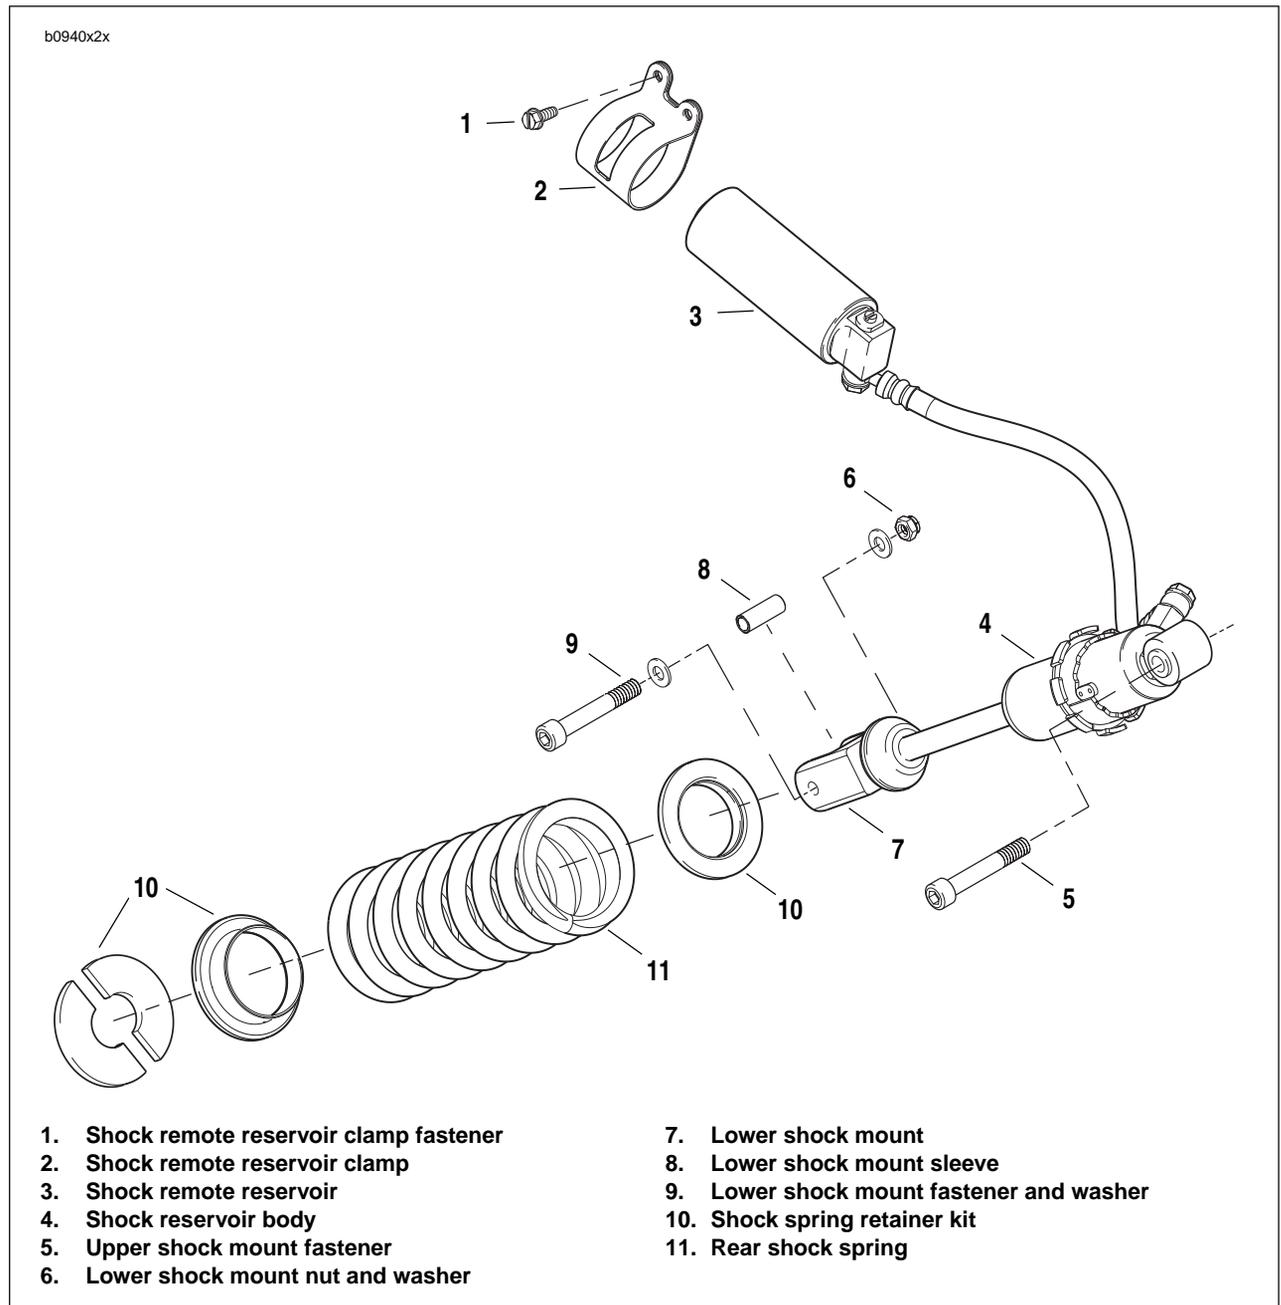


Figure 2-89. Rear Shock Absorber Assembly

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

WARNING

Always disconnect the negative battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

2. Disconnect and remove battery. See [1.5 BATTERY MAINTENANCE](#).
3. Remove tail body work. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).
4. Place a scissor jack under jacking point and raise rear wheel off ground. For location of jacking point see [Figure 2-104](#).
5. See [Figure 2-89](#). Remove upper shock (5) and lower shock mount fasteners (6 and 9) and lower shock mount sleeve (8).
6. Remove rear shock reservoir clamp (2).
7. See [Figure 2-90](#). Cut cable strap.
8. Feed rear shock reservoir through tail section.
9. Remove rear shock.
 - a. Raise motorcycle up approximately 2 more inches (51 mm).
 - b. Remove shock through the top of the tail section (opening underneath rider seat).

INSTALLATION

1. See [Figure 2-89](#). Install upper shock mount and tighten fastener (5) to 49-51 ft-lbs (66-69 Nm).
2. Install lower shock mount with fasteners (6, 9) and lower shock mount sleeve (8) and tighten to 15-17 ft-lbs (20.3-23 Nm).
3. Feed rear shock reservoir through tail section. [D.1 HOSE AND WIRE ROUTING](#) for correct routing.
 - a. Loosely install reservoir in clamp.
 - b. See [Figure 2-91](#). Temporarily place upper body work onto tail section and adjust reservoir placement so dial aligns with bodywork.
 - c. Tighten clamp on reservoir to 96-120 in-lbs (11-14 Nm).
4. See [Figure 2-90](#). Install cable strap.

NOTE

See [Figure 2-89](#). Verify compression dial is facing up.

5. Install upper body work. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.


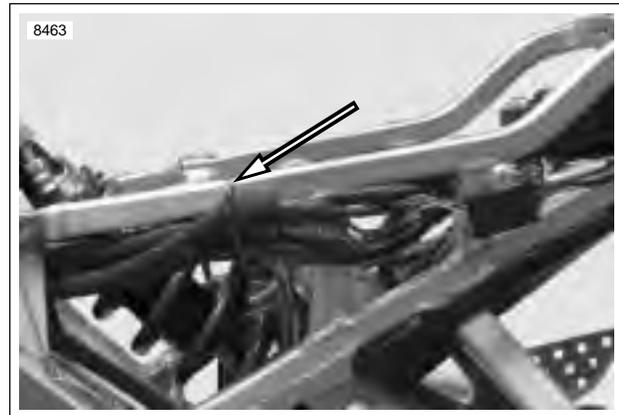


Figure 2-90. Cable Strap, Left Side Subframe Tail Assembly

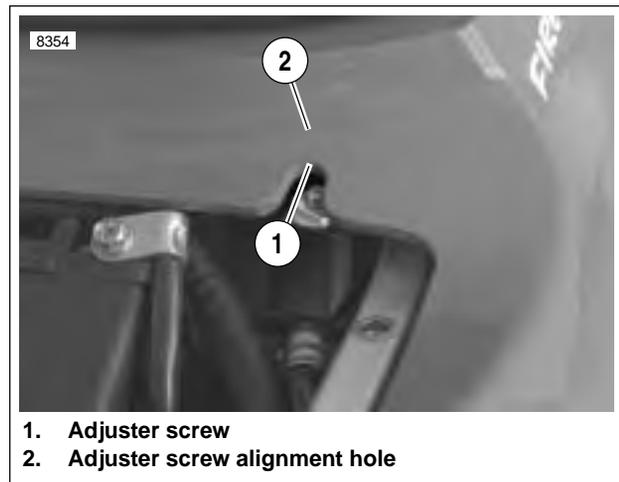

1. Adjuster screw
2. Adjuster screw alignment hole

Figure 2-91. Adjuster Screw Alignment

6. Install battery by threading positive cable (red) into threaded hole first tightening to 72-96 in-lbs (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

7. Install seat. See [2.38 SEAT](#).

REMOVAL/DISASSEMBLY

1. See [Figure 2-92](#). Loosen cable adjuster lock (thick disc) (3) on each cable.
2. Turn adjusters (thin disc) (3) in direction which will shorten cable housings to minimum length.
3. Remove fasteners (1) on right switch housing and separate housing from handlebar.
4. See [Figure 2-93](#). Remove cables (2, 3) from notches in front housing (4).
5. Remove ferrules (6) from throttle (7).
6. Remove airbox cover and base plate. See [4.30 AIRBOX](#).
7. Disconnect cables from throttle body manifold to remove.
8. Cut cable straps and remove cables.

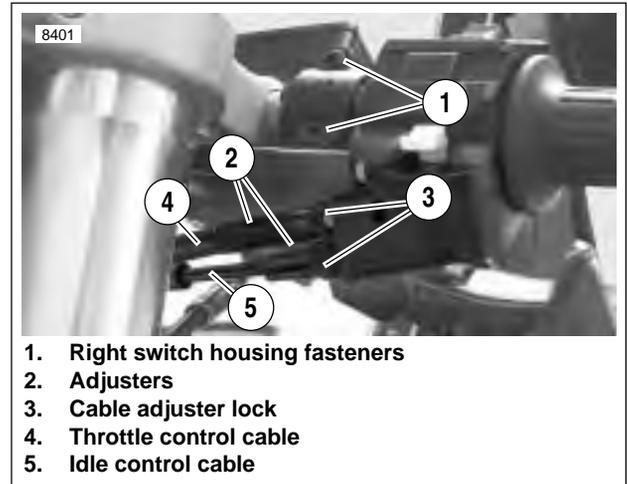


Figure 2-92. Throttle Control Cables

CLEANING AND INSPECTION

⚠ WARNING

Compressed air can pierce the skin and cause injury. Never use your hand to check for leaks or to determine air flow rates. Wear safety glasses to shield your eyes from flying dirt and debris. Failure to comply could result in death or serious injury.

Clean all parts except cables in a non-flammable cleaning solvent. Blow dry with compressed air. Replace cables if frayed, kinked or bent.

ASSEMBLY/INSTALLATION

1. Route cable as shown in [D.1 HOSE AND WIRE ROUTING](#).
2. Add cable straps as shown in the throttle cable routing in [D.1 HOSE AND WIRE ROUTING](#).
3. Install throttle grip and position ferrules (6) into cable wheel (7).
4. Insert idle control into front switch housing.
5. Slide switch housing over throttle.
6. Insert throttle cable into front switch housing.
7. See [Figure 2-92](#). Attach rear switch housing and position housings on right handlebar by engaging locating pin on front housing with hole in handlebar. Attach housings with two fasteners, installing longer fastener on bottom. Tighten to 25-33 **in-lbs** (3-4 Nm).
8. Adjust cables. See [1.16 THROTTLE CABLE AND IDLE SPEED ADJUSTMENT](#).
9. Install airbox assembly. See [4.30 AIRBOX](#).

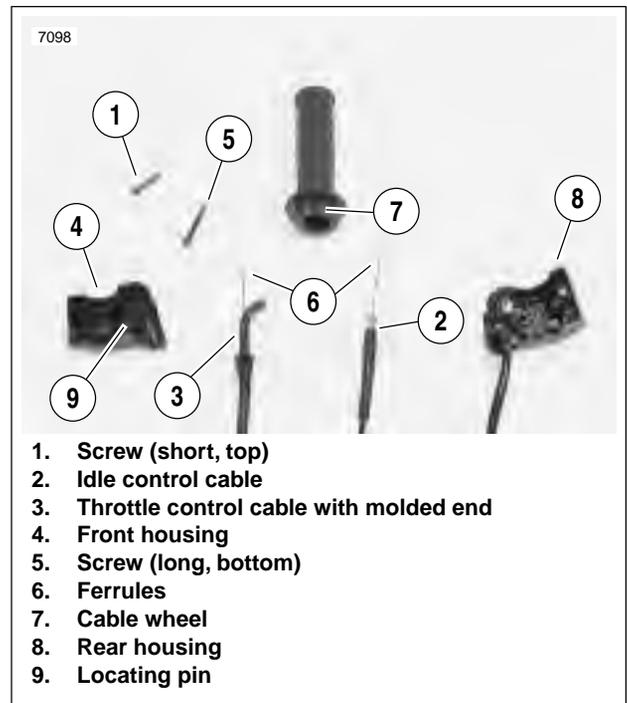


Figure 2-93. Cable Connections

REMOVAL/DISASSEMBLY

NOTE

For clutch adjustment, see [1.9 CLUTCH](#).

1. See [Figure 2-94](#). Remove wire form from front isolator.
2. See [Figure 2-95](#). Slide clutch cable adjuster boot (8) up to access clutch adjuster (7).
3. Loosen clutch adjuster (7) to release tension from hand lever (4).
4. Remove clutch cable ferrule (9) from hand lever (4).
5. Remove hand lever pinch bolt (3).
6. Remove hand lever (4) from hand lever clamp (2).
7. Remove safety interlock switch (5).
 - a. Remove hand lever clamp fastener (1) and spin clamp (2) to access safety interlock switch (5).
 - b. Disconnect safety interlock switch connector (5) and remove switch fastener (6) and switch (5).

NOTE

The individual parts of the clutch switch are not serviceable. Replace switch upon failure.

8. See [Figure 2-96](#). Cut cable strap from left side of upper fork clamp.
9. Remove left clip-on. See [2.27 HANDLEBARS](#).
10. Remove clutch assembly from clip-on.

ASSEMBLY/INSTALLATION

1. See [Figure 2-95](#). Slide hand lever clutch clamp (2) over left clip-on. Loosely tighten hand lever pinch fastener and nut (3).
2. Install left clip-on. See [2.27 HANDLEBARS](#).
3. Connect safety interlock connector and switch (5).
4. Install safety interlock switch (5) with fastener (6) tightening to 7-10 **in-lbs** (0.8-1.0 Nm).

NOTE

Apply small amount of **LOCTITE ANTI-SEIZE LUBRICANT** to bolt (3).

5. Install clutch hand lever (4) in hand lever clamp (2) and tighten hand lever pinch fastener (3) to 39-48 **in-lbs** (4-5 Nm).
6. Position hand lever (4) to rider preference and tighten hand lever clamp pivot fastener (1) to 36-60 **in-lbs** (4-7 Nm).
7. Connect clutch cable ferrule (9) to hand lever clamp (2).
8. See [Figure 2-96](#). Install cable strap holding safety interlock switch and left switch housing on left upper fork. Do not over tighten cable strap.
9. If not yet performed, route clutch cable to primary cover. [D.1 HOSE AND WIRE ROUTING](#) for clutch cable routing.
10. With clutch cable lower section connected to primary cover, adjust clutch. See [1.9 CLUTCH](#).

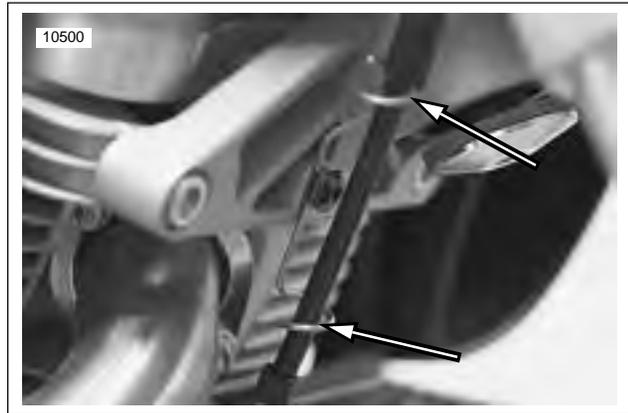


Figure 2-94. Clutch Cable Wire Form

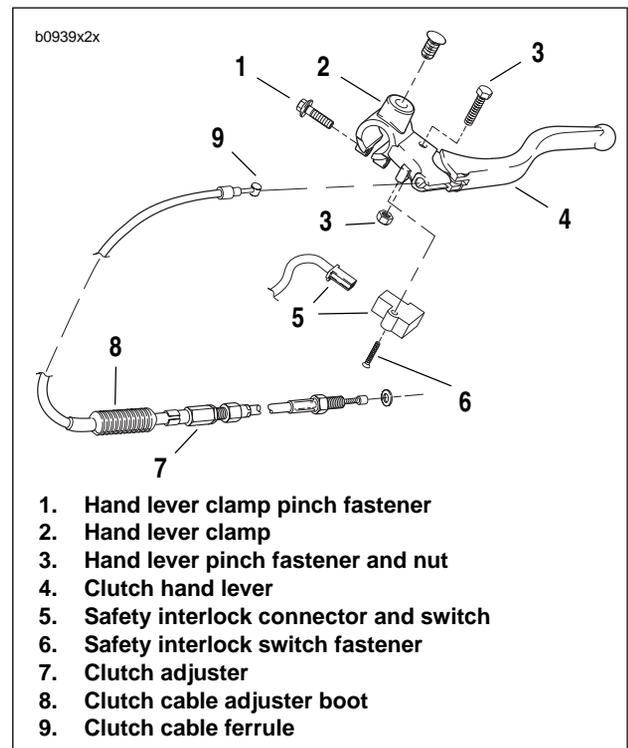


Figure 2-95. Clutch Hand Control Assembly

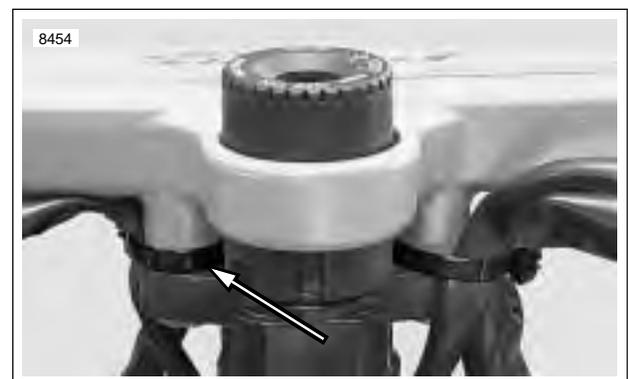


Figure 2-96. Cable Strap On Left Side of Upper Fork Clamp

REMOVAL

1. Remove seat. See 2.38 SEAT.

⚠ WARNING

To protect against accidental start-up of vehicle and possible personal injury, disconnect the negative battery cable before proceeding. Inadequate safety precautions could cause a battery explosion, which could result in death or serious injury.

2. Disconnect battery by unthreading fastener removing negative cable (black) from battery first. See 1.5 BATTERY MAINTENANCE.
3. Remove front fairing. See 2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS.
4. See Figure 2-97. Disconnect flasher (1) and bank angle sensor (2). Remove electronic control module fasteners (3).
5. See Figure 2-99. Rotate headlamp support bracket.
 - a. Loosen headlamp pivot fasteners (1).
 - b. Rotate headlight bracket (2) down.
6. See Figure 2-98. Disconnect headlight connection.
7. Disconnect and remove electronic control module. See 4.16 ELECTRONIC CONTROL MODULE.
8. See Figure 2-99. Remove headlight support bracket (2).

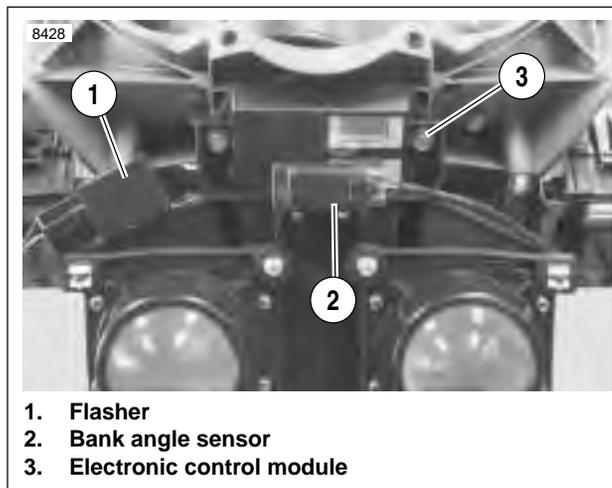


Figure 2-97. Headlight Support Bracket

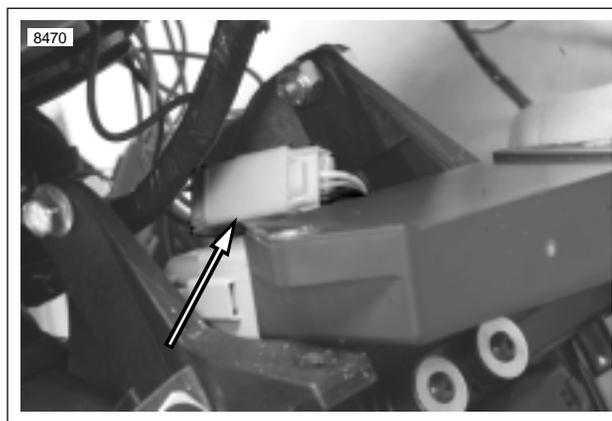


Figure 2-98. Headlight Connector

DISASSEMBLY

1. See [Figure 2-97](#). Remove bank angle sensor (2).
2. Remove flasher.
3. See [Figure 2-99](#). Remove black rubber cover (4) from rear of headlights.
4. Disconnect black connector from headlights.
5. Disconnect headlight bulb (8) connector (white) from wire harness.
6. Remove headlights (5, 7) from headlight support bracket (2) by removing headlight fasteners (6).
7. Remove headlights (5, 7).

ASSEMBLY

1. See [Figure 2-99](#). Align headlights (5, 7) into headlight support bracket (2). Tighten headlight fasteners (6) to 20-25 **in lbs** (2.3-2.8 Nm).
2. Connect headlight bulb (8) connector (white) into wire-harness.
3. Connect black headlight connector.
4. Install black rubber cover (4).
5. See [Figure 2-97](#). Install bank angle sensor connector case (2). Tighten to 12-36 **in-lbs** (1-4 Nm).
6. Install flasher (1) and tighten to 30-40 **in-lbs** (3-5 Nm).

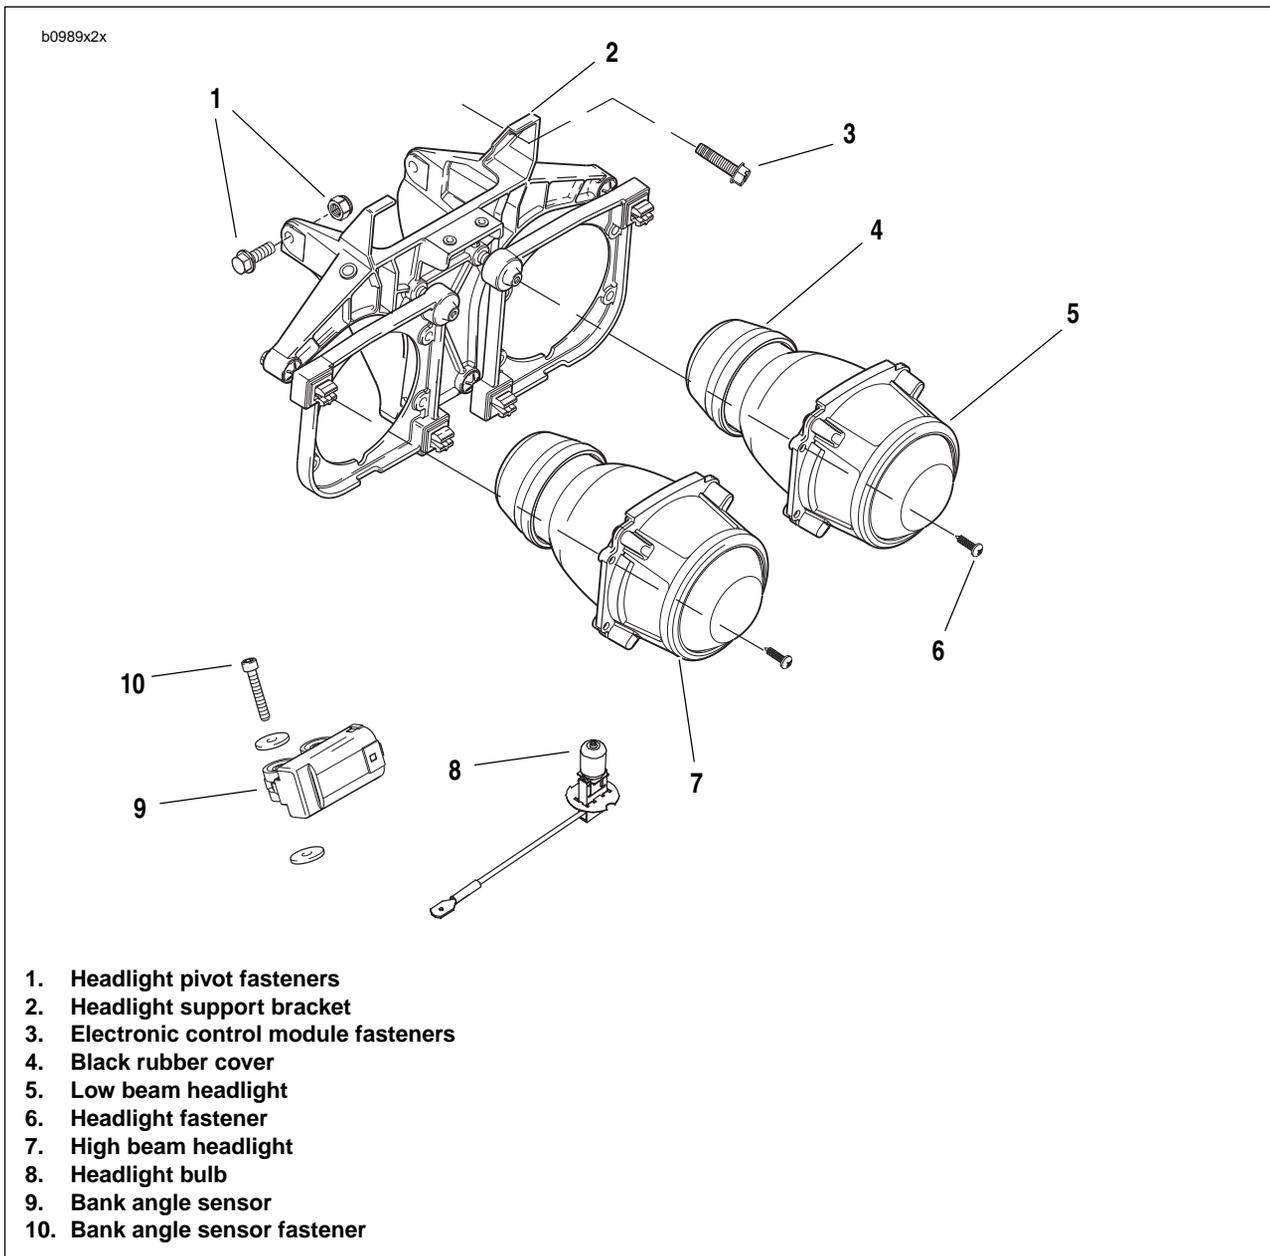


Figure 2-99. Headlight Support Bracket Assembly

INSTALLATION

1. See [Figure 2-100](#). Position headlight pivot fasteners into groove of the headlight support bracket, flat side of nut lined up with groove.

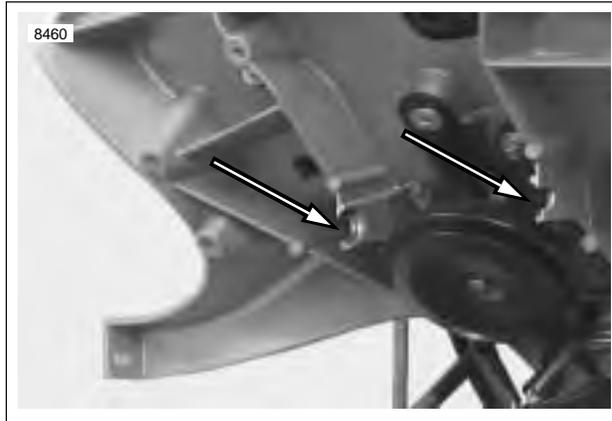


Figure 2-100. Headlamp Pivot Groove

2. See [Figure 2-99](#). Install headlight pivot fasteners (1) but do not tighten.
3. Connect electronic control module. See [4.16 ELECTRONIC CONTROL MODULE](#).
4. See [Figure 2-98](#). Attach headlight connector to headlight support bracket.
5. Connect headlight connections. See [7.12 HEADLIGHT](#).
6. See [Figure 2-99](#). Rotate headlight support bracket up (2) and tighten pivot fasteners (1) to 72-96 **in-lbs** (8-11 Nm).
7. See [Figure 2-97](#). Install electric control module.
 - a. [Figure 2-99](#). Align electronic control module and headlight support bracket with fairing support bracket.
 - b. Tighten electronic control module fasteners (3) to 72-96 **in-lbs** (8-11 Nm).

8. See [Figure 2-97](#). Connect flasher (1) and bank angle sensor (2).
9. Install front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).

⚠ WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

10. Install battery by threading positive cable (red) into threaded hole first tightening to 72-96 **in-lbs** (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

11. Install seat. See [2.38 SEAT](#).

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

WARNING

To protect against accidental start-up of vehicle and possible personal injury, disconnect the negative battery cable before proceeding. Inadequate safety precautions could cause a battery explosion, which could result in death or serious injury.

2. Disconnect battery by unthreading fastener removing negative cable (black) from battery first. See [1.5 BATTERY MAINTENANCE](#).
3. Remove front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
4. Remove headlight support bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
5. Remove fuse block (1) and relay block (4) and p-clamp. See [7.22 MAIN FUSE AND FUSES](#).
6. Disconnect and remove horn (5). See [7.20 HORN](#).
7. Disconnect and remove instrument cluster (2, 3). See [7.18 INSTRUMENT MODULE](#).
8. See [Figure 2-101](#). Remove fairing support bracket fasteners and washers (4), p-clamp (7) to remove fairing support bracket (5).

INSTALLATION

1. Route the wire harness. See [D.1 HOSE AND WIRE ROUTING](#) for wire harness routing.
2. See [Figure 2-101](#). Install fairing support bracket with fasteners and washers (4). Tightening to 16-18 ft-lbs (22-26 Nm).
3. Install p-clamp (7) with p-clamp fasteners and washers (8).
4. Connect instrument cluster connector and install instrument cluster. Tightening to 36-48 **in-lbs** (4-5 Nm). See [7.18 INSTRUMENT MODULE](#).
5. Install horn and tighten fasteners to 72-96 **in-lbs** (8-10 Nm). See [7.20 HORN](#).
6. Install fuse block, relay and p-clamp tightening fasteners to 72-96 **in-lbs** (8-11 Nm). See [7.22 MAIN FUSE AND FUSES](#).
7. Install lower headlight support bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
8. Install front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.


9. Install battery by threading positive cable (red) into threaded hole first tightening to 72-96 **in-lbs** (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

10. Install seat. See [2.38 SEAT](#).

b0958x2x

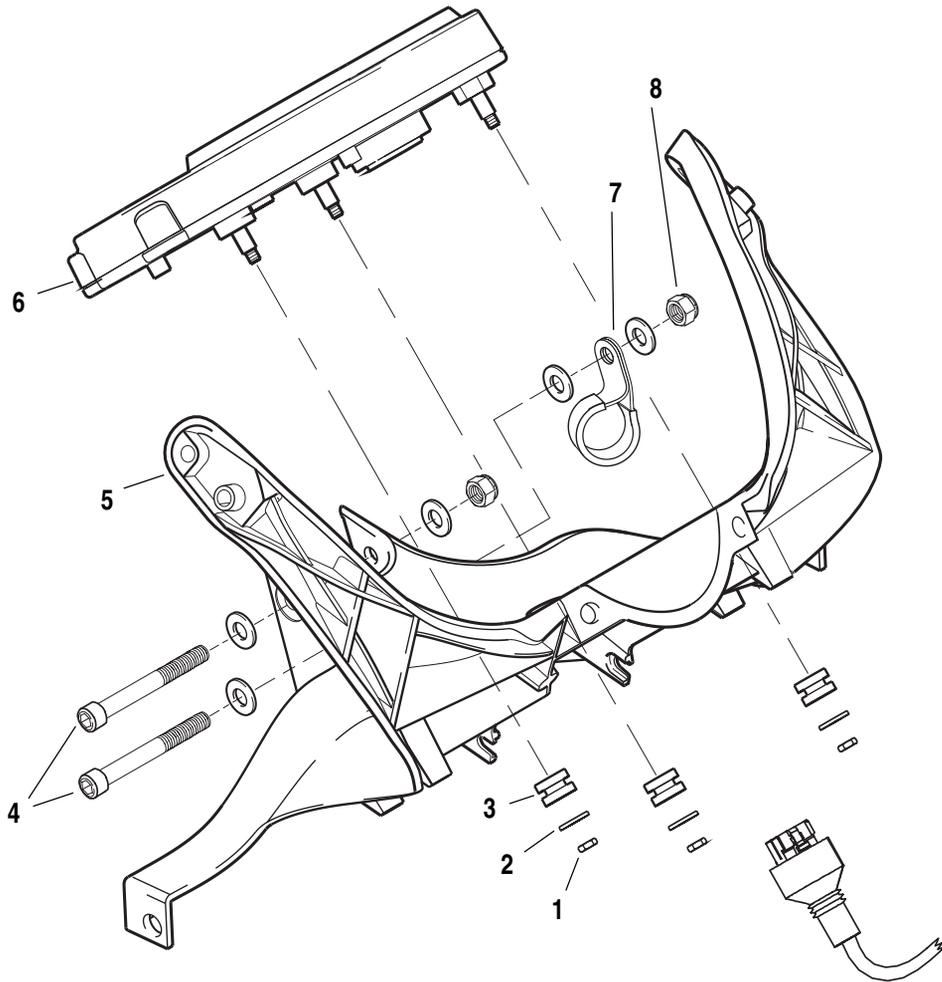

1. Jam nut
2. Washer
3. Rubber grommet
4. Fairing support bracket fasteners and washers
5. Fairing support bracket
6. Instrument cluster
7. P-clamp
8. P-clamp fastener and washers

Figure 2-101. Fairing Support Bracket Assembly

GENERAL

Firebolt handlebars are a clip-on assembly and are not adjustable.

REMOVAL

Right Clip-on

1. Remove right switch gear housing. See [7.16 HANDLEBAR SWITCHES](#).
2. Remove front brake master cylinder and grip. See [2.10 FRONT BRAKE MASTER CYLINDER AND HAND LEVER](#).
3. See [Figure 2-103](#). Remove right clip-on assembly.
 - a. Partially loosen clip-on mounting fastener (5).
 - b. Using a rubber mallet, tap the partially loosened fastener (5) to push the clip-on (3) from the upper right fork clamp (4). Repeat this procedure until fastener and clip-on has been removed from fork clamp (4).
4. Remove clip-on endcap (1).

Left Clip-on

1. Remove left switch gear housing. See [7.16 HANDLEBAR SWITCHES](#).
2. See [Figure 2-102](#). Remove clip-on assembly.
 - a. See [Figure 2-103](#). Partially loosen clip-on mounting fastener.
 - b. Using a rubber mallet, tap the partially loosened fastener to push the clip-on (3) from the upper left fork clamp (4). Repeat this procedure until fastener (5) and clip-on (3) has been removed from fork clamp (4).
3. Remove clutch lever assembly. See [2.24 CLUTCH HAND LEVER](#).
4. Remove clip-on endcap (1).

INSTALLATION

Right Clip-on

1. Install right switch gear housing.
2. Install right clip-on into right fork clamp using LOCTITE 272 and tighten fastener to 24-26 ft-lbs (33-35 Nm).
3. Install front brake master cylinder. Tighten but do not torque.
4. Install throttle and grip onto right clip-on. See [2.23 THROTTLE CONTROL](#).
5. Install endcap onto right clip-on.
6. See [Figure 2-37](#). Position brake hand lever to rider preferences and tighten fastener (5) to 80-90 **in-lbs** (9-10 Nm). See [2.10 FRONT BRAKE MASTER CYLINDER AND HAND LEVER](#).

Left Clip-on

1. Install clutch hand lever assembly onto clip-on. Tighten but do not torque.
2. Install left switch gear housing. See [7.16 HANDLEBAR SWITCHES](#).
3. See [Figure 2-103](#). Install grip and endcap (1).
4. Install left clip-on into upper fork clamp (3) and using LOCTITE 272, tighten fastener (4) to 24-26 ft-lbs (33-35 Nm).
5. See [Figure 2-95](#). Position clutch hand lever to rider preferences and tighten fastener (1) to 36-60 **in-lbs** (4-7 Nm). See [2.24 CLUTCH HAND LEVER](#).


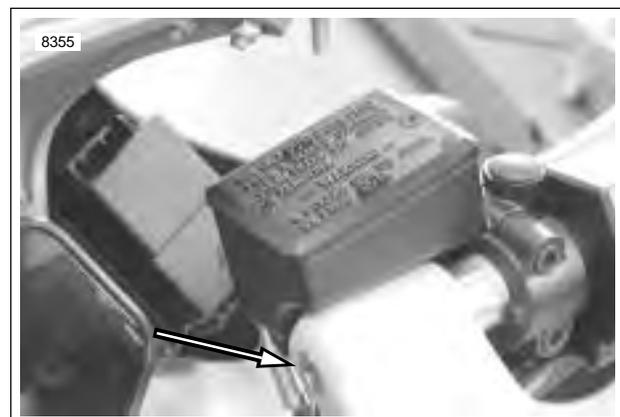


Figure 2-102. Handlebar Clip-on Mounting Fasteners (right clip-on shown)

b0945x2x

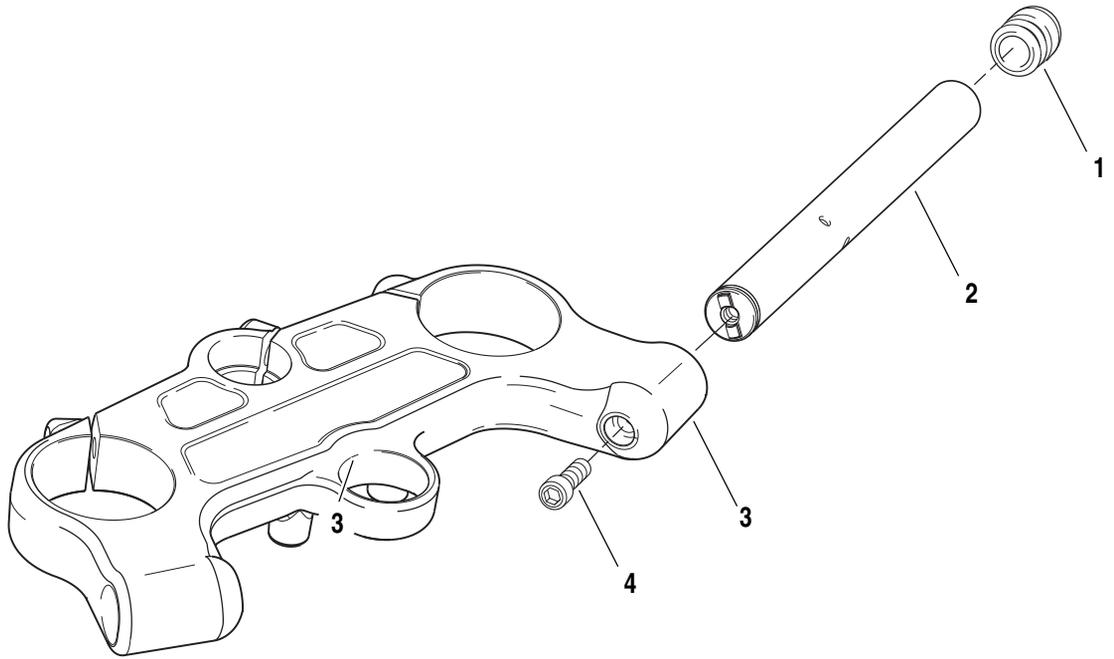

- 1. Endcap
- 2. Clip-on
- 3. Upper fork clamp
- 4. Clip-on fastener

Figure 2-103. Handlebar Clip-on Assembly (left clip-on shown)

REMOVAL/DISASSEMBLY

NOTE

For details on removal of components on XB12S with interactive exhaust systems, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

Muffler

1. Remove chin fairing. See [2.33 CHIN FAIRING](#).
2. Remove front sprocket cover. See [2.30 SPROCKET COVER](#).
3. Remove idler pulley. See [DRIVE BELT REMOVAL](#) under [6.6 DRIVE BELT SYSTEM](#).
4. .
5. See [Figure 2-104](#). Loosen front muffler mount fastener (7) but do not remove.
6. Remove front and rear muffler straps.

Front: Remove front muffler strap fastener (5). Front strap will not be removed.

NOTE

Always replace the front muffler strap.

Rear: Alternately loosen rear strap fasteners (1) and remove straps (2).

7. See [Figure 2-105](#). Loosen Torca clamp (1) and remove muffler.

NOTE

The muffler may be removed for replacement without removing the exhaust header.

Front Muffler Mount


1. Remove muffler.
2. See [Figure 2-104](#). Remove front muffler mount fastener (7).
3. Remove strap (4) from front muffler mount (6).
4. Remove front muffler mount bushings (8) by punching out with suitable tool.

Rear Muffler Bracket

1. Remove muffler.
2. Drain oil. See [1.6 ENGINE LUBRICATION SYSTEM](#).
3. Remove oil lines from swingarm. See [3.9 OIL HOSE ROUTING AND OIL RESERVOIR](#).
4. See [Figure 2-104](#). Remove rear muffler bracket fasteners (10).
5. Slide oil lines from rear muffler bracket and remove rear muffler bracket (9).

Exhaust Header

1. Rotate engine down. See [3.3 ENGINE ROTATION FOR SERVICE](#).
2. Remove oxygen sensor. See [4.19 OXYGEN SENSOR](#).
3. See [Figure 2-105](#). Remove exhaust header (2) by removing mounting fasteners (3).
4. Remove exhaust ring (4), retaining ring (5) and port gasket (6).

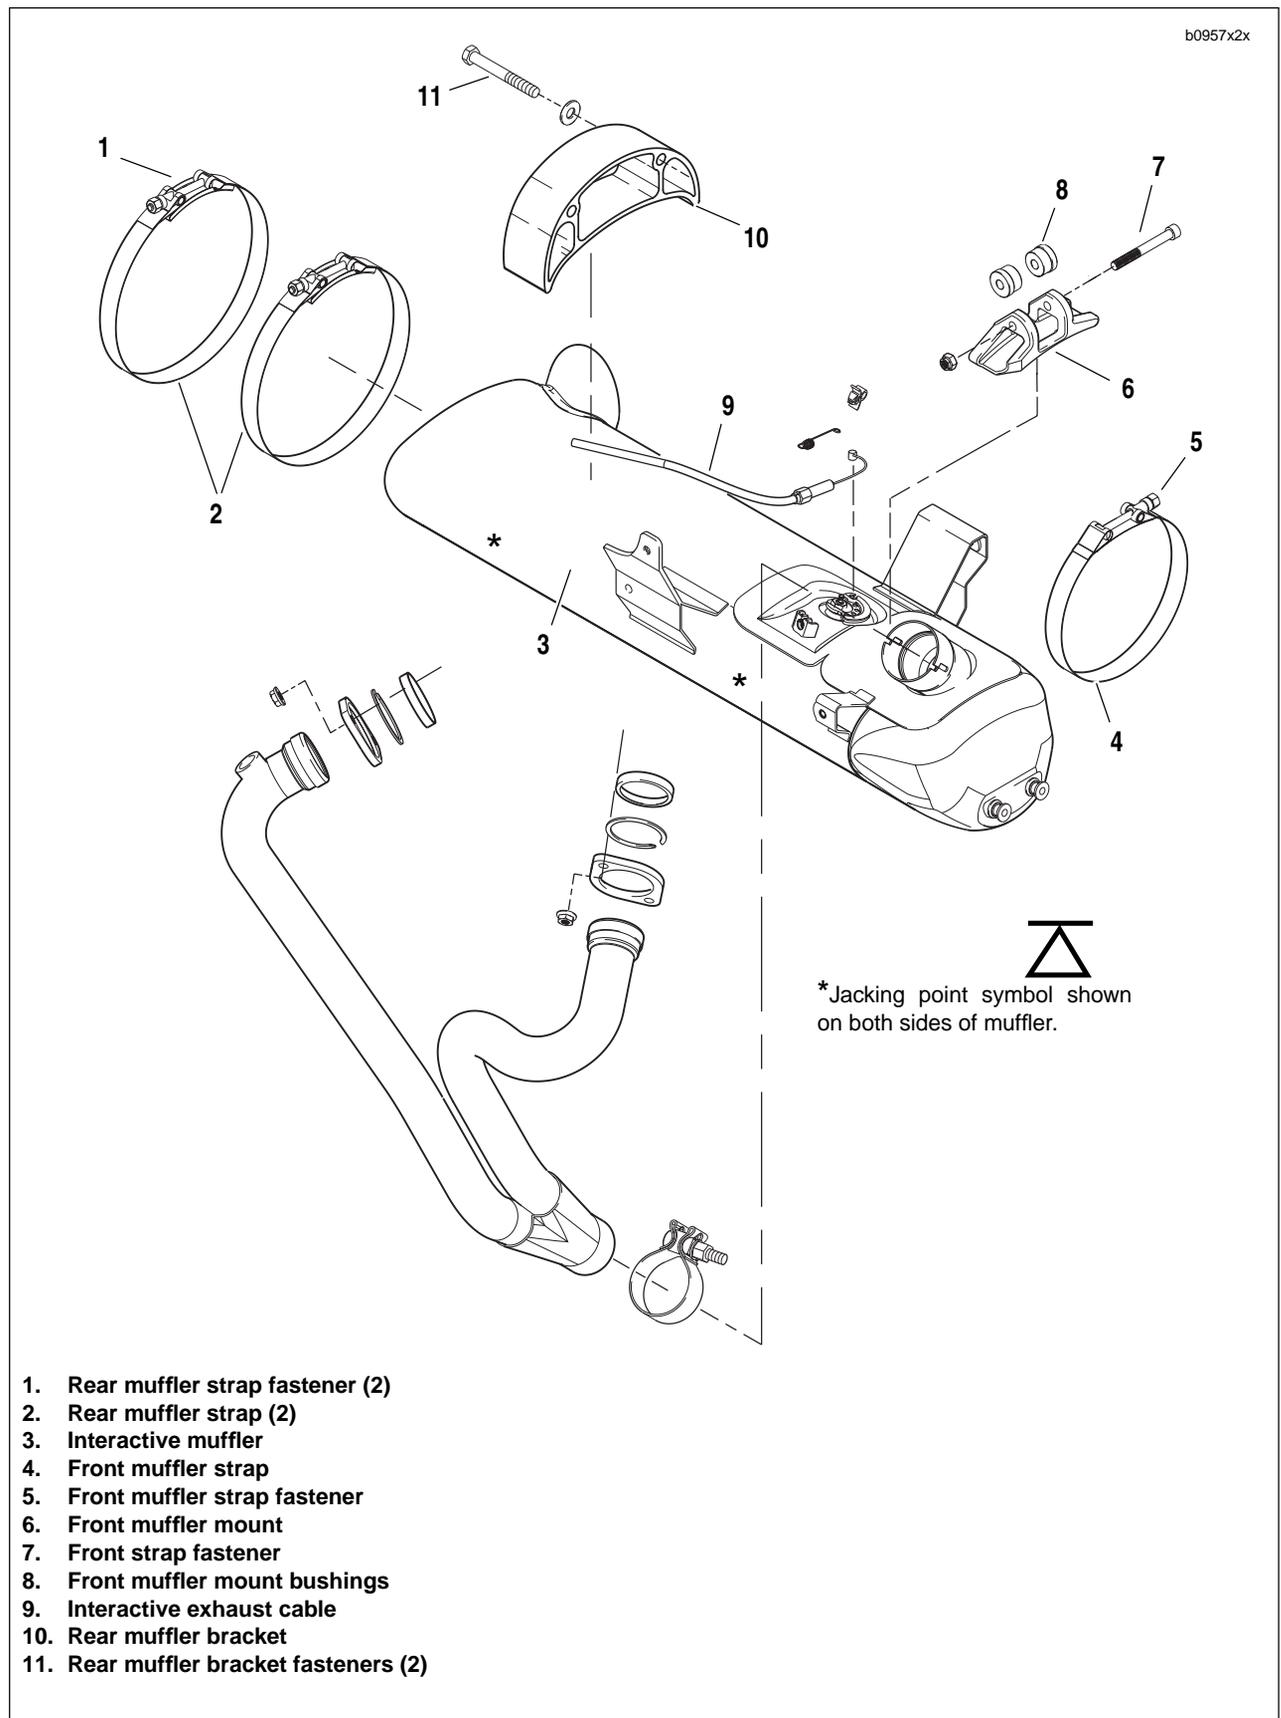

1. Rear muffer strap fastener (2)
2. Rear muffer strap (2)
3. Interactive muffer
4. Front muffer strap
5. Front muffer strap fastener
6. Front muffer mount
7. Front strap fastener
8. Front muffer mount bushings
9. Interactive exhaust cable
10. Rear muffer bracket
11. Rear muffer bracket fasteners (2)

Figure 2-104. Muffer Assembly

ASSEMBLY/INSTALLATION

Exhaust Header

1. See [Figure 2-105](#). Install exhaust ring (4), retaining ring (5) and **new** port gasket (6).
2. Install exhaust header (2). Tighten mounting fasteners (3) to 72-96 in-lbs (8-11 Nm).

NOTE

Tighten header nuts gradually, alternating between studs to insure that exhaust rings are flush with engine.

3. Install oxygen sensor. See [4.19 OXYGEN SENSOR](#).
4. Rotate engine up. See [3.3 ENGINE ROTATION FOR SERVICE](#).

Rear Muffler Bracket

1. See [Figure 2-104](#). Slide rear muffler bracket (9) over oil lines.
2. Install rear muffler bracket fasteners (10) and tighten to 32-36 ft-lbs (43-49 Nm).
3. Install oil lines to swingarm. See [3.9 OIL HOSE ROUTING AND OIL RESERVOIR](#).
4. Fill swingarm/oil tank with 2.5 quarts (3.3 liters) oil. See [1.6 ENGINE LUBRICATION SYSTEM](#).
5. Install muffler.

NOTE

For details on removal of components on XB12R with interactive exhaust systems, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

Front Muffler Mount

1. See [Figure 2-104](#). Install front muffler mount bushings (8).
2. Install **new** strap on front muffler mount (6).
3. Install front muffler mount fastener (7) loosely. **Do not tighten.**
4. Install muffler.

Muffler and Straps

NOTE

Torca muffler clamps have eliminated the need for silicone or graphite tape during assembly. To ensure sealing integrity of muffler clamps and prevent the possibility of leakage, Buell recommends that muffler clamp assemblies be discarded and replaced each time they are removed.

1. Install muffler and **new** Torca clamp onto header.

NOTE

If necessary, use a fiber hammer to fit muffler on header.

WARNING

Never reuse front muffler strap. Always replace front muffler strap with a new strap when removed from system.

2. See [Figure 2-104](#). Loosely install **new** front and rear muffler straps (2, 4).


WARNING

Muffler straps must be tightened in steps to keep from over tightening or muffler will be crushed.

WARNING

Always ensure that straps do not contact the chin fairing or the idler pulley assembly.

3. Tighten front strap fastener and alternately tighten rear muffler strap fasteners evenly till fasteners are tightened to:
 - a. **Front:** 108-120 **in-lbs** (12-14 Nm).
 - b. **Rear:** 48-60 **in-lbs** (5-7 Nm).
4. See [Figure 2-104](#). Tighten front muffler mount fastener (7) to 16-18 ft-lbs (21.7-24.4 Nm).
5. See [Figure 2-105](#). Tighten the Torca clamp (1) to 40-45 ft-lbs (54-61 Nm).
6. Install idler pulley. See [IDLER PULLEY INSTALLATION](#) under [6.6 DRIVE BELT SYSTEM](#).
7. Install front sprocket cover. See [2.30 SPROCKET COVER](#).
8. Install chin fairing. See [2.33 CHIN FAIRING](#).

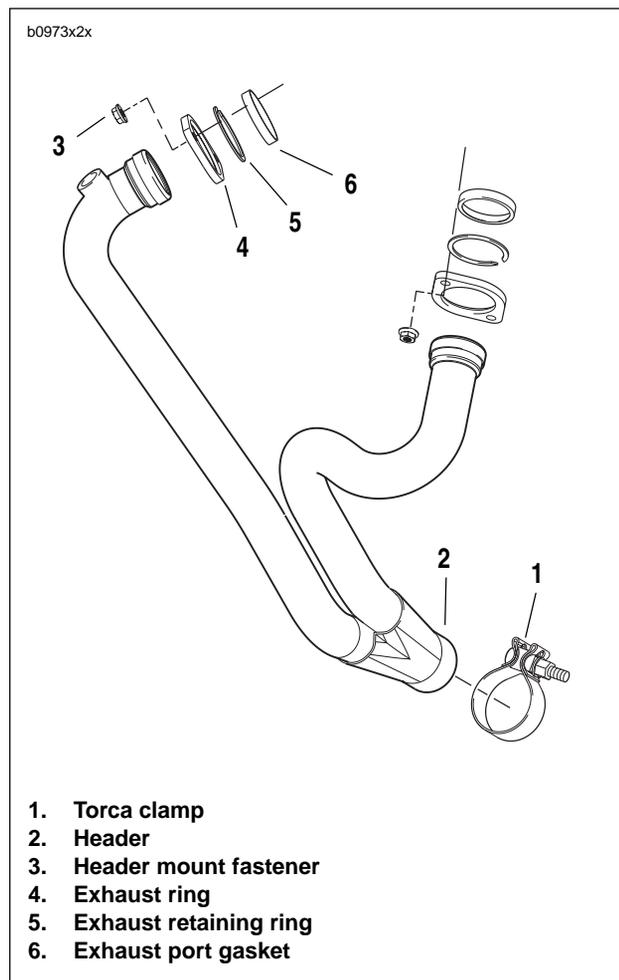

1. Torca clamp
2. Header
3. Header mount fastener
4. Exhaust ring
5. Exhaust retaining ring
6. Exhaust port gasket

Figure 2-105. Exhaust Header

RIDER

Remove Wear Peg

1. See [Figure 2-106](#). Remove wear peg from end of footpeg assembly.

Remove Footpeg

1. See [Figure 2-106](#). Remove clip (5).
2. Remove footpeg pin (9).
3. Remove footpeg (8).

Remove Heel Guard

1. See [Figure 2-106](#). Remove heel guard fasteners (4).
2. Remove heel guard (3).

Remove Mount

1. See [Figure 2-106](#). Remove footpeg mount fasteners (2).
2. Remove footpeg mount (1).

Install Mount

1. See [Figure 2-106](#). Position footpeg mount (1).
2. Install footpeg mount with fasteners (2). Tighten to 108-132 **in-lbs** (12-15 Nm).

Install Heel Guard

1. See [Figure 2-106](#). Position heel guard (3) onto footpeg mount (1).
2. Install heel guard (3) with fasteners (4). Tighten to 72-96 **in-lbs** (8-11 Nm).

Install Footpeg

1. See [Figure 2-106](#). Install clip (5).
2. Position footpeg (8) on to footpeg mount (1).
3. Install footpeg pin (9).

Install Wear Peg

1. See [Figure 2-106](#). Apply LOCTITE 272 (red) and tighten to 36-48 **in-lbs** (4-5 Nm).

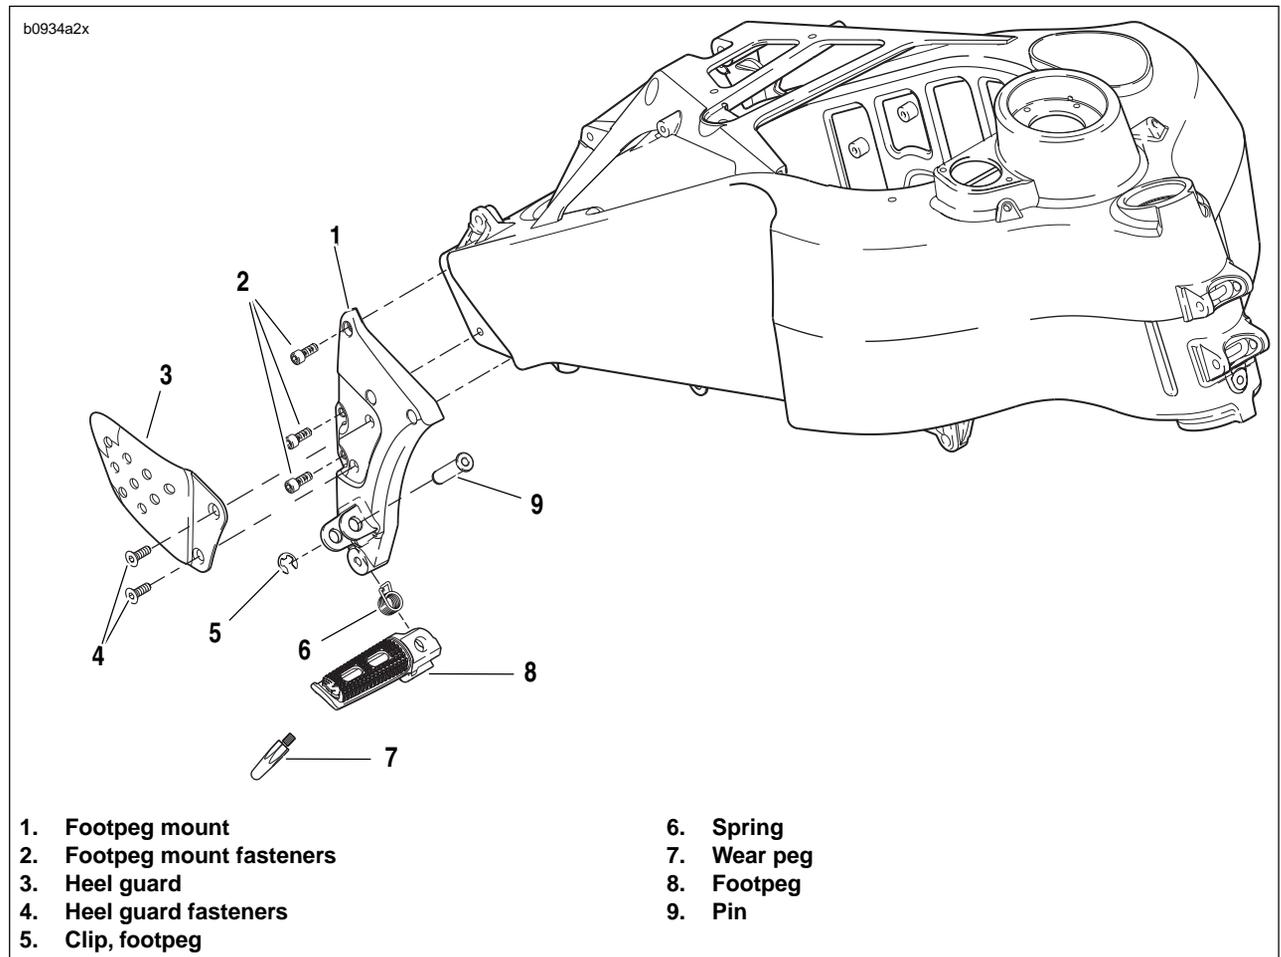


Figure 2-106. Rider Footpeg, Mount and Heel Guard Assembly

PASSENGER

Remove Footpeg

1. See [Figure 2-107](#). Remove clip (7).
2. Remove footpeg pin (9).
3. Remove footpeg (8), detent plate (6), ball (5) and spring (4).

Remove Heel Guard

1. See [Figure 2-107](#). Remove heel guard fasteners (1).
2. Remove heel guard (2).

Remove Mount

1. See [Figure 2-107](#). Remove footpeg mount fasteners (10).
2. Remove footpeg mount (3).

Install Mount

1. See [Figure 2-107](#). Position footpeg mount (3) onto sub-frame tail assembly.

2. Install footpeg mount (3). Using LOCTITE 272 tighten, fasteners (10) to 25-28 ft-lbs (34-38 Nm).

Install Heel Guard

1. See [Figure 2-107](#). Position heel guard (2) onto footpeg mounts (3).
2. Install heel guard (2).
 - a. Apply WD40 lubricant to the heel guard fasteners before installing.
 - b. Tighten heel guard fasteners to 48-72 in-lbs (5-8 Nm).

Install Footpeg

1. See [Figure 2-107](#). Position footpeg (8), detent plate (6), ball (5), and spring (4) on to footpeg mount (3).
2. Install footpeg pin (9).
3. Install clip (7).
4. Check that footpeg clicks in the up and down position.

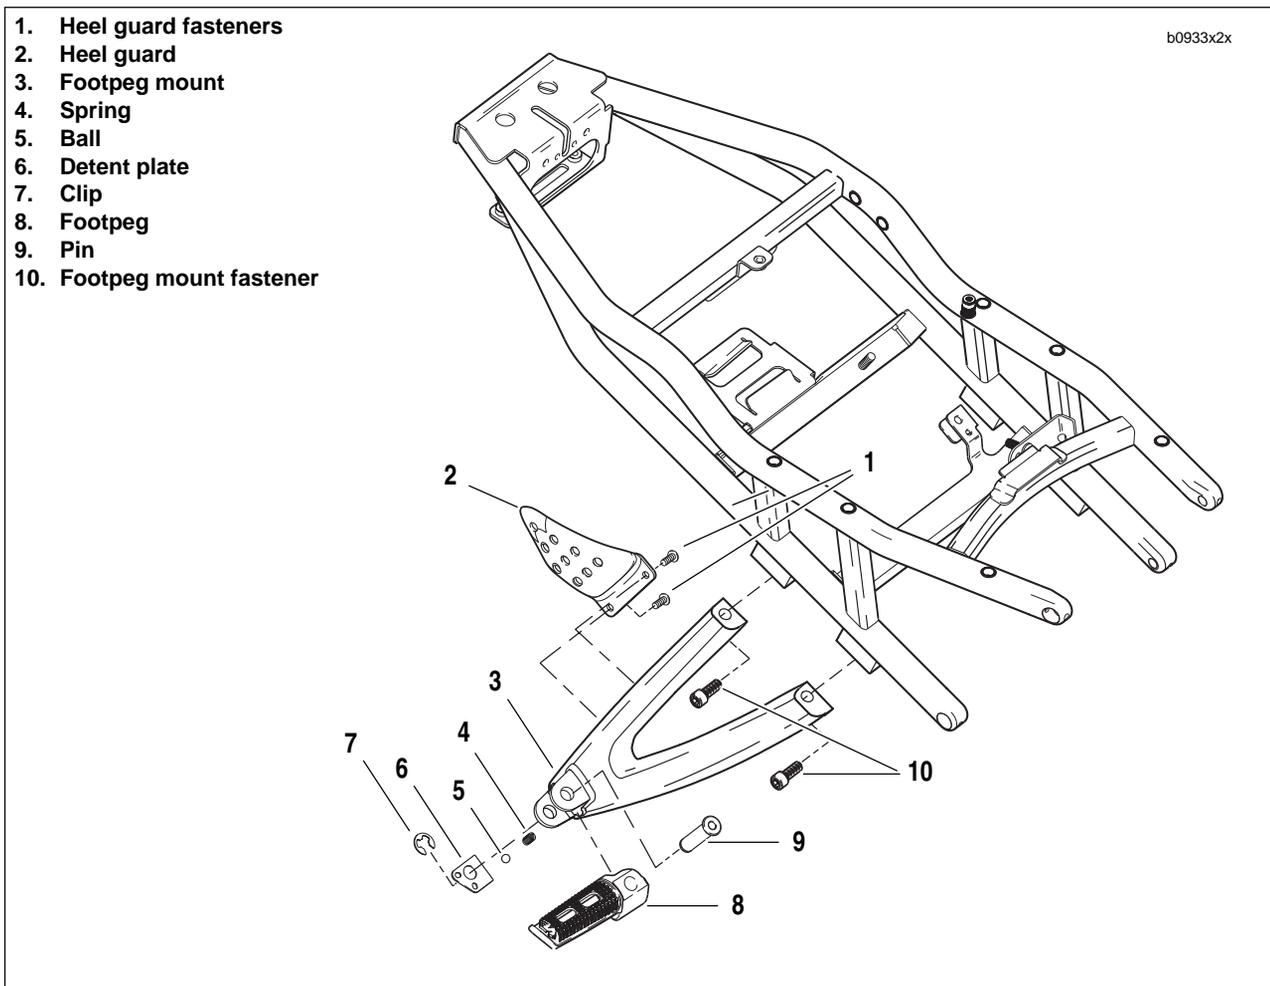


Figure 2-107. Passenger Footpeg, Mount and Heel Guard Assembly

REMOVAL

1. See [Figure 2-108](#). Remove back right chin fairing fasteners.

NOTE

Must remove two chin fairing fasteners for sprocket cover access.

2. See [Figure 2-109](#). Remove sprocket cover fasteners and washers (1).

INSTALLATION

1. See [Figure 2-109](#). Position sprocket cover (2) over front sprocket.

NOTE

Apply *LOCTITE 222 (purple)* to long fastener (1) only.

2. Install sprocket cover (2) using sprocket cover fasteners (1, 3) and tighten all fasteners and washers (1) to 12-36 **in-lbs** (1-4 Nm).
3. Install chin fairing. See [2.33 CHIN FAIRING](#).


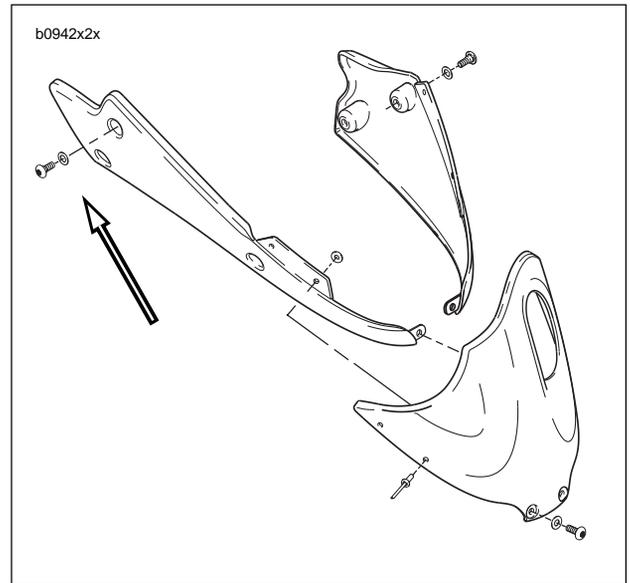


Figure 2-108. Chin Fairing Assembly, Right Rear Fasteners

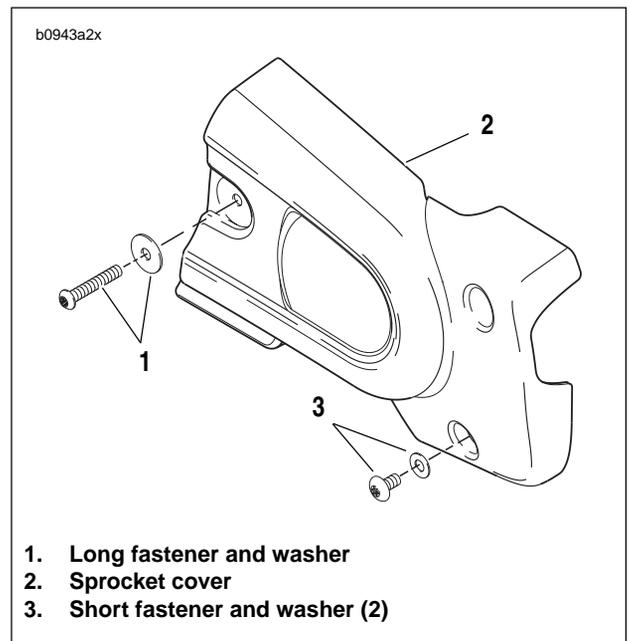

1. Long fastener and washer
2. Sprocket cover
3. Short fastener and washer (2)

Figure 2-109. Sprocket Cover

FRONT FENDER

Removal

1. See [Figure 2-110](#). Remove fasteners and washers (2) securing the front fender (1) to front forks.
2. Carefully remove front fender (1).

Installation

1. See [Figure 2-110](#). Align front fender (1) to fender mounts on front forks.
2. Install front fender (1) with fasteners and washers (2) and tighten to 12-36 **in-lbs** (1-4 Nm).

REAR FENDER

Removal

1. Remove rear wheel. See [2.6 REAR WHEEL](#).
2. See [Figure 2-110](#). Remove fasteners and washers (4) securing the rear fender (3) to frame.
3. Remove rear fender (3).

Installation

1. See [Figure 2-110](#). Align rear fender (3) to frame.
2. Install rear fender (3) with fasteners and washers (4), Tighten to 12-15 **in-lbs** (1-1.7 Nm).
3. Install rear wheel. See [2.6 REAR WHEEL](#).

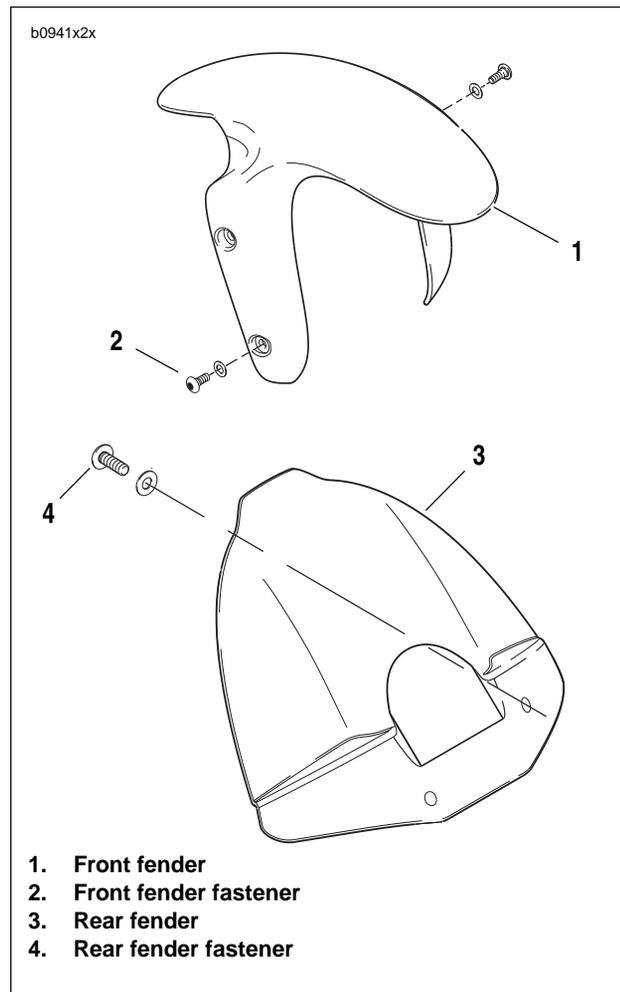


Figure 2-110. Front and Rear Fender

REMOVAL

1. Place a scissor jack under jacking point and raise rear wheel off ground. For location of jacking point see [2.28 EXHAUST SYSTEM](#).
2. Remove right side rider footrest support bracket.
3. Loosen rear axle pinch fastener.
4. Loosen rear axle approximately 15 rotations to allow partial tension to be removed from rear drive system.
5. Remove lower belt guard (4) by removing fasteners (3).

CAUTION


Before removing swingarm brace, always relieve belt tension first. Removing swingarm brace without releasing tension will cause swingarm brace damage.

6. Remove swingarm brace by removing fasteners. See [2.19 SWINGARM AND BRACE](#).
7. Remove upper belt guard (1) by removing fasteners from swingarm brace.

INSTALLATION

1. Install upper belt guard (1) to swingarm brace tightening fasteners to 12-36 **in-lbs** (1-4 Nm).
2. Install swingarm brace and tighten swingarm brace fasteners to 25-27 ft-lbs (34-37 Nm). See [2.19 SWINGARM AND BRACE](#).
3. Install lower belt guard (4) and tighten fasteners (3) to 12-36 **in-lbs** (1-4 Nm).
4. Tighten rear axle to 48-52 ft-lbs (65-70 Nm).
5. Tighten rear axle pinch fastener to 40-45 ft-lbs (54-61 Nm).
6. Install right side rider footrest mount and tighten fasteners to 108-132 **in-lbs** (12-15 Nm).
7. Remove scissor jack from motorcycle.

b1064a2x

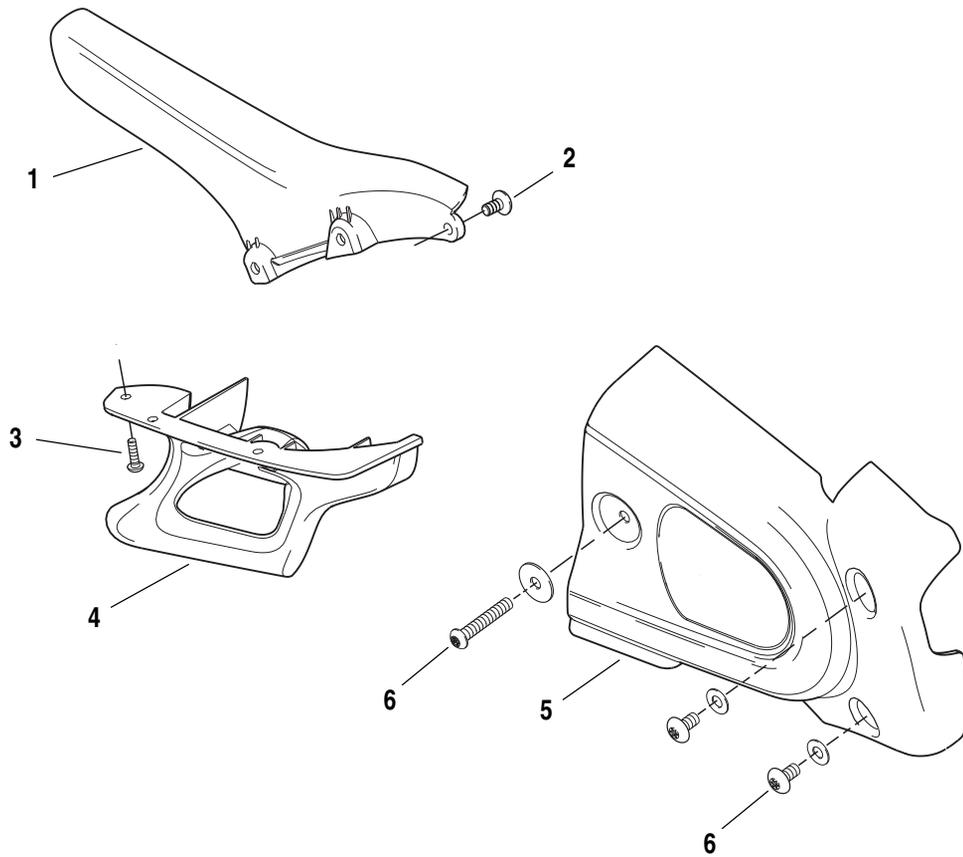

1. Upper belt guard
2. Upper belt guard fasteners (3)
3. Lower belt guard fasteners (3)
4. Lower belt guard
5. Sprocket cover
6. Sprocket cover fasteners (2 short, 1 long)

Figure 2-111. Belt Guard Assembly

REMOVAL

1. Secure back tire down.
2. Turn wheel full right or left for easier access to center fasteners.
3. See [Figure 2-112](#). Remove center section fasteners and washers (2).
4. Remove left section fasteners and washers (4).
5. Remove right section fasteners and washers (6).
6. Remove chin fairing.

NOTE

To separate the left, right and center sections, drill out the rivets.

INSTALLATION

NOTE

To join the left, right and center sections, use the rivet gun from a Marson Thread-Setter™ Tool Kit MODEL NO. MAR39200HD.

1. See [Figure 2-112](#). Position chin fairing (5) and install with right side fasteners and washers (6).
2. Align left section (3) and install with left side fasteners and washers (4).
3. Turn wheel full right or left for easier access to center fasteners.
4. Align center section (1) and install with center section fasteners and washers (2). Use LOCTITE 272 on all fasteners tightening to 36-48 **in-lbs** (4-5 Nm).

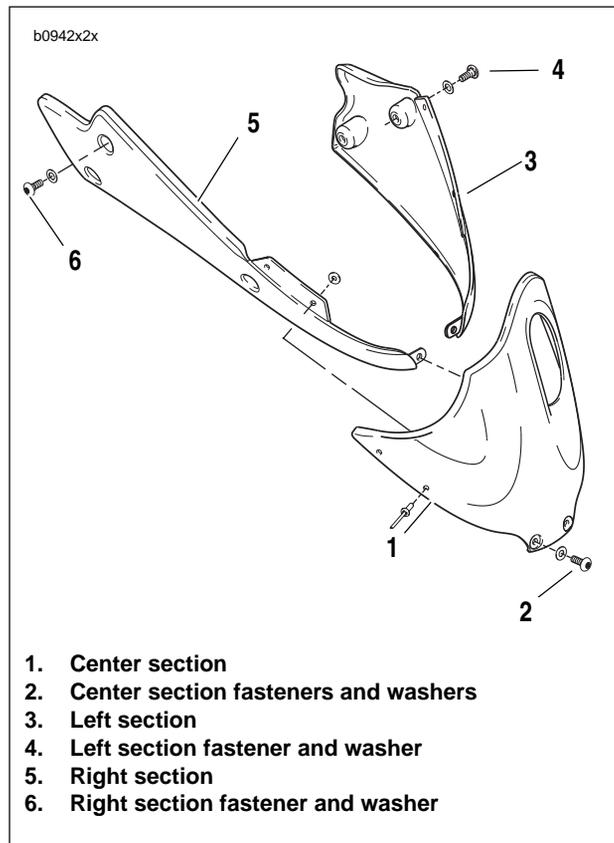


Figure 2-112. Chin Fairing Assembly

REMOVAL

1. Remove seat. See [2.38 SEAT](#).
2. See [Figure 2-113](#). Remove fasteners and nylon washers (2).
3. Remove intake cover assembly (1).

INSTALLATION

1. Position intake cover assembly over top of airbox cover.
2. See [Figure 2-113](#). Start the front two fasteners (2) with nylon washers.
3. See [Figure 2-113](#). Secure intake cover assembly (1) with fasteners and nylon washers (2). Tighten to 12-36 **in-lbs** (1-4 Nm).

NOTE

Front screws go in at a slight angle.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

4. Install seat. See [2.38 SEAT](#).

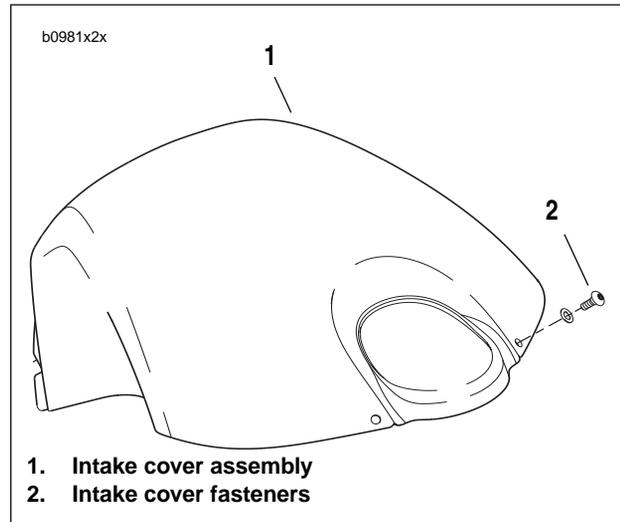


Figure 2-113. Intake Cover Assembly

RAM AIR SCOOP

Removal

1. See [Figure 2-114](#). On left side of bike, locate ram air scoop (4).
2. Remove three ram air scoop fasteners (3).
3. Remove ram air scoop (4).

Installation

1. See [Figure 2-114](#). Position ram air scoop (4).
2. Install ram air scoop (4) with three fasteners (3). Tighten to 12-36 **in-lbs** (1-4 Nm).

ENGINE SHROUD AIR SCOOP

Removal

1. See [Figure 2-114](#). On right side of bike, locate engine shroud air scoop (6).
2. Remove three engine shroud air scoop fasteners (5).

3. Remove engine shroud air scoop (6).

Installation

1. See [Figure 2-114](#). Position engine shroud air scoop (6).
2. Install engine shroud air scoop (6) with three fasteners (5). Tighten to 12-36 **in-lbs** (1-4 Nm).

OIL COOLER AIR SCOOP

Removal

1. See [Figure 2-114](#). On left side of bike, locate oil cooler air scoop (2).
2. Remove two oil cooler air scoop fasteners (1).
3. Remove oil cooler air scoop (2).

Installation

1. See [Figure 2-114](#). Position oil cooler air scoop (2).
2. Apply **LOCTITE 272** (red) to oil cooler air scoop fasteners (1) and tighten to 120-144 **in-lbs** (14-16 Nm).

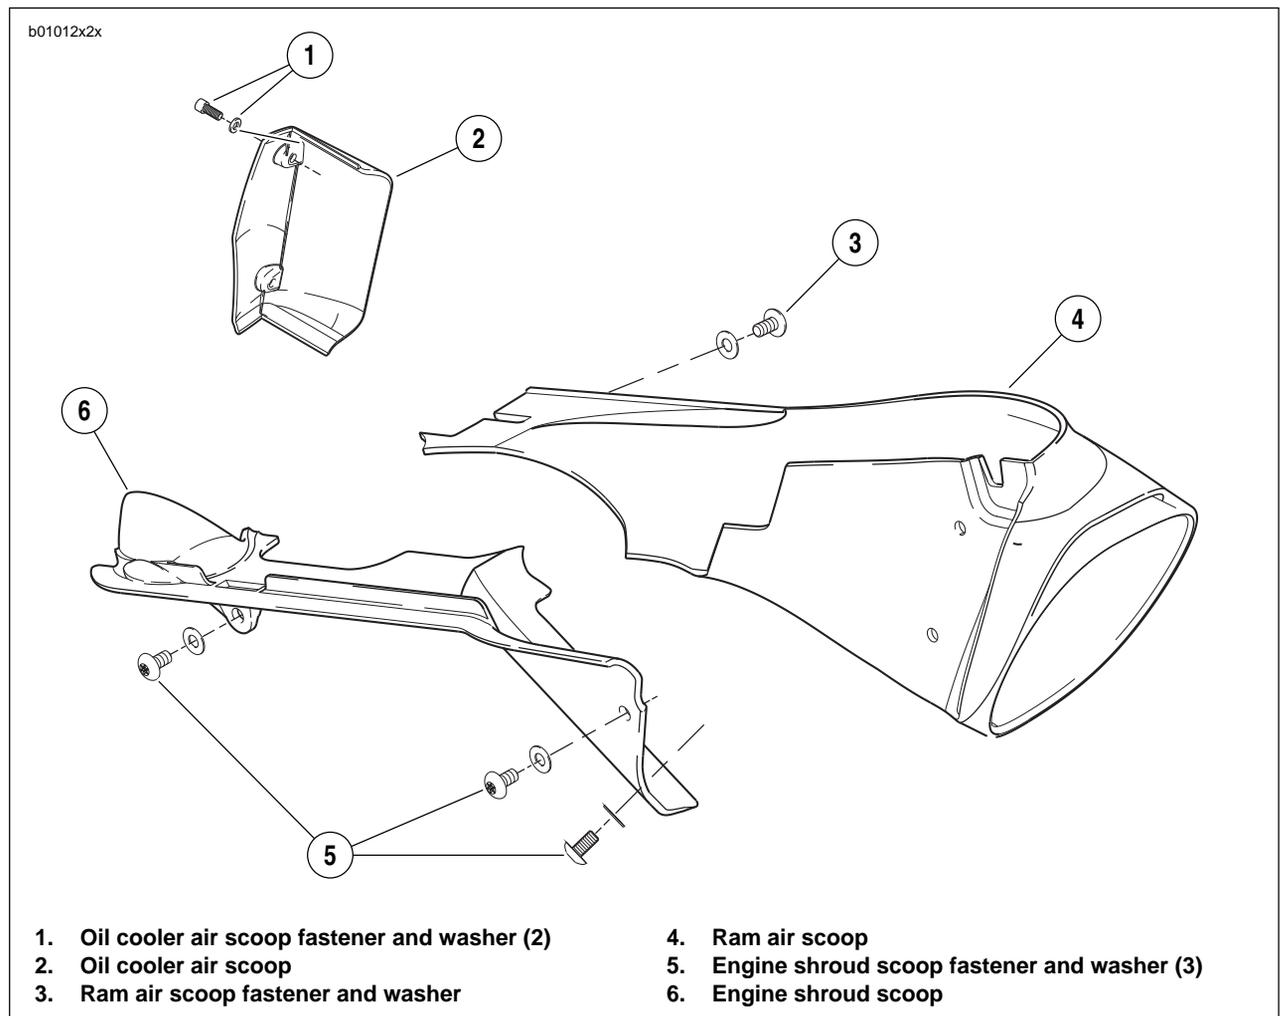


Figure 2-114. Ram Air Scoop, Engine Shroud, Oil Cooler

DISASSEMBLY

1. Remove seat and pillion. See 2.38 SEAT.

⚠ WARNING

Always disconnect the negative battery cable first. If the positive battery cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

2. Disconnect battery by unthreading fastener removing negative cable (black) from battery first. See 1.5 BATTERY MAINTENANCE.

3. See Figure 2-115. Remove upper body work (1) from subframe tail assembly (7).
 - a. Remove body work fasteners (2).
 - b. Disconnect passenger lock cable (6) by removing cable from seat lock plate (4) and ferrule from keylock (3).
 - c. Lift upper tail body work (1) off subframe tail assembly (8).
4. Remove passenger seat latch (14) from rear of subframe tail assembly.

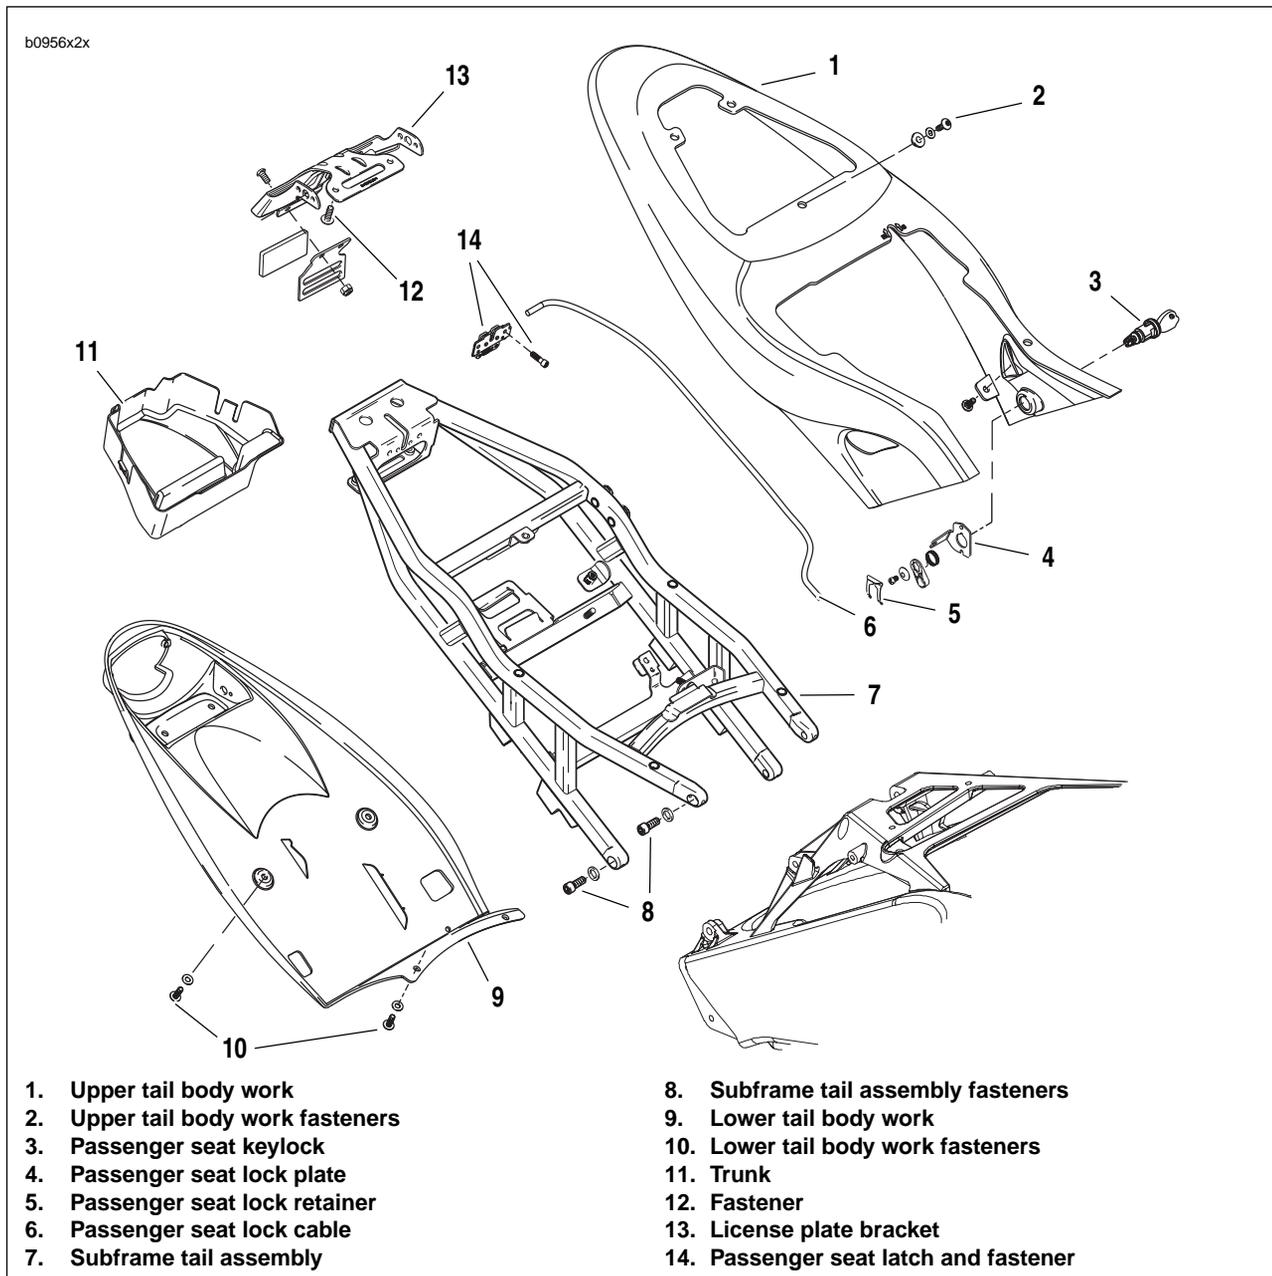


Figure 2-115. Subframe Tail Assembly and Body Work Assembly

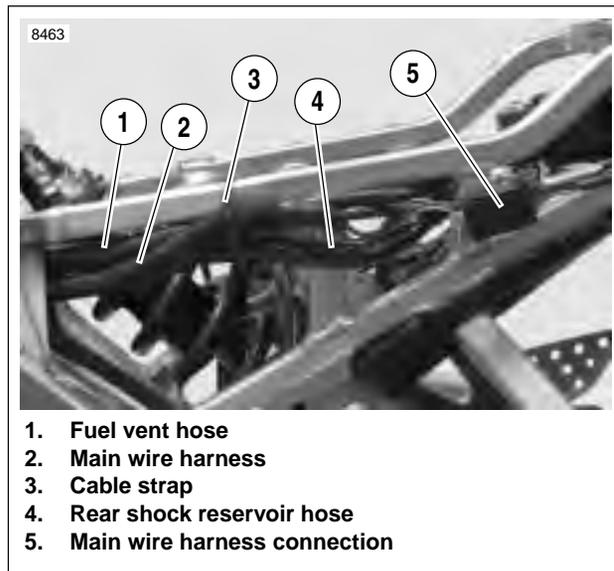


Figure 2-116. Left Side Subframe Tail Assembly Hose and Wire Routing

5. See [Figure 2-116](#). Cut cable strap (3) from subframe tail assembly holding vent hose (1), main wire harness (2) and shock reservoir hose (4).
6. Disconnect rear power harness connection (5).
7. Disconnect turn signal bullet connections and tail light connections. See [7.14 TURN SIGNALS](#) and [7.13 TAIL LAMP](#).
8. Remove christmas tree tie that holds the turn signals and tail light wire harness to subframe tail assembly.
9. Remove turn signals and reflectors from lower body work. See [7.14 TURN SIGNALS](#).
10. See [Figure 2-115](#). Remove license plate fasteners (12) from lower tail body work (9) and remove license plate (13).
11. Remove passenger footpeg mounts. See [2.29 FOOT-PEG, HEEL GUARD AND MOUNT](#).
12. Remove lower body work (9) and trunk (11) from subframe tail assembly (7).
 - a. Remove lower body work (9) underneath subframe tail assembly by removing fasteners (10).
 - b. Remove trunk (11).

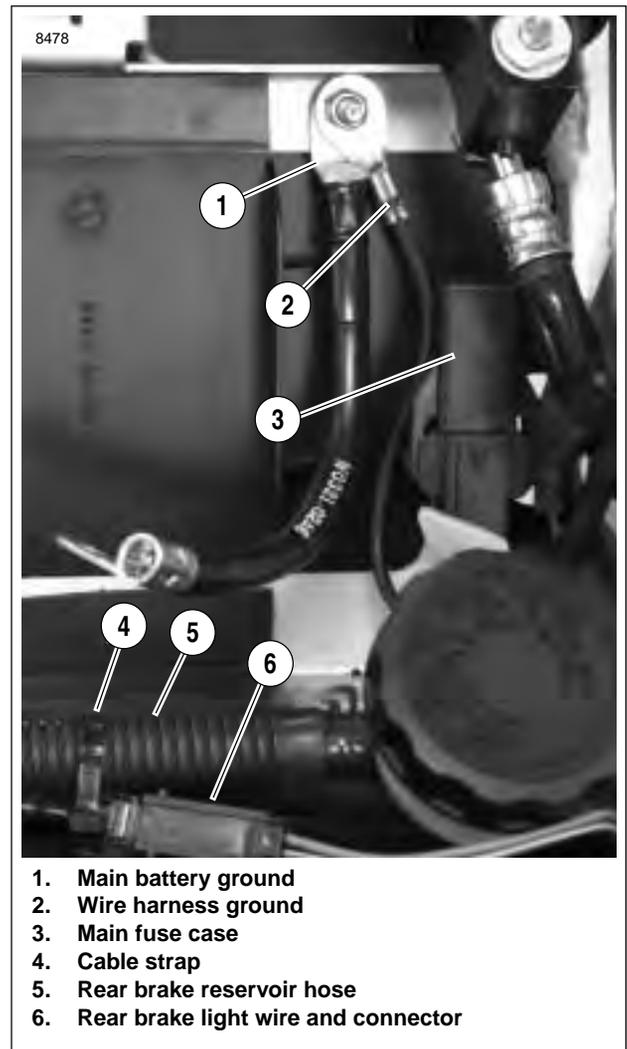


Figure 2-117. Inside Subframe Tail Assembly Hose and Wire Routing

13. See [Figure 2-117](#). Disconnect main battery ground (1) and ground to wire harness (2).
14. Remove main fuse case (3) from subframe tail assembly.

NOTE

When removing the main fuse case from subframe tail assembly, be very careful not to bend the subframe.

15. See [Figure 2-117](#). Cut cable strap (4) holding rear brake reservoir hose (5) and rear brake light wire (6).
16. Disconnect rear brake light connection (6).

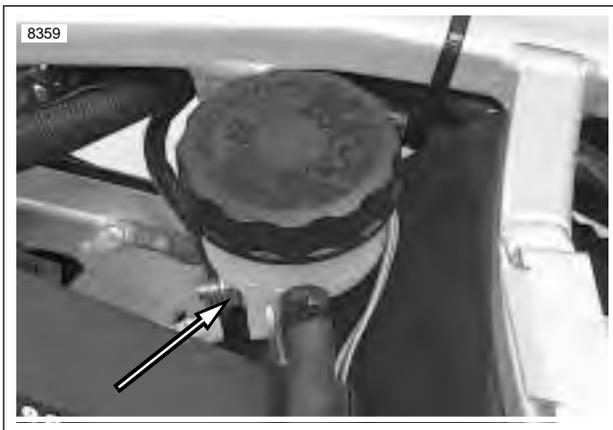


Figure 2-118. Remote Reservoir Clamp Nut

17. See [Figure 2-118](#). Remove rear brake reservoir clamp nut.
18. Disconnect fuel pump connection and remove case from subframe tail assembly. See [4.25 FUEL PUMP](#).
19. Remove shock reservoir fasteners and feed the reservoir out of subframe tail assembly. See [2.22 REAR SHOCK ABSORBER](#).
20. See [Figure 2-115](#). Remove subframe tail assembly fasteners (8) and remove subframe tail assembly (7) from frame.

CLEANING

CAUTION

Do not use wheel care products or other compounds developed specifically for cleaning and polishing powdercoat. These cleaners could potentially damage the tail section finish.

The cast aluminum tail section has a black powdercoat. Because the surface is not bare polished aluminum, it must be cleaned using only mild soap and warm water. After washing, always dry the surface using a clean, soft cloth.

ASSEMBLY

1. Install subframe tail assembly (7) to frame and tighten fasteners (8) to 21-23 ft-lbs (28-31 Nm) using LOCTITE 272.
2. Connect fuel pump connection and install connection case onto subframe tail assembly. See [4.25 FUEL PUMP](#).
3. See [Figure 2-117](#). Feed rear brake light connector (5) into subframe tail assembly and connect.
4. Install main fuse case (3) onto subframe tail assembly.
5. Install main battery ground (1) and ground to wire harness (2) to subframe tail assembly. Tightening fastener to 72-96 **in-lbs** (8-11 Nm).
6. See [Figure 2-116](#). Feed the rear shock reservoir (4) through second subframe tail assembly support.
7. Install rear shock reservoir into shock reservoir clamp and install clamp on to subframe tail assembly. Do not tighten. See [2.22 REAR SHOCK ABSORBER](#).
8. Check rear shock reservoir suspension screw alignment with upper body work.
 - a. Install upper body work without tightening any fasteners.
 - b. Move the rear shock canister in position to see the suspension screw through the upper body work.
 - c. Remove upper body work and tighten rear shock reservoir clamp to 120-144 **in-lbs** (14-16 Nm).
9. See [Figure 2-116](#). Feed fuel vent hose (1) through tail section, keeping the hose on top of rear shock reservoir hose. See [D.1 HOSE AND WIRE ROUTING](#) for hose and wire routing.
10. Install cable strap (3) holding shock reservoir hose, wire harness and fuel vent hose to subframe tail assembly.
11. See [Figure 2-118](#). Feed rear brake reservoir hose underneath subframe tail assembly and install rear brake reservoir tightening fastener to 48-72 **in-lbs** (5.4-8.1 Nm).
12. See [Figure 2-117](#). Install cable strap holding brake light connector and rear reservoir hose.

13. See [Figure 2-115](#). Install lower body work (9) and trunk (11) onto subframe tail assembly (7).
 - a. Install trunk (11).
 - b. Install lower body work (9) underneath subframe tail assembly by tightening fasteners (10) to **36-48 in-lbs** (4-5 Nm).
14. Install passenger footpeg mounts. Tightening footpeg mount fasteners to 15-18 ft-lbs (20-24 Nm). See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
15. See [Figure 2-116](#). Connect rear power harness to tail light harness (5).
16. Install christmas tree tie down that holds the turn signals and tail light wire harness to subframe tail assembly. See [7.14 TURN SIGNALS](#).

 **WARNING**

Check for proper turn signal operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper turn signal operation could result in death or serious injury.

17. See [Figure 2-115](#). Install license plate bracket (13) to lower tail body work (9) and tighten fasteners (12) to **36-48 in-lbs** (4-5 Nm).
18. Install turn signals and reflectors onto lower body work and tighten to **25-28 in-lbs** (2-3 Nm). See [7.14 TURN SIGNALS](#).
19. Connect turn signal bullet connections and tail light connections. See [7.14 TURN SIGNALS](#) and [7.13 TAIL LAMP](#).
20. Install passenger seat latch (14) from rear of subframe tail assembly and tighten to **60-96 in-lbs** (7-11 Nm).

21. See [Figure 2-115](#). Install upper body work onto subframe tail assembly.
 - a. Connect passenger lock cable (6) by installing ferule into lock lever.
 - b. Starting on the left side of the subframe tail assembly cover the lock cable and wire harness and align upper body work (1) on subframe tail assembly (7).
 - c. Install tail body work starting with the fastener in the center of upper body work and between the passenger and rider seat. Tighten all fasteners to **12-36 in-lbs** (1-4 Nm).

 **WARNING**

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

22. Install battery by threading positive cable (red) into threaded hole first tightening to **72-96 in-lbs** (8-11 Nm). See [1.5 BATTERY MAINTENANCE](#).

 **WARNING**

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

23. Install seat and pillion. See [2.38 SEAT](#).

REMOVAL

1. See [Figure 2-119](#). Remove two center (4) and four side windscreen fasteners (3) to remove windshield (1).
2. Remove mirrors (2).
3. Remove turn signals (6, 7). See [7.14 TURN SIGNALS](#) and remove front fairing (5).

INSTALLATION

1. See [Figure 2-119](#). Position fairing (5) onto fairing support bracket and install turn signals (6, 7). See [7.14 TURN SIGNALS](#).
2. Install mirrors (2) with fasteners and tighten to 72-96 **in-lbs** (8-11 Nm).
3. Install two center (4) and four side windscreen fasteners (3).

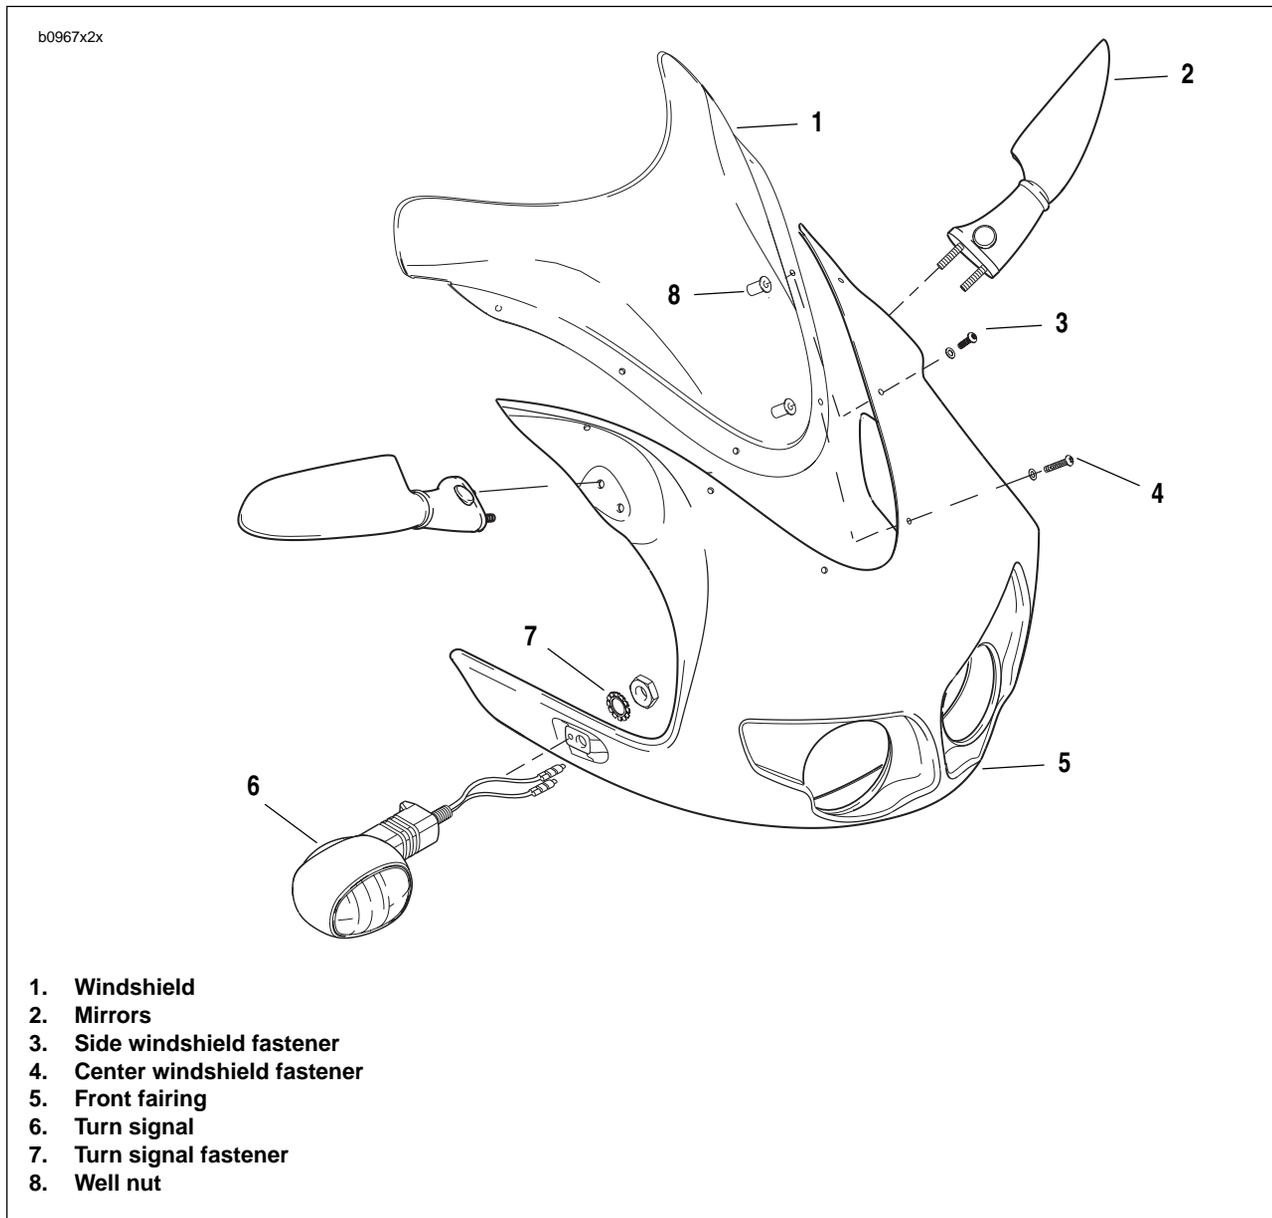


Figure 2-119. Front Fairing and Windscreen

REMOVAL

Rider Seat

1. See [Figure 2-120](#). Peel up rear corners of seat and remove two fasteners.
2. Pull seat back over tail section and remove.

Pillion Seat

NOTE

The trunk is located under the pillion seat.

1. See [Figure 2-121](#). Insert ignition key into pillion seat lock located on left side of motorcycle. Turn key clockwise to disengage rear seat latch.

CAUTION

Do not place keys in underseat storage area. If seat is installed, keys will not be accessible.

2. Lift and remove pillion seat.

INSTALLATION

Rider Seat

1. Position seat in mounting position with center tab aligned with slot on frame crossmember.
2. Slide seat forward to engage center tab in slot. Pull up on front of seat to verify tab/slot engagement.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

3. Pull up rear corners of seat and tighten two fasteners to 12-36 in-lbs (1-4 Nm).

Pillion Seat

1. Install seat by sliding metal locating tab on front underside of seat into opening on motorcycle.
2. Align rear tab with latch slot at rear of motorcycle.
3. Press down firmly on rear of pillion seat to engage seat latch. Pull up on rear of pillion seat to make sure latch is engaged.
4. Turn ignition key counterclockwise and remove from seat lock.



Figure 2-120. Accessing Rider Seat Screws

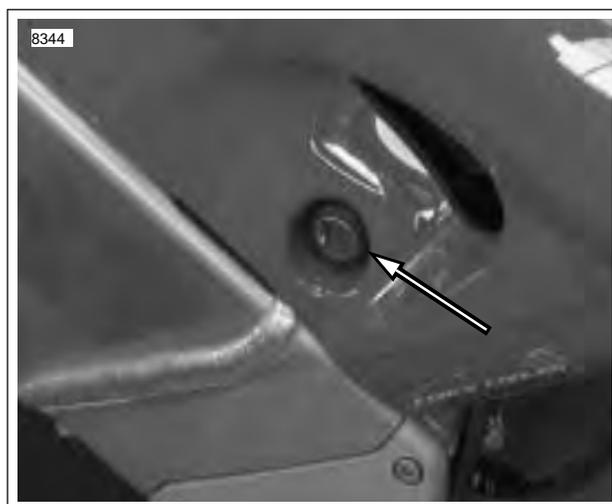


Figure 2-121. Pillion Seat Lock

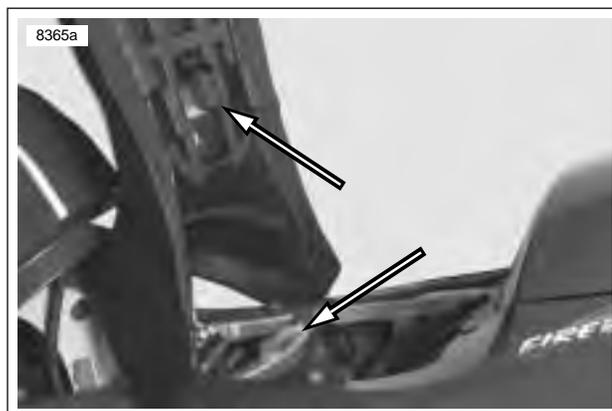


Figure 2-122. Center Tab and Frame Slot

REMOVAL

1. Remove rider and pillion seat. See [2.38 SEAT](#).
2. Remove upper body work on tail section. See [2.36 SUB-FRAME TAIL ASSEMBLY AND BODY WORK](#).
3. See [Figure 2-123](#). Disconnect passenger lock cable (9) by removing cable from seat lock plate (6) and ferrule from seat lock lever (4).
4. Remove seat lock lever (4) by removing fastener (2) and washer (3) from seat lock (7).
5. Remove spring (5).
6. Remove seat lock clip (1) by sliding from seat lock plate (6).
7. Remove seat lock plate (6) and seat lock (7).

INSTALLATION

1. See [Figure 2-123](#). Install the seat lock (7) on to upper tail body work.
2. Install seat lock plate (6) by aligning plate tab onto seat lock (7).
3. Install seat lock clip (1) by sliding clip aligning clip groove onto seat lock plate (6) tab.
4. Position short tab of spring (5) into seat lock notch.
5. Position long end of spring into the seat lock lever (4).
6. Load the spring (5) by turning the seat lock lever (4) counterclockwise 1/4 turn.
7. Once the spring is loaded, install the seat lock lever (4) onto the lock aligning the lever to the square groove that is cast into the seat lock (7).
8. Fasten the lock lever (4) to the seat lock (7) with the washer (3) and fastener (2).
9. Install the ferrule (8) of the seat lock cable (9) into the seat lock lever (4).
10. Open and close the seat lock with ignition key to verify that cable is working properly.
11. Install the seat lock cable (9) into the seat lock plate (6).
12. Install upper body work on tail section. See [2.36 SUB-FRAME TAIL ASSEMBLY AND BODY WORK](#).
13. Install rider and pillion seat. See [2.38 SEAT](#).

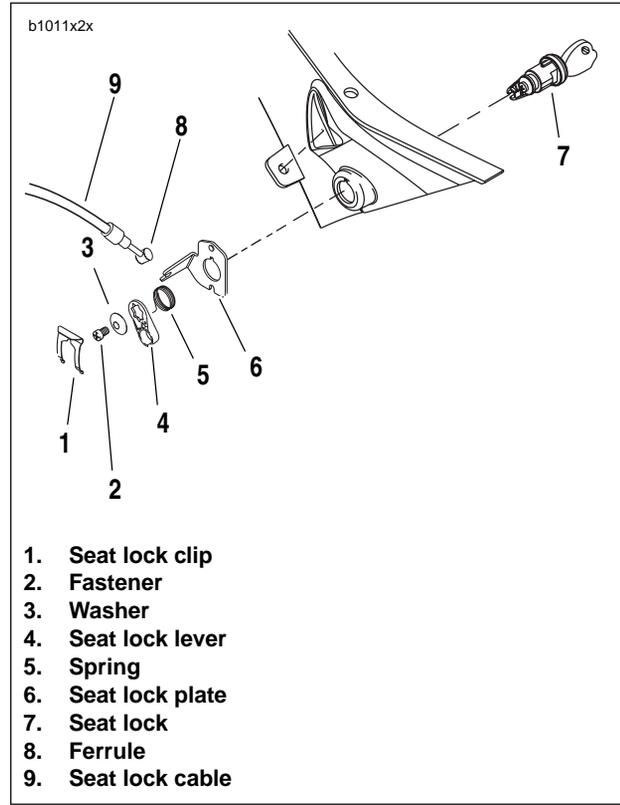


Figure 2-123. Seat Lock and Cable Assembly

GENERAL

CAUTION

This motorcycle does NOT have a locking sidestand. Park the motorcycle on a level, firm surface. An unbalanced motorcycle can fall, which could result in death or serious injury. (00122a)

The sidestand is located on the left side of the motorcycle. The sidestand swings outward to support the motorcycle for parking.

REMOVAL

1. Remove muffler. See [Muffler and Straps](#) in 2.28 EXHAUST SYSTEM.
2. See [Figure 2-125](#). Remove fasteners (4) securing sidestand bracket (3) to frame.
3. Remove sidestand.

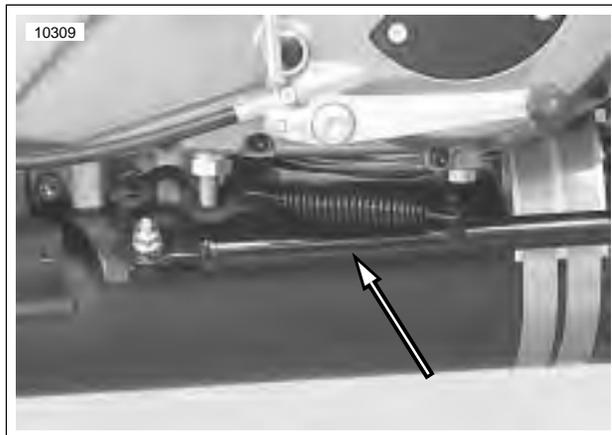


Figure 2-124. Sidestand, Retracted

DISASSEMBLY

NOTE

Sidestand assembly does not have to be removed from motorcycle in order to remove sidestand leg.

1. Remove two fasteners from the left side of chin fairing.
2. Remove sidestand leg (1).
 - a. Retract sidestand leg.
 - b. Remove sidestand spring (8) and spring extension plate (4) using SNAP-ON SPRING TOOL (Part No. HE-52B).
 - c. Remove sidestand pivot bolt (5).
3. Extend sidestand leg and remove.

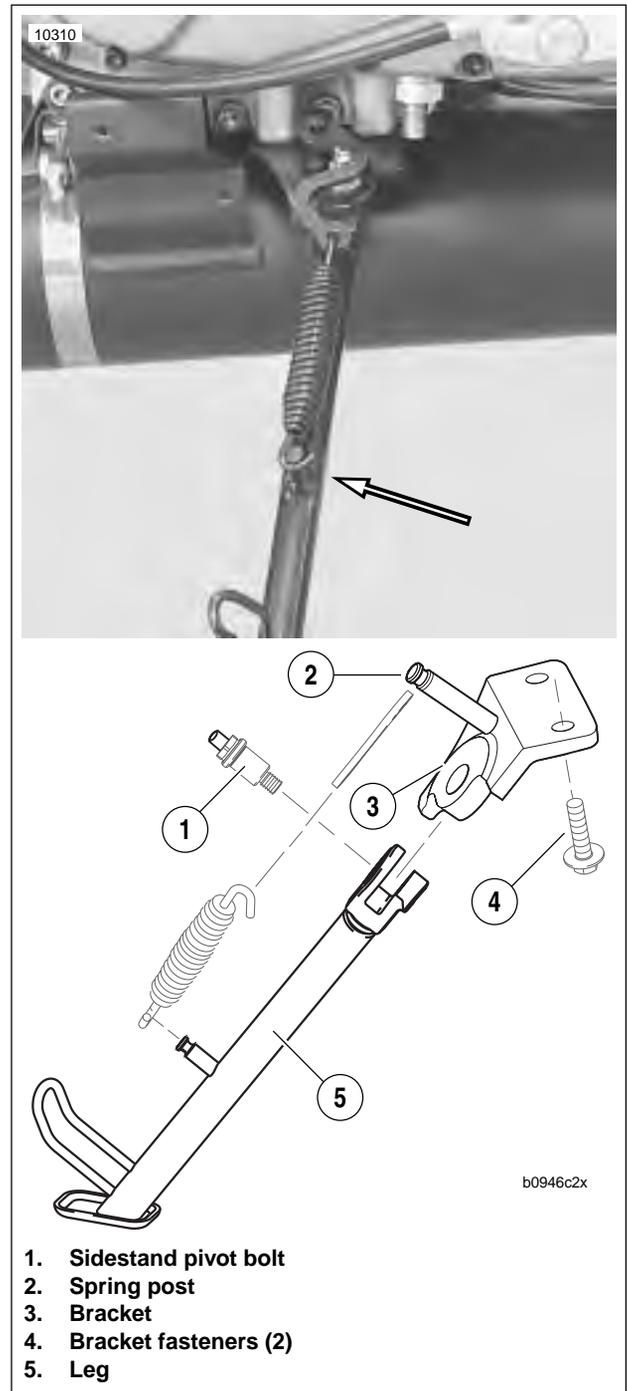


Figure 2-125. Sidestand Assembly (Extended)

ASSEMBLY

1. Install sidestand leg (1).
 - a. See [Figure 2-127](#). Lubricate sidestand pivot bolt (5) and mating portions on sidestand bracket (2) with WHEEL BEARING GREASE (Part No. 99855-89) as shown in [Figure 2-127](#).
 - b. See [Figure 2-128](#). Apply LOCTITE 272 (Red) to threaded area (clevis) of sidestand leg.

NOTE

Applying LOCTITE to threaded area of clevis on sidestand leg, instead of threads on the pivot bolt, will eliminate build-up between clevis and sidestand bracket which can interfere with the applied lubricant.

- c. See [Figure 2-126](#). Install sidestand leg (1) and sidestand pivot bolt (3) tightening to 18-20 ft-lbs (24-27 Nm).
- d. Retract sidestand leg.
- e. Install spring extension plate (4) and sidestand spring (2) using SNAP-ON SPRING TOOL (Part No. HE-52B).

NOTE

Extension plate should curve away from primary chain adjustment screw to allow for clearance around adjustment screw.

INSTALLATION

1. Install sidestand to frame tightening the sidestand bracket fasteners to 25-27 ft-lbs (34-37 Nm).
2. Install muffler. See [Muffler and Straps](#) in [2.28 EXHAUST SYSTEM](#).
3. Inspect sidestand.

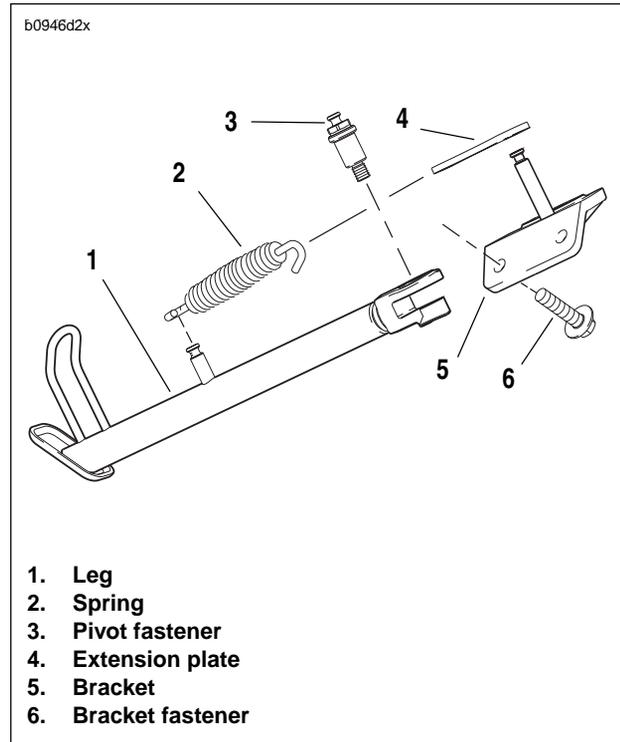


Figure 2-126. Sidestand Assembly

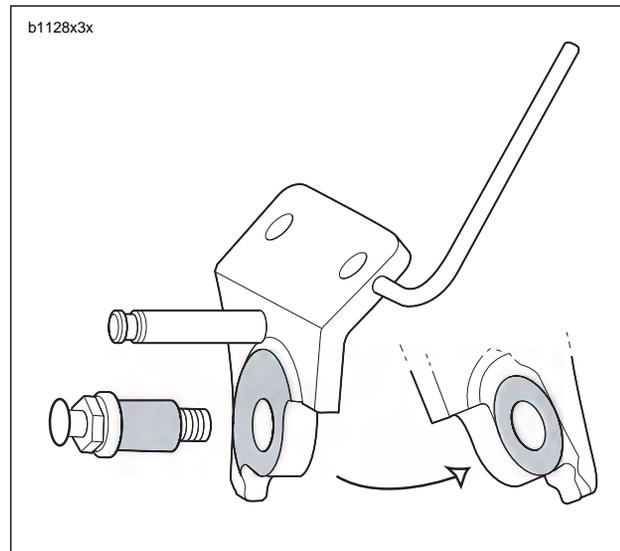


Figure 2-127. Lubricating Points (Shaded Areas)

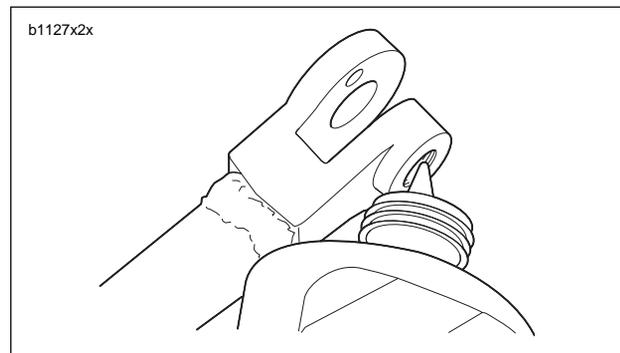


Figure 2-128. Threaded Area for Loctite Application

Table Of Contents

| SUBJECT | PAGE NO. |
|---|-----------------|
| 3.1 Specifications | 3-1 |
| 3.2 Engine | 3-6 |
| 3.3 Engine Rotation for Service | 3-8 |
| 3.4 Stripping Motorcycle for Engine Service | 3-19 |
| 3.5 Engine Installation | 3-29 |
| 3.6 Cylinder Head | 3-45 |
| 3.7 Cylinder and Piston | 3-63 |
| 3.8 Lubrication System | 3-73 |
| 3.9 Oil Hose Routing and Oil Reservoir | 3-74 |
| 3.10 Oil Pressure Indicator Switch | 3-75 |
| 3.11 Crankcase Breathing System | 3-76 |
| 3.12 Oiling System | 3-78 |
| 3.13 Oil Pump | 3-79 |
| 3.14 Oil Filter Mount | 3-82 |
| 3.15 Hydraulic Lifters | 3-83 |
| 3.16 Gearcase Cover And Cam Gears | 3-85 |
| 3.17 Crankcase | 3-90 |

NOTE

Service wear limits are given as a guideline for measuring components that are **not new**. For measurement specifications not given under SERVICE WEAR LIMITS, see NEW COMPONENTS.

Table 3-1. General Information

| | | |
|-----------------------------------|--|-------------|
| Type | 2 cylinder, air cooled, four-stroke 45 degree V-twin | |
| Compression ratio | 10:1 | |
| Bore (XB9R & XB12R) | 3.50 in. | 88.9 mm |
| Stroke (XB9R) | 3.125 in. | 79.38 mm |
| Stroke (XB12R) | 3.812 in. | 97.0 mm |
| Engine displacement (9R) | 60.05 cu. in. | 984 cc |
| Engine displacement (12R) | 73.4 cu. in. | 1203cc |
| Oil capacity (with filter change) | 2.5 quarts | 2.37 liters |

Table 3-2. Engine Ignition Specifications

| | | |
|-------------------|-----------------------------|-----------|
| Type | Sequential, non waste spark | |
| Regular idle | 1050-1150 RPM | |
| Spark plug size | 12 mm | |
| Spark plug type | Harley-Davidson No. 10R12A | |
| Spark plug gap | 0.035 in. | 0.8890 mm |
| Spark plug torque | 11-18 ft-lbs | 15-24 Nm |

Table 3-3. Valve and Valve Seat Specifications

| VALVE | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--|---------|-----------------|------------------|---------------------|------------|
| Fit in guide | Exhaust | 0.001-0.003 in. | 0.0254-0.0762 mm | 0.0038 in. | 0.1016 mm |
| | Intake | 0.001-0.003 in. | 0.0254-0.0762 mm | 0.0038 in. | 0.0889 mm |
| Seat width | | 0.040-0.062 in. | 1.016-1.575 mm | 0.090 in. | 2.286 mm |
| Stem protrusion from cylinder valve pocket | | 2.028-2.064 in. | 51.511-52.426 mm | 2.082 in. | 52.8828 mm |

Table 3-4. Valve Spring Specifications

| VALVE SPRING | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--------------|--------------------|----------------|----------|---------------------|---------------|
| Free length | | 2.325 in. | 59.1 mm | 2.325. (min.) | 59.1 mm (min) |
| Intake | 1.850 in. (closed) | 135 lbs | 61.2 kg | | |
| | 1.300 in. (open) | 312 lbs | 141.5 kg | | |
| Exhaust | 1.850 in. (closed) | 135 lbs | 61.2 kg | | |
| | 1.300 in. (open) | 312 lbs | 141.5 kg | | |

Table 3-5. Rocker Arm Specifications

| ROCKER ARM | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--|-------------------|------------------|---------------------|-----------|
| | | | | |
| Shaft fit in bushing (loose) | 0.0005-0.0020 in. | 0.0127-0.0508 mm | 0.0035 in. | 0.0889 mm |
| End clearance | 0.003-0.013 in. | 0.076-0.330 mm | 0.025 in. | 0.635 mm |
| Bushing fit in rocker arm (tight) | 0.004-0.002 in. | 0.102-0.0559 mm | | |
| Rocker arm shaft fit in rocker cover (loose) | 0.0007-0.0022 in. | 0.018-0.056 mm | 0.0035 in. | 0.0889 mm |

Table 3-6. Piston Ring and Piston Pin Specifications

| PISTON | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--------------------------------------|---------------------|--------------------|---------------------|------------|
| | | | | |
| Compression ring gap (top and 2nd) | 0.007-0.020 in. | 0.178-0.508 mm | 0.032 in. | 0.813 mm |
| Oil control ring rail gap | 0.009-0.052 in. | 0.229-1.321 mm | 0.065 in. | 1.651 mm |
| Compression ring side clearance | Top | 0.0020-0.0045 in. | 0.0508-0.1143 mm | 0.0065 in. |
| | 2nd | 0.0016-0.0041 in. | 0.0406-0.1041 mm | 0.0065 in. |
| Oil control ring side clearance | 0.0016-0.0076 in. | 0.0406-0.1930 mm | 0.0094 in. | 0.2388 mm |
| Pin fit (loose, at room temperature) | 0.00005-0.00045 in. | 0.00127-0.01143 mm | 0.00100 in. | 0.02540 mm |

Table 3-7. Cylinder Head Specifications

| CYLINDER HEAD | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--------------------------------|-------------------|------------------|---------------------|----------------|
| | | | | |
| Valve guide in head (tight) | 0.0033-0.0020 in. | 0.0838-0.0508 mm | | |
| Valve seat in head (tight) | 0.0035-0.0010 in. | 0.0889-0.0254 mm | | |
| Head gasket surface (flatness) | 0.006 in. total | 0.152 mm total | 0.006 in. total | 0.152 mm total |

Table 3-8. Cylinder Specifications

| CYLINDER | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|----------------------------|----------------|------------|---------------------|------------|
| | | | | |
| Taper | | | 0.002 in. | 0.051 mm |
| Out of round | | | 0.003 in. | 0.076 mm |
| Warpage (gasket surfaces) | Top | | 0.006 in. | 0.152 mm |
| | Base | | 0.008 in. | 0.203 mm |
| Bore diameter ± 0.0002 in. | Standard | 3.4978 in. | 88.8441 mm | 3.5008 in. |

Table 3-9. Connecting Rod Specifications

| CONNECTING ROD | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|-----------------------------|---------------------|--------------------|---------------------|------------|
| | | | | |
| Piston pin fit (loose) | 0.00145-0.00155 in. | 0.03683-0.03937 mm | 0.00180 in. | 0.04572 mm |
| Side play between flywheels | 0.005-0.031 in. | 0.1-0.8 mm | 0.036 in. | 0.9 mm |
| Fit on crankpin (loose) | 0.0004-0.0017 in. | 0.0102-0.0432 mm | 0.0027 in. | 0.0686 mm |
| Connecting rod race ID | 1.6245-1.6250 in. | 41.2623-41.2750 mm | 1.6270 in. | 41.3258 mm |

Table 3-10. Hydraulic Lifter Specifications

| HYDRAULIC LIFTER | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|----------------------|-------------------|------------------|---------------------|-----------|
| Fit in guide | 0.0008-0.0020 in. | 0.0203-0.0508 mm | 0.0030 in. | 0.0762 mm |
| Roller fit | 0.0006-0.0010 in. | 0.0152-0.0254 mm | 0.0015 in. | 0.0381 mm |
| Roller end clearance | 0.008-0.022 in. | 0.203-0.559 mm | 0.026 in. | 0.660 mm |

Table 3-11. Oil Pump Specifications

| OIL PUMP | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|---|----------|----------------|------------|---------------------|----------|
| Oil pressure | 1000 RPM | 7-12 PSI | 48-83 kPa | | |
| | 2500 RPM | 10-17 PSI | 69-117 kPa | | |
| Shaft to pump clearance | | 0.0025 in. | 0.0635 mm | | |
| Feed/scavenge inner/outer gerotor clearance | | 0.003 in. | 0.076 mm | 0.004 in. | 0.102 mm |

Table 3-12. Gearcase Specifications

| GEARCASE | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--------------------------------------|--|-------------------|------------------|---------------------|----------|
| Cam gear shaft in bushing (loose) | | 0.0007-0.0022 in. | 0.0178-0.0559 mm | 0.003 in. | 0.076 mm |
| Cam gear shaft end play (min) | | 0.005-0.024 in. | 0.127-0.610 mm | 0.025 in. | 0.635 mm |
| Intake cam gear shaft end play (min) | | 0.006-0.024 in. | 0.152-0.610 mm | 0.040 in. | 1.016 mm |

Table 3-13. Flywheel Specifications

| FLYWHEEL | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|----------|-----------------------|-----------------|----------------|---------------------|----------|
| Runout | Flywheels at rim | 0.000-0.010 in. | 0.000-0.254 mm | 0.010 in. | 0.254 mm |
| | Shaft at flywheel end | 0.000-0.002 in. | 0.000-0.051 mm | 0.002 in. | 0.051 mm |

Table 3-14. Sprocket Shaft Bearing Specifications

| SPROCKET SHAFT BEARING | | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|---|--|-------------------------------|--------|---------------------|--|
| Bearing outer race fit in crankcase (tight) | | 0.006 in. Interference fit | 0.2 mm | | |
| Bearing inner race fit on shaft (tight) | | 0.006 in. Interference fit | 0.2 mm | | |

Table 3-15. Pinion Shaft Bearing Specifications

| PINION SHAFT BEARINGS | NEW COMPONENTS | | SERVICE WEAR LIMITS | |
|--|-----------------------|--------------------|----------------------------|------------------|
| Pinion shaft journal diameter | 1.2496-1.2500 in. | 31.7398-31.7500 mm | 1.2496 in. (min) | 31.7398 mm (min) |
| Outer race diameter in right crankcase | 1.5646-1.5652 in. | 39.7408-39.7561 mm | 1.5672 in. (max) | 39.8069 mm (max) |
| Bearing running clearance | 0.00012-0.00088 in. | 0.00305-0.02235 mm | | |
| Fit in cover bushing (loose) | 0.0023-0.0043 in. | 0.0584-0.1092 mm | 0.0050 in. | 0.1270 mm |

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|--|-----------------------|--------------|---------------------------------------|
| All tie bars | 25-27 ft-lbs | 33.9-36.6 Nm | page 3-14 |
| Anti-rotation screws (lifter) | 55-65 in-lbs | 6-7 Nm | page 3-86 |
| Crankcase 5/16 in. screws | 15-19 ft-lbs | 20-26 Nm | page 3-104 |
| Cylinder head screws | Special procedure | | Special pattern to tighten, page 3-60 |
| Cylinder studs | 10-20 ft-lbs | 14-27 Nm | Special method to tighten, page 3-105 |
| Exhaust header nuts | 72-96 in-lbs | 8.1-10.8 Nm | page 3-14 |
| Feed oil line at oil reservoir | 24-26 ft-lbs | 32.5-35.2 Nm | page 3-35 |
| Feed oil line at rear of oil pump | 27-29 ft-lbs | 36.6-39.3 Nm | page 3-36 |
| Front isolator bolt | 49-51 ft-lbs | 66-69 Nm | page 3-14 |
| Front isolator bracket mounting fastener | 49-51 ft-lbs | 66-69 Nm | page 3-14, 3-32 |
| Front muffler strap fastener | 108-120 in-lbs | 12.2-13.6 Nm | page 3-16 |
| Gearcase cover screws | 80-110 in-lbs | 9-12 Nm | Special pattern to tighten, page 3-91 |
| Oil cooler feed oil line | 19-21 ft-lbs | 25.8-28.5 Nm | At oil cooler, page 3-15, 3-39 |
| Oil cooler return oil line | 15-17 ft-lbs | 20.3-23 Nm | At crankcase, page 3-15, 3-39 |
| Oil filter adapter | 96-144 in-lbs | 11-16 Nm | LOCTITE 243 (blue), page 3-84 |
| Oil pressure signal light switch | 50-70 in-lbs | 6-8 Nm | page 3-84 |
| Oil pump cover screws | 70-80 in-lbs | 8-9 Nm | TORX, page 3-83 |
| Oil pump mounting screws | 125-150 in-lbs | 14-17 Nm | Page 3-83 |
| Pinion shaft nut | 19-21 ft-lbs | 26-29 Nm | page 3-90 |
| Piston jet TORX screws | 25-35 in-lbs | 2.8-4 Nm | LOCTITE 222 (purple), page 3-93 |
| Pushrod cover screw | 30-40 in-lbs | 3-5 Nm | page 3-86 |
| Rear isolator assembly fasteners | 25-27 ft-lbs | 33.9-36.6 Nm | page 3-29 |
| Rear isolator bolt | 25-27 ft-lbs | 33.9-36.6 Nm | page 3-14 |
| Rear muffler bracket | 32-36 ft-lbs | 43.4-48.8 Nm | page 3-33 |
| Rear muffler straps | 48-60 in-lbs | 5.4-6.8 Nm | page 3-16 |
| Reed valve fasteners | 25-30 in-lbs | 3.4-4.5 Nm | page 3-79 |
| Return oil line at oil reservoir | 23-25 ft-lbs | 31.2-33.9 Nm | page 3-35 |
| Return oil line at top front oil pump | 22-24 ft-lbs | 29.8-32.5 Nm | page 3-36 |

| ITEM | TORQUE | | NOTES |
|---------------------------------|-----------------------|--------------|--------------------------------|
| Rocker box to head bolts | 135-155 in-lbs | 15-18 Nm | Small fasteners (2), page 3-62 |
| Rocker box to head bolts | 135-155 in-lbs | 15-18 Nm | Small fasteners (3), page 3-62 |
| Rocker box to head bolts | 18-22 ft-lbs | 24-30 Nm | Large fasteners, page 3-62 |
| Sprocket cover fastener | 12-36 in-lbs | 1-4 Nm | page 3-18, 3-44 |
| Swingarm pivot shaft pinch bolt | 17-19 ft-lbs | 23-25.8 Nm | page 3-30 |
| Swingarm pivot shaft | 24-26 ft-lbs | 32.5-35.2 Nm | page 3-30 |
| Torca clamp | 40-45 ft-lbs | 54.2-61 Nm | page 3-16 |
| V bracket to main frame | 120-144 in-lbs | 13.6-16.3 Nm | page 3-14, 3-32 |
| Vent oil line at gearcase cover | 12-13 ft-lbs | 16.3-17.6 Nm | page 3-36 |
| Vent oil line at oil reservoir | 17-19 ft-lbs | 23-25.8 Nm | page 3-35 |

FUEL

Gasoline/alcohol Blends

The Buell Firebolt has been designed to obtain the best performance and efficiency using a good quality unleaded gasoline. Buell recommends using at least 91 pump octane (RON). Octane rating is usually found on the pump. Some fuel suppliers sell gasoline/alcohol blends as a fuel. The type and amount of alcohol added to the fuel is important.

- **DO NOT USE GASOLINES CONTAINING METHANOL.** Using gasoline/methanol blends will result in starting and driveability deterioration and damage to critical fuel system components.
- Gasolines containing ETHANOL: Gasoline/ethanol blends are mixture of 10% ethanol (Grain alcohol) and 90% unleaded gasoline. Gasoline/ethanol blends can be used in your motorcycle if the ethanol content does not exceed 10%.
- Gasolines containing ETHER: Gasoline/ether blends are a mixture of gasoline and as much as 15% ether. Gasoline/ether blends can be used in your motorcycle if the ether content does not exceed 17%.
- REFORMULATED OR OXYGENATED GASOLINES (RFG): "Reformulated gasoline" is a term used to describe gasoline blends that are specifically designed to burn cleaner than other types of gasoline, leaving fewer "tailpipe" emissions. They are also formulated to evaporate less when you are filling your tank. Reformulated gasolines use additives to "oxygenate" the gas. Your motorcycle will run normally using this type of gas. Buell recommends you use it when possible, as an aid to cleaner air in our environment.

Because of their generally higher volatility, these blends may adversely affect the starting, driveability and fuel efficiency of your motorcycle. If you experience these problems, Buell recommends that you operate your motorcycle on straight, unleaded gasoline.

LUBRICATION

The engine has a force-feed (pressure) type oiling system, incorporating oil feed and return pumps in one pump body, with one check valve on the oil feed side. The feed pump forces oil through the oil cooler to the engine, lubricating lower connecting rod bearings, rocker arm bushings, valve stems, valve springs, push rods and tappets. Cylinder wall, piston, piston pin, timing gears, bushings and main bearings are lubricated by oil spray thrown off connecting rods and crankshaft, and by oil draining from each rocker box through an internal drain passage in each cylinder and each tappet guide. Oil is transferred to the teeth of all the cam gears by way of the gear meshing action. The oil-scavenging section of the pump returns oil to the tank from the engine. See [3.8 LUBRICATION SYSTEM](#) for more information.

ADJUSTMENT/TESTING

General

When an engine needs repair, it is not always possible to determine definitely beforehand whether repair is possible with only cylinder head, cylinder and piston disassembled or whether complete engine disassembly is required for crankcase repair.

Most commonly, only cylinder head and cylinder repair is needed (valves, rings, piston, etc.) and it is recommended procedure to service these units first, allowing engine crankcase to remain in frame.

See [3.4 STRIPPING MOTORCYCLE FOR ENGINE SERVICE](#) to strip motorcycle for removal of cylinder head, cylinder, and piston.

After disassembling "upper end" only, it may be found that crankcase repair is necessary. In this situation, remove the engine crankcase from the chassis.

CAUTION

If engine is removed from chassis, do not lay engine on primary side. Placing engine on primary side will damage clutch cable end fitting. If fitting is damaged, clutch cable must be replaced.

See [1.22 TROUBLESHOOTING](#) section. Symptoms indicating a need for engine repair are often misleading, but generally, if more than one symptom is present, possible causes can be narrowed down to make at least a partial diagnosis. An above-normal consumption of oil, for example, could be caused by several mechanical faults. However, when accompanied by blue-gray exhaust smoke and low engine compression, it indicates the piston rings need replacing. Low compression by itself, however, may indicate improperly seated valves, in addition to or in lieu of worn piston rings.

Most frequently, valves, rings, pins, bushings, and bearings need attention at about the same time. If the possible causes can be narrowed down through the process of elimination to indicate any one of the above components is worn, it is best to give attention to all of the cylinder head and cylinder parts.

COMPRESSION TEST PROCEDURE

Combustion chamber leakage can result in unsatisfactory engine performance. A compression test can help determine the source of cylinder leakage. Use **CYLINDER COMPRESSION GAUGE** (Part No. HD-33223-1).

A proper compression test should be performed with the engine at normal operating temperature when possible. Proceed as follows:

CAUTION

After completing the compression test(s), make sure that the throttle plate is in the closed position before starting engine. Engine will start at an extremely high RPM if throttle plate is left open.

1. Disconnect spark plug wire. Clean around plug base and remove plug.
2. Connect compression tester to cylinder.
3. With induction module throttle plate in wide open position, crank engine continuously through 5-7 full compression strokes.
4. Note gauge readings at the end of the first and last compression strokes. Record test results.
5. Compression is normal if final readings are 120 psi (827 kPa) or more.
6. Inject approximately 1/2 oz. (15 ml) of SAE 30 oil into cylinder and repeat the compression test. Readings that are considerably higher during the second test indicate worn piston rings.

Table 3-16. Compression Test Results

| DIAGNOSIS | TEST RESULTS |
|------------------|---|
| Ring trouble | Compression low on first stroke; tends to build up on the following strokes but does not reach normal; improves considerably when oil is added to cylinder. |
| Valve trouble | Compression low on first stroke; does not build up much on following strokes; does not improve considerably with the addition of oil. |
| Head gasket leak | Same reaction as valve trouble. |

Cylinder Leakage Test

The cylinder leakage test pinpoints engine problems including leaking valves, worn, broken or stuck piston rings and blown head gaskets. The cylinder leakage tester applies compressed air to the cylinder at a controlled pressure and volume, and measures the percent of leakage from the cylinder.

Use a **CYLINDER LEAKDOWN TESTER** (Part No. HD-35667A) and follow the specific instructions supplied with the tester.

The following are some general instructions that apply to Buell motorcycle engines:

1. Run engine until it reaches normal operating temperature.
2. Stop engine. Clean dirt from around spark plug and remove spark plug.
3. Remove air cleaner and set induction module throttle plate in wide open position.
4. Remove timing inspection plug from crankcase.
5. The piston, in cylinder being tested, must be at top dead center of compression stroke during test.
6. To keep engine from turning over when air pressure is applied to cylinder, engage transmission in fifth gear and lock the rear brake.
7. Following the manufacturer's instructions, perform a cylinder leakage test on the front cylinder. Make a note of the percent leakdown. Any cylinder with 12% leakdown, or more, requires further attention.
8. See [Table 3-17](#). Listen for air leaks at induction intake, exhaust, head gasket and timing inspection hole.

NOTE

If air is escaping through valves, check push rod length.

9. Repeat procedure on rear cylinder.

CAUTION

After completing the compression test(s), make sure that the throttle plate is in the closed position before starting engine. Engine will start at an extremely high RPM if throttle plate is left open.

Table 3-17. Air Leakage Test

| AIR LEAK LOCATION | POSSIBLE CAUSES |
|-------------------------|---|
| Induction module intake | Intake valve leaking. |
| Exhaust pipe | Exhaust valve leaking. |
| Timing inspection hole | Piston rings leaking. Worn or broken piston. Worn cylinder. |
| Head gasket | Leaking gasket. |

Diagnosing Smoking Engine or High Oil Consumption

Perform [COMPRESSION TEST PROCEDURE](#) or [Cylinder Leakage Test](#) as described previously. If further testing is needed, remove suspect head(s) and inspect the following:

- Valve guide seals.
- Valve guide-to-valve stem clearance.
- Gasket surface of both head and cylinder.

GENERAL

The following process allows you to rotate engine down, pivoting on rear isolator mount, in order to service components in the top end.

NOTE

The engine does not need to be removed from chassis in order to perform top end repairs.

DISASSEMBLY

NOTE

Vehicle should be placed onto the lift with rear tire placed in the wheel vise in order to successfully perform this procedure.

1. Disconnect fuel pump and run vehicle until it is out of fuel.

NOTES

- This step is always performed in order to purge fuel lines.
- The connection for fuel pump is just above the pump located at the rear of the fuel tank on the left side of the vehicle.

⚠ WARNING


To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Remove seat and disconnect battery.
3. Remove intake cover. See [2.34 INTAKE COVER ASSEMBLY](#).
4. Remove air filter. See [1.15 AIR CLEANER FILTER](#).
5. Remove air filter base plate. See [4.30 AIRBOX](#).

NOTE

The XB12R has a clamp ring around the throttle body.

6. Remove throttle body velocity stack.
7. Cover induction module to prevent objects from falling into the intake.
8. See [Figure 3-1](#). Disconnect fuel line.
9. Disconnect the throttle position sensor [88].
10. Disconnect the fuel injector leads [84 & 85].

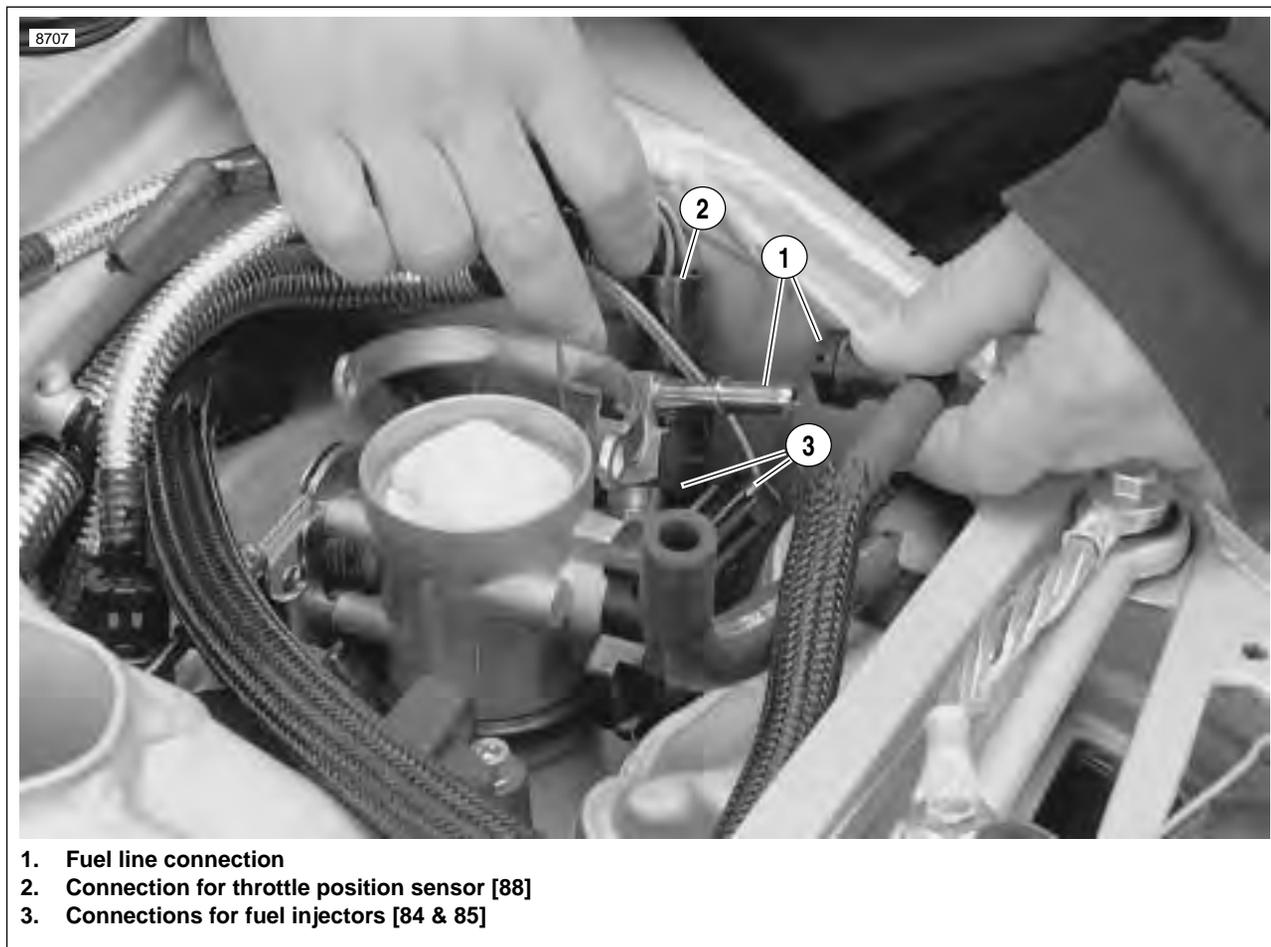

1. Fuel line connection
2. Connection for throttle position sensor [88]
3. Connections for fuel injectors [84 & 85]

Figure 3-1. Fuel Line and DDFI Electrical Connections (Typical)


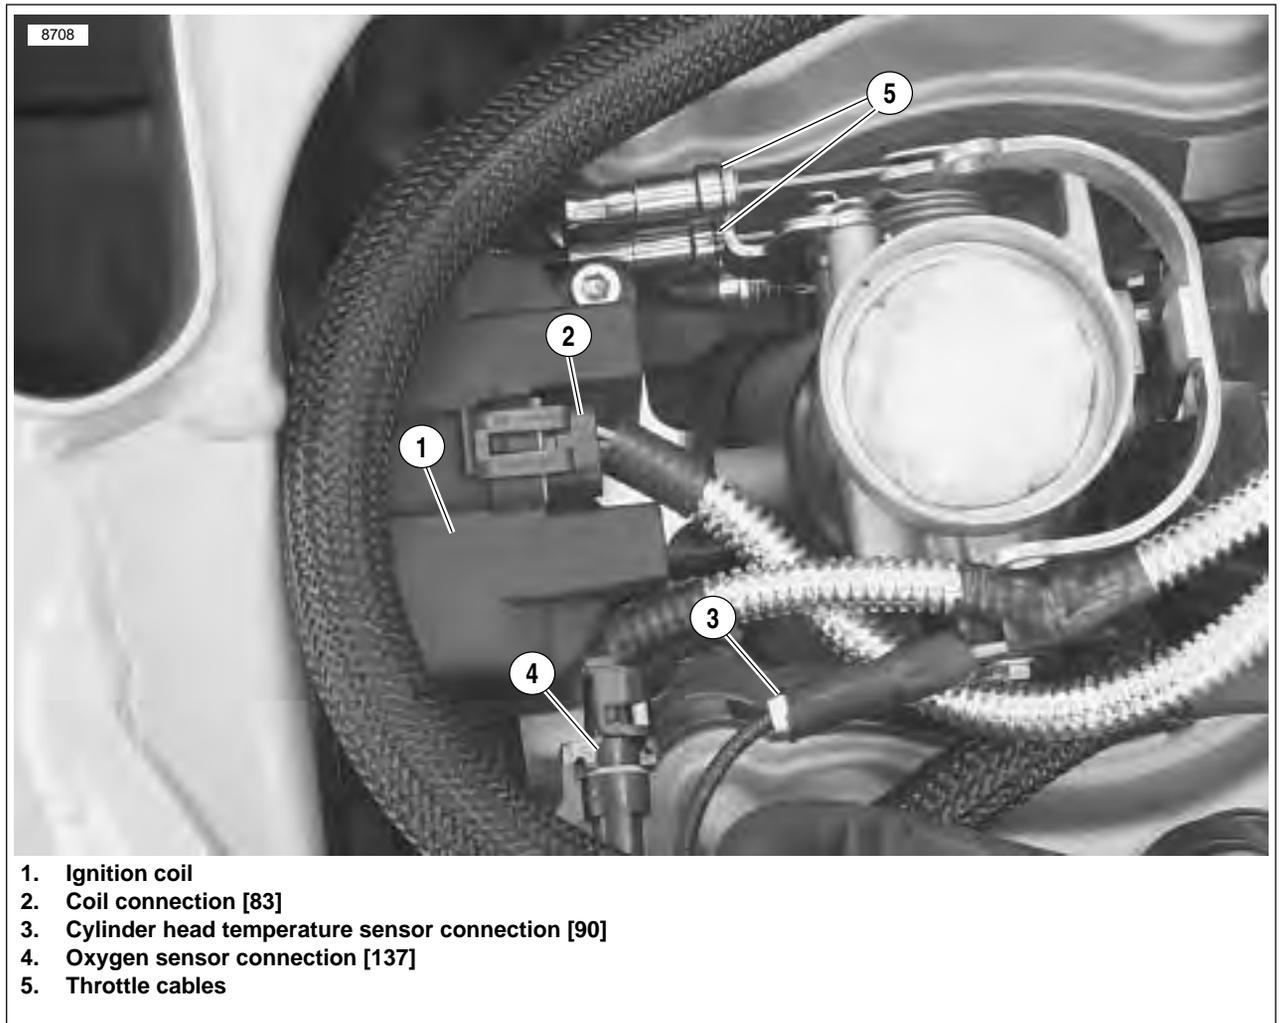


Figure 3-2. Electrical Connections and Throttle Cables (Typical)

11. See [Figure 3-2](#). Disconnect the ignition coil [83] (2) and remove.
12. Disconnect the following sensors:
 - a. Temperature sensor (3) [90]
 - b. Oxygen sensor (4) [137].

b0986x3x

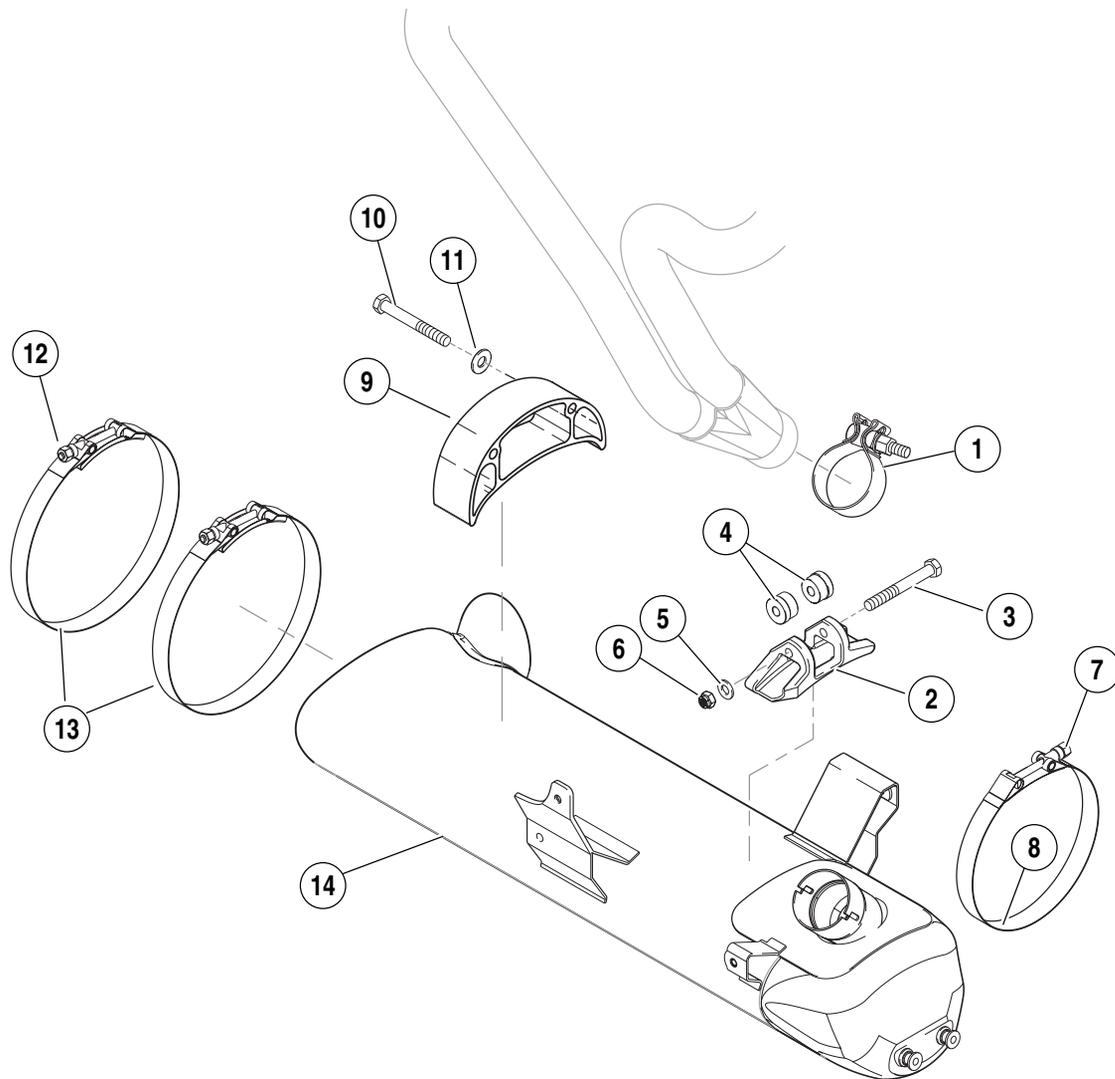

- | | |
|--|--|
| 1. Clamp, Torca | 8. Muffer strap, front |
| 2. Muffer mount, front | 9. Muffer bracket, rear |
| 3. Screw, front muffer mount (1) | 10. Screw, rear muffer bracket (2) |
| 4. Bushings, front muffer mount (2) | 11. Flat washer, rear muffer bracket (2) |
| 5. Flat washer, front muffer mount (1) | 12. Rear muffer strap fastener |
| 6. Nut, front muffer mount (1) | 13. Muffer strap, rear (2) |
| 7. Front muffer strap fastener | 14. Muffer |

Figure 3-3. Muffer and Mounting System (XB9 Models)

13. Disconnect and remove air scoops, right and left sides.
14. Remove complete chin fairing.
15. Remove transmission sprocket side cover.
16. Remove rear belt and idler pulley. See [1.10 DRIVE BELT](#) and [2.13 REAR BRAKE MASTER CYLINDER](#).

NOTE

For details on removal of components on XB12R with interactive exhaust systems, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

17. See [Figure 3-3](#). Remove muffer:
 - a. Remove front muffer strap.
 - b. Remove rear muffer straps.
 - c. Loosen Torca clamp and remove muffer.

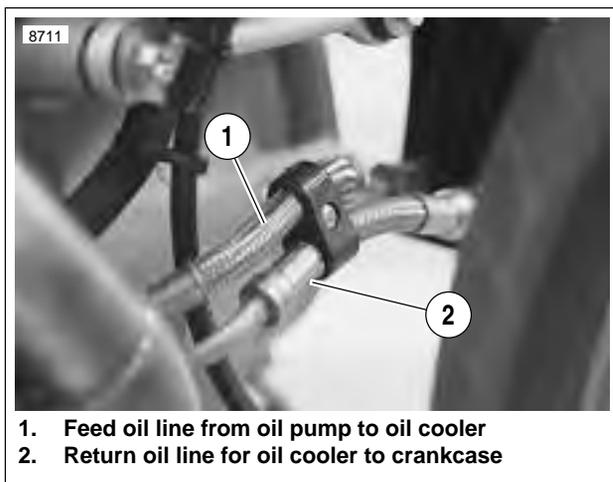


Figure 3-4. Oil Line Connections at Oil Cooler

18. See [Figure 3-4](#). Disconnect oil lines at oil cooler only.
19. Remove left side rider footrest and support plate.
20. See [Figure 3-5](#). Disconnect clutch cable.
 - a. Remove wire form retainer (1) from front isolator.
 - b. Slide clutch cable adjuster boot (2) up to access clutch adjuster.
 - c. Loosen clutch adjuster to release tension from hand lever.
 - d. Remove clutch cable ferrule from hand lever.


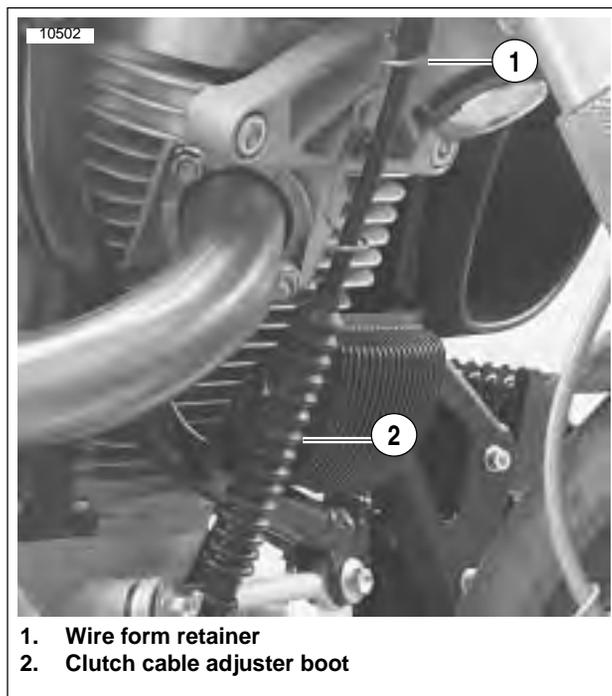


Figure 3-5. Clutch Cable Wire Form Retainer and Adjuster Boot

b0985x3x

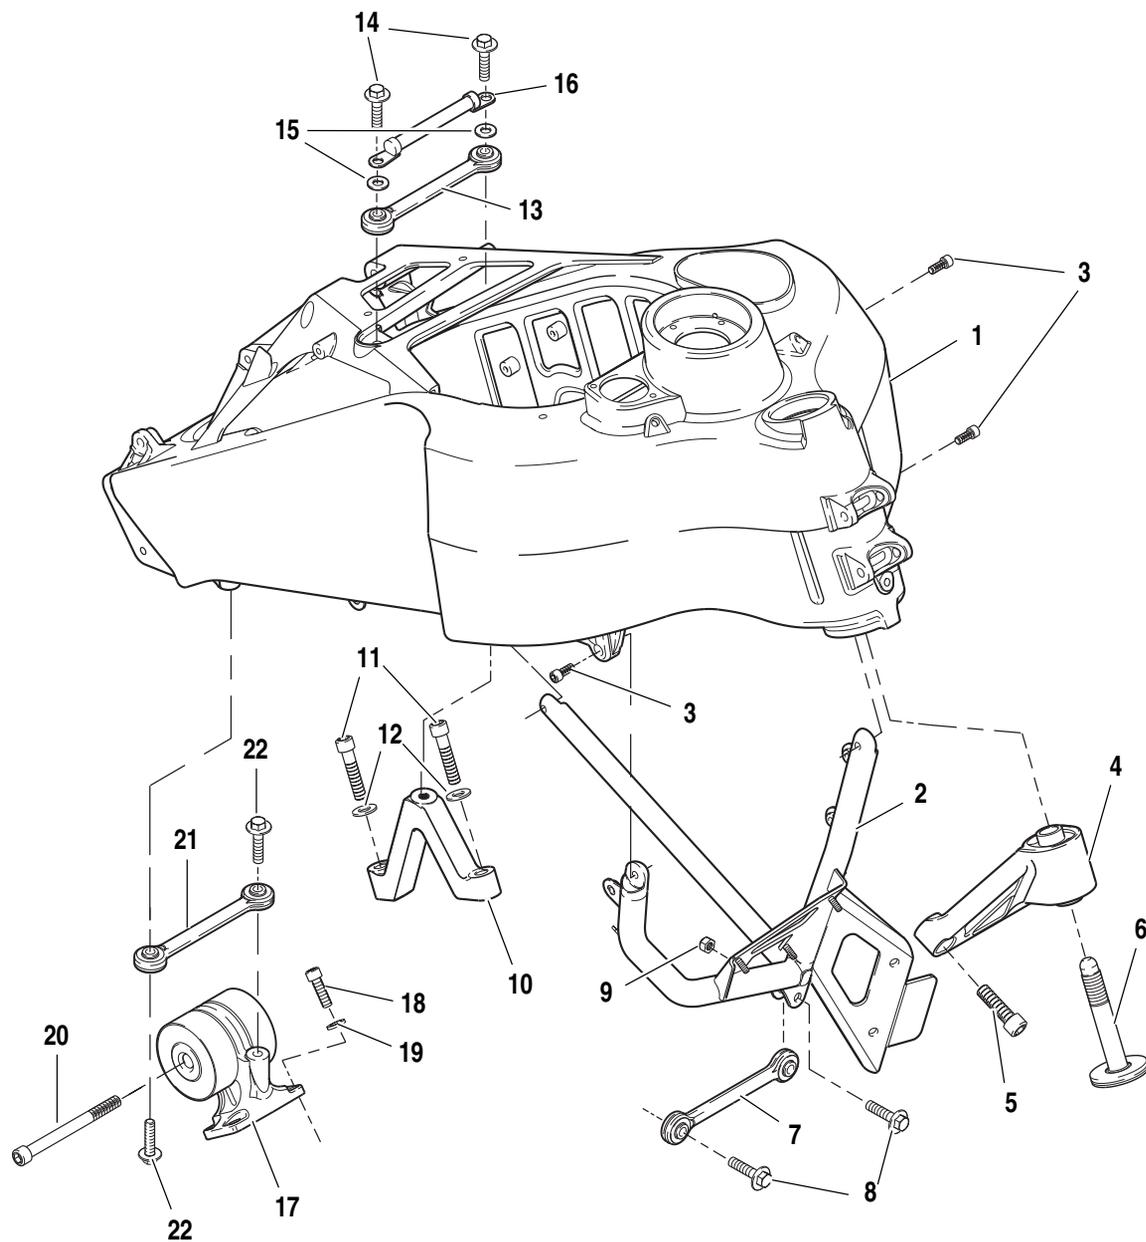

- | | |
|--|---|
| 1. Frame assembly | 12. Washers for center tie bar mount (2) |
| 2. "V" bracket | 13. Tie bar assembly, center |
| 3. Fasteners for "V" bracket (3) | 14. Fasteners for center tie bar assembly (2) |
| 4. Isolator assembly, front | 15. Washers for center tie bar assembly (2) |
| 5. Fasteners for front isolator (2) | 16. Cable, negative battery |
| 6. Bolt, front isolator | 17. Isolator assembly, rear |
| 7. Tie bar assembly, front | 18. Fasteners for rear isolator assembly (4) |
| 8. Fasteners for front tie bar assembly (2) | 19. Washers for rear isolator assembly (4) |
| 9. Nut for one fastener for front tie bar assembly | 20. Bolt, rear isolator |
| 10. Mount, center tie bar | 21. Tie bar assembly, rear |
| 11. Fasteners for center tie bar mount (2) | 22. Fasteners for rear tie bar assembly (2) |

Figure 3-6. Engine Mounting System

21. Support engine with wide scissors jack.
22. See [Figure 3-6](#). Remove front "V" bracket with oil cooler from main frame:
 - a. Remove cable strap securing the remote idle adjustment cable.
 - b. Remove the three cable straps holding regulator wiring harness in order to extend the harness to remove "V" bracket.
 - c. Unplug regulator harness, (2 plugs).
 - d. Remove front tie bar from "V" bracket only.
 - e. Unbolt "V" bracket from main frame and remove from left side.
23. Remove center tie-bar from engine.

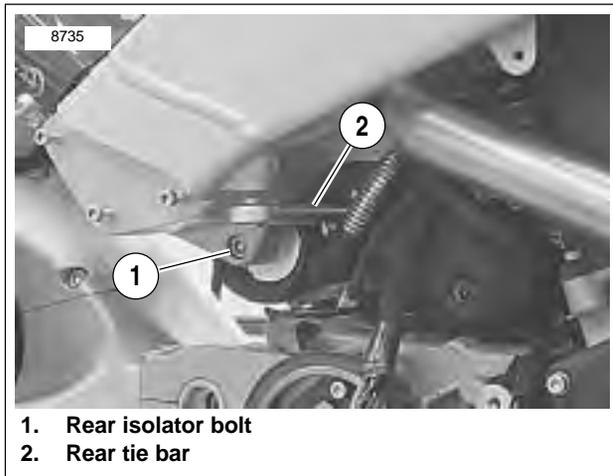


Figure 3-7. Rear Isolator Bolt and Rear Tie Bar

24. See [Figure 3-7](#). Remove rear tie bar from frame only.
25. Loosen rear isolator bolt. DO NOT REMOVE.

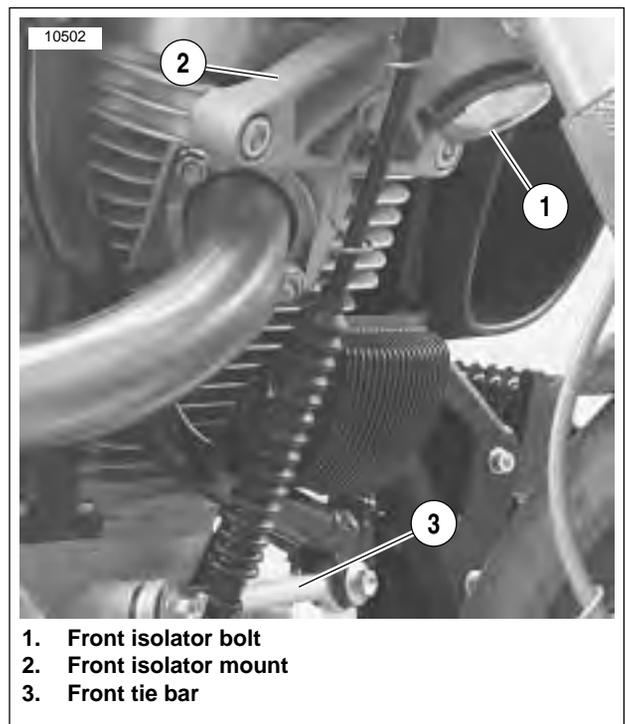


Figure 3-8. Front Isolator and Tie Bar Assemblies

26. See [Figure 3-8](#). Remove front isolator bolt (1).
27. Remove front isolator mount (2) from engine.
28. Rotate engine down.

REASSEMBLY

NOTES

- If exhaust header was removed during service it must be torqued with the engine rotated in the down position. It is not possible to reach fasteners on the rear exhaust at the head with engine rotated in the up position.
 - Tighten header nuts gradually, alternating between studs to insure that exhaust rings are flush with engine. Tighten fasteners to 72-96 **in-lbs** (8.1-10.8 Nm).
1. When repairs have been completed, rotate engine back up into frame.

NOTE

When installing and tightening isolator bolt it is important to keep load off of isolator bolt for installation purposes. Alternate between tightening isolator bolt and raising engine with scissors jack.


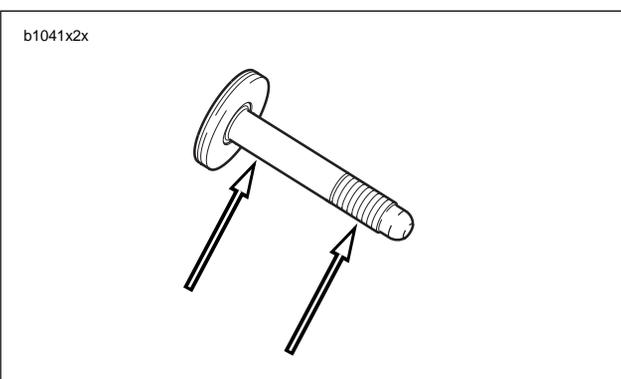


Figure 3-9. Lubrication Points on Front Isolator Bolt

NOTE

See [Figure 3-9](#). Always coat shaft and threads of front isolator bolt with anti-seize before installing.

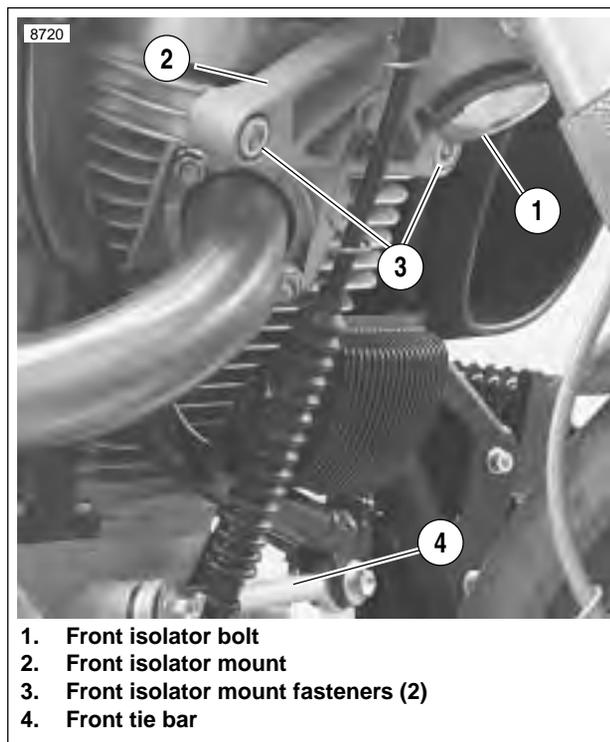

1. Front isolator bolt
2. Front isolator mount
3. Front isolator mount fasteners (2)
4. Front tie bar

Figure 3-10. Front Isolator and Tie Bar Assemblies

2. See [Figure 3-10](#). Insert front isolator bolt (1) through front isolator (2) and loosely thread into frame. Do not tighten at this point.
3. Install isolator mounting fasteners (3) and tighten to 49-51 ft-lbs (66-69 Nm).
4. Tighten front isolator bolt to 49-51 ft-lbs (66-69 Nm).
5. See [Figure 3-6](#). Torque rear isolator bolt to 25-27 ft-lbs (33.9-36.6 Nm).
6. Install rear tie bar to frame and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
7. Install center tie bar to engine and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
8. Install front "V" bracket with oil cooler to main frame.
 - a. Install "V" bracket to main frame from the left side of the vehicle and tighten to 120-144 **in-lbs** (13.6-16.3 Nm).
 - b. [Figure 3-10](#). Install front tie-bar to engine and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
 - c. Attach regulator wiring harness to bracket nylon cable straps.
9. Remove scissors jack.

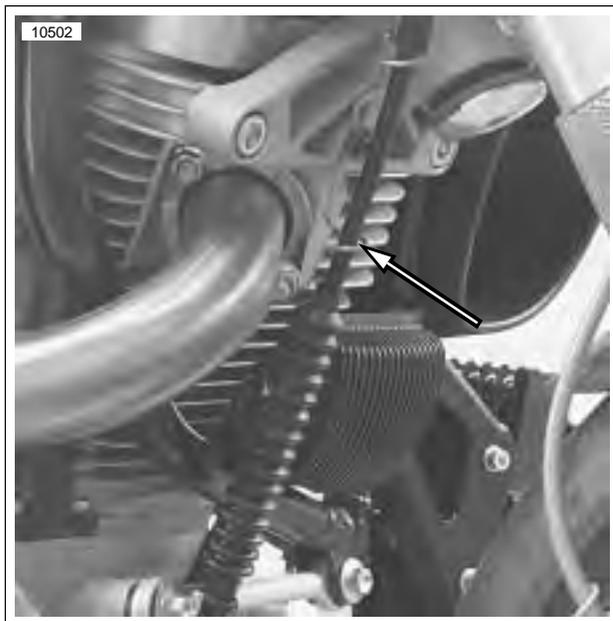


Figure 3-11. Clutch Cable Wire Form Retainer

10. See [Figure 3-11](#). Pull clutch cable back up into the proper position.
 - a. Connect clutch cable to handlebars and adjust to specifications.
 - b. Install retaining clamps.

NOTE

When torquing the feed oil line from the pump to the oil cooler it is necessary to torque the fitting at the oil pump first.

11. See [Figure 3-12](#). Install oil cooler oil feed line first at crankcase and tighten to 22-24 ft-lbs (29.8-32.5 Nm).
12. Lightly coat the threads of the oil cooler fittings with clean H-D 20W50 engine oil. Wipe off any excess oil. Tighten feed oil line to 19-21 ft-lbs (25.8-28.5 Nm) at oil cooler.
13. Verify that the clutch cable and feed line have a clearance of 1/8-1/4 in. (3.175-6.35 mm) between them.

NOTE


When installing the oil cooler return oil line it is necessary to install the end at the crankcase first.

14. See [Figure 3-12](#). Install the oil cooler return oil line at crankcase and tighten to 15-17 ft-lbs (20.3-23 Nm).
15. Lightly coat the threads of the oil cooler fittings with clean H-D 20W50 engine oil. Wipe off any excess oil. Tighten return oil line to 19-21 ft-lbs (25.8-28.5 Nm) at oil cooler.



Figure 3-12. Oil Cooler Feed and Return Oil Line 1/8-1/4 in. (3.175-6.35 mm) Clearance

b0986x3c

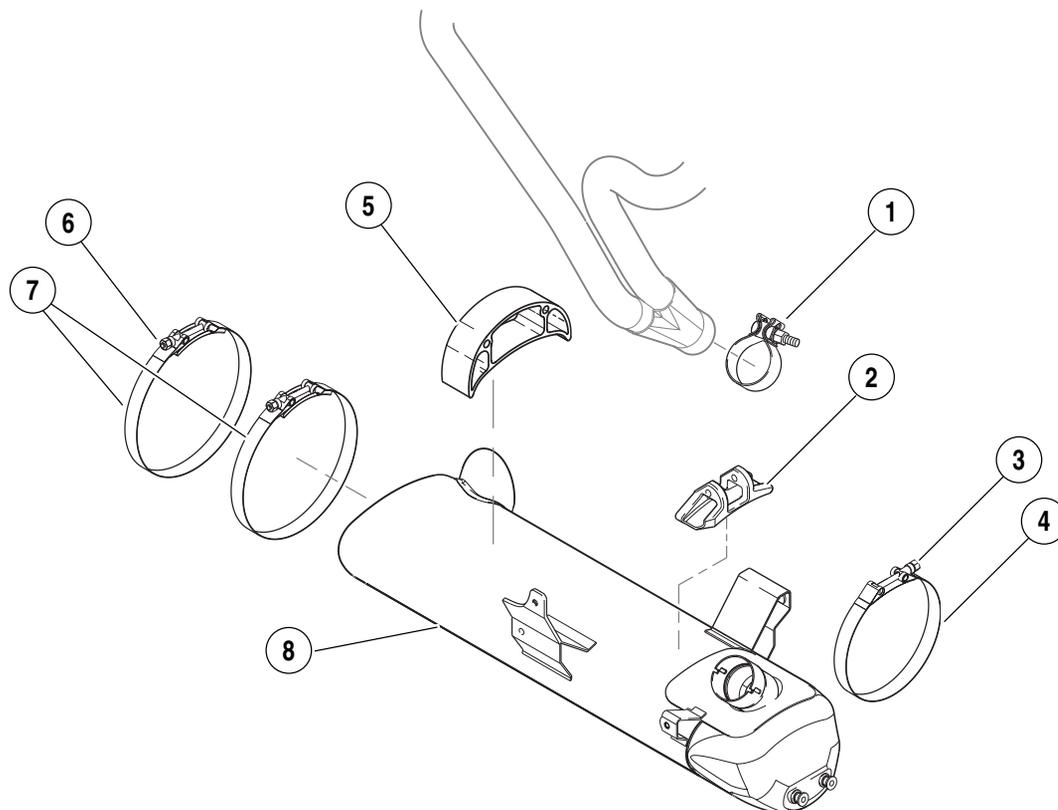

- | | |
|---------------------------------|--------------------------------|
| 1. Clamp, Torca | 5. Rear muffler bracket |
| 2. Front muffler mount | 6. Rear muffler strap fastener |
| 3. Front muffler strap fastener | 7. Muffler strap, rear (2) |
| 4. Muffler strap, front | 8. Muffler |

Figure 3-13. Muffler and Mounting System

WARNING

Never reuse front muffler strap. Always replace front muffler strap with a new strap when removed from system.

CAUTION

It is important that the front muffler mount is tightened last in order to ensure proper alignment of the exhaust system.

CAUTION

When rear muffler straps have been installed, it is important that strap fasteners do not contact idler pulley bracket.

NOTE

For details on removal of components on XB12R, with interactive exhaust system, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

16. See [Figure 3-13](#). Install muffler with **new** torca clamp but do not tighten:
 - a. Install rear muffler straps and alternately tighten rear strap fasteners (6) to **48-60 in-lbs** (5.4-6.8 Nm).
 - b. Install front muffler strap fastener (7) and tighten to **108-120 in-lbs** (12.2-13.6 Nm).
 - c. Tighten torca clamp to **40-45 ft-lbs** (54.2-61 Nm).
17. Tighten front muffler mount to **22-25 ft-lbs** (29.8-33.9 Nm).

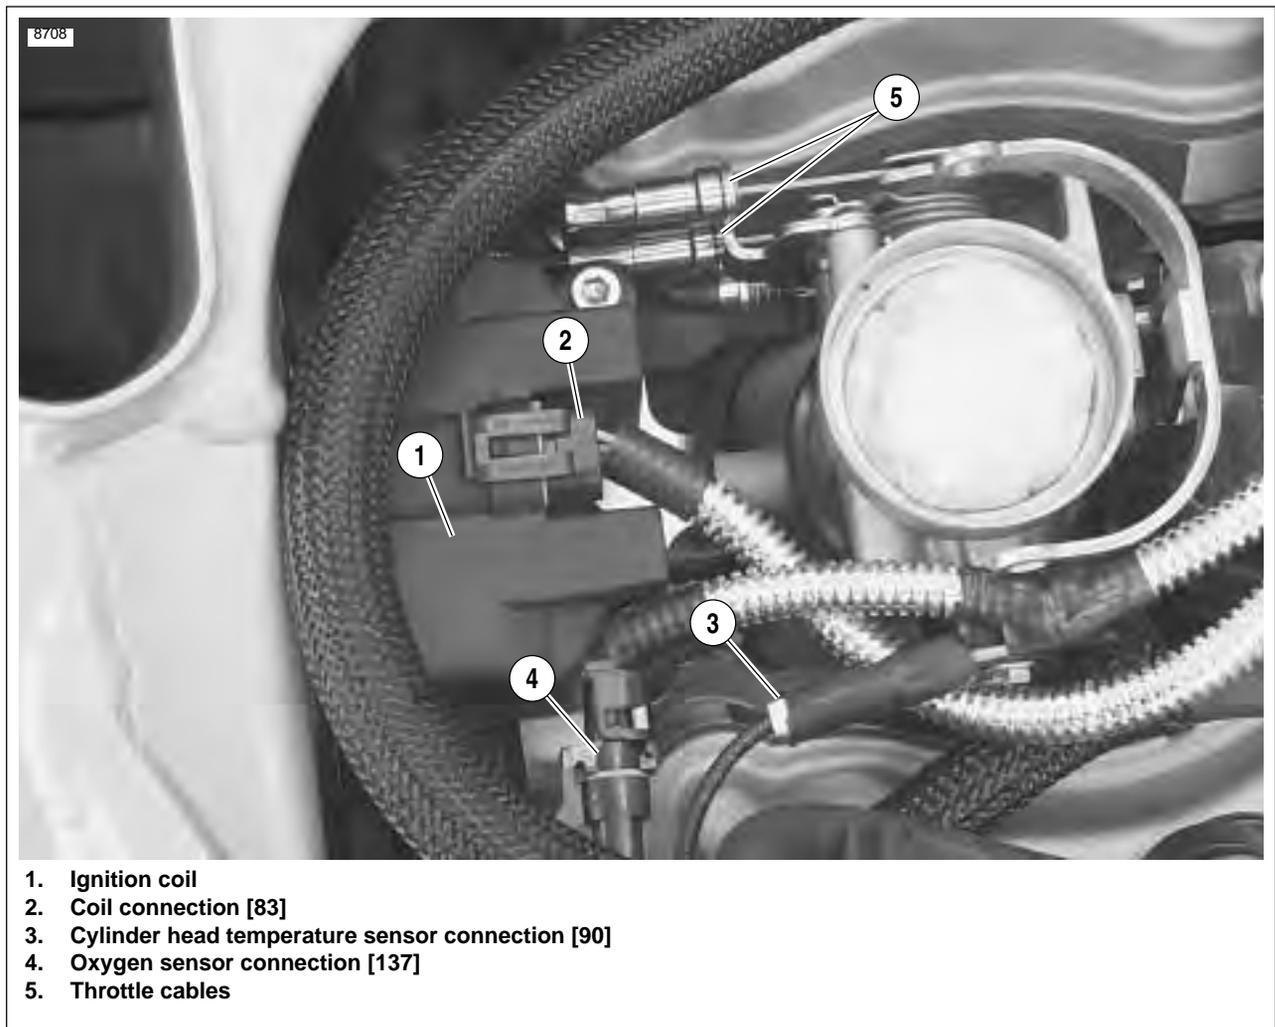


Figure 3-14. Electrical Connections and Throttle Cables (Typical)

18. See [Figure 3-14](#). Connect throttle cables from induction module/throttle body.
19. Connect the following sensors:
 - a. Temperature sensor [90].
 - b. Oxygen sensor [137].
20. See [Figure 3-14](#). Install the ignition coil and connect [83] and tighten fasteners to 120-144 **in-lbs** (13.6-16.3 Nm).

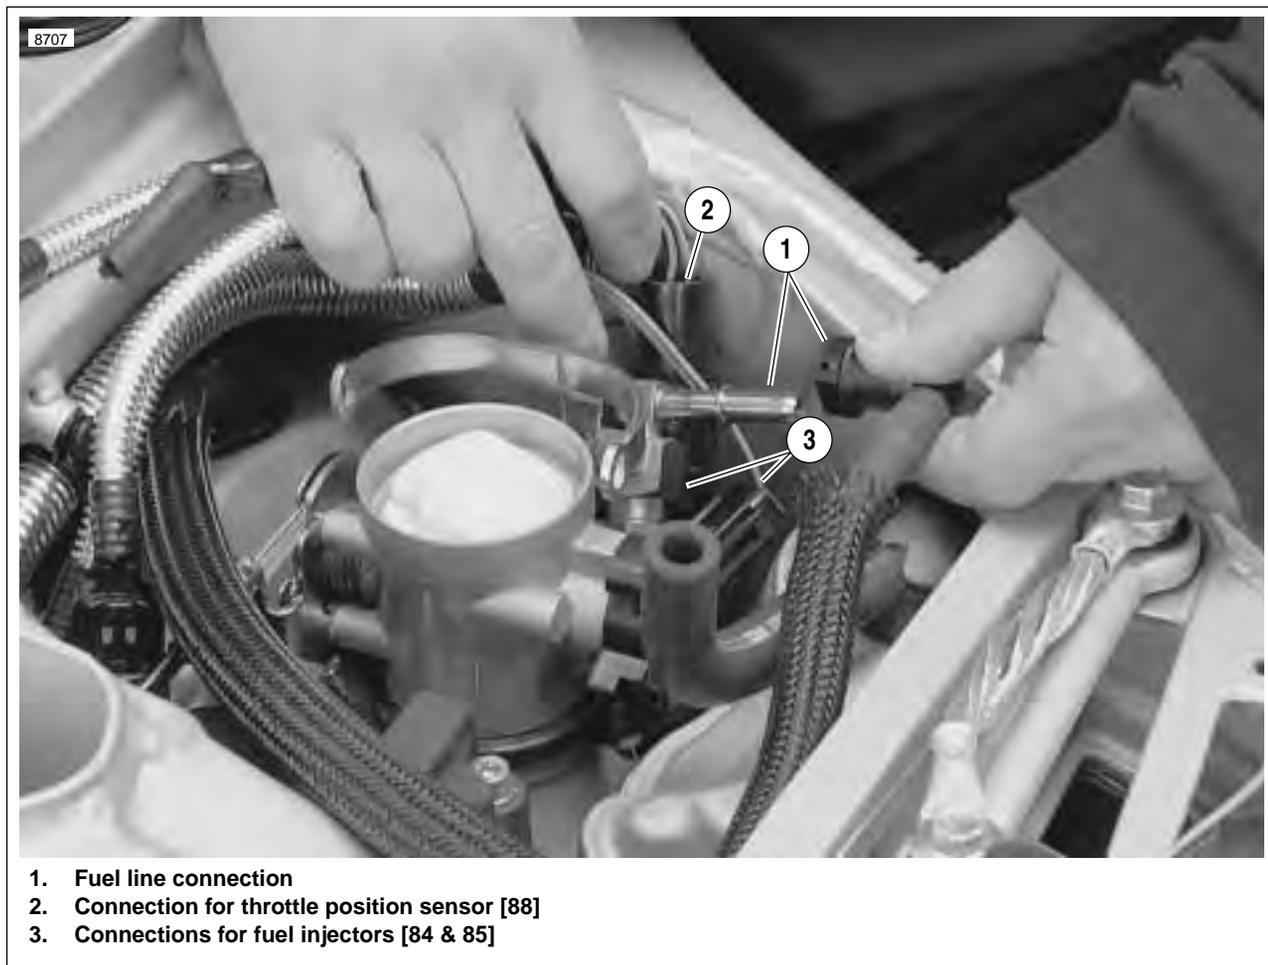


Figure 3-15. Fuel Line and DDFI Electrical Connections (Typical)

CAUTION

Remove shop towel from entrance of throttle body to ensure proper operation of induction module.

21. See [Figure 3-15](#). Connect throttle position sensor [88].
22. Connect fuel injector leads [84 & 85].
23. Connect fuel line.
24. Install throttle body velocity stack (tighten).
25. Install air filter base plate. See [4.30 AIRBOX](#).

NOTES

- For XB12R, replace the clamp ring around the throttle body.
 - For details on removal and installation of components on XB12R models with interactive exhaust systems, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).
26. Install airbox assembly and intake cover and tighten fasteners to 84-120 **in-lbs** (9.5-13.6 Nm). See [4.30 AIRBOX](#).
 27. Install rear belt and idler pulley. See [1.10 DRIVE BELT](#) and [2.13 REAR BRAKE MASTER CYLINDER](#).
 28. Install left side rider footrest and support plate and tighten fasteners to 120-144 **in-lbs** (13.56-16.27 Nm).

29. Install sprocket cover and tighten fasteners and washers to 12-36 **in-lbs** (1-4 Nm).
30. Install chin fairing. See [2.33 CHIN FAIRING](#).
31. Install air scoops, right and left sides. See [2.35 AIR SCOOPS](#).
32. Connect fuel pump.

NOTE

The connection for fuel pump is just above the pump located at the rear of the fuel tank on the left side of the vehicle.

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

33. Connect negative ground cable to battery and install seat (tighten).

WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury.

DISASSEMBLY

NOTE

Vehicle should be placed onto the lift with rear tire in the wheel vise in order to successfully perform this procedure.

1. Disconnect fuel pump and run vehicle until it is out of fuel. See 4.40 FUEL PUMP.

NOTES

- This step is always performed in order to purge fuel lines.
 - The connection for fuel pump is just above the pump located at the rear of the fuel tank on the left side of the vehicle.
2. Drain oil tank.

⚠ WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding.

Inadequate safety precautions could result in death or serious injury.

3. Remove seat and disconnect battery.
4. Remove intake cover and airbox assembly.
5. Remove throttle body velocity stack.

NOTES

- The XB12R has a clamp ring securing velocity stack to the throttle body.
6. The Install shop towel in entrance to throttle body to prevent objects from falling into the induction module. See Figure 3-16. Disconnect fuel line.
 7. Disconnect throttle position sensor [88].
 8. Disconnect fuel injector leads [84 & 85].

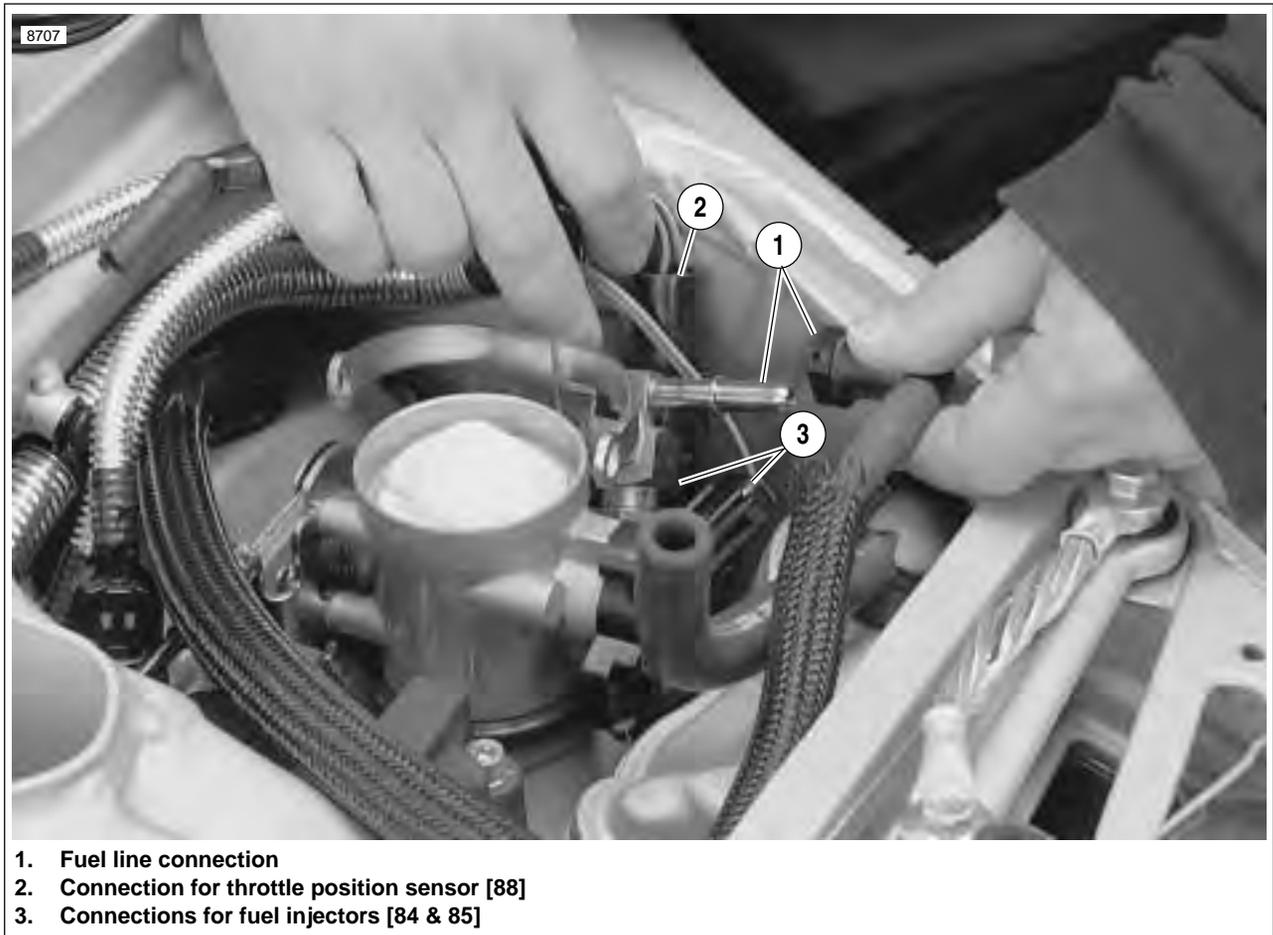


Figure 3-16. Fuel Line and DDFI Electrical Connections (Typical)

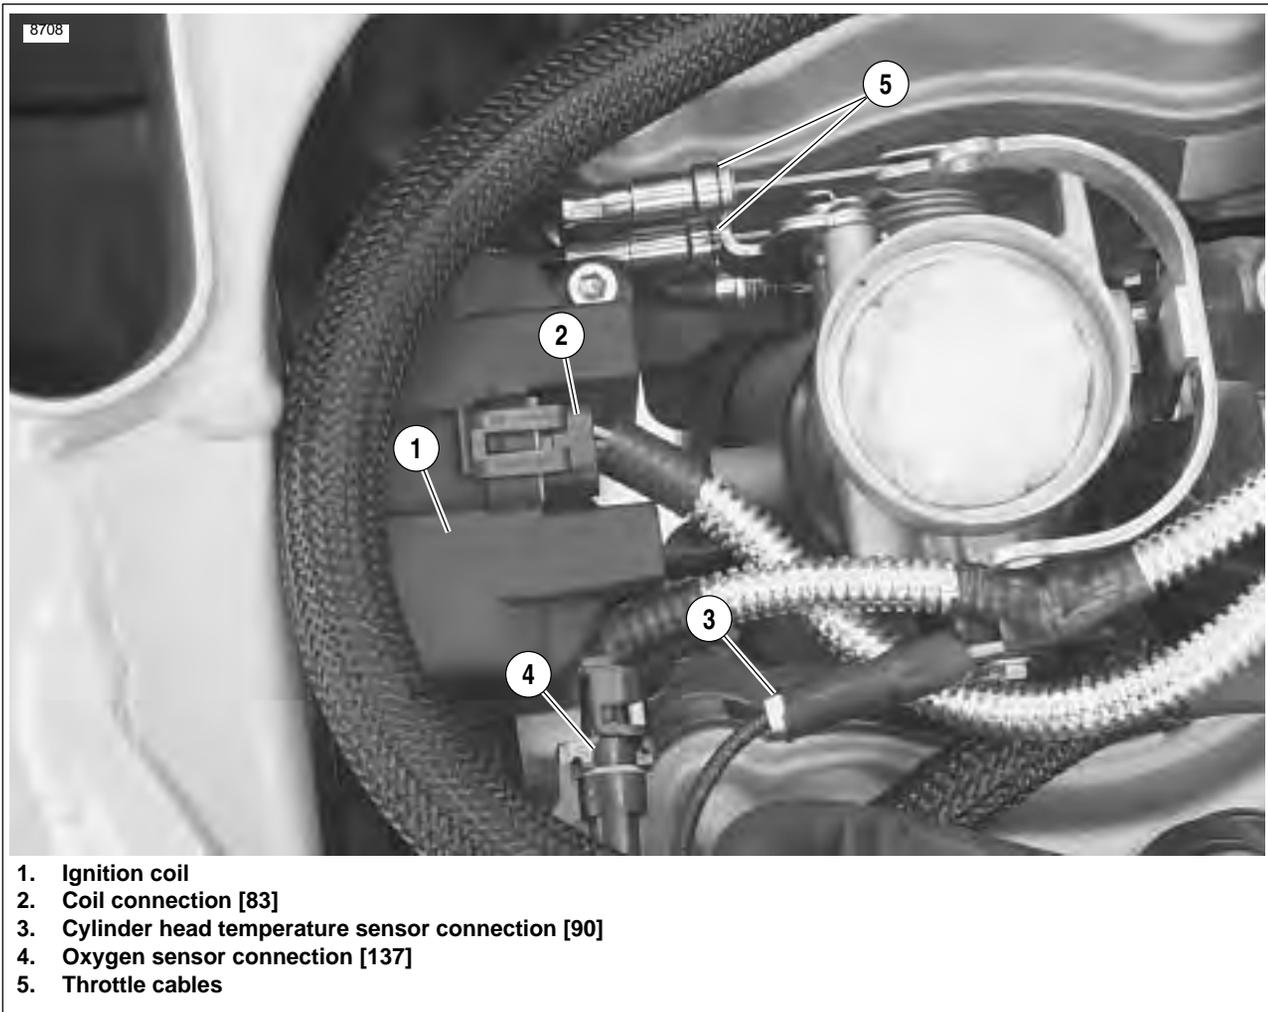


Figure 3-17. Electrical Connections and Throttle Cables (Typical)

9. See [Figure 3-17](#). Disconnect the ignition coil (2) and remove.
10. Disconnect the following sensors:
 - a. Temperature sensor [90] (3).
 - b. Oxygen sensor [137] (4).
11. Disconnect throttle cables from induction module/throttle body.

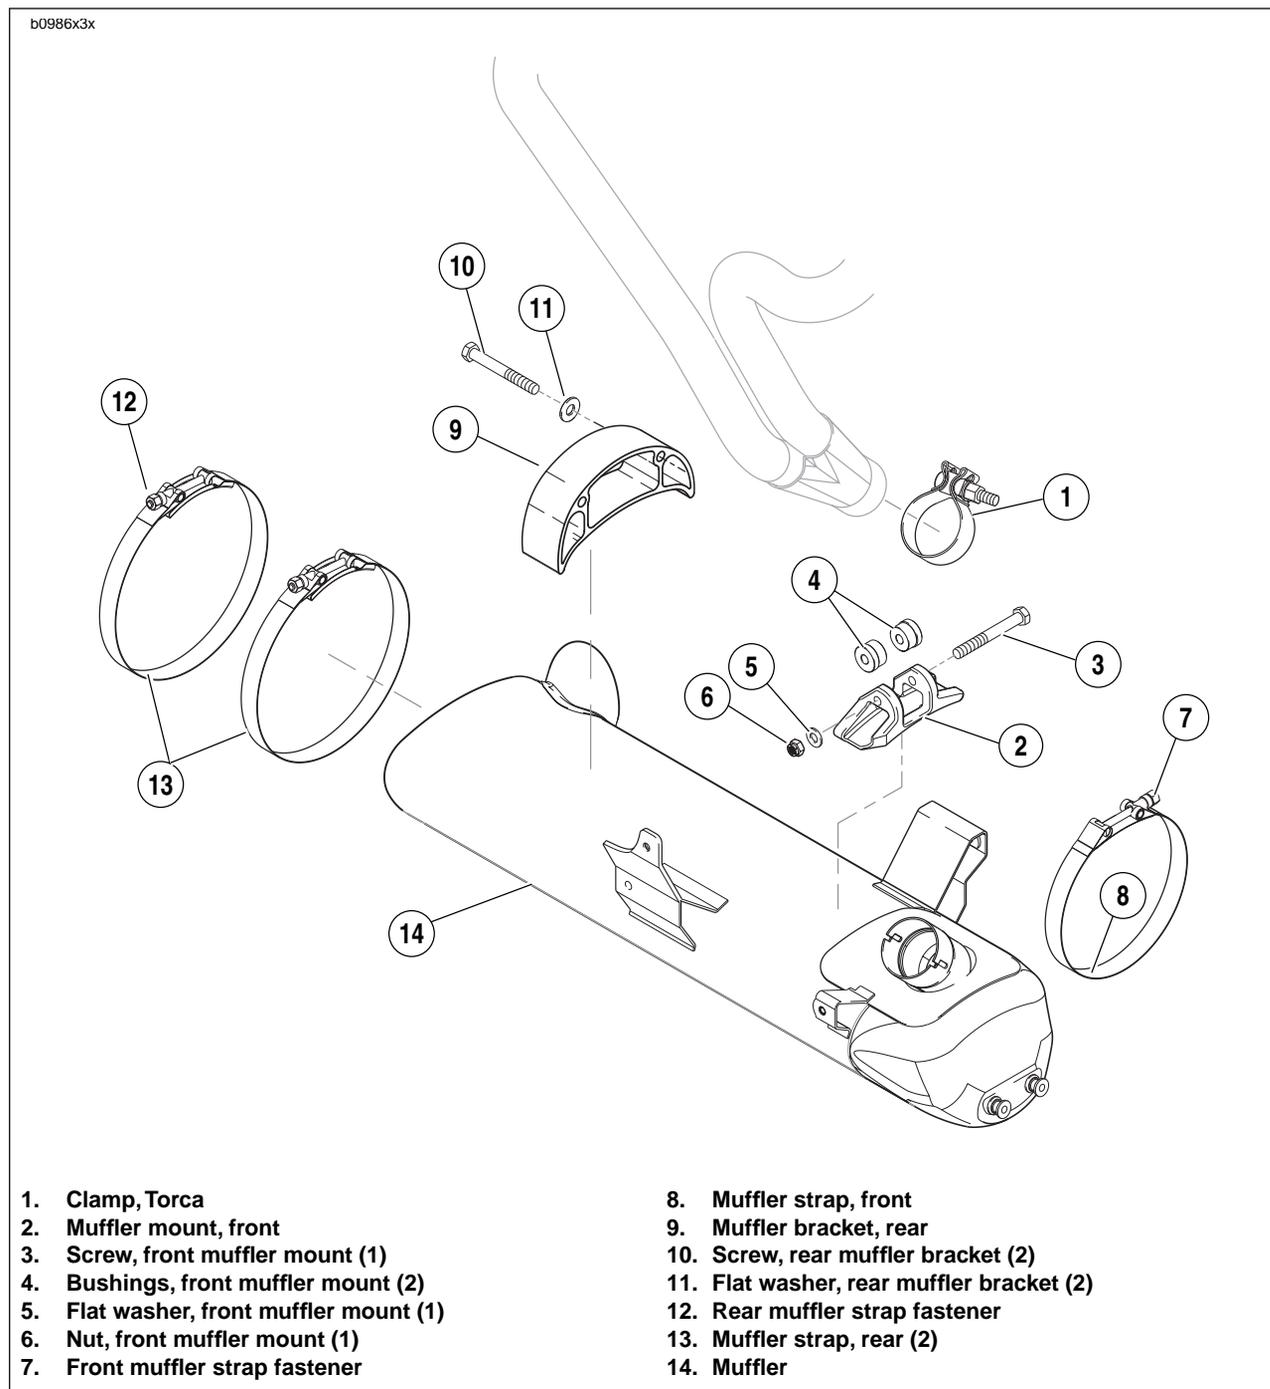


Figure 3-18. Muffer and Mounting System

12. Disconnect and remove air scoops, right and left sides.
13. Remove complete chin fairing, (7) bolts.
14. Remove transmission sprocket side cover.
15. Remove rear belt and idler pulley. See [1.10 DRIVE BELT](#) and [2.13 REAR BRAKE MASTER CYLINDER](#).

NOTE

For details on removal of components on XB12R models with interactive exhaust system, see [REMOVAL](#) under [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

16. See [Figure 3-18](#). Remove muffer:
 - a. Remove front muffer strap fastener (7). Front strap will not be removed.
 - b. Alternately loosen rear strap fasteners (12) and remove rear muffer straps.
 - c. Loosen Torca clamp and remove muffer.
 - d. Loosen front muffer mount.


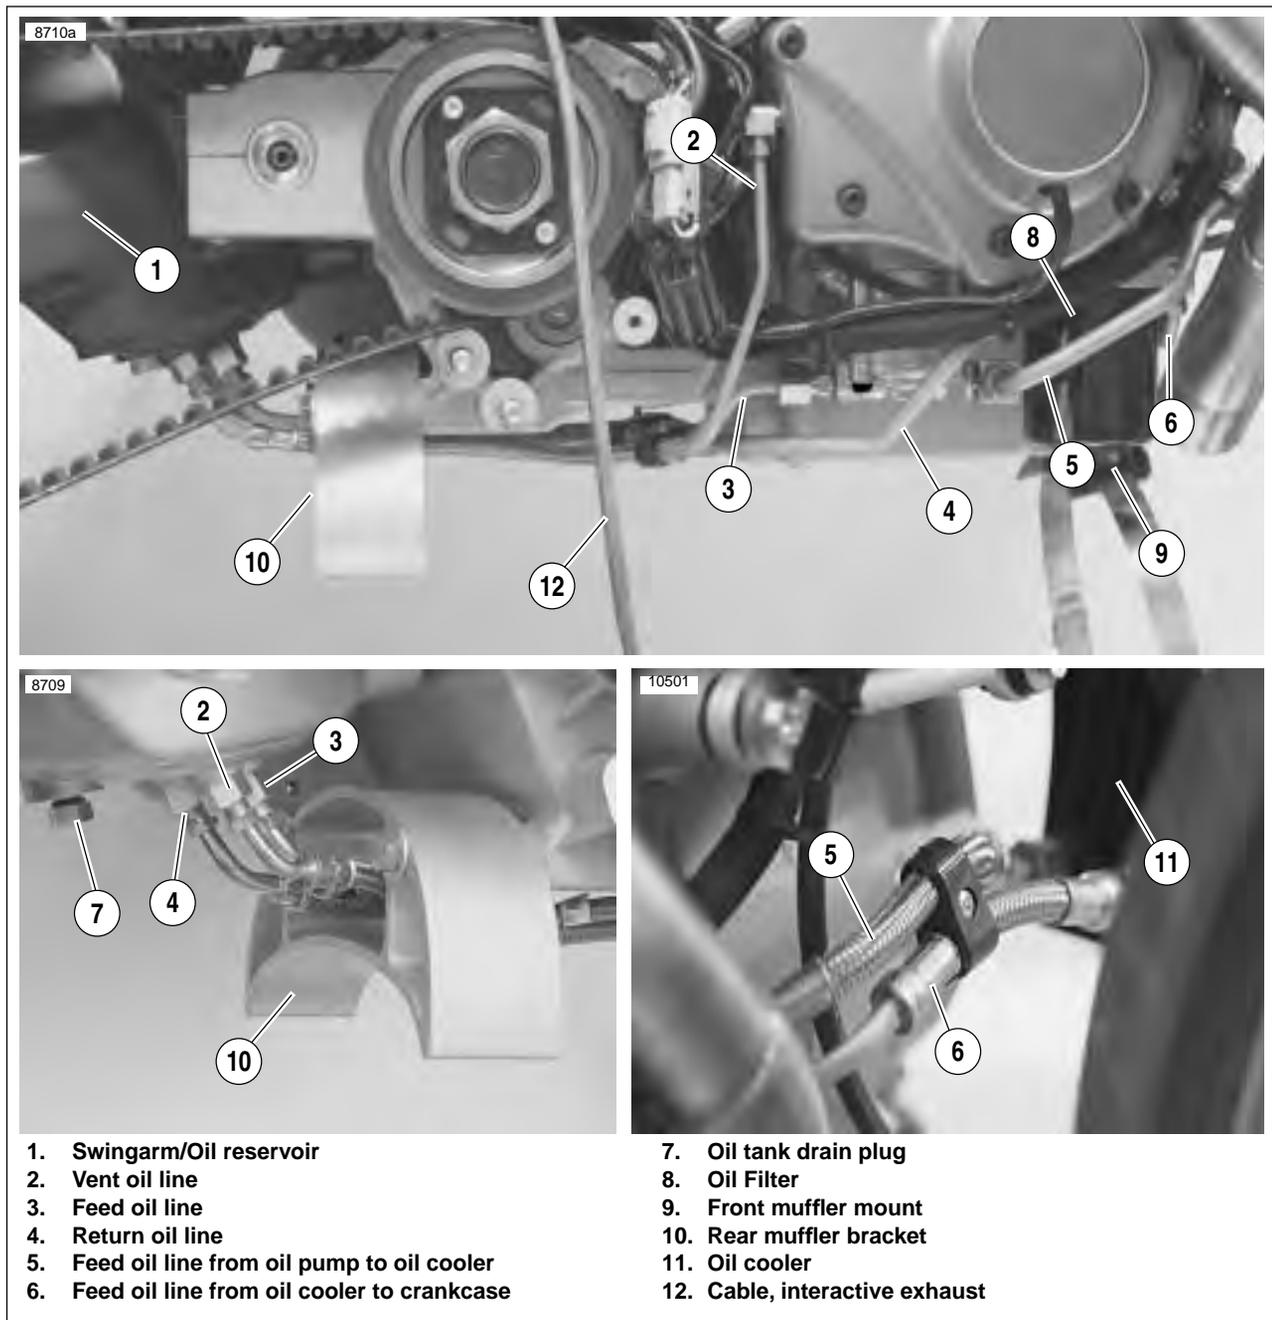


Figure 3-19. Oil Lines and Connections

17. See [Figure 3-19](#). Remove oil filter.
18. Remove all oil lines (including lines to oil cooler).
19. Remove front and rear muffler brackets.
20. Remove left and right side rider footrests and support plates. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).

NOTE


When removing the right side rider footrest and support plate, also remove rear brake pedal assembly and remote reservoir and secure towards rear of vehicle.

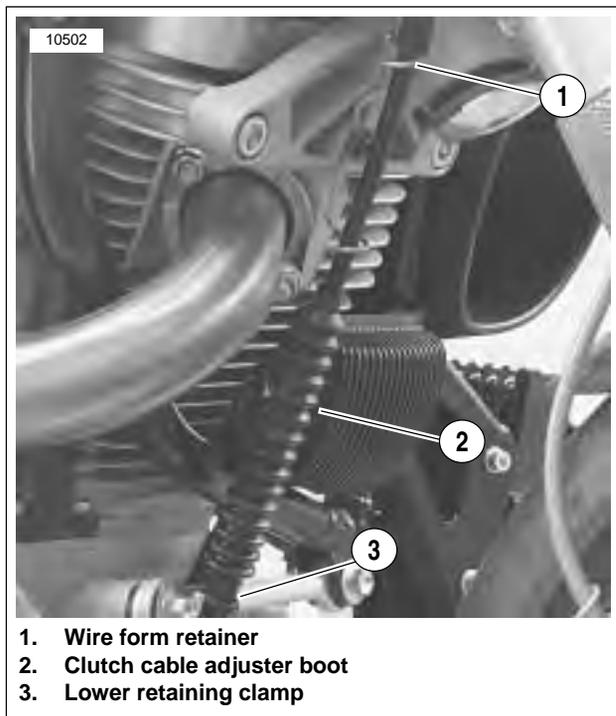

1. Wire form retainer
2. Clutch cable adjuster boot
3. Lower retaining clamp

Figure 3-20. Clutch Cable Retaining Clamps and Adjuster Boot


21. See [Figure 3-20](#). Disconnect clutch cable from handlebars.
 - a. Remove wire form retainer and lower retaining clamp.
 - b. Pull clutch cable down.
22. See [Figure 3-21](#). Remove sidestand assembly.

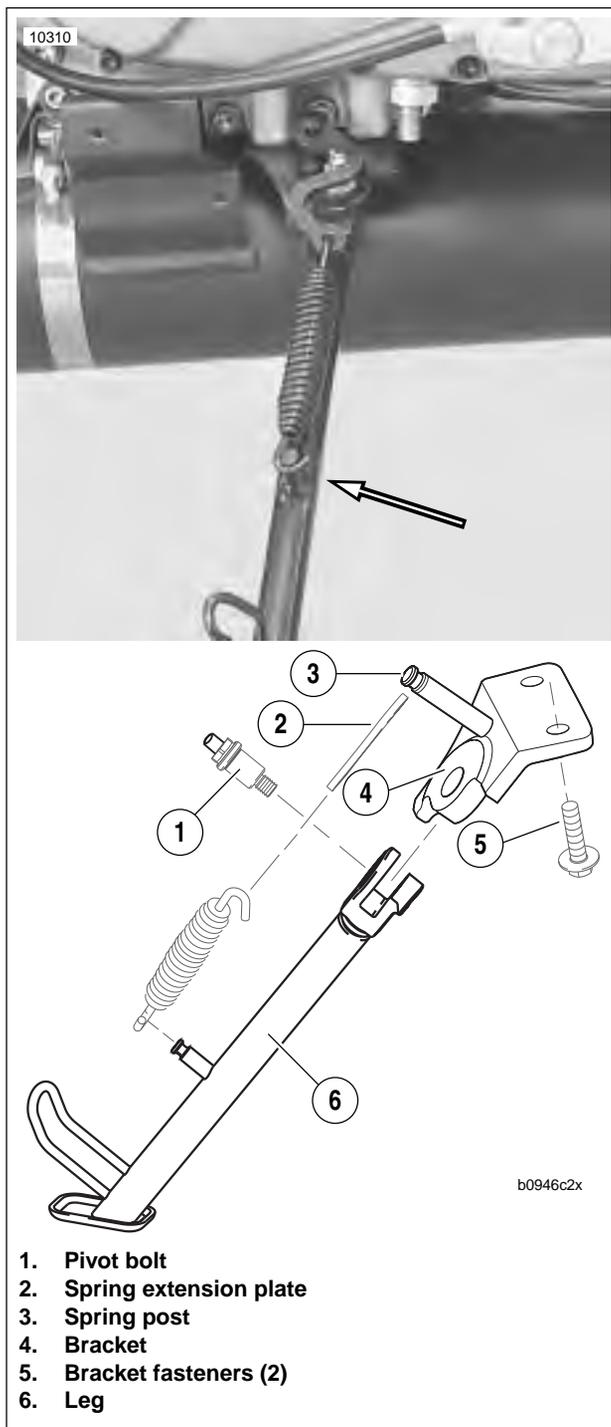

1. Pivot bolt
2. Spring extension plate
3. Spring post
4. Bracket
5. Bracket fasteners (2)
6. Leg

Figure 3-21. Sidestand Assembly (Extended)

b0985x3x

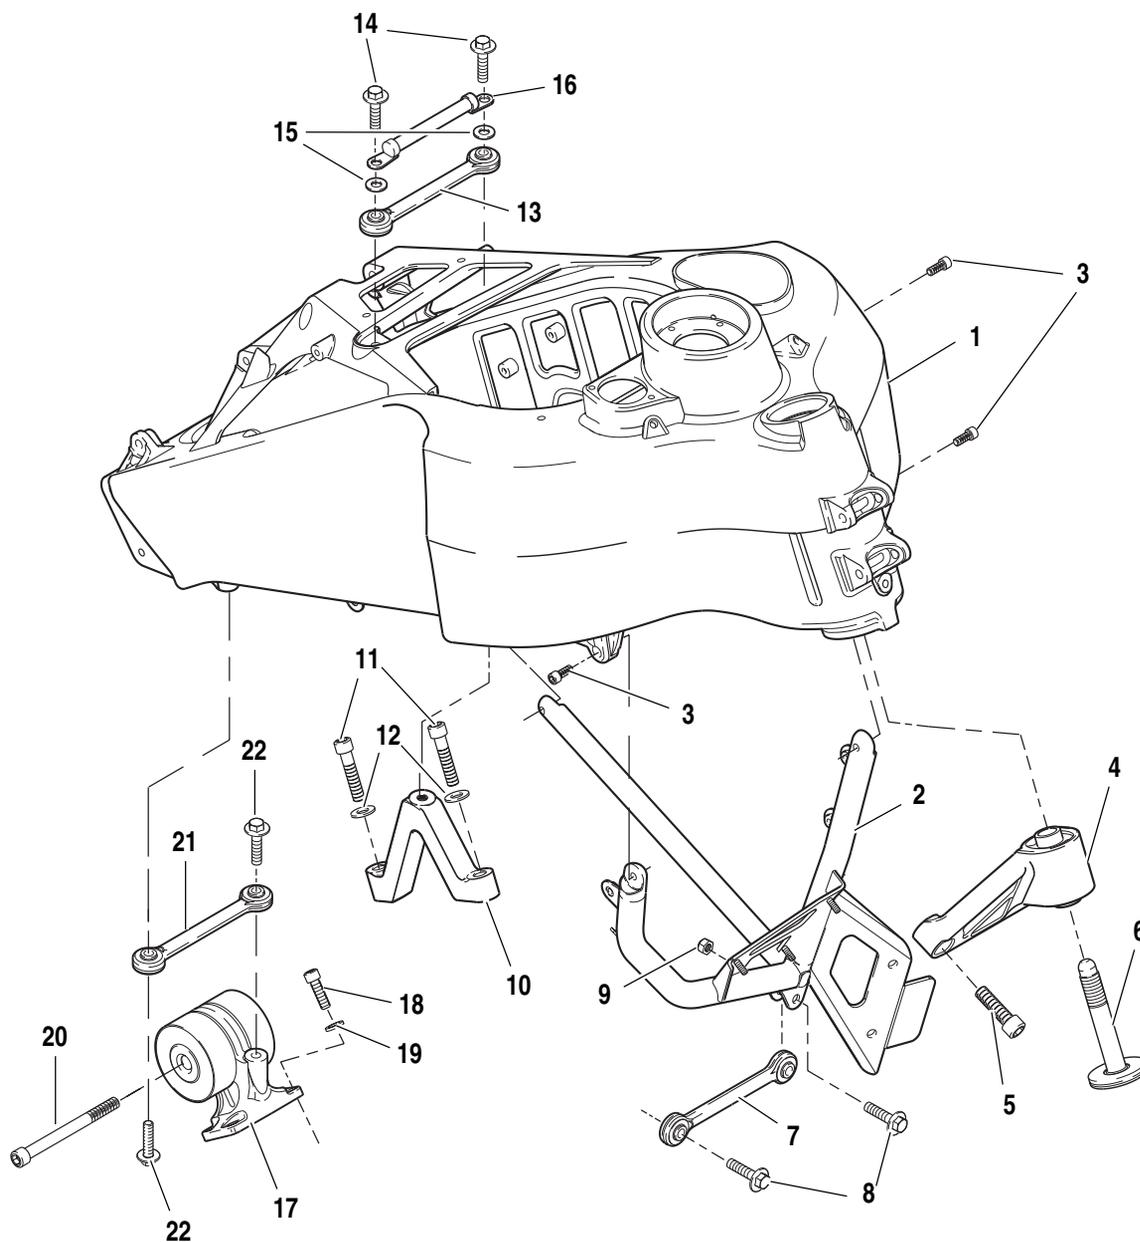

- | | |
|--|---|
| 1. Frame assembly | 12. Washers for center tie bar mount (2) |
| 2. "V" bracket | 13. Tie bar assembly, center |
| 3. Fasteners for "V" bracket (3) | 14. Fasteners for center tie bar assembly (2) |
| 4. Isolator assembly, front | 15. Washers for center tie bar assembly (2) |
| 5. Fasteners for front isolator (2) | 16. Cable, negative battery |
| 6. Bolt, front isolator | 17. Isolator assembly, rear |
| 7. Tie bar assembly, front | 18. Fasteners for rear isolator assembly (4) |
| 8. Fasteners for front tie bar assembly (2) | 19. Washers for rear isolator assembly (4) |
| 9. Nut for one fastener for front tie bar assembly | 20. Bolt, rear isolator |
| 10. Mount, center tie bar | 21. Tie bar assembly, rear |
| 11. Fasteners for center tie bar mount (2) | 22. Fasteners for rear tie bar assembly (2) |

Figure 3-22. Engine Mounting System

23. Support engine with wide scissors jack.
24. See [Figure 3-22](#). Remove front "V" bracket with oil cooler from main frame.
 - a. Remove cable strap securing the remote idle adjustment cable
 - b. Remove the three cable straps holding regulator wiring harness in order to extend the harness to remove "V" bracket
 - c. See [Figure 3-23](#). Separate alternator connector [46] and voltage regulator connector [77].
 - d. Remove front tie-bar from engine.
 - e. Unbolt "V" bracket from main frame and remove from left side.
25. See [Figure 3-22](#). Remove center tie-bar from engine.
26. Remove rear tie bar from frame.
27. Loosen rear isolator bolt.
28. Remove front isolator bolt.
29. Remove front isolator mount from engine.
30. See [Figure 3-23](#). Disconnect electrical components:
 - a. Neutral switch [131].
 - b. Speedometer sensor [65] (remove tie wrap).
 - c. Cam position sensor [14].
 - d. Positive battery cable at starter.
 - e. Starter solenoid [128].
 - f. Oil pressure switch [120].
31. Rotate engine down to remove exhaust header.

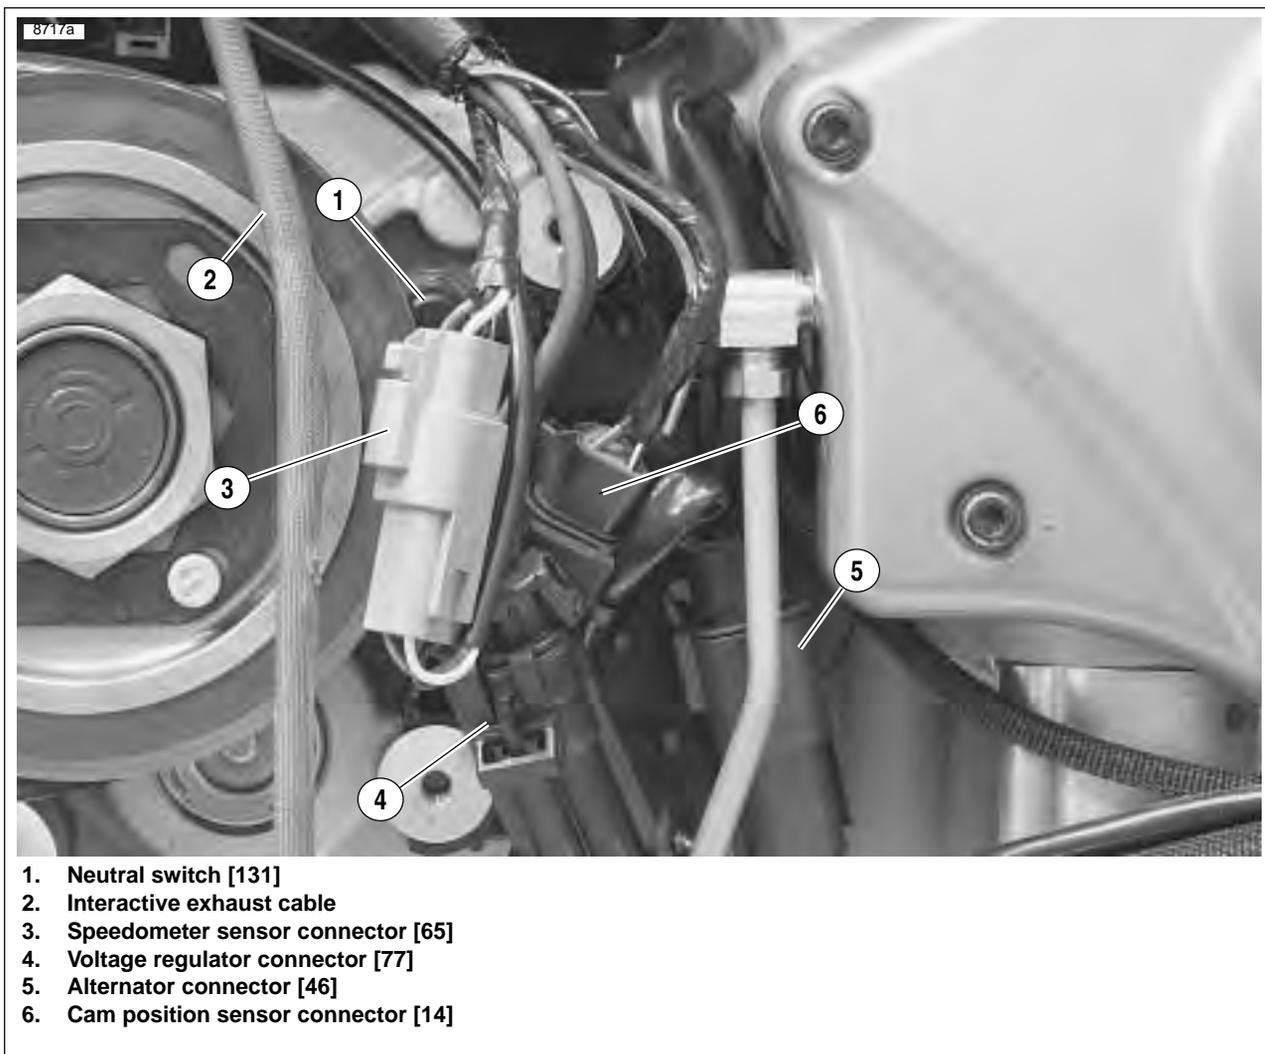


Figure 3-23. Electrical Connectors

CAUTION

See [Figure 3-24](#). At this point it is necessary to support main frame with overhead hoist in order to remove rear isolator bolt. Failure to do this will result in main frame dropping slightly.



Figure 3-24. Supporting Vehicle for Disassembly

32. See [Figure 3-25](#). After rotating engine back up into frame, continue to remove:

- a. Rear isolator bolt.
- b. Swingarm pivot shaft.

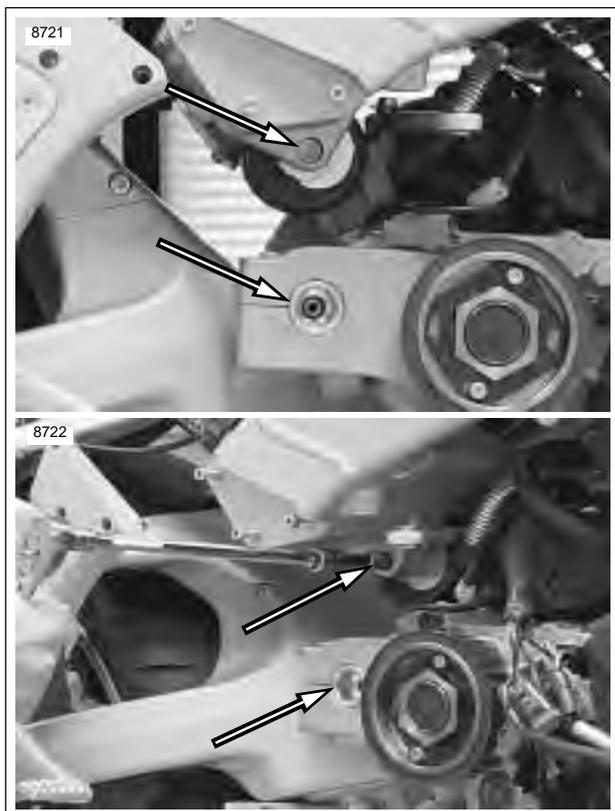


Figure 3-25. Rear Isolator Bolt and Swingarm Pivot Shaft



Figure 3-26. Supporting the Swingarm

33. See [Figure 3-26](#). Support swingarm/oil tank with wooden blocks, jack, etc.

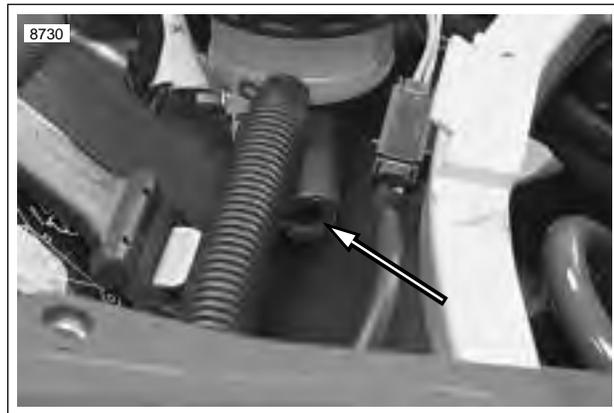


Figure 3-27. Transmission Vent Line

34. See [Figure 3-27](#). Cut the two tie wraps holding transmission vent line and pull vent line out of frame leaving it attached to engine.

NOTE

The transmission vent line runs up the left side of the frame and exits underneath the rear brake reservoir and hose.

35. Lower engine with scissors lift all the way down.
36. Move the engine assembly from under the main frame to the right side of the lift.
37. Remove engine.

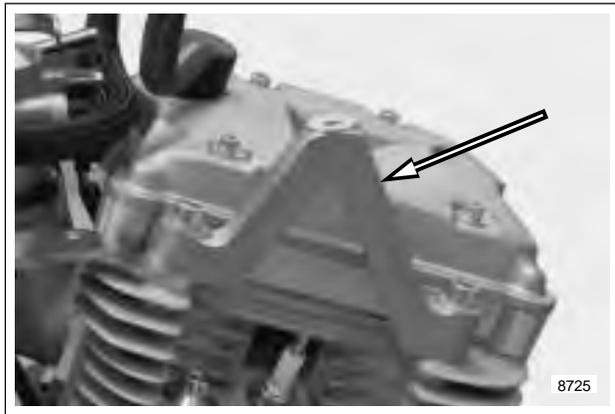


Figure 3-28. Center Tie Bar Mount

38. Once engine has been removed from vehicle finish removing the following items as required:
- a. Shifter assembly.
 - b. See [Figure 3-28](#). Center tie bar mount.
 - c. See [Figure 3-29](#). Swingarm pivot shaft pinch bolt threaded insert.
 - d. See [Figure 3-30](#). Aluminum bushings from front exhaust mount.
 - e. Timer cover.

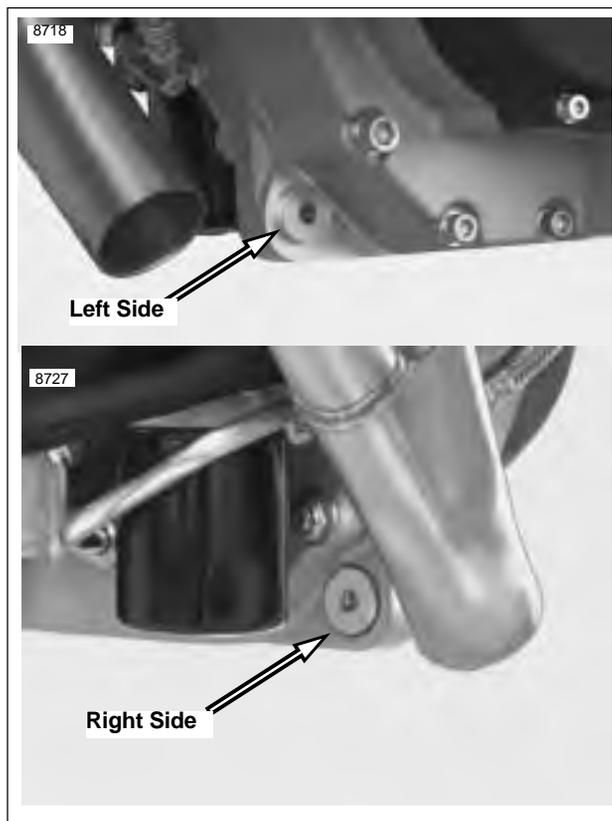


Figure 3-30. Front Exhaust Mount Bushings (2 piece)

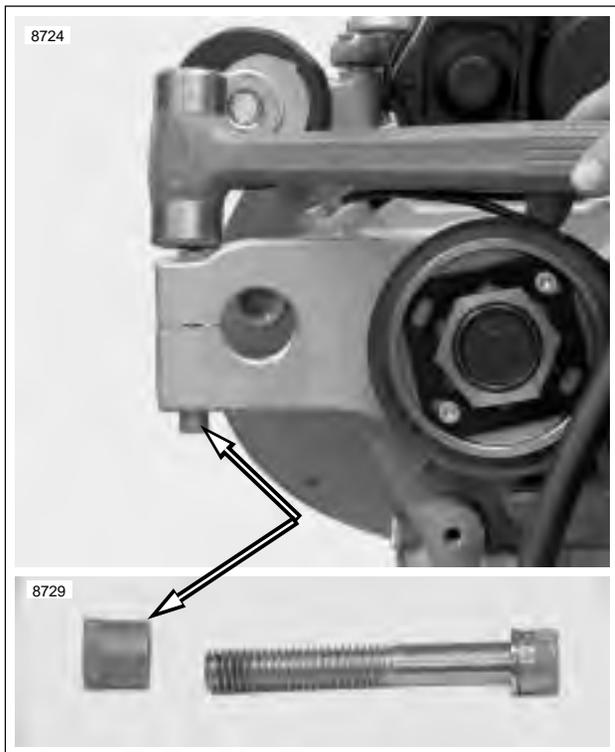


Figure 3-29. Removing Threaded Insert



Figure 3-31. Rear Isolator and Mounting Hardware

39. See [Figure 3-31](#). If the crankcases are being separated it will be necessary to remove rear isolator assembly by removing the forward two fasteners first and then the two rear fasteners (re-install with **new** fasteners).



Figure 3-32. Securing Vehicle for Relocation

40. See [Figure 3-32](#). Place a block of wood between rear isolator mount on main frame and swingarm/oil tank.
41. Route a ratcheting tie down through the swingarm bearings, up over the main frame, through the top stabilizer area, back down to the ratchet mechanism and secure swingarm to main frame.

NOTE

See [Figure 3-33](#). This allows the vehicle to remain together as a rolling chassis and to be removed from the lift and stored if necessary.

42. Remove support from under swingarm/oil tank.
43. Remove overhead support.



Figure 3-33. Rolling Chassis

ASSEMBLY

Engine Prep for Re-installation

NOTE

Install components that were removed from engine as were necessary for service prior to installing engine in frame.



Figure 3-34. Rear Isolator and Mounting Hardware

1. See [Figure 3-34](#). Install rear isolator assembly by installing the two rear fasteners first and then the two forward fasteners (re-install with new fasteners). Tighten to 25-27 ft-lbs (33.9-36.6 Nm).



Figure 3-35. Center Tie Bar Mount

2. Install the following items on the engine assembly as required:
 - a. Shifter assembly.
 - b. See [Figure 3-35](#). Center tie bar mount 25-27 ft-lbs (33.9-36.6 Nm).
 - c. See [Figure 3-36](#). Swingarm pivot shaft pinch bolt threaded insert.
 - d. See [Figure 3-37](#). Aluminum bushings from front exhaust mount.

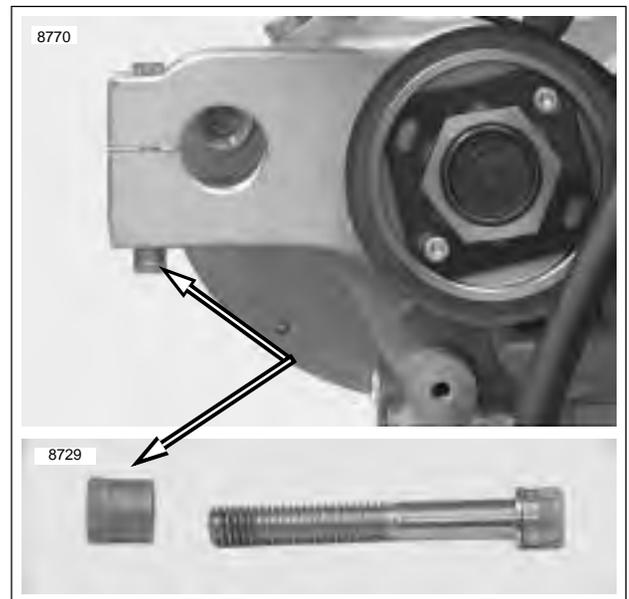


Figure 3-36. Threaded Insert

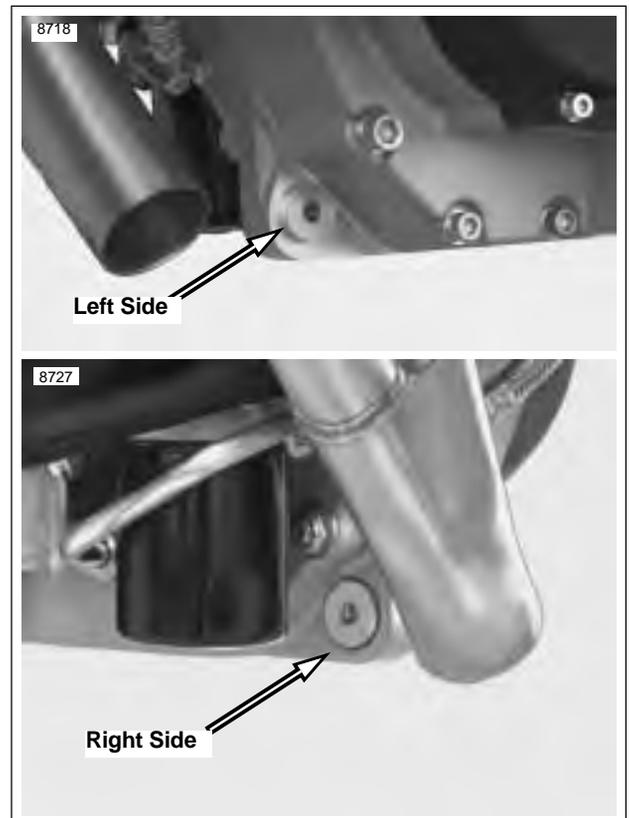


Figure 3-37. Front Exhaust Mount Bushings (2 piece)

Installing Engine in Frame

NOTE

Vehicle should be placed onto the lift with rear tire in the wheel vise in order to successfully perform this procedure.



Figure 3-38. Supporting the Swingarm

1. See [Figure 3-38](#). Install bottle jack and wooden block under swingarm/oil tank to the rear of the oil line fittings.
2. Remove ratcheting tie down and block of wood between rear isolator mount on main frame and swingarm/oil reservoir.

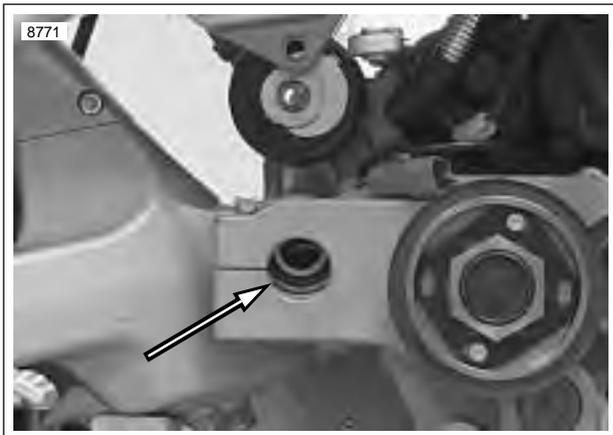


Figure 3-39. Aligning Swingarm to Crankcase for Pivot Shaft Installation

3. See [Figure 3-39](#). With engine on a flat scissors jack, raise engine and chassis until swingarm and rear isolator mount align and pivot shaft can be installed.
4. Torque swingarm pivot shaft to 24-26 ft-lbs (32.5-35.2 Nm).
5. Torque swingarm pivot shaft pinch bolt to 17-19 ft-lbs (23-25.8 Nm) using LOCTITE 272.
6. See [Figure 3-40](#). Route transmission vent line up through left side of frame exiting under the rear master cylinder under the rider's seat. Install two tie wraps to secure transmission vent line in place. Inspect vent line to verify space between vent line and rear exhaust.

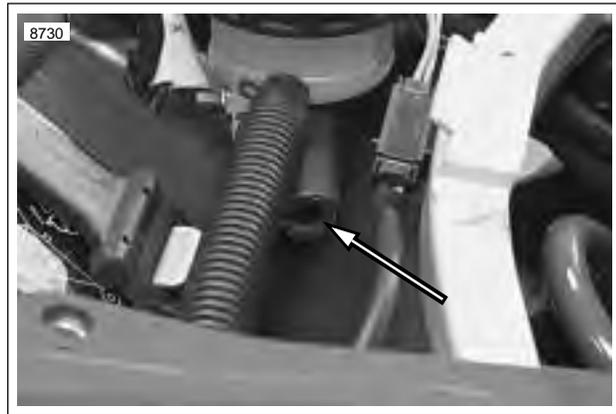


Figure 3-40. Transmission Vent Line

NOTE

See [Figure 3-41](#). At this point it is necessary to support main frame with overhead hoist in order to install rear isolator bolt.



Figure 3-41. Supporting Vehicle for Assembly


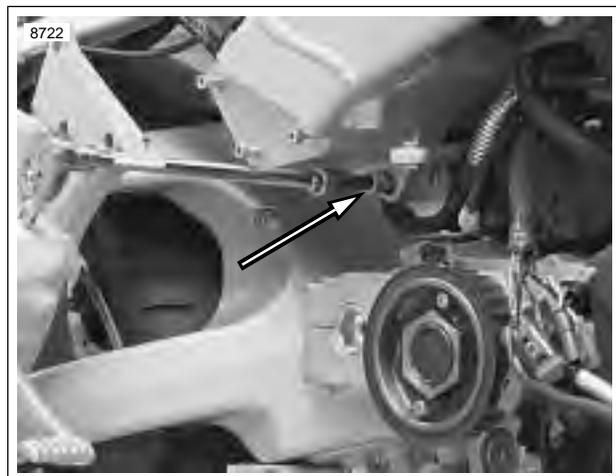


Figure 3-42. Installing Rear Isolator Bolt

7. See [Figure 3-42](#). Using the overhead hoist to align the frame to the rear isolator, install rear isolator bolt and leave loose at this time.

b0985x3x

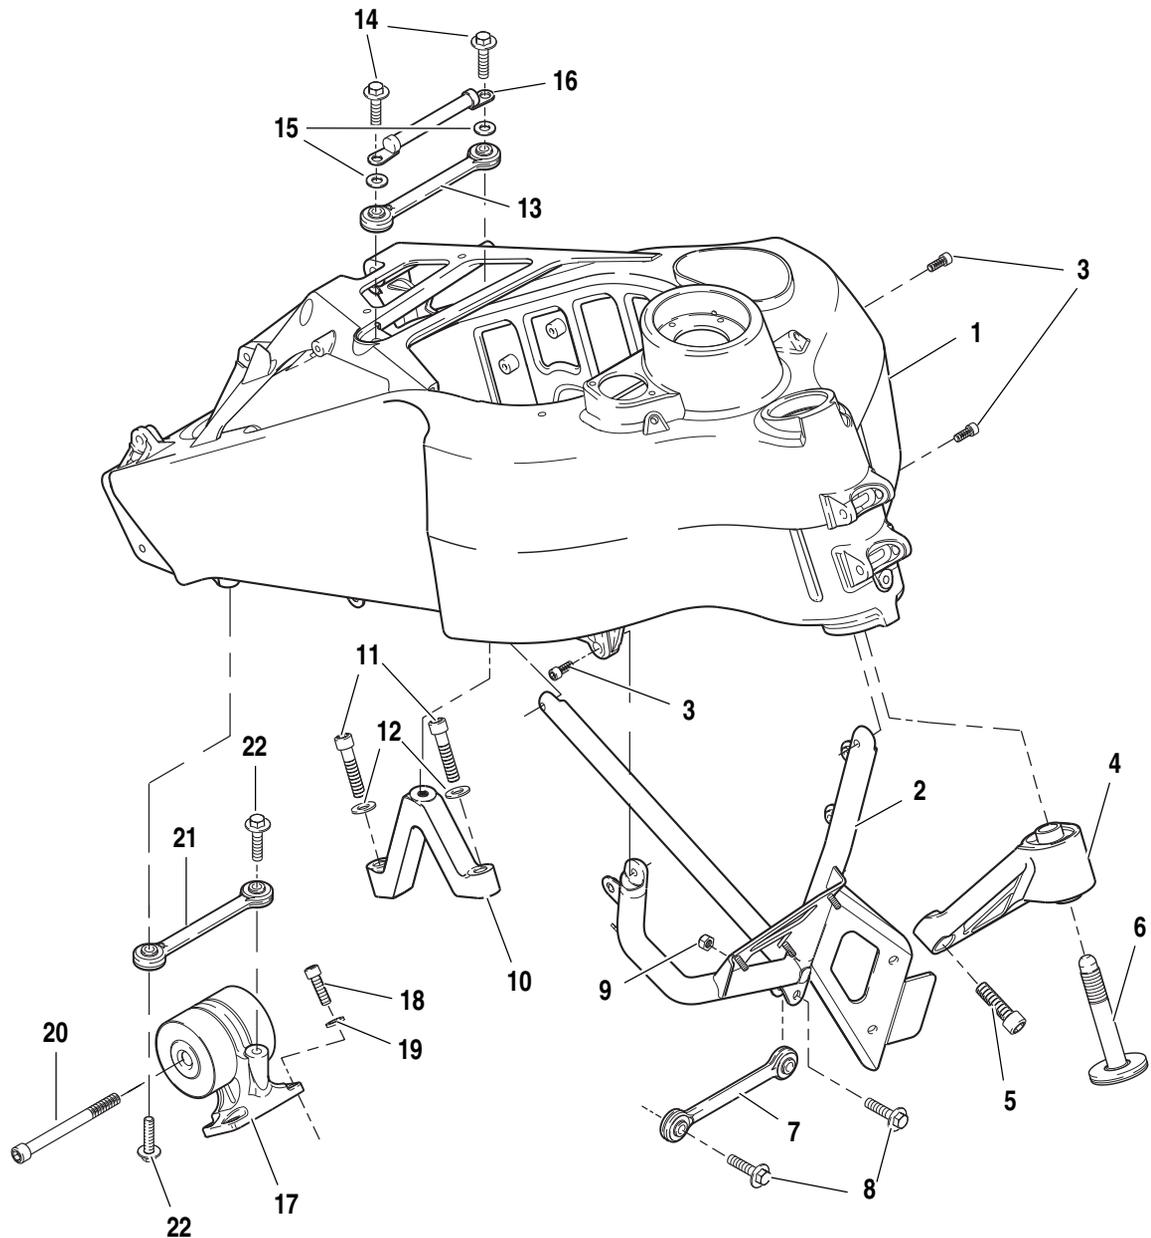

- | | |
|--|---|
| 1. Frame assembly | 12. Washers for center tie bar mount (2) |
| 2. "V" bracket | 13. Tie bar assembly, center |
| 3. Fasteners for "V" bracket (3) | 14. Fasteners for center tie bar assembly (2) |
| 4. Isolator assembly, front | 15. Washers for center tie bar assembly (2) |
| 5. Fasteners for front isolator (2) | 16. Cable, negative battery |
| 6. Front isolator bolt | 17. Isolator assembly, rear |
| 7. Tie bar assembly, front | 18. Fasteners for rear isolator assembly (4) |
| 8. Fasteners for front tie bar assembly (2) | 19. Washers for rear isolator assembly (4) |
| 9. Nut for one fastener for front tie bar assembly | 20. Bolt, rear isolator |
| 10. Mount, center tie bar | 21. Tie bar assembly, rear |
| 11. Fasteners for center tie bar mount (2) | 22. Fasteners for rear tie bar assembly (2) |

Figure 3-43. Engine Mounting System

8. Rotate engine down and install exhaust header only and tighten fasteners to 72-96 **in-lbs** (8.1-10.8 Nm).

NOTES

- Tighten header nuts gradually, alternating between studs to insure that exhaust rings are flush with engine.
 - Exhaust header must be torqued with the engine rotated in the down position. It is not possible to reach fasteners on the rear exhaust at the head with engine rotated in the up position.
9. When the exhaust header has been torqued, rotate engine back up into frame.

NOTE

When tightening isolator bolt it is important to keep load off of isolator bolt for installation purposes. Alternate between tightening isolator bolt and raising engine with scissors jack.

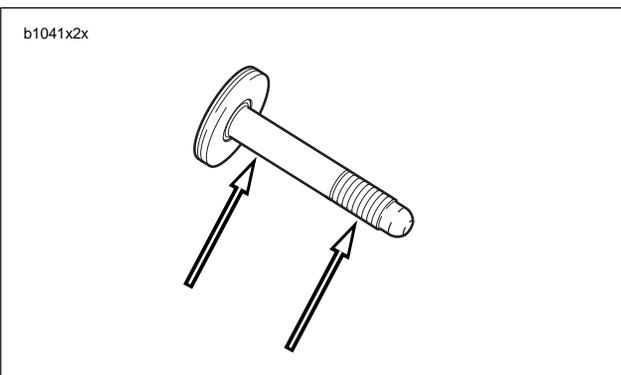


Figure 3-44. Lubrication Points on Front Isolator Bolt

NOTE

See Figure 3-44. Always coat shaft and threads of front isolator bolt with anti-seize before installing.

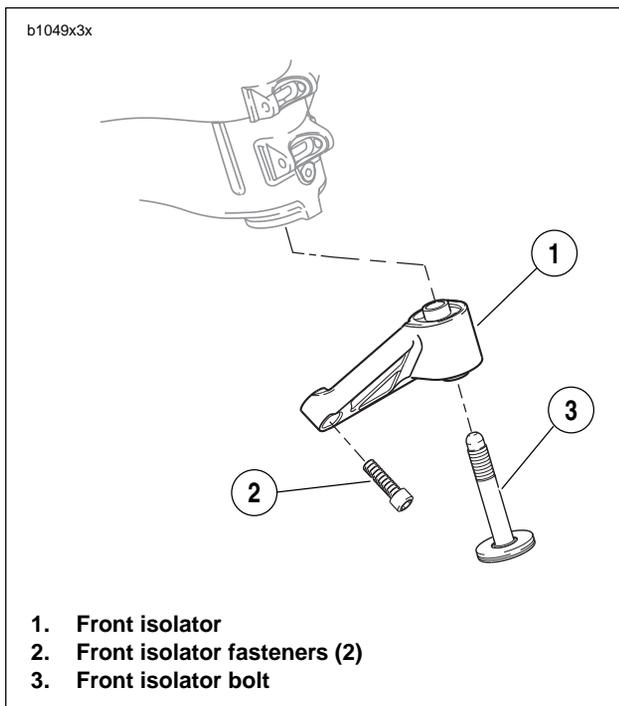


Figure 3-45. Front Isolator

10. See Figure 3-45. Insert front isolator bolt (3) through front isolator (1) and loosely thread into frame. Do not tighten at this point.
11. Install isolator mounting fasteners (2) and tighten to 49-51 ft-lbs (66-69 Nm).
12. Tighten front isolator bolt to 49-51 ft-lbs (66-69 Nm).
13. See Figure 3-43. Torque rear isolator bolt to 49-51 ft-lbs (66.4-69.1 Nm).
14. Install rear tie bar to frame and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
15. Install center tie bar to engine and tighten to 25-27 ft-lbs (33.9-36.6 Nm).

CAUTION

When reinstalling the tie bar, first mount to engine and then to "V" bracket in order to prevent damage to threaded area of crankcase.

16. Install front tie-bar and clutch cable lower retaining clamp to engine and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
17. Install front "V" bracket with oil cooler to main frame.
 - a. Install "V" bracket to main frame from the left side of the vehicle and tighten to 120-144 **in-lbs** (13.6-16.3 Nm).
 - b. Install front tie-bar to "V" bracket and tighten to 25-27 ft-lbs (33.9-36.6 Nm).
 - c. Attach regulator wiring harness to bracket nylon cable straps.
18. Remove scissors jack.

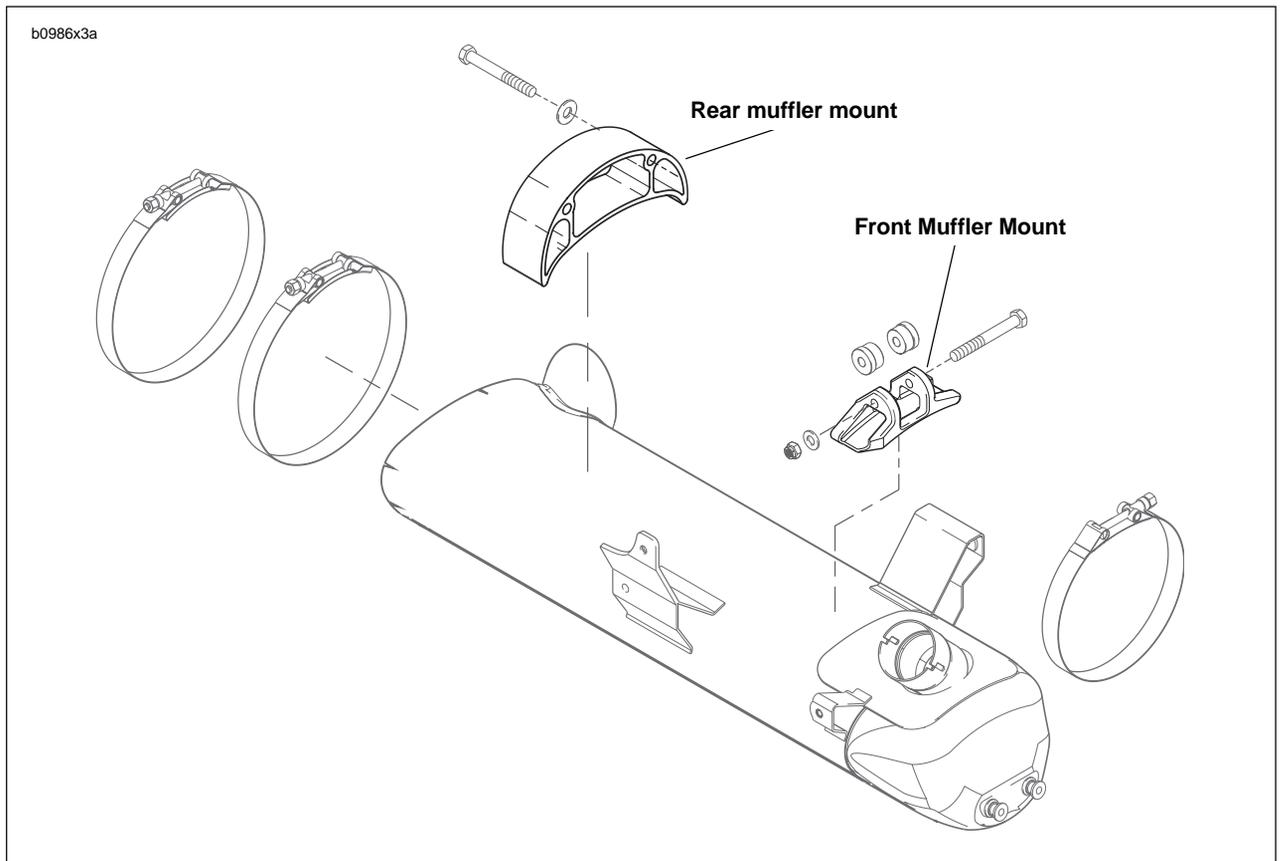


Figure 3-46. Muffler Mounting System

19. See [Figure 3-46](#). Install rear muffler bracket and torque to 32-36 ft-lbs (43.4-48.8 Nm).
20. Install front muffler mount and leave loose at this time.

NOTE

DO NOT install muffler at this time. It is necessary to install muffler mounts first in order to properly install oil lines.

CAUTION

At this point it will be necessary to install the oil lines. It is important to follow this procedure to ensure correct orientation of oil lines in order to establish the proper clearances needed between the oil lines and varied components on the vehicle.

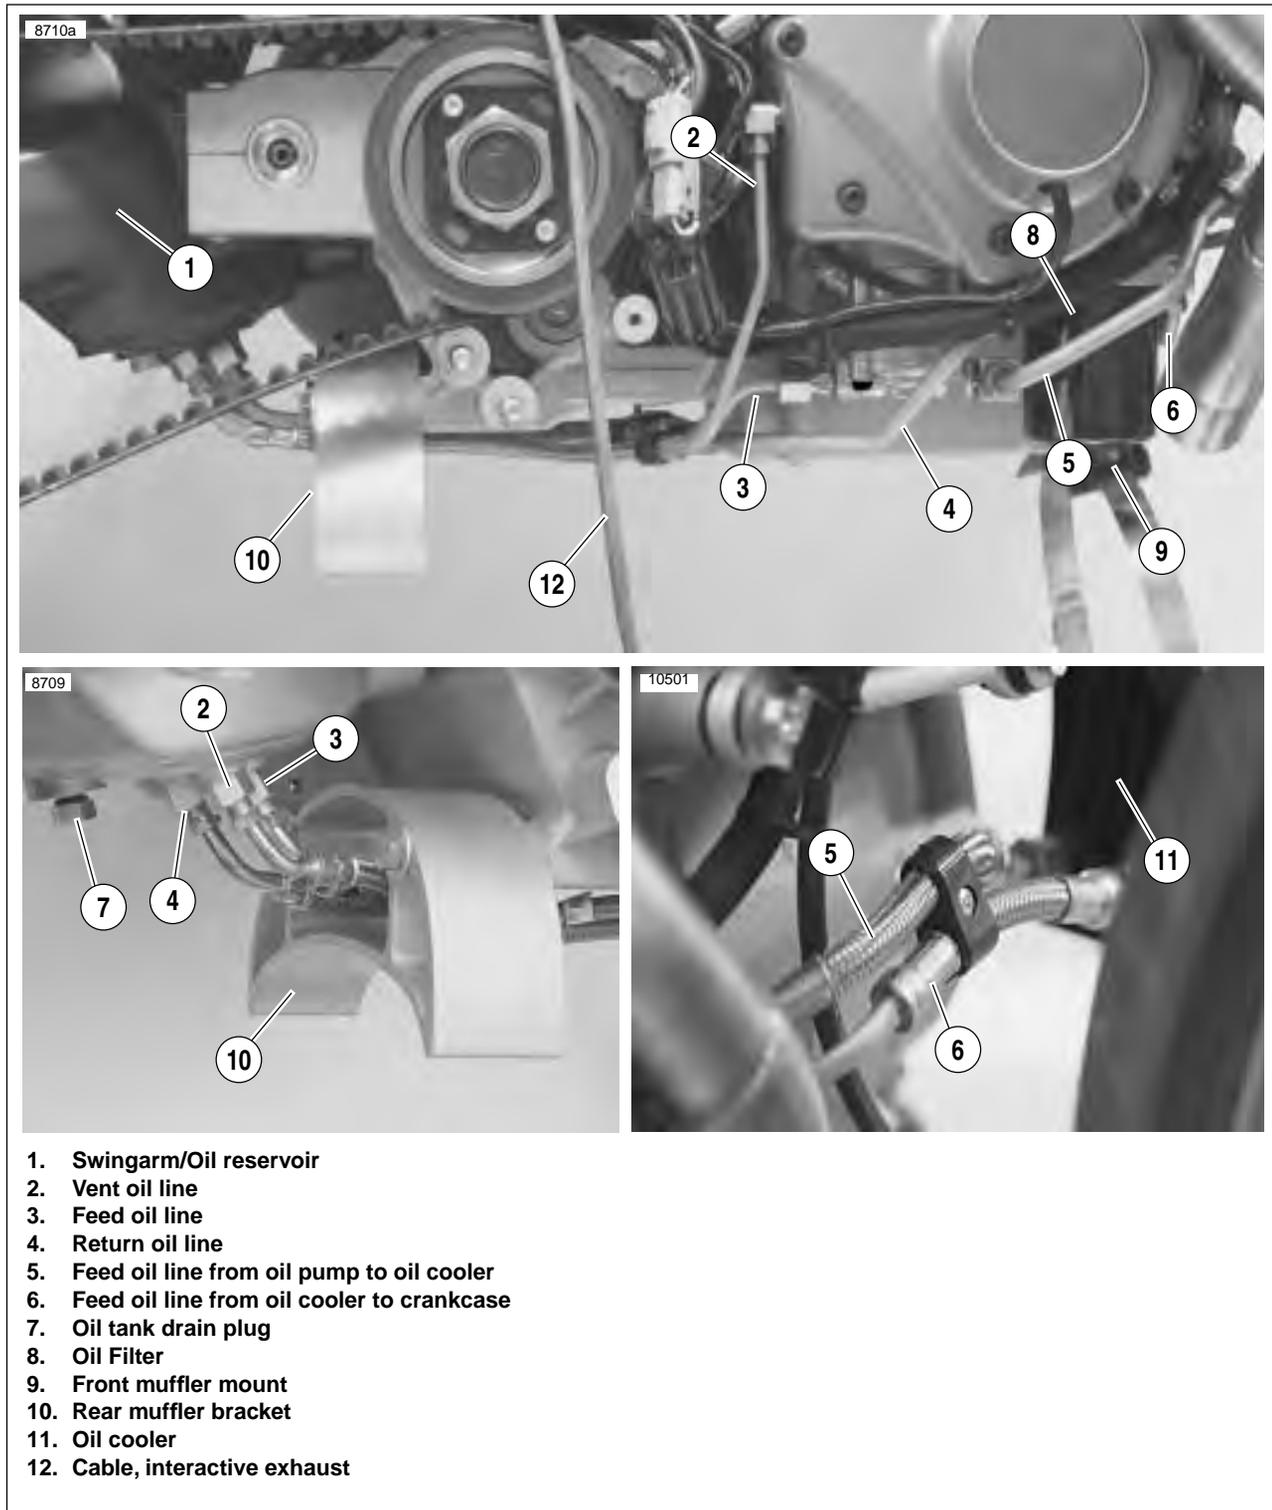


Figure 3-47. Oil Lines and Connections

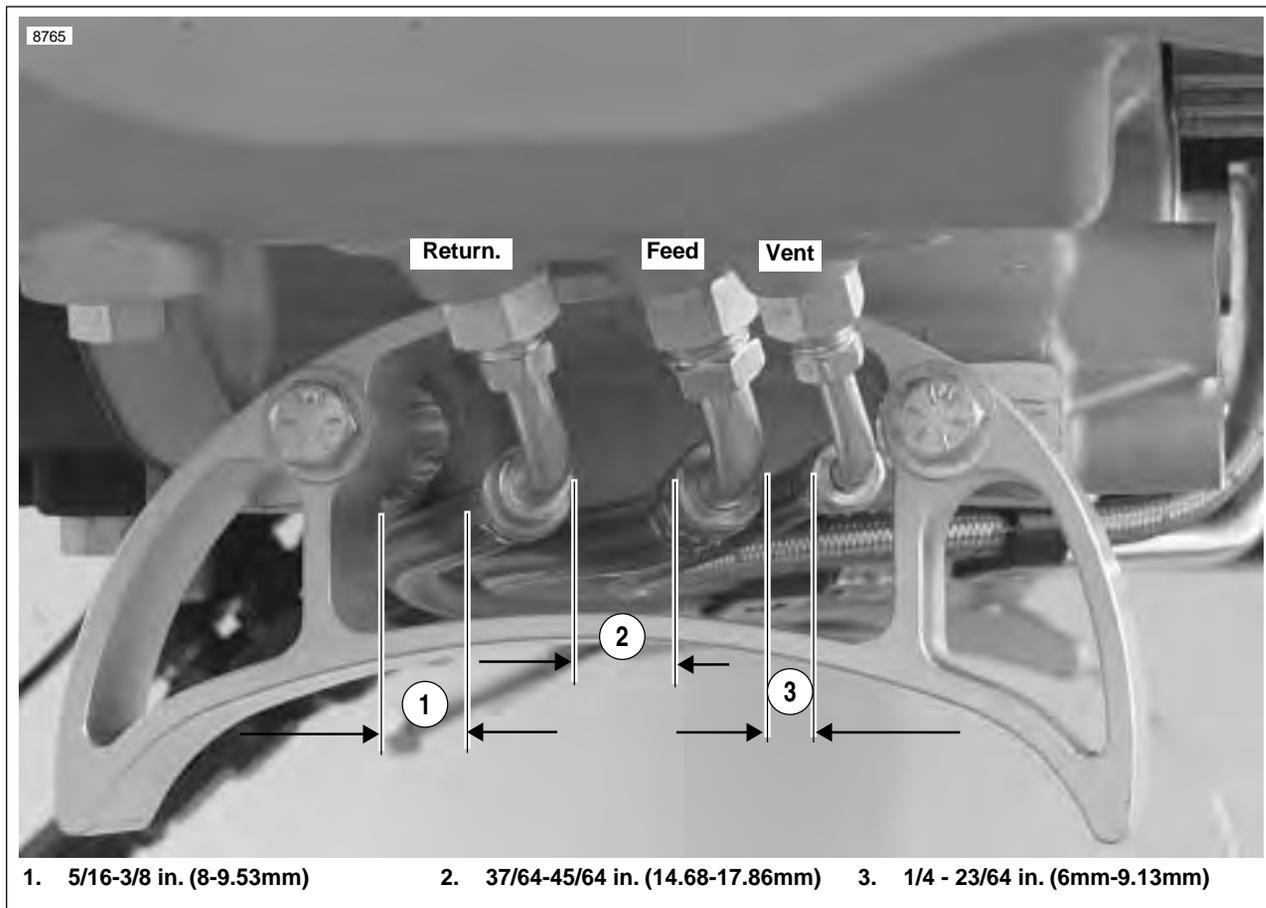


Figure 3-48. Oil Line Clearances

21. See [Figure 3-48](#). Install the return, feed and vent oil lines starting at the swingarm/oil reservoir and working towards the front of the vehicle. Leave all oil line fittings loose at this time.

NOTE

Once the three main oil lines are attached, it will be necessary to follow the proper torquing sequence. The three main oil lines must be torqued at the swingarm/oil reservoir first.

22. See [Figure 3-48](#). Torque the return oil line first making sure to maintain the proper clearance (1) between the oil line and the rear muffler bracket. Tighten oil line to 23-25 (31.2-33.9 Nm).
23. Arrange the feed line and the return line so that the distance between is within specifications (2). Torque the feed oil line to 24-26 ft-lbs (32.5-35.2 Nm).
24. Arrange the vent line and the feed line so that the distance between is within specifications (3). Torque the vent oil line to 17-19 ft-lbs (23-25.8 Nm).



Figure 3-49. Approximate Seven O’Clock Orientation of Oil Feed Line and Oil Return Line at the Oil Pump

25. See [Figure 3-49](#). Torque feed oil line to 27-29 ft-lbs (36.6-39.3 Nm) at the rear of the of the oil pump. When the oil line has been properly torqued, the orientation of the line should be approximately 7 o’clock.
26. Torque the return oil line at the top front oil pump fitting to 22-24 ft-lbs (29.8-32.5 Nm). When the oil line has been properly torqued, the orientation of the line should also be approximately 7 o’clock.

27. Torque the vent oil line at the gearcase cover to 12-13 ft-lbs (16.3-17.6 Nm).

NOTE

When torquing the vent line, verify that the line does not twist down towards the muffler, but remains horizontal and aligned with the feed and return lines after torquing.

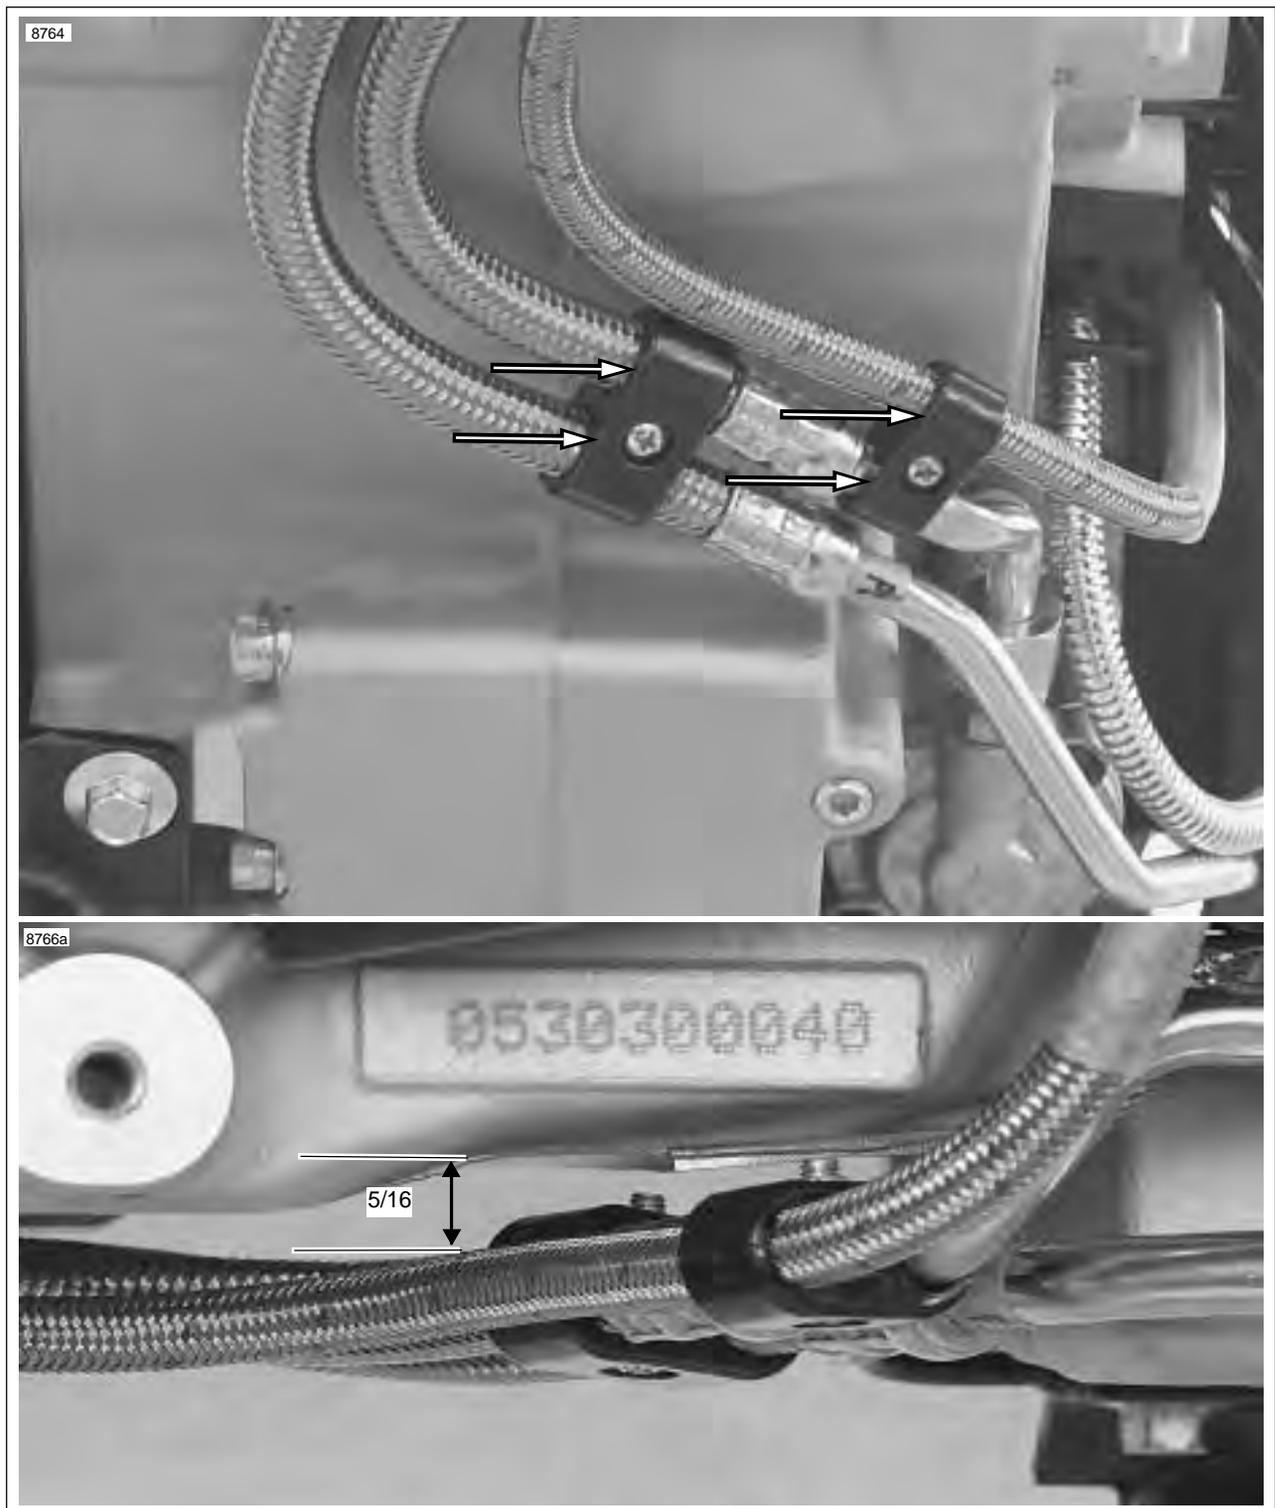


Figure 3-50. Clamp Orientation and Oil Line Spacing

CAUTION

The orientation of the oil lines is extremely important to the relation of the oil lines and certain components on the vehicle.

28. See [Figure 3-50](#). Verify that both black plastic oil line clamps are parallel to the crankcases and there is a clearance of 5/16 in. (7.9375 mm) between the bottom of the crankcases and the oil lines.

NOTE

The 5/16 in. clearance is between the crankcase and the steel oil line as shown. Not between the crankcase and the clamp.

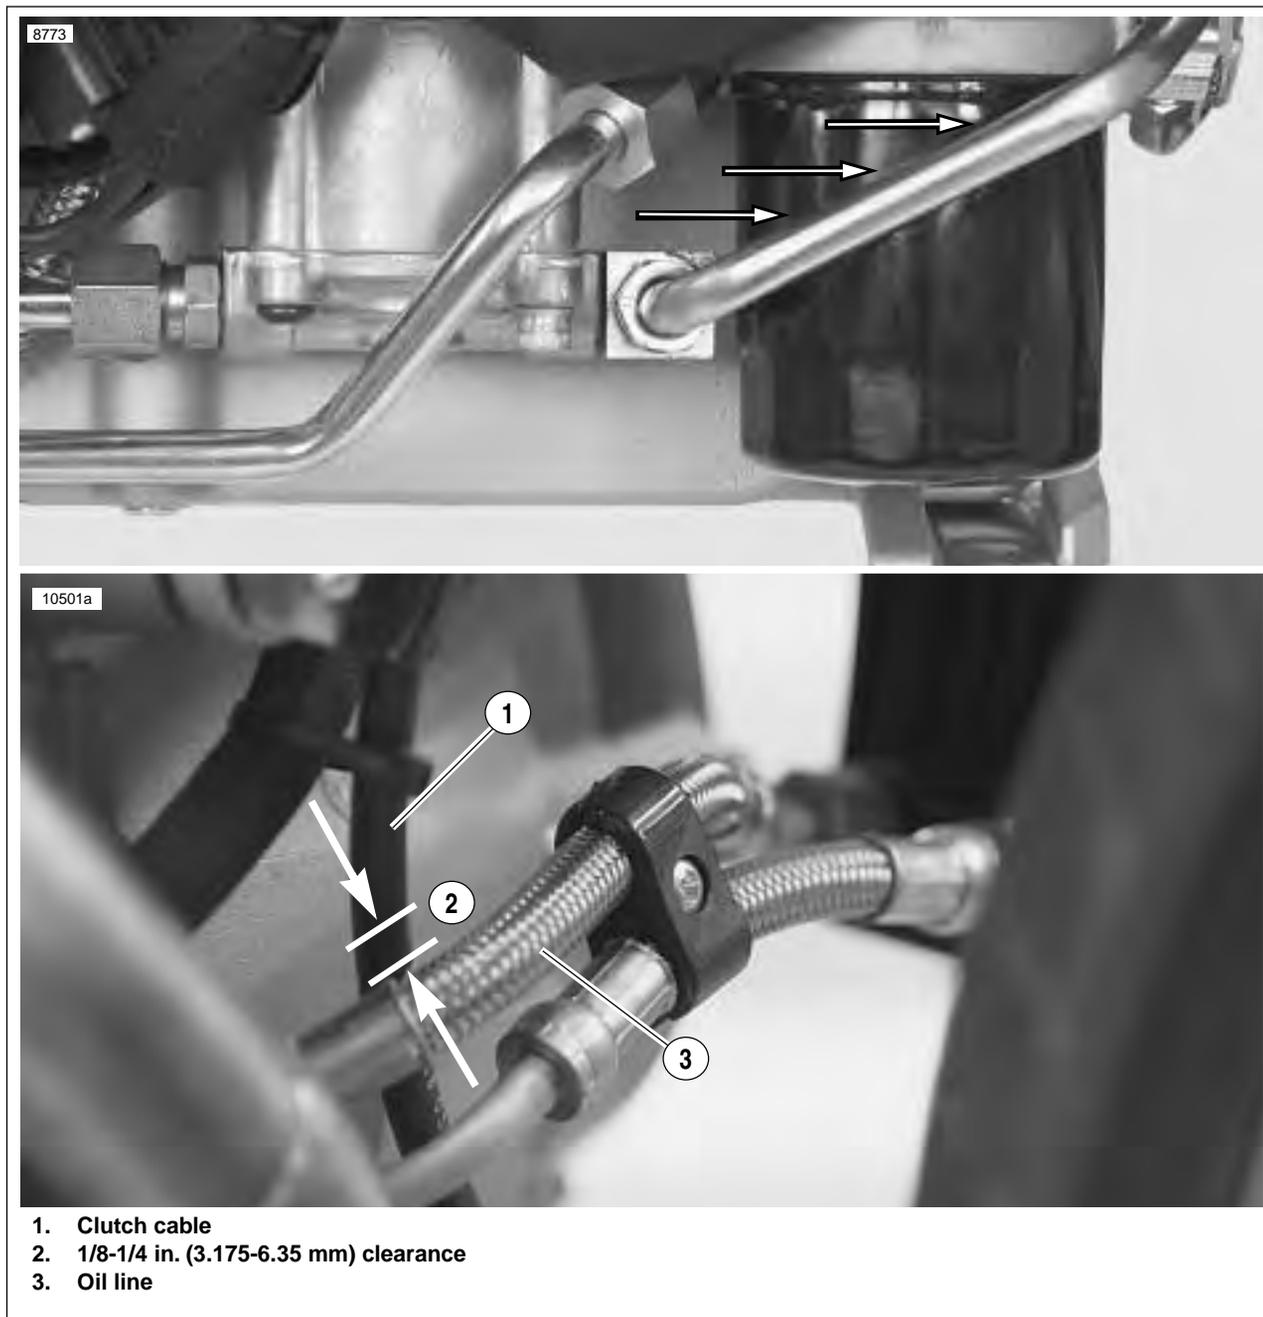


Figure 3-51. Oil Cooler Feed Oil Line Orientation (Approximately 2 O'Clock) and Oil Line Clearances

29. Loosely install the feed oil line that runs from the lower front oil pump fitting to the rear fitting on the oil cooler.

NOTE

Depending on the type of crowsfoot being used to torque the oil lines it may be necessary to remove the oil filter in order to properly torque certain oil line fittings.

CAUTION

See Figure 3-51. It is important to maintain an orientation of approximately 2 o'clock with the rigid part of the feed oil line running to the oil cooler. Also be aware of the 1/8-1/4 (3.175-6.35 mm) clearance specified between the feed oil line and the clutch cable at the front of the crankcase.

30. Verify that the clutch cable and feed line have 1/8-1/4 in. (3.175-6.35 mm) clearance.

NOTE

When torquing the oil cooler feed and return lines to the oil cooler, verify that the lines do not twist while torquing.

31. See [Figure 3-53](#). Install oil cooler oil feed line first at crankcase and tighten to 22-24 ft-lbs (29.8-32.5 Nm). Lightly coat the threads of the oil cooler fitting with clean H-D 20W50 engine oil. Wipe off any excess oil. Tighten feed oil line to 19-21 ft-lbs (25.8-28.5 Nm) at oil cooler making sure to center the oil line between the oil sending switch and the return oil line fitting on the crankcase.

NOTE

When installing the oil cooler return oil line it is necessary to install the end at the crankcase first.

32. Install the oil cooler return oil line at crankcase and tighten to 15-17 ft-lbs (20.3-23 Nm). Lightly coat the threads of the oil cooler fitting with clean H-D 20W50 engine oil. Wipe off any excess oil. Tighten return oil line to 19-21 ft-lbs (25.8-28.5 Nm) at oil cooler.

NOTE

See [Figure 3-53](#). The orientation of the oil cooler return oil line where it enters the crankcase should be at approximately 5 o'clock to allow for proper alignment and clearance of other components on the vehicle.

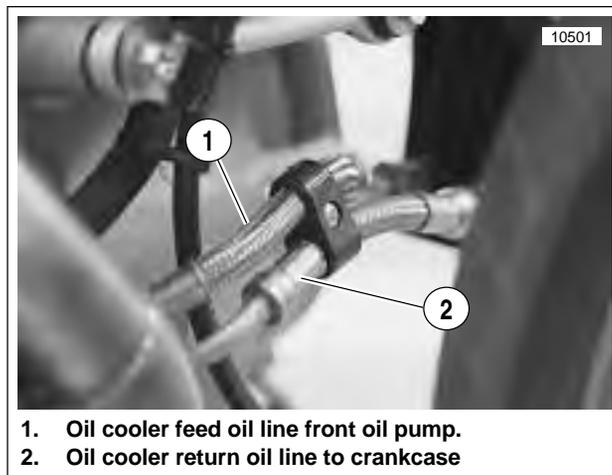


Figure 3-52. Oil Cooler Oil Lines

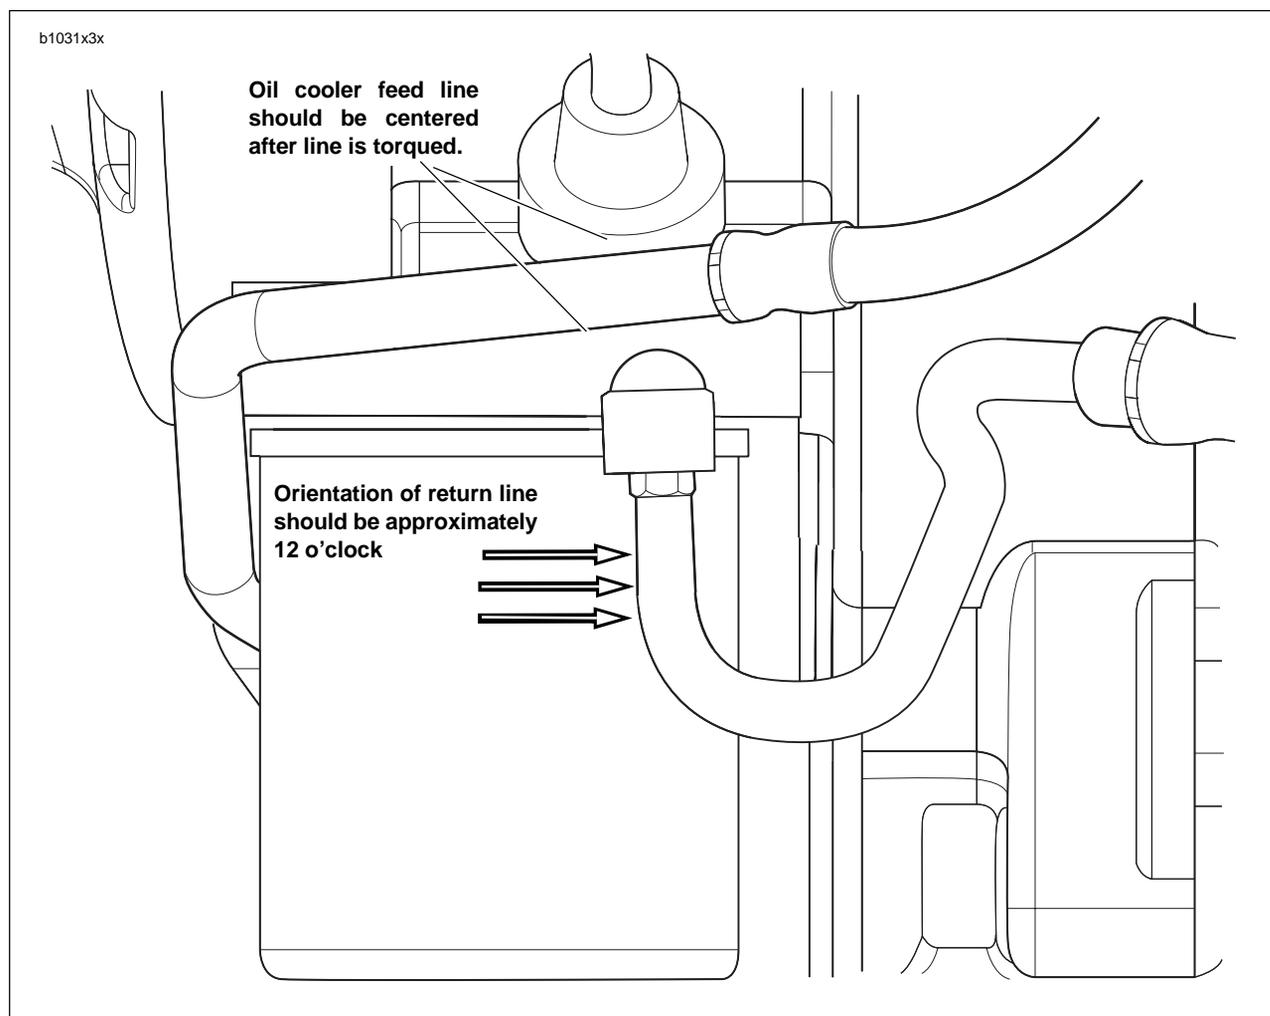


Figure 3-53. Oil Cooler Feed and Return Oil Lines Location and Orientation

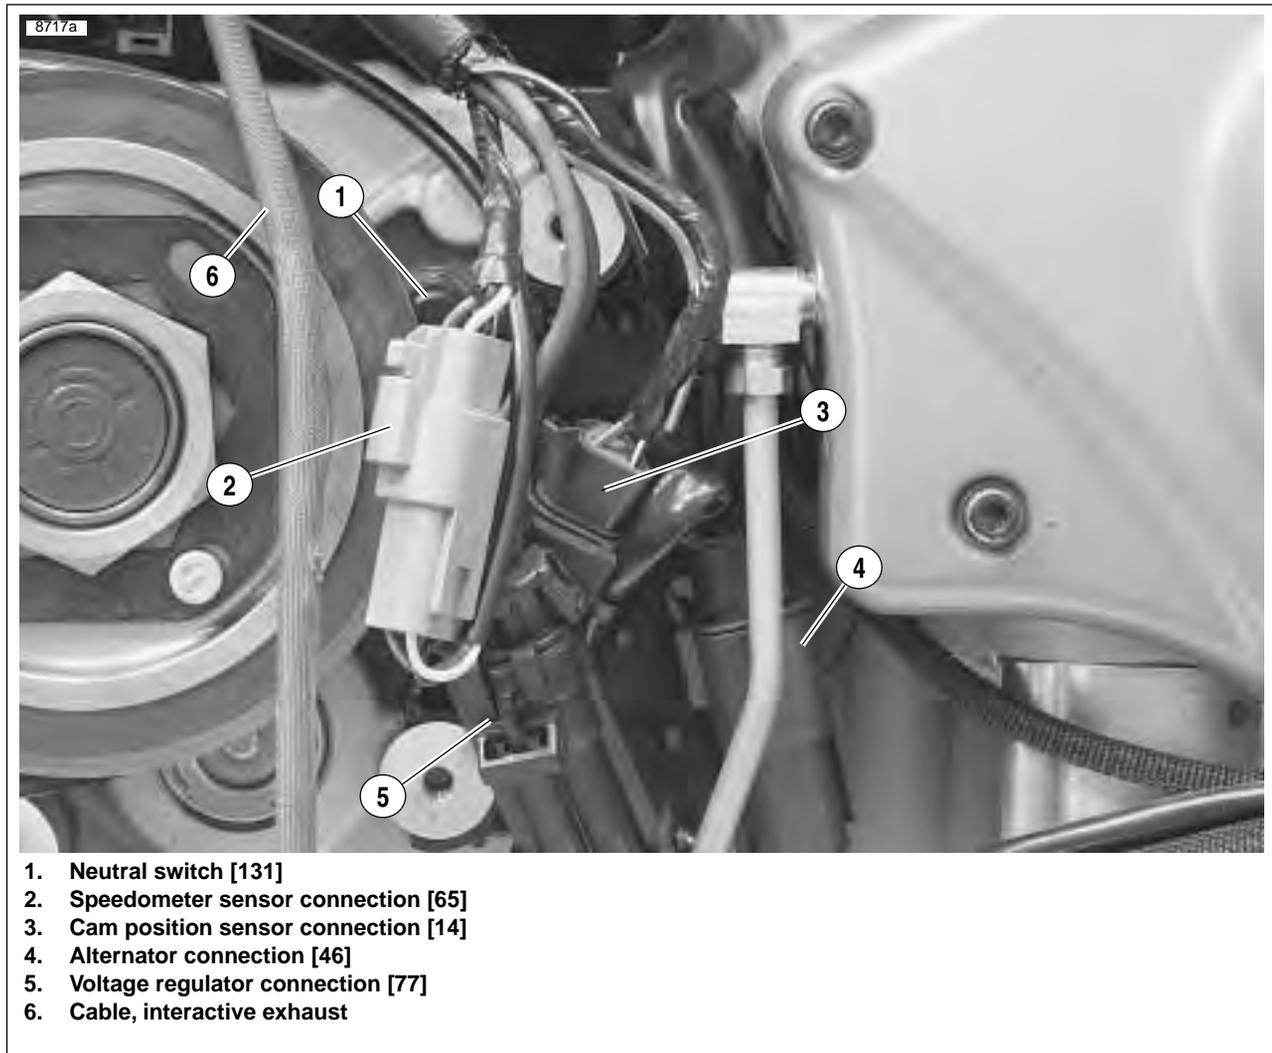


Figure 3-54. Electrical Connections

33. See [Figure 3-54](#). Connect the following electrical components:
- a. Neutral switch [131].
 - b. Speedometer sensor [65] (install cable strap).
 - c. Cam position sensor [14].
 - d. Alternator [46].
 - e. Voltage regulator [77].
 - f. Positive battery cable at starter.
 - g. Starter solenoid [128].
 - h. Oil pressure switch [120].

NOTES

- See [Figure 3-55](#). The interactive exhaust cable is routed down behind the vent line on the gearcase cover.
 - For XB12R with interactive exhaust system see [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#) for specific details on removal and installation of interactive components.
34. See [Figure 3-56](#). Pull clutch cable back up into the proper position.
- a. Connect clutch cable to handlebars and adjust to specifications.
 - b. Install retaining clamps.

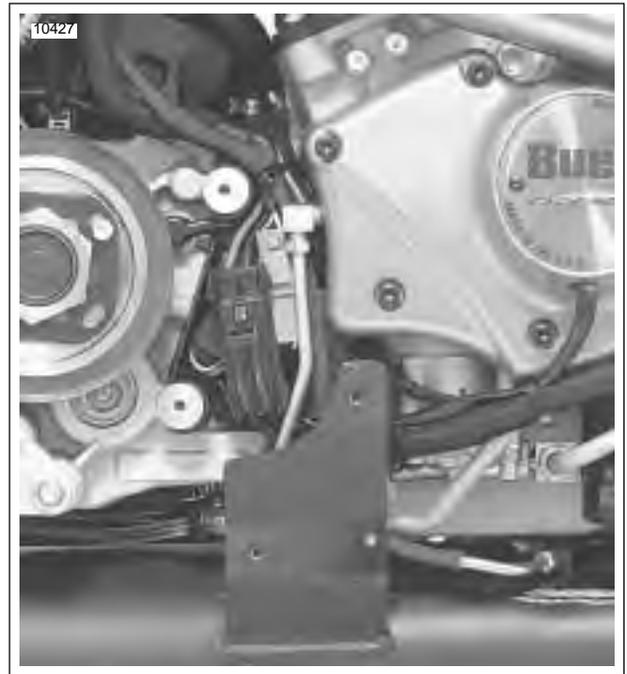


Figure 3-55. Correct Routing of Wiring Harnesses


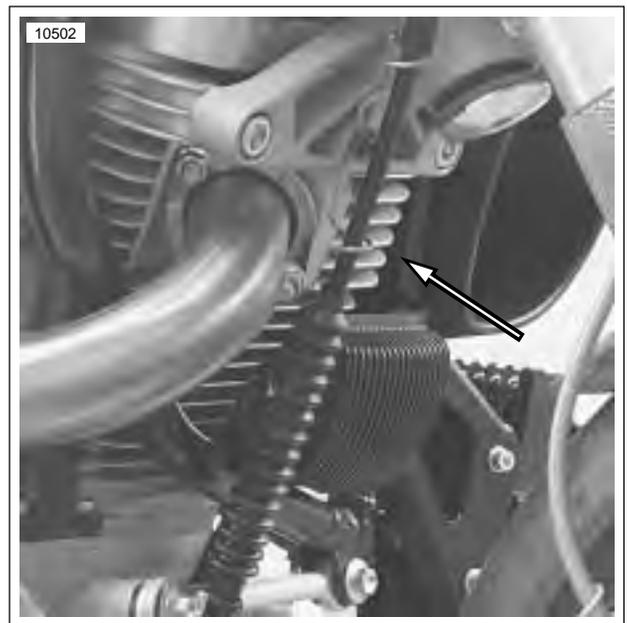


Figure 3-56. Clutch Cable Wire Form Retainer

b0986x3x

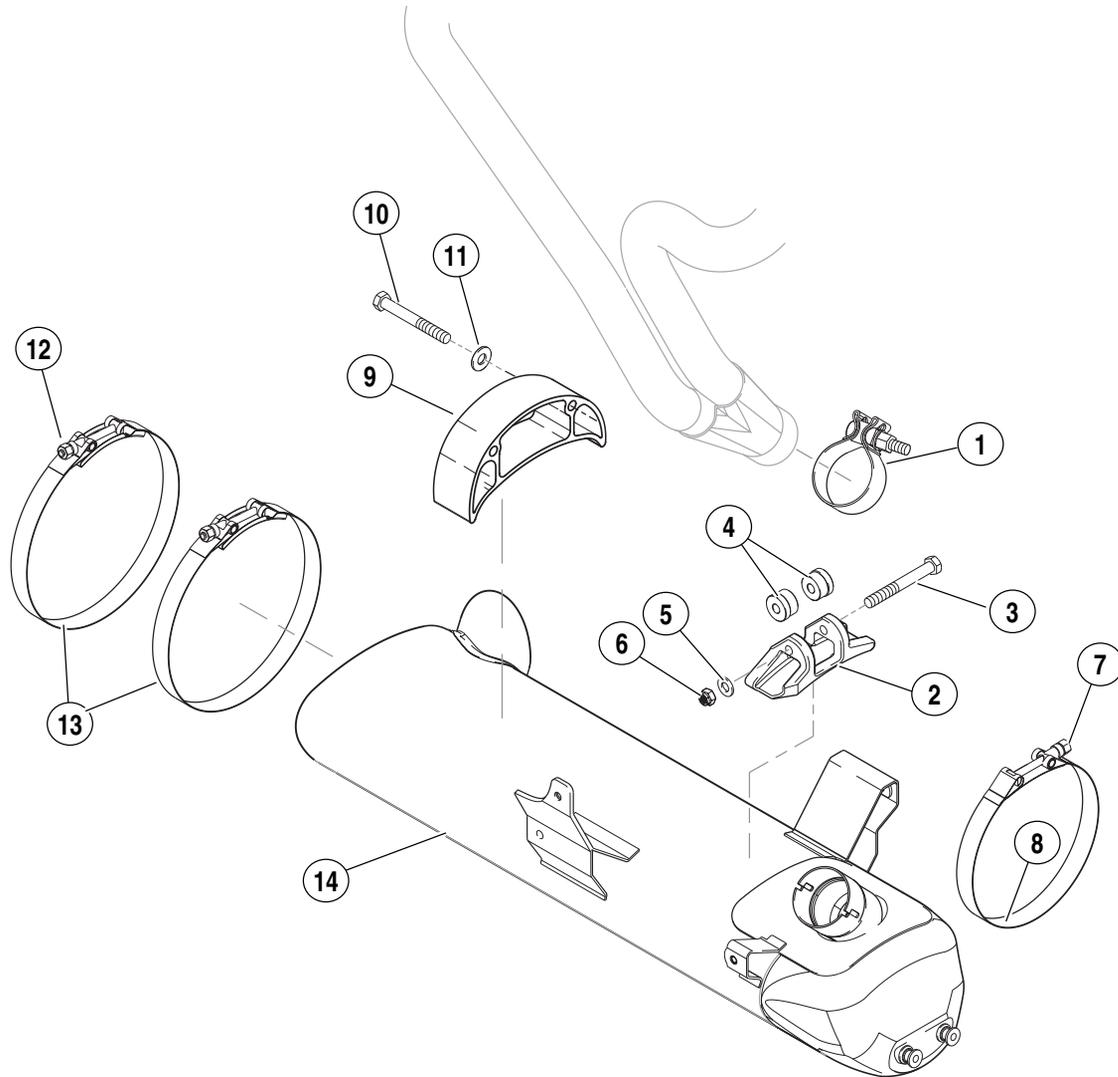

- | | |
|--|--|
| 1. Clamp, Torca | 8. Muffer strap, front |
| 2. Muffer mount, front | 9. Muffer bracket, rear |
| 3. Screw, front muffer mount (1) | 10. Screw, rear muffer bracket (2) |
| 4. Bushings, front muffer mount (2) | 11. Flat washer, rear muffer bracket (2) |
| 5. Flat washer, front muffer mount (1) | 12. Rear muffer strap fastener |
| 6. Nut, front muffer mount (1) | 13. Muffer strap, rear (2) |
| 7. Front muffer strap fastener | 14. Muffer |

Figure 3-57. Muffer and Mounting System

CAUTION


is important that the front muffer mount is tightened last in order to ensure proper alignment of the exhaust system.

CAUTION

When rear muffer straps have been installed, it is important that strap fasteners do not contact idler pulley bracket.

35. See [Figure 3-57](#). Install muffer with Torca clamp but do not tighten:

- Install rear muffer straps and alternately tighten rear strap fasteners (12) until properly torqued to 48-60 **in-lbs** (5.4-6.8 Nm).
- Install front muffer strap fastener (7) and torque to 108-120 **in-lbs** (12.2-13.6 Nm).
- Tighten Torca clamp to 40-45 ft-lbs (54.2-61 Nm).
- Tighten front muffer mount to 22-25 ft-lbs (29.8-33.9 Nm).

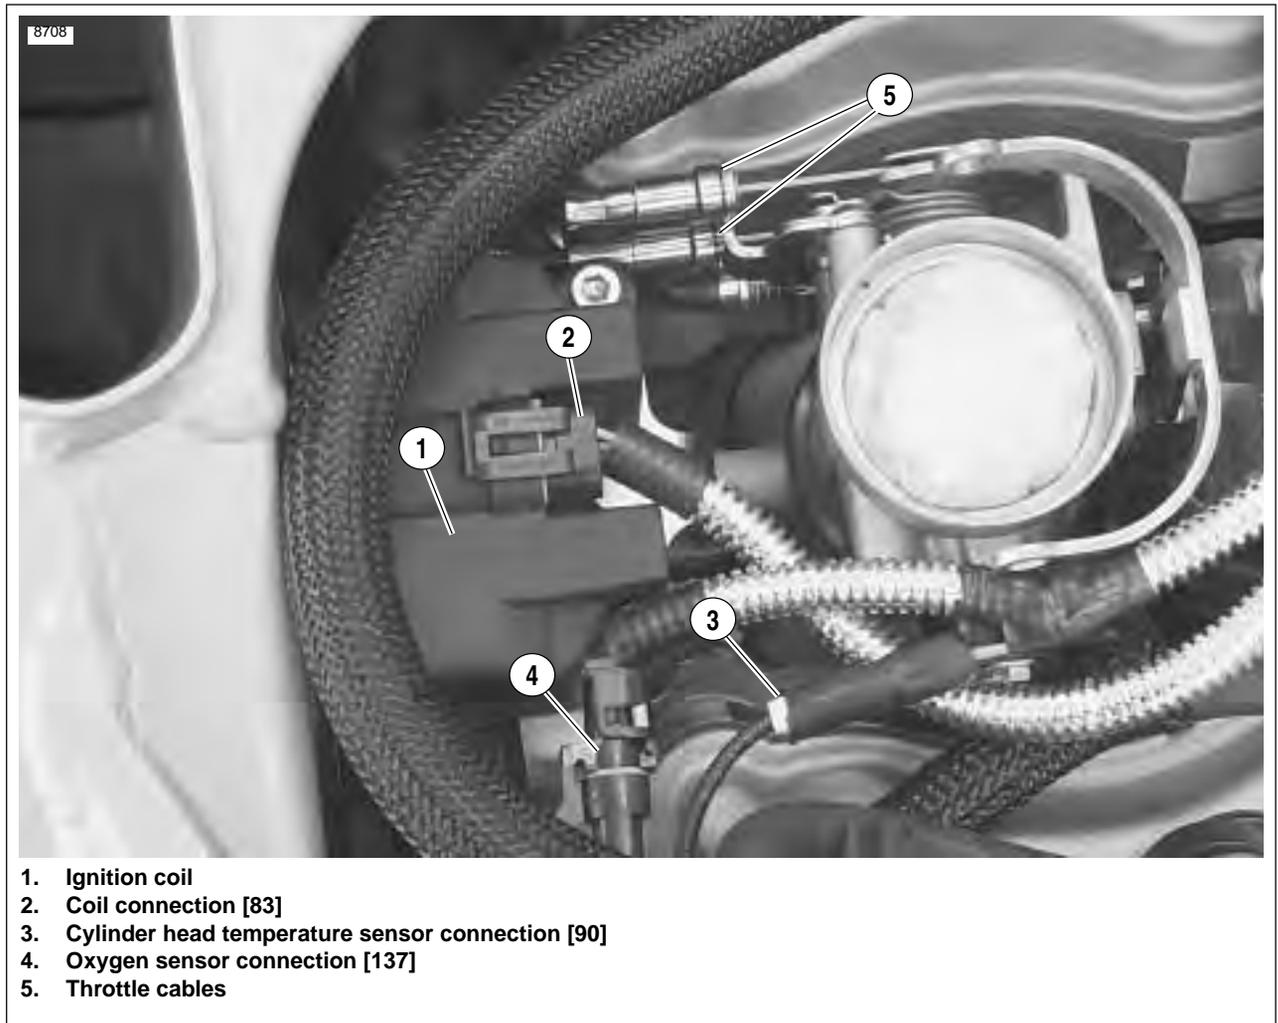

1. Ignition coil
2. Coil connection [83]
3. Cylinder head temperature sensor connection [90]
4. Oxygen sensor connection [137]
5. Throttle cables

Figure 3-58. Electrical Connections and Throttle Cables (Typical)

36. See [Figure 3-58](#). Connect throttle cables (5) to induction module/throttle body.
37. Connect the following sensors:
 - a. Temperature sensor [90] (3).
 - b. Oxygen sensor [137] (Install cable strap on harness) (4).
38. Install the ignition coil (1) and spark plug wires and connect [83] (2). Tighten ignition coil fasteners to 120-144 **in-lbs** (13.6-16.3 Nm).

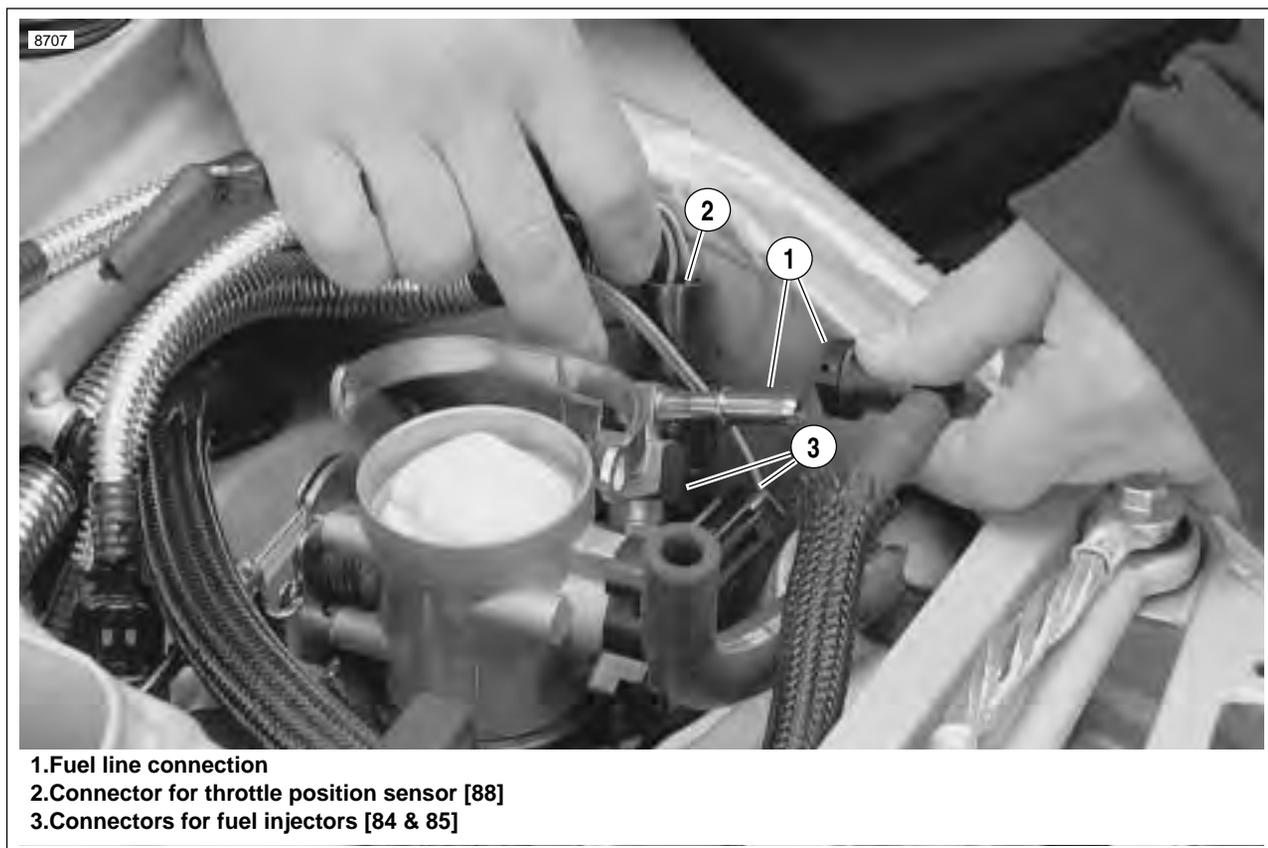


Figure 3-59. Fuel Line and DDFI Electrical Connections (Typical)

CAUTION

Remove shop towel from entrance of throttle body to ensure proper operation of induction module.

39. See [Figure 3-59](#). Connect throttle position sensor [88] (20).
40. Connect fuel injector leads [84 & 85] (3).
41. Connect fuel line (1).
42. Install throttle body velocity stack and tighten to 12-36 **in-lbs** (1.356-4.064 Nm) on 984 models.

NOTE

On XB12S, velocity stack attaches with a wire spring camp.

CAUTION

Always check to ensure interactive cable is adjusted and routed properly before installing air box cover. See [1.17 INTERACTIVE EXHAUST CABLE \(XB12R\)](#).

43. Install air box cover and assembly. Tighten fasteners to 84-120 **in-lbs** (9.49-13.56 Nm).
44. Fill oil tank.
45. Connect fuel pump.
46. Install rear belt and idler pulley. See [1.10 DRIVE BELT](#) and [2.13 REAR BRAKE MASTER CYLINDER](#).
47. Install left and right side rider footrests and support plates and torque to 108-132 **in-lbs** (12.20-14.91 Nm).

NOTE

When re-installing the right side rider footrest and support plate, also install rear brake pedal assembly and remote reservoir.

48. Install sprocket cover and tighten fasteners and washers to 12-36 **in-lbs** (1-4 Nm).
49. Install chin fairing. See [2.33 CHIN FAIRING](#).
50. Install air scoops, right and left sides. See [2.35 AIR SCOOPS](#).

NOTE

The connection for fuel pump is just above the pump located at the rear of the fuel tank on the left side of the vehicle.

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

51. Connect negative ground cable to battery and install seat (tighten).

WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury.

CAUTION

All washers and fasteners used in the engine are hardened. Do not mix or replace hardened washers and fasteners with unhardened parts. Do not reuse fiber cover seals. Engine damage may result.

REMOVAL

Before removing the cylinder head assembly, it is necessary to rotate engine down as described in [3.3 ENGINE ROTATION FOR SERVICE](#). The rocker arm covers and internal components must be removed before removing cylinder heads.

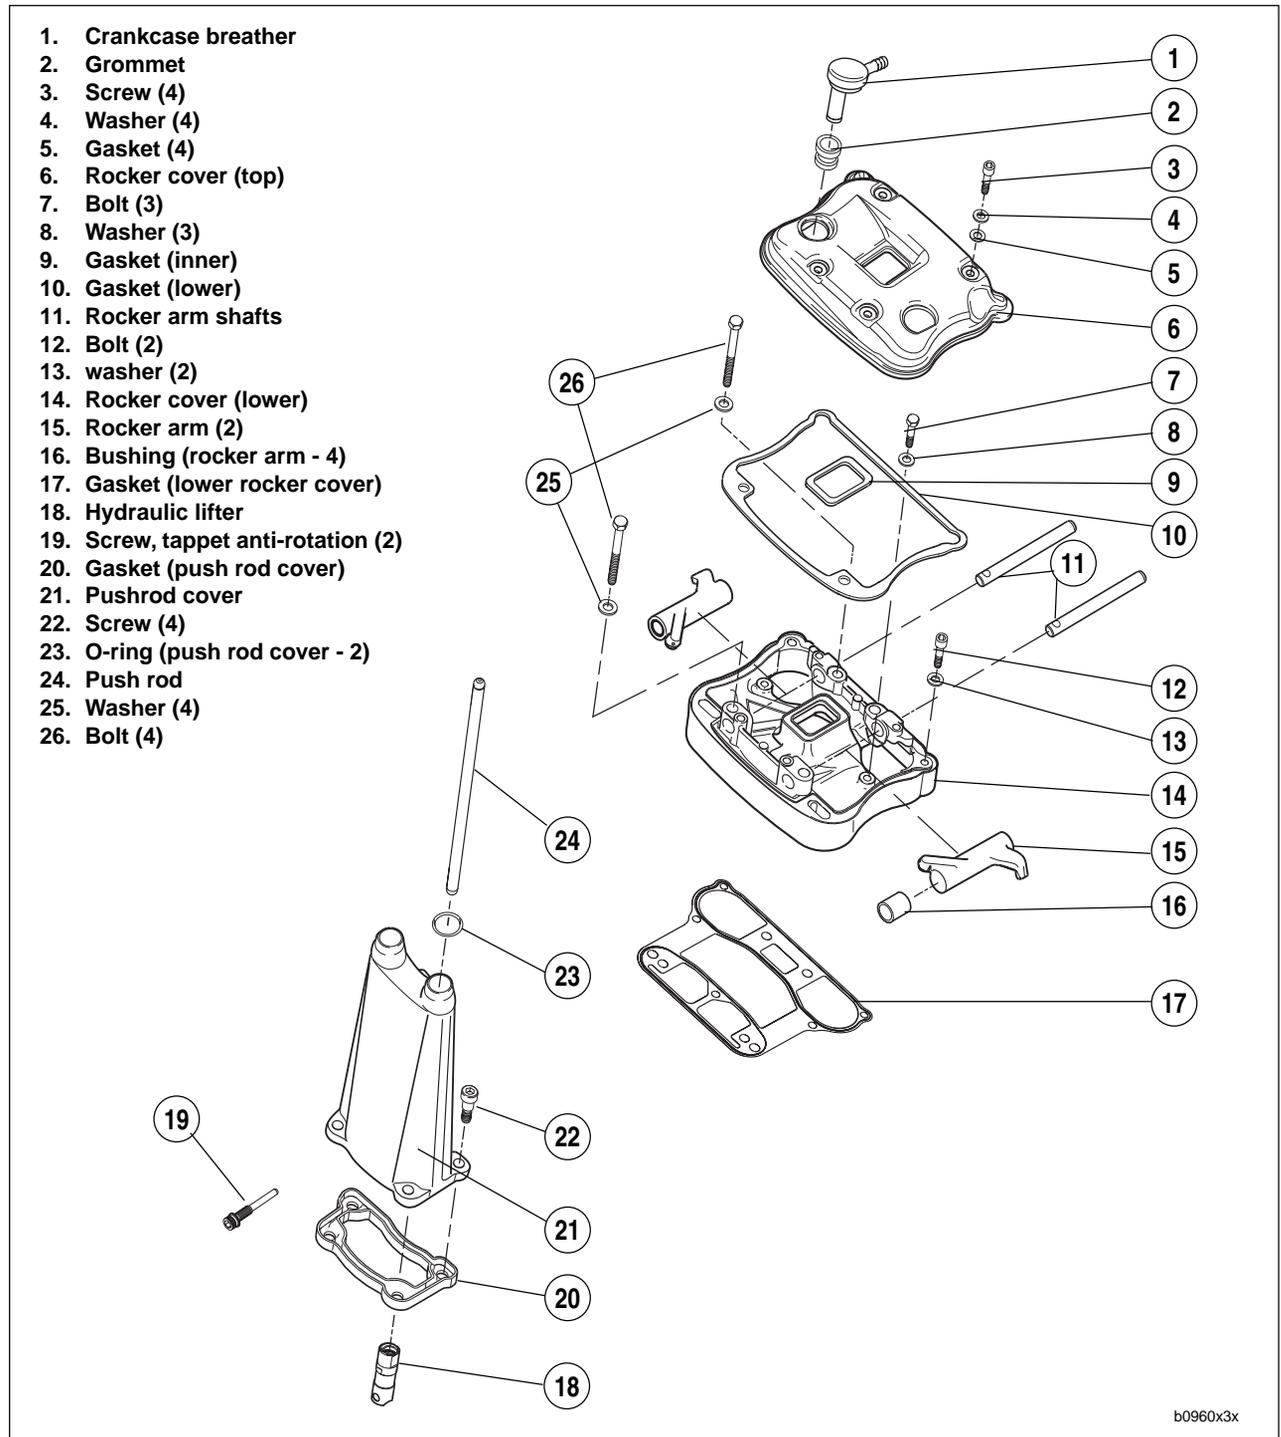


Figure 3-60. Rocker Arm and Pushrod Cover Assemblies

Rocker Box Assemblies

1. Remove spark plugs.
2. See [Figure 3-60](#). Remove screws with washers and fiber cover seals. Discard fiber seals.
3. Remove top rocker covers.
4. Remove and discard gaskets.
5. Rotate crankshaft until both valves are closed on head being removed.
6. See [Figure 3-61](#). Remove hardware holding lower rocker cover to cylinder head in the following order.
 - a. Remove two screws and washers (1).
 - b. Remove three bolts and washers (2).
 - c. Loosen the four rocker arm fasteners (3) in 1/4-1/2 turn increments using a cross pattern in order to relieve valve spring pressure on the lower rocker box.
7. See [Figure 3-60](#). Remove lower rocker cover.

NOTE

Remove lower rocker box as an assembly and then disassemble as required.

CAUTION

Mark rocker arm shafts for reassembly in their original positions. Valve train components must be reinstalled in their original positions to prevent accelerated wear and increased valve train noise.

8. See [Figure 3-62](#). Remove rocker arm shafts by tapping them out using a hammer and a soft metal punch.
9. Remove rocker arms and mark them for reassembly in their original locations.
10. Mark the location and orientation (top/bottom) of each push rod. Remove push rods.

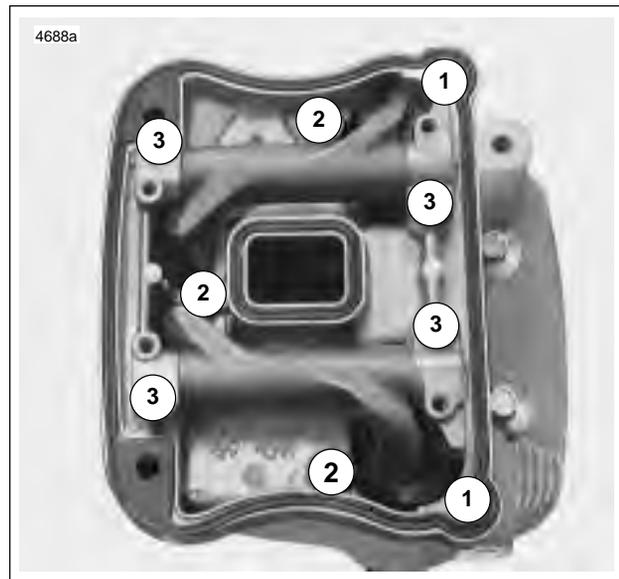


Figure 3-61. Lower Rocker Box Fasteners



Figure 3-62. Removing Rocker Arm Shafts

Cylinder Head Assemblies

CAUTION

See [Figure 3-63](#). Distortion to the head, cylinder and crankcase studs may result if head screws are not loosened (or tightened) gradually in the sequence shown.

11. See [Figure 3-63](#). Loosen each head screw 1/8-turn following the sequence shown.
 - a. Continue loosening in 1/8-turn increments until screws are loose. Remove head screws.
 - b. Remove cylinder head, head gasket, and O-rings.
12. Discard head gasket.
13. See [Figure 3-60](#). Remove push rod cover, gasket and valve tappets.

DISASSEMBLY

1. See [Figure 3-64](#). Clamp VALVE SPRING COMPRESSOR TOOL (Part No. HD-34736B) in vise.
2. See [Figure 3-64](#). Compress valve spring with VALVE SPRING COMPRESSOR.
3. See [Figure 3-65](#). Remove valve keepers, upper collar and valve spring. Mark valve keepers for reassembly in their original locations.
4. Use a fine tooth file to remove any burrs on the valve stem at the keeper groove.
5. Mark valve to ensure that it will be reassembled in the same head. Remove valve, valve stem seal and lower collar assembly by hand. No special tools are required to remove valve stem seal and lower collar assembly.
6. Repeat the above procedure for the other valves.


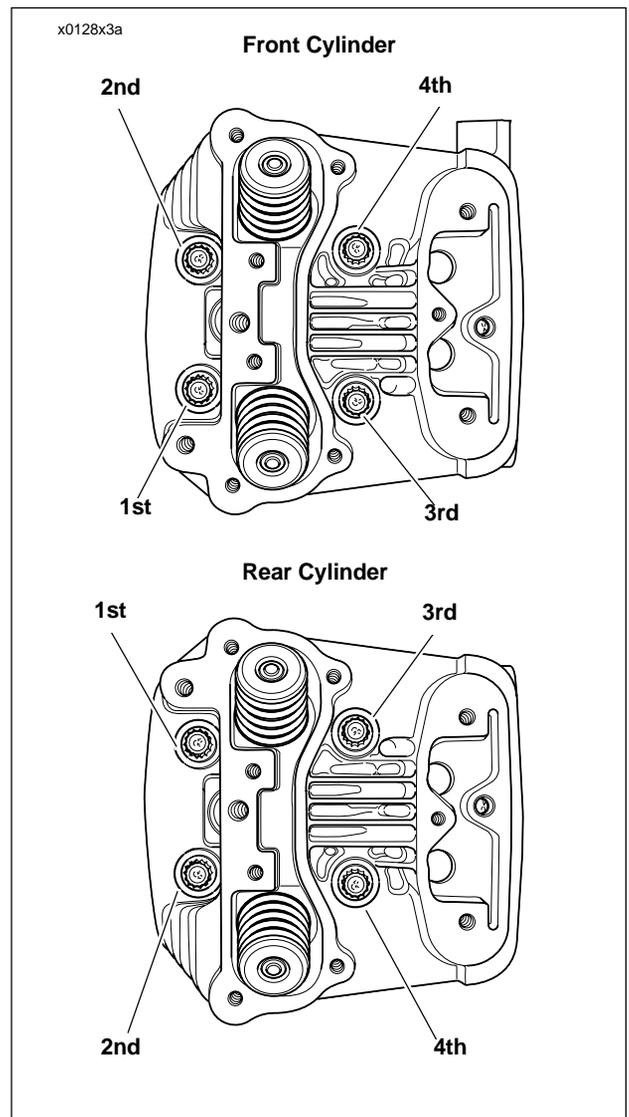


Figure 3-63. Head Screw Loosening/Tightening Sequence



Figure 3-64. Valve Spring Compressor
(Part No. HD-34736B)

b1024x3x

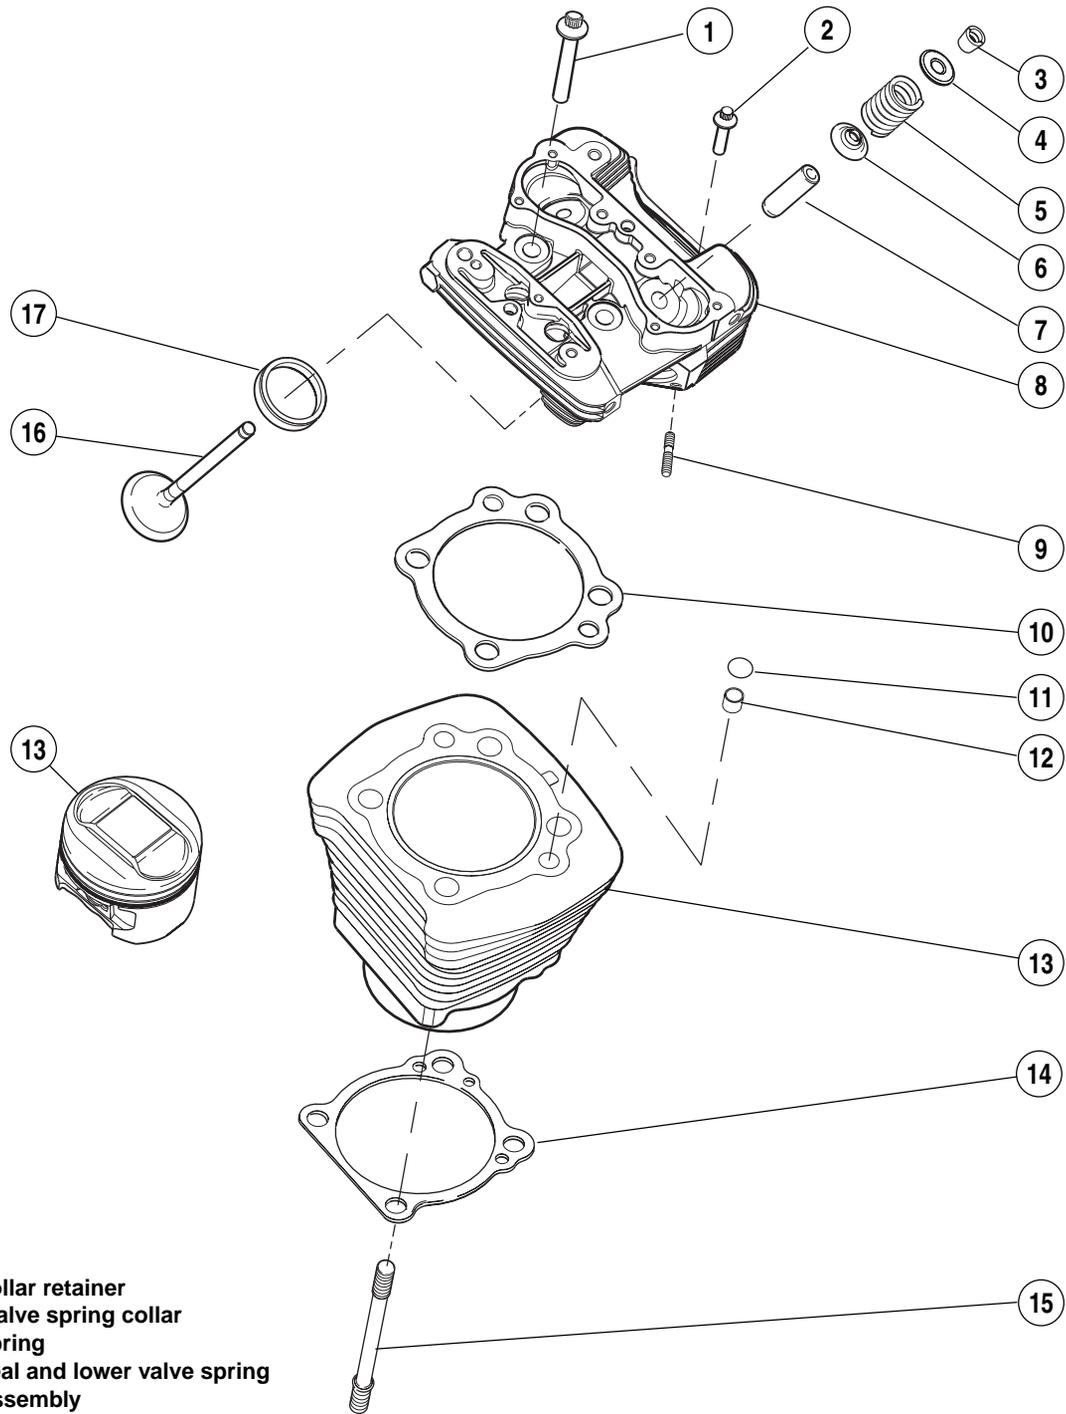

1. Screw
2. Screw
3. Valve collar retainer
4. Upper valve spring collar
5. Valve spring
6. Valve seal and lower valve spring collar assembly
7. Valve guide intake & exhaust (2)
8. Cylinder head
9. Exhaust port stud
10. Cylinder head gasket
11. Cylinder O-ring (4)
12. Cylinder insert
13. Cylinder w/piston & rings
14. Cylinder base gasket
15. Cylinder base stud
16. Exhaust valve
17. Exhaust valve seat

Figure 3-65. Cylinder Head, Cylinder and Piston Assembly

CLEANING AND INSPECTION

Cylinder Heads

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

1. Bead blast or scrape carbon from head, top of cylinder and valve ports. Be careful to avoid scratching or nicking cylinder head and cylinder joint faces. Blow off loosened carbon or dirt with compressed air.
2. Soak cylinder head in an aluminum-compatible cleaner/solvent to loosen carbon deposits.
3. Wash all parts in non-flammable solvent, followed by a thorough washing with hot, soapy water. Blow out oil passages in head. Be sure they are free of sludge and carbon particles. Remove loosened carbon from valve head and stem using a wire wheel. Never use a file or other hardened tool which could scratch or nick valve. Polish valve stem with very fine emery cloth or steel wool.

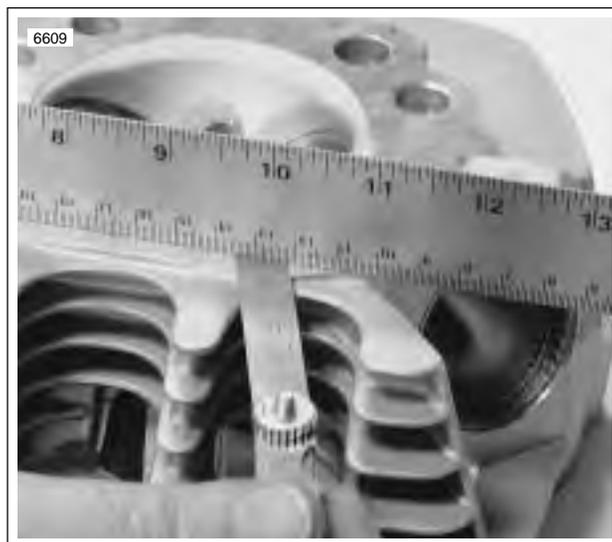


Figure 3-66. Checking Gasket Surface

4. See [Figure 3-66](#). Check head gasket surface on head for flatness. Machine or replace any head which exceeds SERVICE WEAR LIMIT of 0.006 in. (0.152 mm).

Rocker Arm Assemblies

1. Check each rocker arm, at pad end and push rod end, for uneven wear or pitting. Replace rocker arm if either condition exists.



Figure 3-67. Measuring Rocker Arm Shaft Diameter (Rocker Cover Position)



Figure 3-68. Measuring Rocker Arm Shaft Diameter (Rocker Arm Bushing Position)

2. Measure and record rocker arm shaft diameter.
 - a. See [Figure 3-67](#). Measure where shaft fits in lower rocker arm cover.
 - b. See [Figure 3-68](#). Measure where rocker arm bushings ride.



Figure 3-69. Measuring Rocker Arm Shaft Bore Diameter in Lower Rocker Cover



Figure 3-70. Measuring Rocker Arm Bushing Inner Diameter

3. Measure and record rocker arm shaft bore diameter.
 - a. See [Figure 3-69](#). Measure bore of lower rocker cover.
 - b. See [Figure 3-70](#). Measure rocker arm bushing inner diameter.
4. Check the measurements obtained in Steps 5-6 against the SERVICE WEAR LIMITS. Repair or replace parts exceeding limits.
5. Assemble rocker arms and rocker arm shafts into lower rocker cover.
6. Check end play of rocker arm with feeler gauge.
7. Replace rocker arm or lower cover or both if end play exceeds 0.025 in. (0.635 mm).

Valves

1. Replace the valve if there is evidence of burning or cracking.
2. Inspect the end of the valve stem for pitting or uneven wear. Replace the valve if either of these conditions are found.
3. Inspect for burrs around the valve stem keeper groove. Remove burrs with a fine tooth file if found.

Valve Seats

NOTE

Valve seats are also subject to wear. Resurface valve seats whenever valves are refinished.

1. Inspect seats for cracking, chipping or burning. Replace seats if any evidence of these conditions are found.



Figure 3-71. Measuring Valve Stem Protrusion

2. See Figure 3-71. Check seats for recession by measuring valve stem protrusion.
 - a. Wipe valve seats and valve faces clean.
 - b. Measure valve stem protrusion.
 - c. If valve stem protrudes more than 2.031 in. (51.587 mm), replace valve seat or cylinder head.

NOTE

Replacing a valve seat is a complex operation requiring special equipment. If the seat is loose or is not fully seated in the head, then seat movement will prevent the proper transfer of heat from the valve. The seat surface must be flush with (or below) the head surface. See 3.1 SPECIFICATIONS for valve seat-to-cylinder head fit.

Valve Guides

1. Clean valve guides by lightly honing with VALVE GUIDE HONE (Part No. HD-34723).
2. Scrub guides with VALVE GUIDE BRUSH (Part No. HD-34751) and hot soapy water. Measure valve stem outer diameter and valve guide inner diameter. Check measurements against 3.1 SPECIFICATIONS.

Valve Springs

1. Inspect valve springs for broken or discolored coils.

NOTE

The XB Firebolt utilizes a single valve spring for each valve. The inner and outer springs are combined into one tapered spring that is progressively wound.

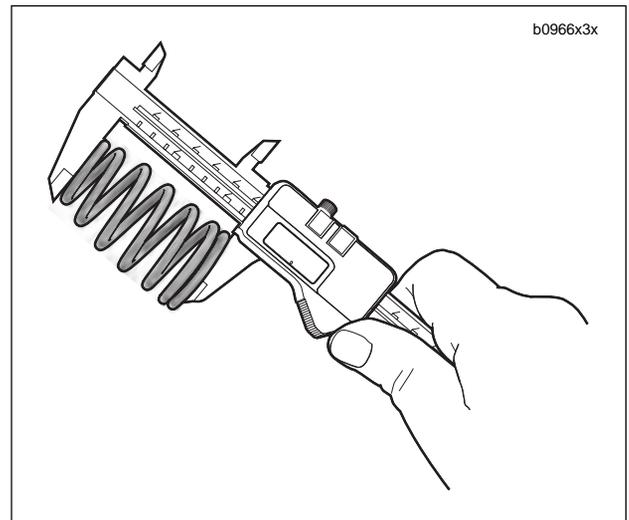


Figure 3-72. Checking Spring Free Length

2. See Figure 3-72. Check free length and compression force of each spring. Compare with 3.1 SPECIFICATIONS. If spring length is shorter than specification or if spring compression force is below specification, replace spring.

Spark Plug Threads

Inspect spark plug threads for damage. If threads in head are damaged, a special plug type insert can be installed using a 12 mm spark plug repair kit.

Push Rods

Examine push rods, particularly the ball ends. Replace any rods that are bent, worn, discolored or broken.

Replacing Rocker Arm Bushings

1. See [Figure 3-73](#). To replace worn bushings, press or drive them from the rocker arm. If bushing is difficult to remove, turn a 9/16-18 tap into bushing. From opposite side of rocker arm, press out bushing and tap using a discarded rocker arm shaft.
2. Press replacement bushing into rocker arm, flush with arm end, and split portion of bushing towards top of arm.
3. Using remaining old bushing as a pilot, line ream new bushing with **ROCKER ARM BUSHING REAMER** (Part No. HD-94804-57).
4. Repeat for other end of rocker arm.

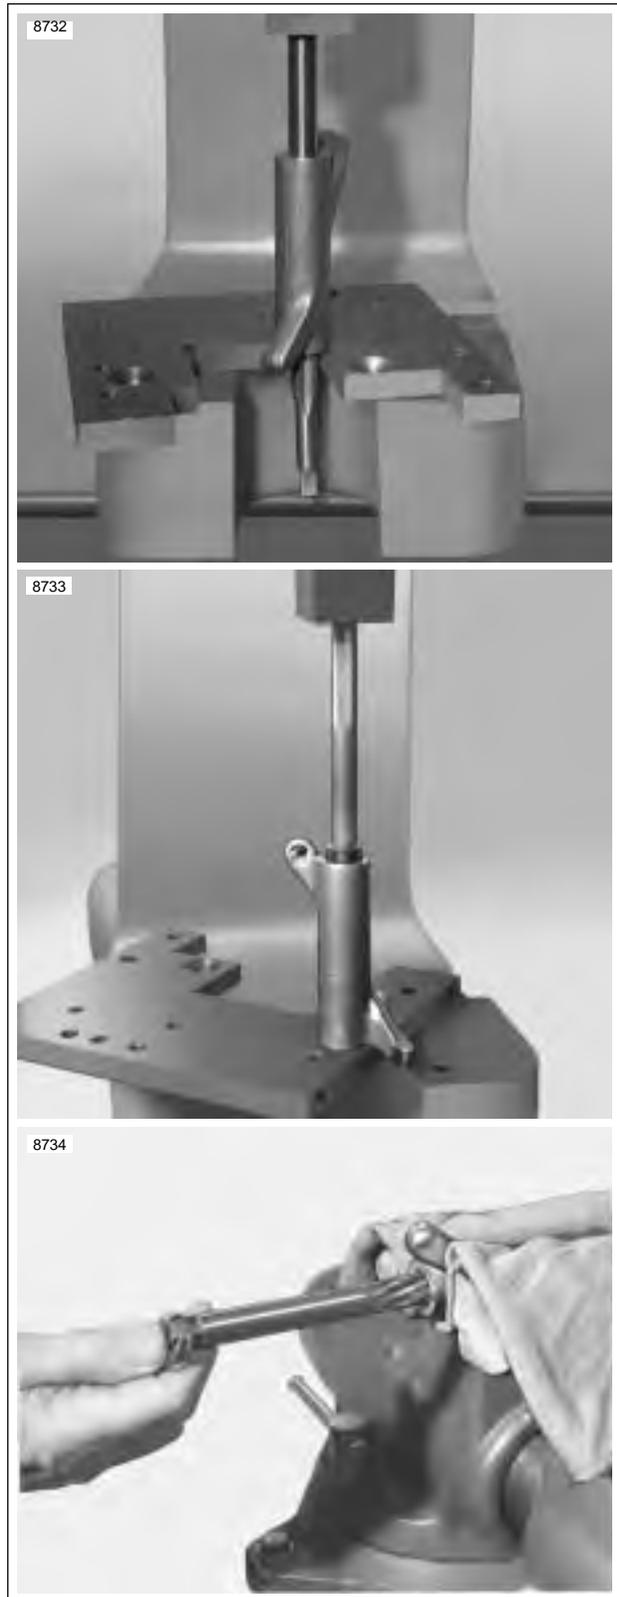


Figure 3-73. Replacing Rocker Arm Bushings

Replacing Valve Guides

Valve guide replacement, if necessary, must be done before valve seat is ground. It is the valve stem hole in valve guide that determines seat grinding location. Valve stem-to-valve guide clearances are listed in [Table 3-18](#). If valve stems and/or guides are worn beyond limits, install **new** parts.

Table 3-18. Valve Stem Clearances and Service Wear Limits


| VALVE | CLEARANCE | SERVICE WEAR LIMIT |
|---------|-------------------------------------|---------------------------|
| Exhaust | 0.001-0.003 in. (0.025-0.076 mm) | 0.0035 in. (0.0889 mm) |
| Intake | 0.001-0.003 in. (0.025-0.076 mm) | 0.0035 in. (0.0889 mm) |

- To remove shoulderless guides, press or tap guides toward combustion chamber using VALVE GUIDE REMOVER/INSTALLER (Part No. B-45524).
- Clean and measure valve guide bore in head.
- Measure outer diameter of a new standard valve guide. The guide diameter should be 0.0020-0.0033 in. (0.0508-0.0838 mm), larger than bore in head. If clearance is not within specification, select oversize valve guide and machine valve guide O.D. as needed.
- See [Figure 3-74](#). Install shoulderless guides using VALVE GUIDE REMOVER/INSTALLER TOOL (Part No. B-45524). Press or drive guide until the tool touches the machined surface surrounding the guide. At this point, the correct guide height has been reached.
- Ream guides to final size or within 0.0010 in. (0.0254 mm) of final size using VALVE GUIDE REAMER (Part No. B-45523). Use REAMER LUBRICANT (Part No. HD-39964) or liberal amounts of suitable cutting oil to prevent reamer chatter.

NOTE


The hone is not intended to remove material.

- Apply the proper surface finish to the valve guide bores using the VALVE GUIDE HONE (Part No. B-45525). Lubricate hone with honing oil. Driving hone with an electric drill, work for a crosshatch pattern with an angle of approximately 60°.
- See [Figure 3-75](#). Thoroughly clean valve guide bores using VALVE GUIDE BRUSH (Part No. HD-34751) and hot soapy water.

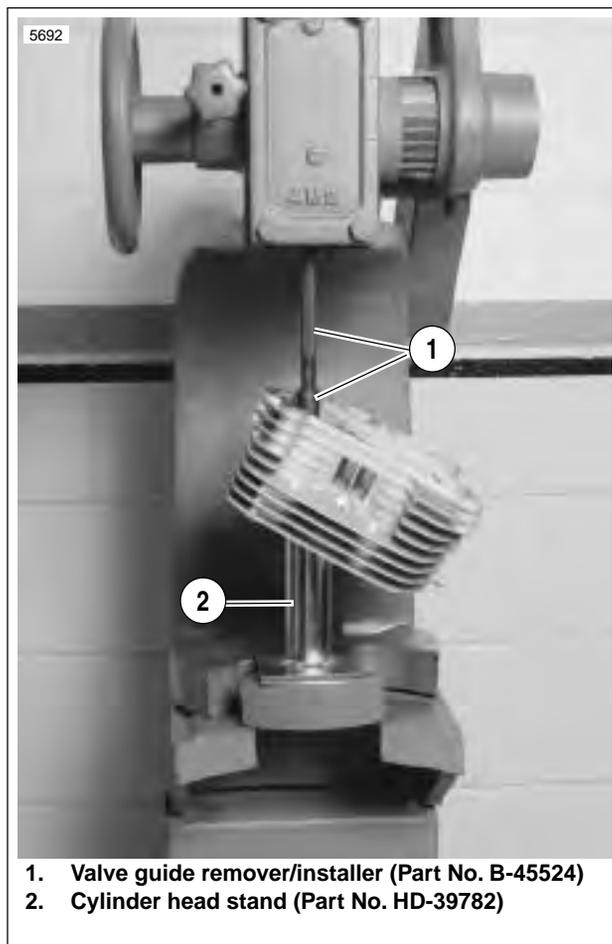

1. Valve guide remover/installer (Part No. B-45524)
2. Cylinder head stand (Part No. HD-39782)

Figure 3-74. Installing Shoulderless Valve Guide

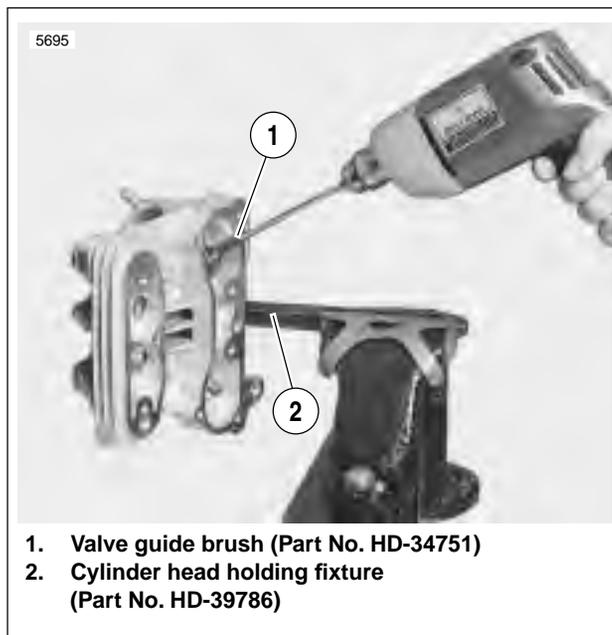

1. Valve guide brush (Part No. HD-34751)
2. Cylinder head holding fixture (Part No. HD-39786)

Figure 3-75. Cleaning Valve Guides

PROCEDURE FOR USING THE NEWAY VALVE SEAT CUTTER

Table 3-19. Neway Valve Seat Cutter

| PART NO. | SPECIALTY TOOL |
|-----------|-------------------------------|
| HD-35758A | Neway valve seat cutter |
| HD-39786 | Cylinder head holding fixture |

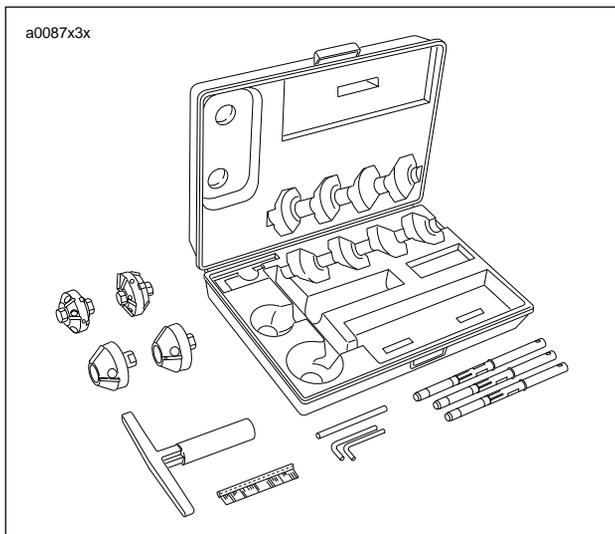


Figure 3-76. Neway Valve Seat Cutter

NOTES

- Verify correct valve stem to valve guide clearance before refacing. See [Table 3-18](#). If **new** guides must be installed, complete that task before refacing valves and seats.
 - This procedure is not based on the lapping of valves. The end result is an interference fit between the valve of 45° and the valve seat which will be 46°.
1. Secure cylinder head for service.
 - a. Thread 12 mm end of CYLINDER HEAD HOLDING FIXTURE (Part No. HD-39786) into cylinder head spark plug hole.
 - b. Clamp tool in vise and further tighten cylinder head onto the fixture to prevent any movement during operation.
 - c. Place cylinder head at a 45° angle or one that offers a comfortable working position.

2. Obtain the NEWAY VALVE SEAT CUTTER SET (HD-35758A) and cut valve seat angle to 46°. Do not remove any more metal than is necessary to clean up the seat (that is, to provide a uniform finish and remove pitting).
3. In order to determine the correct location of the 46° valve seat in the head, measure the width of the valve to be used and subtract 0.080 in.(2.032 mm) from that number.
4. Set your dial caliper to the lesser measurement and lock down for quick reference. This is the location of your valve seat.
5. Use a permanent magic marker to highlight the valve seat area that is going to be cut and be sure to highlight all 3 angles. Allow marker to dry before proceeding.

NOTES

- Always ensure cutter blades and cutter pilot are clean before beginning the cutting process. The correct cleaning brush is supplied with the Neway tool set.
 - Also ensure the inside of the valve guide is clean by using Kent-Moore cleaning brush (Part No. HD-34751).
6. Choose the cutter pilot that fits properly into the valve guide hole and securely seat the pilot by pushing down and turning using the installation tool supplied in the tool set.
 7. Choose the proper 46° cutter (intake or exhaust) and gently slide the cutter onto the pilot being careful not to drop the cutter onto the seat.
 8. While applying a constant and consistent pressure, remove just enough material to show a complete clean-up on the 46° angle.

NOTES

- If the width of the clean-up angle is greater on one side of the seat than the other, the guide may need to be replaced due to improper installation.
- After making the 46° cut, if you discover a groove cut completely around the seat this means the blades of the cutter are in alignment and need to be staggered. This is accomplished by loosening all of the blades from the cutter body and moving each blade slightly in it's cradle in opposite directions on the cutter. The tool needed to loosen the blades is supplied in the tool set. A permanent magic marker mark every 90° will help in determining where new angles are.

9. Next, with your dial caliper locked to the predetermined setting, measure the 46° cut at the outer most edge at the widest point of the circle to determine what cut needs to be made next.
 - a. If the 46° cut is too high (towards the combustion chamber), use the 31° cutter to lower the valve seat closer to the port.
 - b. If the 46° cut is too low, use the 60° cutter to raise the valve seat or move it away from the port.

NOTES

- Due to using the top measurement of our valve seat as a reference point it will usually be necessary to use the 31° cutter following the initial 46° cut.
 - Always highlight the valve seat with the permanent magic marker in order to ensure the location of the 46° valve seat.
10. If the location of the valve seat is not correct, repeat steps 8 and 9.
 11. When you accomplish a complete clean-up of the 46° angle and the width is at least 0.062 in. (1.575 mm), proceed to the next step.

12. Select the proper 60° cutter and gently slide the cutter down the cutter pilot to the valve seat.
13. Remove just enough material to provide an even valve seat width of .040-0.062 in. (1.016-1.575 mm).
14. Remove cutter pilot and wash head thoroughly and dry completely.
15. Repeat the process on any valve seat that needs service.
16. Insert valve to be used in the valve guide and bottom on the valve seat. Positioning the cylinder head port upwards and with slight thumb pressure against the valve, completely fill the port with solvent to verify proper seal between the valve and the valve seat.

NOTE

Hold pressure against the valve for a minimum of 10 seconds. If any leakage occurs, examine the valve seat for irregularities or defects and if necessary repeat the above cutting process.


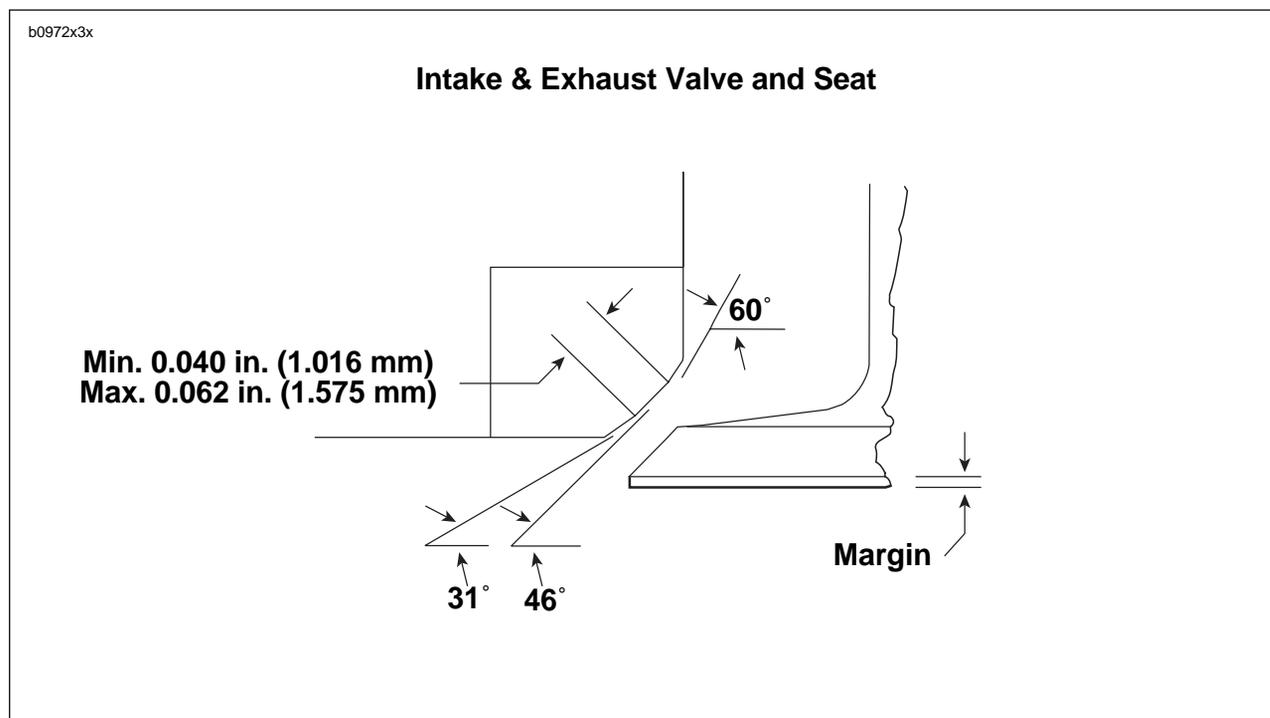


Figure 3-77. Valve and Seat Dimensions

b1024x3x

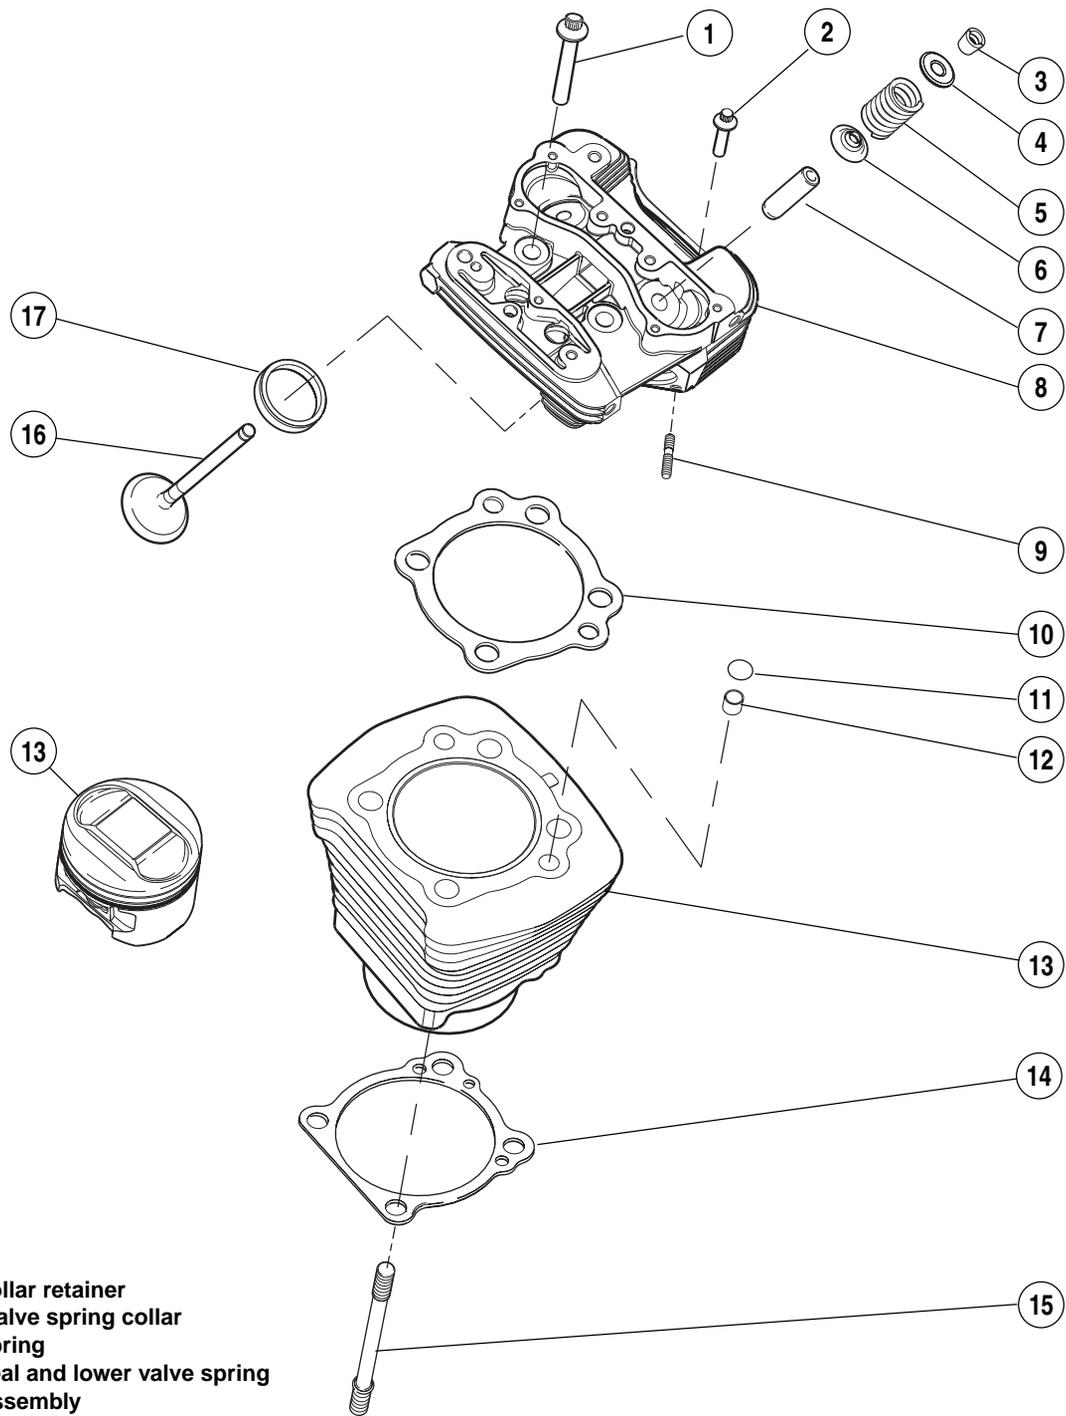

1. Screw
2. Screw
3. Valve collar retainer
4. Upper valve spring collar
5. Valve spring
6. Valve seal and lower valve spring collar assembly
7. Valve guide intake & exhaust (2)
8. Cylinder head
9. Exhaust port stud
10. Cylinder head gasket
11. Cylinder o-ring (4)
12. Cylinder insert
13. Cylinder w/piston & rings
14. Cylinder base gasket
15. Cylinder base stud
16. Exhaust valve
17. Exhaust valve seat

Figure 3-78. Cylinder Head, Cylinder and Piston Assembly

ASSEMBLY

1. Wash cylinder head and valves in warm, soapy water to remove all debris from cutting valve seats.
2. Scrub valve guide bores with VALVE GUIDE BRUSH (Part No. HD-34751) and hot, soapy water.

WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

3. Blow dry with compressed air.
4. Apply a liberal amount of engine oil to the valve stem.
5. See [Figure 3-78](#). Insert valve into valve guide and bottom valve on valve seat.



Figure 3-79. Valve Guide Seal Protector Sleeve

6. See [Figure 3-79](#). Place a protective sleeve over the valve stem keeper groove.

CAUTION

Failure to use a protective sleeve on the valve stem keeper groove when installing the valve stem seal and collar assembly will result in damage to the seal causing leakage around the valve stem, excessive oil consumption and valve sticking.



Figure 3-80. Valve Seal and Lower Collar Assembly (seal and lower collar replaced as assembly only)

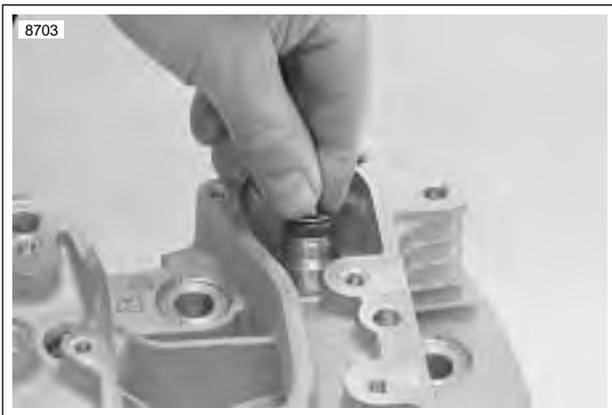


Figure 3-81. Valve Seal and Lower Collar Assembly Installation

7. See [Figure 3-81](#). Coat the sleeve with oil and place a **new** seal and lower collar assembly over the valve stem and onto valve guide.

NOTES

- See [Figure 3-80](#). The valve seal is now incorporated into the lower collar and is installed by hand. **NO SPECIAL TOOLS ARE REQUIRED.**
- The seal is completely installed when the lower collar contacts the machined surface of the head.

CAUTION

Do not remove valve after seal is installed. Otherwise, sharp edges on keeper groove will damage seal.

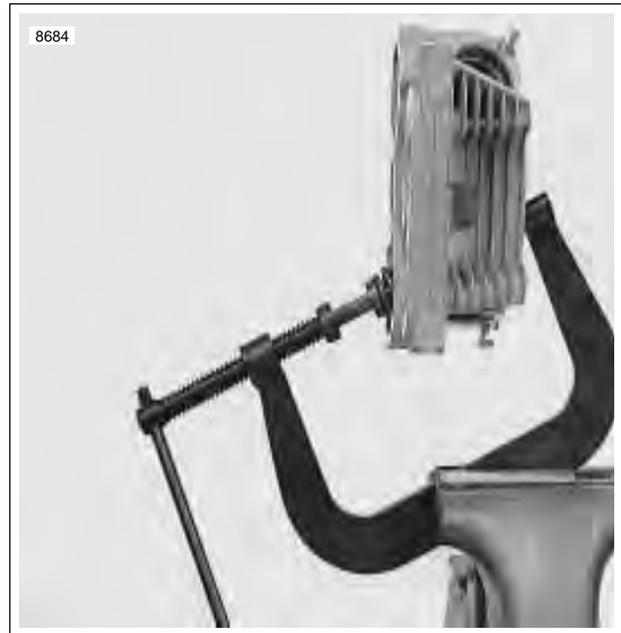


Figure 3-82. Valve Spring Compressor (Part No. HD-34736B)

8. Install valve spring and upper collar.
9. See [Figure 3-82](#). Compress spring with VALVE SPRING COMPRESSOR (Part No. HD-34736B).

NOTE

The XB Firebolt utilizes a single valve spring for each valve. The inner and outer springs are combined into one tapered spring that is progressively wound.

10. Insert valve keepers into upper collar, making sure they engage grooves in valve stem.
11. Release and remove from VALVE SPRING COMPRESSOR.
12. Repeat steps 4-11 for the remaining valve.

PUSH ROD COVER INSTALLATION


NOTE

Push rod covers must be installed prior to installing cylinder heads.



Figure 3-83. Push Rod Locations

1. See Figure 3-84. Install push rod covers.
 - a. Install **new** o-rings (2) on top of each push rod cover (3).
 - b. Install **new** push rod cover gasket (5) onto bottom of each push rod cover.
 - c. Install each push rod cover assembly and start the fasteners (4) securing the bottom of each cover to the crankcase.
 - d. Tighten fasteners to 30-40 **in lbs** (3.4-4.5 Nm).
2. See Table 3-20. Identify push rod color coding, length and respective push rod positions in engine. Place intake and exhaust push rods onto seat at top of tappet.

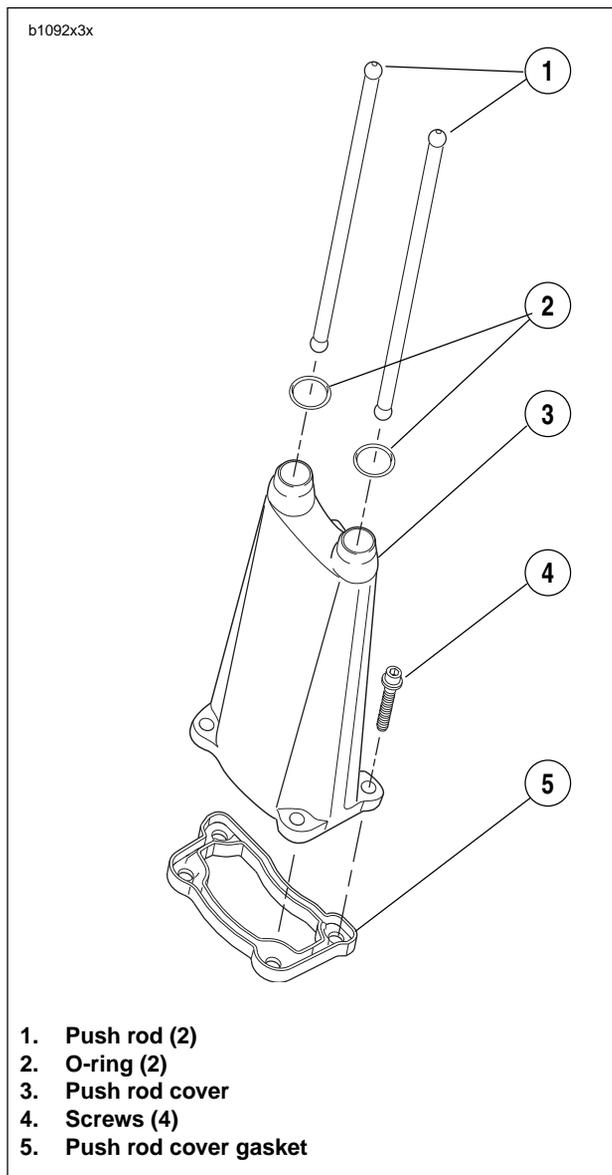

1. Push rod (2)
2. O-ring (2)
3. Push rod cover
4. Screws (4)
5. Push rod cover gasket

Figure 3-84. Push Rods and Push Rod Cover Assembly

Table 3-20. Push Rod Selection

| POSITION | COLOR CODES | LENGTH | PART NO. |
|----------|-------------------------|----------------------------|----------|
| Exhaust | 1 Band- Pink/Purple | 10.780 in. (274.320 mm) | 17908-02 |
| Intake | 1 Band- Orange/Brown | 10.726 in. (272.948 mm) | 17909-02 |

CAUTION

After head(s) have been installed do not turn engine over until both push rods can be turned with fingers. Otherwise, damage to push rods or rocker arms may result.

CYLINDER HEAD INSTALLATION

NOTE

Short head bolts will be installed in the 1 and 2 positions, and long head bolts in the 3 and 4 positions.

CAUTION

Thoroughly clean and lubricate the threads of the cylinder head screws before installation. Friction caused by dirt and grime will result in a false torque indication.

1. Thoroughly clean and dry the gasket surfaces of cylinders and cylinder heads.
2. Install **new** O-rings over two ring dowels at the top of the cylinder. Apply a very thin film of clean H-D 20W50 engine oil to O-rings before installation.

CAUTION

To ensure proper head gasket alignment, install new O-rings over cylinder ring dowels before installing the head gasket. Improper head gasket alignment will cause leaks.

3. Install a **new** head gasket to cylinder.
4. Carefully lower cylinder head over studs and position on dowels. Use great care so as not to disturb head gasket.
5. Lightly coat the threads and bottom face of the cylinder head bolts with clean H-D 20W50 engine oil. Wipe off any excess oil.

CAUTION

The procedure for tightening the head screws is critical to proper distribution of pressure over gasket area. It prevents gasket leaks, stud failure, and head and cylinder distortion. Always tighten in sequence shown.

6. Start the cylinder head screws onto the cylinder studs, two short bolts on the left side of the engine, two long bolts on the right.
7. See [Figure 3-85](#). For each cylinder head, start with screw numbered one, as shown. In increasing numerical sequence (i.e. – 1, 2, 3 and 4):
 - a. Tighten bolts to 96-120 **in-lbs** (11-14 Nm).
 - b. Tighten bolts to 13-15 **ft-lbs** (18-20 Nm).
 - c. Loosen all screws.
8. After screws are loosened from initial torque, tighten head screws in three stages. Tighten fasteners in increasing numerical sequence (i.e. – 1, 2, 3 and 4).
 - a. Tighten each screw to 96-120 **in-lbs** (11-14 Nm).
 - b. Tighten each screw to 13-15 **ft-lbs** (18-20 Nm).
 - c. See [Figure 3-86](#). Mark cylinder head and head screw shoulder with a line as shown (View A).
 - d. Turn all bolts an additional 85° -95° .

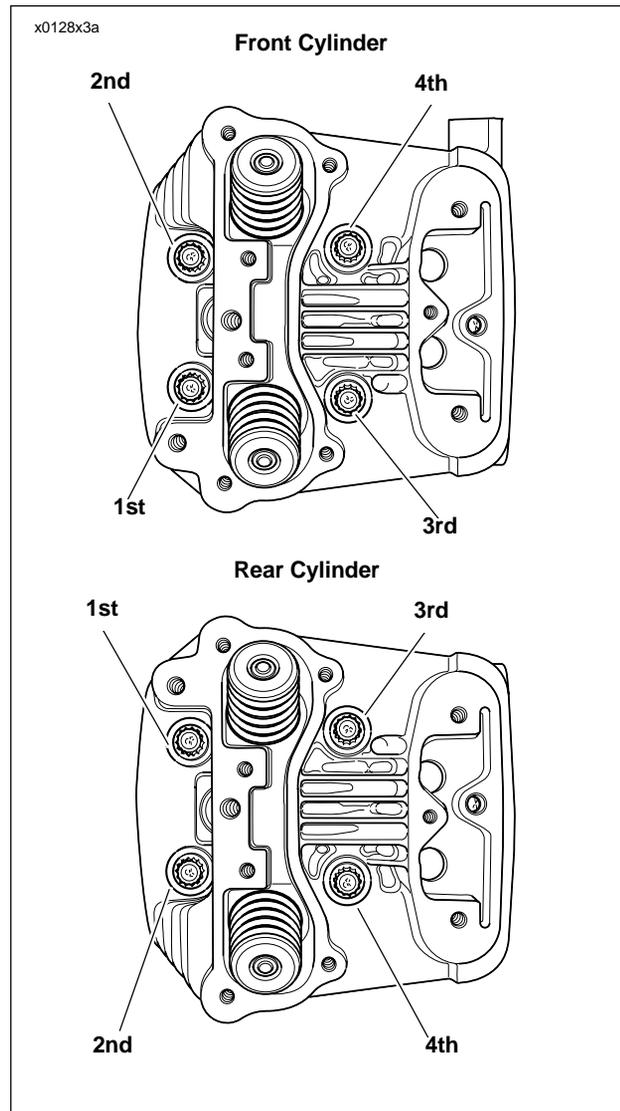


Figure 3-85. Head Screw Loosening/Tightening Sequence


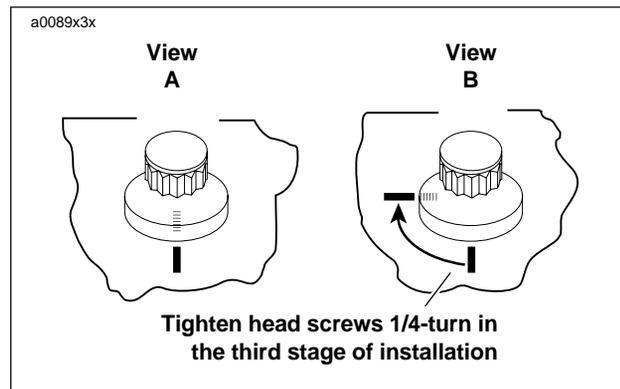


Figure 3-86. Tightening Head Screws

1. Crankcase breather
2. Grommet
3. Screw (4)
4. Washer (4)
5. Gasket (4)
6. Rocker cover (top)
7. Bolt (3)
8. Washer (3)
9. Gasket (inner)
10. Gasket (lower)
11. Rocker arm shafts
12. Bolt (2)
13. Washer (2)
14. Rocker cover (lower)
15. Rocker arm (2)
16. Bushing (rocker arm - 4)
17. Gasket (lower rocker cover)
18. Hydraulic lifter
19. Screw, tappet anti-rotation (2)
20. Gasket (push rod cover)
21. Push rod cover
22. Screw (4)
23. O-ring (push rod cover - 2)
24. Push rod
25. Washer (4)
26. Bolt (4)

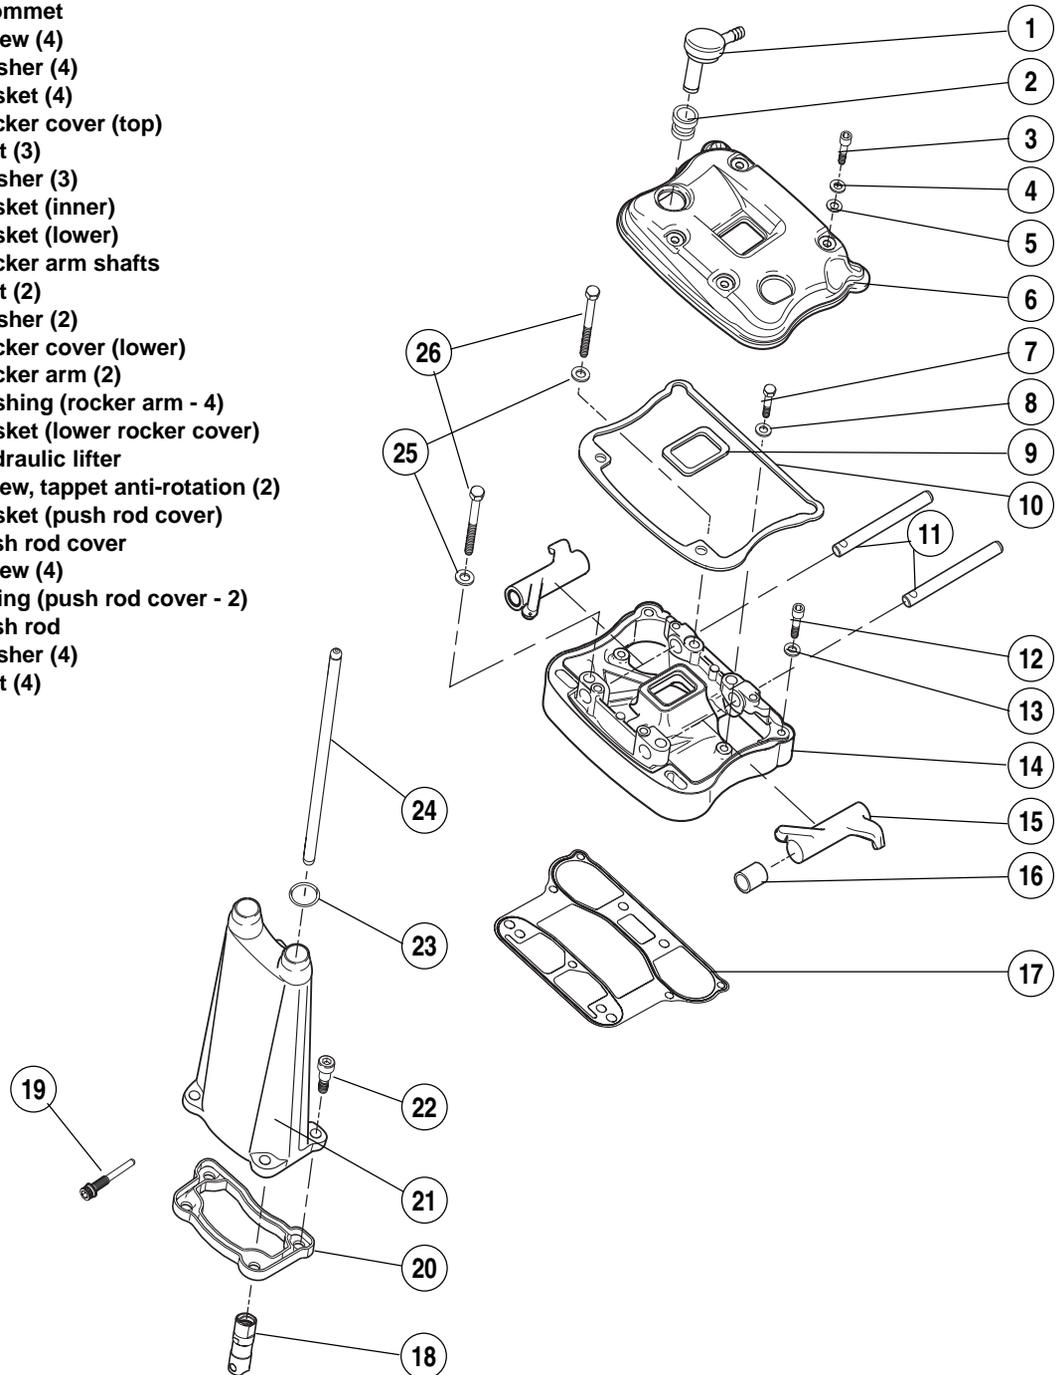

b0960x3x

Figure 3-87. Rocker Arm and Pushrod Cover Assemblies

9. See [Figure 3-88](#). Install **new** gaskets with the bead facing up. Place lower rocker box assembly (with rocker arms and shafts) into position. Place push rods in rocker arm sockets.

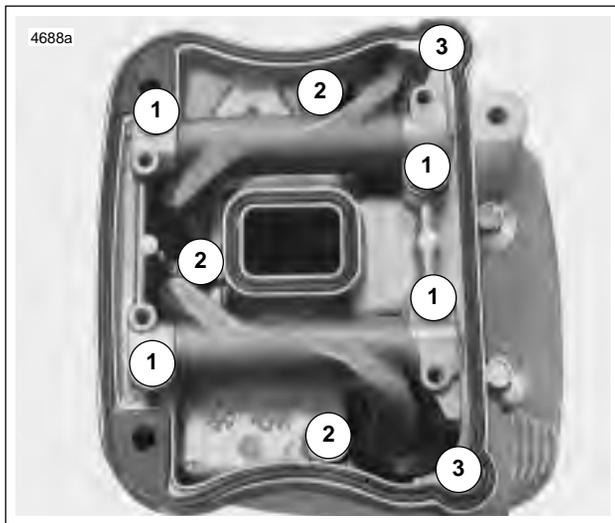


Figure 3-88. Lower Rocker Box Fasteners

Table 3-21. Lower Rocker Box Fasteners

| No. | ITEM | SIZE | TORQUE |
|-----|----------------|-----------------|-------------------------------------|
| 1 | Bolt w/washer | 5/16-18 X 2-1/2 | 18-22 ft-lbs (24-30 Nm) |
| 2 | Bolt w/washer | 1/4-20 X 1-1/4 | 11-13 ft-lbs (15-18 Nm) |
| 3 | Screw w/washer | 1/4-20 X 1-1/2 | 135-155 in-lbs (15-18 Nm) |

10. See [Figure 3-88](#). Install hardware attaching lower rocker cover to cylinder head in the following order. After loosely installing all fasteners, use a cross pattern on the four large bolts that fasten the lower rocker box to head to tighten and then torque to specifications. This will bleed the tappets. Finish tightening remaining fasteners. Fastener sequences, sizes and torque specifications are listed in [Table 3-21](#).
- Tighten bolts (1) to 18-22 ft-lbs (24-30 Nm).
 - Tighten bolts (2) to 135-155 **in-lbs** (15-18 Nm).
 - Tighten bolts (3) to 135-155 **in-lbs** (15-18 Nm).
11. See [Figure 3-87](#). Install upper rocker covers.
- Place a **new** inner gaskets on lower rocker box assemblies.
 - Place a **new lower** gaskets on lower rocker cover.
 - Install upper rocker cover using screws with washers and **new** fiber seals. Tighten screws to 120-168 **in-lbs** (13.6-19.0 Nm).

REMOVAL/DISASSEMBLY

1. Strip motorcycle as described under 3.4 STRIPPING MOTORCYCLE FOR ENGINE SERVICE.
2. Remove cylinder head. See 3.6 CYLINDER HEAD.
3. Clean crankcase around cylinder base to prevent dirt and debris from entering crankcase while removing cylinder.
4. See Figure 3-89. Turn engine over until piston of cylinder being removed is at bottom of its stroke.
5. Carefully raise cylinder just enough to permit placing clean towel under piston to prevent any foreign matter from falling into crankcase.

NOTE

If cylinder does not come loose, lightly tap a plastic hammer perpendicular to the cylinder fins. Never try to pry a cylinder up.

6. Carefully lift cylinder over piston and cylinder studs. Do not allow piston to fall against cylinder studs. Discard cylinder base gasket.

CAUTION

With cylinder removed, be careful not to bend the cylinder studs. The slightest bend could cause a stress riser and lead to stud failure.


7. Install a 6 in. (152 mm) length of 1/2 in. (12.7 mm) ID plastic or rubber hose over each cylinder stud. This will protect the studs and the piston.

WARNING

Retaining rings are highly compressed in the ring groove and may "fly out" with considerable force when pried out. Always wear safety glasses or goggles when removing or installing retaining rings. Failure to wear safety glasses or goggles could result in death or serious injury.

CAUTION

DO NOT re-use piston pin retaining rings. Removal may weaken retaining rings and they may break or dislodge if reinstalled resulting in engine damage.

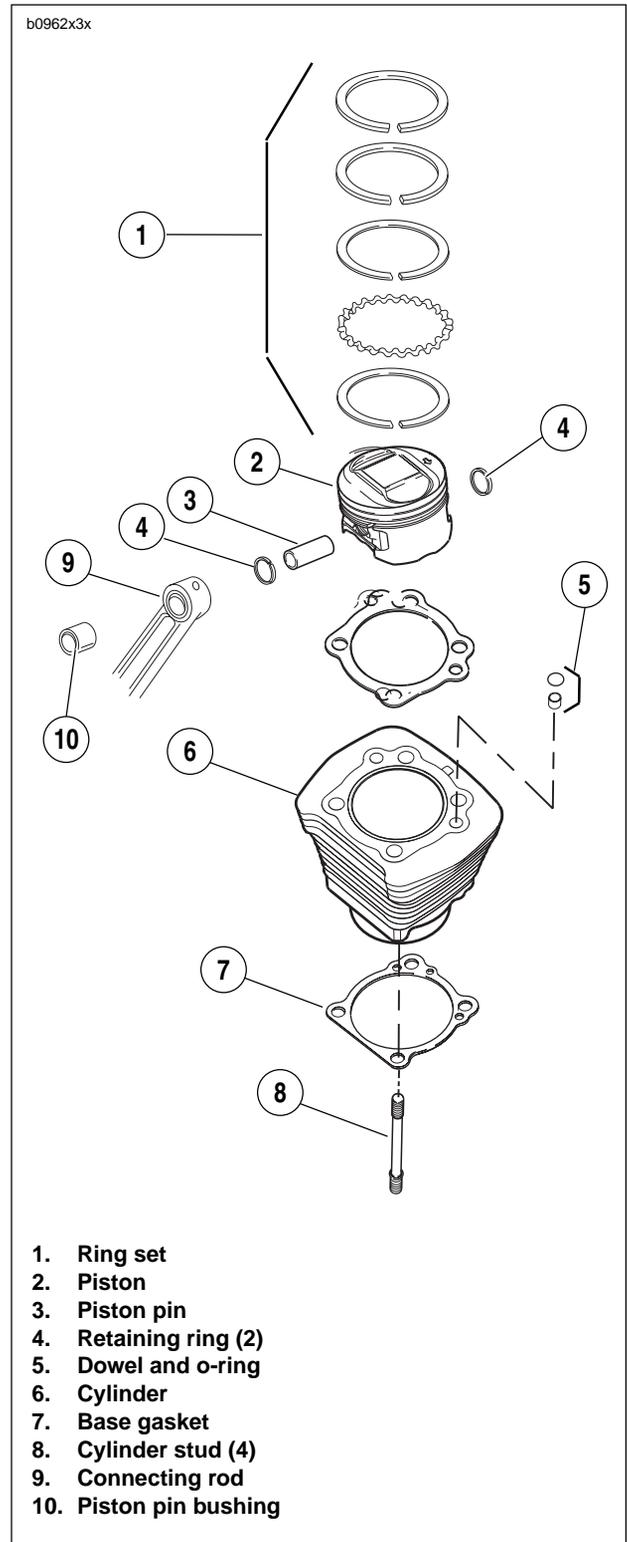

1. Ring set
2. Piston
3. Piston pin
4. Retaining ring (2)
5. Dowel and o-ring
6. Cylinder
7. Base gasket
8. Cylinder stud (4)
9. Connecting rod
10. Piston pin bushing

Figure 3-89. Cylinder and Piston

CAUTION

Handle the piston with extreme care. The alloy used in these pistons is very hard. Any scratches, gouges or other marks in the piston could score the cylinder during engine operation and cause engine damage.

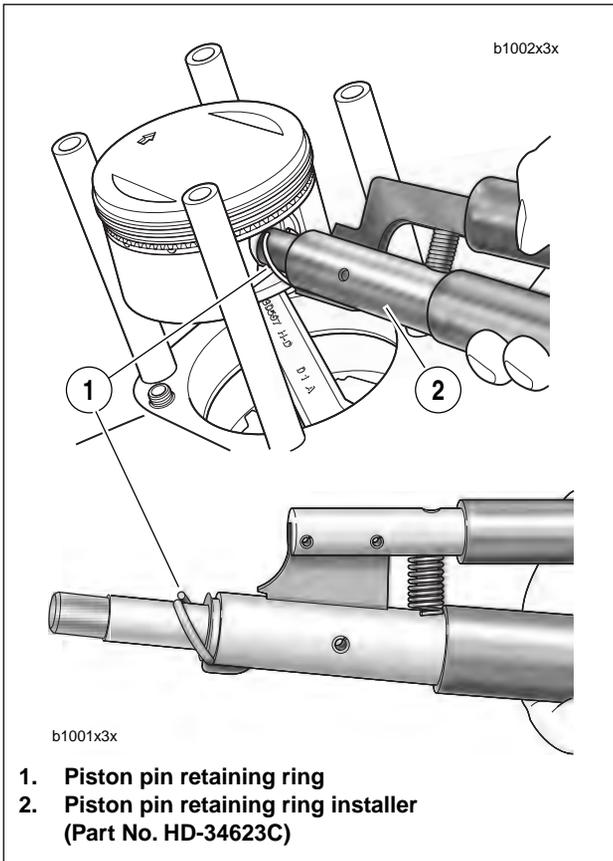


Figure 3-90. Removing Piston Pin Circlip

8. See [Figure 3-90](#). Remove the piston pin circlip as follows:
 - a. Insert the PISTON PIN CIRCLIP REMOVER/INSTALLER (Part No. HD-34623C) into the piston pin bore until claw on tool is positioned in slot of piston (directly under circlip).
 - b. Squeeze the handles of the tool together and pull from bore. In the event that the circlip should fly out, hold a shop towel over the bore during removal. Remove circlip from claw and discard.

NOTES

- It is not necessary to remove **both** piston pin circlips during piston removal. Leave the second circlip in the pin bore.
- Since the piston pin is a loose fit in the piston, the pin will easily slide out. The pin has tapered ends to help seat the round retaining rings.

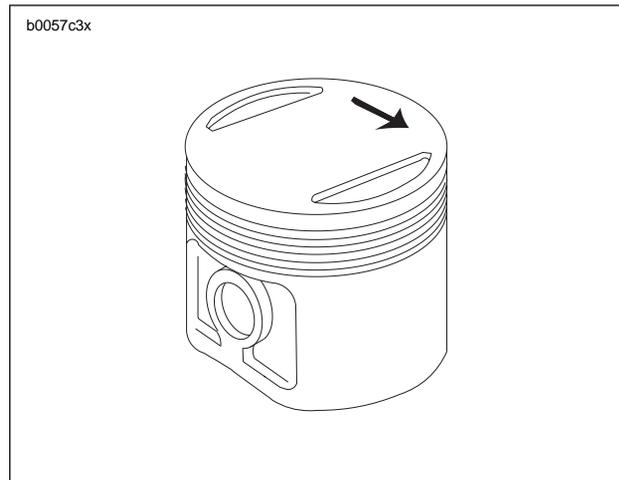


Figure 3-91. Piston Pin and Piston Identification

NOTE

See [Figure 3-91](#). The arrow at the top of pistons must always point toward the front of the engine.



Figure 3-92. Removing Piston Rings

9. See [Figure 3-92](#). To remove piston rings spread outward until they clear grooves in piston and lift off.

CLEANING AND INSPECTION

WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

1. Soak cylinder and piston in an aluminum-compatible cleaner/solvent until deposits are soft, then clean with a brush. Blow off loosened carbon and dirt particles and wash in solvent.
2. Clean oil passage in cylinder with compressed air.
3. Clean piston ring grooves with a piece of compression ring ground to a chisel shape.
4. Examine piston pin to see that it is not pitted or scored.
5. Check piston pin bushing to see that it is not loose in connecting rod, grooved, pitted or scored.
 - a. A piston pin properly fitted to upper connecting rod bushing has a 0.00125-0.00175 in. (0.03175-0.04445 mm) clearance in bushing.
 - b. See Connecting Rod Bushing section. If piston pin-to-bushing clearance exceeds 0.00200 in. (0.05080 mm), replace worn parts.
6. Clean piston pin retaining ring grooves.
7. Examine piston and cylinder for cracks, burnt spots, grooves and gouges.
8. Check connecting rod for up and down play in lower bearings. When up and down play is detected, lower bearing should be refitted. This requires removing and disassembling engine crankcase.

Checking Gasket Surface

CAUTION

If cylinder gasket surface does not meet flatness specifications, replace cylinder and piston. Proper tolerances will extend component life and prevent leaks.

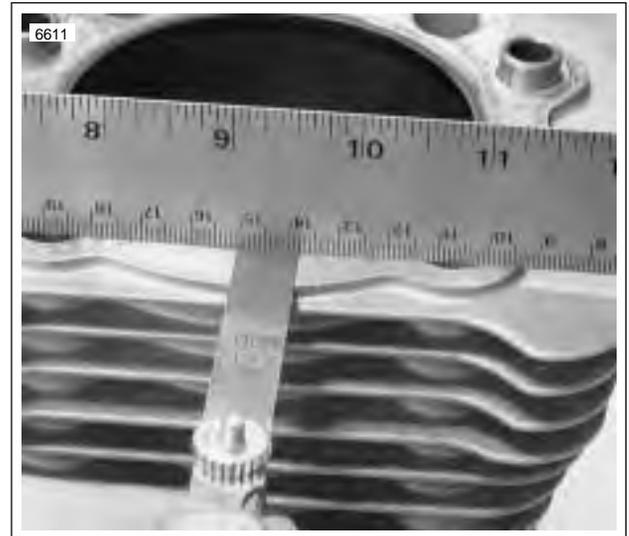


Figure 3-93. Checking Gasket Surfaces

1. See [Figure 3-93](#). Check cylinder head gasket surface for flatness.
 - a. Lay a straightedge across the surface.
 - b. Try to insert a feeler gauge between the straightedge and the gasket surface.
 - c. If cylinder head gasket surface is not flat within 0.006 in. (0.152 mm), replace cylinder and piston.
2. Check cylinder base gasket surface for flatness.
 - a. Lay a straightedge across the surface.
 - b. Try to insert a feeler gauge between the straightedge and the gasket surface.
 - c. If cylinder base gasket surface is not flat within 0.008 in. (0.203 mm), replace cylinder and piston.

Measuring Cylinder Bore

1. Remove any burrs from the cylinder gasket surfaces.
2. See [Figure 3-94](#). Install a head gasket, base gasket and O-rings, and CYLINDER TORQUEPLATES (Part No. HD-33446B) and XL EVOLUTION TORQUE PLATE BOLTS (Part No. HD-33446-86). Tighten the bolts using the same method used when installing the cylinder head screws. See [3.6 CYLINDER HEAD](#).

NOTE

Torque plates, properly tightened and installed with gaskets, simulate engine operating conditions. Measurements will vary as much as 0.001 in. (0.025 mm) without torque plates.

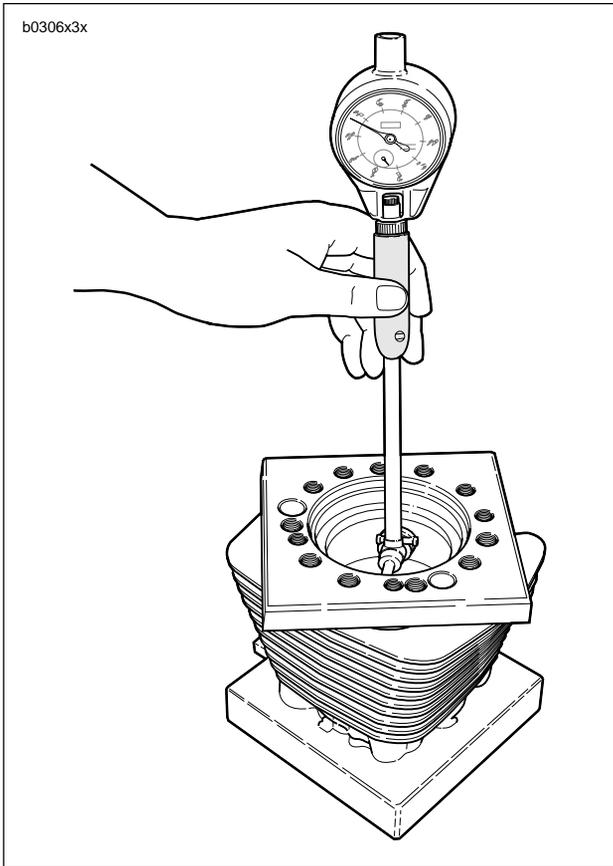


Figure 3-94. Measuring Cylinder Bore Using Torque Plates (Part No. HD-33446B)

3. See [Figure 3-94](#). Take cylinder bore measurement in ring path, starting about 0.50 in. (12.7 mm) from top of cylinder, measuring from front to rear and then side to side. Record readings.
4. Repeat measurement at center and then at bottom of ring path. Record readings. This process will determine if cylinder is out-of-round and will also show any cylinder taper or bulge.
5. See [Table 3-22](#). If cylinder is not scuffed or scored and is within service limit, see next section, [DEGLAZING CYLINDER](#).

NOTE

If piston clearance exceeds service wear limit, cylinders and pistons should be replaced with new components. See [3.1 SPECIFICATIONS](#).

Table 3-22. Cylinder Bore Service Wear Limit

| STANDARD BORE | IN. | MM |
|----------------|--------|---------|
| XB9S and XB12S | 3.5008 | 88.9203 |

Deglazing Cylinder

NOTE

Deglazing removes wear patterns, minor scuff marks and scratches without enlarging the bore diameter.

1. Lightly swab the cylinder bore with a cloth dipped in clean engine oil.
2. Obtain a 240 grit flexible ball-type deglazing tool with a bristle tip or finishing stone arrangement able to produce a 60° cross hatch pattern.
3. Install the deglazing tool in a slow-speed drill. The speed at which the tool rotates determines the speed at which it must be stroked up and down the bore to produce the desired cross hatch pattern.

CAUTION

The angular cross hatch pattern ensures an even flow of oil onto the cylinder walls and promotes longer cylinder, piston and ring life. An improper crosshatch pattern will result in insufficient oil retention and possible piston seizure and/or high oil consumption.

4. Stopping frequently to examine the bore for a cross hatch pattern and to take measurements, start at the bottom of the cylinder and move the deglazing tool up and down the entire length of the cylinder bore for 10 to 12 complete strokes.

NOTE

Deglazing must result in a precise 60° cross hatch pattern on the cylinder wall in the piston travel area.

CAUTION

Failure to remove all abrasive particles may result in premature cylinder, piston and ring wear and possible engine failure.

5. Thoroughly wash the cylinder bore with liquid dishwashing soap and warm water to remove all abrasive particles and residual grit. Continue cleaning until a clean cloth shows no evidence of dirt or debris.
6. Hot rinse the cylinder and dry with moisture free compressed air.
7. Immediately apply a thin film of clean engine oil to a clean white paper towel and thoroughly wipe the inside of the cylinder.

NOTE

After wiping the cylinder with a clean, oiled paper towel, the towel will be dark with contamination. Repeat this process using a new lightly oiled paper towel each time until the towel remains white. The cylinder is now clean.

8. With the cylinder at room temperature, check the piston clearance in the cylinder in which the piston will run. See [3.1 SPECIFICATIONS](#).

Fitting Piston Rings

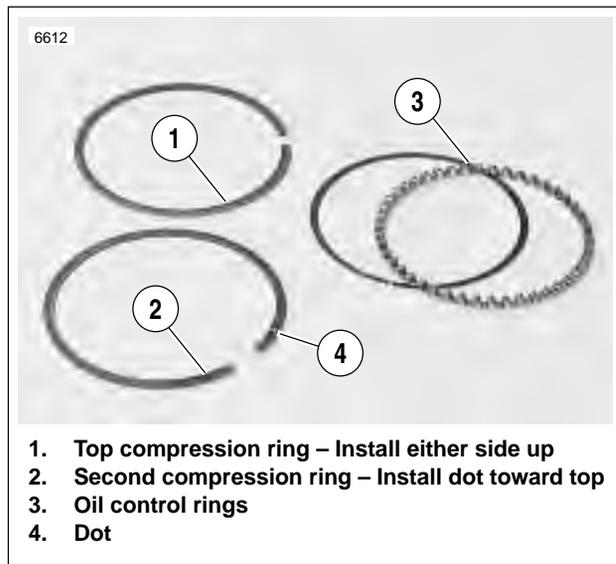


Figure 3-95. Piston Rings

NOTES

See [Figure 3-95](#). Piston rings are of two types: compression (1, 2) and oil control (3). The two compression rings are positioned in the two upper piston ring grooves. The dot (4) on the second compression ring must face upward.



Figure 3-96. Measuring Ring End Gap

1. See [Figure 3-96](#). Insert the **new** ring into the cylinder, square it in the bore using the top of the piston and measure the ring end gap with a feeler gauge. Do not use the ring if the end gap does not fall within the following specifications, See [Table 3-23](#).

Table 3-23. Piston Ring End Gap

| Ring Type | inches | mm |
|------------------------|---------------|-------------|
| Top compression ring | 0.010 - 0.020 | 0.25 - 0.51 |
| 2nd compression ring | 0.014 - 0.024 | 0.36 - 0.61 |
| Oil control ring rails | 0.010 - 0.050 | 0.25 - 1.27 |

NOTES

- The same piston may be used if cylinder bore was not changed, unless it is scuffed or grooved. If re-using piston, replace piston rings and hone the cylinder walls with a No. 240 grit flexible hone to facilitate ring seating.
- Piston ring sets must be properly fitted to piston and cylinder: Ring sets are available to fit standard and oversize pistons.

- See [Figure 3-97](#). Apply engine oil to piston grooves. Use TRANSMISSION SHAFT RETAINING RING PLIERS (Part No. J-5586) to slip compression rings over piston into their respective grooves. Be extremely careful not to over expand, twist rings or damage piston surface when installing rings.

NOTE

Install second compression ring with dot towards top.

- See [Figure 3-98](#). Install rings so end gaps of adjacent rings are a minimum of 90° apart. Ring gaps are not to be within 10° of the thrust face centerline.
- See [Figure 3-99](#). Check for proper side clearance with thickness gauge, as shown. See [3.1 SPECIFICATIONS](#).

NOTE

- If the ring grooves are clean and the side play is still not correct, replace the rings, the piston or both.*



Figure 3-97. Installing Piston Rings Transmission Shaft Retaining Ring Pliers (Part No. J-5586)

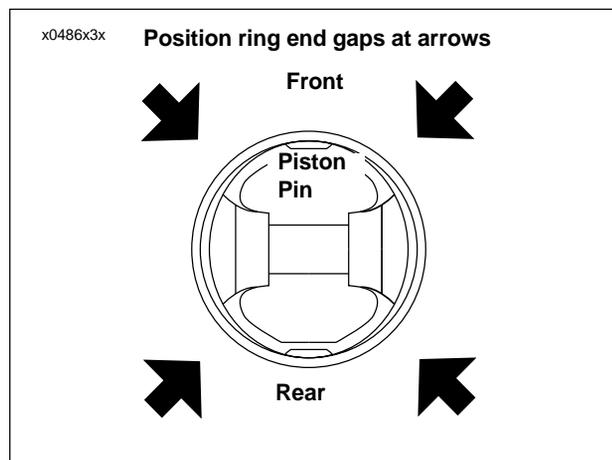


Figure 3-98. Ring End Gap Position



Figure 3-99. Measuring Ring Clearance in Groove

Connecting Rod Bushing

REMOVAL/INSTALLATION

When connecting rod bushing is worn to excessive pin clearance (0.002 in. or more) (0.051 mm) it must be replaced.

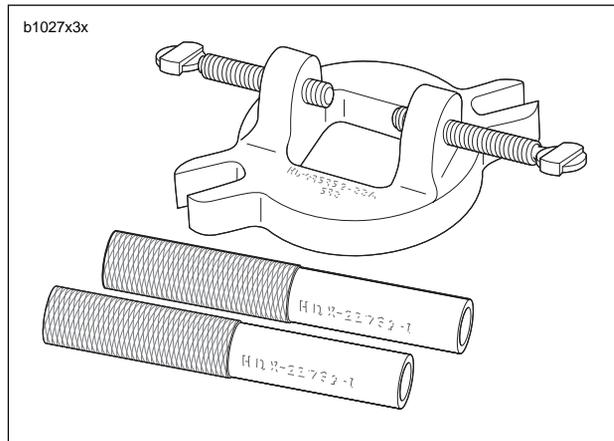


Figure 3-100. Connecting Rod Clamping Tool (Part No. HD-95952-33B)

1. See [Figure 3-100](#). Secure connecting rod with CONNECTING ROD CLAMPING TOOL (Part No. HD-95952-33B).


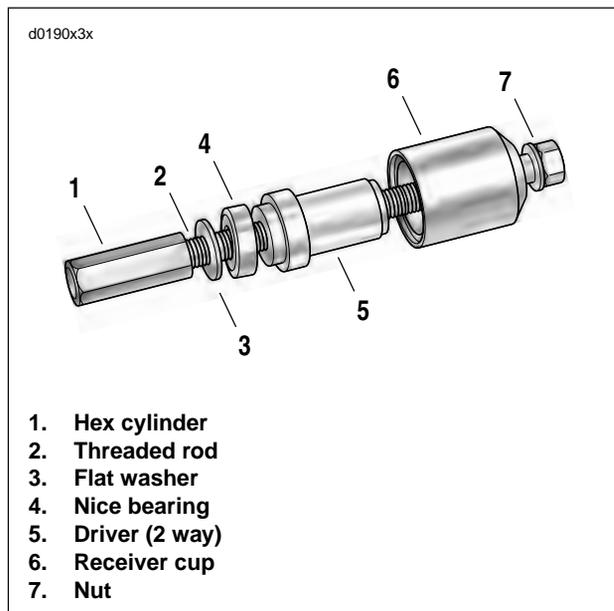


Figure 3-101. Connecting Rod Bushing Remover/Installer (Part No. HD-95970-32D)

2. See [Figure 3-101](#). Attach PISTON PIN BUSHING TOOL (Part No. HD-95970-32D) to the connecting rod.

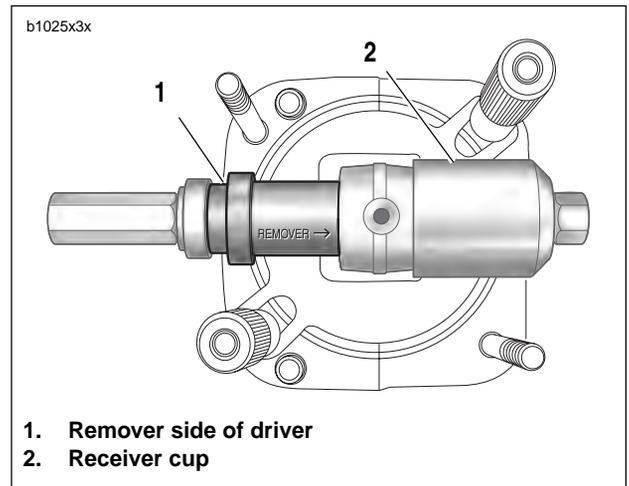


1. Remover side of driver
2. Receiver cup

Figure 3-102. Removing Wrist Pin Bushing

NOTE

See [Figure 3-102](#). The receiver cup fits on one side of the rod while the driver fits on the opposite side as shown.

3. Use two box wrenches and push worn bushing from connecting rod.
4. Remove piston pin bushing tool from connecting rod.
5. Remove bushing from receiver cup.

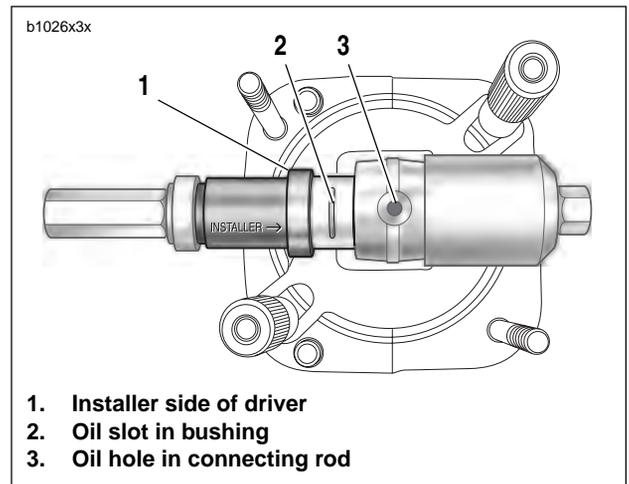

1. Installer side of driver
2. Oil slot in bushing
3. Oil hole in connecting rod

Figure 3-103. Installing New Wrist Pin Bushing

6. See [Figure 3-103](#). Place **new** bushing between connecting rod and driver.

NOTE

The driver must be attached facing the opposite direction as it was for removal of the bushing.

7. Clean up and size bushing to 0.0010-0.0005 in. (0.0254-0.0127 mm) undersize using REAMER (Part No. HD-94800-26A). Sizing bushing with less than 0.00125 in. (0.03175 mm) clearance can result in a bushing loosening and/or seized pin in rod.
- 8.hone bushing to final size using WRIST PIN BUSHING HONE (Part No. HD-35102). Use a liberal amount of honing oil to prevent damage to hone or bushing. Use care to prevent foreign material from falling into the crankcase.

ASSEMBLY/INSTALLATION

1. See [Figure 3-104](#). Place PISTON SUPPORT PLATE (Part No. HD-42322) in position as shown.



Figure 3-104. Piston Support Plate
(Part No. HD-42322)

2. Install piston assembly over connecting rod.

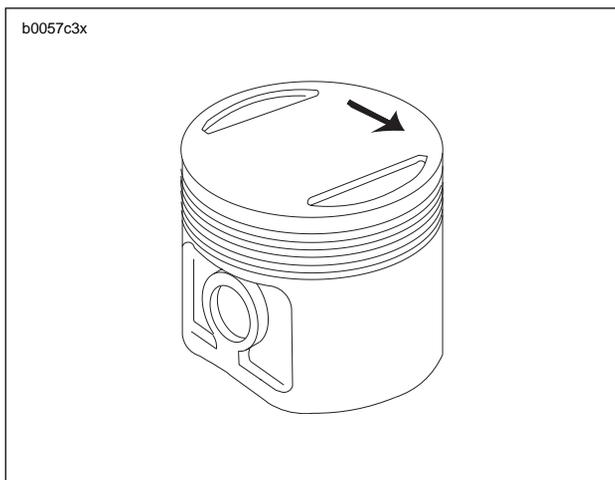


Figure 3-105. Piston Pin and Piston Identification

NOTE

See [Figure 3-105](#). Piston must be installed with the arrow, at the top of the piston, pointing towards the front of the engine.

3. Install piston pin.

CAUTION

Always use new retaining ring. Make sure retaining ring groove is clean and that ring seats firmly in groove. If it does not, discard the ring. Never install a used retaining ring or a new one if it has been installed and then removed for any reason. A loosely installed ring will come out of the piston groove and damage cylinder and piston beyond repair.

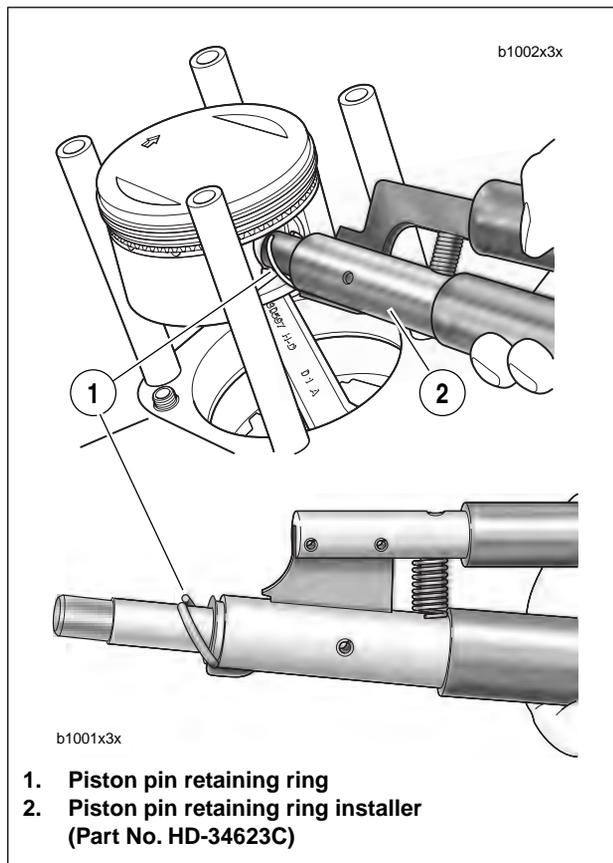


Figure 3-106. Installing Piston Pin Circlip

4. See [Figure 3-106](#). Install **new** piston pin retaining rings (1) using PISTON PIN RETAINING RING INSTALLER (2) (Part No. HD-34623C). Place **new** retaining ring on tool with gap pointing up.

NOTE

Make sure the ring groove is clean. Ring must be fully seated in the groove with the gap away from the slot at the bottom.

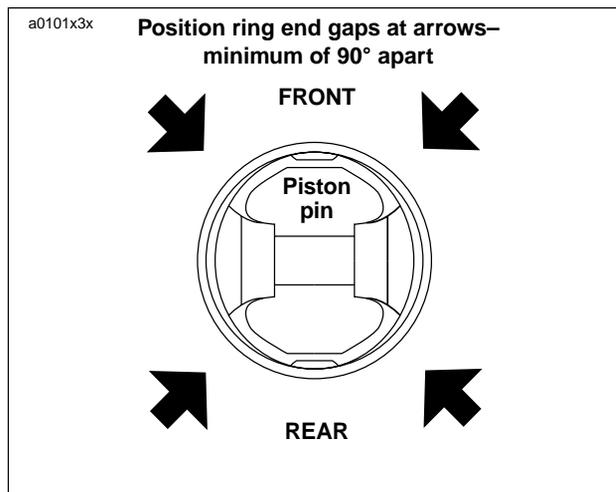


Figure 3-107. Ring End Gap Position

5. See [Figure 3-107](#). Make sure the piston ring end gaps are properly positioned as shown.



Figure 3-108. Piston Support Plate

6. See [Figure 3-108](#). Turn engine until piston is resting on top of PISTON SUPPORT PLATE (Part No. HD-42322).
7. Lubricate cylinder wall, piston, pin and rod bushing with engine oil.
8. Remove protective sleeves from cylinder studs. Install a **new** cylinder base gasket. Make sure the piston does not bump the studs or crankcase.



Figure 3-109. Compressing Piston Rings

1. **Piston ring compressor (Part No. HD-96333-51C)**
9. See [Figure 3-109](#). Compress the piston rings using PISTON RING COMPRESSOR (Part No. HD-96333-51C).
 10. Install cylinder over piston.
 11. Remove PISTON RING COMPRESSOR.
 12. Assemble and install cylinder head. See [3.6 CYLINDER HEAD](#).
 13. Install assembled engine. See [3.4 STRIPPING MOTOR-CYCLE FOR ENGINE SERVICE](#).

NOTES

CHECKING AND ADDING OIL

Check engine oil level in oil reservoir at least once every 500 miles (800 km). Check level more frequently if engine uses more oil than normal or if vehicle is operated under harsh conditions. Check oil when engine is warmed up to operating temperature (see Hot Check).

CHANGING OIL AND FILTER

After a new engine has run its first 1000 miles (1600 km) and at 5000 miles (8000 km) intervals or annually thereafter, completely drain oil reservoir of used oil. If riding habits include severe dust conditions, operation at temperature above 80° F (26.7° C), extensive idling, speeds in excess of 65 mph (105 kph) and /or extensive two up riding or similar loads the oil should be changed at 2500 mile (4000 km) intervals. Refill with fresh oil. Always change oil filter when changing engine oil.

NOTE

See [1.6 ENGINE LUBRICATION SYSTEM](#) for more information on checking oil level and changing oil and filter.

WINTER LUBRICATION

Normal fuel combustion in a gasoline engine produces water vapor and carbon dioxide along with other gases and particulates. When first starting and warming an engine, some of the water vapor that gets into the engine crankcase condenses to form liquid water. If the engine is driven long enough to thoroughly warm the crankcase, most of this liquid water is again vaporized and exhausted through the crankcase breather system.

A moderately driven vehicle making short runs may not be able to vacate water vapors allowing liquid water to accumulate in the oil reservoir. This is especially true if the vehicle is operated in cold weather. In freezing weather, an accumulation of water in the engine oil may become slush or ice, which can block oil lines and lead to severe engine damage. Water remaining in the engine oil for long periods of time can form an acidic sludge that is corrosive to metal engine parts and causes accelerated wear of moving components.

In winter the oil change interval should be shorter than normal. The colder the weather, the shorter the recommended oil change interval. A vehicle used only for short runs in cold weather must have the engine oil drained frequently.

GENERAL

See [Figure 3-110](#). Engine oil runs through the swingarm which serves as the oil reservoir. From the front of the reservoir, the vent hose, the return hose and the feed hose run downward below the crankcases. Two rubberized clamps secure the hoses in place.

The feed line exits the front of the oil pump and routes across the front of the engine to the oil cooler on the left front side of the crankcases. The feed line then exits the oil cooler and connects to the oil filter housing on the right front side of the crankcases.

The vent hose continues upward from under the vehicle to connect to an elbow fitting at the rear of the gearcase cover.

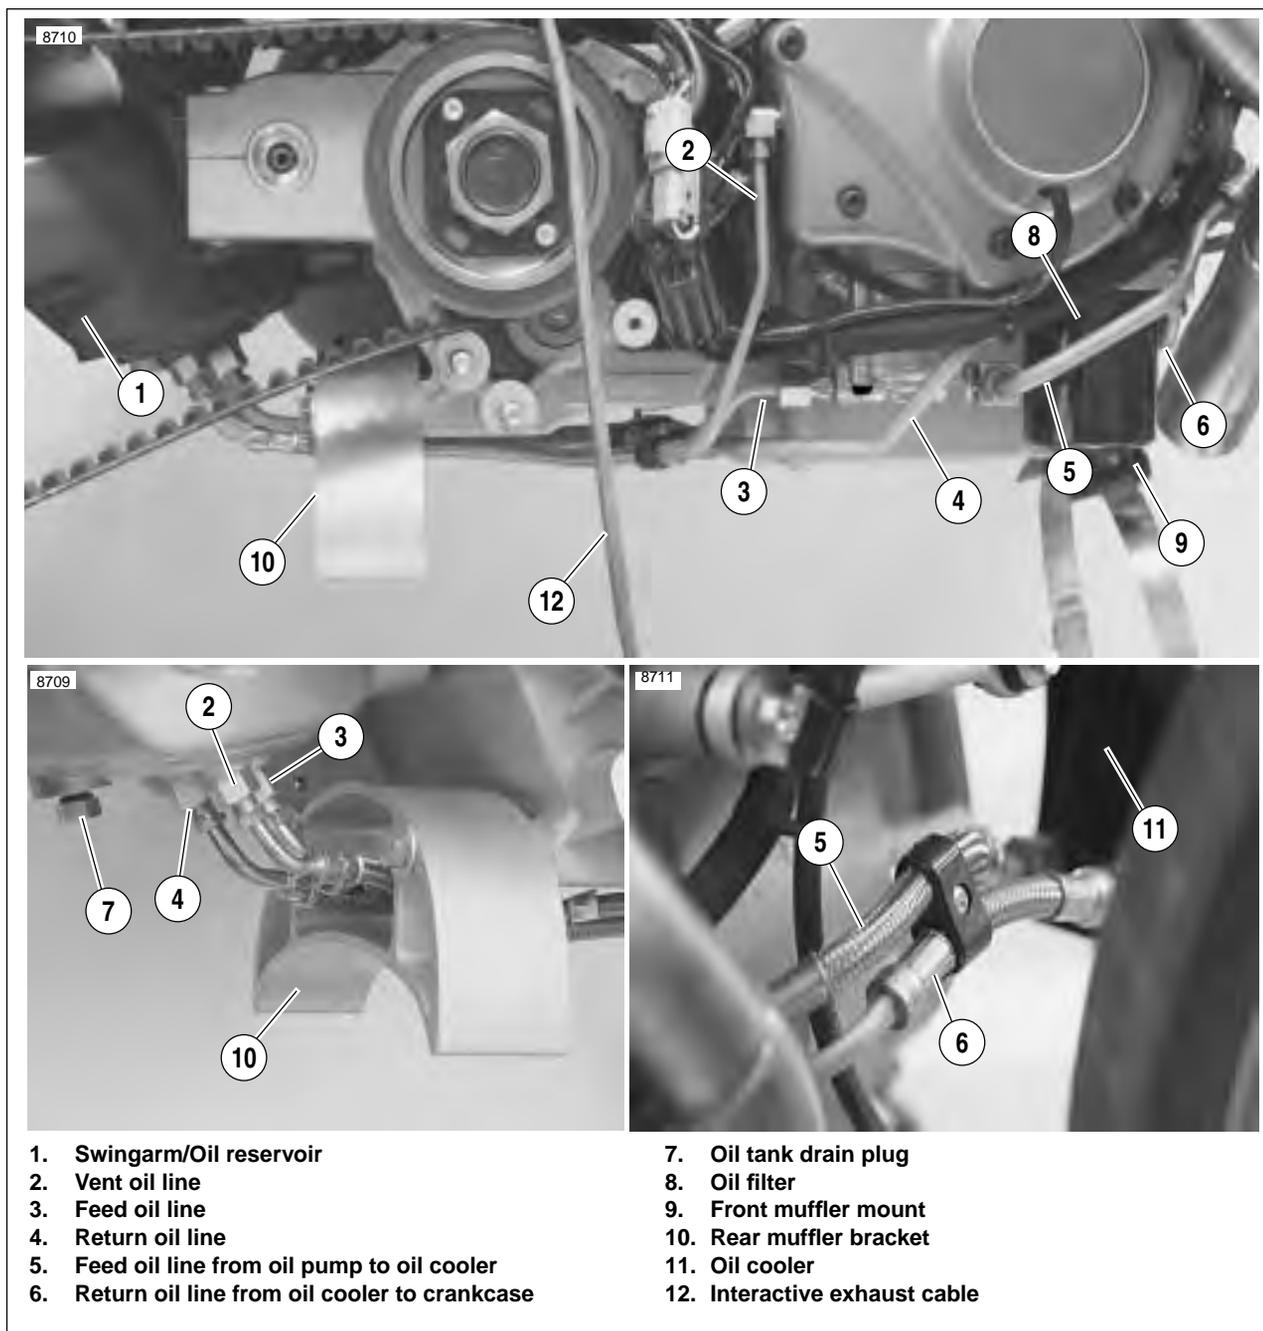


Figure 3-110. Oil Lines and Connections

GENERAL

The oil pressure indicator switch is a pressure-actuated diaphragm-type switch. When oil is not circulating through the system or when oil pressure is low, spring tension holds the switch contacts closed, thereby completing the signal light circuit and causing the indicator lamp to illuminate.

OIL PRESSURE SIGNAL LIGHT

The oil pressure signal light turns ON when:

- Ignition switch is turned on prior to starting engine.
- Oil is not circulating through the running engine.
- Oil pressure is abnormally low in the running engine.
- Engine is idling below 1000 RPM.

The oil pressure signal light turns OFF when:

- Oil is circulating with adequate pressure through the engine running at 1000 RPM or greater.

Troubleshooting information is listed in [Table 3-24](#).

NOTE

If the ignition is turned back on immediately after the engine is stopped, the oil light may not turn on right away because of oil pressure retained in the filter housing.

OIL PRESSURE

See [Figure 3-111](#). The oil pump is non regulatory and delivers its entire volume of oil under pressure to the oil filter mount. When an engine is cold, the engine oil will be more viscous (i.e., thicker).

When an engine is operated at high speeds, the volume of oil circulated through the oiling system increases, resulting in higher oil pressure. As engine speed is reduced, the volume of oil pumped is also reduced, resulting in lower oil pressure.

To check oil pressure, use OIL PRESSURE GAUGE (Part No. HD-96921-52B) and OIL PRESSURE GAUGE ADAPTER (Part No. HD-96940-58). Remove oil pressure indicator switch and insert pressure gauge fitting.

Ride motorcycle at least 20 miles (32 km) at or above 50 MPH (80 KM/H) until engine oil reaches normal operating temperature. At 2500 RPM, oil pressure will vary from 10-12 psi (69-83 kPa). At idle speed (950-1050 RPM), oil pressure will vary from 6-8 psi (42-55 kPa).

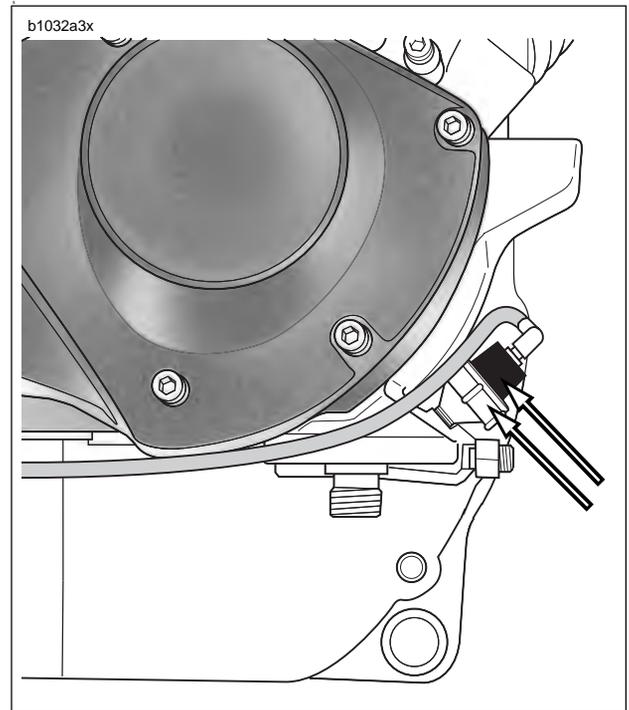


Figure 3-111. Oil Pressure Indicator Switch

Table 3-24. Troubleshooting Oil Pressure Signal Light

| OIL PRESSURE SIGNAL LIGHT | PROBABLE CAUSES |
|---|--|
| Stays on at speeds above idle. | <ul style="list-style-type: none"> ● Empty oil reservoir. ● Clogged feed line (ice and sludge, freezing temperatures). ● Air-bound oil line. ● Grounded oil switch wire. ● Malfunctioning signal switch. ● Diluted oil. ● Malfunctioning check valve (see 3.14 OIL FILTER MOUNT). |
| Flickers at idle. | <ul style="list-style-type: none"> ● Incorrect idle speed. Malfunctioning or improperly installed check valve (see 3.14 OIL FILTER MOUNT). |
| Does not glow when ignition is turned on (prior to operating engine). | <ul style="list-style-type: none"> ● Malfunctioning signal switch. ● Malfunction in wiring. ● Burned-out signal bulb. ● Dead battery (see NOTE). |

GENERAL

See [Figure 3-112](#). Pressure created in the flywheel area on piston downstroke is released through the **reed valve** into the gearcase. From there a mixture of crankcase air and oil mist is vented up the push rod covers to the upper rocker box.

See [Figure 3-113](#). Air is allowed to escape the rocker boxes by exiting the positive crankcase vent (PCV) valves (4) located on top of the rocker boxes. From the PCV valves the air enters the crankcase breather hoses (2, 3). The crankcase breather hoses route through the air cleaner base plate (1) to the air box where it is directed inside the air filter element and back into the engine.

The oil mist collects and eventually returns to the crankcase through oil passageways in the cylinder head.


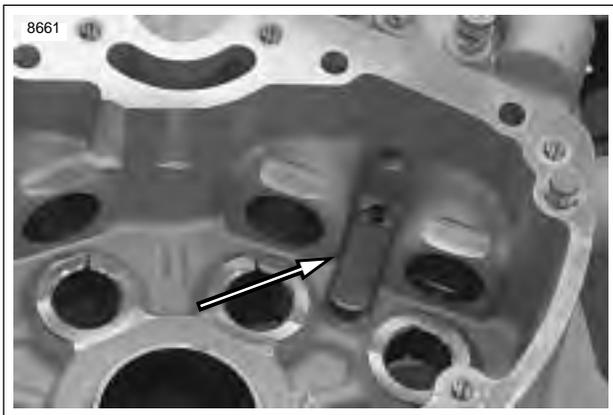


Figure 3-112. Reed Valve Assembly in Gearcase

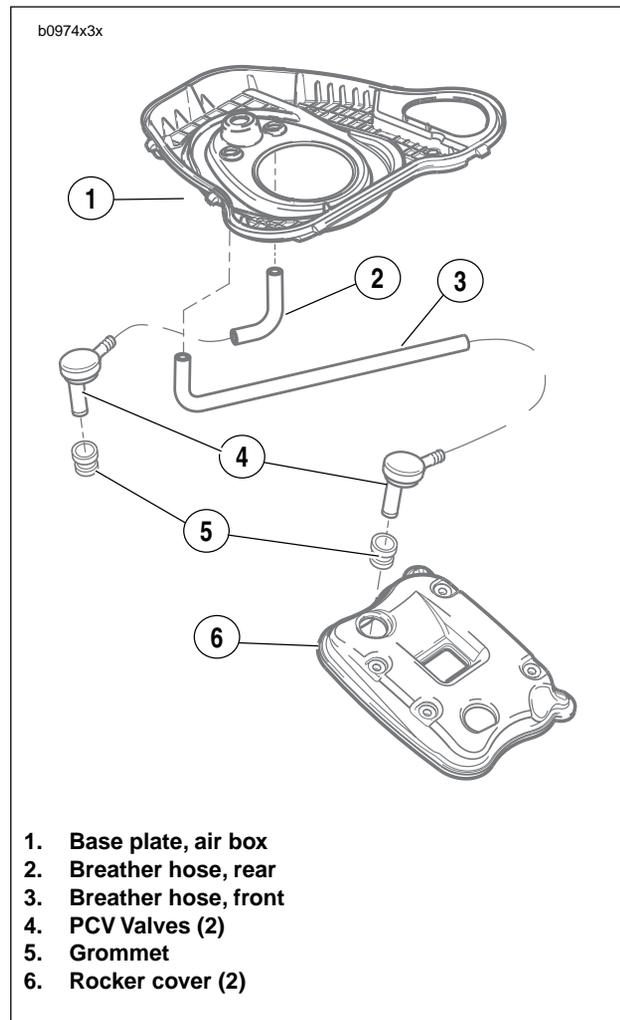

1. Base plate, air box
2. Breather hose, rear
3. Breather hose, front
4. PCV Valves (2)
5. Grommet
6. Rocker cover (2)

Figure 3-113. Crankcase Breathing System,

Reed Valve Replacement

NOTES

- See *Figure 3-115*. The reed valve (2) is what moves out with the downstroke and in with the upstroke of the pistons. The reed valve stop (1) limits the movement the reed valve (2). See **3.11 CRANKCASE BREATHING SYSTEM**.
- Whenever the gearcase cover is removed, the reed valve should always be inspected for cracks, chips and breakage.
- Fasteners should be tightened to **30-40 in-lbs (3.4-4.5 Nm)**.

CAUTION

See *Figure 3-115*. When replacing the reed valve it is extremely important to ensure that both edges of the reed valve stop (1) and the reed valve (2) are properly aligned to prevent premature failure of the reed valve. When replacing the reed valve it is not necessary to replace the reed block. See *Figure 3-114*.

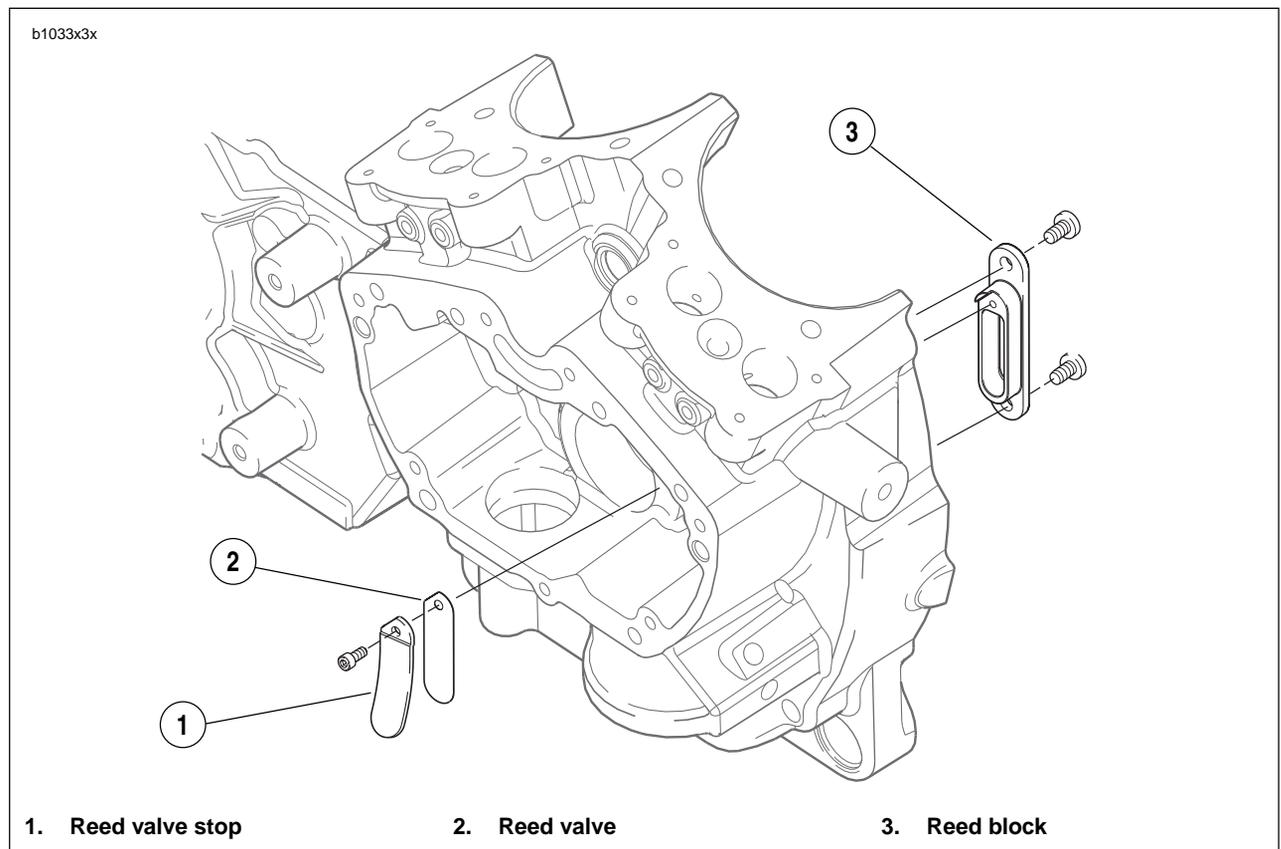


Figure 3-114. Reed Valve Assembly

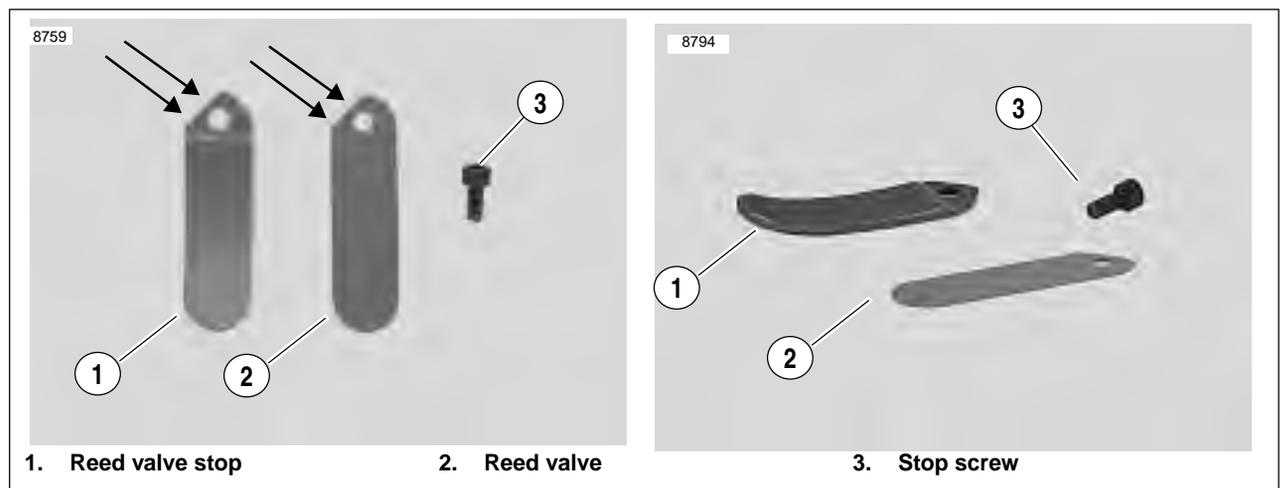


Figure 3-115. Reed Valve Stop and Reed Valve

GENERAL

1. Oil is gravity-fed from the oil reservoir to the gerotor-style oil pump through a feed hose. Oil enters the feed section and fills a cavity located under the feed pump.

NOTE

See [3.13 OIL PUMP](#) for a complete explanation of the gerotor pump sets.

2. The feed pump transfers oil from the inlet cavity through the external steel line to the oil cooler.
3. From the oil cooler oil flows to the oil filter mount.
4. Through the filter mount cavity oil flows to the oil filter.
5. Oil enters the peripheral cavity of the oil filter, passes through the filtering medium into the central cavity of the oil filter, and flows into the filter adapter (fitting which connects filter to filter mount).
6. Adequate oil pressure in the filter mount cavity activates the oil pressure signal light switch and shuts off the oil pressure signal light.
7. Oil flowing from the filter adapter opens the check ball. The check ball opens at 4-6 psi (28-41 kPa) oil pressure.
8. With the check ball open, oil flows into the crankcase feed galley.
9. Oil enters an intersecting passage in the gearcase cover and flow is then routed to the pinion bushing.
10. Oil enters a hole in the end of the pinion gear shaft and travels to the right flywheel where it is routed through the flywheel to the crankpin. Oil is forced through the crankpin to properly lubricate the rod bearing assembly.
11. Oil flow then continues through the gearcase cover to the main feed galley at the top of the gearcase cover. Drilled passages in the crankcase intersect the main feed galley and carry oil to all hydraulic lifters and piston jets.
12. Oil flows up passages in the push rods to the rocker arm shafts and bushings.
13. The valve stems are lubricated by oil supplied through drilled oil holes in the rocker arms.
14. Oil collected in the push rod areas of the cylinder heads flows down the push rod cover, through drain holes in the tappet blocks and into the gearcase. After providing lubrication to the gearcase components oil returns to the scavenge section of the oil pump through a passage located in the top of the pump. Oil is then returned to the oil tank.
15. Feed oil to the rocker area is returned to the crankcase through a passage in the head and cylinder.
16. Oil collected in the sump is splash-fed to the pistons, cylinder walls and flywheel components.
17. A pair of piston oil jets cools the bottom of the piston with a spray of oil.
18. Oil collected in the sump area returns to the scavenge section of the oil pump through a passage located in the rear section of the sump. Oil flow to the pump is accomplished by the scavenging effect of the pump and by the pressure created by the downward stroke of the pistons.
19. Return oil fills a cavity above the pump's return gears. The return gears pump oil back to the oil reservoir.

GENERAL

See [Figure 3-116](#). The oil pump consists of two gerotor gear sets, feed and return, housed in one pump body. The feed set distributes oil to the engine, the scavenge set returns oil to the tank/frame reservoir.

A gerotor-type gear set has two parts — an inner and an outer gerotor. The inner gerotor has one less tooth than the outer gerotor. Both gerotors have fixed centers which are off-set to each other.

In a gerotor gear set, oil is transferred from inlet to outlet as it is trapped between the rotating inner and outer gerotors.

Gravity-fed oil from the oil reservoir enters the pump through the feed line connector. It is forced by the gerotor feed set through a line to the oil filter. Return oil from the flywheel compartment is drawn back into the pump and is forced by the gerotor scavenge set back to the oil reservoir.

The oil pump seldom needs servicing. Before you disassemble an oil pump suspected of not producing adequate oil pressure, be sure that all possible related malfunctions have been eliminated:

1. Make sure all oil line connections are tight and that lines are not pinched or damaged.
2. Check level and condition of oil in reservoir/swingarm. Pressure will be affected if oil is diluted. In freezing weather, proper circulation of oil can be affected if the oil feed line becomes clogged with ice or sludge.
3. Check for a grounded oil pressure switch wire or faulty switch if oil indicator light fails to go out with engine running.

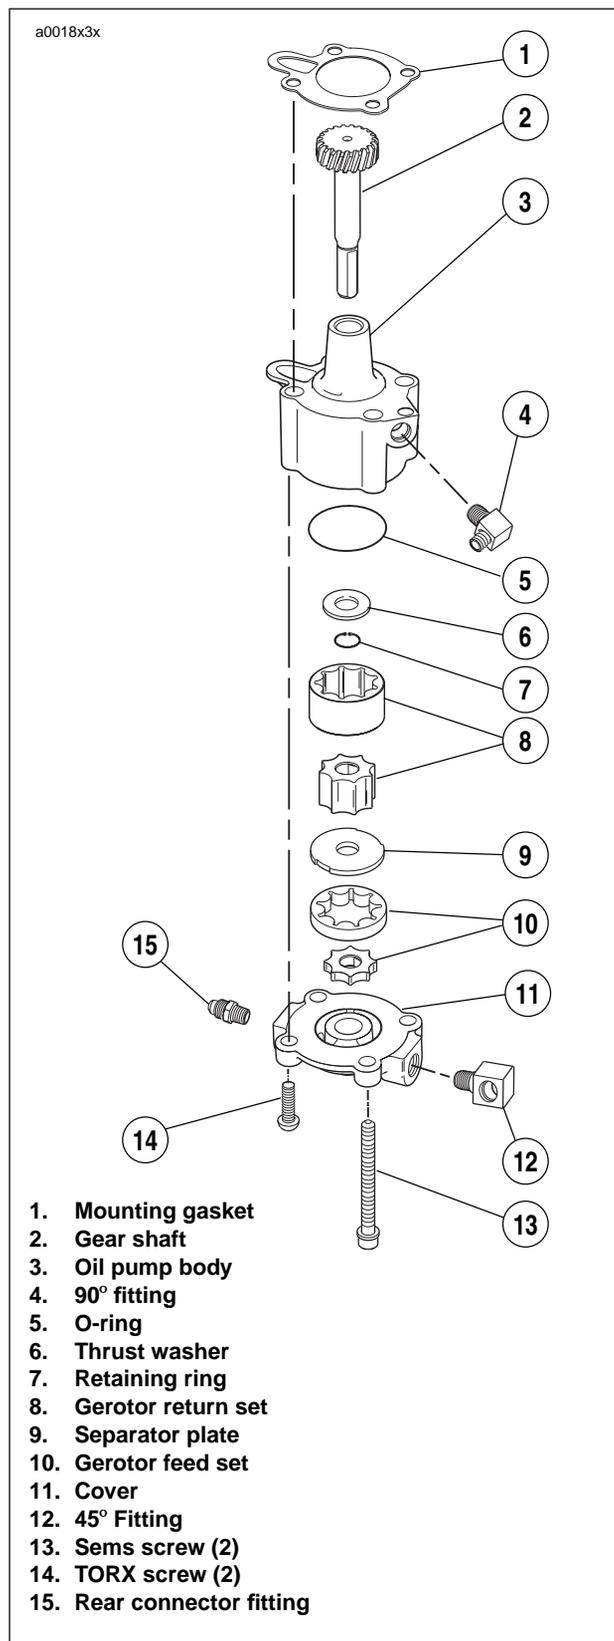


Figure 3-116. Oil Pump

REMOVAL/DISASSEMBLY

NOTE

Oil pump can be removed with engine in frame and without removing gearcase cover.

1. Drain oil reservoir. See [1.6 ENGINE LUBRICATION SYSTEM](#).
2. Remove and discard oil filter.
3. See [Figure 3-117](#). Disconnect feed line connections (1 & 6) on both sides of the oil pump.

4. Detach return line connection (3).
5. Carefully remove mounting screws (5) and washers only. Pump will drop with screws removed. Discard mounting gasket.
6. Remove cover TORX screws (2). Lift cover off body.
7. Remove and discard O-ring.
8. Slide both pieces of gerotor feed set, separator plate and both pieces of gerotor scavenge set off gear shaft.

Remove and discard retaining ring. Remove thrust washer and gear shaft.

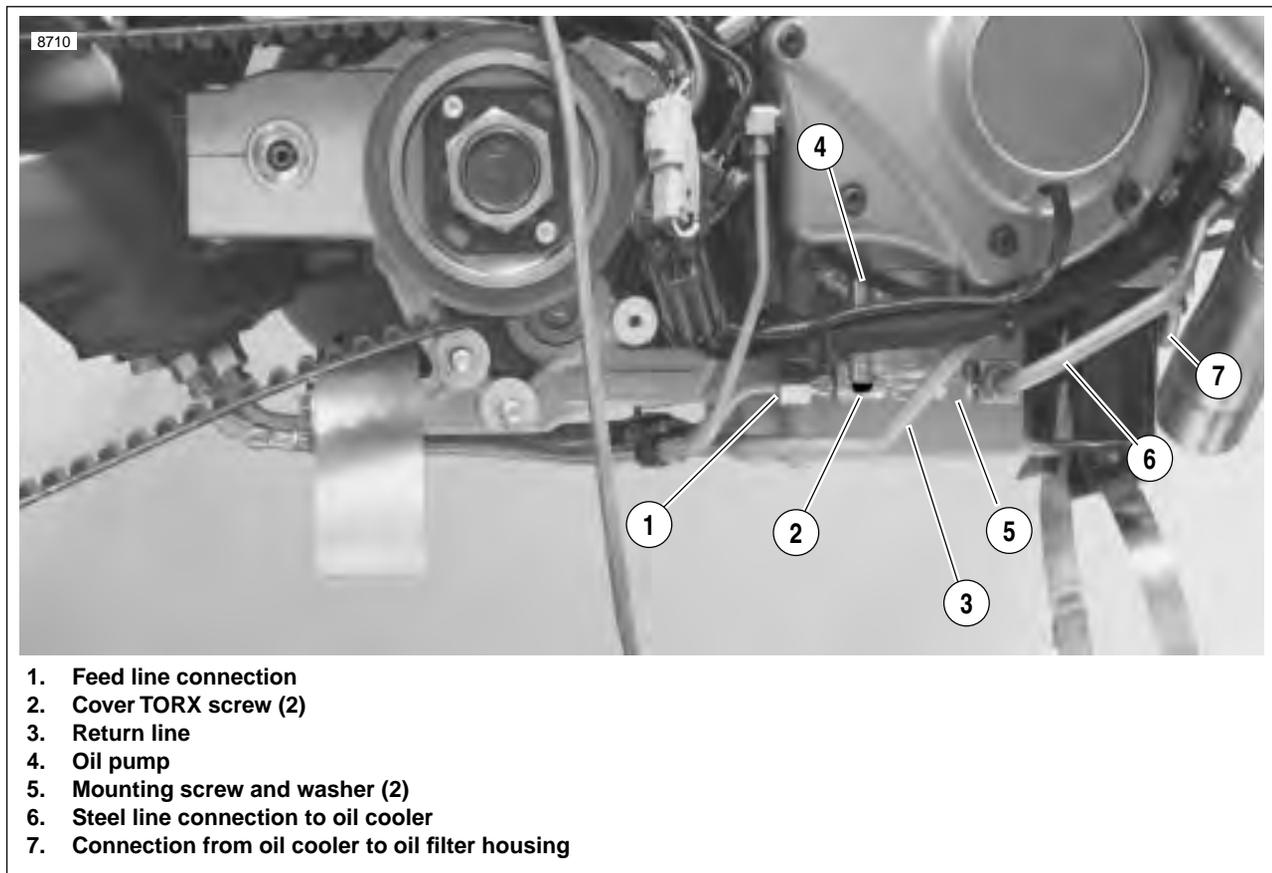


Figure 3-117. Oil Pump Hardware

CLEANING AND INSPECTION

1. Clean all parts in cleaning solvent. Blow out holes and oil passages with compressed air.

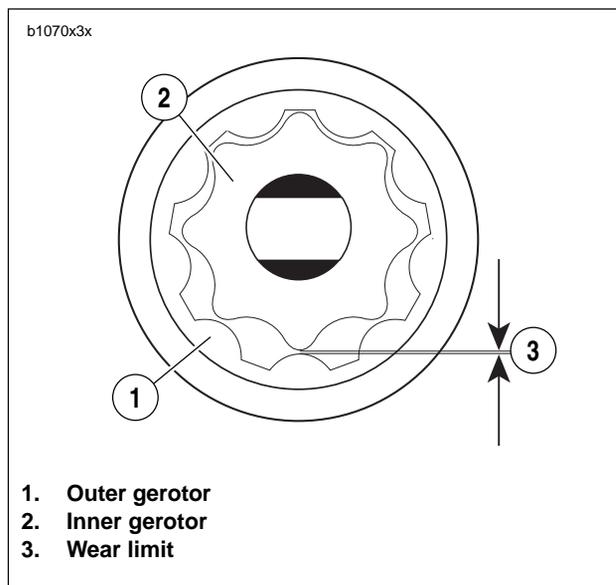


Figure 3-118. Gerotor Wear Limits

2. See Figure 3-118. Inspect both gerotor sets for wear.
 - a. Mesh pieces of each set together as shown.
 - b. Use a feeler gauge to determine clearance.
 - c. The SERVICE WEAR LIMIT between gerotors is 0.004 in. (0.102 mm). Replace gerotors as a set if clearance exceeds this dimension.
 - d. Measure thickness of feed gerotors with a micrometer. Replace gerotors as a set if they are not the same thickness.
3. See Figure 3-116. Check gear shaft teeth for damage or wear. Replace if necessary.

ASSEMBLY/INSTALLATION

NOTE

Liberalily coat all moving parts with clean engine oil to ensure easy assembly and smooth operation at start-up.

1. See Figure 3-116. Install gear shaft through body. Position thrust washer over end of shaft. Install **new** retaining ring into groove in shaft.
2. Insert inner gerotor of the gerotor scavenge set over gear shaft.
3. Place outer gerotor over inner gerotor to complete scavenge set.

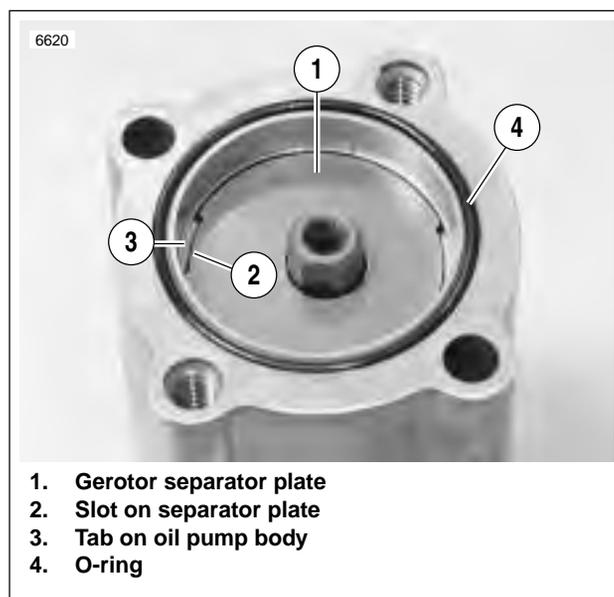


Figure 3-119. Separator Plate Slots

4. See Figure 3-119. Install gerotor separator plate by lining up slots on perimeter with tabs inside oil pump body.
5. Install a **new** O-ring into groove in pump body.
6. See Figure 3-116. Place gerotor feed set over gear shaft.
7. Place cover onto pump body. Install cover TORX screws. Tighten to 70-80 **in-lbs** (8-9 Nm).
8. Place **new** mounting gasket in position.

NOTE

If fittings were removed, use **TEFLON® PIPE SEALANT** or **HYLOMAR®** on fitting threads.

9. Secure pump to crankcase with mounting screws. Tighten to 125-150 **in-lbs** (14-17 Nm).
10. See Figure 3-117. Attach return line connection.
11. Attach feed line connections to both sides of the oil pump.
12. Install **new** oil filter and fill oil reservoir with proper oil. See 1.6 **ENGINE LUBRICATION SYSTEM**.

GENERAL

See [Figure 3-120](#). Oil is pressure-fed from the oil pump to the oil cooler via an external steel line. From the oil cooler, oil flows to the oil filter mount. Oil travels through the filter mount into the filter through the outer filter holes.

Adequate oil pressure activates the oil pressure indicator switch in the filter mount, which turns off the oil pressure indicator lamp.

The check ball in the filter adapter opens at 4-6 psi (28-41 kPa) oil pressure. Filtered oil leaves the filter, flowing past the check ball.

DISASSEMBLY

1. Remove chin fairing. See [2.33 CHIN FAIRING](#).
2. Drain oil reservoir and remove filter. See [1.6 ENGINE LUBRICATION SYSTEM](#).
3. See [Figure 3-120](#). Remove filter adapter (6) from filter mount (3). Remove check ball (5) and spring (4).
4. Detach indicator lamp wire (2) from oil pressure indicator switch (1). Remove switch using OIL PRESSURE SENDING UNIT WRENCH (Part No. HD-41675).

CLEANING AND INSPECTION

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

Thoroughly clean all parts in cleaning solvent. Blow out holes and passages using compressed air.

ASSEMBLY

NOTE

Use *TEFLON PIPE SEALANT* or *HYLOMAR* on all fittings installed to oil filter mount.

1. See [Figure 3-120](#). Install oil pressure indicator switch (1) using OIL PRESSURE SENDING UNIT WRENCH (Part No. HD-41675). Tighten to 50-70 **in-lbs** (6-8 Nm).
2. Attach indicator lamp wire (2).

NOTE

The filter adapter has identical ends; either end may be installed into the filter mount.

3. Apply several drops of **LOCTITE®** thread locker 243 (blue) to last few threads on that end of the filter adapter which is installed into filter mount. Do not apply **LOCTITE** to adapter threads on filter element side.

4. Install filter mount components.
 - a. Place spring (4) and check ball (5) into threaded hole at center of mount.
 - b. Push threaded end of filter adapter (6) (with **LOCTITE**) against check ball to compress spring.
 - c. Install adapter. Tighten to 96-144 **in-lbs** (11-16 Nm).
5. Install a **new** filter and fill oil reservoir with proper oil. See [1.6 ENGINE LUBRICATION SYSTEM](#).
6. Install chin fairing. See [2.33 CHIN FAIRING](#).

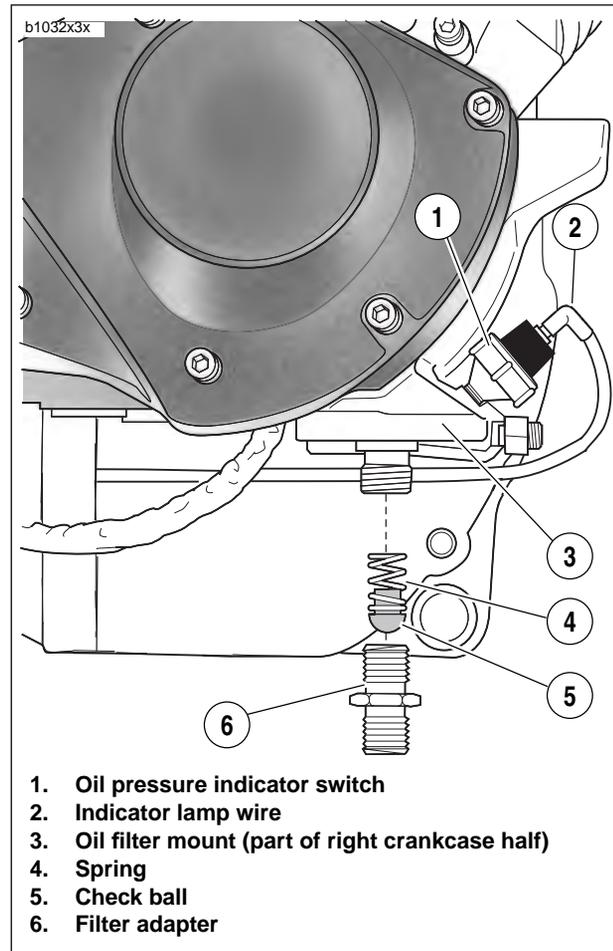


Figure 3-120. Oil Filter Mount Assembly

GENERAL

See [Figure 3-121](#). The lifter assembly consists of a hydraulic lifter and roller. The lifter and roller, under compression force from valve spring, follow the surface of the revolving cam. The up-and-down motion produced is transmitted to the valve by the push rod and rocker arm. The lifter contains a piston (or plunger) and cylinder; it also contains a check valve, which allows the unit to fill with engine oil, thereby reducing clearance in the valve train.

When a lifter is functioning properly, the assembly operates with minimal lifter clearance. The unit automatically compensates for heat expansion to maintain a no-clearance condition.

It is normal for lifters to click when engine is started after standing for some time. Hydraulic lifters have a definite leak-down rate which permits the oil in the lifters to escape. This is necessary to allow units to compensate for various expansion conditions of parts and still maintain correct clearance operation. Lifters are functioning properly if they become quiet after a few minutes of engine operation.

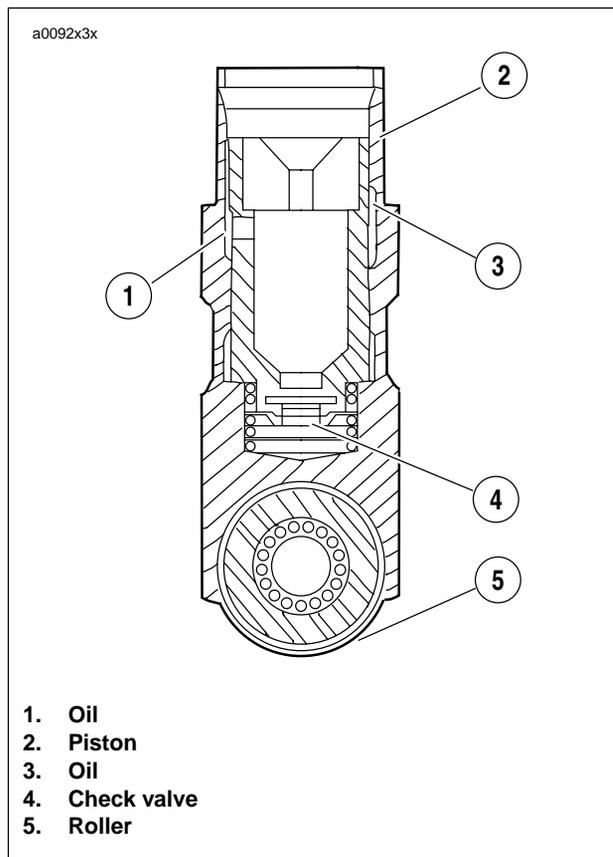


Figure 3-121. Lifter Assembly (Typical)

REMOVAL

1. Clean all dirt from around crankcase. Blow loose particles from area with compressed air.
2. Pull each push rod upward through top of cylinder head. See [3.6 CYLINDER HEAD](#).
3. Remove cylinder head assemblies. See [3.6 CYLINDER HEAD](#).
4. See [Figure 3-123](#). Remove push rod covers.
 - a. Remove screws.
 - b. Remove push rod covers.
 - c. Remove gaskets and o-rings. Discard parts.
5. Remove valve hydraulic lifters.
 - a. Remove anti-rotation screws.
 - b. Remove lifters from crankcase bore using a thin-bladed screwdriver. Mark the location and orientation (front/back) of each lifter.

CLEANING AND INSPECTION

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.


1. Clean all parts, except roller/lifter assembly, thoroughly in solvent. Blow dry with compressed air.

NOTE

Inside and outside micrometers used for measuring tappets and tappet guides must be calibrated to ensure accurate readings.

2. Inspect valve lifters for excessive clearance in guide. Accurately measure lifter bore inner diameter with a gauge.
 - a. Clearance should be within 0.0008-0.0020 in. (0.0203-0.0508 mm).
 - b. Fit a **new** lifter and/or replace crankcases if clearance exceeds SERVICE WEAR LIMIT of 0.0030 in. (0.076 mm).
3. Check lifter roller freeplay.
 - a. Roller clearance on pin should be within 0.0006-0.0010 in. (0.0152-0.0254 mm).
 - b. Replace lifters if clearance exceeds SERVICE WEAR LIMIT of 0.0015 in. (0.0381 mm).
4. Check lifter roller end clearance.
 - a. End clearance should be within 0.008-0.022 in. (0.203-0.559 mm).
 - b. Replace lifters if clearance exceeds SERVICE WEAR LIMIT of 0.026 in. (0.660 mm).
5. Soak lifters in clean engine oil. Keep covered until assembly.


INSTALLATION

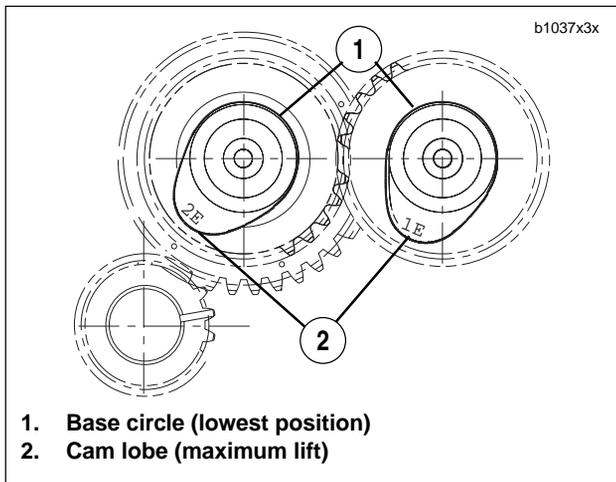

1. **Base circle (lowest position)**
2. **Cam lobe (maximum lift)**

Figure 3-122. Base Circle

1. See [Figure 3-122](#). Rotate engine so that both lifters from the cylinder will be installed on the base circle of the cam.
2. Apply a liberal amount of engine oil to each lifter assembly (especially the roller needles) for smooth initial operation.
3. See [Figure 3-123](#). Insert lifter into bore in crankcase. Rotate lifter so that flats at upper end of lifter face the front and rear of the engine. If the lifter is installed incorrectly, anti-rotation screws cannot be inserted.
4. Secure lifters in place.
 - a. Install anti-rotation screws with washers in the holes in lifter block.
 - b. Tighten anti-rotation screws to 55-65 **in-lbs** (6-7 Nm).
5. See [Figure 3-123](#). Install pushrod cover.
 - a. Place **new** pushrod cover gasket over bottom of pushrod cover.
 - b. Position push rod cover onto crankcase.
 - c. Install screws through holes in push rod cover into tapped holes in crankcase. Tighten screws evenly to 30-40 **in-lbs** (3-5 Nm).
 - d. Place **new** o-rings on top of push rod cover.
6. Install push rods, cylinder head, lower and upper rocker covers. See [3.6 CYLINDER HEAD](#).
7. Repeat process for remaining cylinder head.

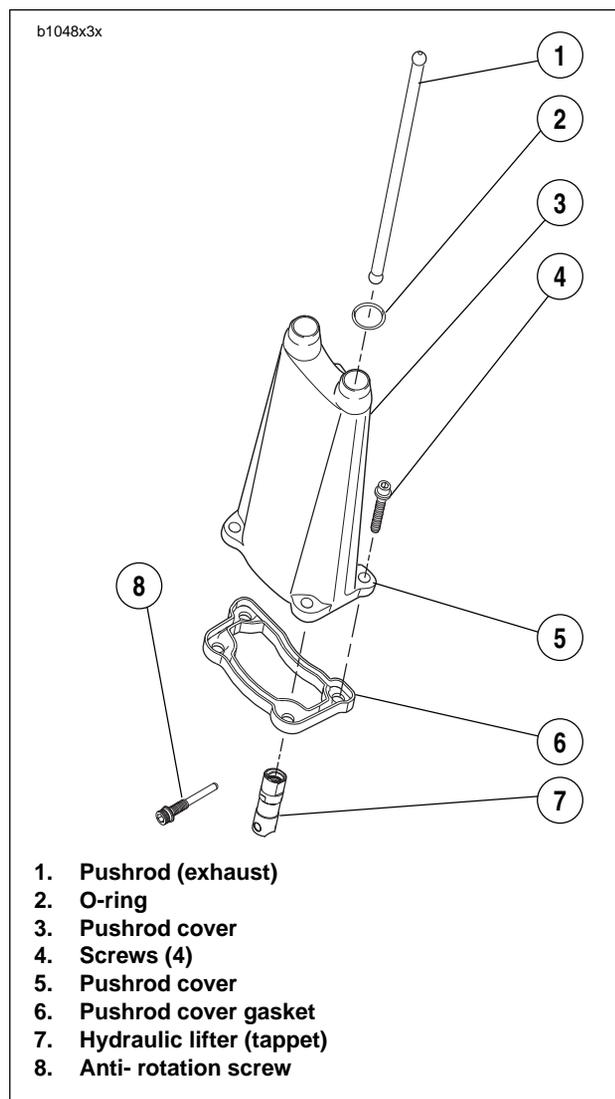

1. **Pushrod (exhaust)**
2. **O-ring**
3. **Pushrod cover**
4. **Screws (4)**
5. **Pushrod cover**
6. **Pushrod cover gasket**
7. **Hydraulic lifter (tappet)**
8. **Anti-rotation screw**

Figure 3-123. Valve Lifter Service

GENERAL

Read the complete gearcase section carefully before you begin any service work.

For the gearcase components to operate at their optimum, all components must be properly fitted and matched. Changing one component can affect many others. It is important to know and understand all inspection procedures and how components interact.

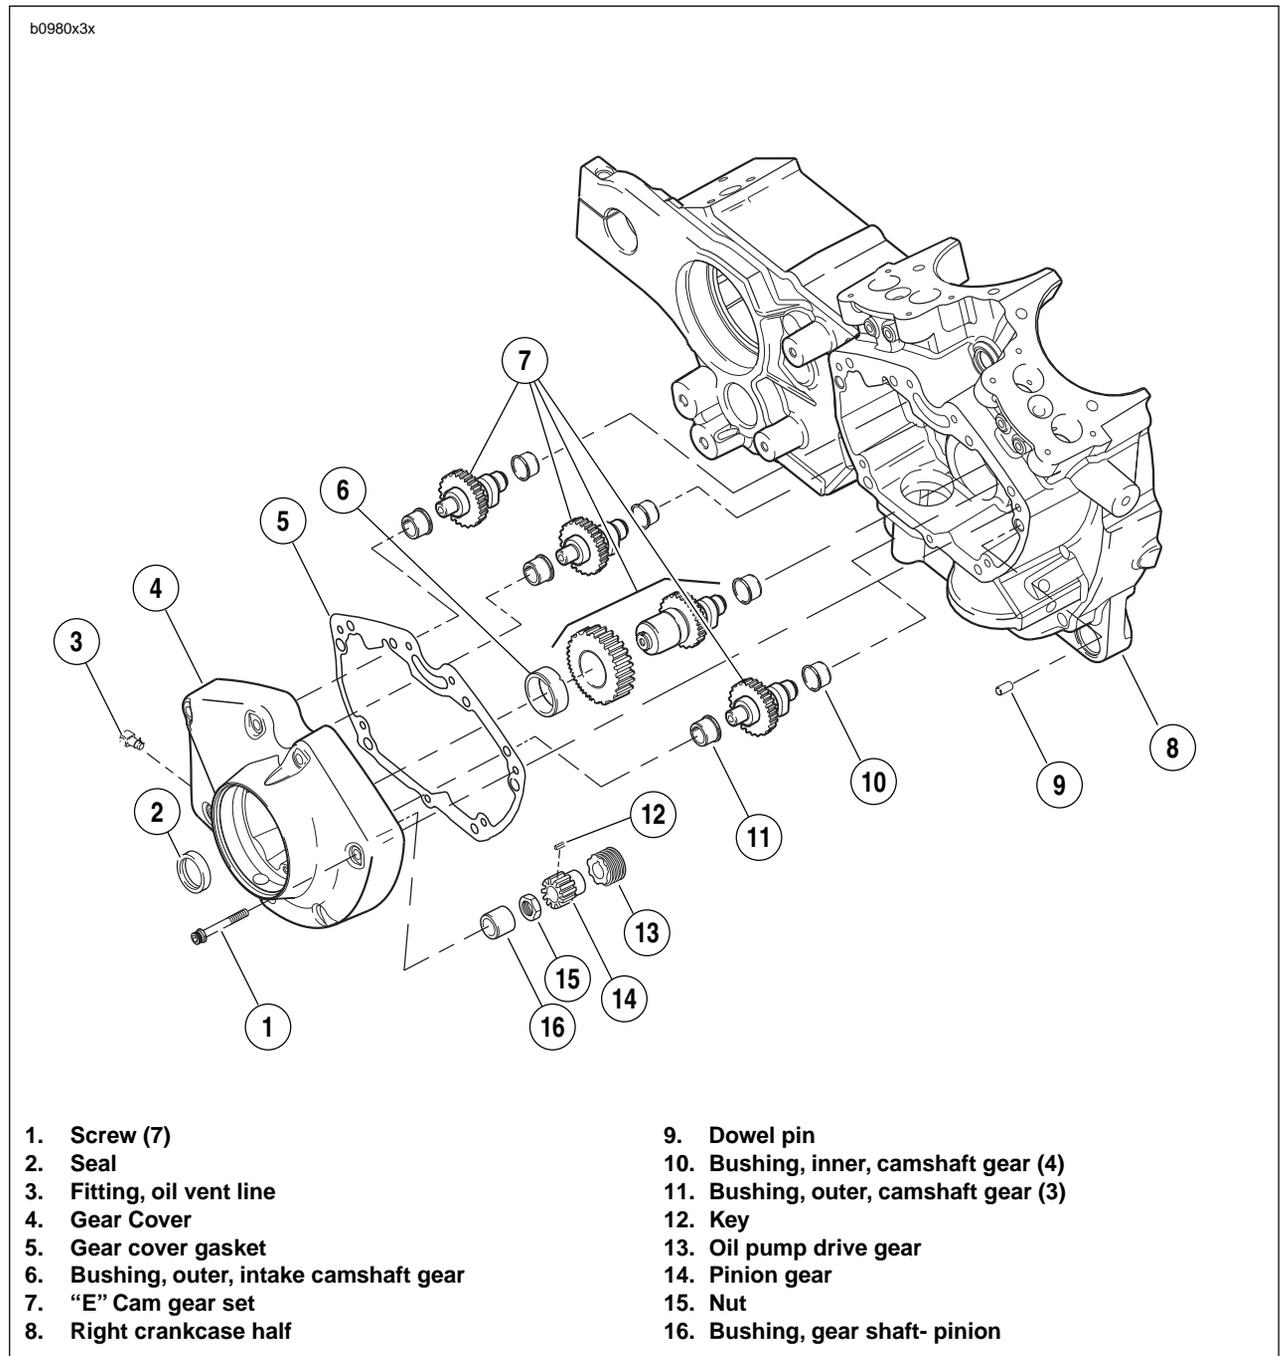


Figure 3-124. Gearcase Cover & Cam Assembly

REMOVAL/DISASSEMBLY

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

1. See [Figure 3-124](#). Thoroughly clean area around gearcase cover and tappets. Blow loose dirt from crankcase with compressed air.
2. Remove any parts that will interfere with gearcase disassembly.
3. Remove push rods. See [3.6 CYLINDER HEAD](#).
4. Remove hydraulic lifters. See [3.15 HYDRAULIC LIFTERS](#).
5. Check for minimum cam gear end play. Record readings.

6. Remove cam position sensor and rotor from gearcase cover. See [4.17 CAM POSITION SENSOR AND ROTOR](#).
7. Place a pan under gearcase to collect oil. Remove cover screws. Carefully remove gearcase cover. Discard old gasket.

NOTE

If cover does not come loose on removal of screws, tap lightly with a plastic hammer. Never pry cover off.

8. See [Figure 3-125](#). Remove cam gears (1, 2, 3 & 4).


NOTE

Nut is secured by LOCTITE 262 (red) on the nut threads.

9. Remove pinion nut (6). Slide pinion gear (5) and oil pump drive gear (6) off pinion shaft.

NOTE

See [Figure 3-125](#). The XB9R uses V style timing marks on the front intake cam assembly (2). Please note the V marks (7).

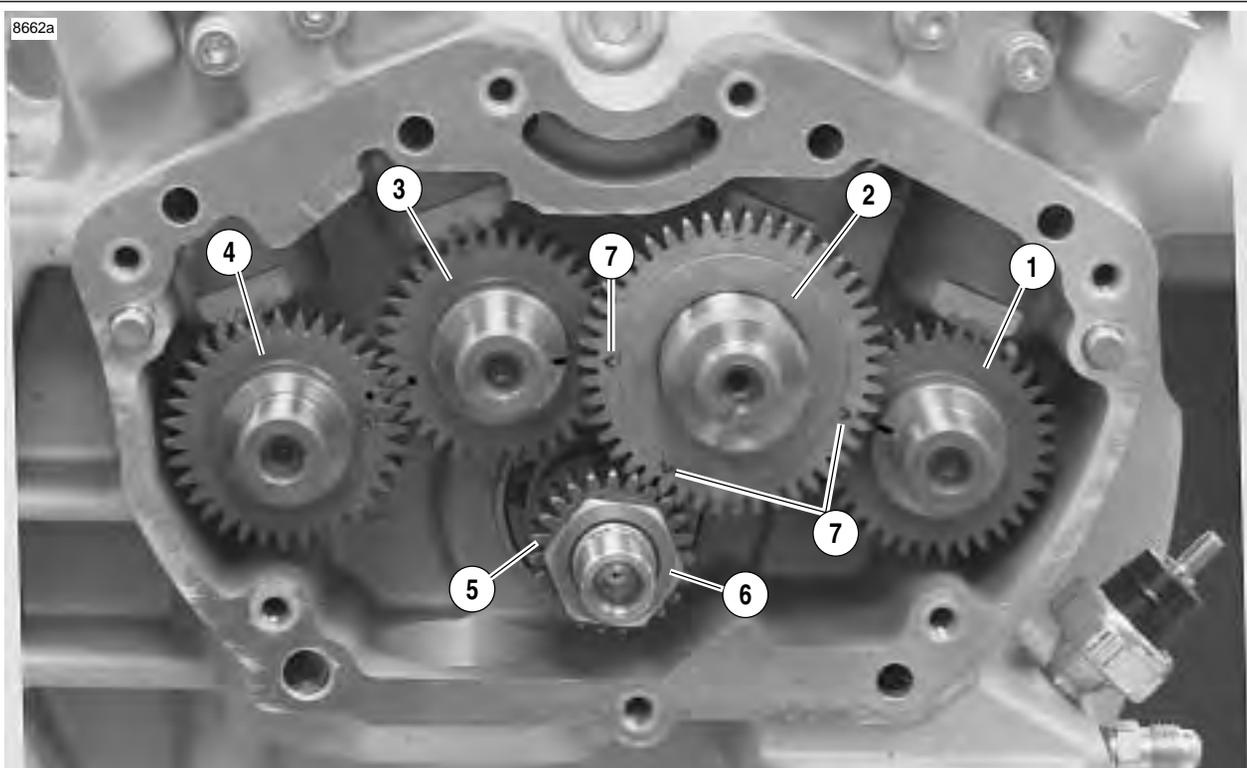

1. Front exhaust cam gear
2. Front intake cam gear
3. Rear intake cam gear
4. Rear exhaust cam gear
5. Pinion gear
6. Pinion nut
7. Timing V marks

Figure 3-125. Cam and Pinion Gear Location and Timing Mark Indexing

CLEANING AND INSPECTION

1. Thoroughly clean gearcase compartment, gearcase cover and gears in solvent to remove oil and carbon deposits.

WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

2. Blow out all cover oil passages and bushings with compressed air.
3. Clean old gasket material from gearcase and crankcase.

Cam and Pinion Gear Identification, Inspection and Selection

See [Figure 3-126](#). Cam lobes are stamped with a number (1, 2, 3 or 4) followed by a letter ("E"). The numbers identify the cam location/function and the letter ("E") indicates model year application. Refer to [Table 3-25](#).

NOTE

Prior to changing any cam gears, check gear shaft fit within corresponding bushings. Worn bushings can cause excessive backlash.

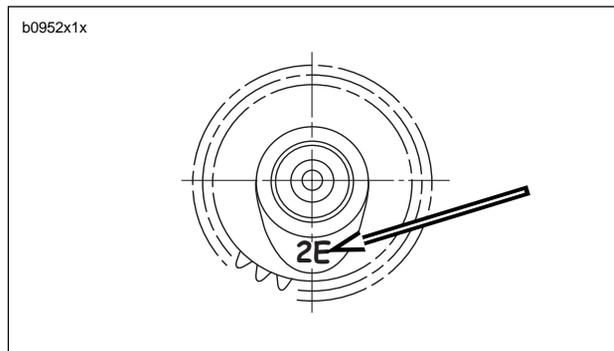


Figure 3-126. Cam Identification Stamp

Table 3-25. Cam Location Numbers

| STAMP | LOCATION |
|-------|---------------|
| 1E | Front exhaust |
| 2E | Front intake |
| 3E | Rear intake |
| 4E | Rear exhaust |

Bushing Inspection

1. Bushings are press fit in gearcase cover and crankcase. Inspect each bushing against its corresponding cam gear shaft or pinion gear shaft. See [Table 3-26](#).

NOTE

If Service Wear Limits are exceeded, replace crankcase set and/or gearcase cover as required.

Table 3-26. Gear Shaft Specifications

| GEAR SHAFT | CORRECT CLEARANCE | SERVICE WEAR LIMIT |
|------------|---|---------------------------|
| Cam | 0.0007-0.0022 in. (0.0178-0.0559 mm) | 0.003 in. (0.076 mm) |
| Pinion | 0.0023-0.0043 in. (0.0584-0.1092 mm) | 0.0050 in. (0.1270 mm) |

ASSEMBLY/INSTALLATION

1. See [Figure 3-127](#). Install oil pump drive gear and pinion gear on pinion shaft.
 - a. Install shaft key into pinion shaft slot.
 - b. Slide oil pump drive gear over pinion shaft. Drive gear must align with shaft key.
 - c. Align keyway in ID of pinion gear with shaft key.
 - d. Slide pinion gear over shaft key and against oil pump drive gear.
2. See [Figure 3-124](#). Install pinion nut.
 - a. Clean threads on pinion shaft and nut.
 - b. See [Figure 3-128](#). Install CRANKSHAFT LOCKING TOOL (Part No. HD-43984) to gearcase with "Side B" facing out, over pinion shaft, with two screws.
 - c. Apply several drops of LOCTITE 262 (red) to last few threads of nut.
 - d. Install nut to pinion shaft. Tighten nut to 19-21 ft-lbs (26-29 Nm) plus an additional 15° to 19° rotation.
3. See [Figure 3-124](#). Liberally apply engine oil to bushings, shafts, and gears. Install all cam gears into bushings of right crankcase half, properly aligning timing marks of cam gears and pinion gear.

NOTES

- *The XB9R uses V style timing marks on the front intake cam assembly. Please note the V design.*
 - *Because of the larger diameter additional gear (which meshes with the pinion gear) on the outboard end of the cam, the front exhaust cam gear and the rear intake cam gear must be installed before the front intake cam gear is installed.*
4. See [Figure 3-124](#). Install a **new** seal and **new** dry gear cover gasket on crankcase.

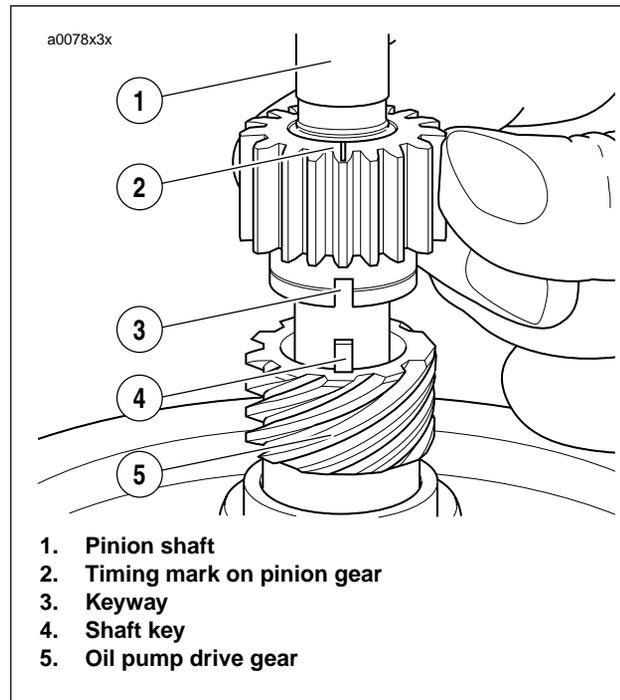


Figure 3-127. Aligning Pinion Gear

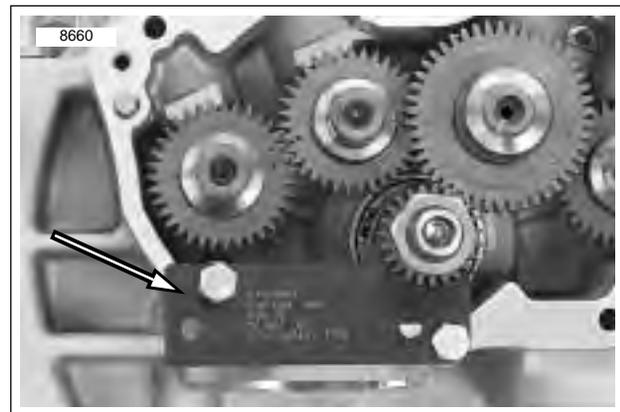


Figure 3-128. Crankshaft Locking Tool
(Part No. HD-43984)

5. See [Figure 3-129](#). Install gearcase cover over all gears and onto right crankcase half. Secure cover to crankcase half with 7 socket head screws. Tighten screws evenly to 80-110 **in-lbs** (9-12 Nm). Use torque sequence as shown in [Figure 3-129](#).
6. See [Figure 3-130](#). Check cam gear end play for each cam gear as follows:
 - a. Turn engine over until lobe of cam gear being checked is pointing toward its respective tappet guide hole.
 - b. Gently pry the cam gear toward the gearcase cover using a flat blade screwdriver.
 - c. Measure gap between bushing (in crankcase half) and cam gear shaft thrust face (shoulder) using a feeler gauge. This is cam gear end play.
 - d. Compare cam gear end play measurements with the SERVICE WEAR LIMITS. Make repairs as required if end play does not meet specifications.
7. Install hydraulic lifters and push rods. See [3.15 HYDRAULIC LIFTERS](#).
8. Install cam position sensor and rotor in gearcase cover. See [CAM POSITION SENSOR AND ROTOR](#) section.
9. Install any components removed to gain access to gearcase (i.e. exhaust system components, air cleaner, etc.).

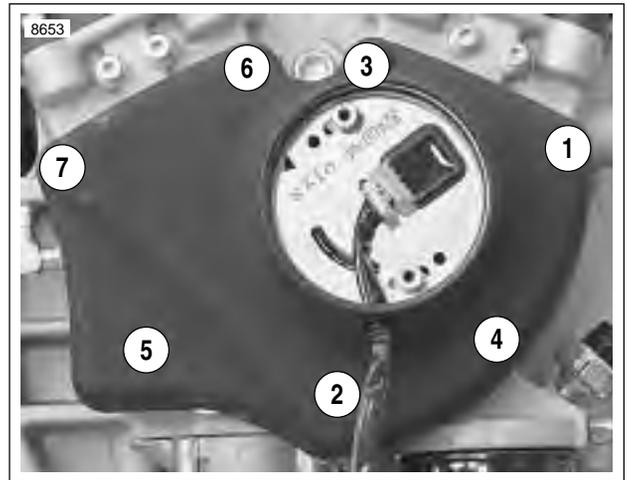


Figure 3-129. Gearcase Cover Mounting Screw Torque Sequence



Figure 3-130. Checking Cam Gear End Play

GENERAL

When rod bearings, pinion shaft bearing, or sprocket shaft bearing are in need of repair, the engine must be removed from the chassis; see [3.4 STRIPPING MOTORCYCLE FOR ENGINE SERVICE](#) in this section. It is recommended procedure to check and make repairs to cylinder heads, cylinders, gear case and transmission at the same time (perform entire engine overhaul).

CAUTION

Laying engine on primary side will damage clutch cable end fitting. If fitting is damaged, clutch cable must be replaced.

DISASSEMBLY

Crankcase Halves

1. Remove cylinder heads. See [3.6 CYLINDER HEAD](#).

CAUTION

After removing cylinders, install plastic or rubber hose over cylinder studs. Lifting or moving crankcase by grasping studs will cause cylinder stud damage.

2. Remove cylinders and pistons. See [3.7 CYLINDER AND PISTON](#).
3. Remove oil pump. See [3.13 OIL PUMP](#).
4. Remove gearcase components. See [3.16 GEARCASE COVER AND CAM GEARS](#).
5. Remove primary cover and primary drive/clutch components. See [6.2 PRIMARY COVER](#).
6. Remove starter motor. See [5.7 STARTER](#).



Figure 3-131. Rear Isolator Assembly

7. See [Figure 3-131](#). Remove rear isolator assembly by removing the forward two fasteners first and then the two rear fasteners (re-install with new fasteners).
8. See [Figure 3-132](#). Remove screws securing crankcase halves together.
9. Tap crankcase with plastic mallet to loosen and separate the halves.

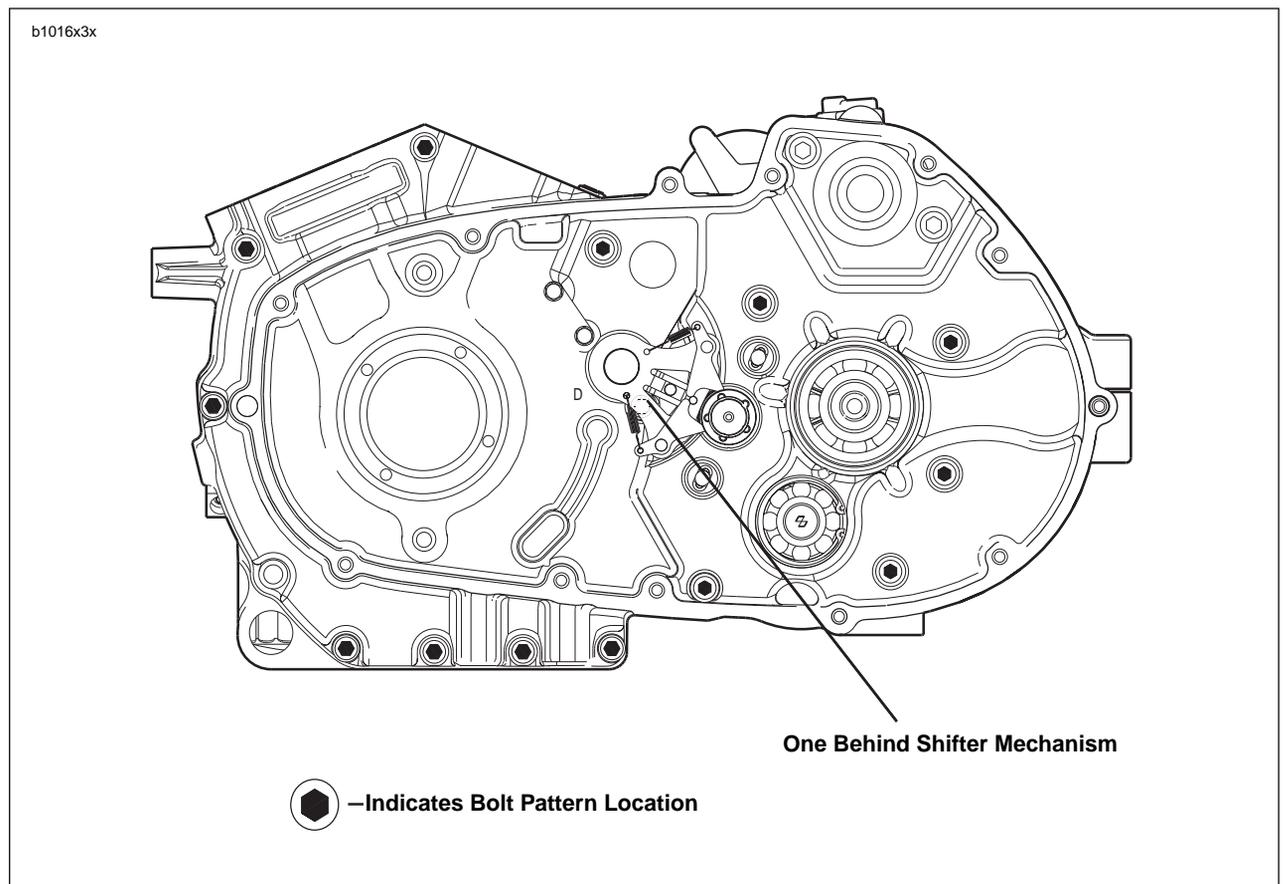


Figure 3-132. Crankcase Fasteners

PISTON JETS

Removal

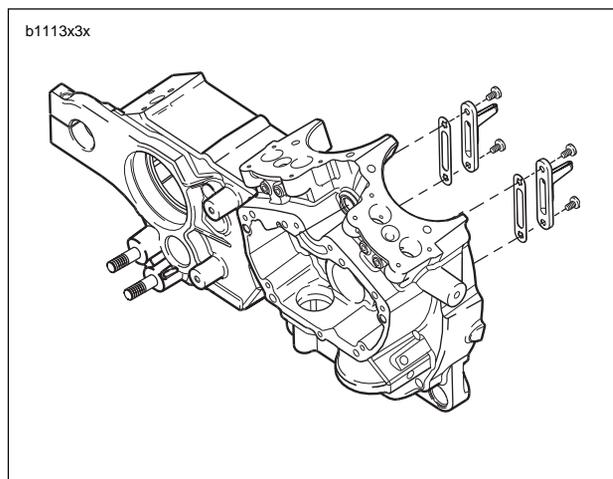


Figure 3-133. Piston Oil Jet Assemblies

1. See [Figure 3-133](#). Remove two TORX screws from each piston jet assembly to free piston jets from right crankcase.
2. Remove piston jet gaskets from right crankcase.

Installation

CAUTION

Gaskets that are missing, distorted, pinched or otherwise damaged will result in either oil leakage or low oil pressure.

NOTE

Gasket is part of the piston jet assembly. Gasket not sold separately.

1. Install **new** piston oil jet assemblies in right crankcase.
2. Apply LOCTITE Low Strength Threadlocker 222 (purple) to threads of TORX screws.
3. With the jet pointed upward, install TORX screws to secure piston jet to crankcase. Tighten screws to 25-35 **in-lbs** (2.8-4.0 Nm).

Flywheel Assembly

1. See [Figure 3-134](#). Remove the flywheel assembly from left crankcase half.

NOTE

Flywheel assembly slides out of the left main bearing by hand. No tools are required for this operation.

NOTE

See [Figure 3-135](#). If it is necessary to remove either the pinion shaft bearing or sprocket shaft bearing, proceed as follows:

2. See [Figure 3-135](#). Gear shaft bearing (12) will remain on flywheel pinion shaft. Remove retaining ring (13) and bearing can be slipped off pinion shaft.



Figure 3-134. Removing Flywheels from Left Crankcase

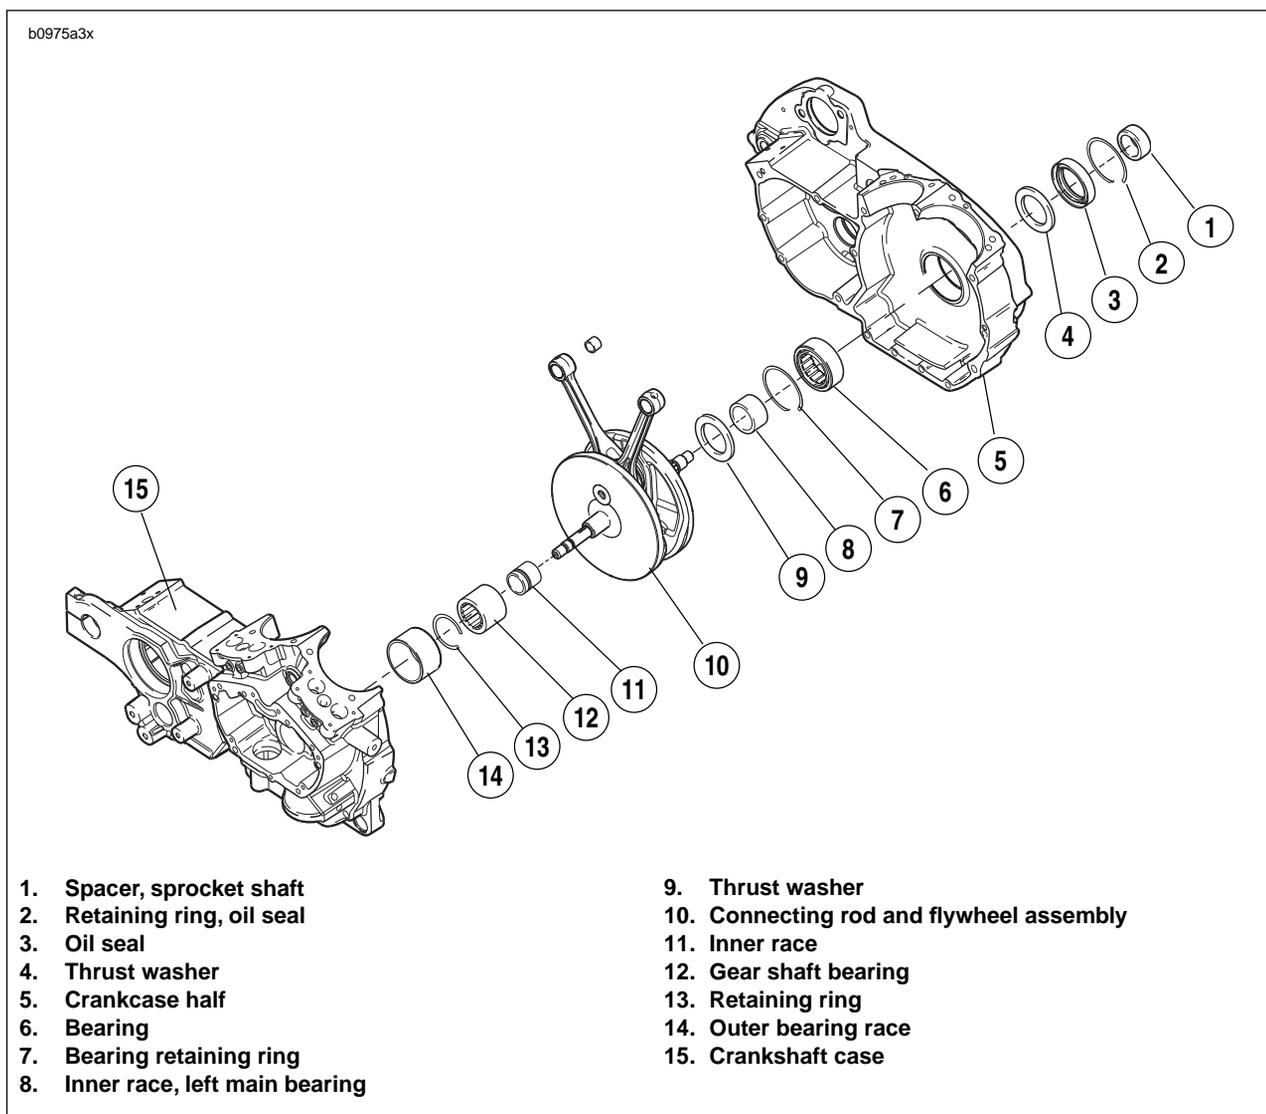


Figure 3-135. Crankcase and Flywheel Assembly

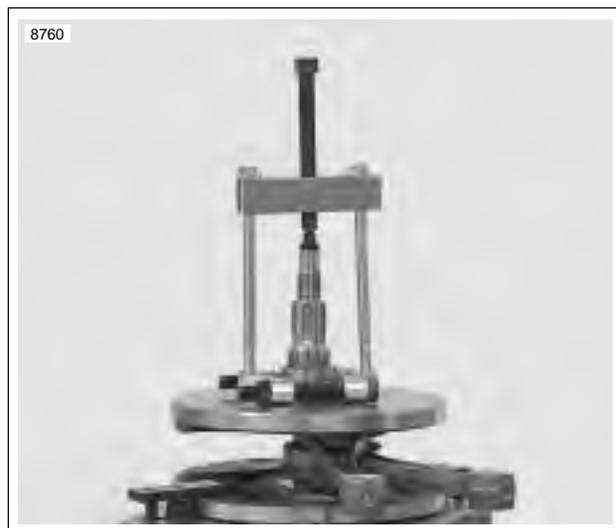


Figure 3-136. Removing Sprocket Shaft Inner Bearing Race

- See [Figure 3-136](#). Place flywheel assembly in FLY-WHEEL SUPPORT FIXTURE (Part No. HD-44385). Pull sprocket shaft bearing inner race with WEDGE ATTACHMENT for CLAW PULLER (Part No. HD-95637-46A) with BEARING RACE REMOVER/INSTALLER (Part No. HD-34902B) and END CAP (Part No. HD-34902-7).

NOTE

Left main bearing inner race does not need to be ground once it is installed on the sprocket shaft.

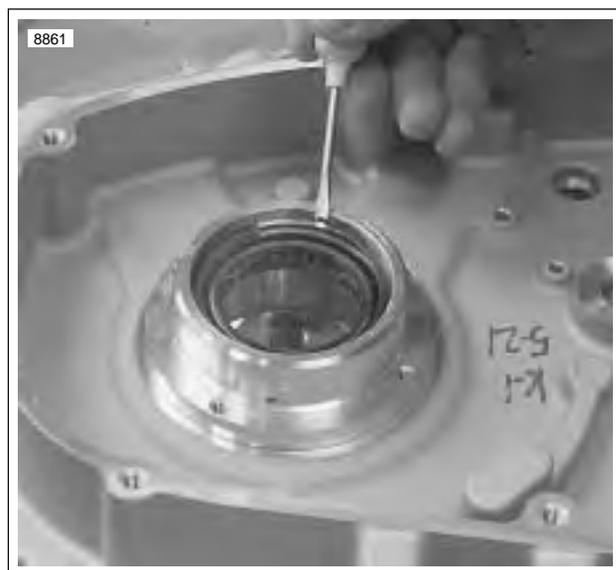


Figure 3-137. Left Main Seal Retaining Ring

- See [Figure 3-137](#). Remove left main oil seal retaining ring.
- See [Figure 3-135](#). Remove left main oil seal (2) from crankcase using Snap-On Tool (Part No. CJ 114, Body Dent Puller)
- Remove outer thrust washer (4) next to left main bearing (6).



Figure 3-138. Removing Left Main Bearing Retaining Ring

- See [Figure 3-138](#). Remove left main bearing retaining ring from the inside of the left crankcase half.

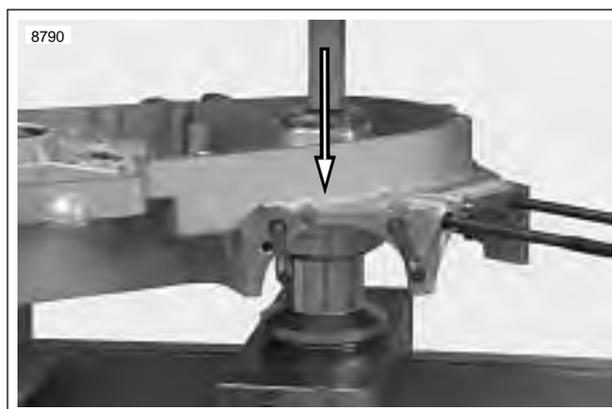


Figure 3-139. Direction of Bearing Removal From Left Crankcase

- See [Figure 3-139](#). Using CRANKCASE BEARING REMOVER/INSTALLER with ADAPTER (Part No. B-45655, HD-42720-2 and HD-46663) press left main bearing out of the left crankcase half.

NOTE

The bearing presses to the inside. There is a shoulder incorporated into the left crankcase half which allows the bearing to be removed in one direction only.

PINION SHAFT BEARING

General

See [Figure 3-135](#). The right side pinion shaft bearing consists of an inner and outer race with rollers.

The inner race (11) is pressed onto the pinion shaft. The outer race is a pressed into the right crankcase half (14).

NOTE

If either inner or outer race show wear, measure both races to confirm correct bearing fit.

Table 3-27. Pinion Shaft Bearing Service Wear Limits

| | in. | mm |
|---------------|--------|---------|
| Inner race OD | 1.2492 | 31.7297 |
| Outer race ID | 1.5672 | 39.8069 |

NOTE

Pinion shaft bearing selection at the factory, during engine build, or replacement of crankcase set or flywheel assembly is based on the largest measured outside diameter (OD) of the inner race and the smallest measured inside diameter (ID) of the outer race (crankcase bushing). A running clearance of 0.0002-0.0008 in. (0.0051-0.0203 mm) is established during crankcase set or flywheel assembly replacement and engine rebuild.

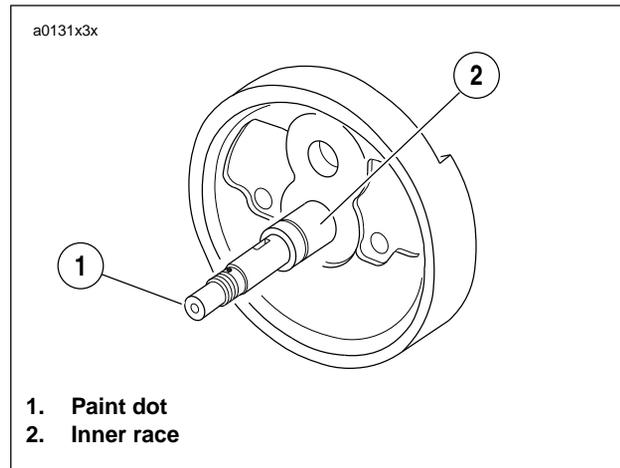


Figure 3-140. Pinion Shaft Inner Race

Table 3-28. Pinion Shaft Inner Race Paint Dot Specifications

| PAINT DOT COLOR | CLASS | INNER RACE OD |
|-----------------|-------|---|
| White | A | 1.2498-1.2500 in. (31.7449-31.7500 mm) |
| Green | B | 1.2496-1.2498 in. (31.7398-31.7449 mm) |

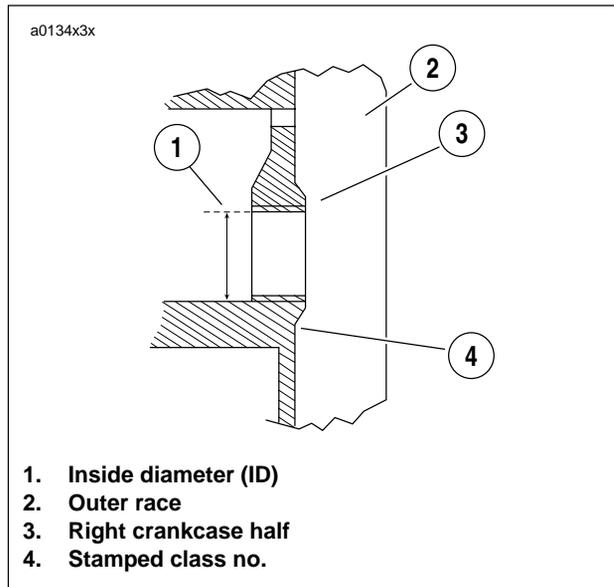


Figure 3-141. Pinion Shaft Outer Race

Table 3-29. Pinion Shaft Outer Race Stamp Specifications

| OUTER RACE ID | CLASS NO. | STAMPED NO. |
|---|-----------|-------------|
| 1.5646-1.5648 in. (39.7408-39.7459 mm) | 1 | 1 |
| 1.5648-1.5650 in. (39.7459-39.7510 mm) | 2 | 2 |
| 1.5650-1.5652 in. (39.7510-39.7561 mm) | 3 | 3 |

NOTE

The different sizes of crankcase sets and flywheel assemblies will not have separate part numbers. That is, a replacement crankcase set may have a class 1, 2 or 3 pinion bearing outer race. Replacement flywheel assemblies will have either a class A or B inner race.

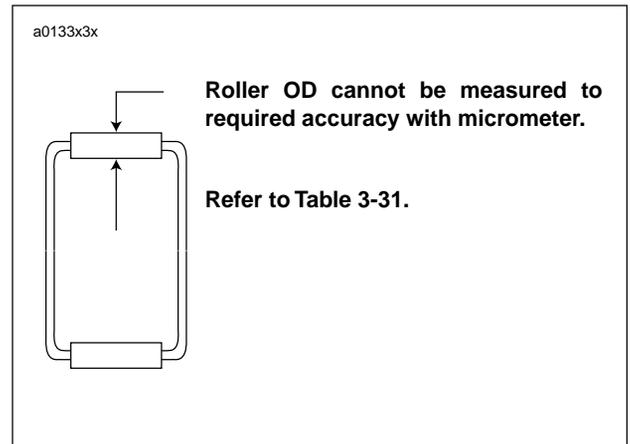


Figure 3-142. Bearing Roller OD

Table 3-30. Pinion Bearing Roller Specifications

| ROLLER OD | COLOR* |
|-----------|--------------|
| Largest | Red |
| | Blue |
| | White (grey) |
| Smallest | Green |

Selection

See [Table 3-31](#). Select bearings using the identification information given for inner and outer races.

Table 3-31. Pinion Shaft Bearing Selection

| FACTORY STAMPED NUMBER | OUTER RACE ID | BEARING SIZE AS IDENTIFIED BY COLOR CODING | | | | | | | | | | | |
|---------------------------|---|---|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|------------|------|
| | over 1.5672 in. 39.807 mm | Service Wear Limit Exceeded – Replace Outer Race and Resize | | | | | | | | | | | |
| | 1.5670-1.5672 in. 39.802-39.807 mm | | | | | | | | | | | | Red |
| | 1.5668-1.5670 in. 39.797-39.802 mm | | | | | | | | | | | Red | Blue |
| | 1.5666-1.5668 in. 39.792-39.797 mm | | | | | | | | | Red | Blue | White-Gray | |
| | 1.5664-1.5666 in. 39.787-39.792 mm | | | | | | | Red | Blue | White-Gray | Green | | |
| | 1.5662-1.5664 in. 39.781-39.787 mm | | | | | | Red | Blue | White-Gray | Green | | | |
| | 1.5660-1.5662 in. 39.776-39.781 mm | | | | | Red | Blue | White-Gray | Green | | | | |
| | 1.5658-1.5660 in. 39.771-39.776 mm | | | | Red | Blue | White-Gray | Green | | | | | |
| | 1.5656-1.5658 in. 39.766-39.771 mm | | | Red | Blue | White-Gray | Green | | | | | | |
| | 1.5654-1.5656 in. 39.761-39.766 mm | | Red | Blue | White-Gray | Green | | | | | | | |
| | 1.5652-1.5654 in. 39.756-39.761 mm | Red | Blue | White-Gray | Green | | | | | | | | |
| 3 | 1.5650-1.5652 in. 39.751-39.756 mm | Red | Blue | White-Gray | Green | | | | | | | | |
| 2 | 1.5648-1.5650 in. 39.746-39.751 mm | Blue | White-Gray | Green | | | | | | | | | |
| 1 | 1.5646-1.5648 in. 39.741-39.746 mm | White-Gray | Green | | | | | | | | | | |
| INNER RACE OD (In) | 1.2496-1.2498 in. | 1.2498-1.2500 in. | 1.2500 - 1.2502 in. | 1.2502 - 1.2504 in. | 1.2504 - 1.2506 in. | 1.2506 - 1.2508 in. | 1.2508 - 1.2510 in. | 1.2510 - 1.2512 in. | 1.2512 - 1.2514 in. | 1.2514 - 1.2516 in. | 1.2516 - 1.2518 in. | | |
| | 31.740 - 31.745 mm | 31.745 - 31.750 mm | 31.750 - 31.755 mm | 31.755 - 31.760 mm | 31.760 - 31.765 mm | 31.765 - 31.770 mm | 31.770 - 31.775 mm | 31.775 - 31.780 mm | 31.780 - 31.786 mm | 31.786 - 31.791 mm | 31.791 - 31.796 mm | | |
| FACTORY COLOR CODE | Green | White | | | | | | | | | | | |

Replacement

NOTE

If either inner or outer race show wear, measure both races to confirm correct bearing fit.

1. Use a dial bore gauge to measure and record ID of outer race. Take four measurements on ID where bearing rollers ride.
 - a. If the largest measurement is larger than 1.5672 in. (39.8069 mm) or the required lapping to remove wear marks would enlarge bore beyond 1.5672 in., continue at Step 5.
 - b. If largest measurement is 1.5672 in. (39.8069 mm) or less, cover the cam bearings with masking tape to prevent debris from entering bearings. Assemble crankcase halves.

NOTE

The next step requires lapping the outer race. To keep sprocket shaft and pinion shaft bearings aligned the lap must be supported by an adaptor or pilot in the left crankcase half.

2. See [LAPPING PINION SHAFT BEARING OUTER RACE](#). Lap race until all wear marks are removed.
3. Measure and record ID of race at four places.
4. Check measurements against the specifications listed in [Table 3-32](#).

Table 3-32. Outer Pinion Race Service Wear Limits


| | |
|----------------------------|-------------------------------|
| Largest ID measured | 1.5672 in. (39.8069 mm) |
| Roundness of ID | within 0.0002 in. (0.0051 mm) |
| Taper | within 0.0002 in. (0.0051 mm) |

- a. If lapping increased bore ID to larger than 1.5672 in. (39.8069 mm), go to Step 5.
 - b. If roundness or taper do not meet specifications, continue lapping until specifications are met.
 - c. If all specifications are met, continue at Step 7 to remove and size inner race.
5. Press the outer race from the right crankcase.
 6. Press **new** outer race into crankcase flush with inside edge of cast-in insert.

NOTE

See [Figure 3-143](#). Dimensions are shown for fabrication of tools used in pressing the outer race into or out of crankcase.

7. The **new** outer race must be lapped slightly to true and align with left case bearing and to meet the following specifications in [Table 3-33](#). See [LAPPING PINION SHAFT BEARING OUTER RACE](#).

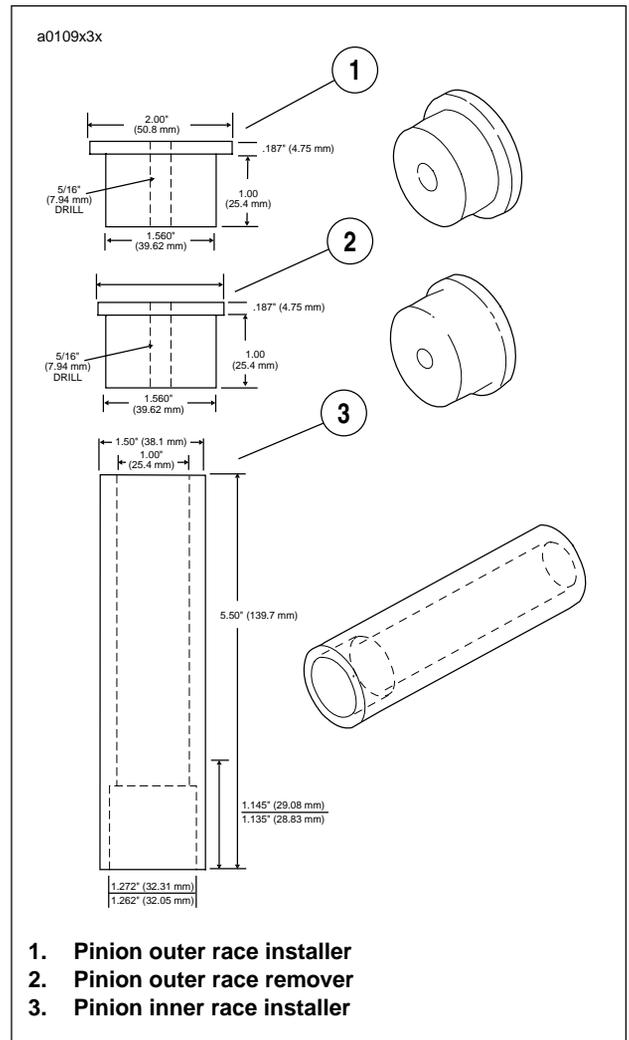


1. Pinion outer race installer
2. Pinion outer race remover
3. Pinion inner race installer

Figure 3-143. Pinion Shaft Bearing Tools

Table 3-33. New Component Specifications

| | |
|-----------------------|--|
| Outer Race ID | 1.5646 - 1.5652 in. (39.7408 - 39.7561 mm) |
| Roundness | within 0.0002 in. (0.0051 mm) |
| Taper | within 0.0002 in. (0.0051 mm) |
| Surface finish | 16 RMS |

8. See [Figure 3-144](#). Pull inner race from pinion shaft using WEDGE ATTACHMENT for CLAW PULLER (Part No. HD-95637-46A) with BEARING RACE REMOVER/INSTALLER (Part No. HD-34902B) and END CAP (Part No. HD-34902-7). Apply heat to race to aid removal.

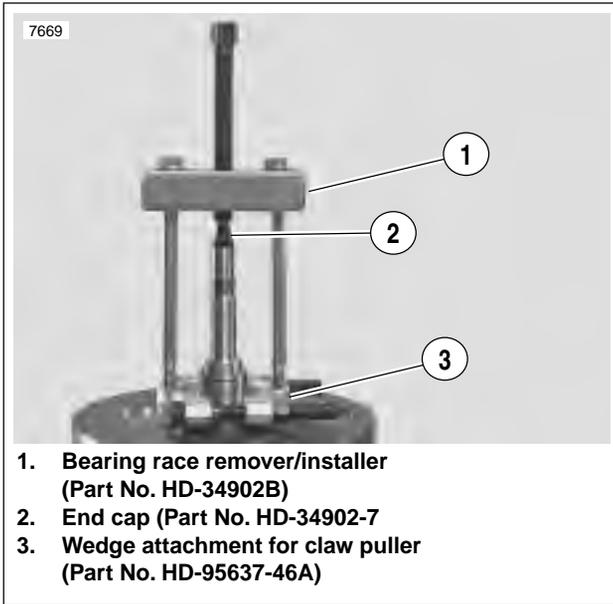

1. Bearing race remover/installer (Part No. HD-34902B)
2. End cap (Part No. HD-34902-7)
3. Wedge attachment for claw puller (Part No. HD-95637-46A)

Figure 3-144. Removing Pinion Bearing Inner Race

NOTES

- For necessary dimensions for constructing a press-on tool for the pinion bearing inner race see [Figure 3-143](#).
 - The **new** inner race must be ground by a competent machinist to OD dimension range for the finished lapped ID of the outer race. See [Table 3-31](#).
9. See [Figure 3-145](#). Press **new** inner race on pinion shaft as shown. When the tool bottoms against the flywheel, correct inner race location is automatically established. The finished inner race must meet the specifications in [Table 3-34](#).

Table 3-34. Pinion Inner Race Specifications

| | |
|----------------|-------------------------------|
| Roundness | within 0.0002 in. (0.0051 mm) |
| Taper | within 0.0002 in. (0.0051 mm) |
| Surface finish | 16 RMS |

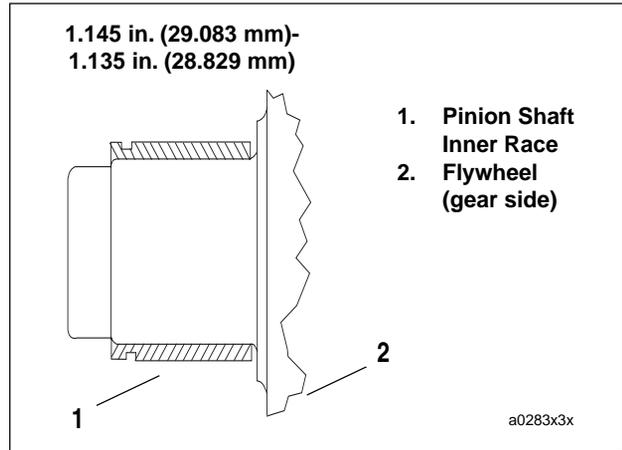


Figure 3-145. Inner Race Location

NOTES

- Have machinist grind inner race to center or middle of required OD range in [Table 3-31](#). This will prevent grinding outer race undersize and gives a more easily achieved tolerance range.
 - If you are unable to perform this operation, Harley-Davidson Motor Company provides a flywheel refurbishing program as outlined in [Tech Tip #38](#).
 - Always use the smallest outer race ID measurement and the largest OD inner race measurement when selecting bearings.
10. The following example illustrates how to determine the required inner race OD.
- a. See [Table 3-31](#). For example purposes, suppose the smallest outer race ID measurement is 1.5651 in. (39.754 mm). This requires an inner race OD range of 1.2496-1.2504 in. (31.740 - 31.760 mm).
 - b. Grind inner race. Measure OD at four places. Check that specifications in Step 8 are met.
 - c. For example purposes, suppose the largest inner race OD measurement after grinding is 1.2499 in. (31.747 mm) OD.
 - d. With a 1.5651 in. (39.754 mm) ID outer race and a 1.2499 in. (31.747 mm) OD inner race, a blue bearing is required.

Lapping Pinion Shaft Bearing Outer Race

1. Secure right and left crankcase halves with three crankcase stud bolts (top center and bottom left and right). The sprocket shaft bearing outer races and large spacer must be installed in left crankcase.
2. See [Figure 3-146](#). Obtain CRANKCASE MAIN BEARING LAPPING TOOL (Part No. HD-96710-40B). Assemble CRANKCASE MAIN BEARING LAP (Part No. HD-96718-87) to lapping handle. Assemble guide sleeve to sprocket shaft bearing bushing. Sleeves, for use with tapered bearing, are assembled to case with bearings and small spacer collar. Finger-tighten the sleeve parts.
3. Insert lap shaft with arbor assembled through pinion bearing bushing and into guide sleeve. Tighten arbor expansion collars using a length of 0.156 in. (3.962 mm) rod as spanner until arbor begins to drag. Do not adjust arbor snug in bushing or bushing will develop a condition where hole is larger at ends than it is in the center.
4. Withdraw arbor far enough to coat lightly with 220 grit lapping compound. Do not apply a heavy coat.
5. Reposition lap in bushing and turn handle at moderate hand speed. Work lap back and forth in bushing, as it is revolved, to avoid grooving and tapering.
6. At frequent intervals, remove lap from crankcase, wash and inspect bushing. Lapping is completed when entire bushing surface has a dull, satin finish rather than a glossy, smooth appearance. If necessary, flush off lap in cleaning solvent, air dry and apply fresh, light coat of fine lapping compound.

CHECKING CONNECTION ROD SIDE PLAY

1. See [Figure 3-147](#). Check connecting rod side play with a thickness gauge as shown.
2. If side play measurement is greater than service wear limit listed below, replace flywheel/connecting rod assembly. Service wear limit, 0.036 in. (0.8 mm)

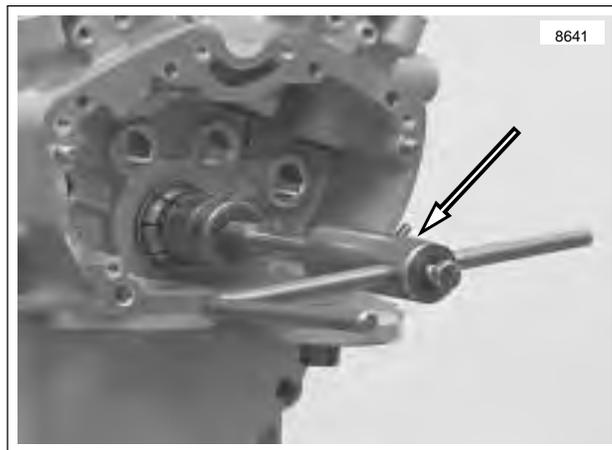


Figure 3-146. Lapping Pinion Shaft Bearing Outer Race with Crankcase Main Bearing Lapping Tool (Part No. HD-96710-40B)

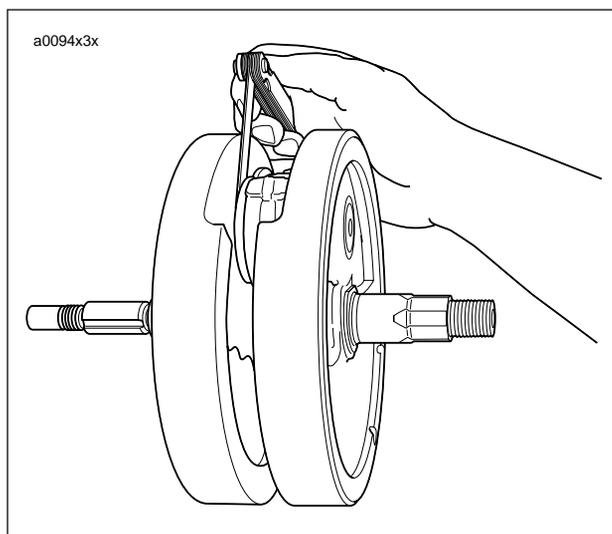


Figure 3-147. Checking Connecting Rod Side Play

ASSEMBLY

Crankcase Halves

NOTE

Lubricate all parts with Harley-Davidson 20W50 engine oil, and proceed as follows:

1. See [Figure 3-149](#). Using CRANKCASE BEARING REMOVER/INSTALLER (Part No. B-45655, HD-42720-2

and HD-46663), install left main bearing into left crankcase half from the inside.

NOTE

Make sure that the bearing assembly bottoms against the machined shoulder in the left crankcase half.

2. Install bearing retaining ring in left crankcase half.
3. Install transmission. See [6.14 TRANSMISSION INSTALLATION](#).

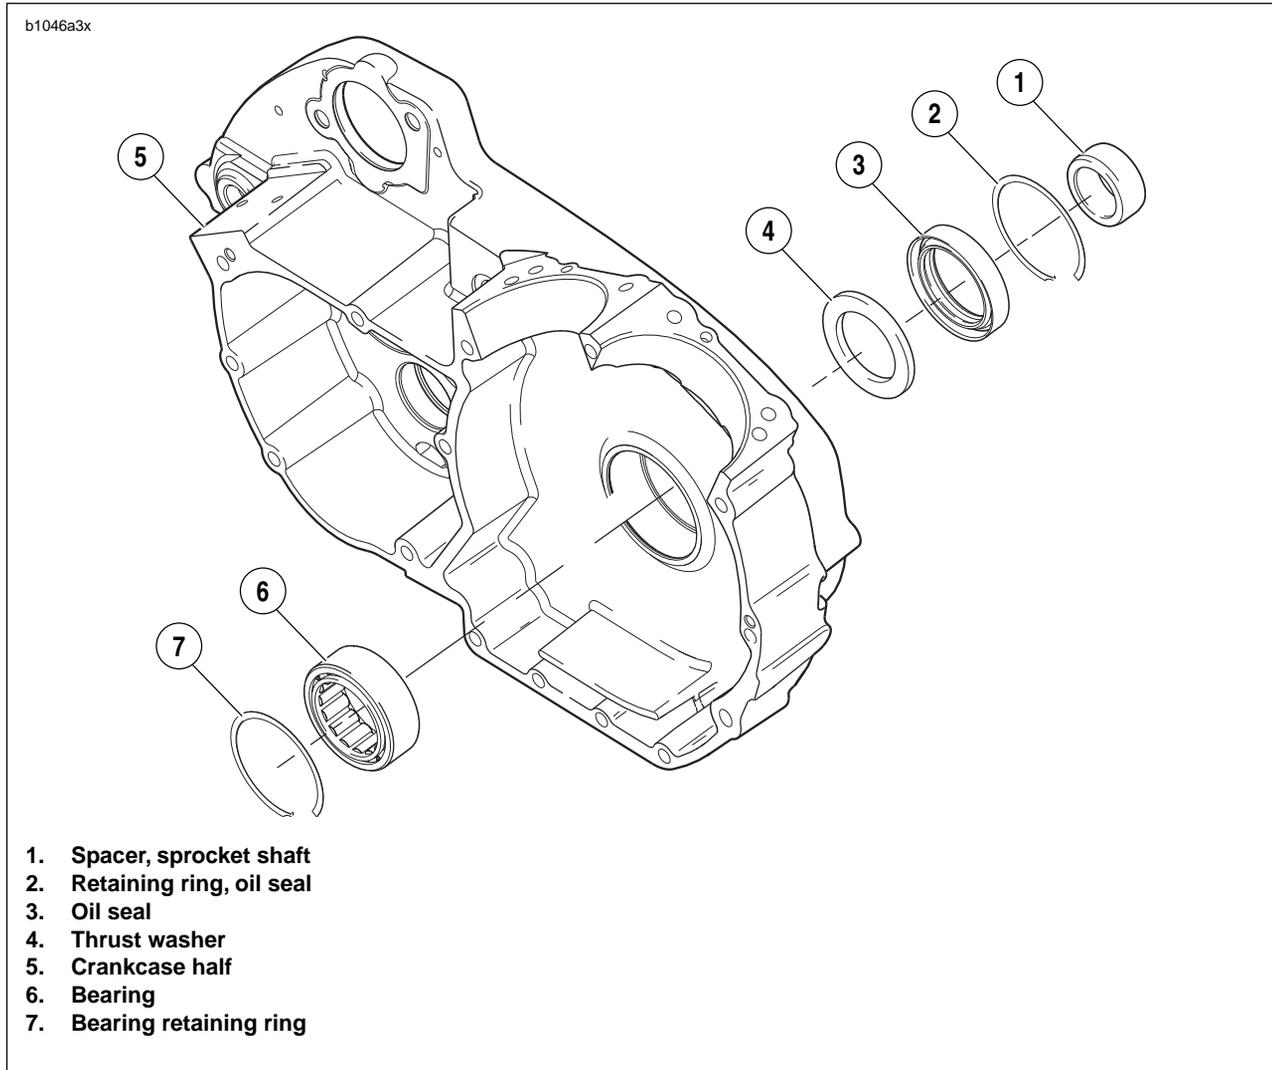


Figure 3-148. Left Main Bearing Assembly

HOME

4. See [Figure 3-150](#). Attach left crankcase half to engine stand.
5. Install flywheel assembly using CRANKSHAFT GUIDE (Part No. HD-42326).
6. See [Figure 3-151](#). Install pinion shaft bearing.
 - a. Lubricate pinion shaft bearing with engine oil.
 - b. Slip bearing on pinion shaft.
 - c. Install **new** retaining ring in groove of pinion shaft bearing inner race.



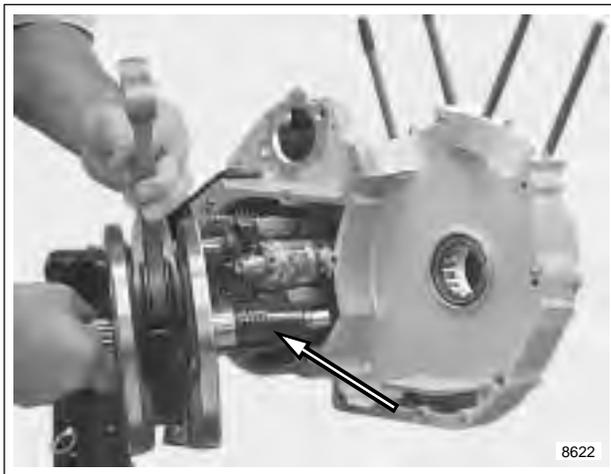


Figure 3-150. Installing Flywheel Assembly with CRANKSHAFT GUIDE (Part No. HD-42326)

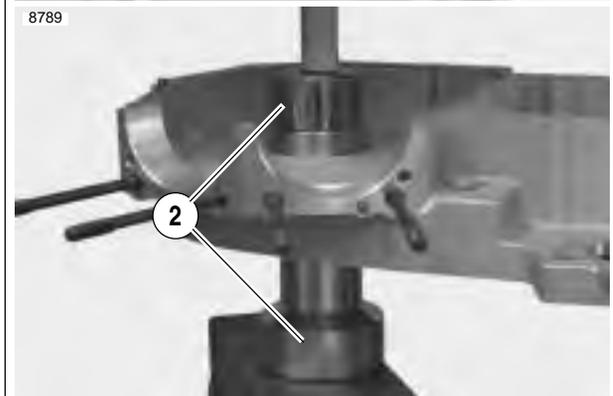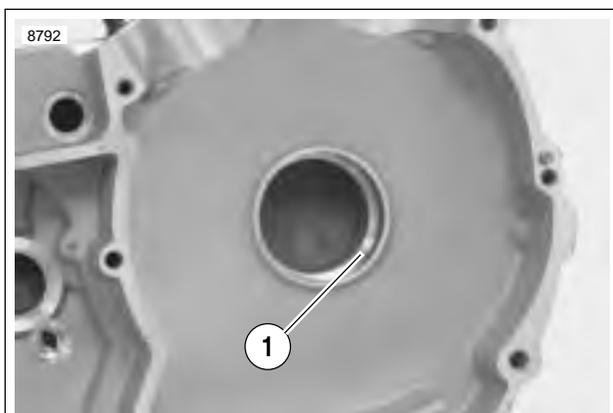

1. **Shoulder**
2. **Crankcase bearing remover/installer tool (Part No. B-45655, HD-42720-2 and HD-46663)**
3. **Retaining ring**

Figure 3-149. Left Main Bearing Installation

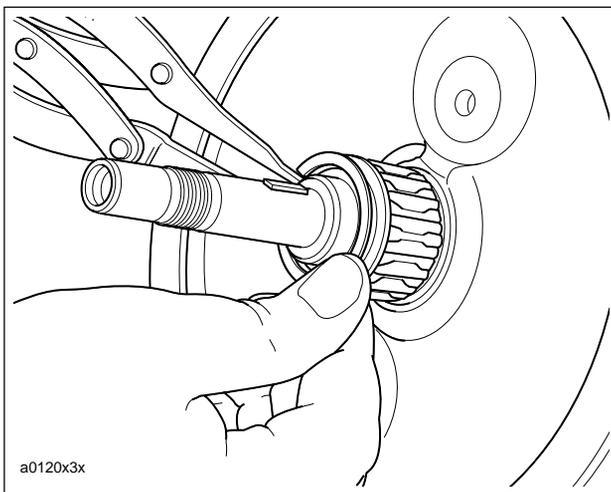


Figure 3-151. Pinion Shaft Bearing

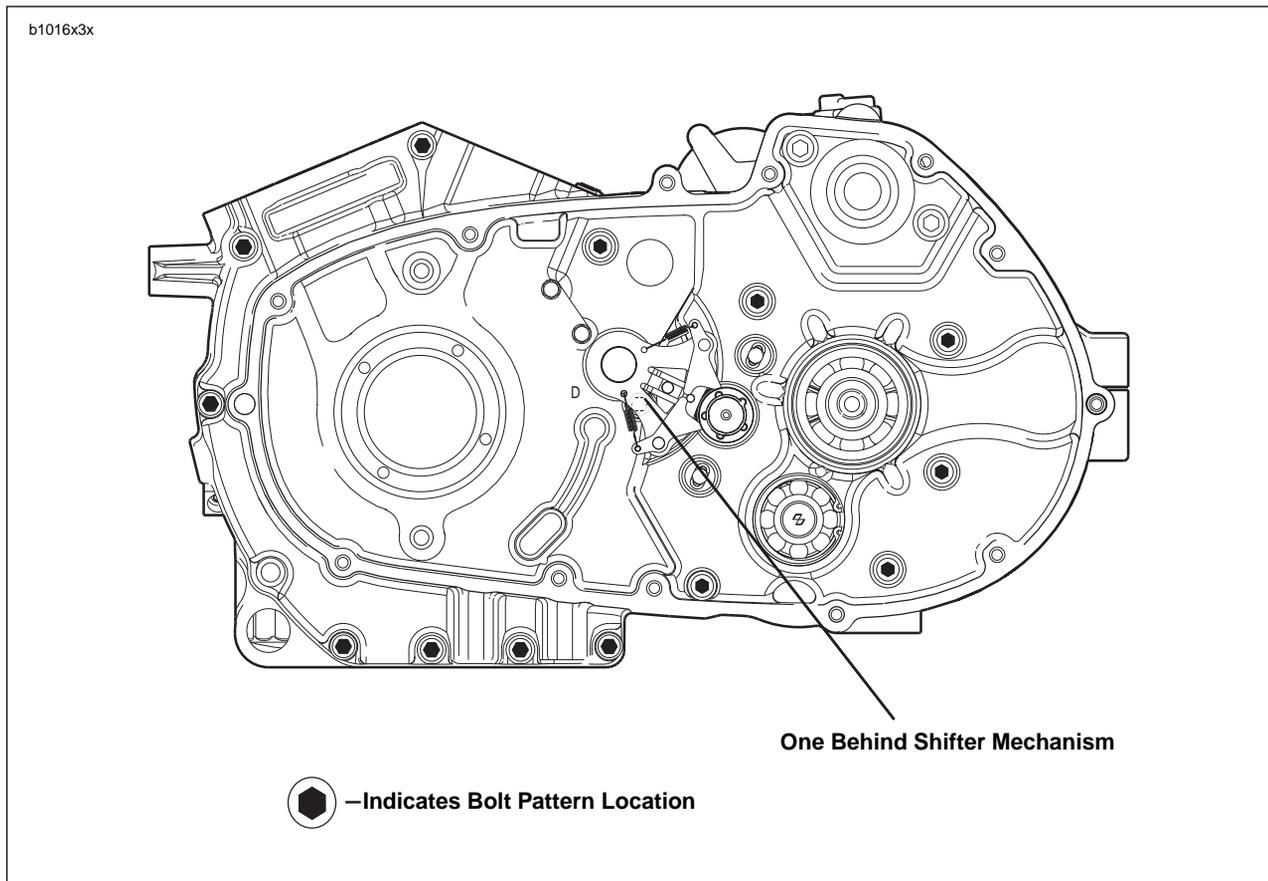


Figure 3-152. Crankcase Fasteners

7. See [Figure 3-152](#). Assemble crankcase halves together.
 - a. Apply a thin coat of DOW CORNING SILASTIC #732 CLEAR sealant to crankcase joint faces.
 - b. Slide outer race in right crankcase over pinion shaft and bearing assembly.
 - c. Tighten fasteners to 15-19 ft-lbs (20-26 Nm).

NOTE

According to manufacturing, there is no torque sequence to follow when tightening crankcase fasteners.

8. See [Figure 3-153](#). Use SPROCKET SHAFT SEAL INSTALLER (Part No. B-45676) to install sprocket shaft seal.
 - a. Center seal/spacer driver over seal, so that the sleeve (smaller OD) seats between seal wall and garter spring.
 - b. Sparingly apply graphite lubricant to threads of pilot shaft to ensure smooth operation.
 - c. Slide sleeve over pilot until sleeve contacts the oil seal. Install handle on top of sleeve.
 - d. Rotate handle clockwise until tool bottoms on crankcase lip. Remove tool from sprocket shaft.
 - e. Install **new** retaining ring in groove in left crankcase next to oil seal.

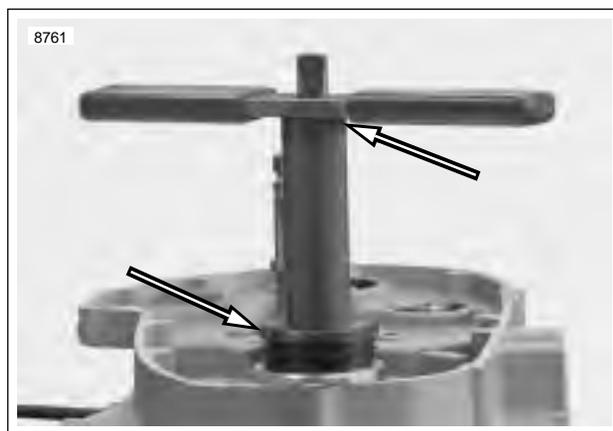


Figure 3-153. Sprocket Shaft Seal/Spacer Installer (Part No. HD-42579 and B-45676)

9. Install thrust washer from the outside against the left main bearing.
10. Install **new** spacer in seal ID. With the thin (lipped) side facing outward, center seal/spacer assembly over bearing bore.

CAUTION

Do not remove the spacer after installation or the new seal will have to be discarded and the procedure repeated.

11. See [Figure 3-154](#). Install cylinder studs.
 - a. Pack clean towels into crankcase opening.
 - b. Place a steel ball into a head screw.
 - c. The cylinder studs have a shoulder at the lower end. Place the end of the stud without the shoulder into the head screw.
 - d. Install the stud in the crankcase with the shoulder end down. Use an air gun to drive the stud until the shoulder reaches the crankcase.
 - e. Remove air gun. Use a torque wrench to tighten stud to 10-20 ft-lbs (14-27 Nm).

12. Install piston and cylinder. See [3.7 CYLINDER AND PISTON](#).
13. Install oil pump. See [3.13 OIL PUMP](#).
14. Install cam gears, gearcase cover, lifter guides and lifters. See [3.16 GEARCASE COVER AND CAM GEARS](#).
15. Install cylinder head. See [3.6 CYLINDER HEAD](#).
16. Install starter. See [5.7 STARTER](#).
17. Install shift linkage.
18. Install all primary drive components. This includes engine sprocket, primary chain, complete clutch assembly, engine sprocket nut and mainshaft nut. See [6.4 CLUTCH](#).
19. Install primary cover. See [6.2 PRIMARY COVER](#).

NOTE

Be sure to refill transmission to proper level with fresh lubricant. See [1.11 PRIMARY CHAIN](#).

20. See [3.6 CYLINDER HEAD](#) and perform the applicable steps.
21. To reinstall engine in frame see [3.5 ENGINE INSTALLATION](#).

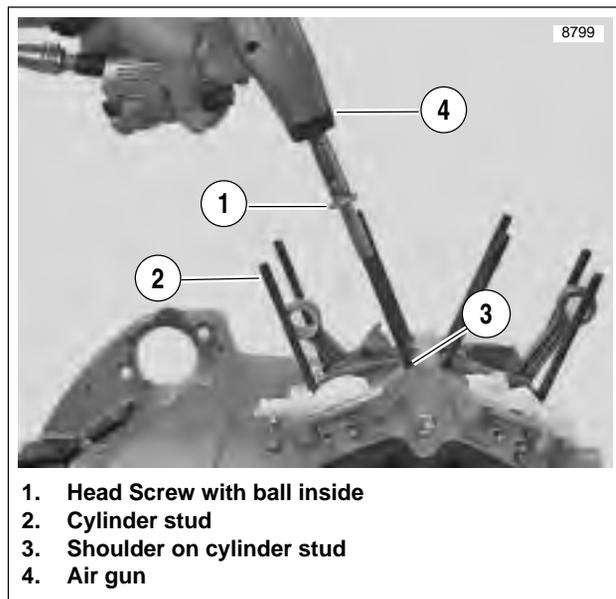


Figure 3-154. Cylinder Studs

NOTES

| SUBJECT | PAGE NO. |
|---|-----------------|
| 4.1 Specifications | 4-1 |
| 4.2 Dynamic Digital Fuel Injection | 4-3 |
| 4.3 Diagnostic Introduction | 4-5 |
| 4.4 Checking For Trouble Codes | 4-6 |
| 4.5 Check Engine Lamp Diagnostics | 4-8 |
| 4.6 Breakout Box | 4-10 |
| 4.7 Wiggle Test | 4-11 |
| 4.8 Initial Diagnostic Check | 4-12 |
| 4.9 Check Engine Lamp Not Illuminated at Key ON | 4-17 |
| 4.10 Check Engine Lamp On Continuously | 4-20 |
| 4.11 Engine Cranks But Will Not Start | 4-23 |
| 4.12 No ECM Power | 4-28 |
| 4.13 Fuel Pressure Test | 4-31 |
| 4.14 Idle Speed Control | 4-36 |
| 4.15 Misfire | 4-37 |
| 4.16 Trouble Code 11 | 4-41 |
| 4.17 Trouble Code 13 | 4-45 |
| 4.18 Trouble Code 14 | 4-50 |
| 4.19 Trouble Code 15 | 4-54 |
| 4.20 Trouble Code 16 | 4-58 |
| 4.21 Trouble Code 21 | 4-62 |
| 4.22 Trouble Codes 23 and 32 | 4-64 |
| 4.23 Trouble Codes 24 and 25 | 4-68 |
| 4.24 Trouble Code 33 | 4-71 |
| 4.25 Trouble Code 35 | 4-74 |
| 4.26 Trouble Code 36 | 4-77 |
| 4.27 Trouble Code 44 | 4-81 |
| 4.28 Trouble Codes 52, 53, 54 and 55 | 4-85 |
| 4.29 Trouble Code 56 | 4-86 |
| 4.30 Electronic Control Module | 4-91 |
| 4.31 Cam Position Sensor and Rotor | 4-93 |
| 4.32 Ignition Coil | 4-97 |
| 4.33 Oxygen Sensor | 4-99 |
| 4.34 Engine Temperature Sensor | 4-100 |
| 4.35 Bank Angle Sensor | 4-102 |
| 4.36 Intake Air Temperature Sensor | 4-103 |
| 4.37 Throttle Position Sensor | 4-104 |

| | |
|--|-------|
| 4.38 Cooling Fan | 4-105 |
| 4.39 Fuel Pump | 4-106 |
| 4.40 Fuel Tank Vent Valve | 4-112 |
| 4.41 Fuel Cap Retaining Ring | 4-113 |
| 4.42 Throttle Body and Intake Manifold | 4-114 |
| 4.43 Intake Leak Test | 4-119 |
| 4.44 Airbox | 4-121 |
| 4.45 Evaporative Emissions Control-California Models | 4-123 |

Table 4-1. Fuel System Specifications

| FUEL SYSTEM | TYPE |
|------------------|-----------------------------------|
| Intake (XB9r) | 45 mm downdraft manifold, ram air |
| Intake (XB12R) | 49 mm downdraft manifold, ram air |
| Fuel delivery | DDFI fuel injection |
| Fuel pressure | 46-53 Psi (317-365 kPa) |
| Recommended fuel | 91 Octane |

Table 4-2. Fuel Tank Specifications

| FUEL TANK CAPACITY | GALLONS | LITERS |
|-------------------------------|---------|--------|
| Total (including reserve) | 3.7 | 14.0 |
| Reserve/Low fuel indicator at | 0.7 | 2.7 |

Table 4-3. Idle Speed Specifications

| IDLE SPEED ADJUSTMENT | |
|-----------------------|---------------|
| Normal idle speed | 1050-1150 RPM |

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|--|----------------|--------------|--|
| | in-lbs | Nm | |
| Airbox back plate fasteners | 84-120 in-lbs | 9.5-13.6 Nm | page 4-122 |
| Bank angle sensor mounting fastener | 12-36 in-lbs | 1.4-4.1 Nm | page 4-102 |
| Battery terminal hardware | 60-96 in-lbs | 7-11 Nm | page 4-112 |
| Cooling fan fasteners | 12-36 in-lbs | 1.4-4.1 Nm | page 4-105 |
| Engine temperature sensor | 120-168 in-lbs | 13.6-19 Nm | page 4-101 |
| Fuel cap retaining ring fasteners | 17-70 in-lbs | 1.9-7.9 Nm | page 4-113 |
| Fuel pump drain plug | 84-108 in-lbs | 9.5-12.2 Nm | page 4-106 |
| Fuel pump harness fastener | 18-22 in-lbs | 2.0-2.5 Nm | page 4-110 |
| Fuel pump screws | 48-51 in-lbs | 5.4-5.8 Nm | page 4-111 |
| Fuel pump wire harness fastener | 18-22 in-lbs | 2.0-2.5 Nm | page 4-110 |
| Fuel rail fasteners | 24-28 in-lbs | 2.7-3.2 Nm | LOCTITE THREADLOCKER 222 (purple), page 4-116, 4-117 |
| Fuel supply line banjo fitting | 84-108 in-lbs | 9.5-12.2 Nm | page 4-111 |
| Fuel tank vent valve fasteners | 39-41 in-lbs | 4.4-4.6 Nm | page 4-112 |
| Ignition coil mounting screws | 120-144 in-lbs | 13.6-16.3 Nm | page 4-98 |
| Ignition rotor mounting bolt | 43-53 in-lbs | 5-6 Nm | LOCTITE THREADLOCKER 243 (blue), page 4-96 |
| Inner timer cover screws | 12-20 in-lbs | 1-2 Nm | page 4-96 |
| Intake flange screws | 96-120 in-lbs | 10.8-13.6 Nm | page 4-118 |
| Oxygen sensor | 40-45 ft-lbs | 54-61 Nm | LOCTITE ANTI-SEIZE, page 4-99 |
| Rear shock absorber reservoir clamp rear | 10-12 ft-lbs | 13.6-16.3 Nm | page 4-124 |
| Throttle position sensor | 16-20 in-lbs | 1.8-2.3 Nm | LOCTITE THREADLOCKER 222 (purple), page 4-104 |
| Timer plate studs | 15-30 in-lbs | 2-3 Nm | page 4-96 |
| Upper tie bar | 25-27 ft-lbs | 33.9-36.6 Nm | page 4-101 |

NOTES

INTRODUCTION

The Buell Dynamic Digital Fuel Injection (DDFI) System provides microprocessor-based electronic engine management for the 984cc and 1203cc engines. The DDFI system has the following features:

- Independently mapped spark and fuel control.
- Engine and air temperature compensated fuel delivery.
- Engine load measurement through throttle position.
- Single point spark delivery (no waste spark).
- Sequential port indirect (manifold) fuel injection.
- Open/Closed-loop air/fuel control.
- Automatic enrichment at start-up.
- Electric cooling fan for improved thermal management.
- Engine speed and position determined using a single sensor (Cam Position Sensor).
- Full diagnostic capability compatible with the DIGITAL TECHNICIAN (Part No. HD-44750-P28/Panasonic Toughbook or Part No. HD-44750-D150/Dell Desktop).
- Returnless fuel system (excess pressure relieved in tank by Fuel Pressure Regulator Valve).
- Interactive muffler control with muffler valve position feedback for 1203cc engines only.

The DDFI system uses six sensors to monitor the operating conditions of the engine and make decisions as to spark and fuel delivery. These sensors are:

- Throttle position (TP) sensor.
- Cam position (CMP) sensor.
- Engine temperature (ET) sensor.
- Intake air temperature (IAT) sensor.
- Oxygen (O₂) sensor.
- Bank Angle Sensor (BAS).

The DDFI system also analyzes how the engine performs during a ride. It then stores this information internally so it will be available for the next ride.

The XB12R utilizes an interactive exhaust system which has an electronically controlled actuator that activates a butterfly valve that controls exhaust flow in the dual-chamber muffler. The engine ECM monitors engine speed and throttle position while activating the valve. See [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).

GENERAL

The Buell DDFI operates both as an open and closed loop system which allows it to adjust for all possible operating conditions. During open loop operation, the system utilizes programmed fuel and spark maps in the ECM which provide ease of cold starting and maximum power at wide open throttle (WOT). The adaptive fuel value which is “learned” during closed loop operation is applied during open loop operation to adjust fuel and spark maps for optimum performance.

During closed loop operation, the system relies on input from the O₂ sensor to provide for the most efficient, stoichiometric air fuel mixture (14.7:1) which results in reduced emissions, good fuel economy and power. In order for the system to enter closed loop operation, the following conditions must be met:

- O₂ Sensor at operating temperature (Engine at normal operating temperature).
- Operation below 5000 RPM with engine under normal, steady load conditions.

By using both open and closed loop systems, engine performance is continuously tuned to compensate for changing conditions and provide maximum performance.

FOR MORE INFORMATION

To learn more about the Buell DDFI system, read the following topics in this section. A system diagram can be found on the next page in [Figure 4-1](#).

Troubleshooting

- [4.3 DIAGNOSTIC INTRODUCTION](#).
- [4.4 CHECKING FOR TROUBLE CODES](#).
- [4.5 CHECK ENGINE LAMP DIAGNOSTICS](#).
- [4.8 INITIAL DIAGNOSTIC CHECK](#).
- [TABLE 4-7. TROUBLE CODES AND FAULT CONDITIONS](#).

Fuel Injection Components

- [4.16 ELECTRONIC CONTROL MODULE](#).
- [4.17 CAM POSITION SENSOR AND ROTOR](#).
- [4.19 OXYGEN SENSOR](#).
- [4.20 ENGINE TEMPERATURE SENSOR](#).
- [4.21 BANK ANGLE SENSOR](#).
- [4.22 INTAKE AIR TEMPERATURE SENSOR](#).
- [4.23 THROTTLE POSITION SENSOR](#).
- [4.25 FUEL PUMP](#).
- [4.28 THROTTLE BODY](#).

b1079x4x

Electronic Control Module (ECM)
 one 12-place black connector [10]
 one 12-place gray connector [11]
 one 1-place connector [165] - (1203cc only^o)

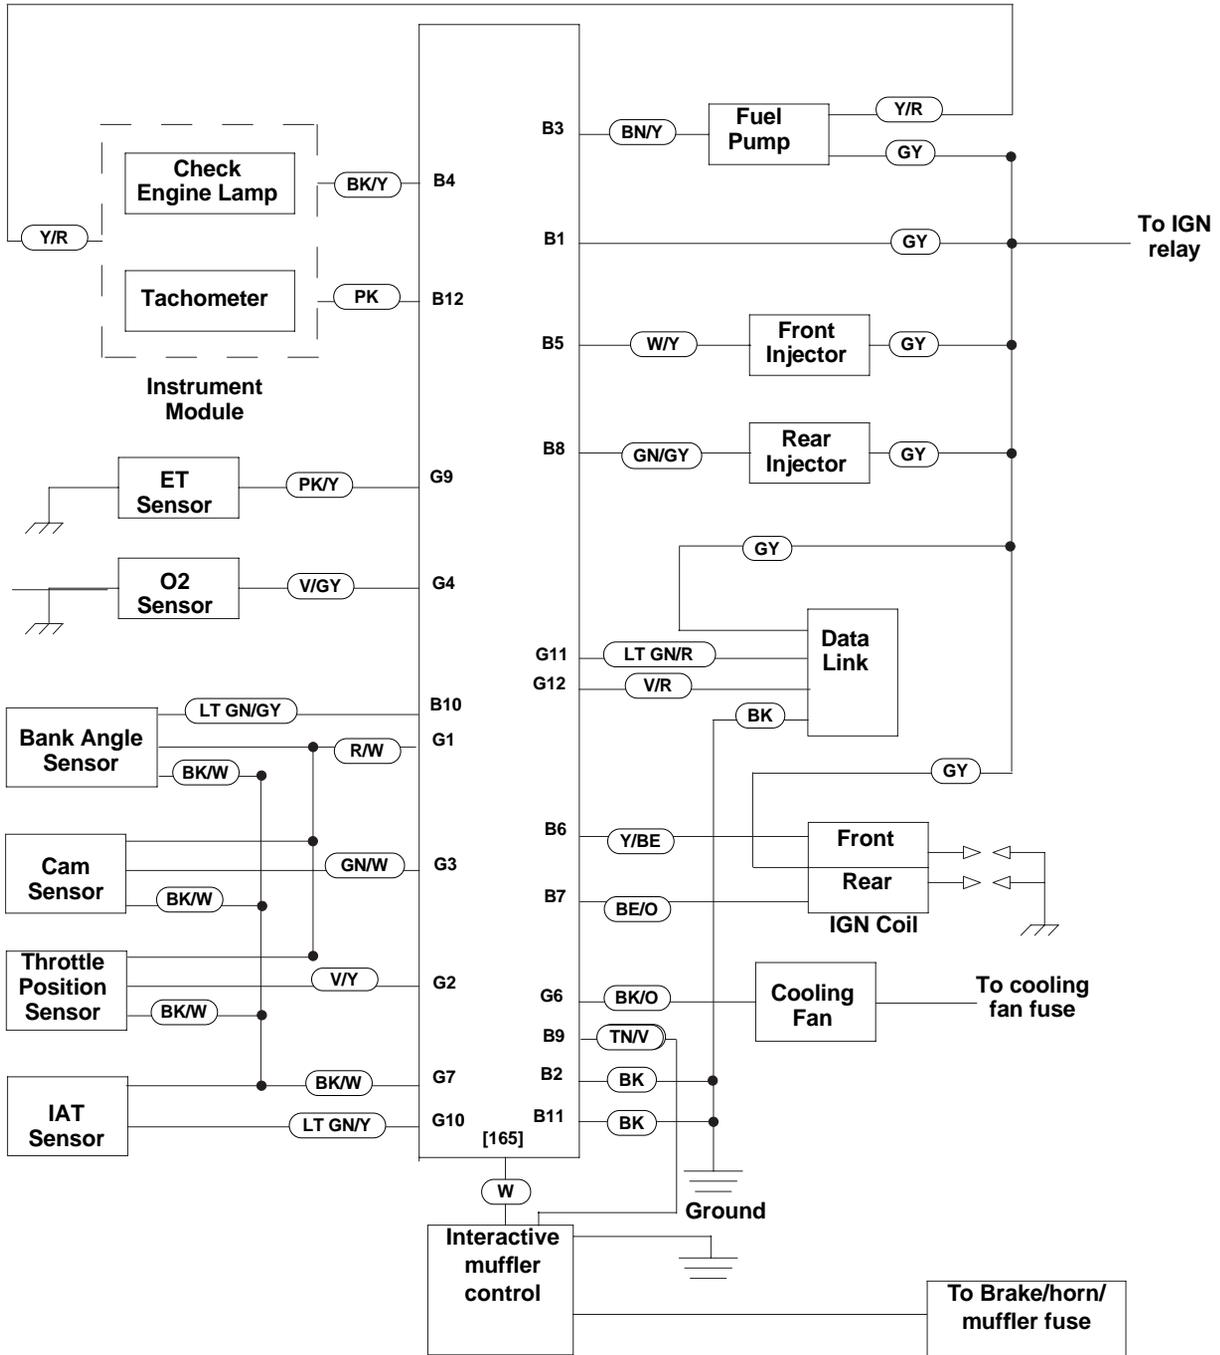


Figure 4-1. Buell Dynamic Digital Fuel Injection

SYSTEM PROBLEMS

All system problems fall into at least one of three general categories.

No Start

The engine cranks over freely, but will not start. This does not include situations where the engine will not crank, such as a bad starter, dead battery, etc. This condition assumes that all obvious checks (fuel in tank, etc.) have been made.

Poor Performance

The engine starts but there are performance problems. These problems may include poor fuel economy, rough idle, engine misfire, engine hesitation, severe spark knock, etc.

Check Engine Lamp

See [Figure 4-2](#). The check engine lamp indicates a fault condition exists. There may also be starting or performance problems.

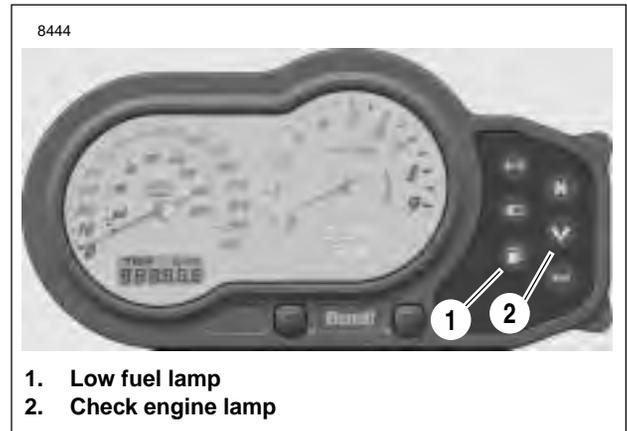


Figure 4-2. Check Engine Lamp

RESOLVING PROBLEMS

NOTE

The most sophisticated method of resolving problems involves using a computer based diagnostic package called DIGITAL TECHNICIAN (Part No. HD-44750).

To resolve system problems, five basic steps are involved. In order of occurrence, they are:

1. Check for trouble codes by observing check engine lamp. See [4.4 CHECKING FOR TROUBLE CODES](#).
2. Retrieve trouble codes using check engine lamp diagnostics. See [4.5 CHECK ENGINE LAMP DIAGNOSTICS](#).
3. Diagnose system problems. This involves using special tools and the diagnostic flow charts in this section.
4. Correct problems through the replacement and/or repair of the affected components.
5. After repairs are performed, the work must be validated. This involves clearing the trouble codes and confirming proper vehicle operation as indicated by the behavior of the check engine lamp.

CHECK ENGINE LAMP

To diagnose system problems, start by observing the behavior of the check engine lamp.

NOTES

- All references to “Key ON” or “Ignition Switch ON” require that the ignition key be in the ON position and the engine stop switch be set to RUN.
- If the check engine lamp is not illuminated at Key ON or if it fails to turn OFF after the initial four second period, then a problem exists in the lamp circuit. See 4.9 CHECK ENGINE LAMP NOT ILLUMINATED AT KEY ON or 4.10 CHECK ENGINE LAMP ON CONTINUOUSLY for more information.



Figure 4-3. Ignition Key Switch

1. When the ignition switch is turned ON after being OFF for 2 seconds or more, the check engine lamp will illuminate for approximately four seconds and then turn off.
2. See Figure 4-5. After lamp turns off after being illuminated for the first four second period, one of three situations may occur.
 - a. The lamp remains off. This indicates there are no current fault conditions or stored functional trouble codes currently detected by the ECM.
 - b. The lamp stays off for only four seconds and then comes back on for an eight second period. This indicates a functional error code is stored, but no current trouble code exists.
 - c. If the lamp remains on beyond the eight second period, then a current trouble code exists.
3. See CODE TYPES for a complete description of trouble code formats.

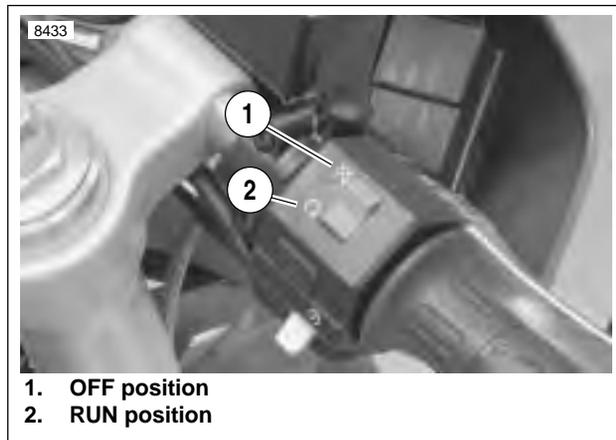


Figure 4-4. Engine Stop Switch

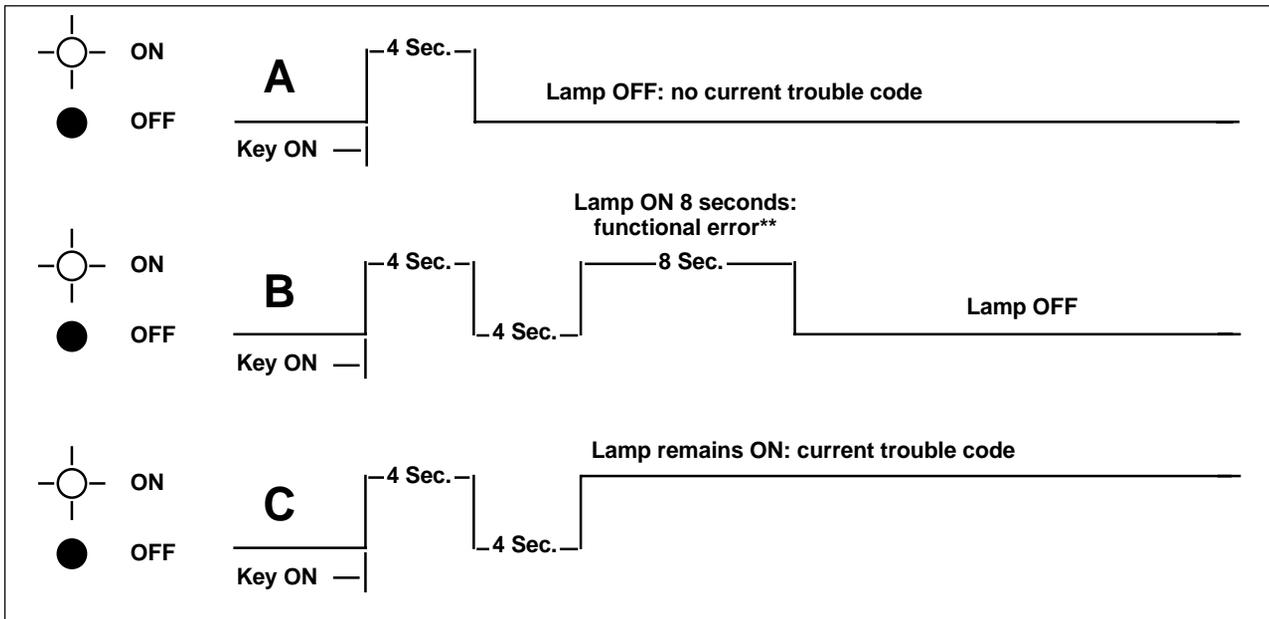


Figure 4-5. Check Engine Lamp Operation

CODE TYPES

There are two types of trouble codes: current and historic. Certain codes are also called functional codes. Historic codes can be read using the check engine lamp diagnostics.

All trouble codes reside in the memory of the ECM until the code is cleared by DIGITAL TECHNICIAN (Part No. HD-44750) or a total of 50 trips has elapsed. A trip consists of a start and run cycle, the run cycle lasting at least 30 seconds. After the 50 trip retention period, the trouble code is automatically erased from memory providing that no subsequent faults of the same type are detected in that period.

NOTE

Trouble codes relating to the fuel injectors or the ignition coil can only be fully diagnosed during actuation. For example, a problem with the ignition coil will be considered a current fault even after the problem is corrected, since the ECM will not know of its resolution until after the coil is activated by vehicle start sequence. In this manner, there may sometimes be a false indication of the current trouble code.

Current

Current trouble codes are those which presently disrupt motorcycle operation. See the appropriate flow charts for solutions.

Historic

If a particular problem happens to resolve itself, the active status problem is dropped and it becomes a historic fault rather current fault.

Historic trouble codes are stored for a length of time to assist in the diagnosis of intermittent faults. The check engine lamp will not turn on during normal operation if only historic codes are present.

It is important to note that historic trouble codes may also be present whenever the system indicates the existence of a current fault. See [4.4 CHECKING FOR TROUBLE CODES](#) if multiple trouble codes are found.

Functional

Trouble codes 52 through 56 are considered to be functional codes. They indicate an internal problem with the ECM (trouble codes 52 through 55) or with the camshaft sensor/timing (trouble code 56).

RETRIEVING TROUBLE CODES

The fuel injection system provides two levels of diagnostics.

- The most sophisticated mode employs using a computer based diagnostic package called DIGITAL TECHNICIAN (Part No. HD-44750).
- The other mode requires using the check engine lamp. See [4.5 CHECK ENGINE LAMP DIAGNOSTICS](#) for more information.

MULTIPLE TROUBLE CODES

The throttle position, cam position and bank angle sensors are all connected to the same reference line (5v REF). If this line goes to ground or open, multiple trouble codes (codes 11 and 56) may be set.

Also, the ECM, fuel pump, fuel injectors and ignition coil all receive +12 volts from the ignition relay. If this line should go to ground the ignition fuse will open.

Always start with the trouble code having the lowest numerical value. See [Table 4-7](#).

CHECK ENGINE LAMP BLINKS

In addition to alerting the rider to trouble codes, the check engine lamp will blink during operation to warn of potentially damaging engine operating temperatures. If the key is in the on position and the check engine lamp is blinking, the engine is at a potentially damaging temperature. While this condition is in effect, the ECM will reduce engine power to assist in cooling the engine down to a safe operating temperature. The check engine lamp will blink until the engine has cooled to a safe operating temperature. This will not set a trouble code.

RETRIEVING TROUBLE CODES

Trouble codes may be retrieved without the use of the DIGITAL TECHNICIAN (Part No. HD-44750).

1. Remove protective cover from data link connector [91A]. Data link connector is located on left side of vehicle under fairing.
2. To activate the diagnostic feature of the check engine lamp, proceed as follows:
 - a. See Figure 4-6. Create diagnostic test wire from parts shown.
 - b. See Figure 4-7. Install diagnostic test wire across Terminal 1 and Terminal 2 on the data link connector [91A].
 - c. Turn the ignition/light key switch ON and wait approximately eight seconds for the check engine lamp to start flashing.
3. See Figure 4-8. All trouble codes are sent out as a series of flashes. To retrieve the first digit of the trouble code simply observe the number of times the lamp flashes.
 - a. The transmission of a trouble code is always preceded by six rapid flashes (about 3 per second).
 - b. This "intermission" is followed by a 2 second pause in which the lamp is off.
 - c. The lamp will then flash one or more times to indicate the first digit of the trouble code. The length of time the lamp is illuminated and the length of time in which it is off are each about 1 second in duration.
4. The second digit follows:
 - a. Following transmission of the first digit, there is another 2 second pause in which the lamp is off.
 - b. The lamp will then flash one or more times to indicate the second digit of the trouble code. Count the number of times the lamp flashes to retrieve the second digit.
5. If more than one trouble code is sent:
 - a. Following transmission of the second digit of the first code, there is a third 2 second pause in which the lamp is off.
 - b. After the pause comes the intermission, which is followed by transmission of the next recorded trouble code.
 - c. All subsequent codes are sent in the same manner, each separated from the next by the intermission.
6. Once all codes have been sent, the data string is repeated. When you have recorded the same trouble code twice, it is an indication that the transmission has been restarted and that all trouble codes have been retrieved.

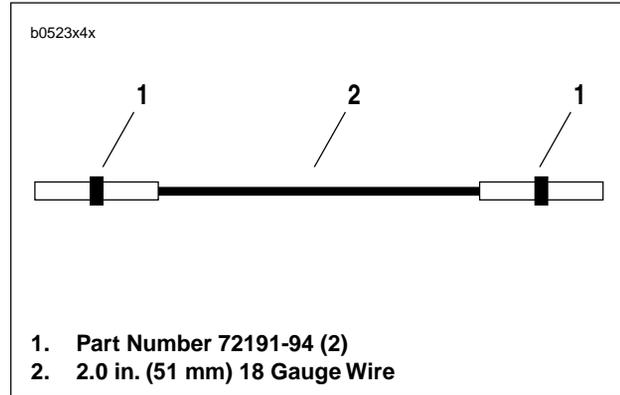


Figure 4-6. Diagnostic Test Wire

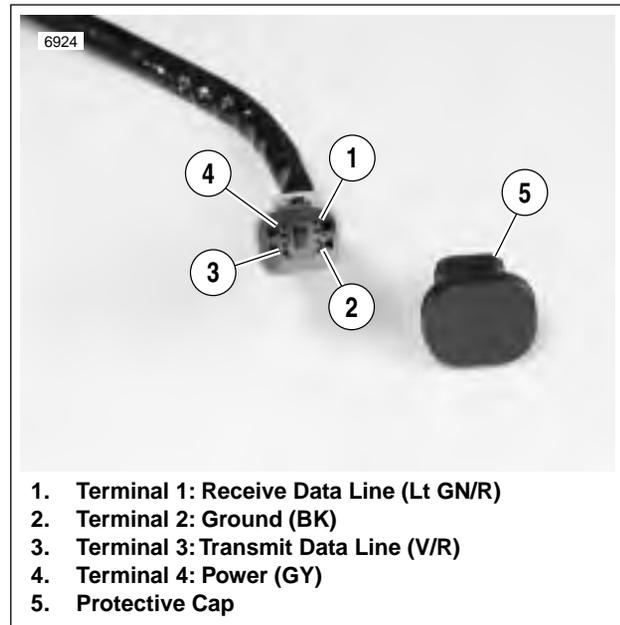


Figure 4-7. Installing Diagnostic Test Wire

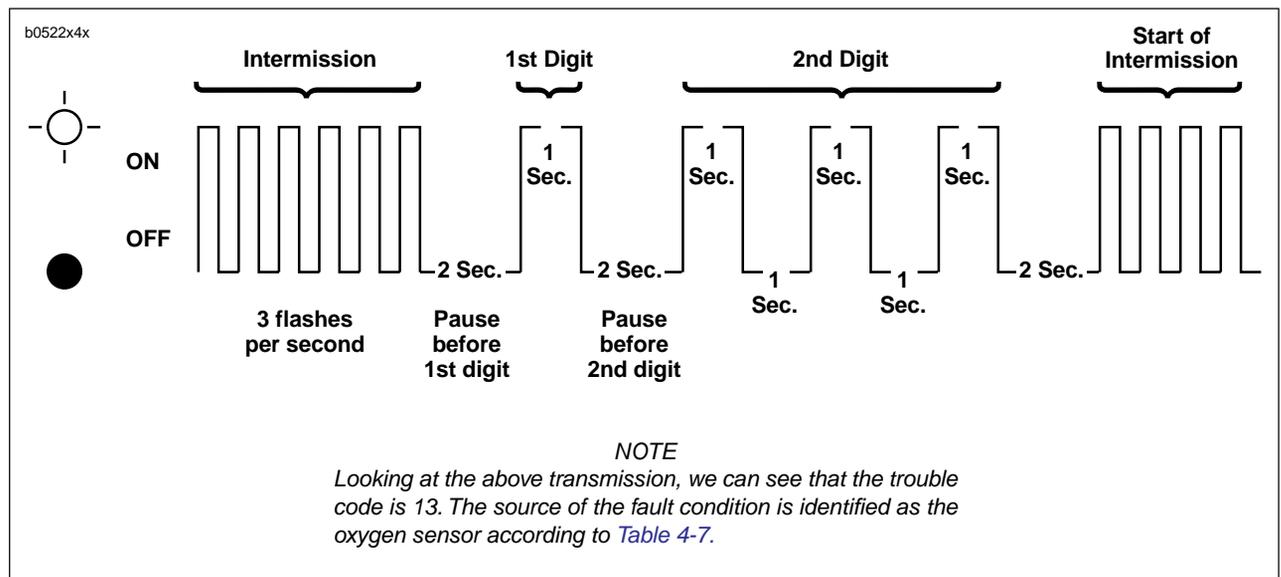


Figure 4-8. Check Engine Lamp Diagnostics

NOTE

If the lamp flashes at a rate faster than normal, then you are observing the "Intermission" only, which means that no trouble codes are present.

7. When examining trouble codes, write down all codes on a piece of paper.
 - a. If trouble codes are present, see [Table 4-7](#). Follow the applicable flow charts for each code.
 - b. If trouble codes are NOT present, but starting or driveability problems are evident, see charts under [4.8 INITIAL DIAGNOSTIC CHECK](#).
8. Turn the ignition/light key switch OFF.
9. Remove diagnostic test wire and install protective cover over data link connector. Return data link to original position.

IMPORTANT NOTE

The engine may be started and run when the trouble codes are received using a jumper wire on Pins 1 and 2 of the data link connector. However, if the jumper wire is removed with the engine running, the check engine lamp will continue to flash trouble codes. To stop check engine lamp from flashing codes, turn engine stop switch OFF.

CLEARING CODES

After correcting system problems, clear trouble codes. If the Digital Technician (Part No. HD-44750) is not available, perform 50 start and run cycles. To execute one run cycle:

1. Start the vehicle.
2. Let it run for at least 30 seconds.
3. Turn the engine off.

GENERAL

The BREAKOUT BOX (Part No. HD-42682) splices into the main harness. Used in conjunction with a DVOM, it allows circuit diagnosis of wiring harness and connections without having to probe with sharp objects.

INSTALLATION

1. Remove ECM. See 4.16 ELECTRONIC CONTROL MODULE.
2. Depress latches on each side of connectors [10] (black) and [11] (gray) and detach connectors from the ECM.
3. See Figure 4-10. Attach Breakout Box (2) to black connector [10].
 - a. Attach black connector from Breakout Box to corresponding black ECM connector.
 - b. Attach black connector from the wiring harness to black connector on Breakout Box.
4. Attach Breakout Box to gray connector [11].
 - a. Attach gray connector from Breakout Box to corresponding gray ECM connector.
 - b. Attach gray connector from the wiring harness to gray connector on Breakout Box.

REMOVAL

1. See Figure 4-10. Depress latches on each side of connectors [10] (black) and [11] (gray).
2. Detach Breakout Box connectors from ECM connectors.
3. Detach Breakout Box connectors from wiring harness.
4. Install ECM. See 4.16 ELECTRONIC CONTROL MODULE.

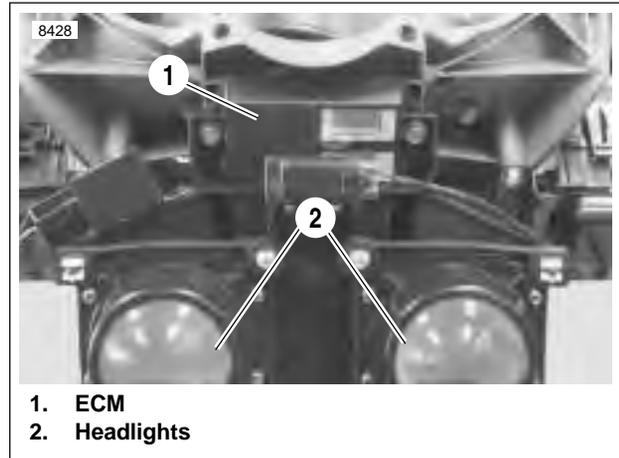


Figure 4-9. ECM



Figure 4-10. Installed Breakout Box

GENERAL


NOTE

DIGITAL TECHNICIAN (Part No. HD-44750) can be used to perform wiggle test.

The wiggle test checks for the presence of intermittents in a wiring harness.

PROCEDURE

1. See [Figure 4-11](#). Connect DVOM (Part No. HD-39978) to wiring harness between the suspect connections. When diagnosing ECM connections, a [BREAKOUT BOX](#) (Part No. HD-42682) may be used to simplify the procedure. See [4.6 BREAKOUT BOX](#).
2. Set DVOM to read voltage changes.
3. Start motorcycle engine and run at idle.
4. Shake or wiggle harness to detect intermittents. If intermittents are present, radical voltage changes will register on the DVOM.

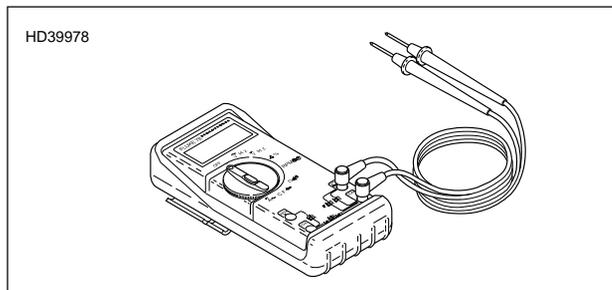

**Figure 4-11. Fluke 78 Multimeter (DVOM)
(Part No. HD-39978)**

GENERAL

To locate faulty circuits, follow the diagnostic flow charts in this section. For a systematic approach, always begin with [INITIAL DIAGNOSTICS](#). Read the general information and then work your way through the flow chart box by box.

Diagnostic Notes

If a numbered circle appears adjacent to a flow chart box, then more information is offered in the diagnostic notes. Many diagnostic notes contain supplemental information, descriptions of various diagnostic tools or references to other parts of the manual where information on the location and removal of components may be obtained.

Circuit Diagram/Wire Harness Connector Table

When working through a flow chart, refer to the illustrations, the associated circuit diagram and the wire harness connector table as necessary. The wire harness connector table for each circuit diagram identifies the connector number, description, type and general location.

In order to perform most diagnostic routines, a Breakout Box and a DVOM are required. See [4.6 BREAKOUT BOX](#). To perform the circuit checks with any degree of efficiency, a familiarity with the various wire connectors is also necessary.

Job/Time Code Values

Dealership technicians filing warranty claims should use the job/time code values printed in **bold text** underneath the appropriate repair.

INITIAL DIAGNOSTICS

General Information

The diagnostic check identifies problems caused by an electronic control system malfunction.

IMPORTANT NOTE

The engine may be started and run when the trouble codes are received using a jumper wire on Pins 1 and 2 of the data link connector. However, if the jumper wire is removed with the engine running, the check engine lamp will continue to flash trouble codes. To stop check engine lamp from flashing codes, turn engine stop switch OFF.

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the diagnostic check flow charts. See [Diagnostic Check \(Part 1 of 2\)](#).

1. Compare engine behavior to tables.
 - a. Starts hard. See [Table 4-4](#).
 - b. Hesitates, stumbles, surges, misfires and/or sluggish performance. See [Table 4-5](#).
 - c. Engine exhaust emits black smoke or fouls plugs. See [Table 4-6](#).

2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), black socket probes and patch cord.
3. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).

All diagnostic codes are listed in [Table 4-7](#).

Table 4-4. Engine Starts Hard

| CAUSE | SOLUTION |
|----------------------------|---|
| Engine temperature circuit | 4.18 TROUBLE CODE 14 . |
| Improper fuel pressure | 4.13 FUEL PRESSURE TEST . |
| Spark plugs and/or wires | 4.15 MISFIRE . |
| Battery discharged | See charging system troubleshooting in Section 7. |
| Cam position sensor | 4.29 TROUBLE CODE 56 . |
| Manifold leak | Spray water around induction module seals with engine idling. If RPM changes, change seals. |
| Ignition coil | 4.15 MISFIRE . |
| Leaky injectors | Test fuel injectors. See 4.28 THROTTLE BODY . |
| Valve sticking | See Section 3. |

Table 4-5. Engine Performance Problems

| CAUSE | SOLUTION |
|---|---|
| Engine temperature circuit | 4.18 TROUBLE CODE 14 . |
| Improper ignition timing | 1.18 IGNITION TIMING . |
| Cam position sensor circuit | 4.29 TROUBLE CODE 56 . |
| Spark plugs and/or wires | 4.15 MISFIRE . |
| Improper fuel pressure | 4.13 FUEL PRESSURE TEST . |
| Improper throttle position sensor adjustment | Calibrate sensor using DIGITAL TECHNICIAN (Part No. HD-44750). |
| Manifold leak | See 4.29 INTAKE LEAK TEST . |
| Throttle plates not opening fully | 1.16 THROTTLE CABLE AND IDLE SPEED ADJUSTMENT . |
| EVAP hose disconnected from induction module (CA) | Connect. |

Table 4-5. Engine Performance Problems

| CAUSE | SOLUTION |
|---|---------------------------------------|
| Water or dirt in fuel system | Drain and refill with fresh fuel. |
| Cooling fan inoperative | 4.26 TROUBLE CODE 36. |
| Interactive muffler control Inoperative | 4.21 TROUBLE CODE 21 |

Table 4-6. Engine Exhaust Emits Black Smoke or Fouls Plugs

| CAUSE | SOLUTION |
|--|--|
| Engine temperature circuit | 4.18 TROUBLE CODE 14. |
| Clogged air filter | 1.15 AIR CLEANER FILTER. |
| Improper throttle position sensor adjustment | Calibrate sensor. See 4.23 THROTTLE POSITION SENSOR. |
| Leaky injectors | Test fuel injectors. See 4.28 THROTTLE BODY. |
| Improper fuel pressure | 4.13 FUEL PRESSURE TEST. |

Table 4-7. Trouble Codes and Fault Conditions

| CODE NO. | FAULT CONDITION | RELEVANT TOPIC |
|----------------|-------------------------------|--|
| 11 | Throttle position sensor | 4.16 TROUBLE CODE 11 |
| 13 | Oxygen sensor | 4.17 TROUBLE CODE 13 |
| 14 | Engine temperature sensor | 4.18 TROUBLE CODE 14 |
| 15 | Intake air temperature sensor | 4.19 TROUBLE CODE 15 |
| 16 | Battery voltage | 4.20 TROUBLE CODE 16 |
| 21 | Interactive muffler control | 4.21 TROUBLE CODE 21 |
| 23 | Front fuel injector | 4.22 TROUBLE CODES 23 AND 32 |
| 24 | Front ignition coil | 4.23 TROUBLE CODES 24 AND 25 |
| 25 | Rear ignition coil | 4.23 TROUBLE CODES 24 AND 25 |
| 32 | Rear fuel injector | 4.22 TROUBLE CODES 23 AND 32 |
| 33 | Fuel pump | 4.24 TROUBLE CODE 33 |
| 35 | Tachometer | 4.25 TROUBLE CODE 35 |
| 36 | Cooling fan | 4.26 TROUBLE CODE 36 |
| 44 | Bank angle sensor | 4.27 TROUBLE CODE 44 |
| 52, 53, 54, 55 | ECM failure | 4.28 TROUBLE CODES 52, 53, 54 AND 55 |
| 56 | Cam sync failure | 4.29 TROUBLE CODE 56 |

b1080a4x


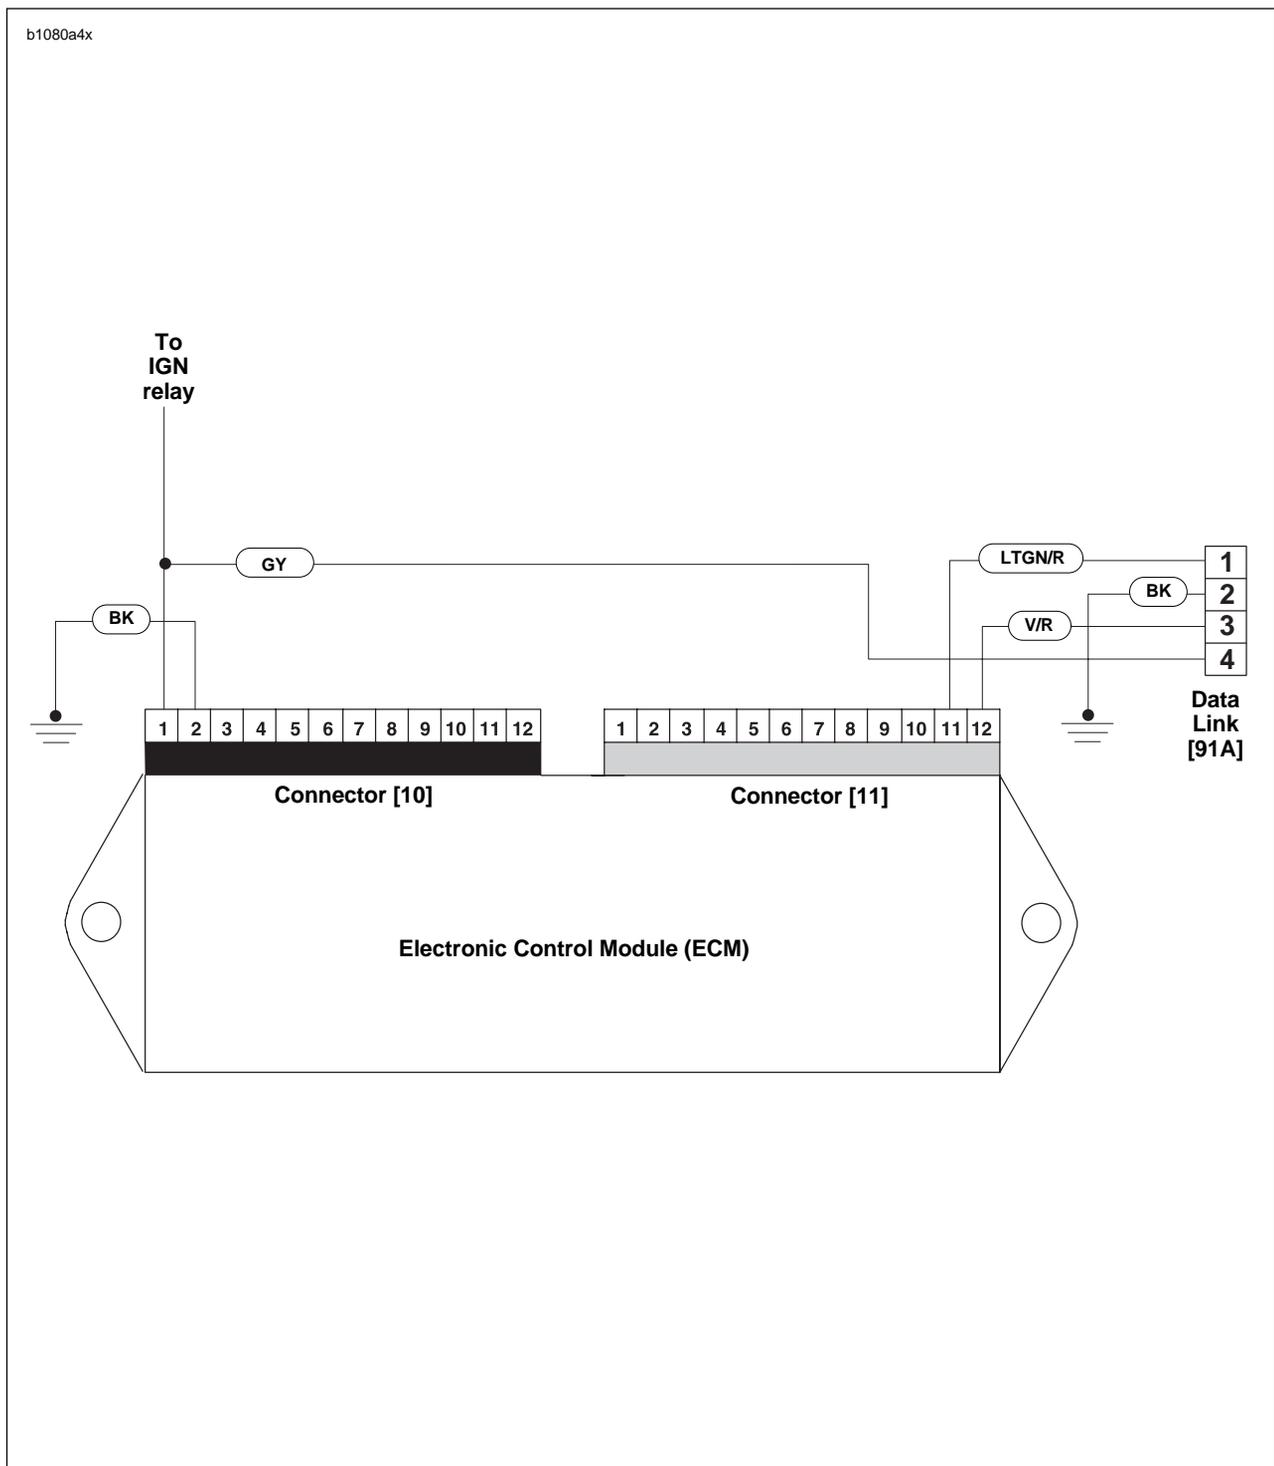


Figure 4-12. Diagnostic Check


Table 4-8. Wire Harness Connectors in Figure 4-12.

| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|-------------|------------------|---------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [91A] | data link | 4-place Deutsch | beneath left side fairing |

Diagnostic Check (Part 1 of 2)

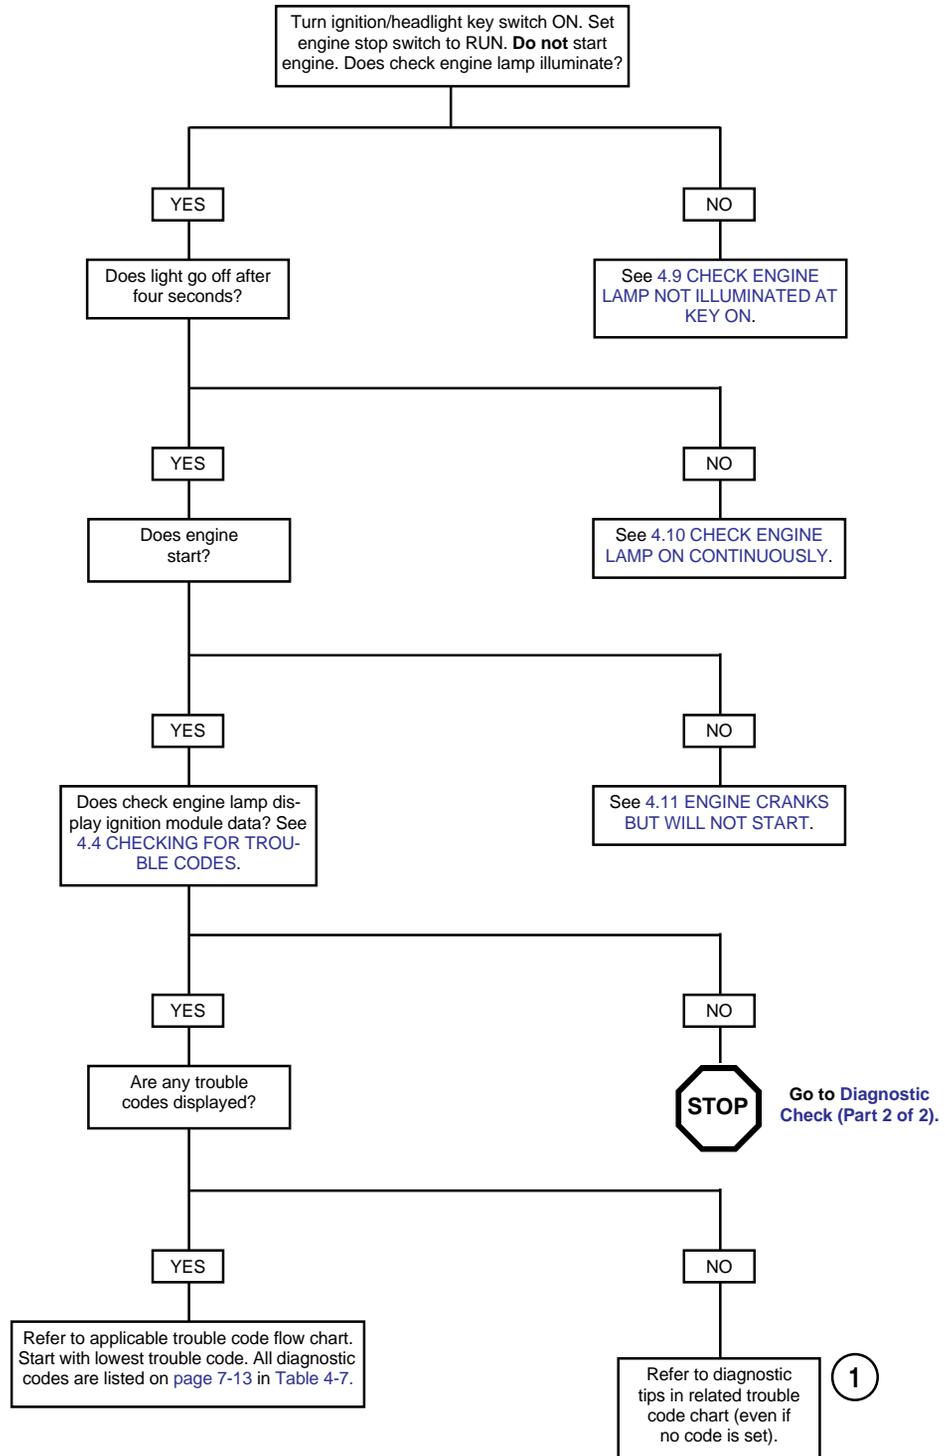

Diagnostic Check (Part 2 of 2)

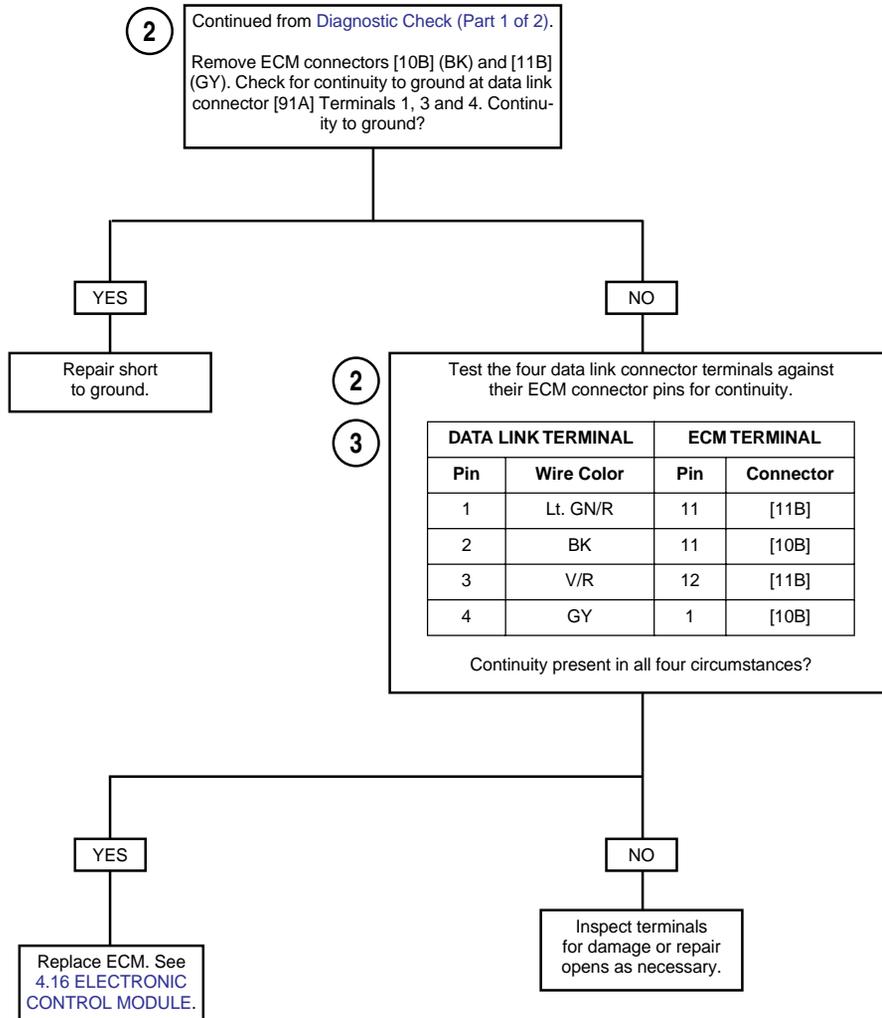

GENERAL

If the engine stop switch is set to RUN with the engine off, and the ignition key switch is turned ON, the check engine lamp should illuminate for four seconds. See [Figure 4-13](#).

Battery voltage is supplied to the lamp bulb. The lamp bulb is grounded by the ECM through the BK/Y wire. A lack of power to the ECM will cause the check engine lamp to be inoperative and also create a no start situation.

DIAGNOSTICS

Diagnostic Tips

Check for the following conditions:

- Check for open in BK/Y wire.
- Check for blown accessory fuse.

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the [Test 4.9](#) flow chart.

1. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), black pin probe and patch cord.
2. See [Figure 4-14](#). Inspect connector [10] (black) for contamination or corrosion. If connection is good, replace ECM. See [4.16 ELECTRONIC CONTROL MODULE](#).
3. Check continuity between instrument connector [39] Pin 7 and ECM connector [10] (black), Pin 4.



Figure 4-13. Check Engine Lamp (Typical)

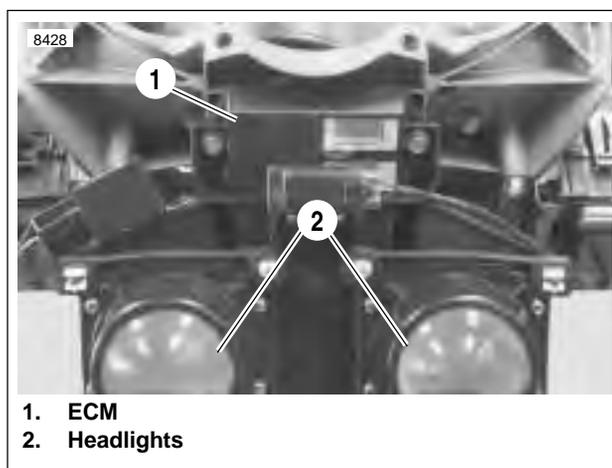


Figure 4-14. Electronic Control Module

b1081b4x


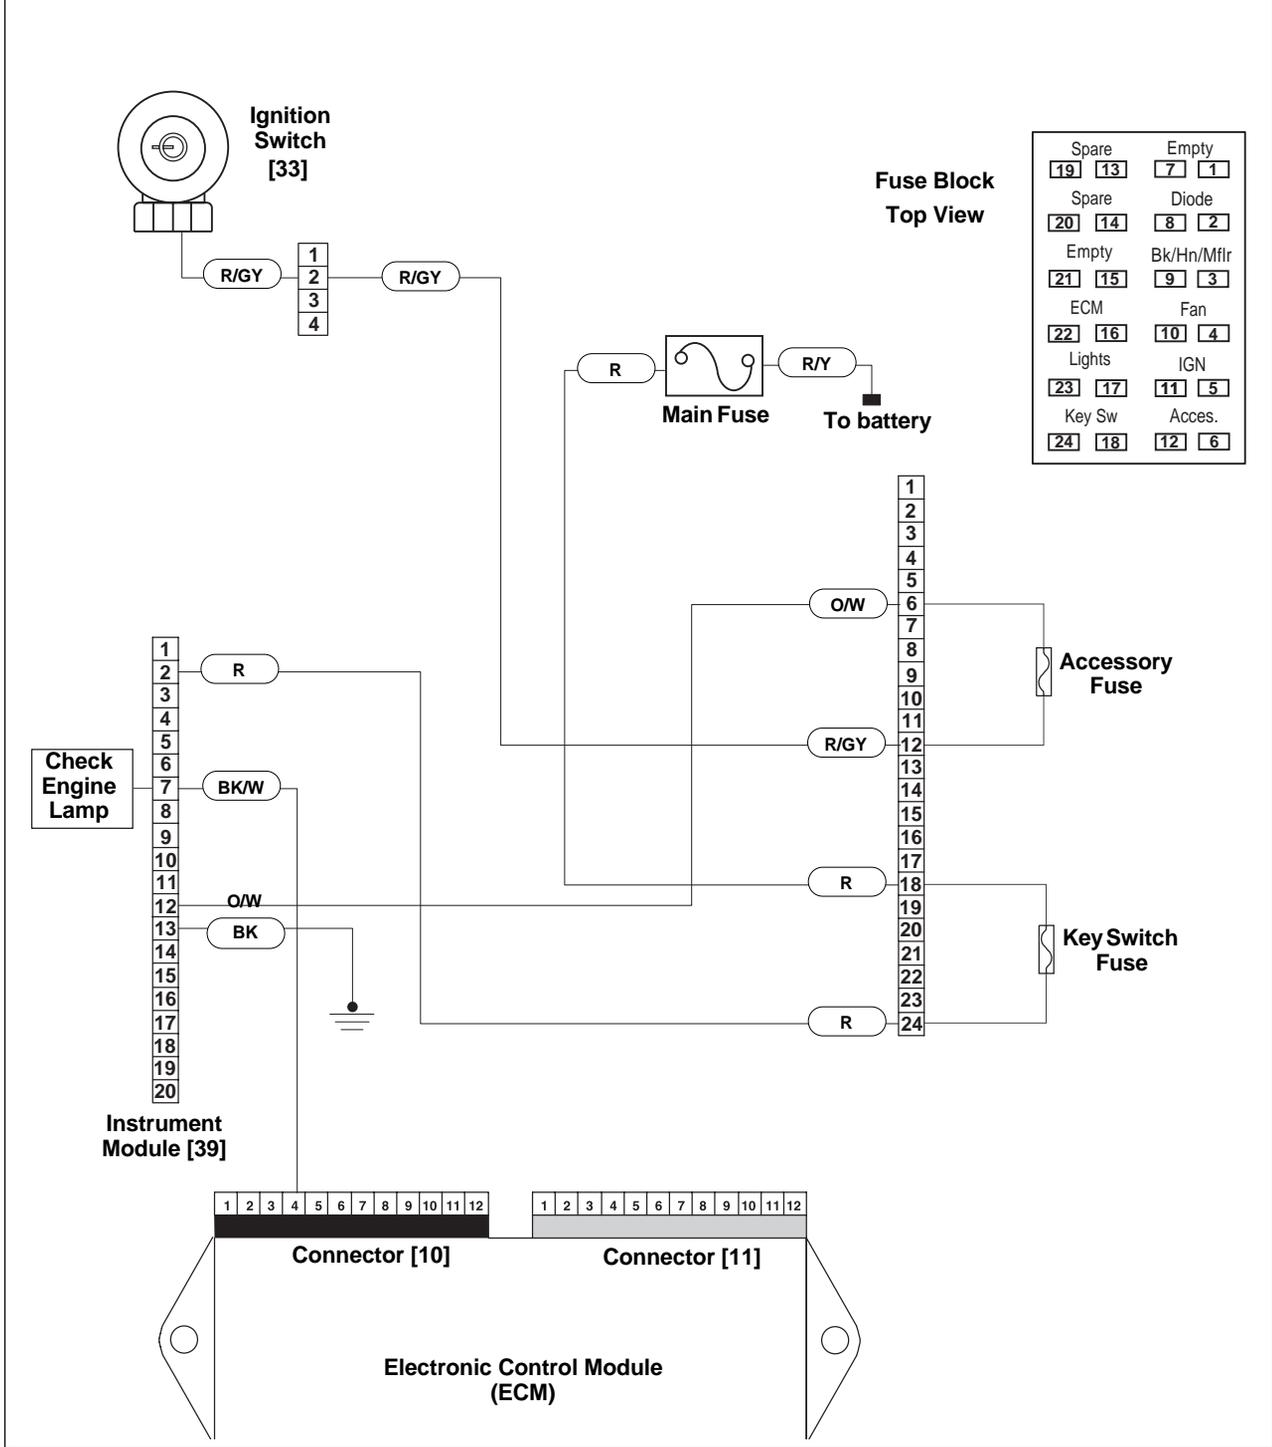


Figure 4-15. Check Engine Lamp Circuit

Table 4-9. Wire Harness Connectors in Figure 4-15.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------|--------------------|------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [39] | instrument module | 20-place Multilock | in fairing |

Test 4.9

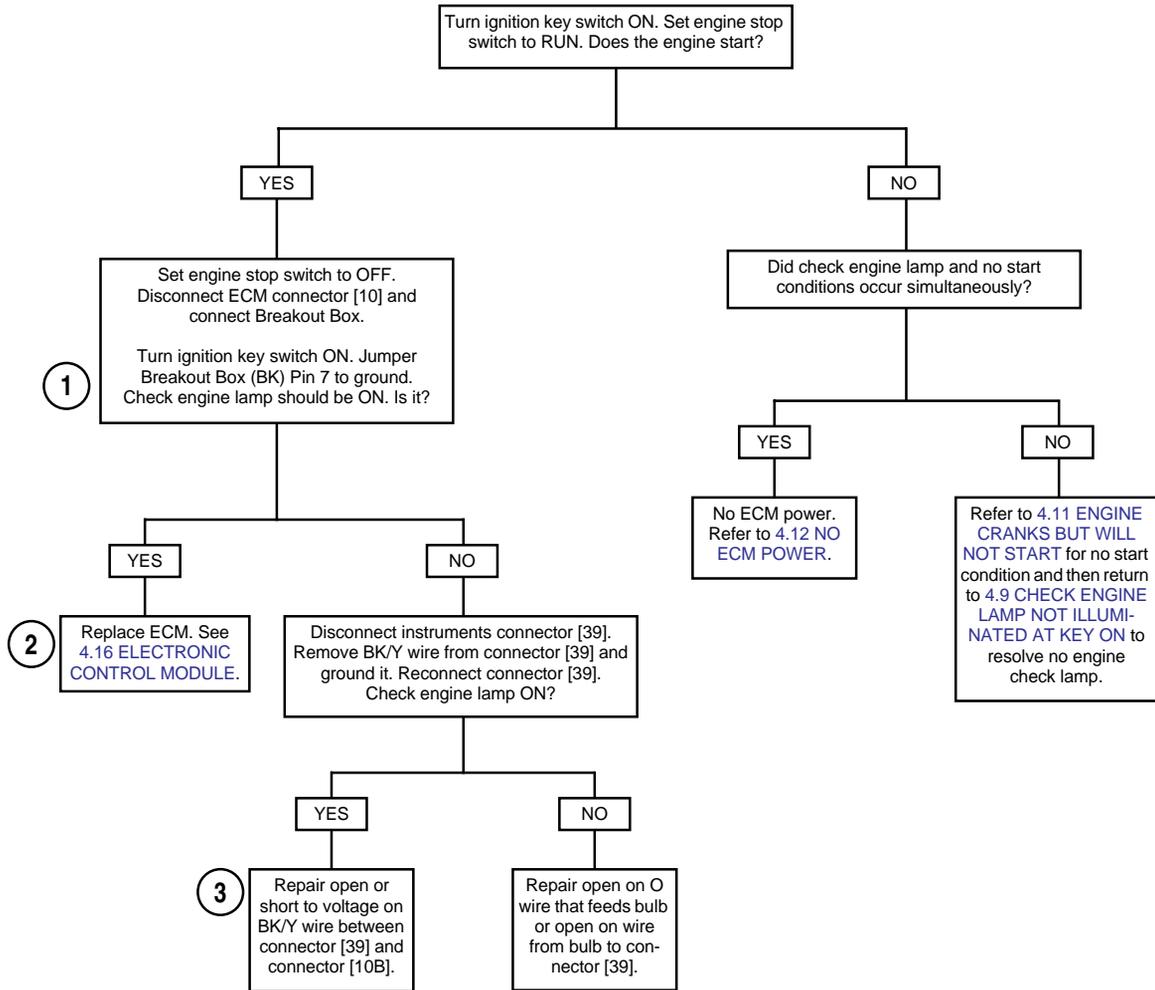

GENERAL

If the engine stop switch is set to RUN with the engine off, and the ignition key switch is turned ON, the check engine lamp should illuminate for four seconds. See [Figure 4-16](#).

Following the initial period of illumination, the lamp should go off for four seconds. It may then come back on for an eight second period (for a stored error) or remain on continuously (current error).

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the [Test 4.10](#) flow chart.

1. See [Figure 4-17](#). If the lamp goes off when the black ECM connector [10] is unplugged, the BK/Y wire is **not** shorted to ground.

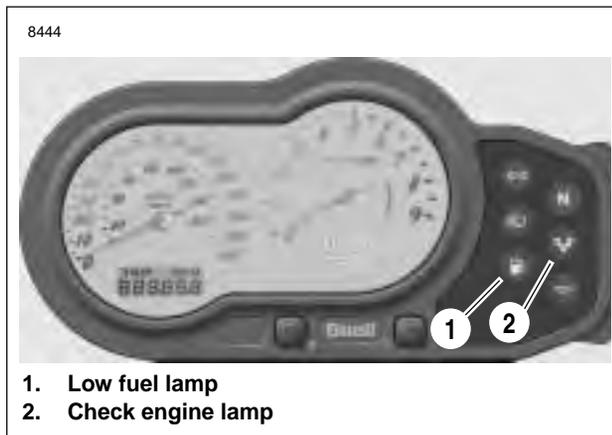


Figure 4-16. Check Engine Lamp (Typical)

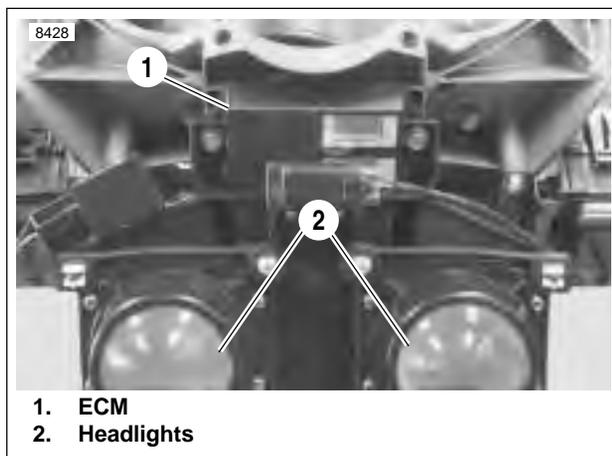


Figure 4-17. Electronic Control Module


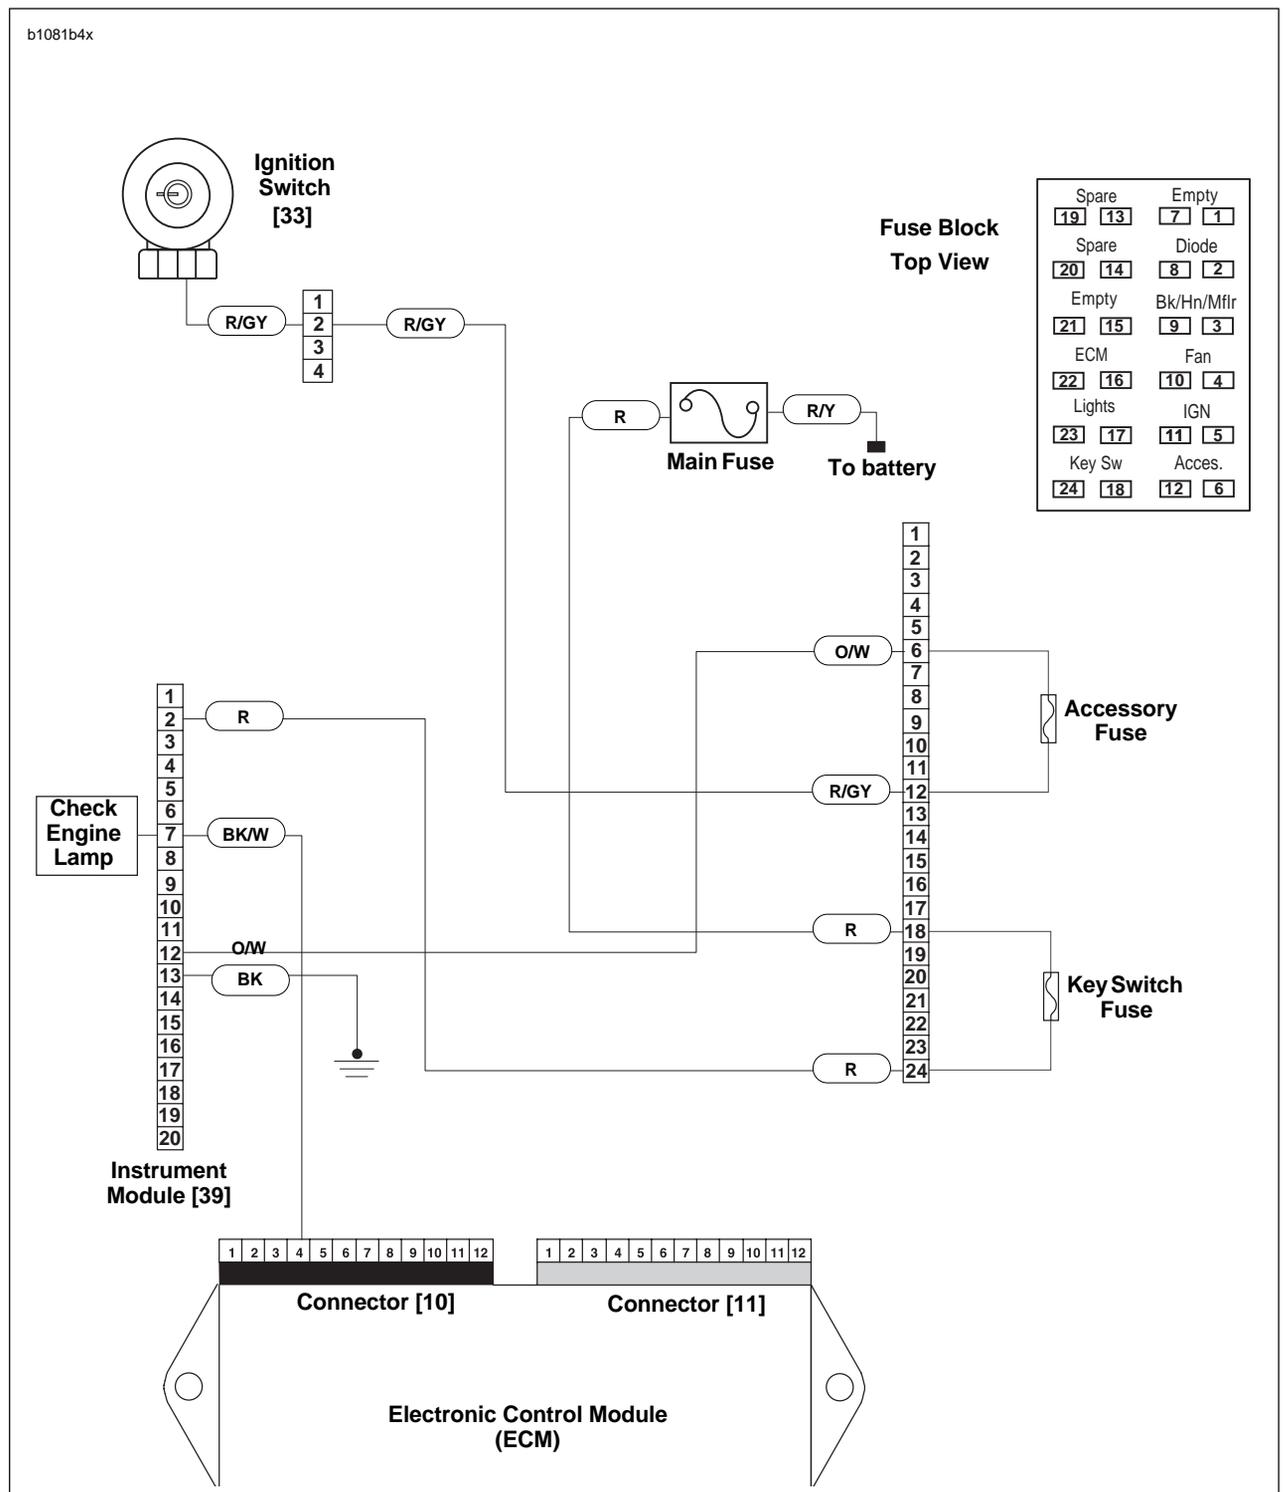


Figure 4-18. Check Engine Lamp Circuit

Table 4-10. Wire Harness Connectors in Figure 4-18

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------|--------------------|------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [39] | instrument module | 20-place Multilock | in fairing |

Test 4.10

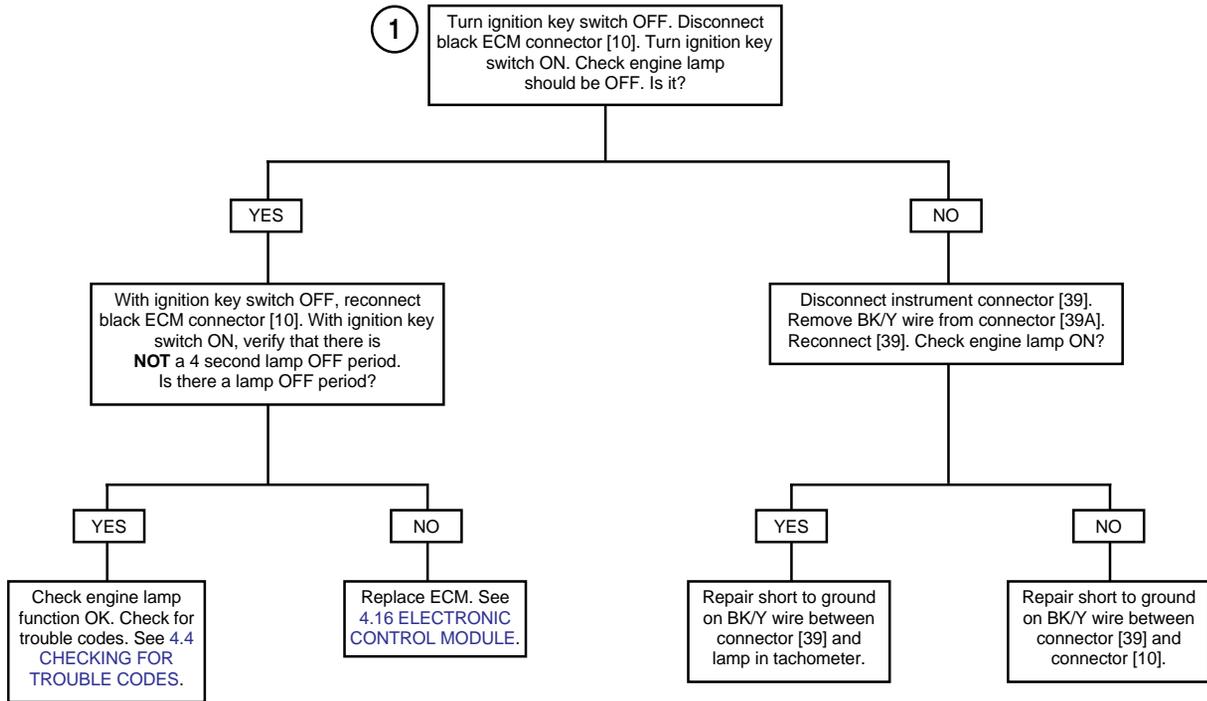

GENERAL

If the starter will not crank engine, the problem is not ignition related. See Section 5-Electric Starter.

IMPORTANT NOTE

The engine may be started and run when the trouble codes are received using a jumper wire on Pins 1 and 2 of the data link connector. However, if the jumper wire is removed with the engine running, the check engine lamp will continue to flash trouble codes. To stop check engine lamp from flashing codes, turn engine stop switch OFF.

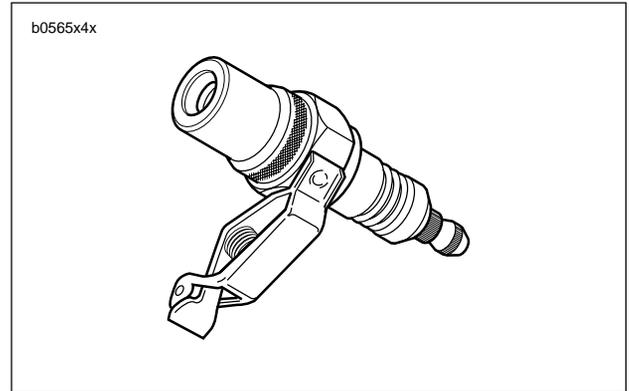


Figure 4-19. Spark Plug Tester (Part No. HD-26792)

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Test 4.11 flow charts.

1. Connect BREAKOUT BOX (Part No. HD-42682) between harness and ECM. See [4.6 BREAKOUT BOX](#).
2. Check battery condition. Perform a voltage test and recharge if below 12.80 volts. Check battery connections and perform load test. Replace the battery if necessary.
3. Remove spark plug cable from spark plug.
 - a. Visually check condition of plug.
 - b. See [Figure 4-19](#). Attach cable to SPARK PLUG TESTER (Part No. HD-26792). Clip tester to cylinder head bolt.
 - c. While cranking starter, look for spark. Repeat procedure on other spark plug cable.

WARNING

The gasoline in the fuel supply line downstream of the fuel pump is under high pressure (49 psi [338 kPa]). To avoid an uncontrolled discharge or spray of gasoline, always purge the system of high pressure gas before servicing the fuel system. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

4. Purge fuel line of high pressure gasoline. See [4.25 FUEL PUMP](#).



Figure 4-20. Ignition Coil Circuit Test

5. Access fuel injectors.
 - a. Remove right side air scoop. See [2.35 AIR SCOOPS](#).
 - b. Remove airbox to access fuel injectors. See [4.30 AIRBOX](#).
6. See [Figure 4-20](#). Plug IGNITION COIL CIRCUIT TEST ADAPTER (Part No. 34730-2C) into Breakout Box. Note that cranking the engine with test lamp in place of the ignition coil can sometimes cause a code 24 or 25. This condition is normal and does not by itself indicate a malfunction. Codes must be cleared if this condition occurs.
7. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404) gray pin probe and patch cord.

Table 4-11. Wire Harness Connectors in [Figure 4-21](#).

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|---------------------|------------------|----------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [14] | cam position sensor | 3-place Deutsch | under sprocket cover |
| [83] | ignition coil | 3-place Amp | beneath airbox base |



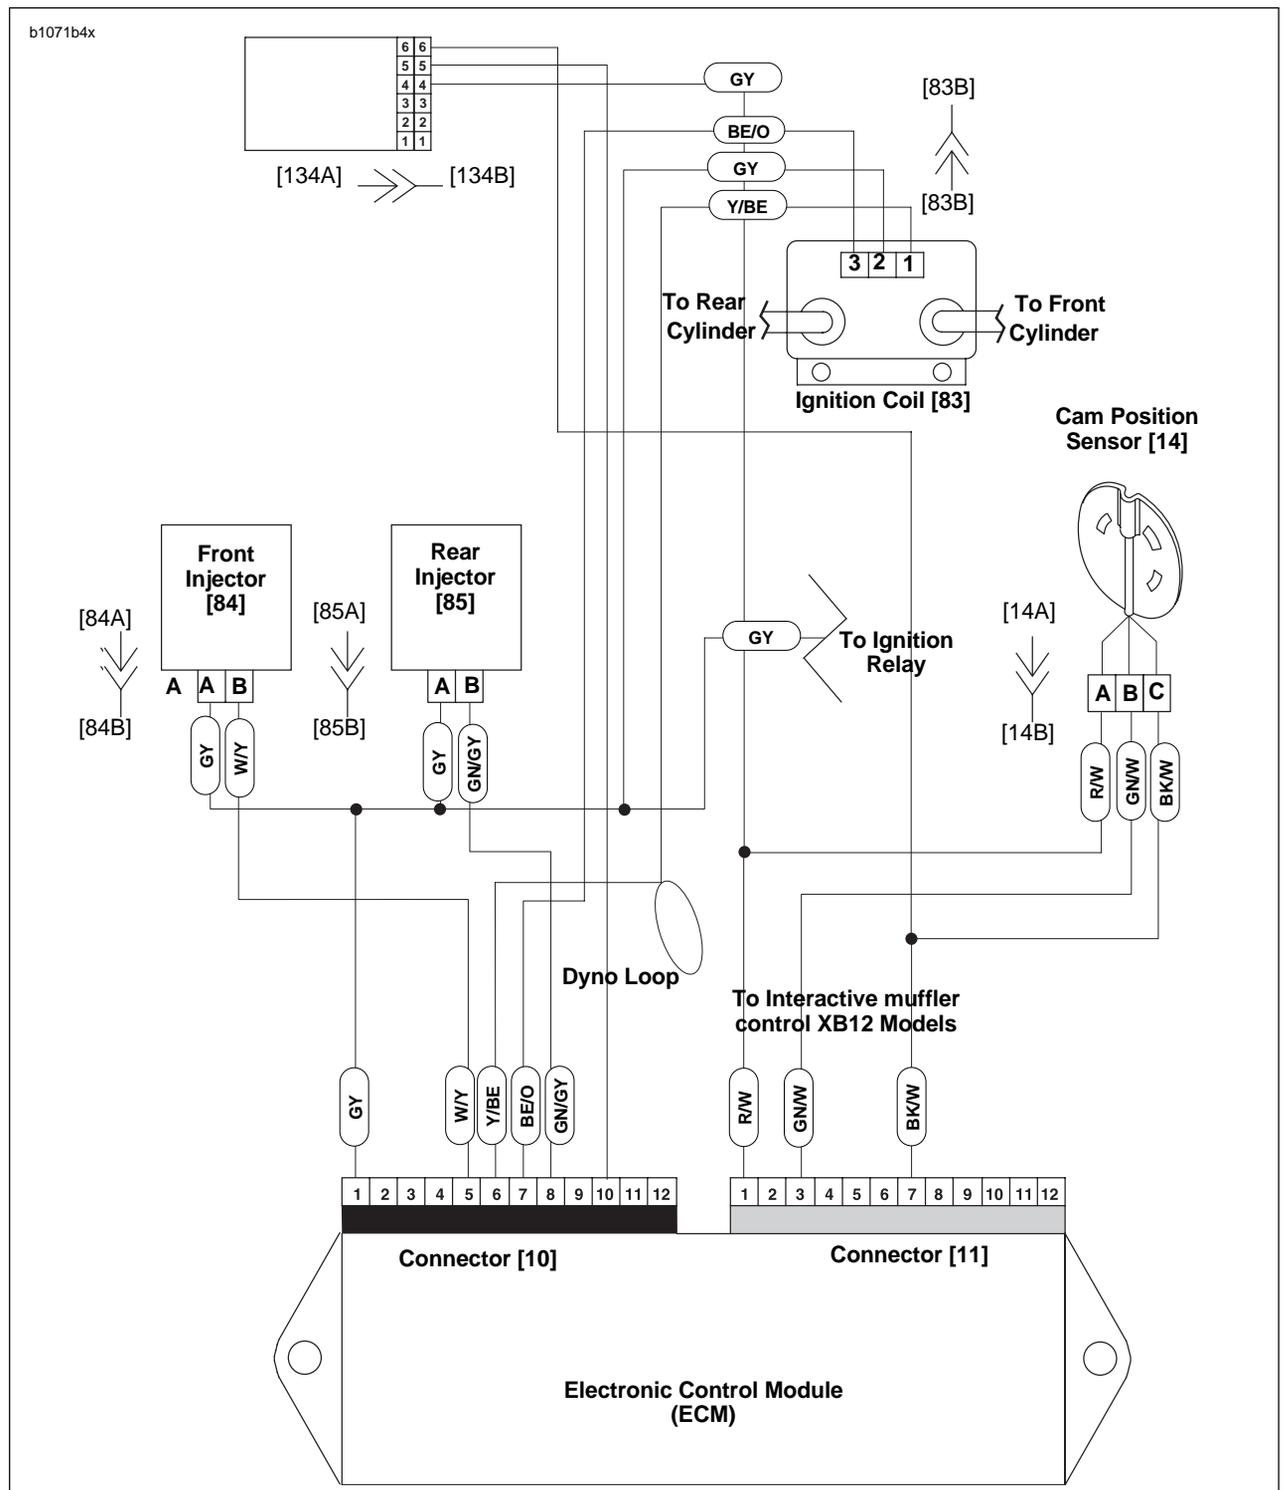


Figure 4-21. Ignition Circuit


Test 4.11 (Part 1 of 3)

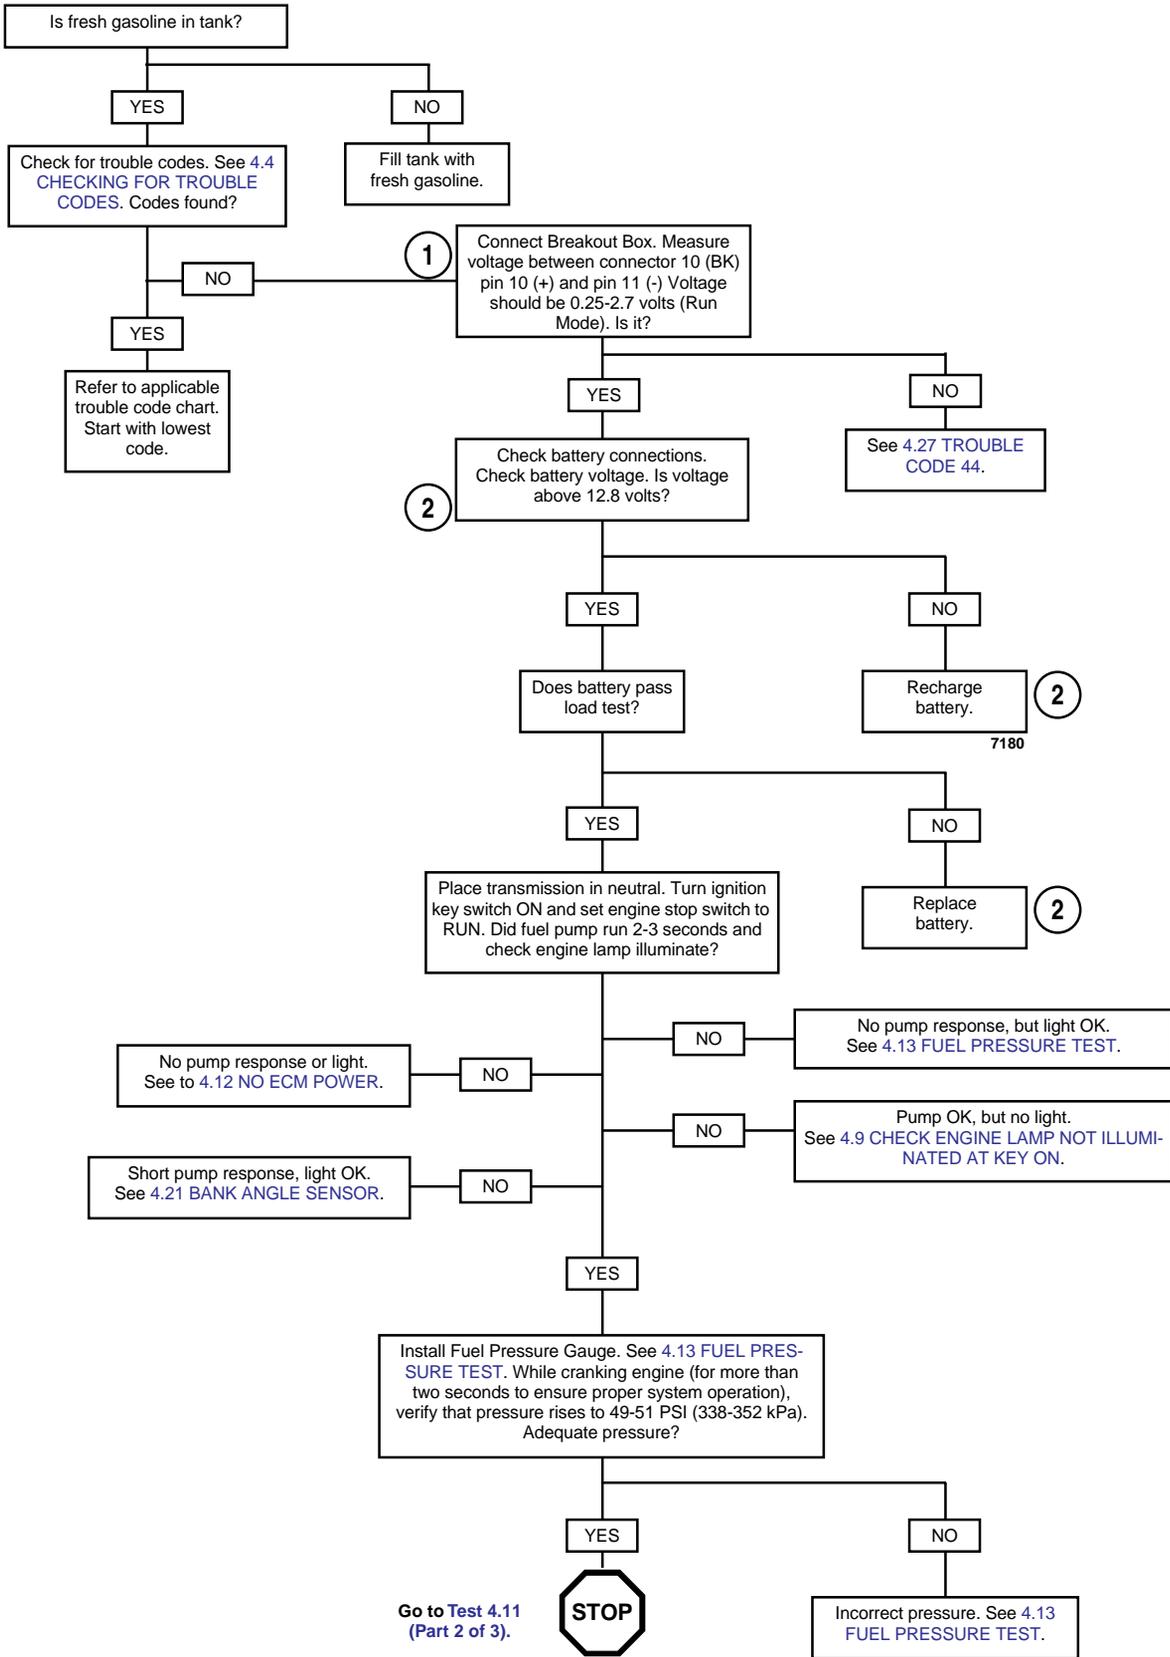

Test 4.11 (Part 2 of 3)

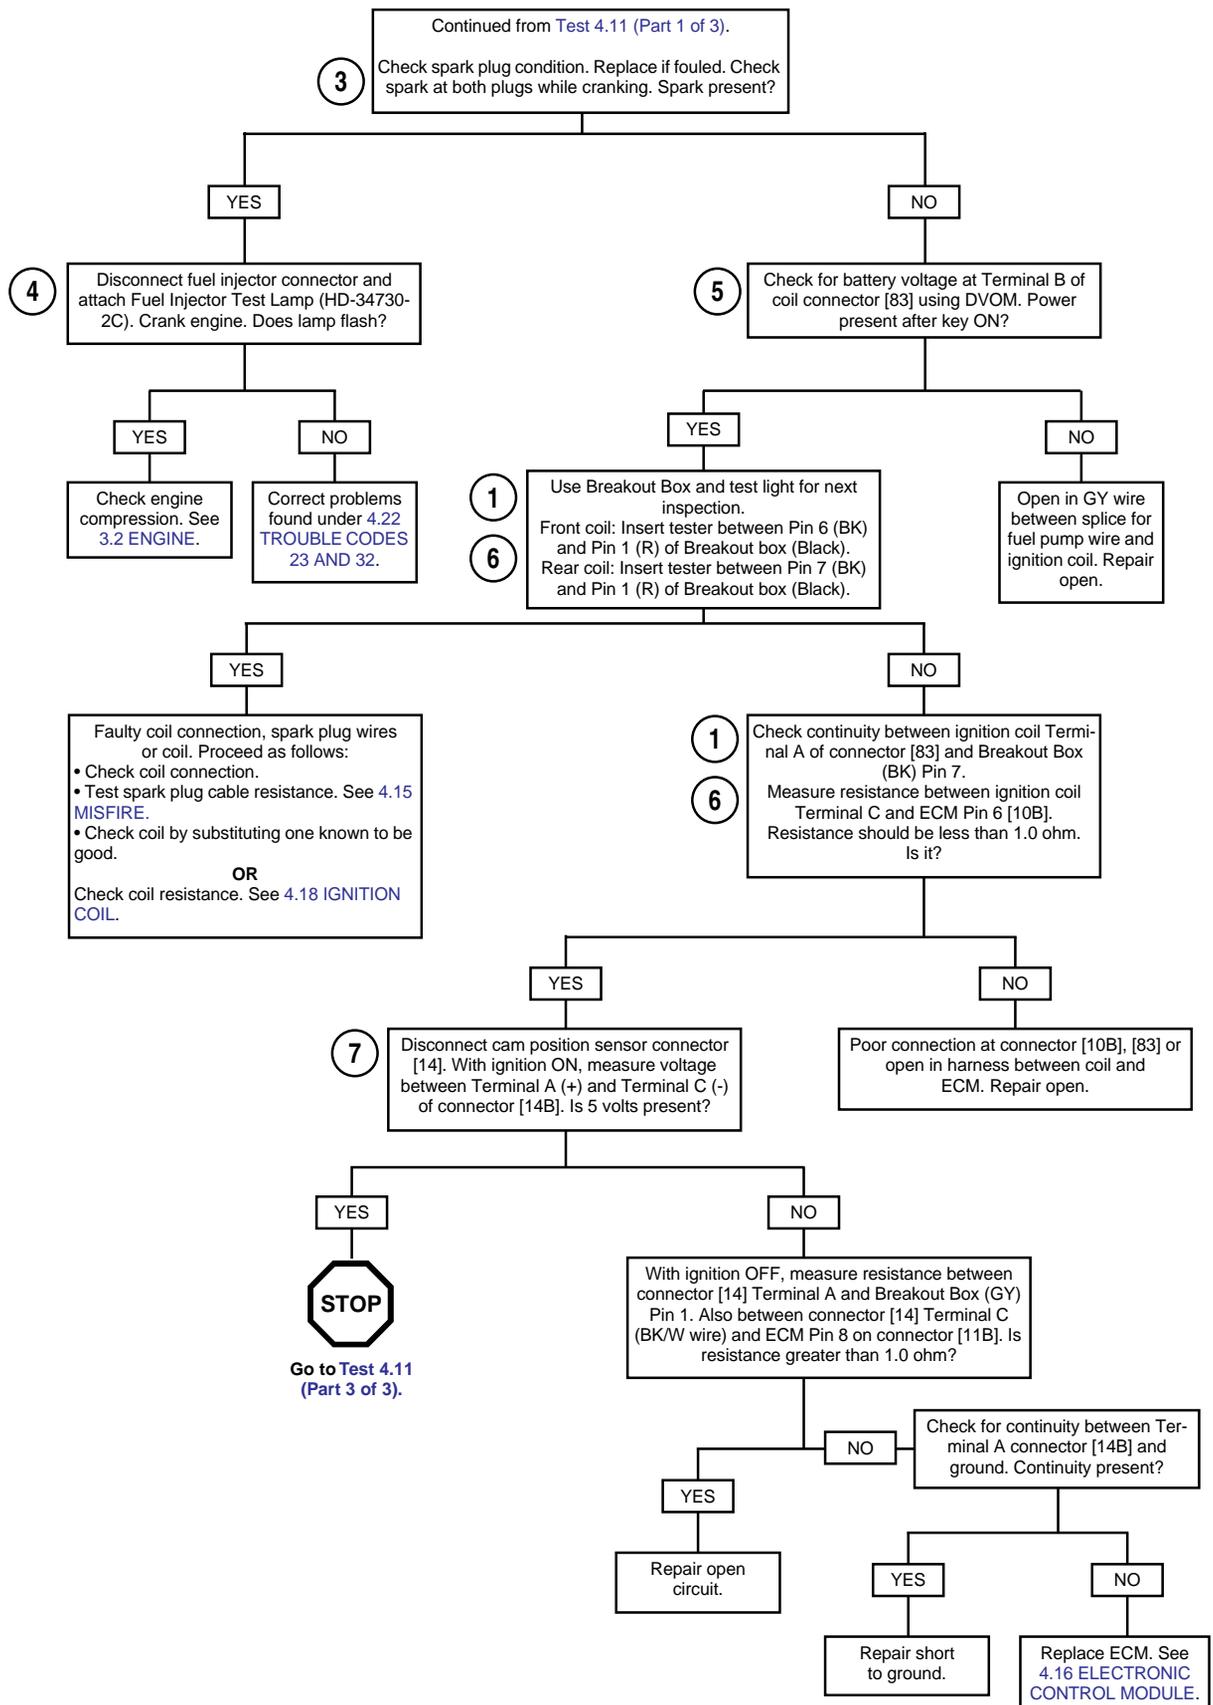

Test 4.11 (Part 3 of 3)

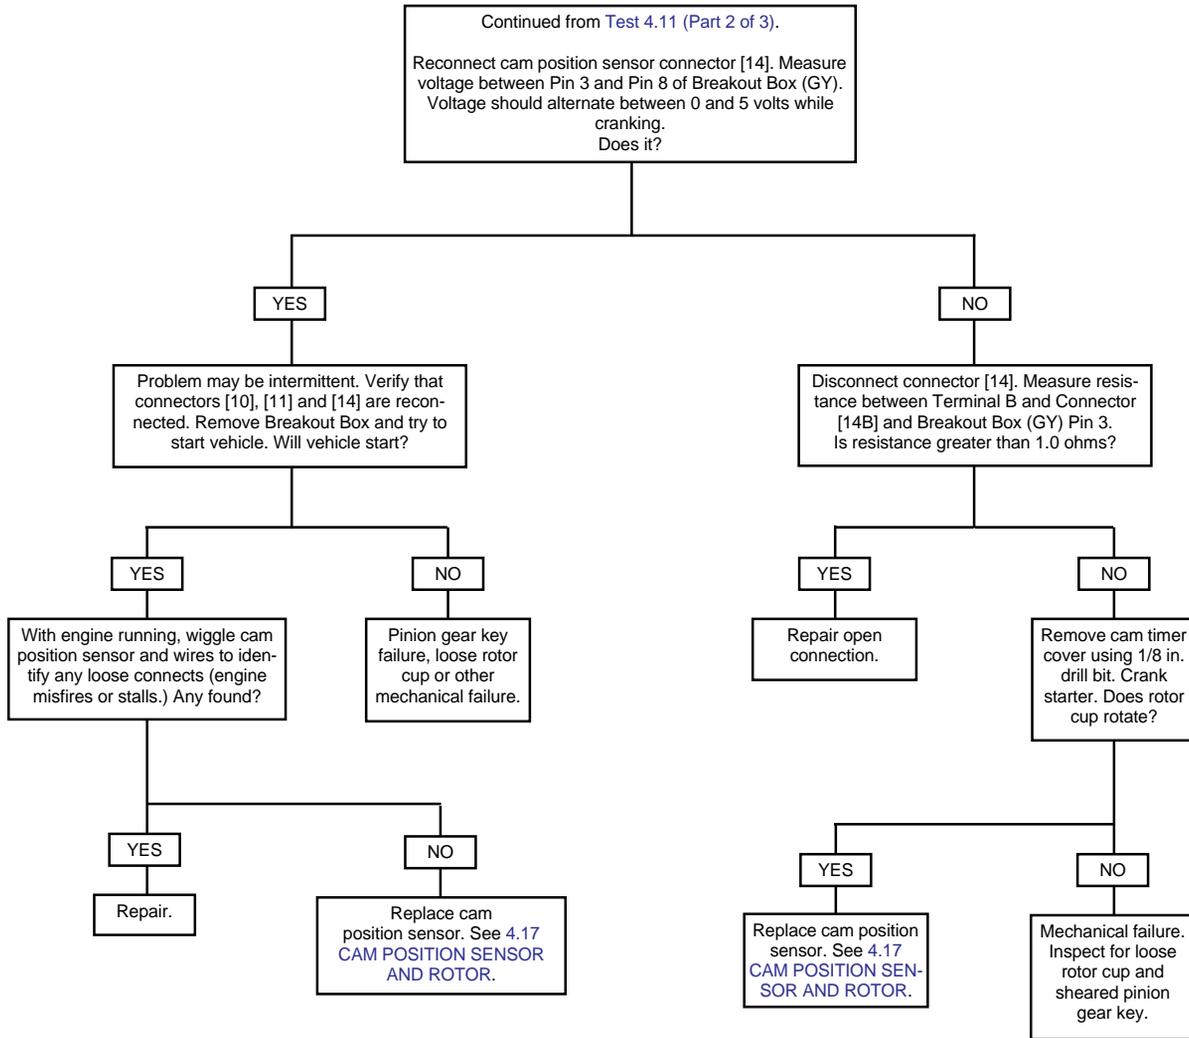

GENERAL

A relay controlled by the engine stop switch supplies power to the ECM. The relay requires a ground to operate. If the ground is not established, the ECM will not receive power. If the ECM does not appear to be receiving power, check the ground sources. A blown ignition fuse can also disable the ECM.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Test 4.12 flow chart.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).

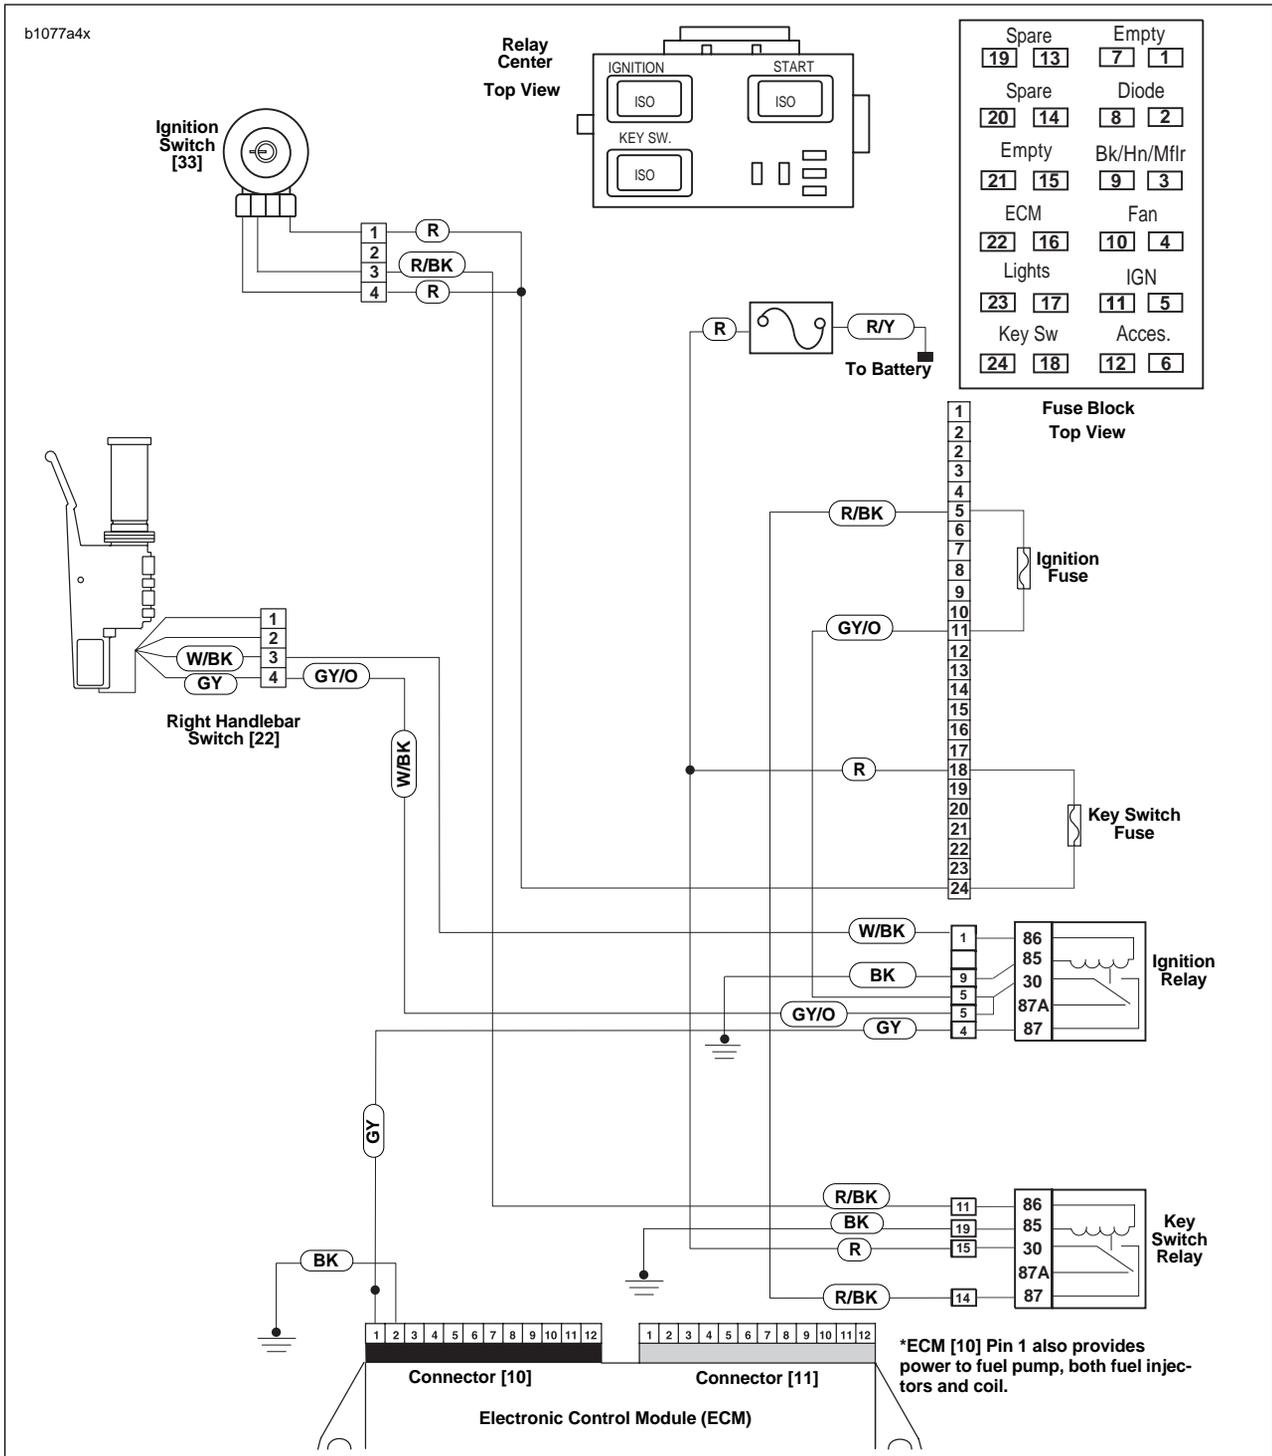



Figure 4-22. ECM Power

Table 4-12. Wire Harness Connectors in Figure 4-22.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|---------------------|-------------------|-------------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [22] | right hand controls | 4-place Multilock | beneath right side of fairing |
| [95] | clutch switch | 2-place Multilock | beneath fairing |

No ECM Power

CONDITION: Key ON and transmission in neutral

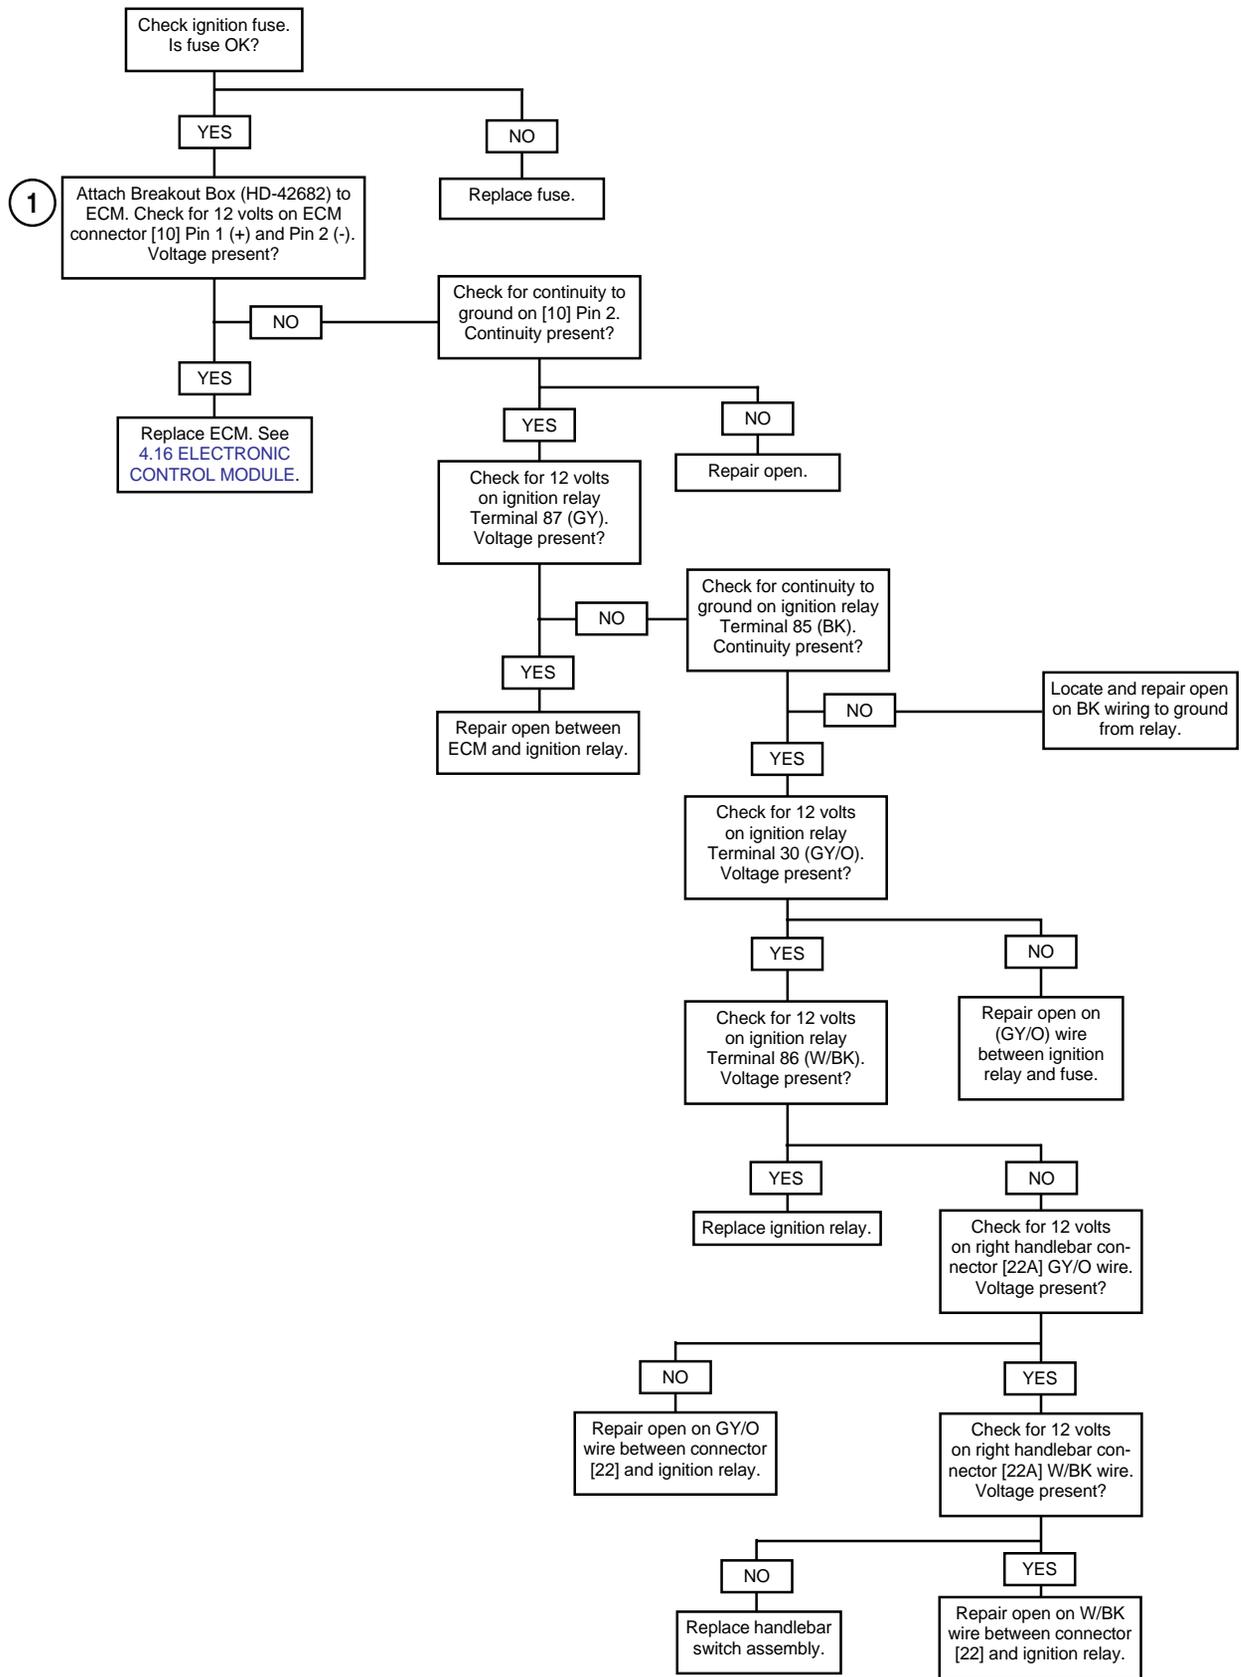

INSPECTION

| PART NO. | SPECIALTY TOOL |
|----------|-----------------------------|
| B-45522 | Fuel pressure gauge adapter |
| HD-41182 | Fuel pressure gauge |

WARNING

The gasoline in the fuel supply line downstream of the fuel pump is under high pressure (49 psi [338 kPa]). To avoid an uncontrolled discharge or spray of gasoline, always purge the system of high pressure gas before attaching fuel pressure gauge. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

1. Remove airbox. See 4.30 AIRBOX.
2. Purge the fuel supply line of high pressure gasoline.
 - a. See Figure 4-23. Disconnect the 4-place fuel pump connector [86]. The connector is located inside the left rear portion of the fuel tank/frame.
 - b. With the motorcycle in neutral, start the engine and allow vehicle to run.
 - c. When the engine stalls, press the starter button for 3 seconds to remove any remaining fuel from fuel line.

WARNING

A small amount of gasoline will drain from the valve when the gauge is installed. Thoroughly wipe up any spill fuel immediately. Dispose of rags in a suitable manner. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

3. See Figure 4-24. Depress button (2) of fuel line connector and disconnect the fuel line (3) from throttle body inlet (1).
4. See Figure 4-25. Attach FUEL PRESSURE GAUGE ADAPTER (Part No. B-45522) (2) to throttle body inlet (1).
5. Connect the fuel line (3) to fuel pressure gauge adapter.

NOTE

See Figure 4-26. Verify that fuel valve (2) and air bleed petcock (5) on the gauge are closed.

6. Attach FUEL PRESSURE GAUGE (Part No. HD-41182) (4) to fuel pressure gauge adapter (1).

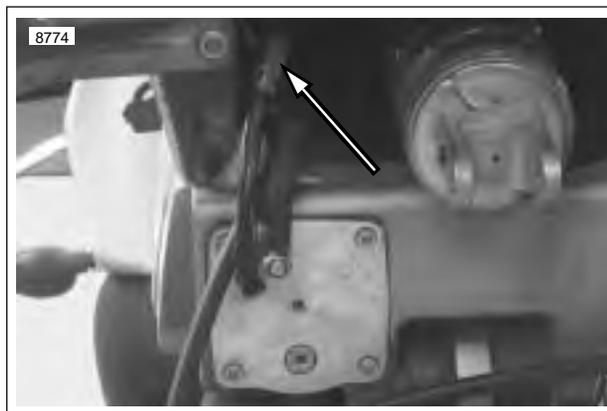


Figure 4-23. Fuel Pump Connector [86] (swingarm removed for illustration)

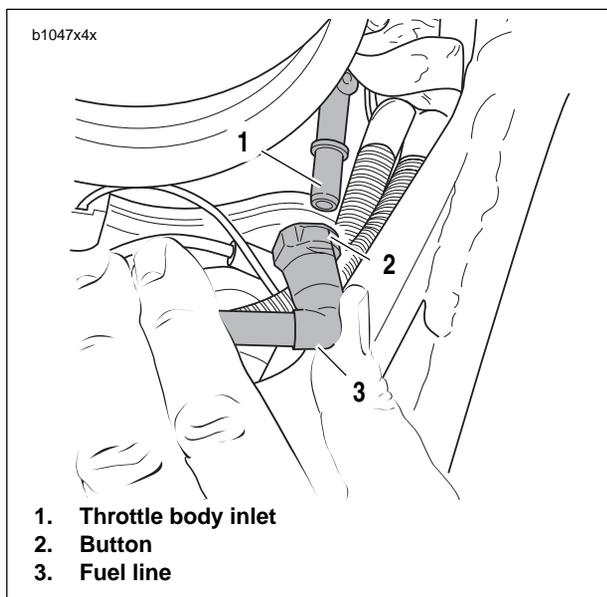


Figure 4-24. Fuel Line

7. See [Figure 4-23](#). Attach fuel pump connector [86] to main wiring harness.
8. See [Figure 4-26](#). Pressurize the fuel system.
 - a. Start and idle engine to pressurize the fuel system.
 - b. Open fuel valve (2) on fuel pressure gauge to allow fuel to flow down the gauge hose.
 - c. Position the air bleed tube (3) into proper container.
 - d. Open and close the air bleed petcock (5) to purge the fuel pressure gauge and hose of air. Repeat this step several times until only solid fuel (without bubbles) flows from the air bleed tube.
 - e. Close the air bleed petcock.
9. Open throttle and increase engine speed to 2500-3000 RPM. Note the reading on the pressure gauge.
 - a. If pressure is 49-51 PSI (338-352 kPa) then system is operating within limits.
 - b. If pressure is not within limits, see [Test 4.13 \(Part 1 of 2\)](#) flow chart after disconnecting pressure gauge.

⚠ WARNING

A small amount of gasoline will drain from the valve when the valve is removed. Thoroughly wipe up any spilt fuel immediately. Dispose of rags in a suitable manner. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

10. See [Figure 4-26](#). Turn engine off. Detach pressure gauge (4) from adapter (1).
 - a. Open the air bleed petcock (5) to relieve fuel system pressure and purge the pressure gauge of gasoline.
 - b. Remove pressure gauge from adapter.
11. Detach adapter from vehicle.
12. Connect fuel line to throttle body inlet.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Test 4.13 flow charts.

1. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray socket probe and patch cord.
2. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).

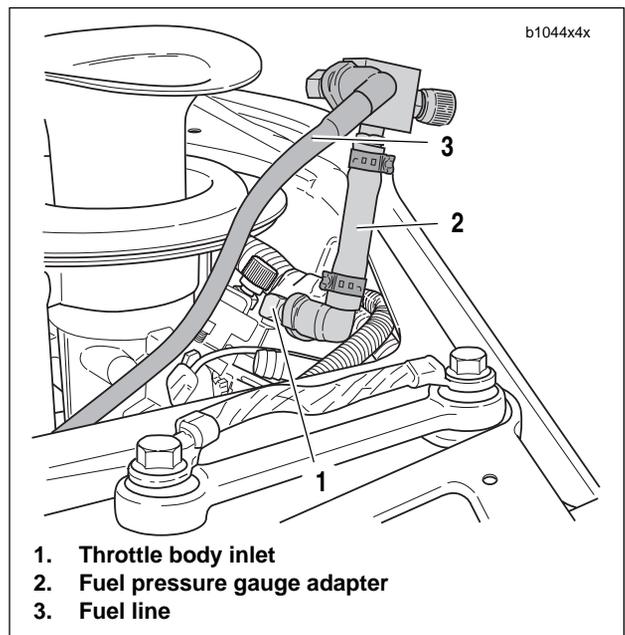


Figure 4-25. Fuel Pressure Gauge Adapter

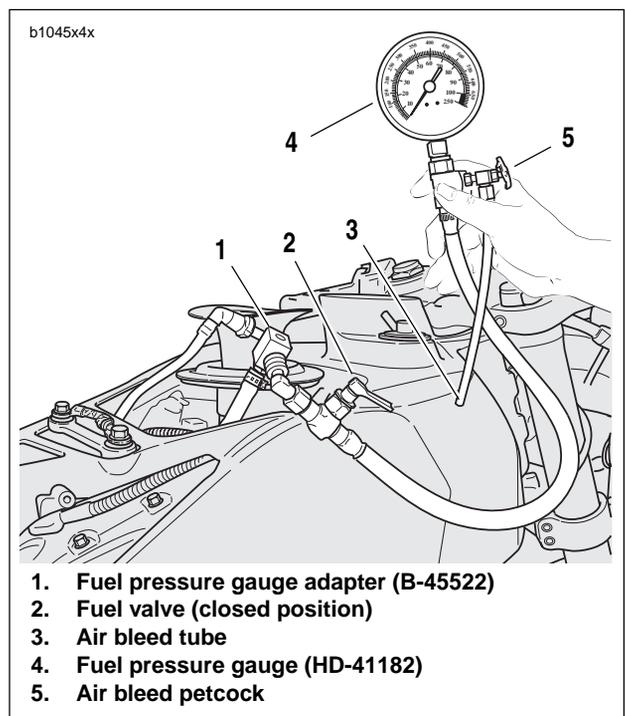


Figure 4-26. Fuel Pressure Gauge (Part No. HD-41182)


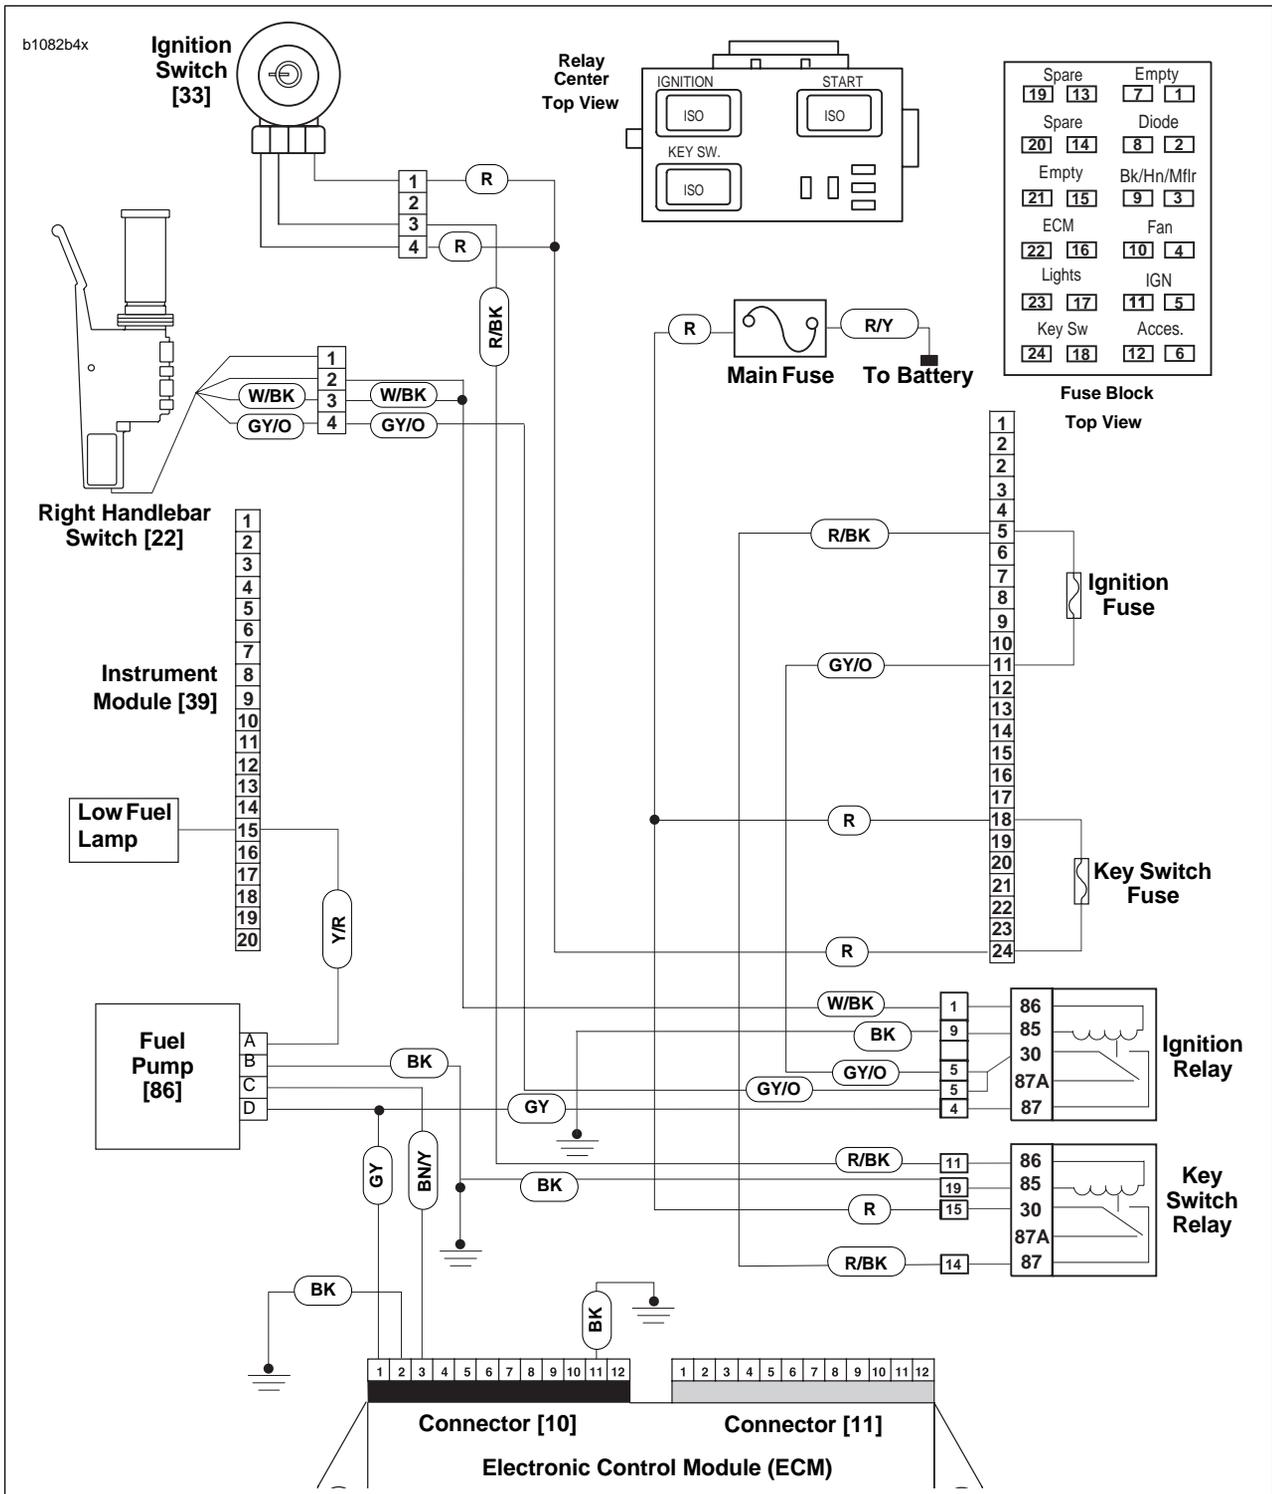


Figure 4-27. Fuel Pump Circuit


Table 4-13. Wire Harness Connectors in Figure 4-27.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------|--------------------|----------------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [39] | instrument module | 20-place Multilock | in fairing |
| [86] | fuel pump | 4-place Multilock | left side of rear shock absorber |

Test 4.13 (Part 1 of 2)

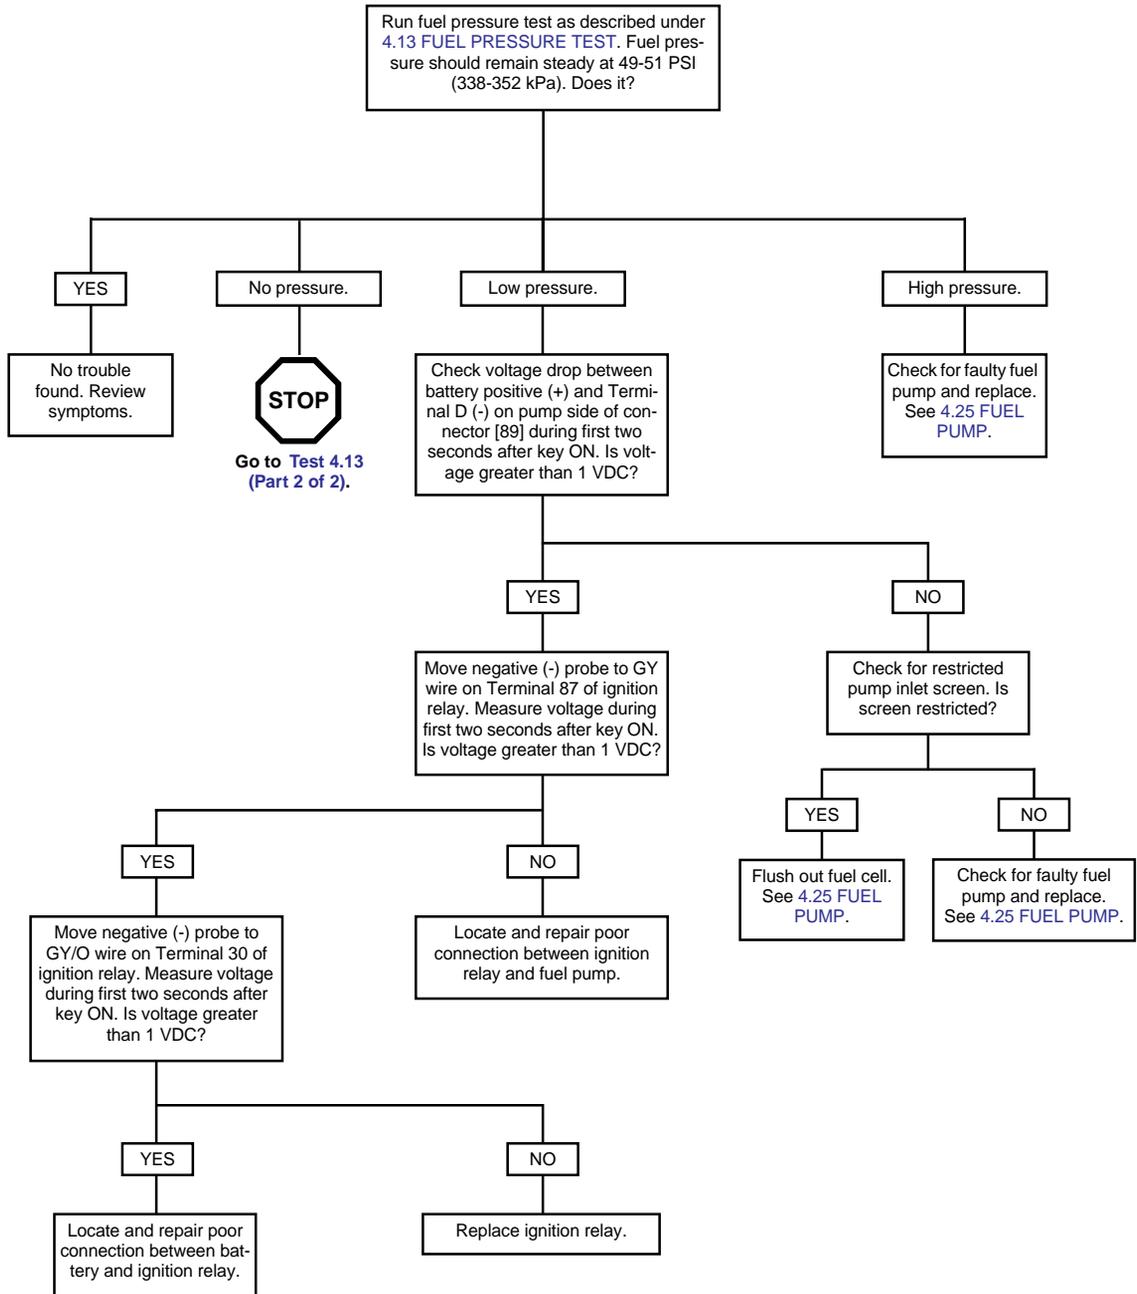

Test 4.13 (Part 2 of 2)

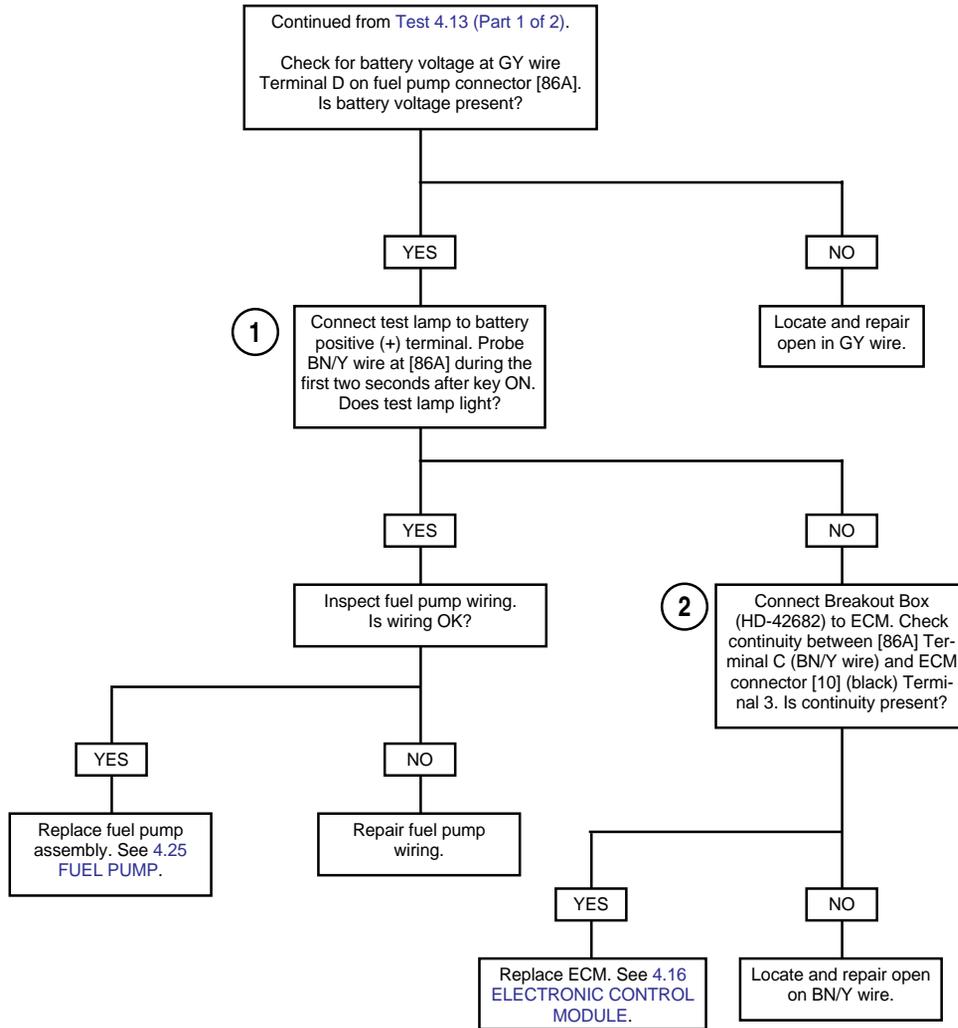

ADJUSTMENTS

CAUTION

Setting the idle below the recommended speed can result in hard starting, especially in cold ambient temperatures.

See Figure 4-28. The idle speed control cable (1) is located on the left side of the vehicle between the front cylinder head and the ram air scoop assembly (2). Idle speeds are listed in 4.1 SPECIFICATIONS. A 3/16 in. allen wrench may be used to turn adjuster knob.

Table 4-14. Engine Idle Speeds

| MODEL | REGULAR IDLE |
|-------|--------------|
| All | 1050-1150 |

CAUTION

Idle adjuster is located near the engine and could be extremely hot. Use suggested tool for adjusting the idle speed. Failure to comply could result in minor or moderate injury.

The idle speed should be adjusted when the engine is at normal operating temperature.

NOTE

An idle speed too low can cause poor throttle response. An idle speed too high can cause a slow return to idle.

See 1.16 THROTTLE CABLE AND IDLE SPEED ADJUSTMENT for more information on idle speed adjustment.

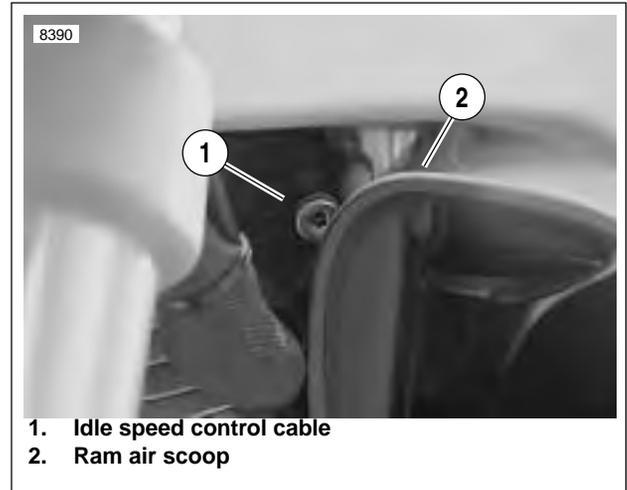


Figure 4-28. Idle Adjustment Cable

GENERAL

Misfire At Idle or Under Load

Misfire conditions may be caused by:

- Battery condition and connections.
- Fuel system problems. See tables under [4.8 INITIAL DIAGNOSTIC CHECK](#).

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Test 4.15 flow charts.

WARNING

Thoroughly wipe up any spilled fuel and dispose of rags in a suitable manner. Any open spark around gasoline or other combustibles could result in fire or explosion causing death or serious injury.

1. See [Figure 4-29](#). A SPARK TESTER (Part No. HD-26792) must be used to verify adequate secondary voltage (25,000 volts) at the spark plug.
 - a. Turn ignition switch OFF.
 - b. Remove spark plug cable from spark plug. Visually check plug condition.
 - c. Attach cable to SPARK TESTER. Clip tester to cylinder head bolt.
 - d. While cranking engine, watch for spark to jump tester gap on leads.
 - e. Reinstall and repeat procedure on other spark plug cable.
2. Perform spark plug cable resistance test.
 - a. Remove spark plug cable from spark plug and ignition coil. See [7.4 SPARK PLUG CABLES](#).
 - b. Using an ohmmeter, touch probes to terminals on each end plug wire.
 - c. Compare resistance values to [Table 4-15](#). Replace cables not meeting specifications. Reinstall and repeat procedure on other spark plug cable.

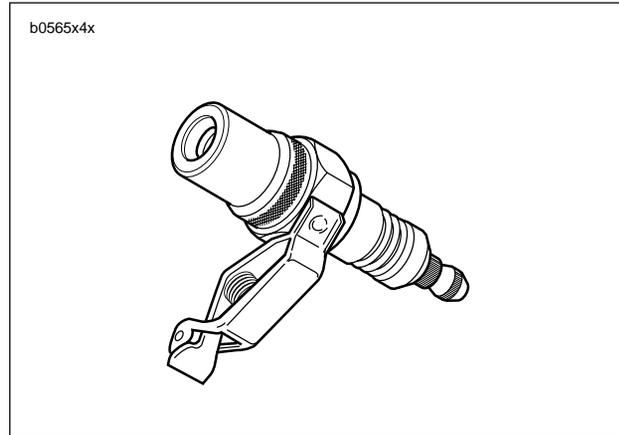


Figure 4-29. Spark Tester (Part No. HD-26792)

Table 4-15. Spark Plug Cables

| SPECIFICATION | FRONT & REAR |
|------------------|---------------|
| Length-in. (mm) | 5.75 (146) |
| Resistance -ohms | 1,430-3,360 |

3. If carbon tracking is evident, replace ignition coil and inspect spark plug wires. Wires must be clean and tight. Excessive wire resistance or faulty connections can cause coil damage. See [4.18 IGNITION COIL](#).
4. This test can also be performed by substituting a known good coil for one causing the no spark condition. The coil does not require full installation to be functional. Verify faulty coil by performing resistance test. See [4.18 IGNITION COIL](#).
5. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404) gray pin probe and patch cord.


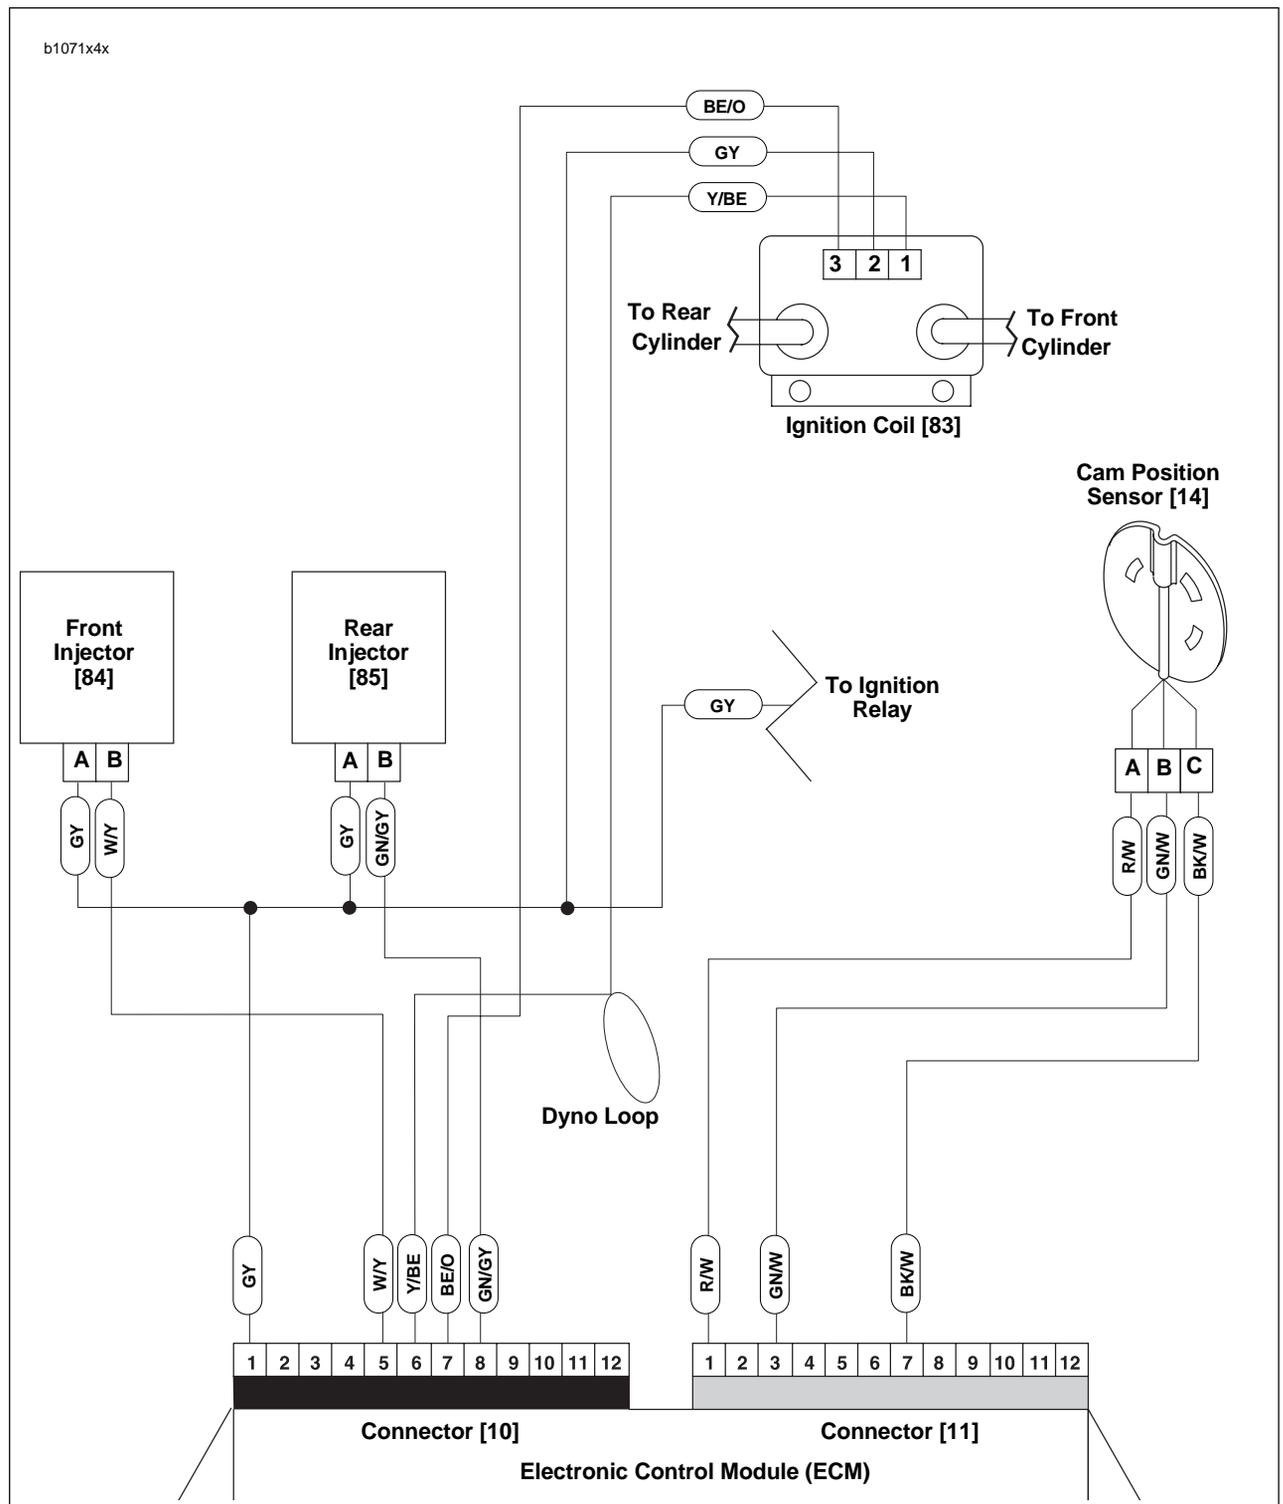


Figure 4-30. Ignition Coil Circuit


Table 4-16. Wire Harness Connectors in Figure 4-30.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|---------------------|-------------------|-------------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [22] | right hand controls | 4-place Multilock | beneath right side of fairing |
| [83] | ignition coil | 3-place Packard | beneath airbox base |

Test 4.15 (Part 1 of 2)

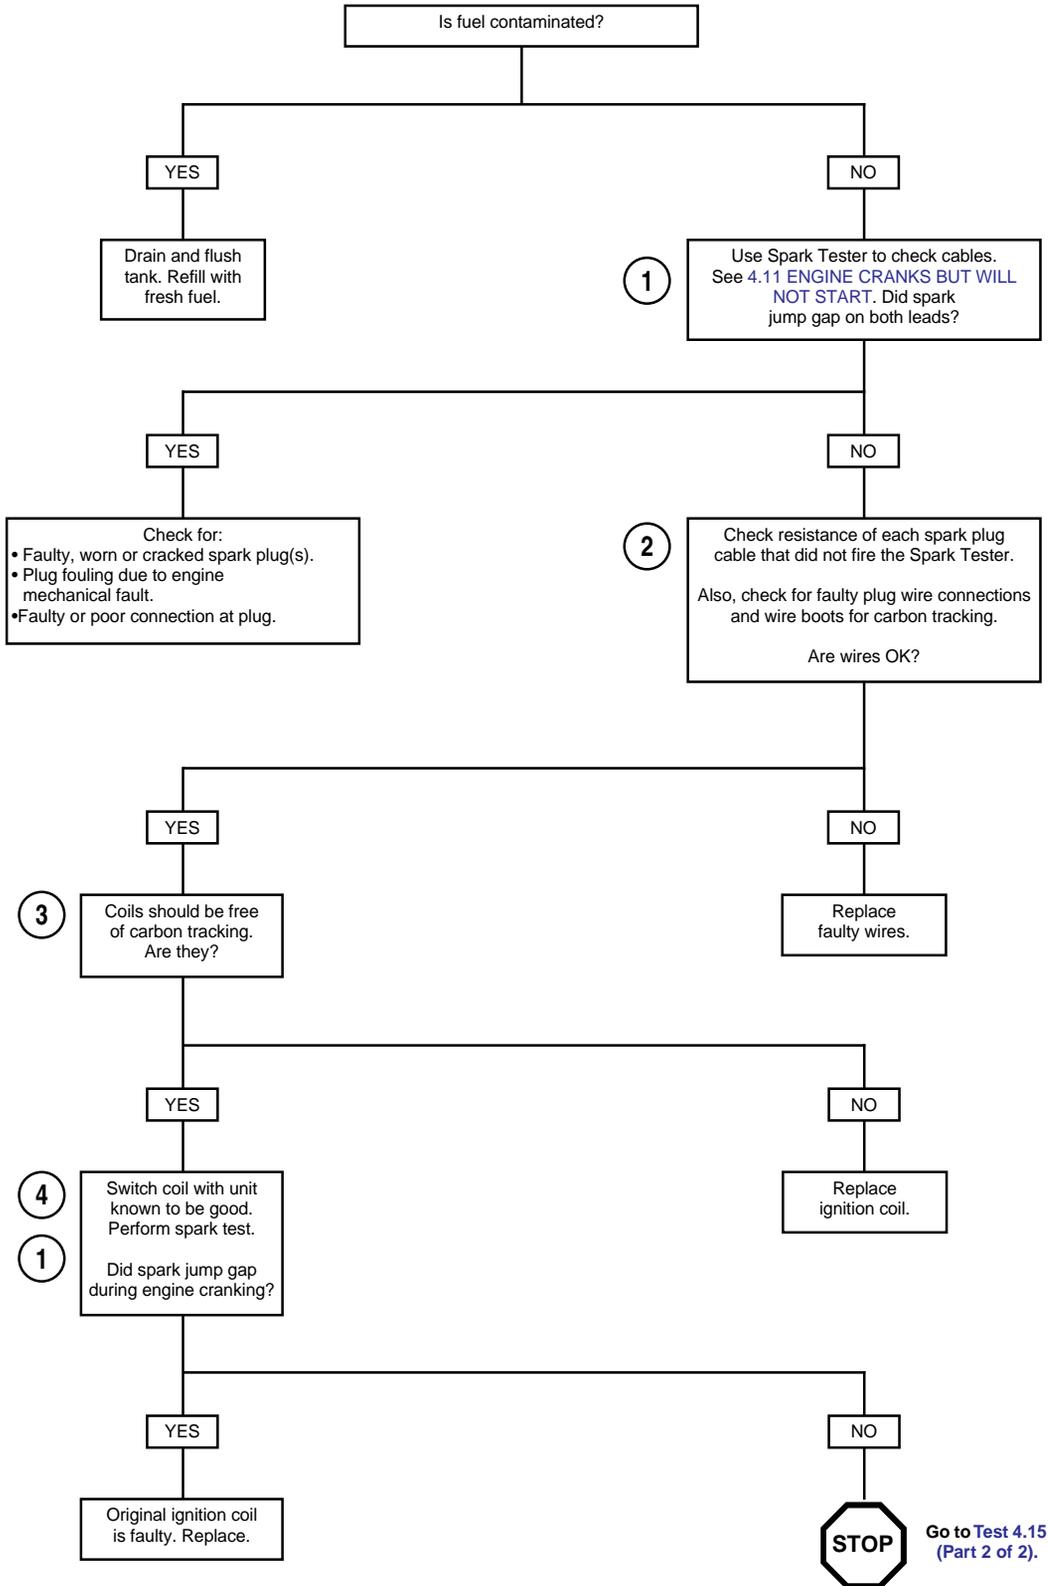

Test 4.15 (Part 2 of 2)

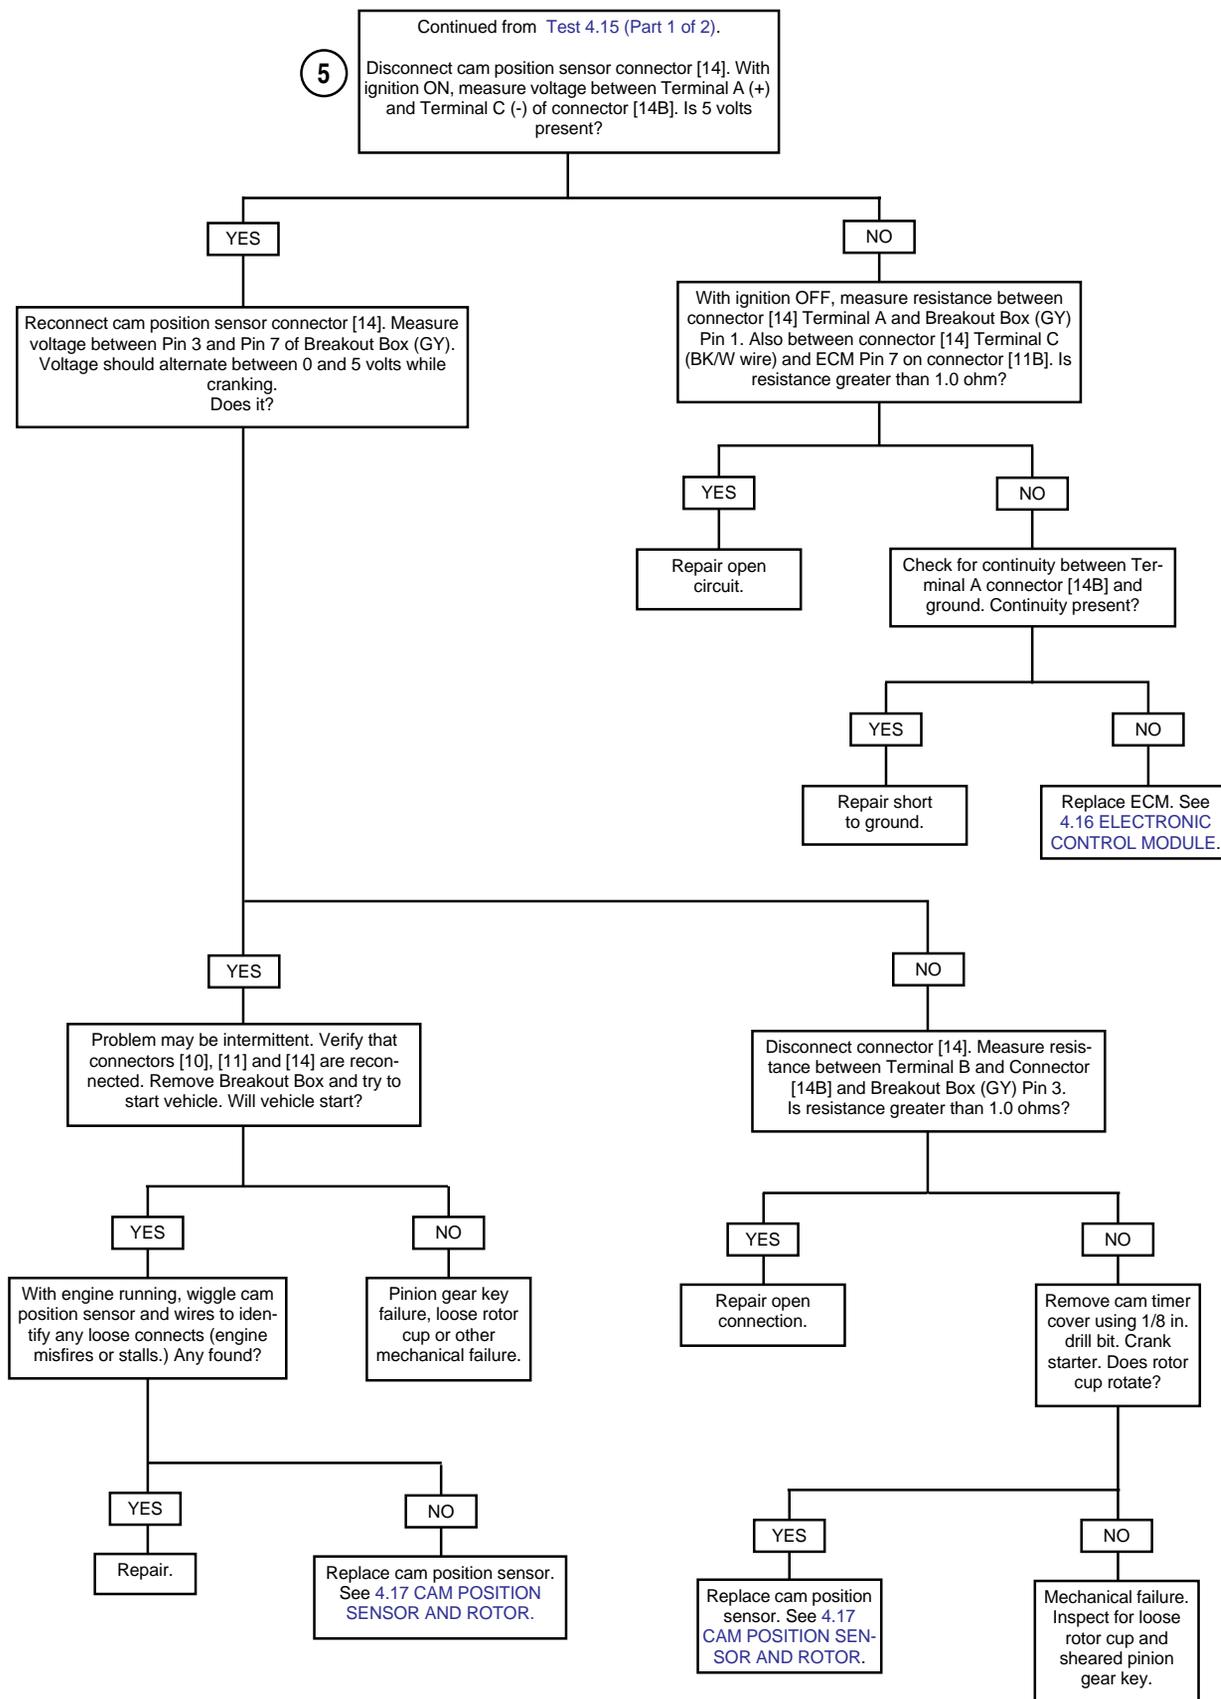

NOTES

GENERAL

Throttle Position Sensor

See [Figure 4-31](#). The throttle position sensor (TP sensor) is supplied 5.0 volts from the ECM (5v REF) and sends a signal back to the ECM (TP sensor signal) which varies according to throttle position. The output signal from the TP sensor varies from:

- 0.5-1.5 volts at idle (closed throttle).
- 3.9-4.9 volts at wide open throttle.

A Code 11 will set if the TP sensor signal voltage does not fall within the acceptable range.

NOTE

If the TP sensor is removed and/or replaced, the sensor must be calibrated using Digital Technician (Part No. HD-44750). For replacement of TP sensor see [4.23 THROTTLE POSITION SENSOR](#).

DIAGNOSTICS

Diagnostic Tips

TP sensor voltage should increase at a steady rate as throttle is moved from idle to wide open throttle. An open or short to ground in R/W or BK/W wires will also result in a Code 11.

Check for the following conditions:

- **Poor connection.** Inspect ECM harness connector for backed out terminals, improper mating, broken locks improperly formed or damaged terminals, poor terminal-to-wire connection and damaged harness.
- **Perform [4.7 WIGGLE TEST](#) to locate intermittents.** If connections and harness check out OK, monitor TP sensor voltage using DVOM while moving related connectors and wiring harness. If the failure is induced, the DVOM display will change.
- **TP sensor scaling.** Observe the TP sensor voltage display while opening the throttle with engine stopped and ignition switch ON. Display should vary from closed throttle TP sensor voltage (when throttle is closed) to greater than 4.0 volts (when throttle is held wide open). As the throttle is **slowly** moved, the voltage should change gradually without spikes or low voltages being observed.

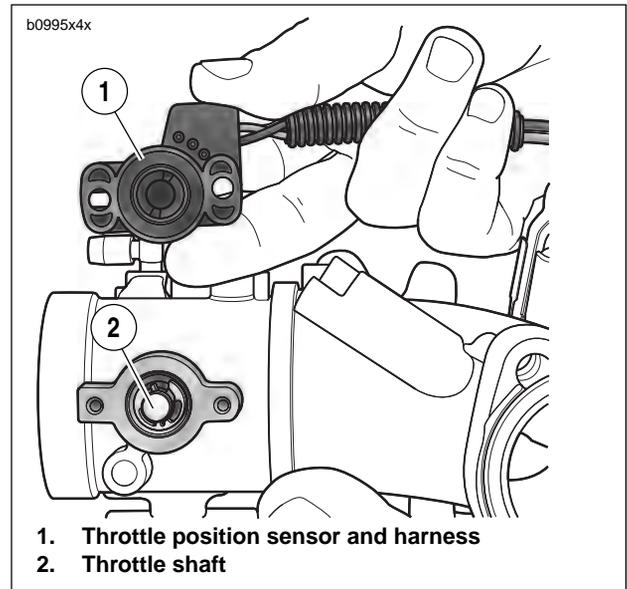


Figure 4-31. TP Sensor Assembly

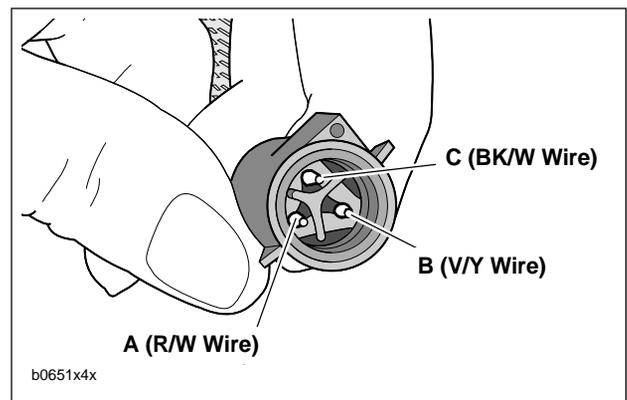


Figure 4-32. TP Sensor Terminals [88A]

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 11 flow charts.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), black socket probe and patch cord.


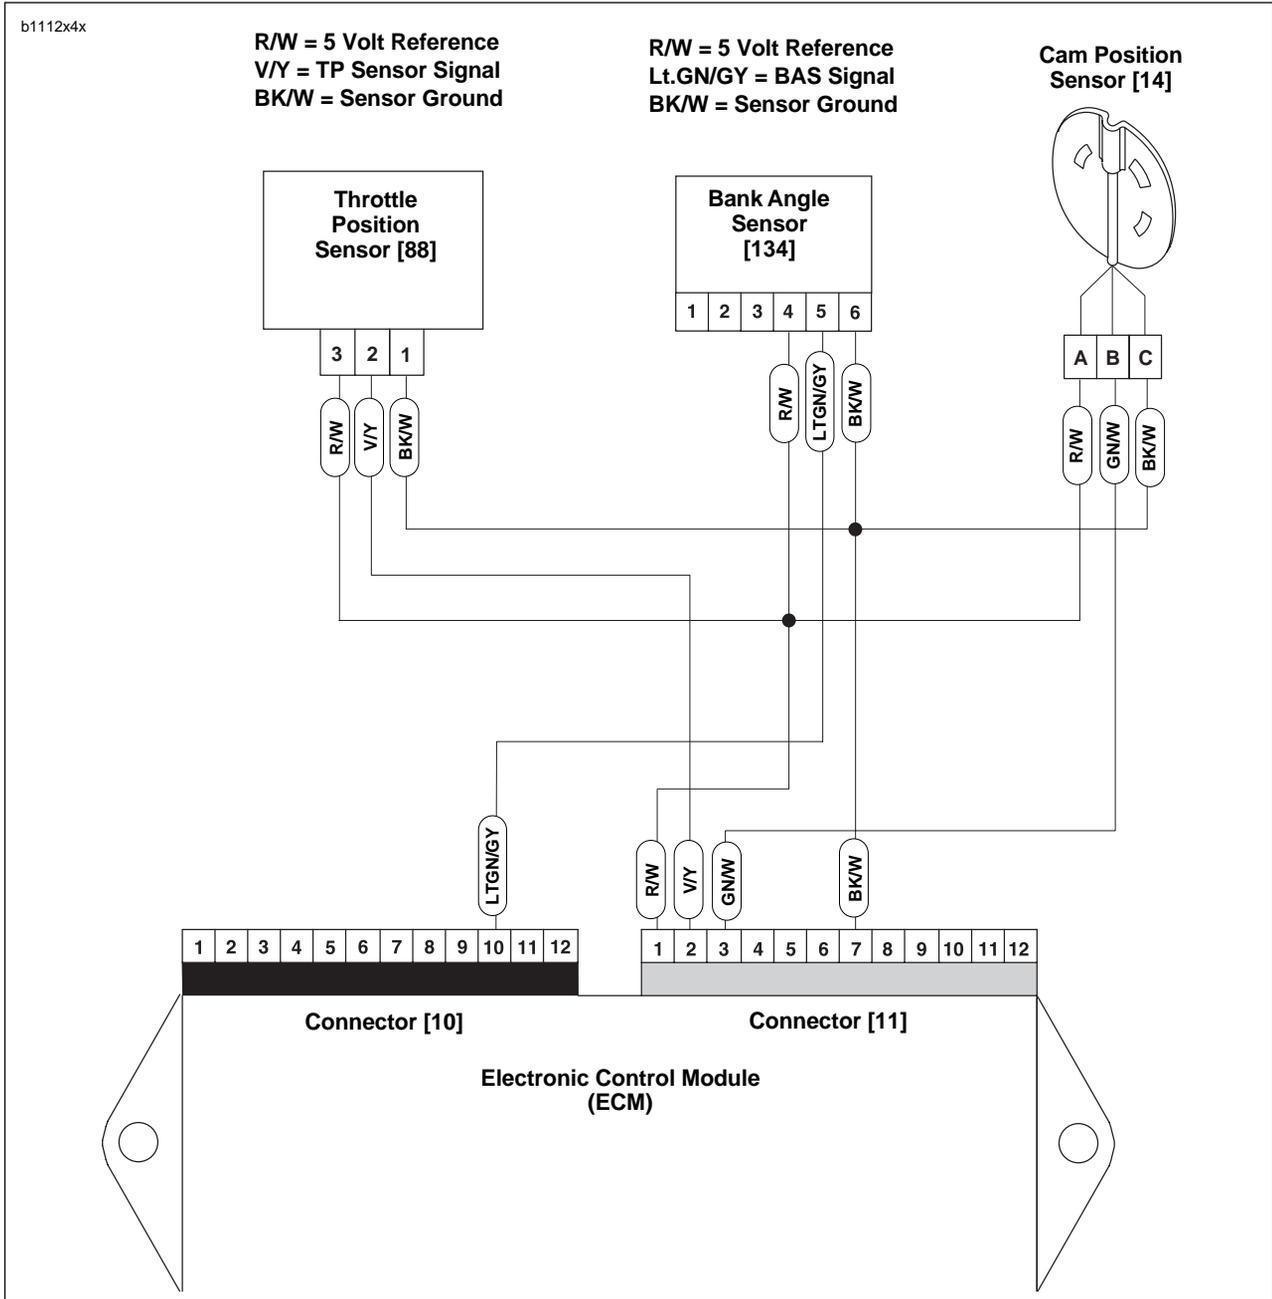


Figure 4-33. Throttle Position Sensor Circuit

Table 4-17. Wire Harness Connectors in Figure 4-33.

| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|--------------------------|------------------|--|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [14] | cam position sensor | 3-place Deutsch | under sprocket cover |
| [88] | throttle position sensor | 3-place Packard | right side of engine between cylinders |
| [134] | bank angle sensor | 6-place Sumitomo | in fairing |


Code 11 Test (Part 1 of 2)

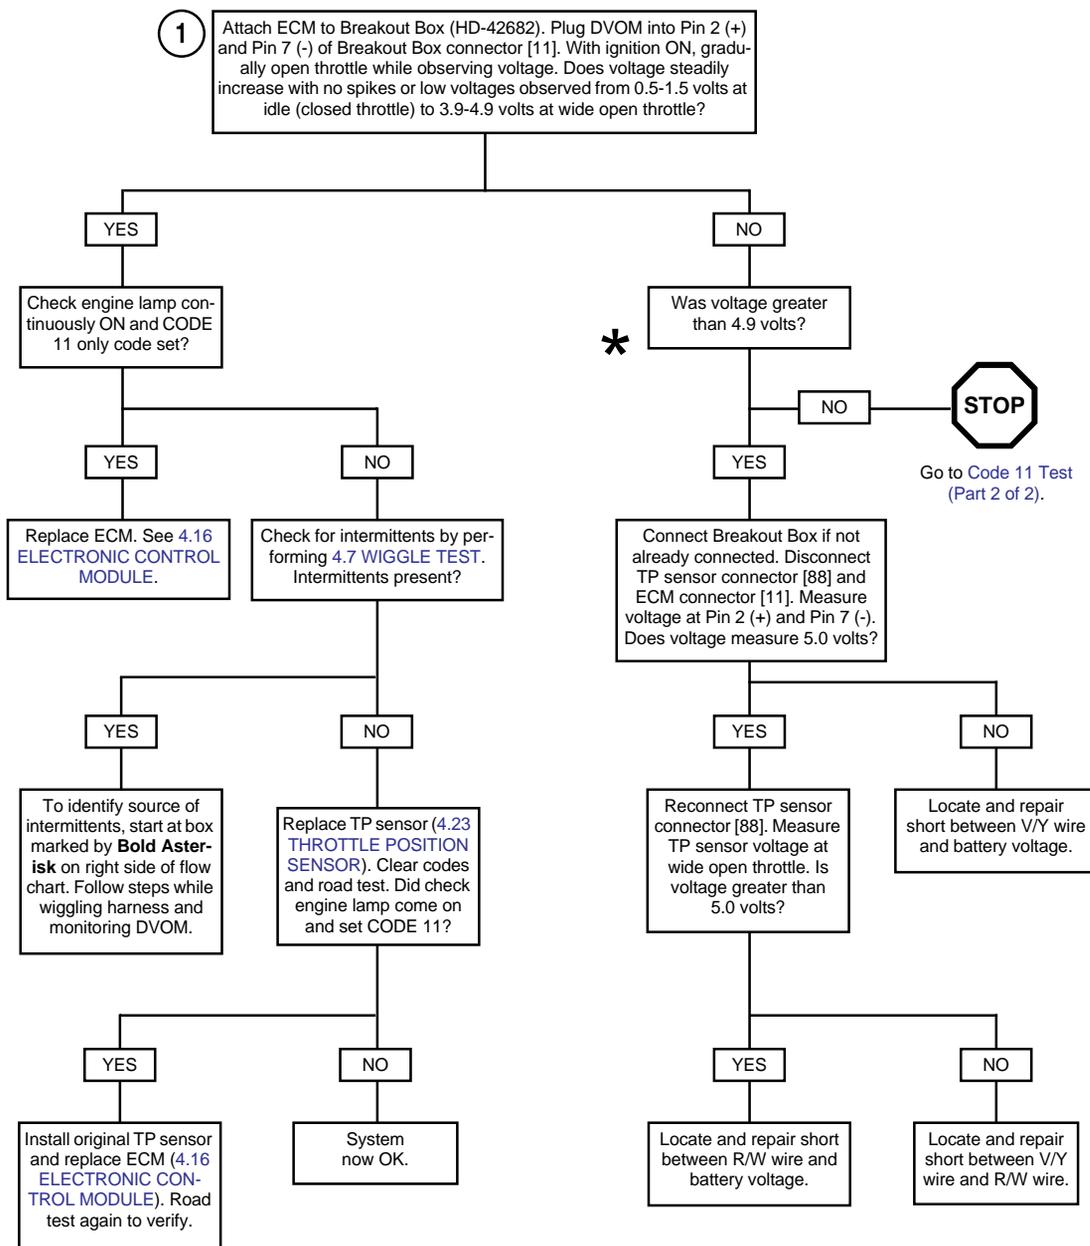

* At some point in the flow chart you may be instructed to jump directly to a the box with the bold asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 11 Test (Part 2 of 2)

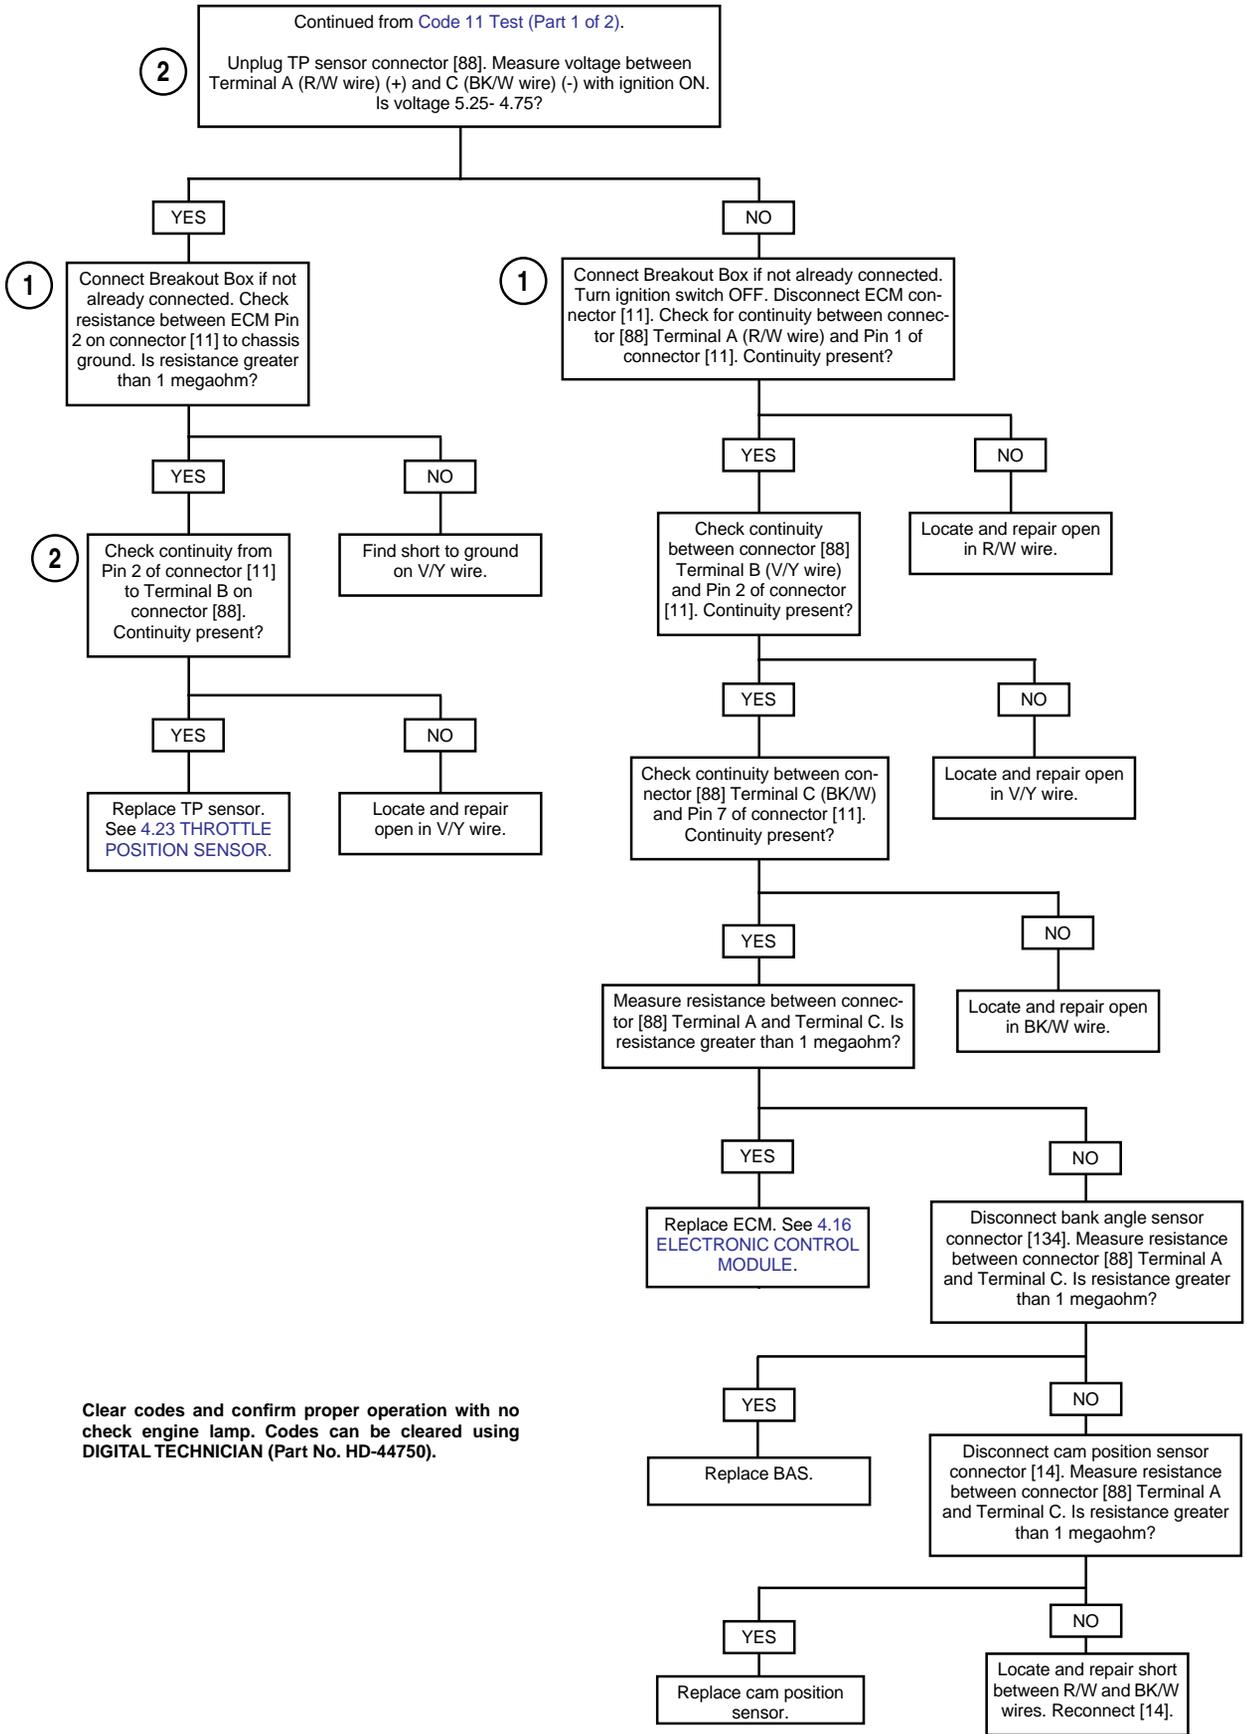

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Oxygen Sensor

See [Figure 4-34](#). The oxygen sensor provides a signal to the ECM which indicates whether the engine is running rich or lean.

- A low voltage signal (<0.41 V) indicates the engine is running lean.
- A high voltage signal (>0.56 V) indicates the engine is running rich.

When the air/fuel mixture is ideal, approximately 14.7 parts air to 1 part fuel, the voltage will be approximately 0.48 V.

DIAGNOSTICS

Diagnostic Tips

The DVOM displays the signal from the oxygen sensor in volts. This voltage will have an average value tending towards lean, rich or ideal value depending on operating temperature of the engine, engine speed and throttle position. An open/short to voltage or short to ground in the V/GY wire will cause the engine to run rich (short to ground) or lean (short to voltage) until fault is detected. Once fault is detected, vehicle will run in open loop. The engine must be running below 5000 RPM for the ECM to detect an oxygen sensor failure.

Check for the following conditions:

- **Poor connection.** Inspect the ECM harness connector [11], fuel injector connectors [84, 85] and oxygen sensor connector wiring for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection and damaged harness.
- **Dirty/stuck open injectors.** The motorcycle may run lean (dirty/clogged injectors) or rich (stuck open injectors) if there is an injector problem. This could also cause poor fuel economy and performance.
- **Loose oxygen sensor.** See [Figure 4-35](#). If the oxygen sensor is loose engine performance may be affected. This could also show up as a slow changing oxygen sensor voltage.
- **Loose/leaking exhaust.** This can cause a poor ground connection for sensor or allow fresh air into the exhaust system. If fresh air enters exhaust system, the oxygen sensor will read a lean condition, causing the system to go rich.

Diagnostic Notes

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).

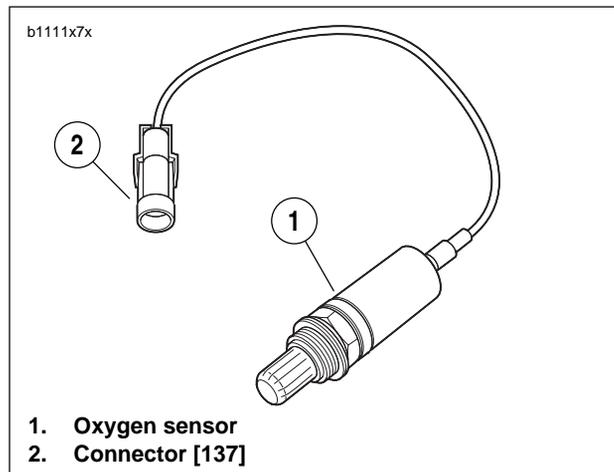


Figure 4-34. Oxygen Sensor

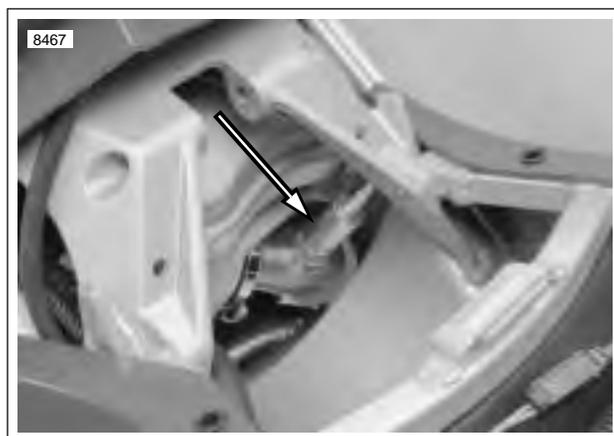


Figure 4-35. Oxygen Sensor (shock absorber removed)


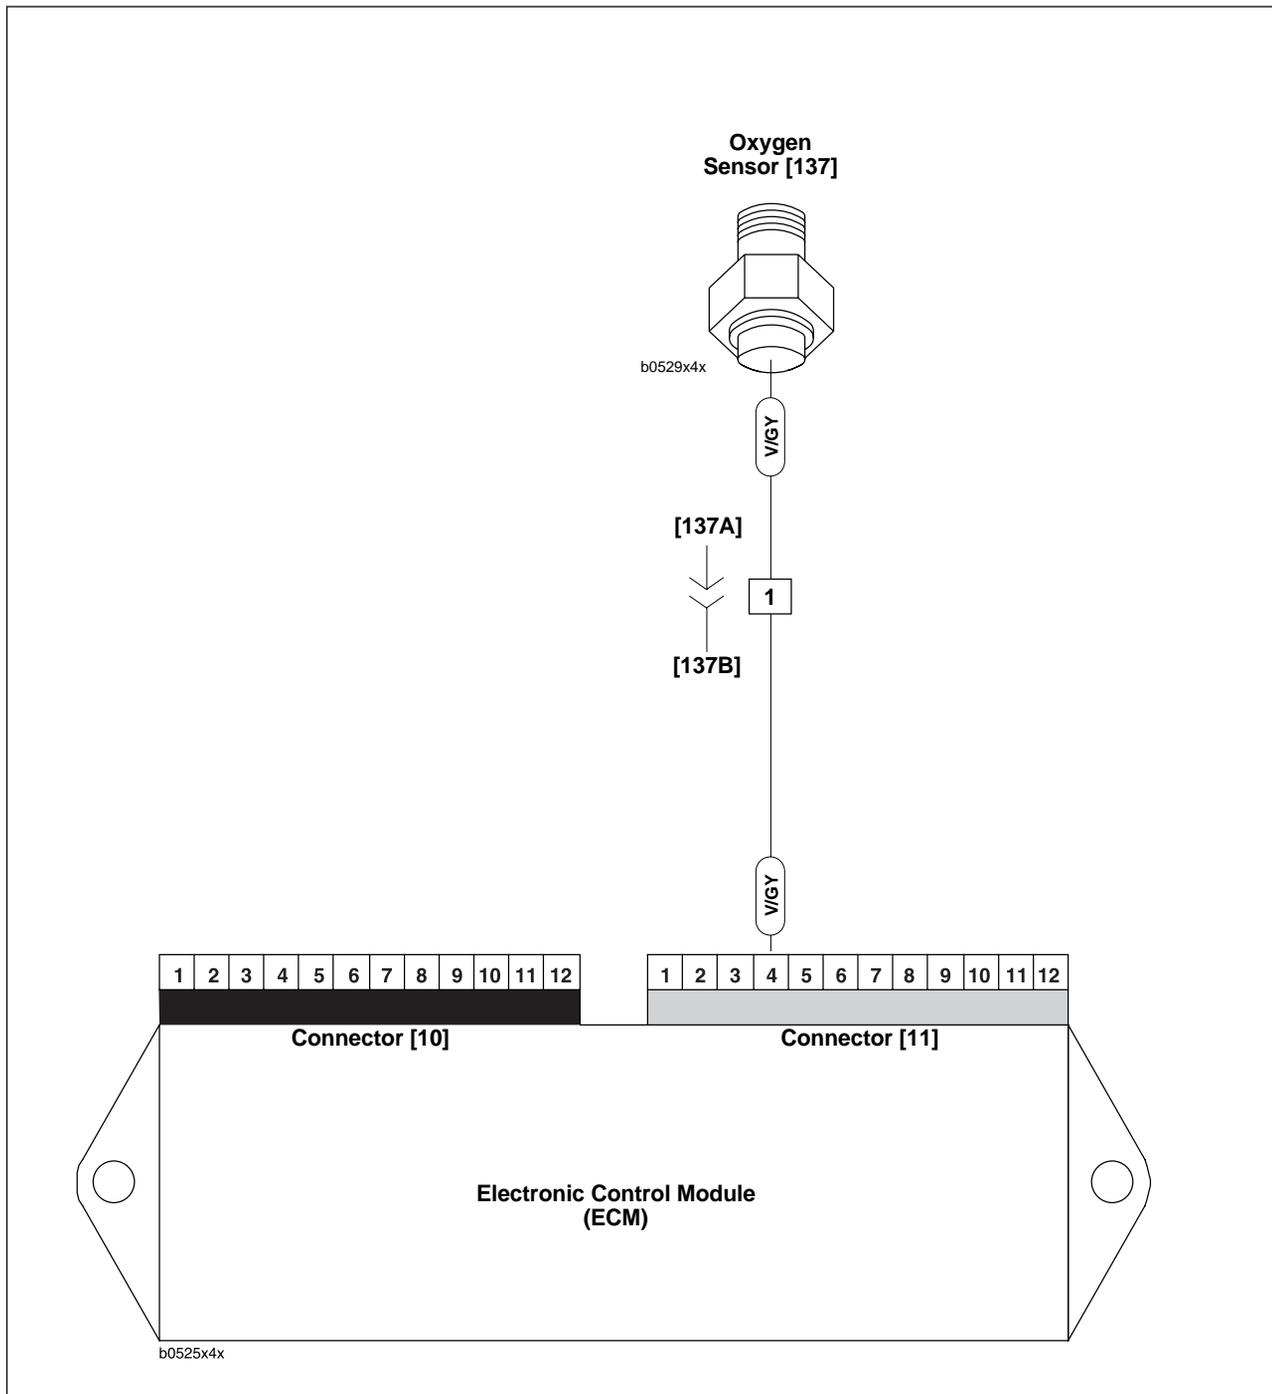


Figure 4-36. Oxygen Sensor Circuit

Table 4-18. Wire Harness Connectors in Figure 4-36.


| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|---------------|------------------|---------------------------|
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [137] | oxygen sensor | 1-place Packard | behind rear cylinder head |

Code 13 Test (Part 1 of 3)

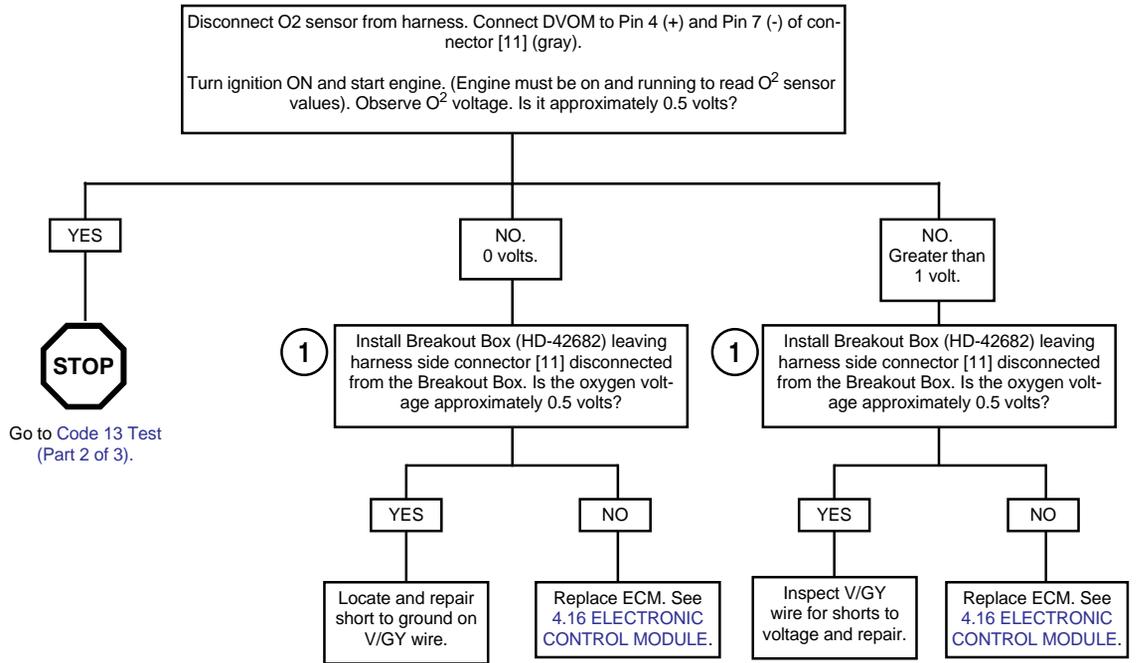


Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 13 Test (Part 2 of 3)

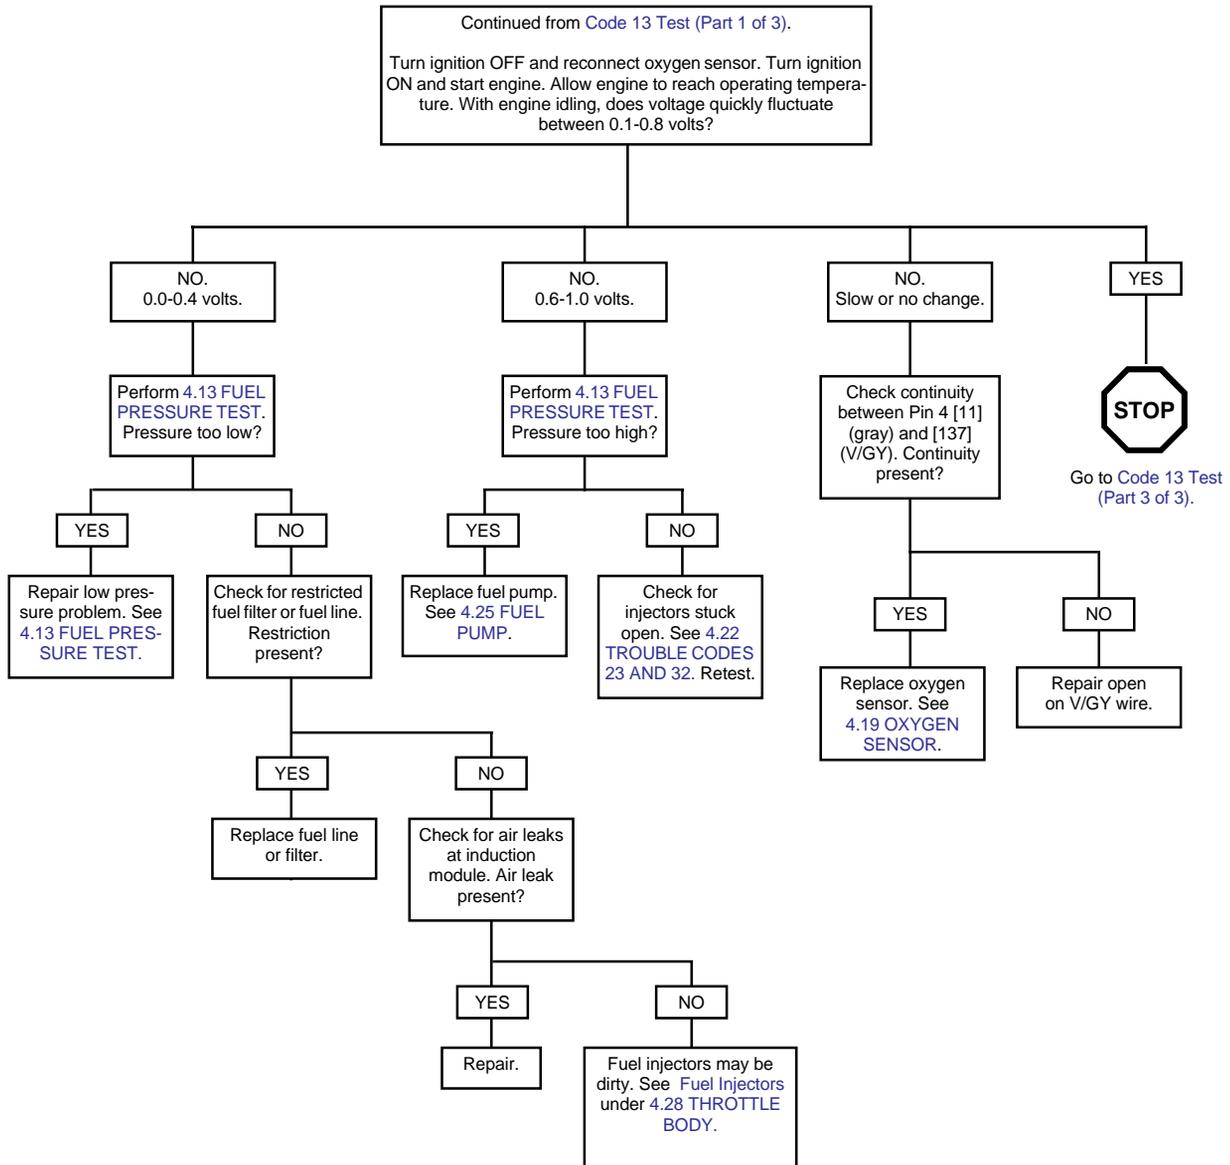

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 13 Test (Part 3 of 3)

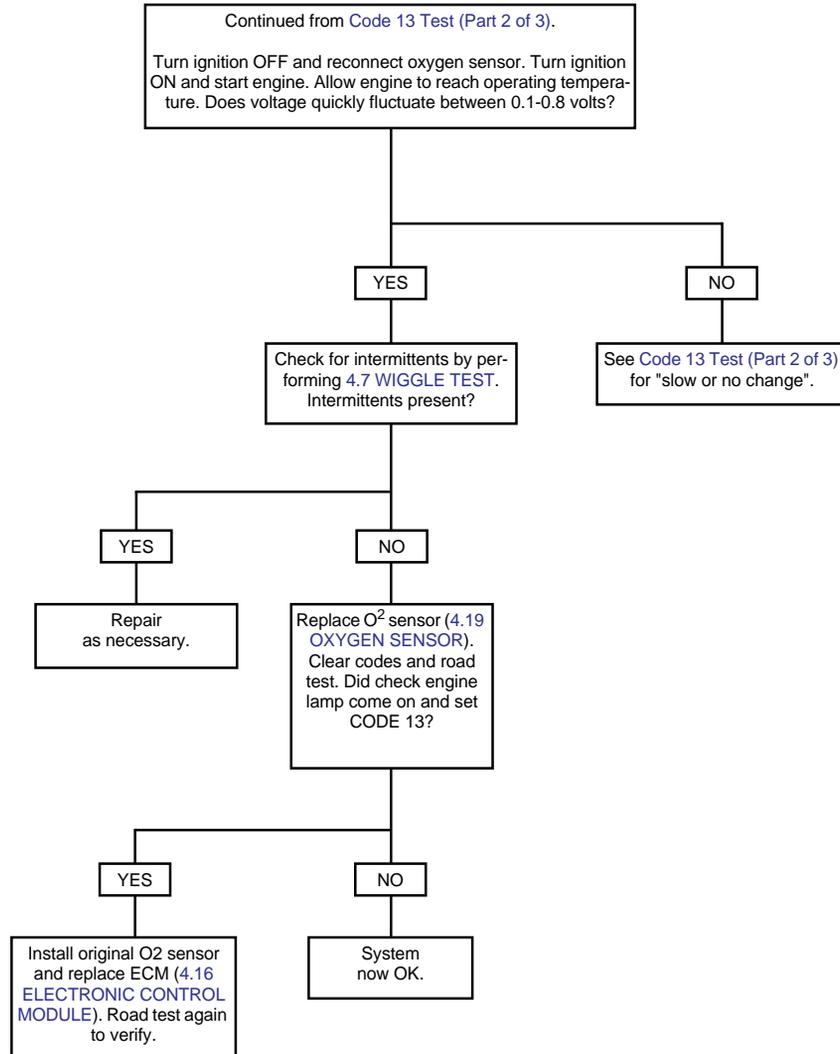

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Engine Temperature Sensor

CAUTION

Do not pull on engine temperature sensor wiring. Excess strain to sensor wiring will cause sensor damage.

The ECM supplies and monitors a 0-5 volt signal to one side of the engine temperature sensor (ET sensor). The other side of the ET sensor is connected to ground through the engine.

See [Table 4-19](#). The ET sensor is a thermistor device which means that at a specific temperature it will have a specific resistance across its terminals. As this resistance varies, so does the supplied voltage.

- At high temperatures, the resistance of the sensor is very low. This effectively lowers the signal voltage.
- At low temperatures, the resistance is very high, allowing the voltage to rise close to the supplied voltage of 5 volts.

The ECM monitors this voltage to compensate for various operating conditions.

DIAGNOSTICS

Diagnostic Tips

An intermittent may be caused by poor connection, rubbed through wire insulation or a wire broken inside the insulation.

Check the following conditions:

- **Poor connection.** Inspect ECM harness connector [11] for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection and damaged harness.
- **Shifted sensor.** The temperature-to-resistance values table may be used to test the ET sensor at various temperature levels in order to evaluate the possibility of a shifted (out-of-calibration) sensor which may result in driveability problems.

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 14 flow charts.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray pin probes and patch cord.

Table 4-19. Engine Temperature Sensor Specifications

| VOLTS | RESISTANCE | TEMP ° C | TEMP ° F |
|-------|------------|----------|----------|
| 0.00 | 0 | 300 | 572 |
| 0.21 | 145 | 255 | 491 |
| 0.42 | 303 | 210 | 410 |
| 0.62 | 463 | 190 | 374 |
| 0.81 | 638 | 170 | 338 |
| 1.20 | 1042 | 150 | 302 |
| 1.59 | 1539 | 130 | 266 |
| 3.01 | 4991 | 85 | 185 |
| 4.43 | 25,647 | 40 | 104 |
| 4.63 | 41,295 | 25 | 77 |
| 4.83 | 93,759 | 10 | 50 |
| 4.88 | 134,200 | 0 | 32 |
| 4.93 | 232,414 | -10 | 14 |

NOTE

All voltage and resistance values are approximate (+/- 20%). Engine temperature sensor is measured between Terminal 9 of connector [11] and system ground (Terminals 2 and 11 of connector [10]).


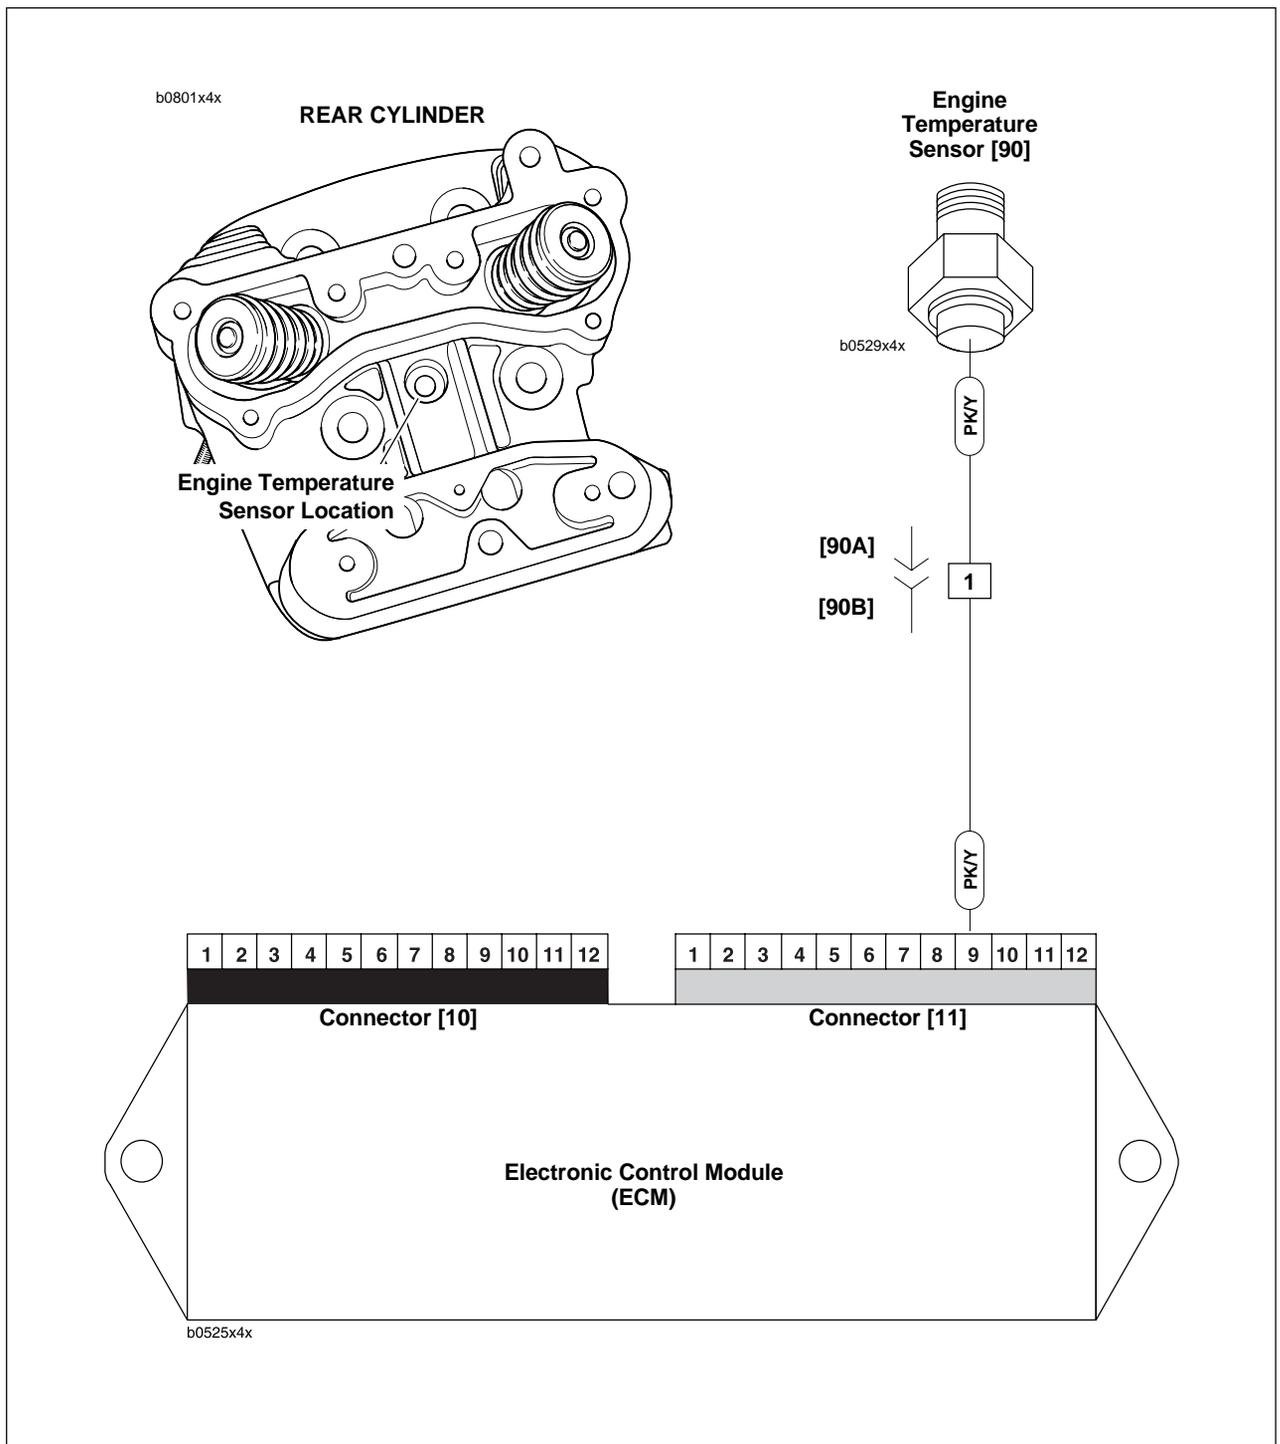


Figure 4-37. Engine Temperature Sensor Circuit

Table 4-20. Wire Harness Connectors in Figure 4-37.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|---------------------------|------------------|---------------------|
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [90] | engine temperature sensor | 1-place bullet | beneath airbox base |


Code 14 Test (Part 1 of 2)

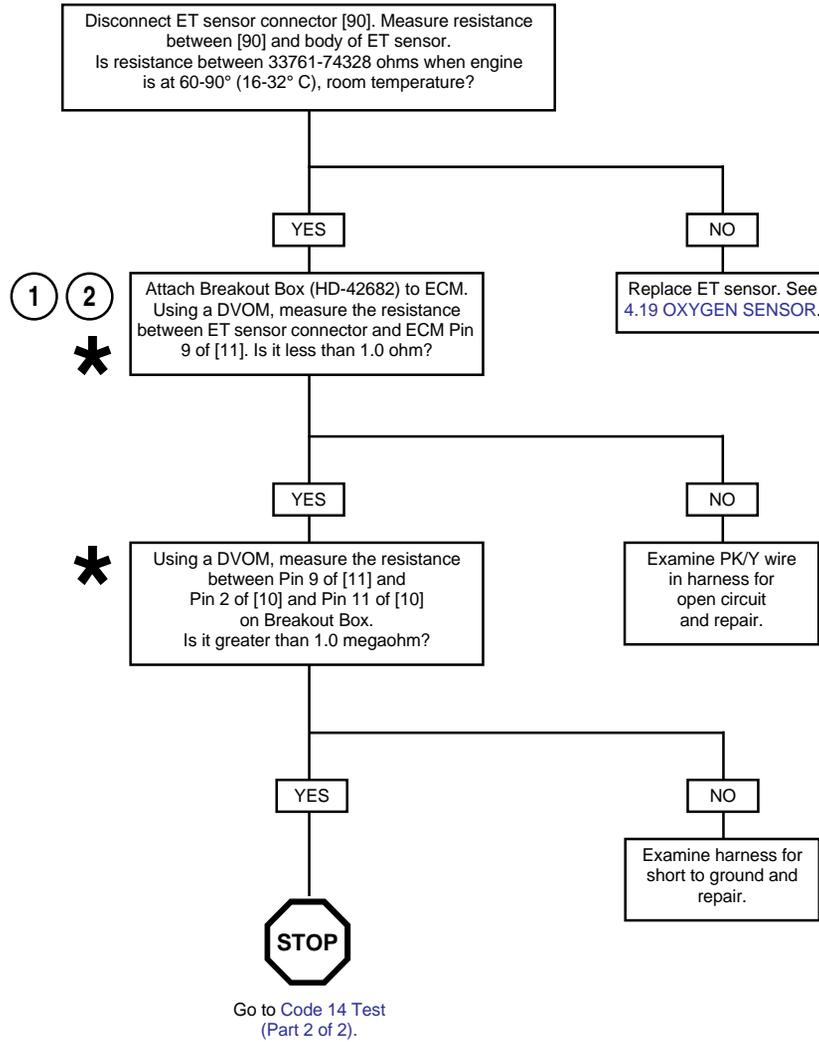

***** At some point in the flow chart you may be instructed to jump directly to the box marked by an asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 14 Test (Part 2 of 2)

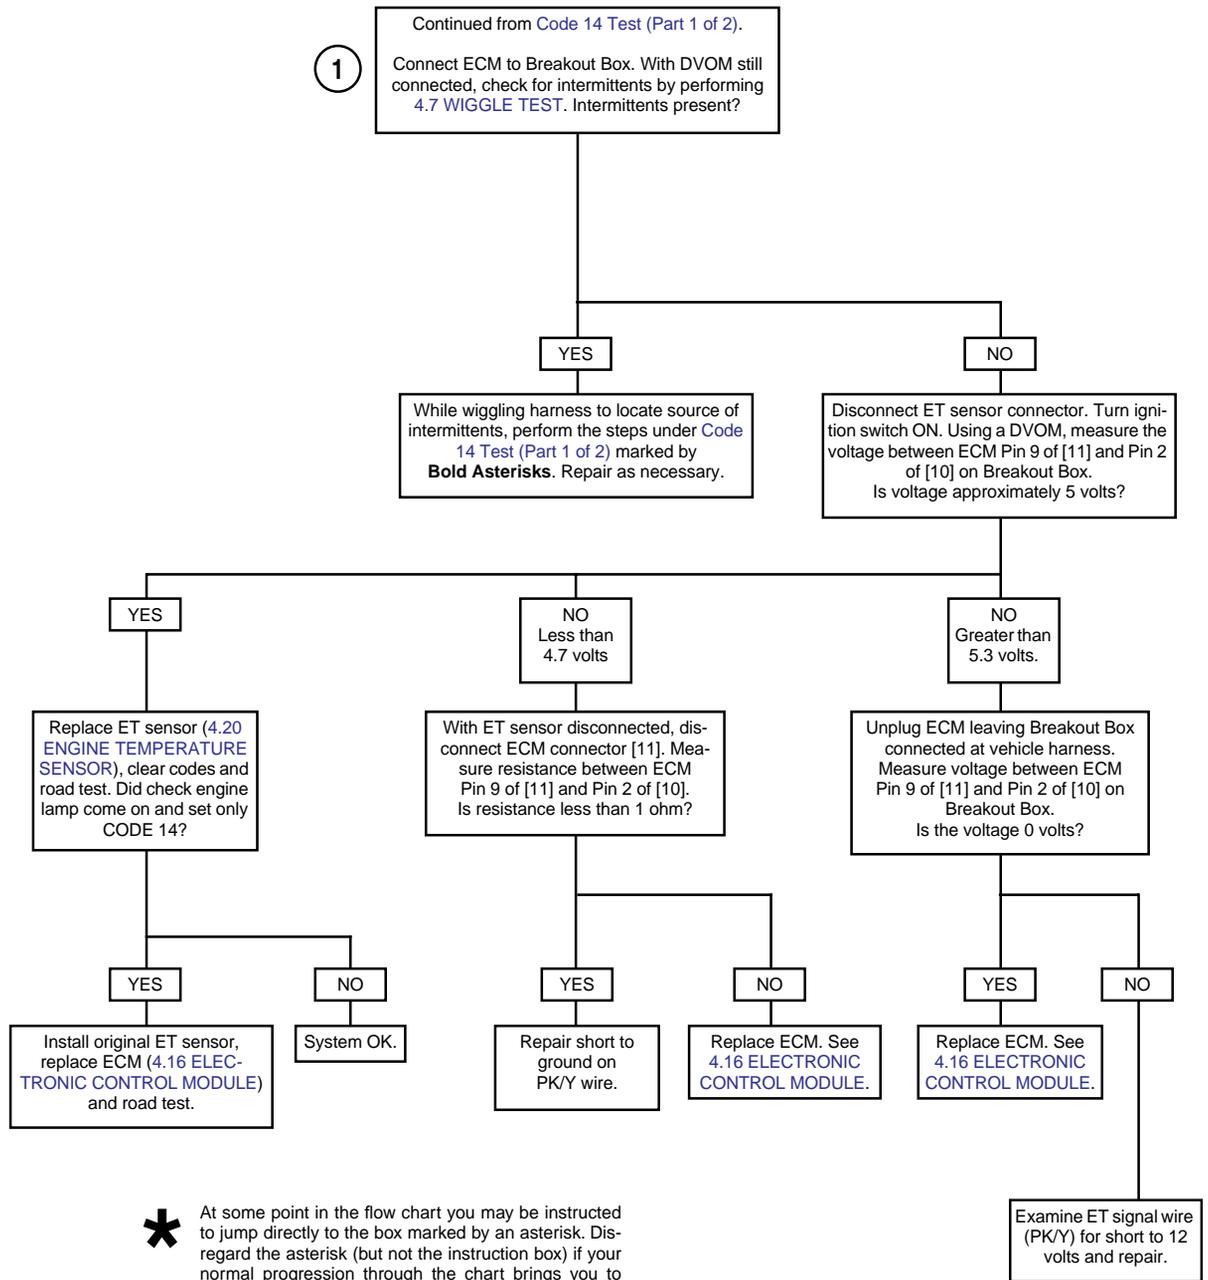

***** At some point in the flow chart you may be instructed to jump directly to the box marked by an asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Intake Air Temperature Sensor

The ECM supplies and monitors a signal at Pin 10 of [11] to one side of the intake air temperature sensor (IAT sensor). The other side of the IAT sensor is connected to a common sensor ground, which is also connected to the ECM (Pin 7 of [11]).

See [Table 4-21](#). The IAT sensor is a thermistor device, meaning that at a specific temperature, it will have a specific resistance across its terminals. As this resistance varies, so does the supplied voltage (Pin 10).

- At high temperatures, the resistance of the sensor is very low. This effectively lowers the signal voltage on Pin 10.
- At low temperatures, the resistance is very high, allowing the voltage to rise close to the supplied voltage of 5 volts.

The ECM monitors this voltage to compensate for various operating conditions.

DIAGNOSTICS

Diagnostic Tips

An intermittent may be caused by a poor connection, rubbed through wire insulation or a wire broken inside the insulation.

Check for the following conditions:

- **Poor connection.** Inspect ECM harness connector for backed out terminals, improper mating, broken locks improperly formed or damaged terminals, poor terminal-to-wire connection and damaged harness.
- **Perform 4.7 WIGGLE TEST to locate intermittents.** If connections and harness check out OK, check intake air temperature reading while moving related connectors and wiring harness. If the failure is induced, the IAT sensor display will change.
- **Shifted sensor.** The temperature-to-resistance values table may be used to test the IAT sensor at various temperature levels in order to evaluate the possibility of a shifted (out-of-calibration) sensor which may result in driveability problems.

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 15 flow charts.

1. Connect BREAKOUT BOX (Part No. HD-42682) to EFI harness **only** (leave ECM disconnected). See [4.6 BREA-KOUT BOX](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray socket probes and patch cord.
3. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray pin probe and patch cord.

Table 4-21. Intake Air Temperature Sensor Specifications

| VOLTS | RESISTANCE | TEMP ° C | TEMP ° F |
|-------|------------|----------|----------|
| 0.49 | 1086 | 125 | 257 |
| 0.68 | 1561 | 113 | 235 |
| 0.86 | 2077 | 100 | 212 |
| 1.13 | 2920 | 90 | 194 |
| 1.40 | 3889 | 80 | 176 |
| 2.25 | 8149 | 60 | 140 |
| 3.09 | 16,178 | 40 | 104 |
| 3.52 | 23,670 | 30 | 86 |
| 3.94 | 37,170 | 20 | 68 |
| 4.24 | 55,359 | 10 | 50 |
| 4.53 | 96,383 | 0 | 32 |
| 4.68 | 146,250 | -10 | 14 |
| 4.83 | 284,118 | -20 | -4 |

NOTE

All voltage and resistance values are approximate (+/- 20%). Intake air temperature sensor is measured between Terminal 10 of [11] and system ground (Terminals 2 and 11 of [10]).


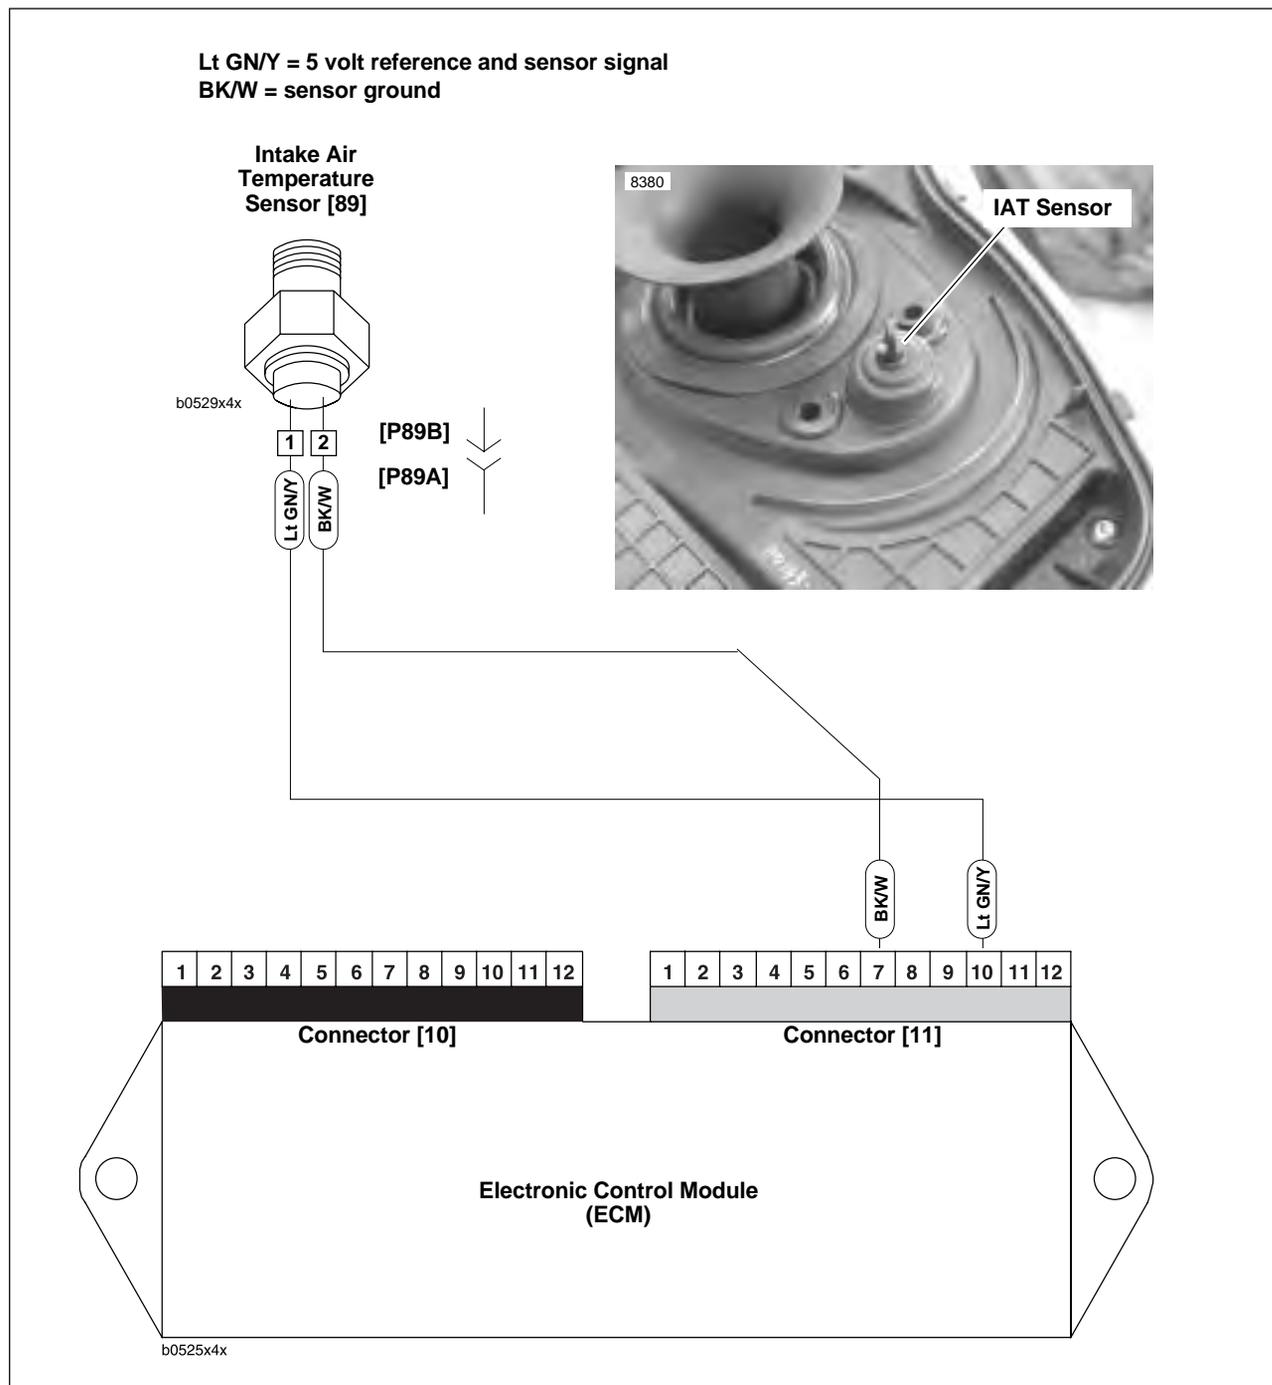


Figure 4-38. Intake Air Temperature Sensor Circuit

Table 4-22. Wire Harness Connectors in Figure 4-38.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------------------|------------------|----------------|
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [89] | intake air temperature sensor | 2-place Amp | in airbox base |


Code 15 Test (Part 1 of 2)

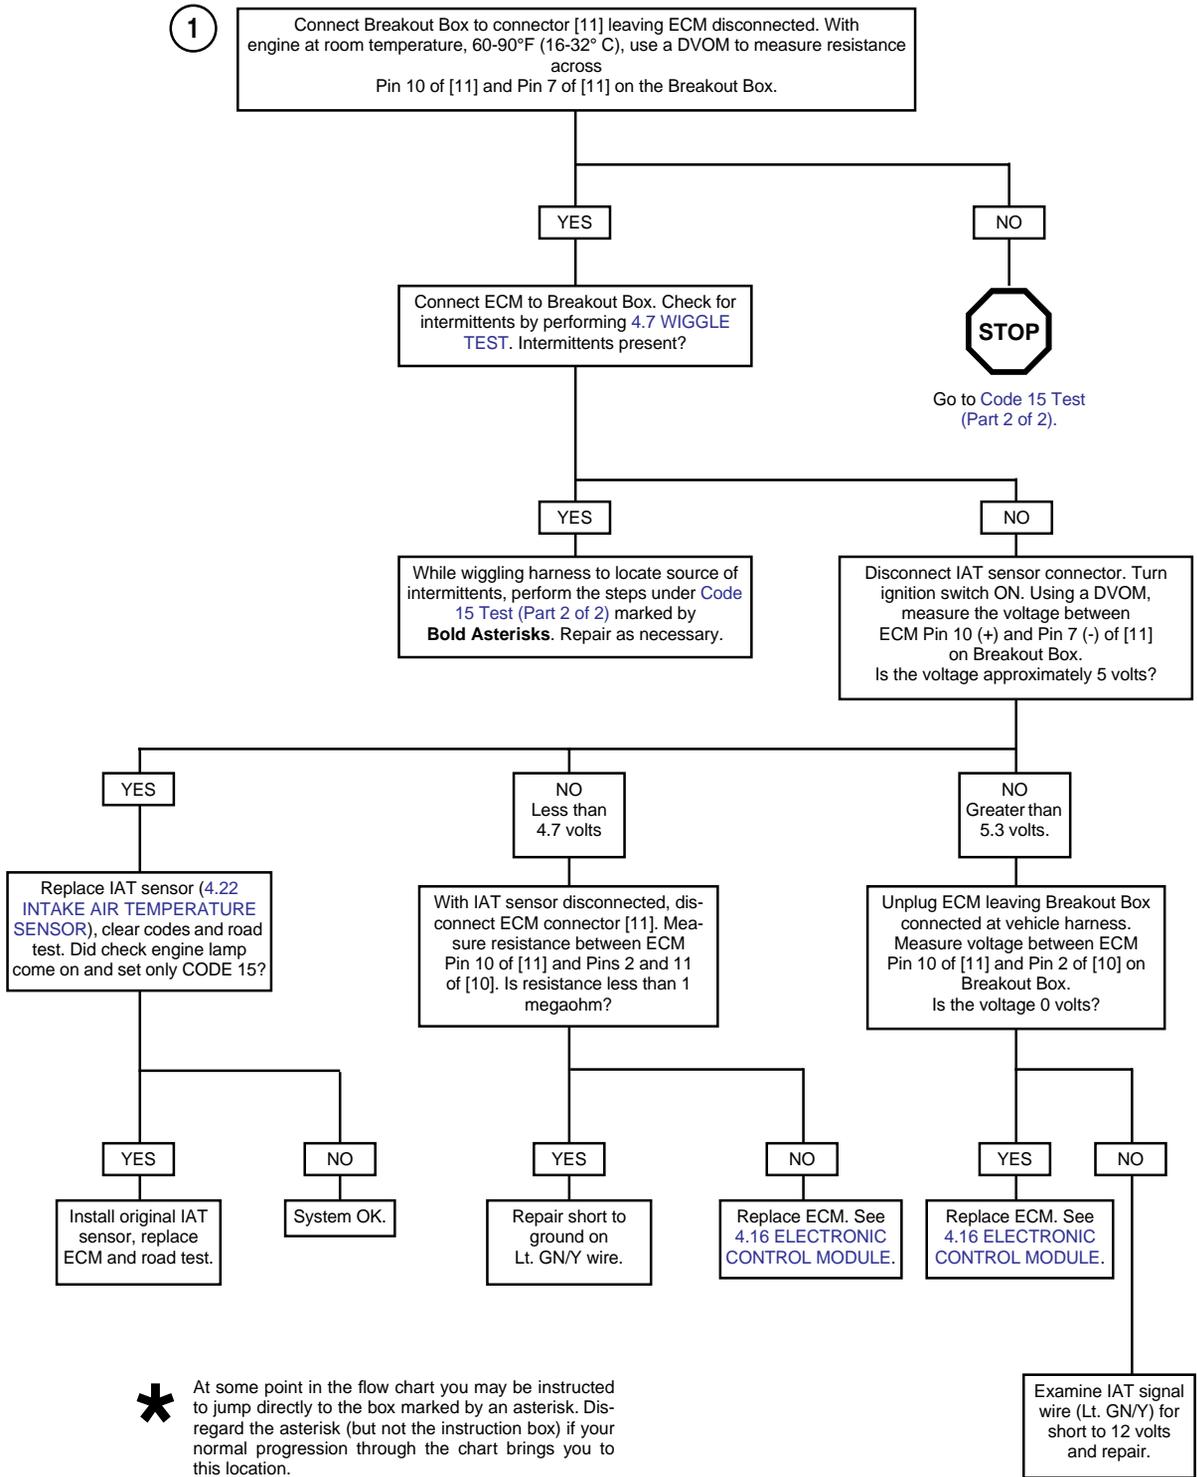

***** At some point in the flow chart you may be instructed to jump directly to the box marked by an asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 15 Test (Part 2 of 2)

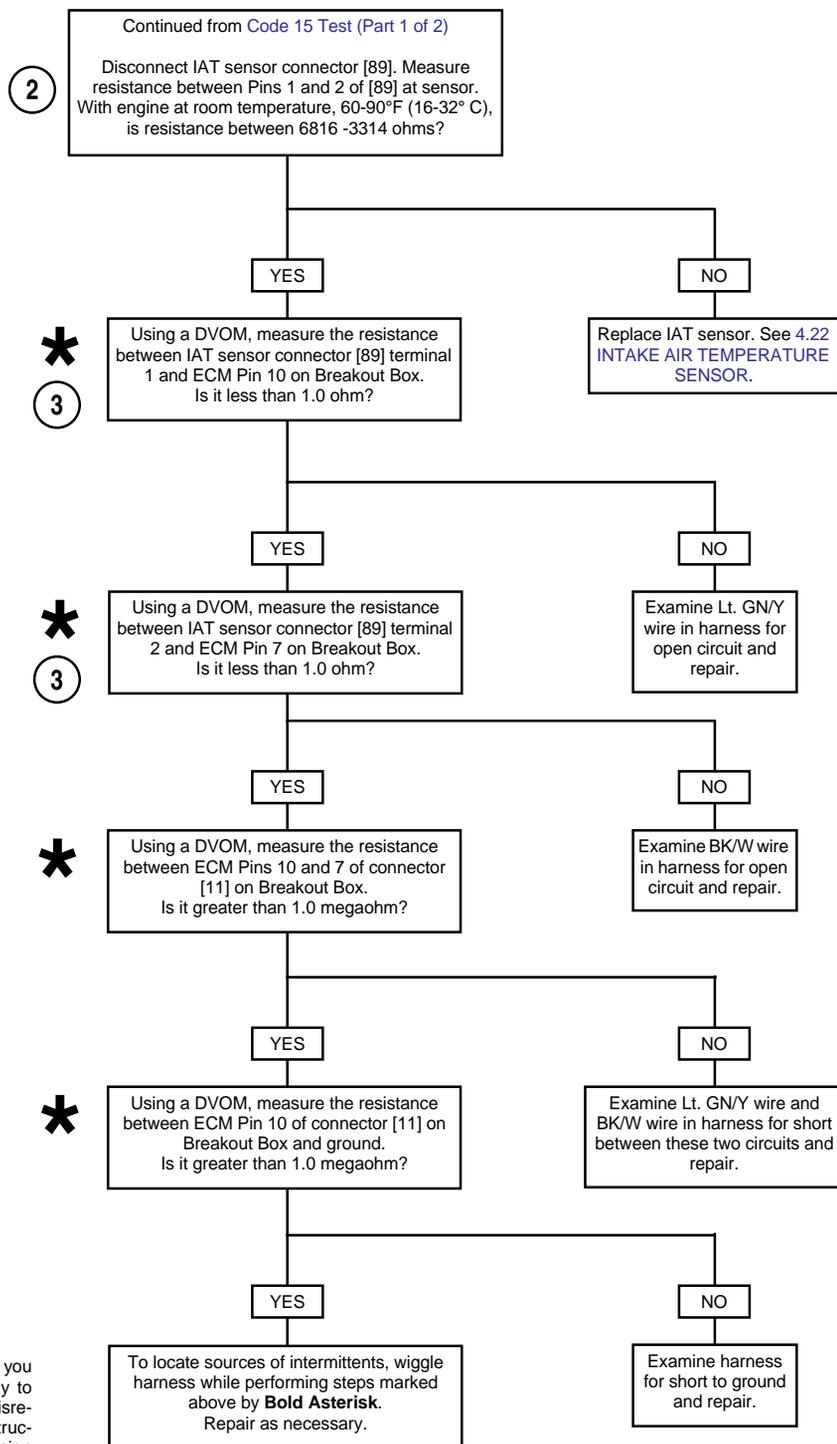

At some point in the flow chart you may be instructed to jump directly to the box marked by an asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Battery Voltage

A Code 16 will set if the ECM detects battery positive voltage less than 6 volts or greater than 20 volts.

- A low voltage condition typically occurs during activation of the starter or generally indicates loose wire connections.
- A high voltage condition is usually caused by a faulty voltage regulator.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 16 flow charts.

1. The ECM is monitoring voltage at ECM connector [10] (black) Terminal 1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. This checks for voltage drops in the ECM power circuit. If a significant voltage drop is not present, condition may be caused by excessive starter current draw.

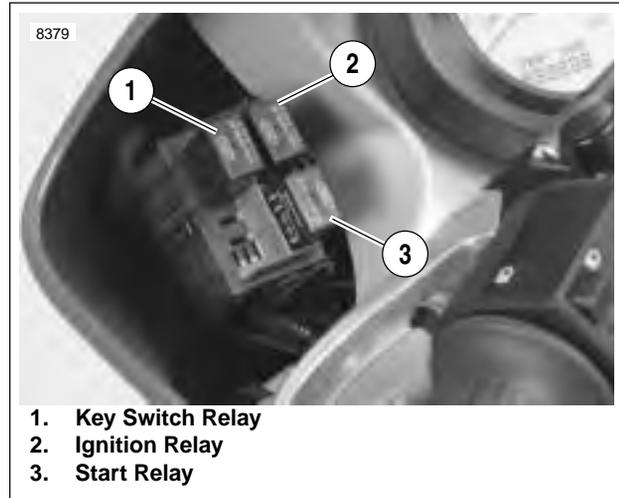


Figure 4-39. Electrical Relays

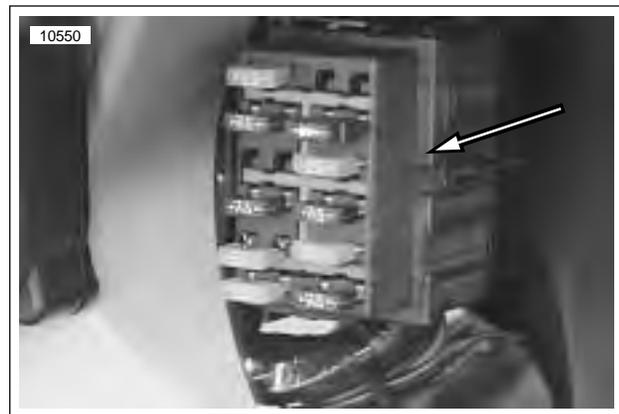


Figure 4-40. Fuse Block

bd0016ax

| | |
|---------------------|--------------------|
| Spare | Empty |
| 19 13 | 7 1 |
| Spare | Diode |
| 20 14 | 8 2 |
| Empty | Bk/Hn/Mflr |
| 21 15 | 9 3 |
| ECM | Fan |
| 22 16 | 10 4 |
| Lights | IGN |
| 23 17 | 11 5 |
| Key Sw | Acces. |
| 24 18 | 12 6 |

Figure 4-41. Fuses and Diode

b1083d4x


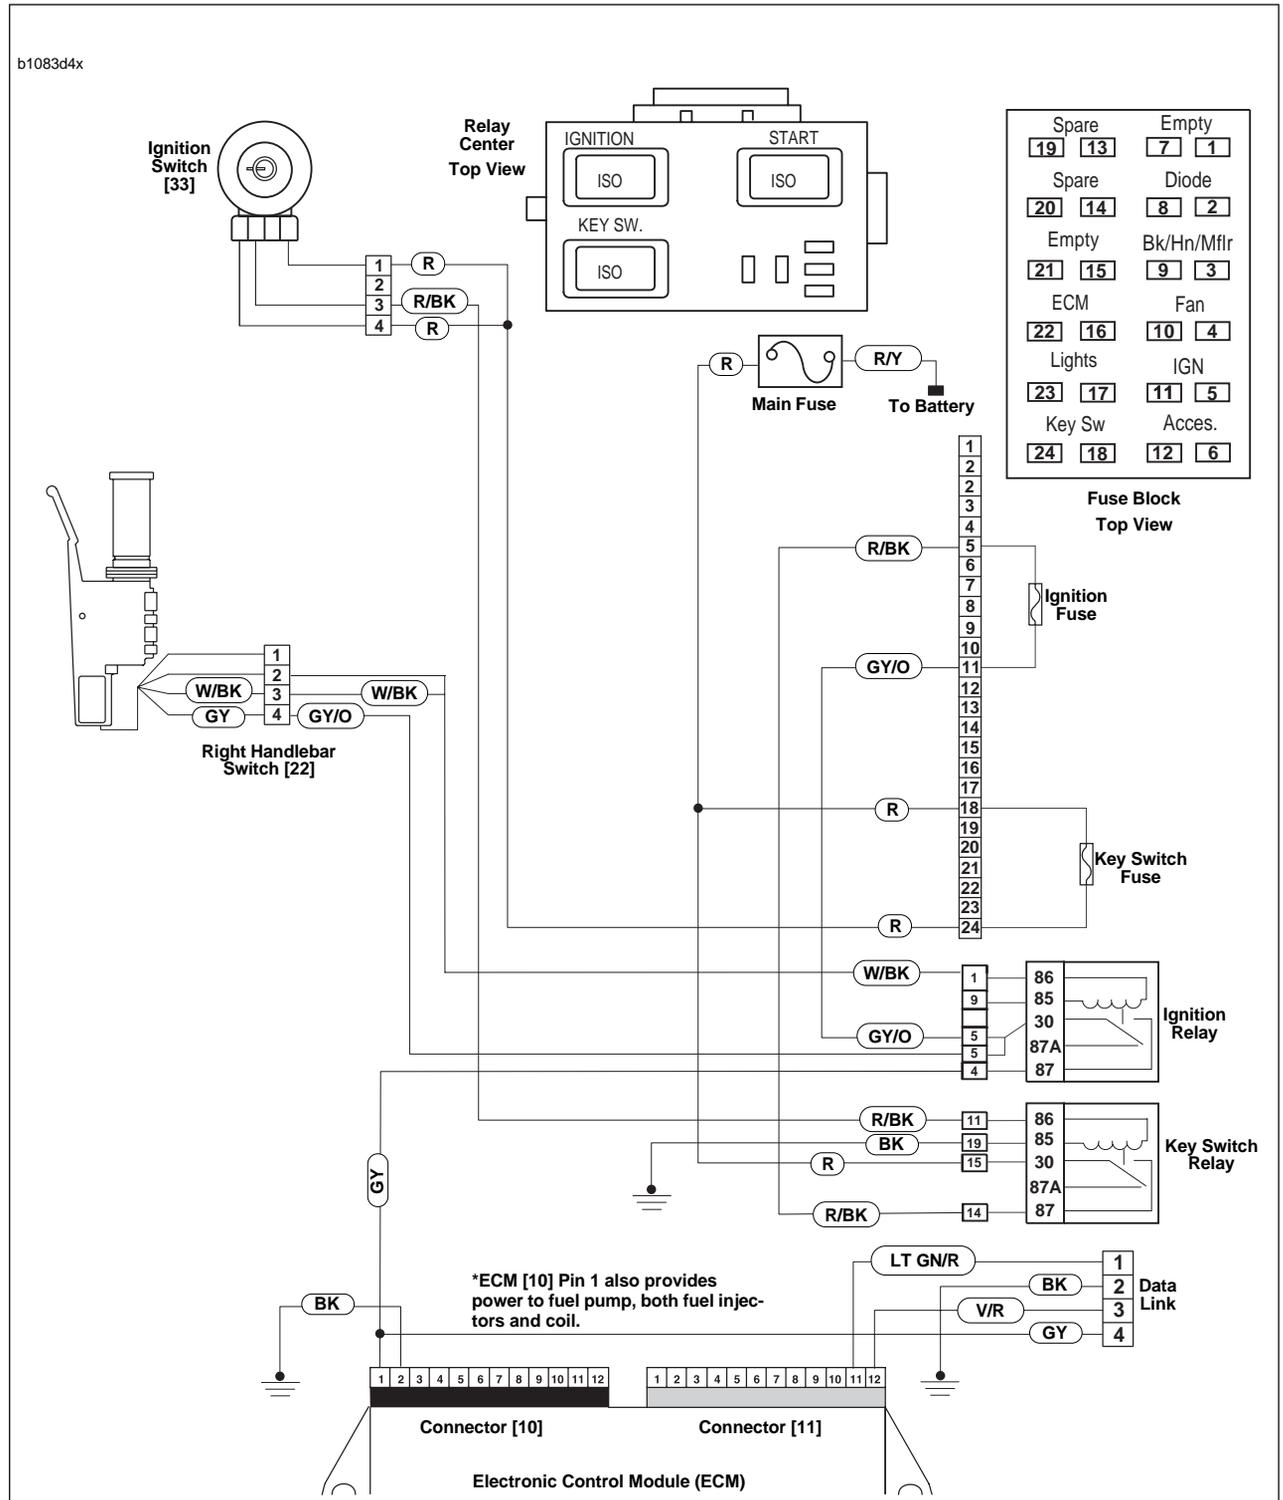


Figure 4-42. Battery Voltage Circuit

Table 4-23. Wire Harness Connectors in Figure 4-42.


| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------|------------------|------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |

Code 16 Test (Part 1 of 2)

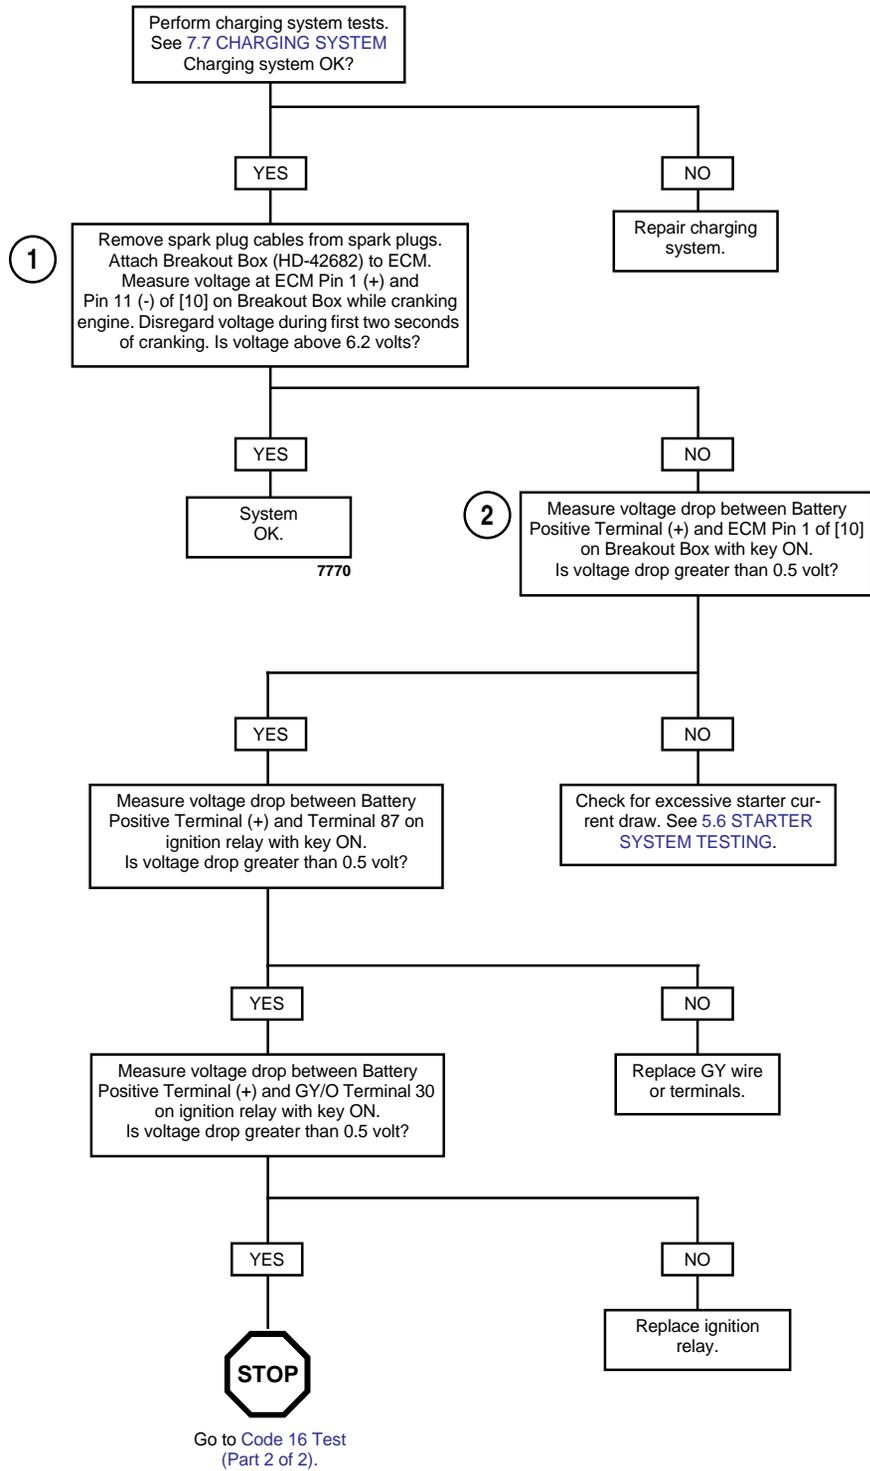

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 16 Test (Part 2 of 2)

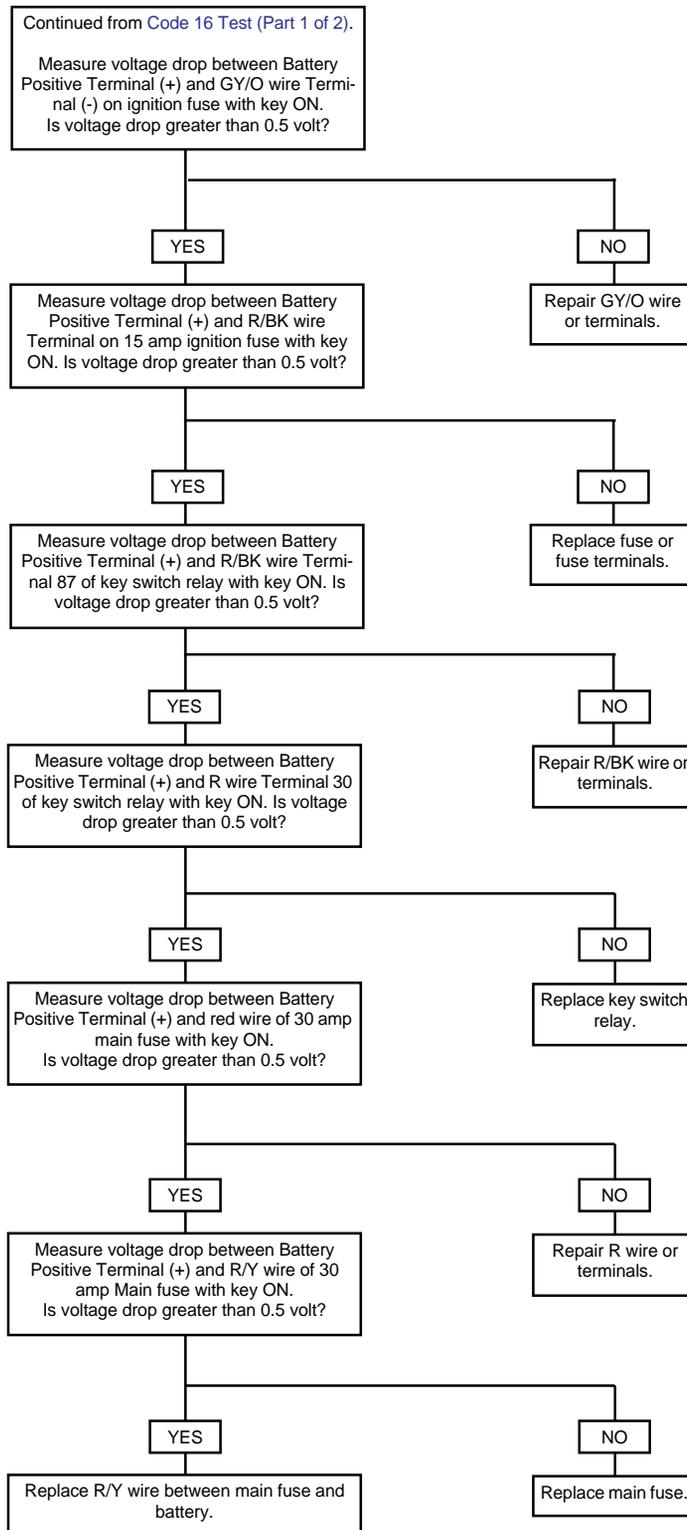

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Interactive Muffler Control (XB12R Models Only)

The interactive exhaust system utilizes an actuator valve in the muffler which is connected to an actuator motor via a cable. The valve position automatically adjusts to enhance engine performance.

A Code 21 will set if the ECM detects that the output for the Interactive Muffler Control Actuator is not in agreement with the feedback circuit.

- Mechanical fault in the actuator, valve or cable.
- Electrical fault in the actuator circuit.
- Electrical fault in the actuator feedback circuit.

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 21 flow charts.

1. Using TEST CONNECTOR KIT (Part No. HD-41404), attach red probe and patch cord to [164B] (1, 2).
2. Using TEST CONNECTOR KIT (Part No. HD-41404), use gray male pin probe and patch cord.

bd0016ax

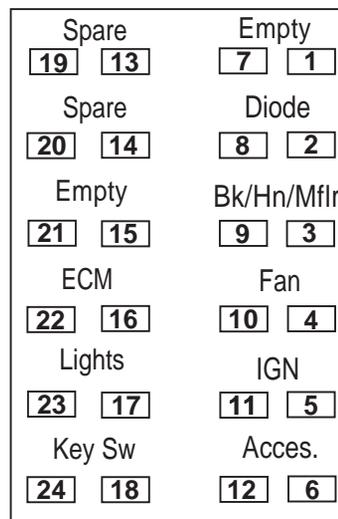


Figure 4-43. Fuses and Diode


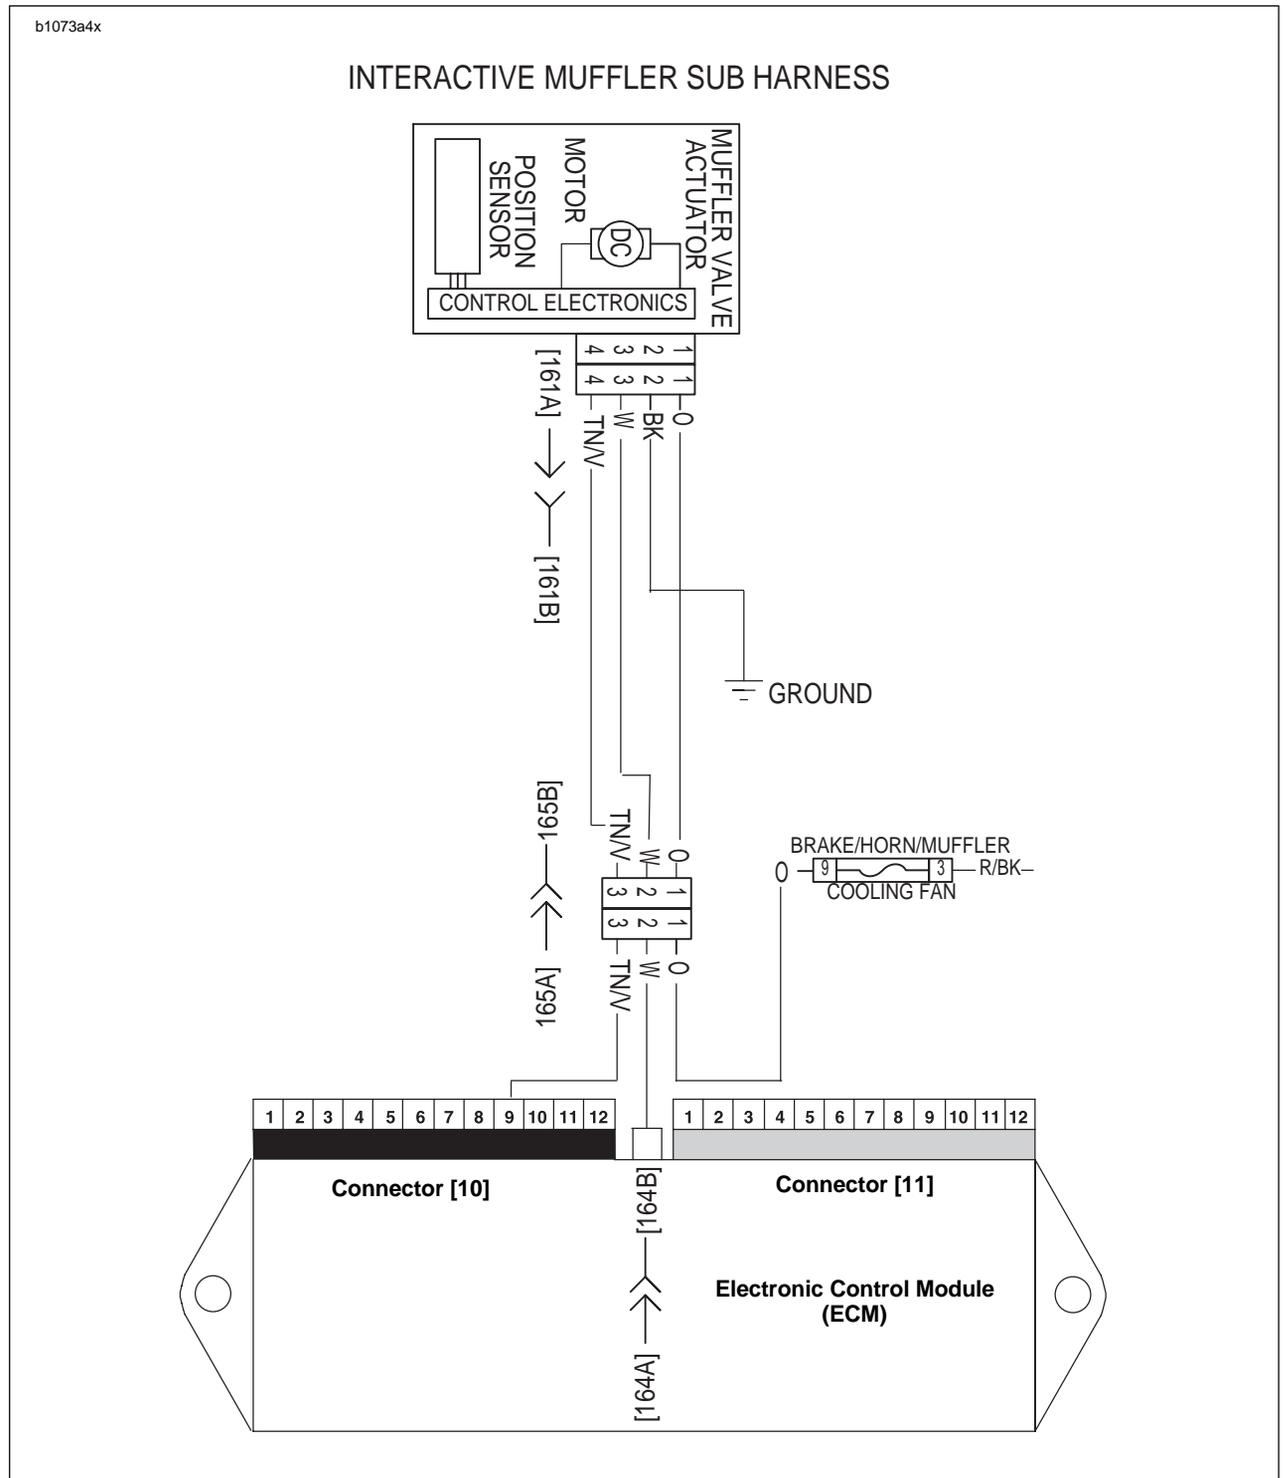


Table 4-24. Wire Harness Connectors in Figure 4-44.

| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|------------------------------|------------------|-------------------------|
| [10] | ECM (black) | 12-place Deutsch | under fairing |
| [161] | Interactive muffler actuator | 4-place Deutsch | under air cleaner cover |
| [164] | ECM | 1-place Amp | under fairing |
| [165] | sub-harness | 3-place Packard | beneath airbox base |

Code 21 Test

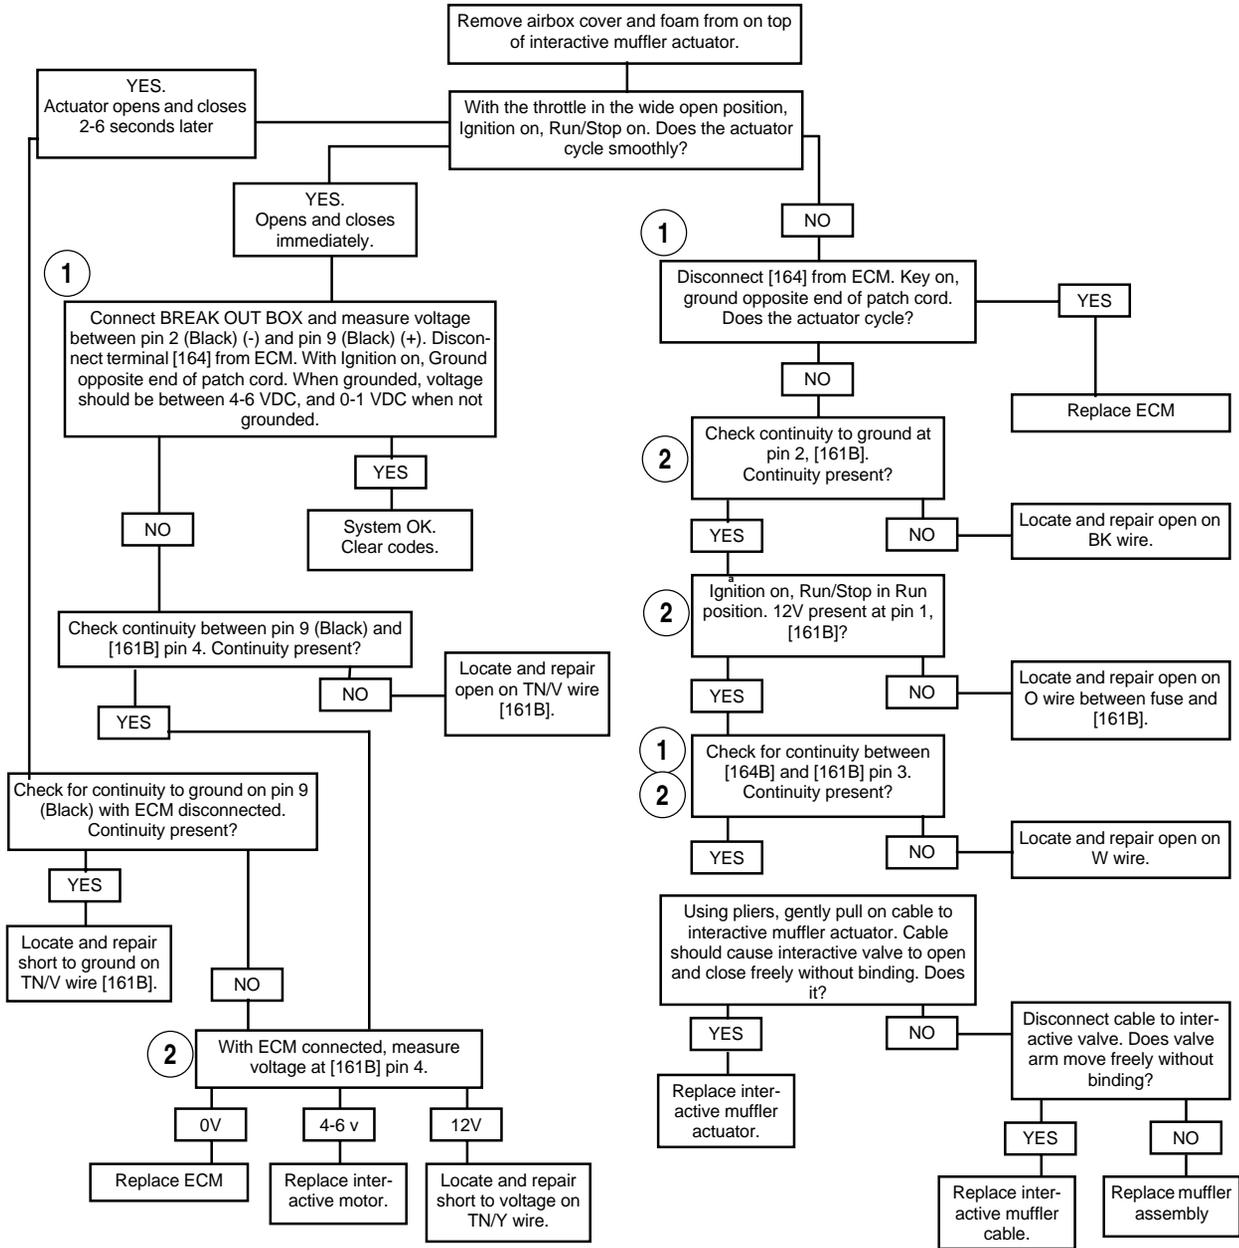

GENERAL

Front Fuel Injector (Code 23) And Rear Fuel Injector (Code 32)

See [Figure 4-45](#). The fuel injectors (1, 4) are solenoids that allow pressurized fuel into the engine intake tract. The injectors are timed to the engine cycle and are triggered sequentially.

The power for the injectors comes from the ignition relay. The ignition relay also provides power for fuel pump, ECM, vehicle speed sensor and the ignition coils. The ECM provides the path to ground to trigger the injectors.

NOTE

Ignition relay failures or wiring harness problems will cause 12 volt power to be lost to both injectors, ignition coils, ECM, vehicle speed sensor and fuel pump.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 23/32 flow charts.

⚠ WARNING

The gasoline in the fuel supply line downstream of the fuel pump is under high pressure (49 psi [338 kPa]). To avoid an uncontrolled discharge or spray of gasoline, always purge the system of high pressure gas before servicing the fuel system. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

1. Purge fuel line. See [4.25 FUEL PUMP](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), purple pin probes and patch cord.
3. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
4. Use FUEL INJECTOR TEST LAMP (Part No. HD-34730-2C).

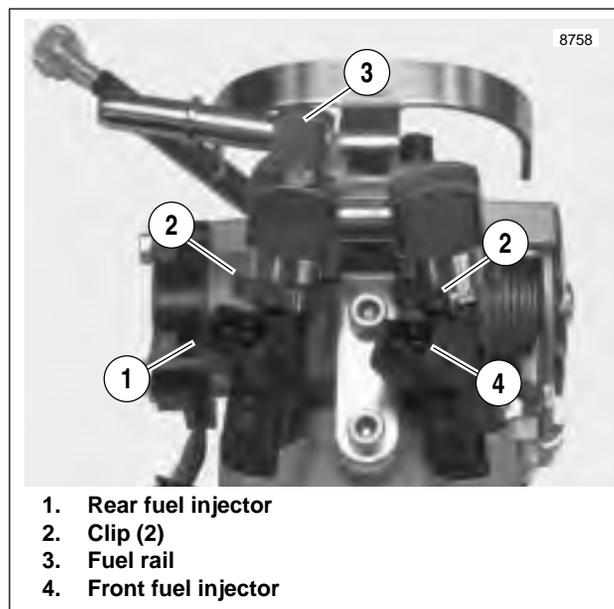


Figure 4-45. Fuel Injectors (XB9R Shown)

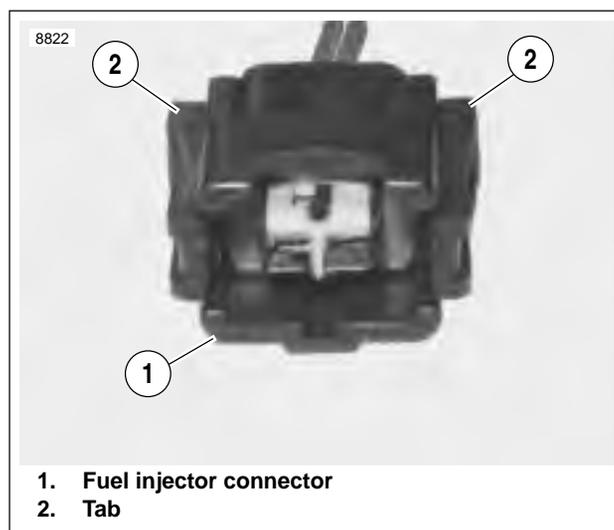


Figure 4-46. Fuel Injector Connector


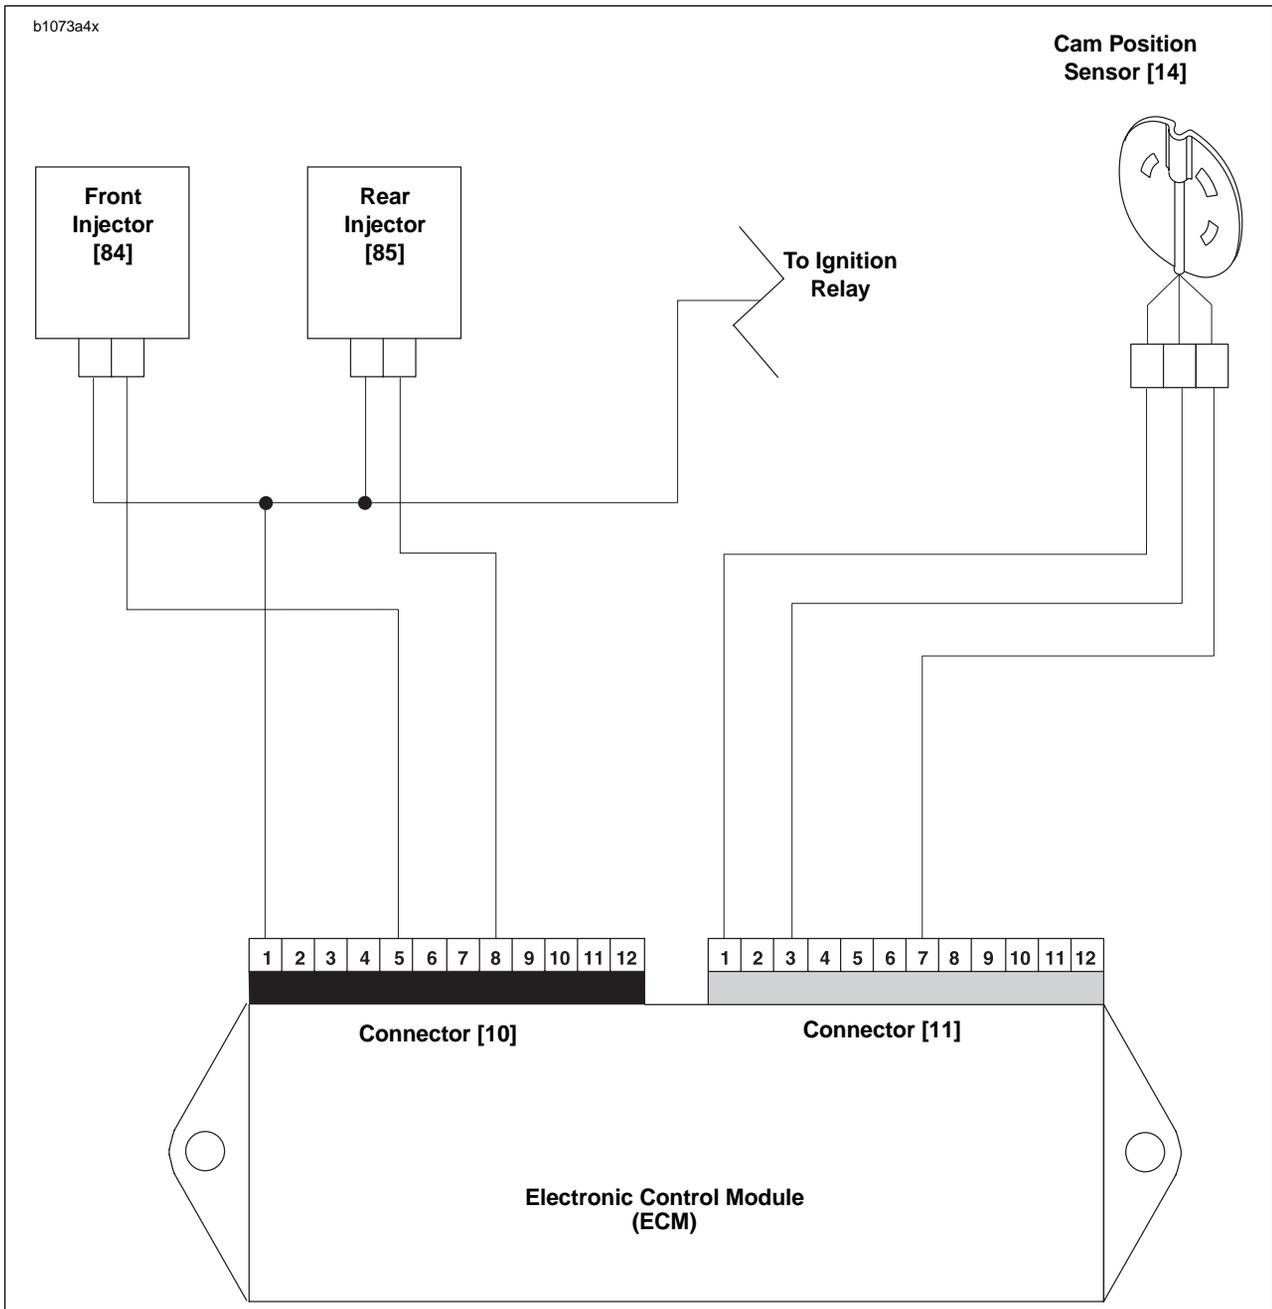


Figure 4-47. Fuel Injector Circuit

Table 4-25. Wire Harness Connectors in Figure 4-47.


| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|------------------------------|------------------|-------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [161] | Interactive muffler actuator | 4-place Deutsch | under air cleaner cover |
| [164] | ECM | 1-place Amp | in fairing |
| [165] | sub-harness | 3-place Packard | underneath airbox base |

Code 23/32 Test (Part 1 of 2)

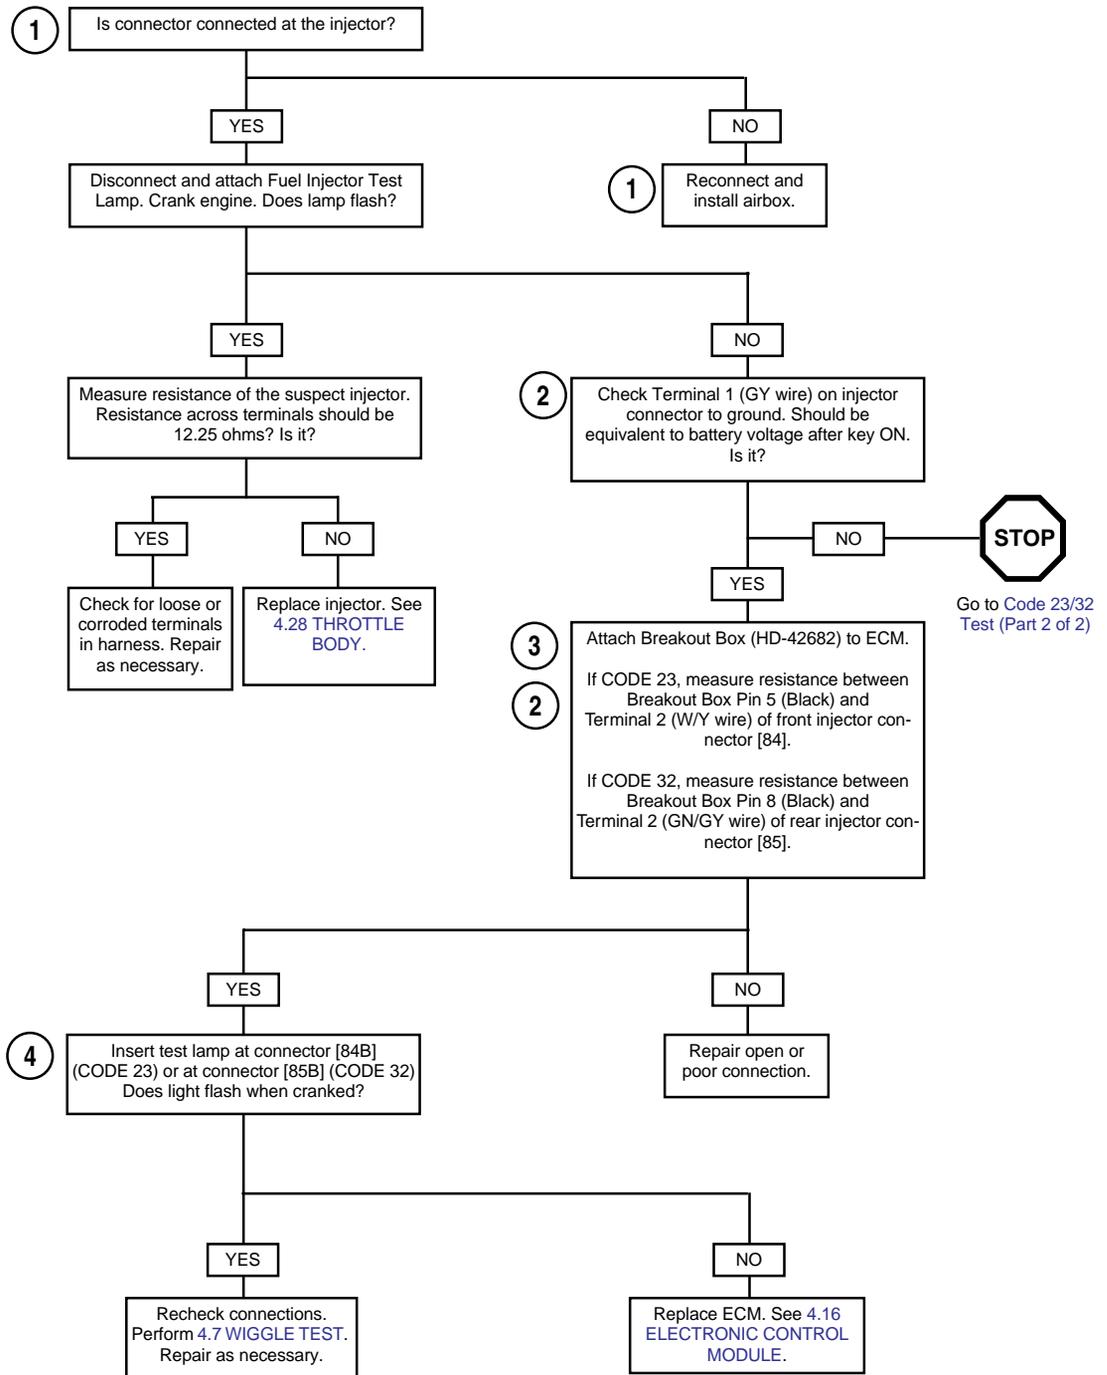

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 23/32 Test (Part 2 of 2)

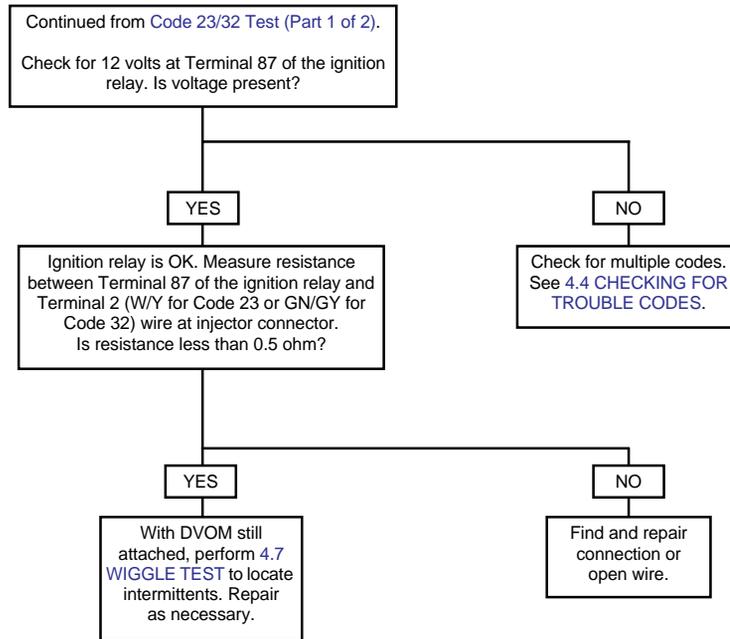

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Front Ignition Coil (Code 24) And Rear Ignition Coil (Code 25)

A Code 24 or 25 will set if the ignition coil rise time is out of range. This could occur if there is an open coil or loss of power to the coil. If both codes are set, it is likely a coil power failure or a coil failure.

See [Figure 4-48](#). The coil receives power from the ignition relay at coil pin B (3) at the same time that the fuel pump and injectors are activated.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 24/25 flow charts.

1. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), purple pin probes and patch cord.
2. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
3. See [Figure 4-35](#). Plug IGNITION COIL CIRCUIT TEST ADAPTER (Part No. HD-44687) and FUEL INJECTOR TEST LAMP (Part NO. 34730-2C) INTO Breakout Box. Note that cranking the engine with test lamp in place of the ignition coil can sometimes cause a code 24 or 25. This condition is normal and does not by itself indicate a malfunction. Codes must be cleared if this condition occurs.

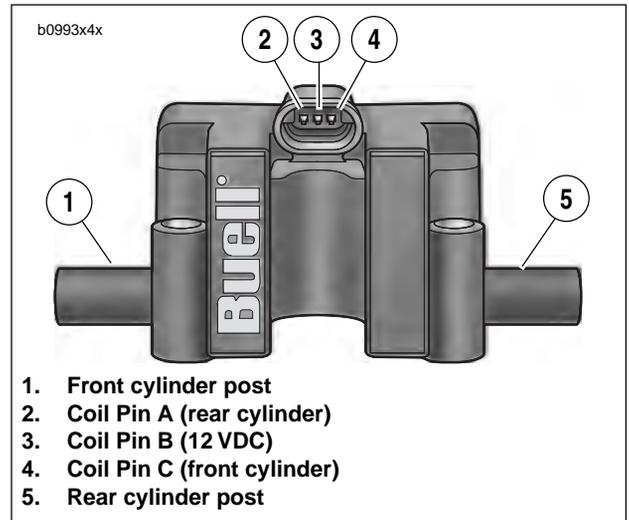


Figure 4-48. Ignition Coil



Figure 4-49. Testing Ignition Coil Connectors


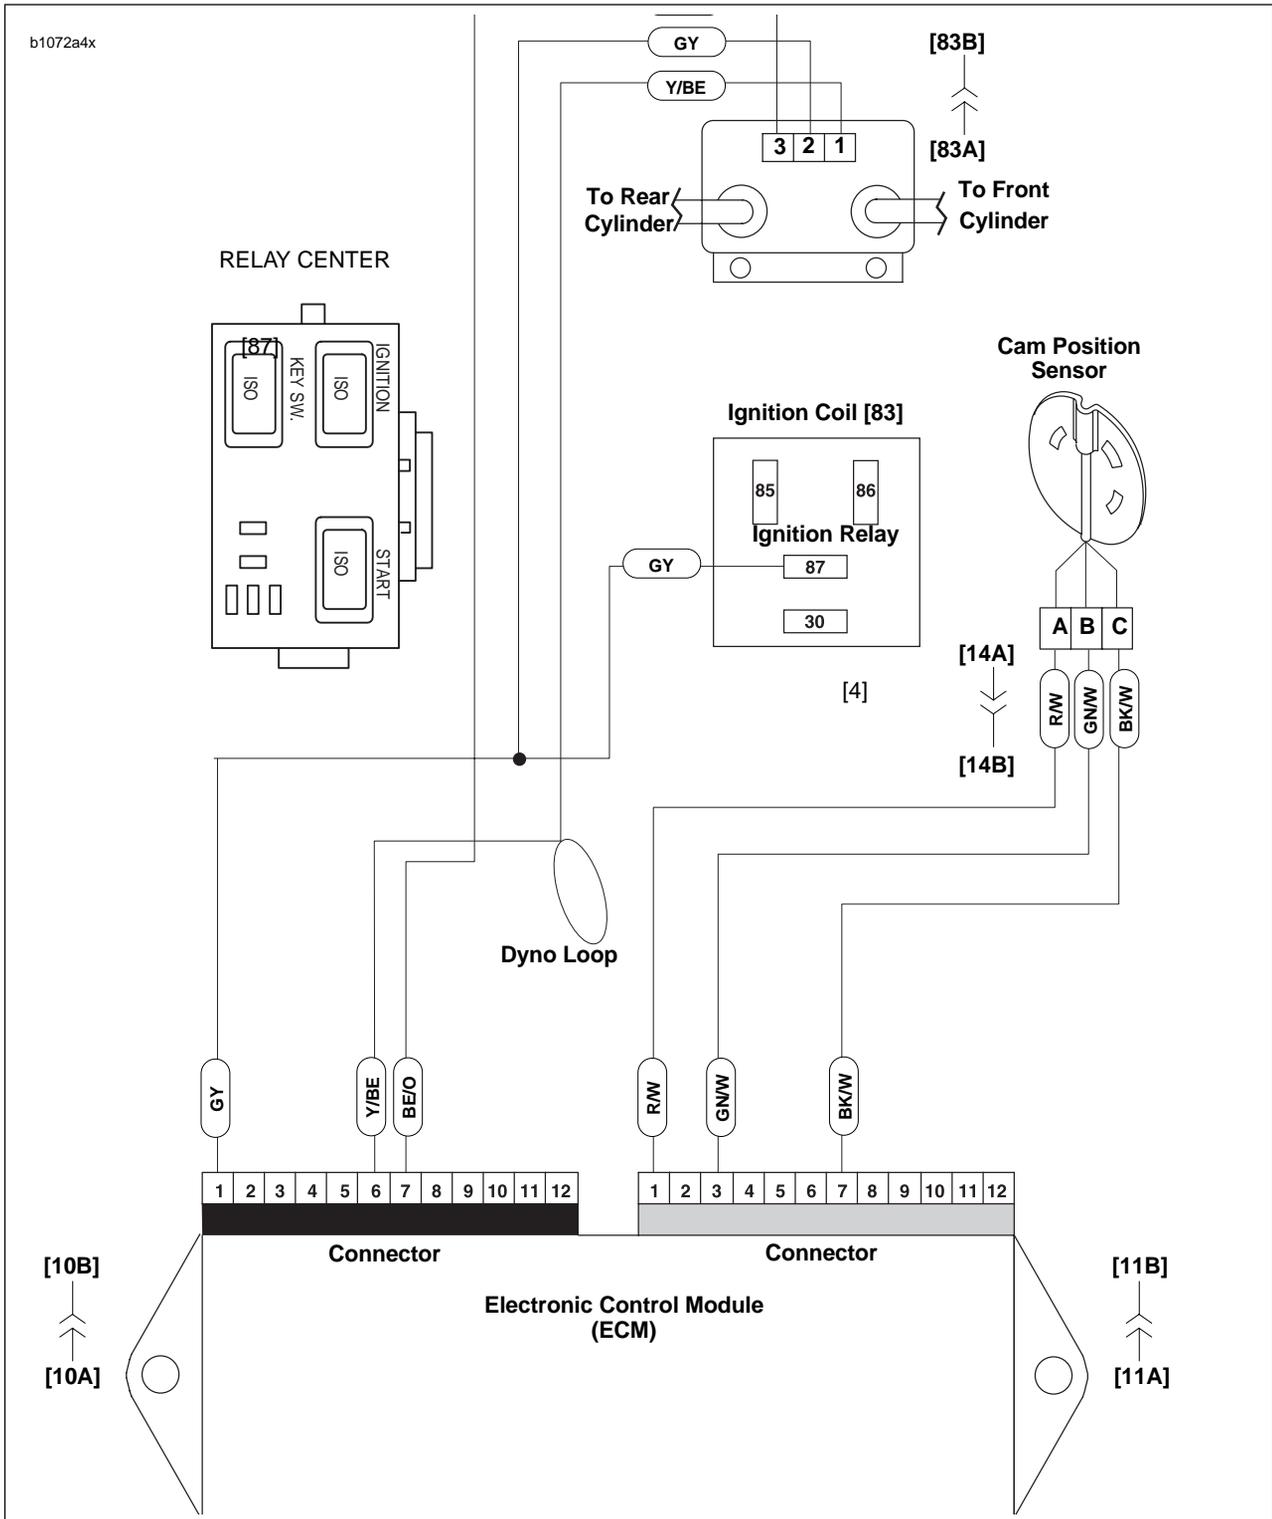


Figure 4-50. Ignition Coil Circuit

Table 4-26. Wire Harness Connectors in Figure 4-50.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|---------------|------------------|---------------------|
| [10] | ECM (black) | 12-place Deutsch | under fairing |
| [83] | ignition coil | 3-place Packard | beneath airbox base |

Code 24/25 Test

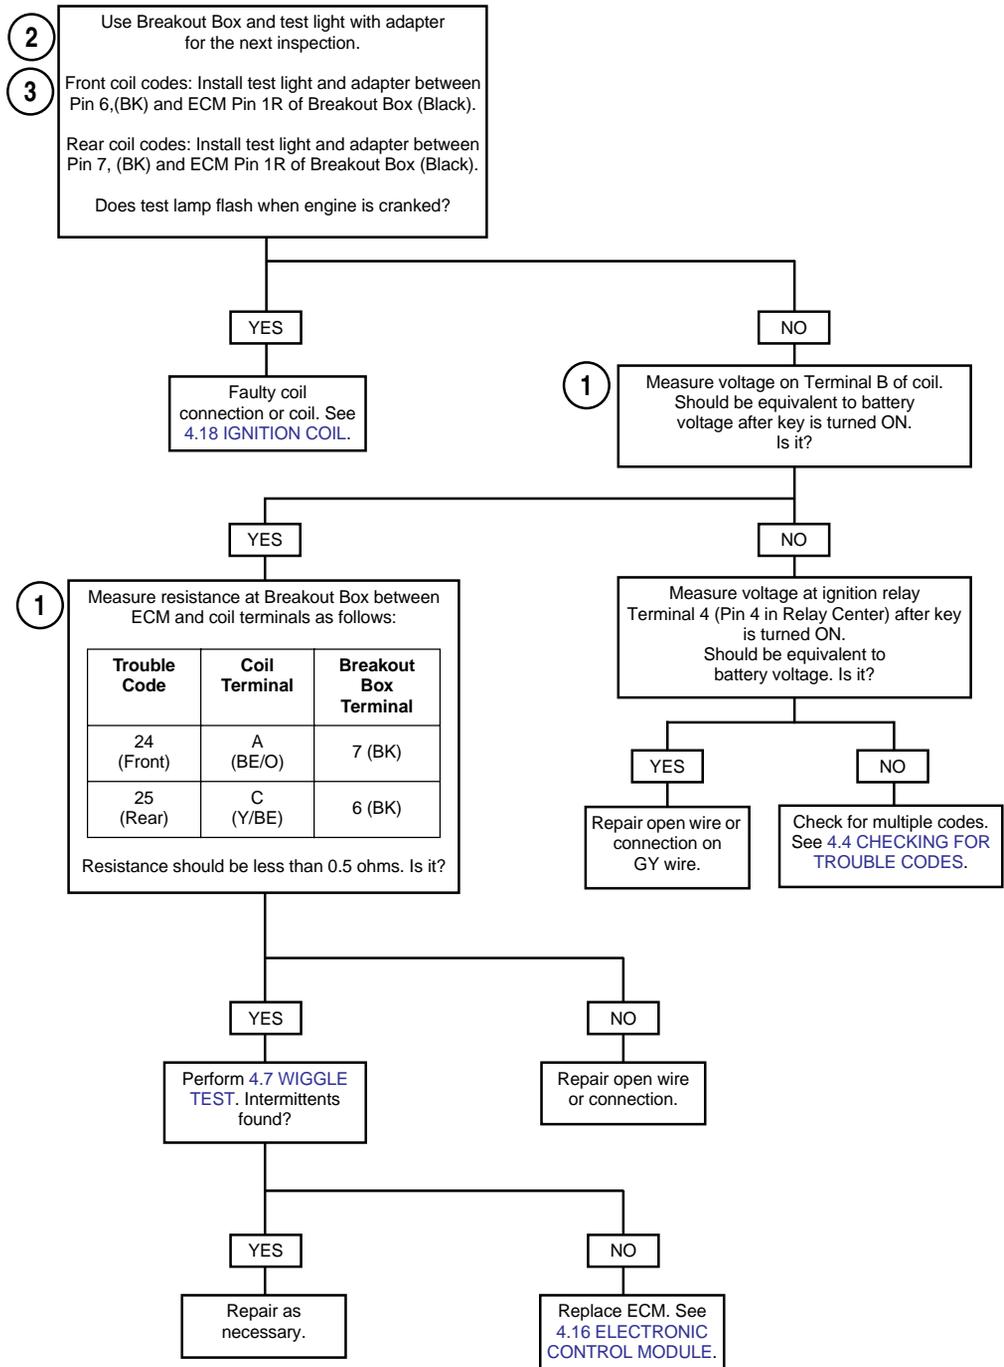

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Fuel Pump

The fuel pump assembly is shown in [Figure 4-51](#). ECM Pin 3 provides ground to the fuel pump. Code 33 will set if:

- BN/Y wire is shorted to 12 volts. This will also cause the ignition fuse to blow. See [Figure 4-38](#).
- BN/Y wire is shorted to ground. This will cause the fuel pump to run continuously even when the motor is not running.
- Fuel pump motor stalls or spins without providing fuel pressure.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 33 flow chart.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), red pin probe and patch cord.
3. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray socket probe and patch cord.

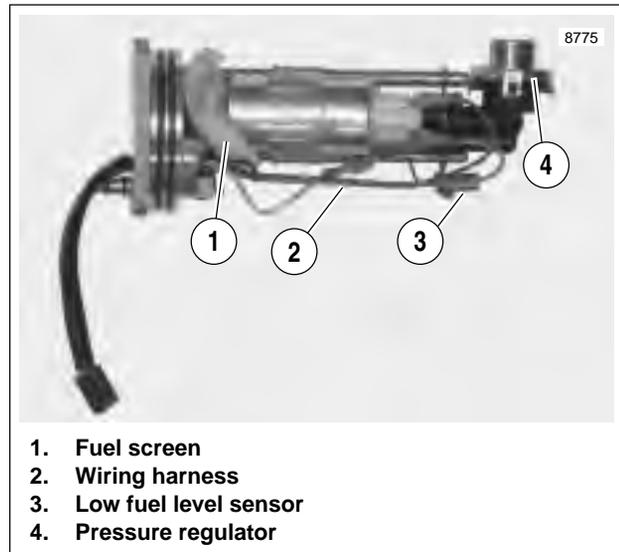


Figure 4-51. Fuel Pump Assembly


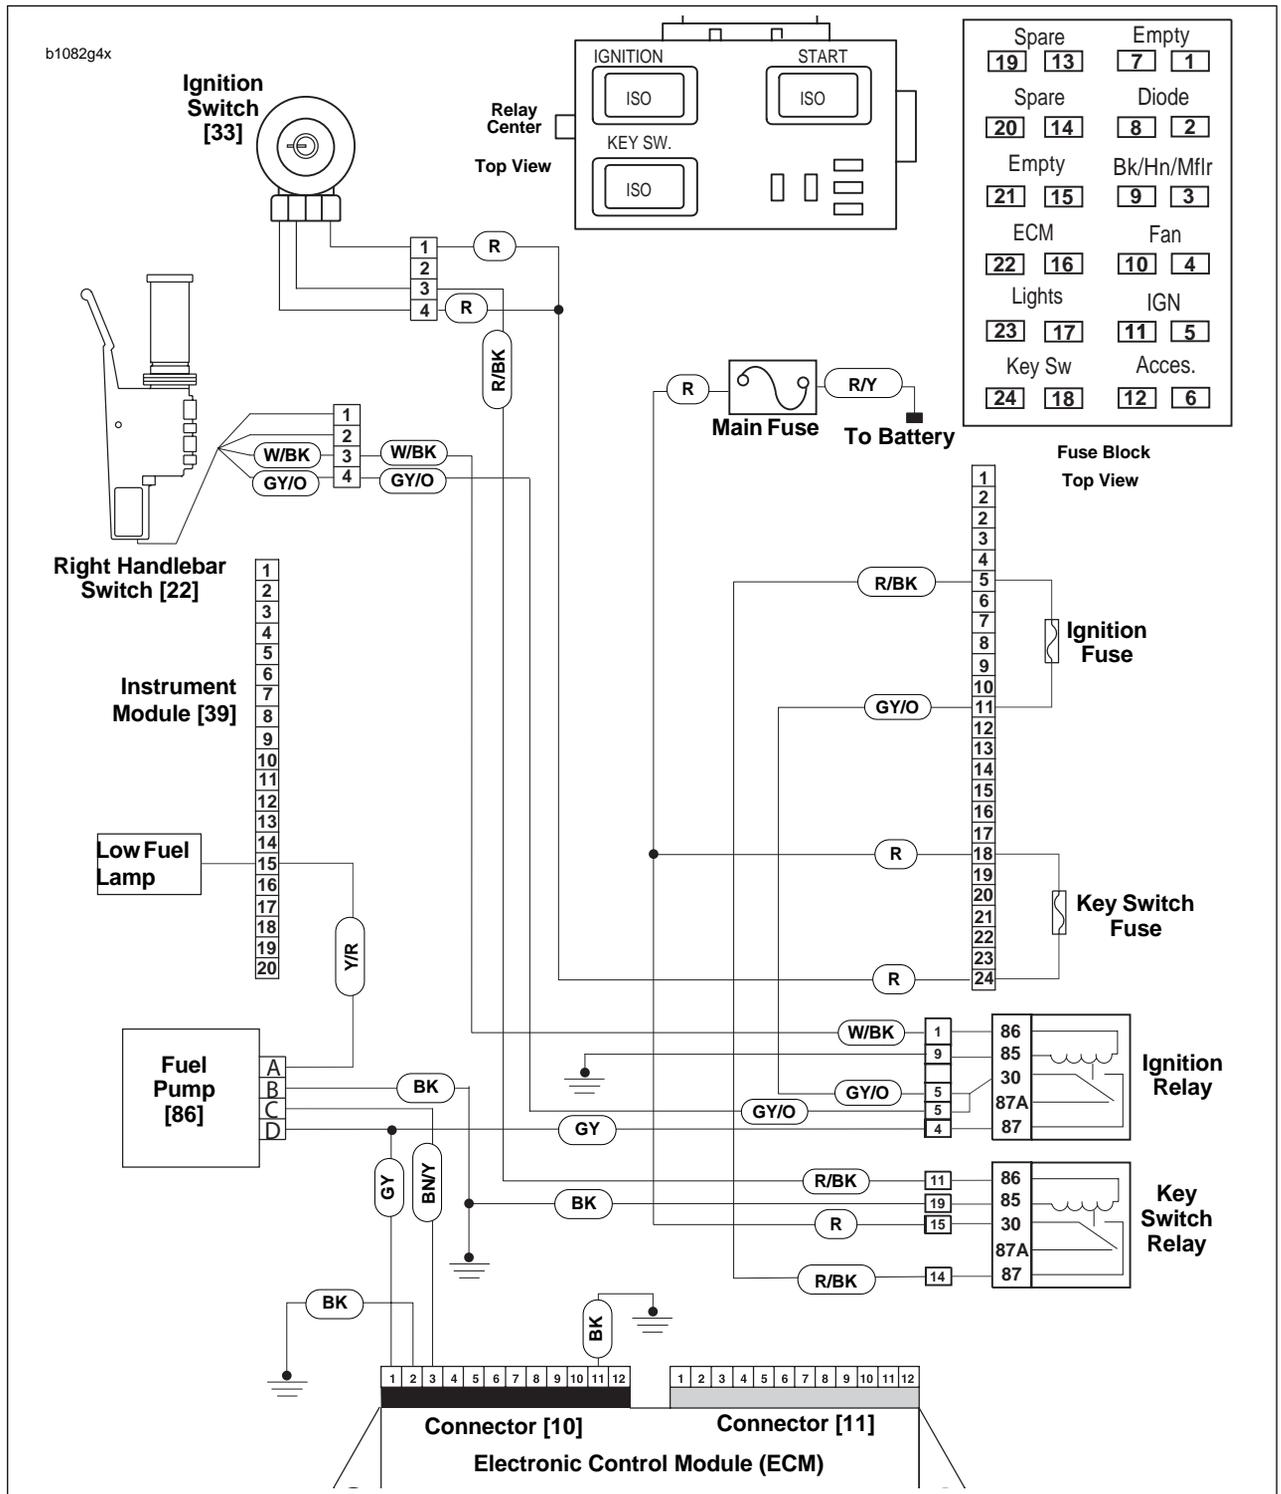


Figure 4-52. Fuel Pump Circuit

Table 4-27. Wire Harness Connectors in Figure 4-52.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------|--------------------|----------------------------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [39] | instrument module | 20-place Multilock | in fairing |
| [86] | fuel pump | 4-place Multilock | left side of rear shock absorber |

Code 33 Test

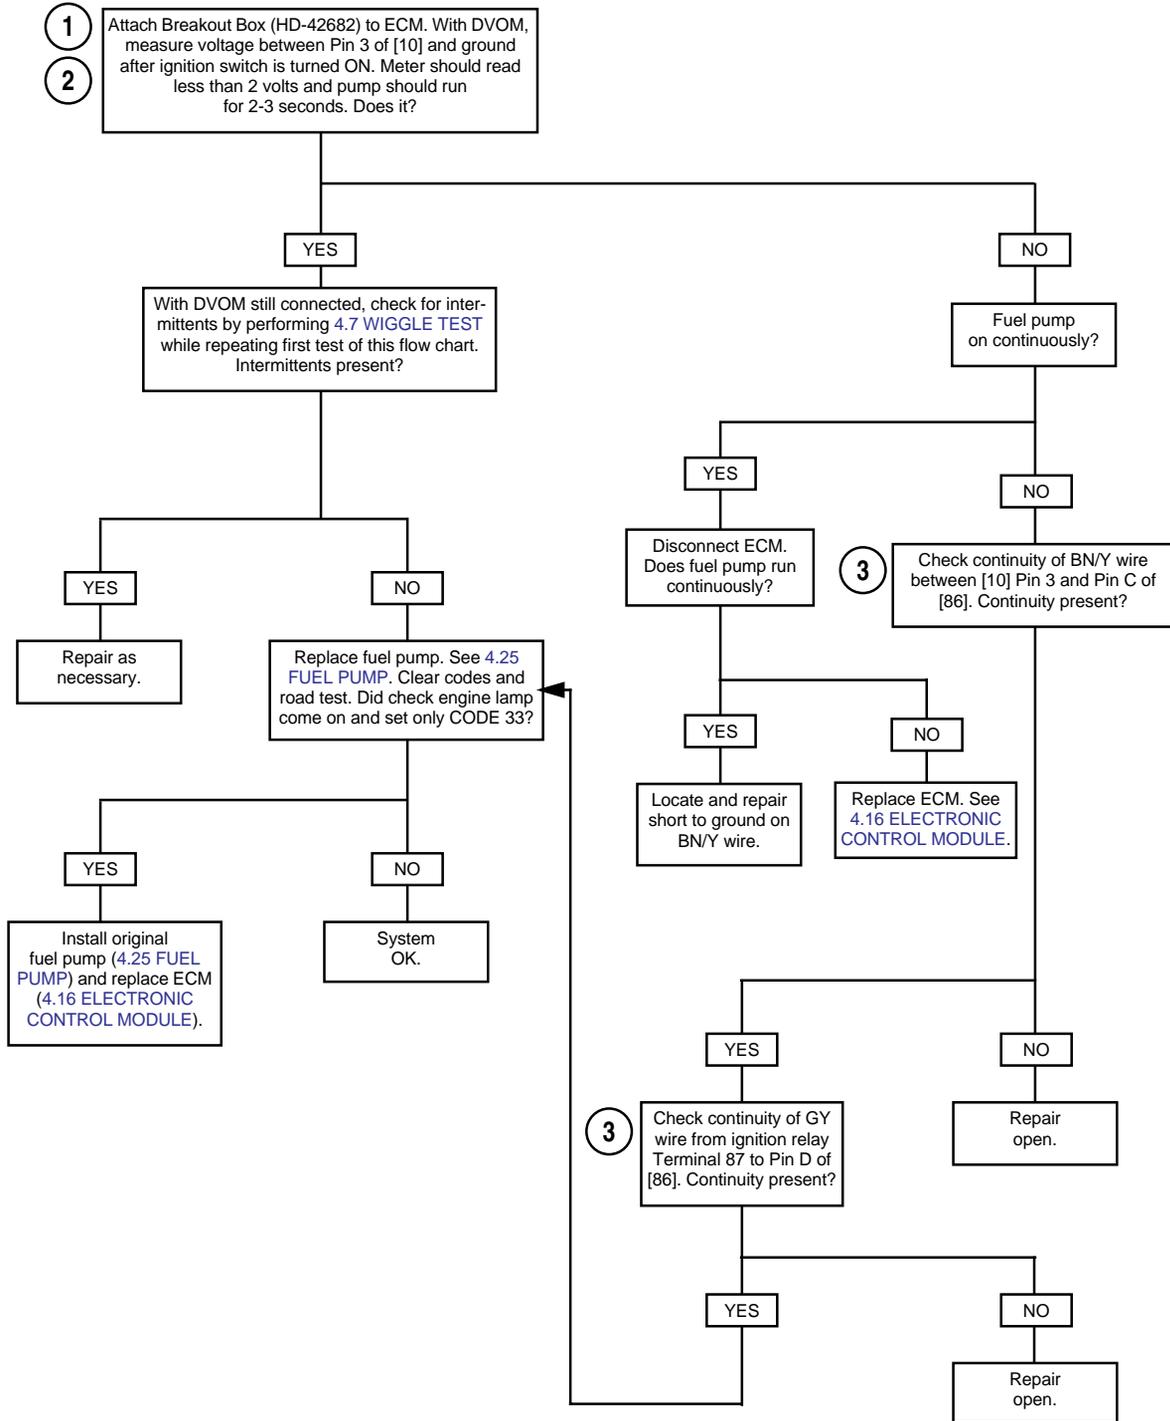

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Tachometer

A Code 35 will set if the PK tachometer wire is shorted to power or ground.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 35 flow chart.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. Replace instrument module. See [7.18 INSTRUMENT MODULE](#).

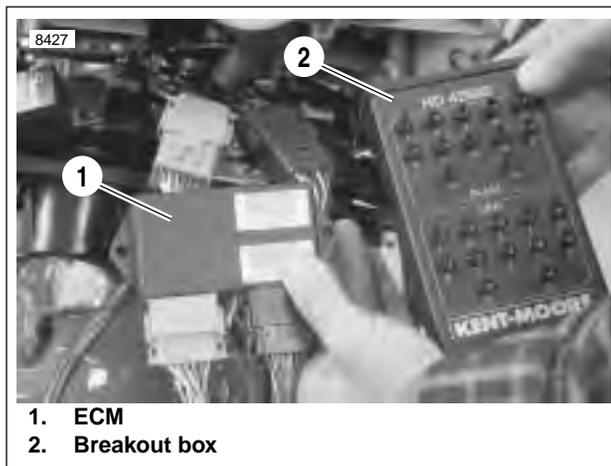


Figure 4-53. Installed Breakout Box

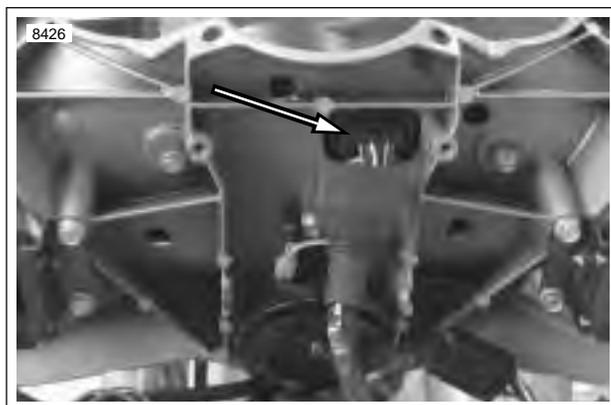


Figure 4-54. Instrument Module Connector [39]

b1084c4x


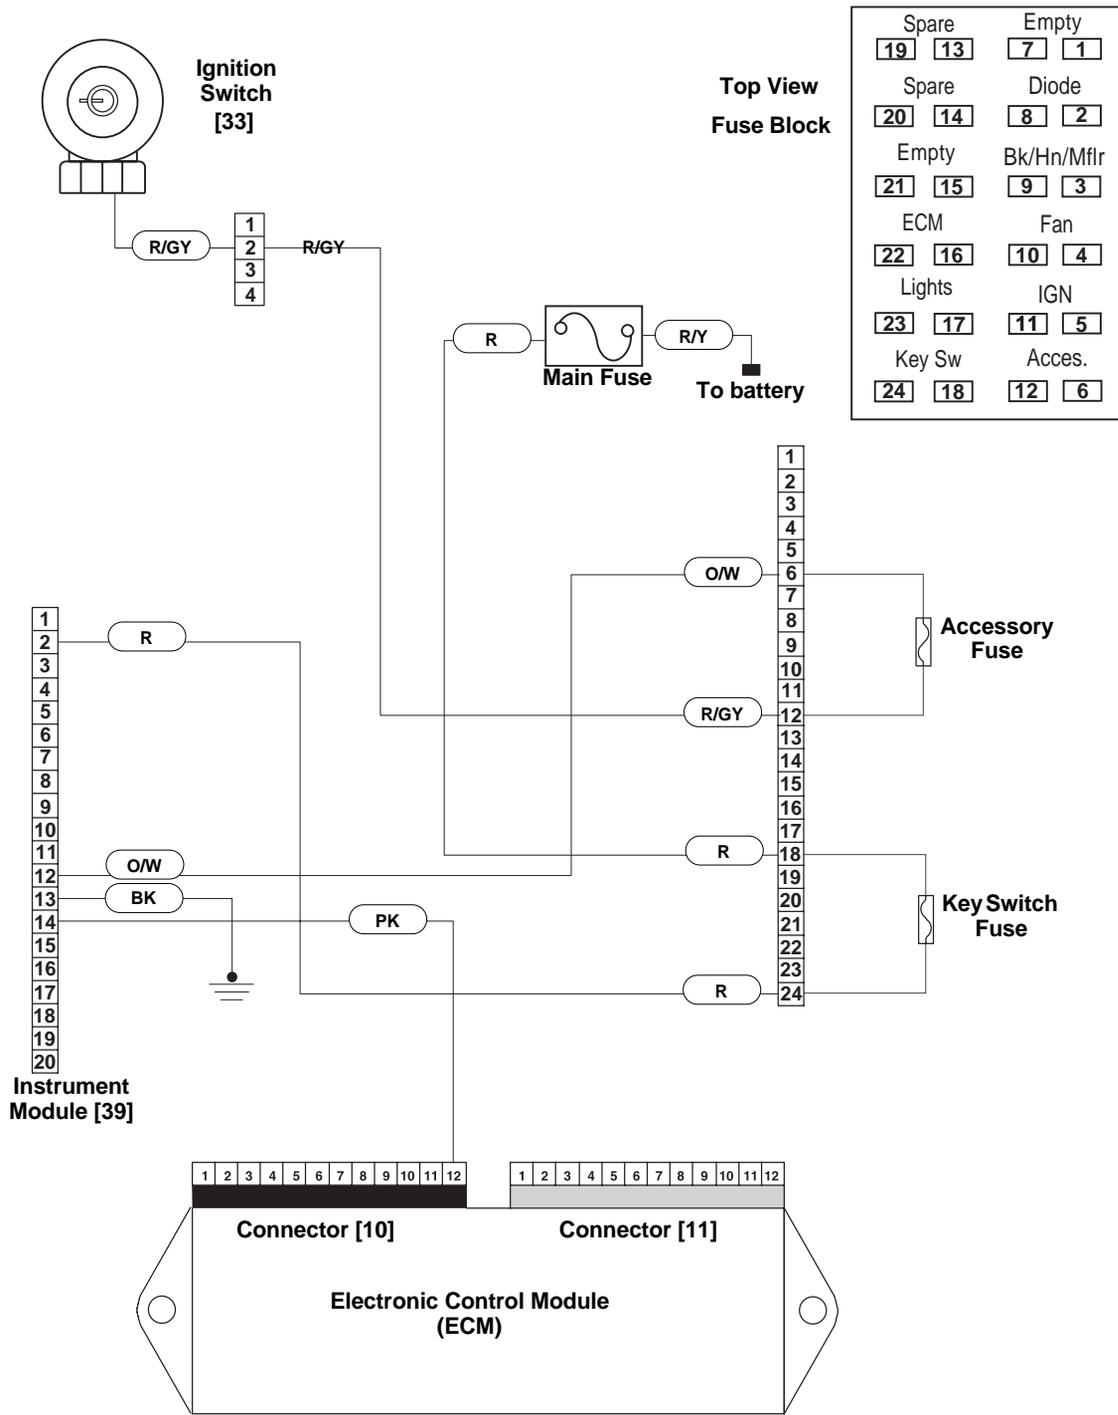


Figure 4-55. Tachometer Circuit

Table 4-28. Wire Harness Connectors in Figure 4-55.

| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------------|--------------------|------------|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [39] | instrument module | 20-place Multilock | in fairing |

Code 35 Test

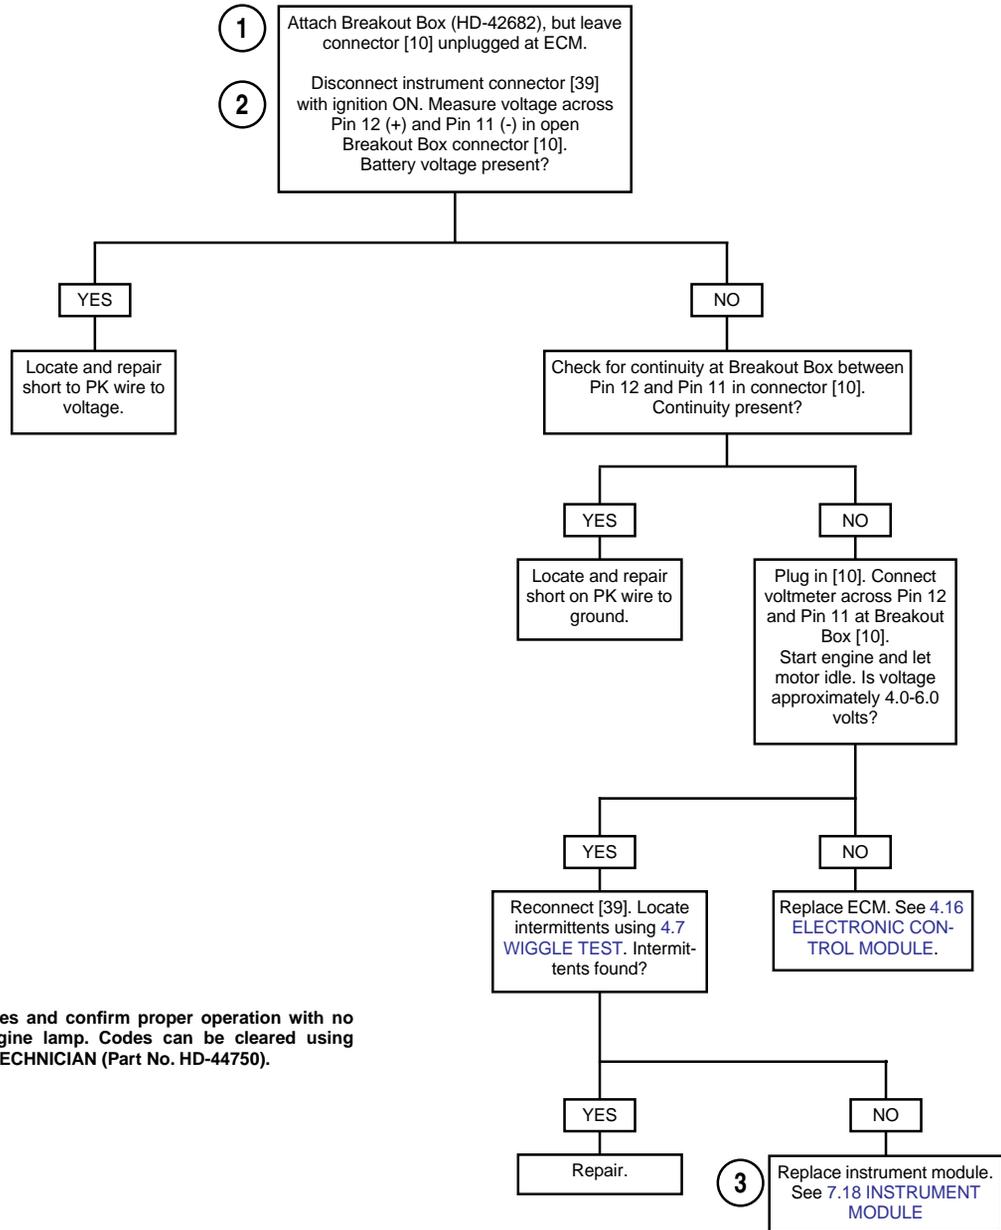

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

Cooling Fan High Voltage

This code occurs when the engine is running and the ECM has commanded the fan on, and the voltage remains high at pin 6 of ECM connector [11] (gray connector).

NOTE

An engine temperature (ET) sensor signal, indicating a cylinder head temperature above 428° F (220° C), causes the ECM to command the fan on. When ignition is OFF, fan runs at approximately half speed. See Table 4-29. Cooling Fan Specifications.

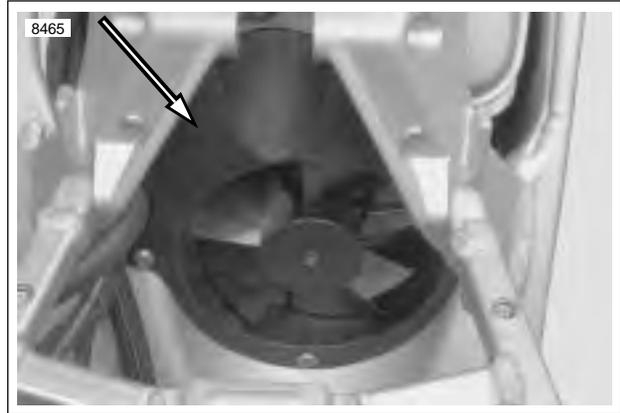


Figure 4-56. Cooling Fan

Table 4-29. Cooling Fan Specifications

| | FAN ON | FAN OFF |
|----------------|-----------------|-----------------|
| Key ON | 220° C (428° F) | 180° C (356° F) |
| Key OFF | 170° C (338° F) | 150° C (302° F) |

This code can also set if fan blade does not spin (blocked fan blade) when fan is commanded on and battery voltage is applied to fan.

Cooling Fan Low Voltage

This code will set when the ignition key is ON and the ECM does not sense voltage at pin 6 of ECM terminal 11 (gray connector).

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 36 flow charts.

1. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray pin probes and patch cord.
2. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See 4.6 BREAKOUT BOX.


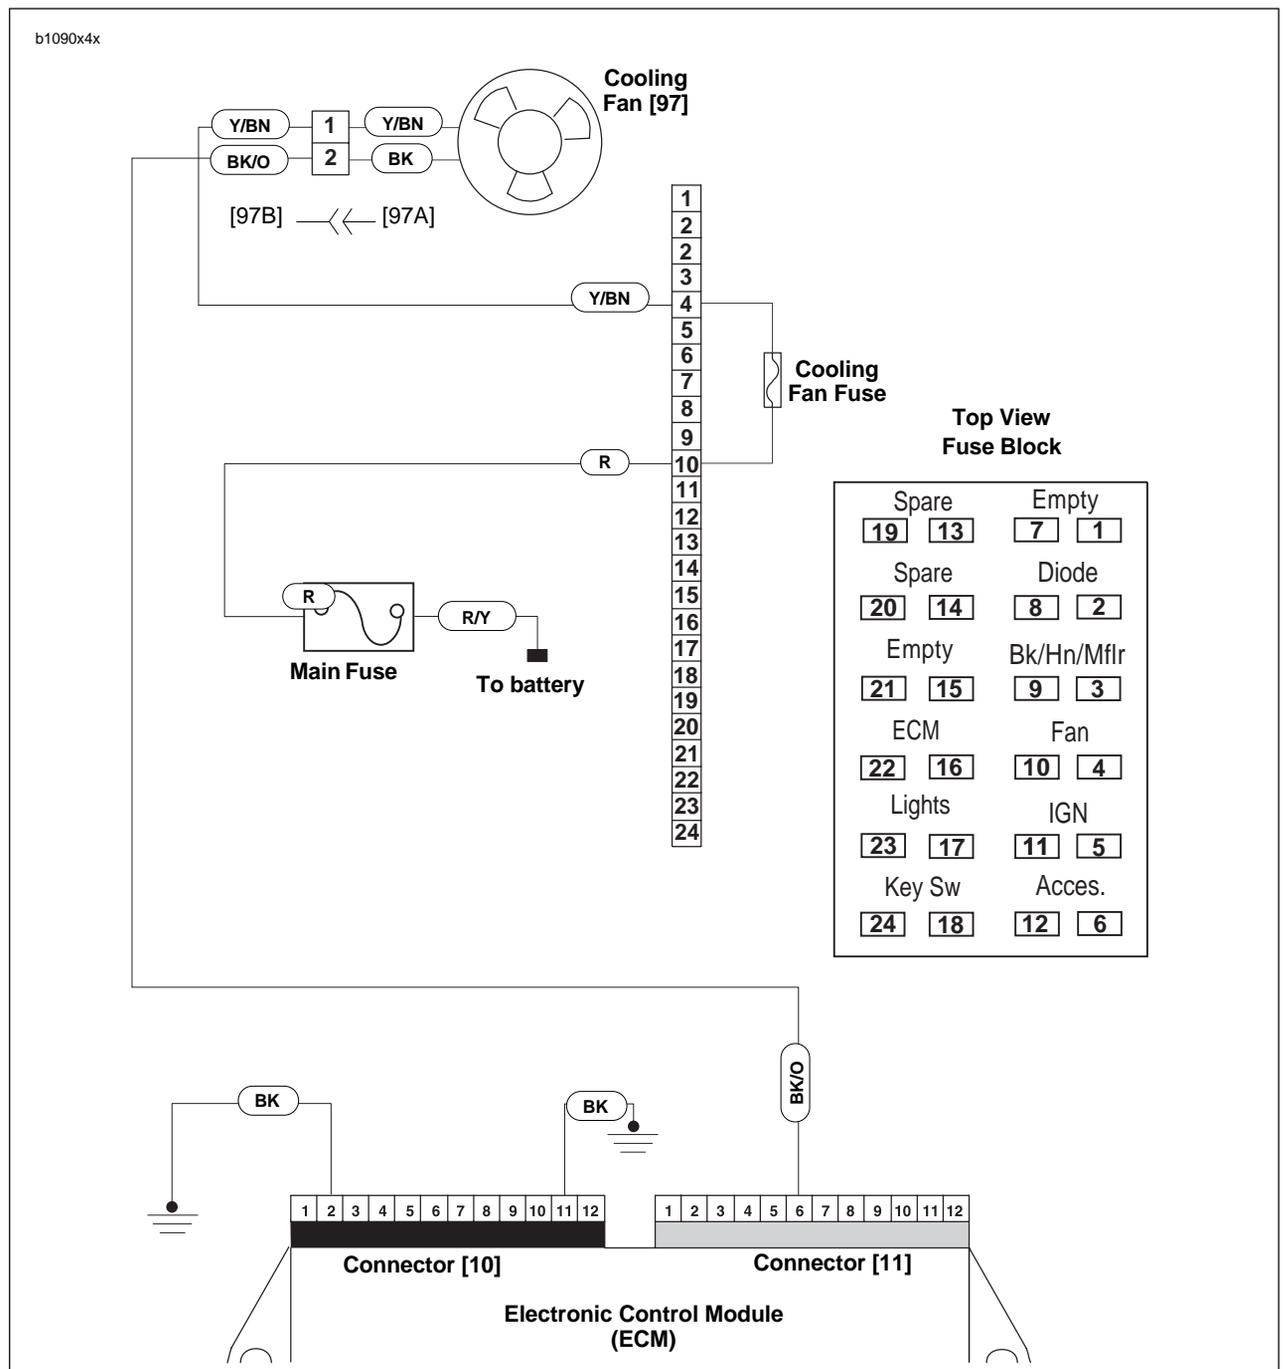


Figure 4-57. Cooling Fan Circuit

Table 4-30. Wire Harness Connectors in Figure 4-57.


| NO. | DESCRIPTION | TYPE | LOCATION |
|------|-------------|-------------------|----------------------|
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [97] | cooling fan | 2-place Multilock | behind rear cylinder |

Code 36 Test (Part 1 of 2)

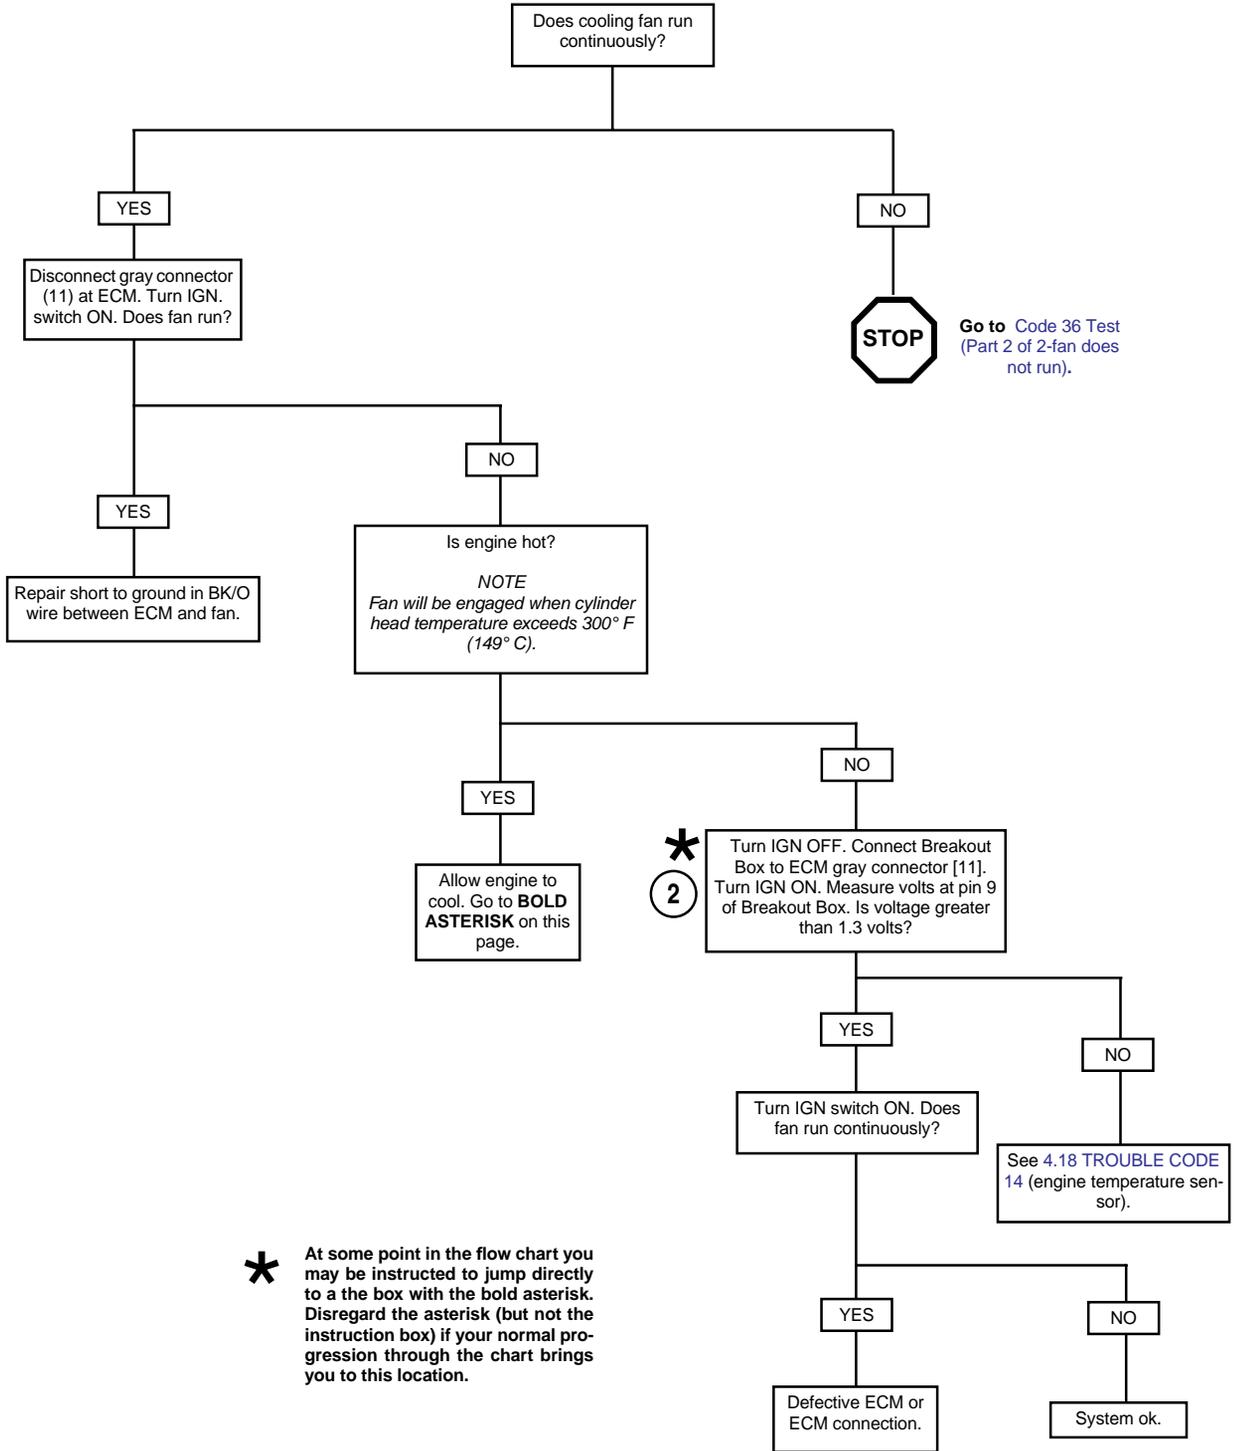

***** At some point in the flow chart you may be instructed to jump directly to a box with the bold asterisk. Disregard the asterisk (but not the instruction box) if your normal progression through the chart brings you to this location.

Code 36 Test (Part 2 of 2-fan does not run)

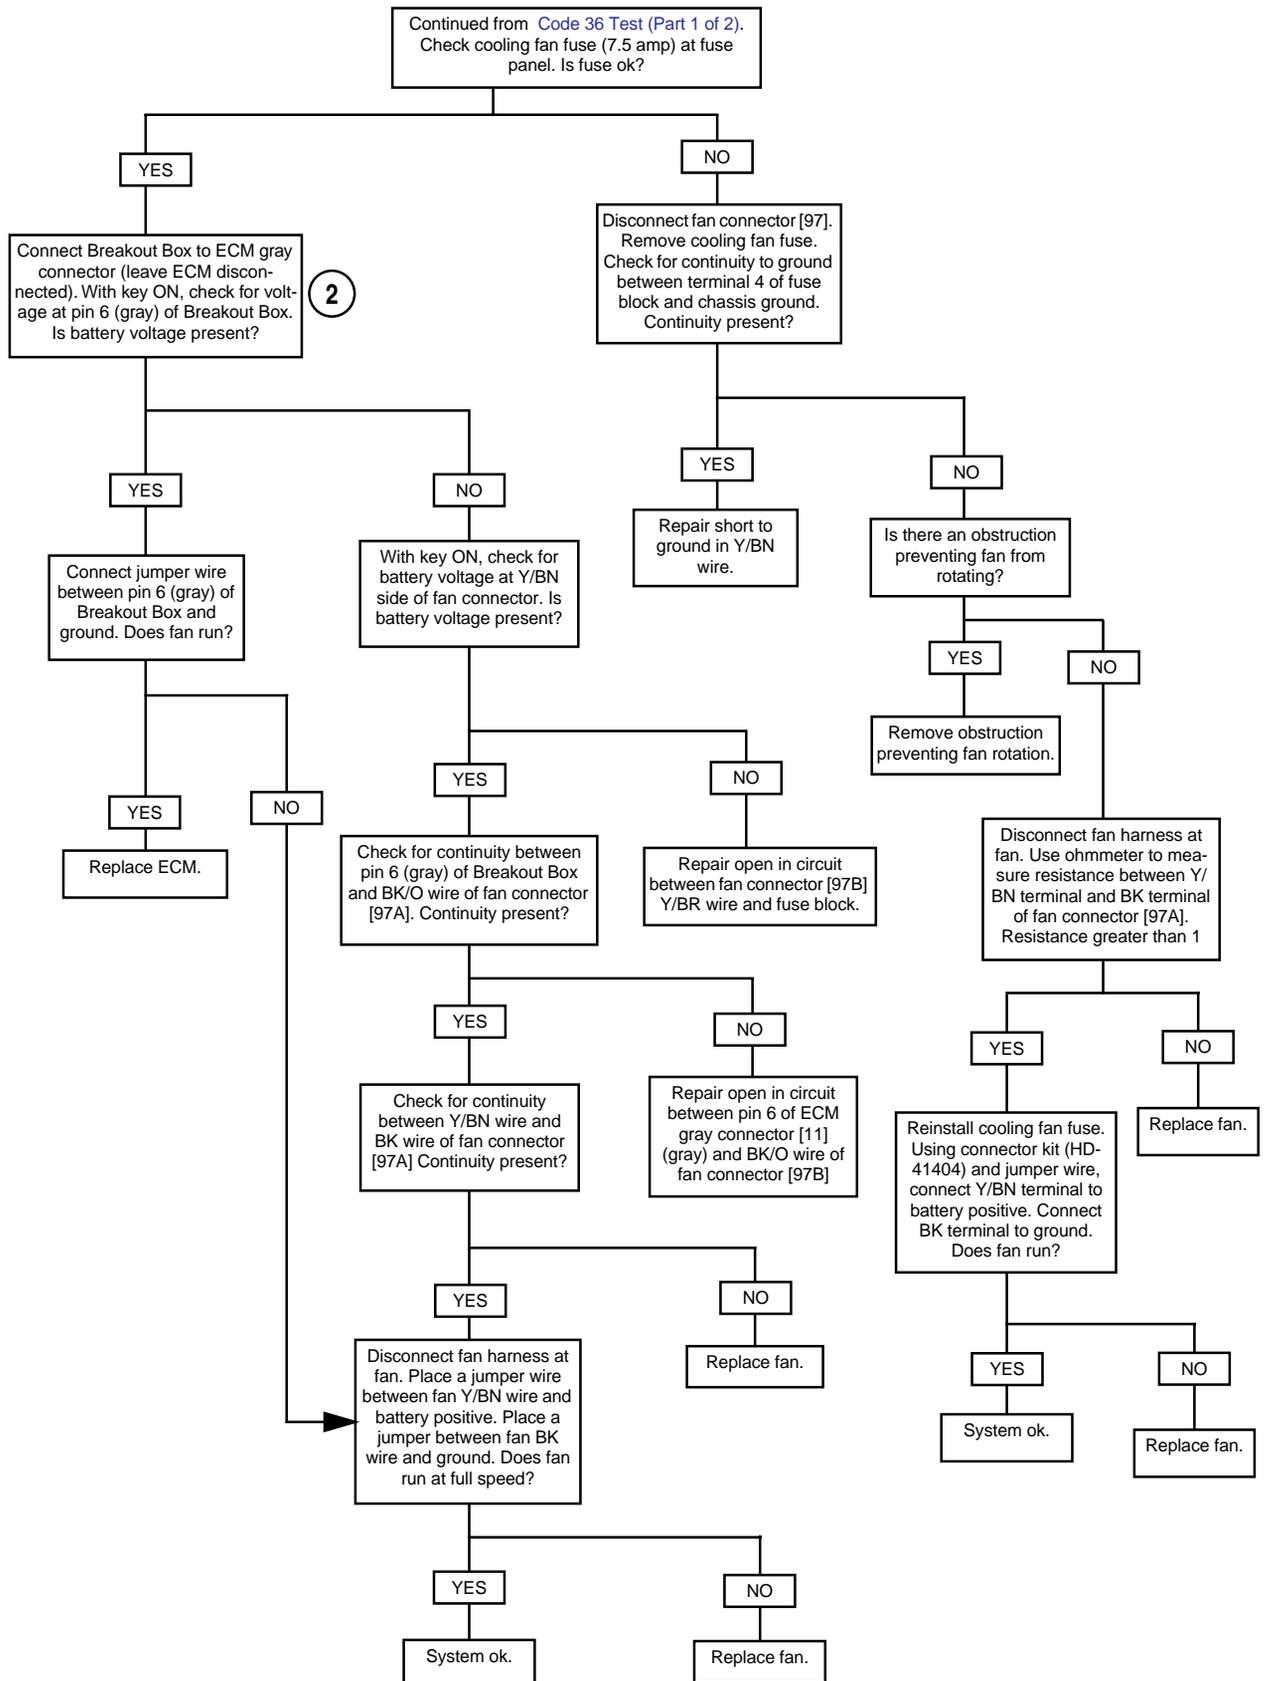

GENERAL

NOTE

See [Figure 4-58](#). When vehicle lean angle causes weighted pendulum to enter shaded area for a period of greater than one second, ECM shuts off ignition and fuel systems.

Bank Angle Sensor

See [Figure 4-59](#). A Code 44 occurs when the bank angle sensor (1) voltage is outside the normal operating range of 0.25-4.8 volts. This may be caused by:

- Short to ground in harness between sensor and electronic control module.
- Short to voltage in harness between sensor and electronic control module.
- Failed sensor.

If this code occurs, the engine may stop running. The engine may still be restarted and ridden to the dealership for repair.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 44 flow charts.

1. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), gray pin probes and patch cord.
2. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).


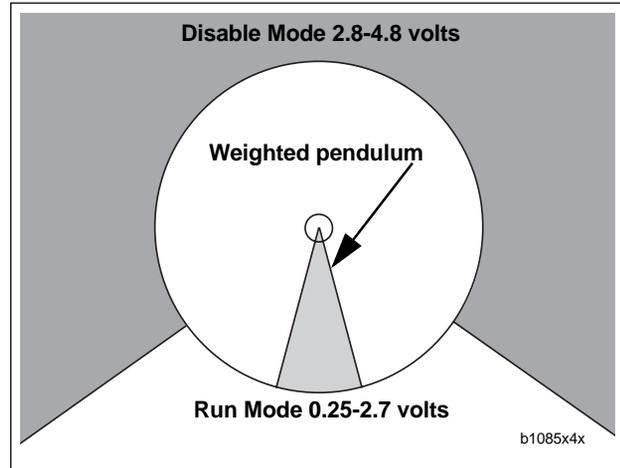


Figure 4-58. Bank Angle Sensor Operation

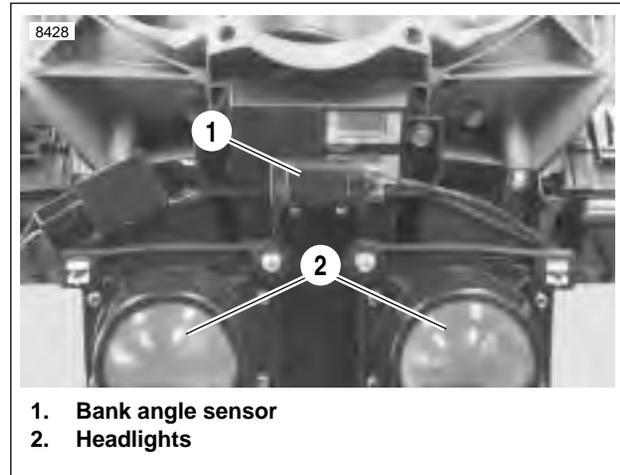

1. Bank angle sensor
2. Headlights

Figure 4-59. Bank Angle Sensor

Table 4-31. Bank Angle Sensor Voltage

| MODE | VOLTS |
|---------|----------|
| Run | 0.25-2.7 |
| Disable | 2.8-4.8 |


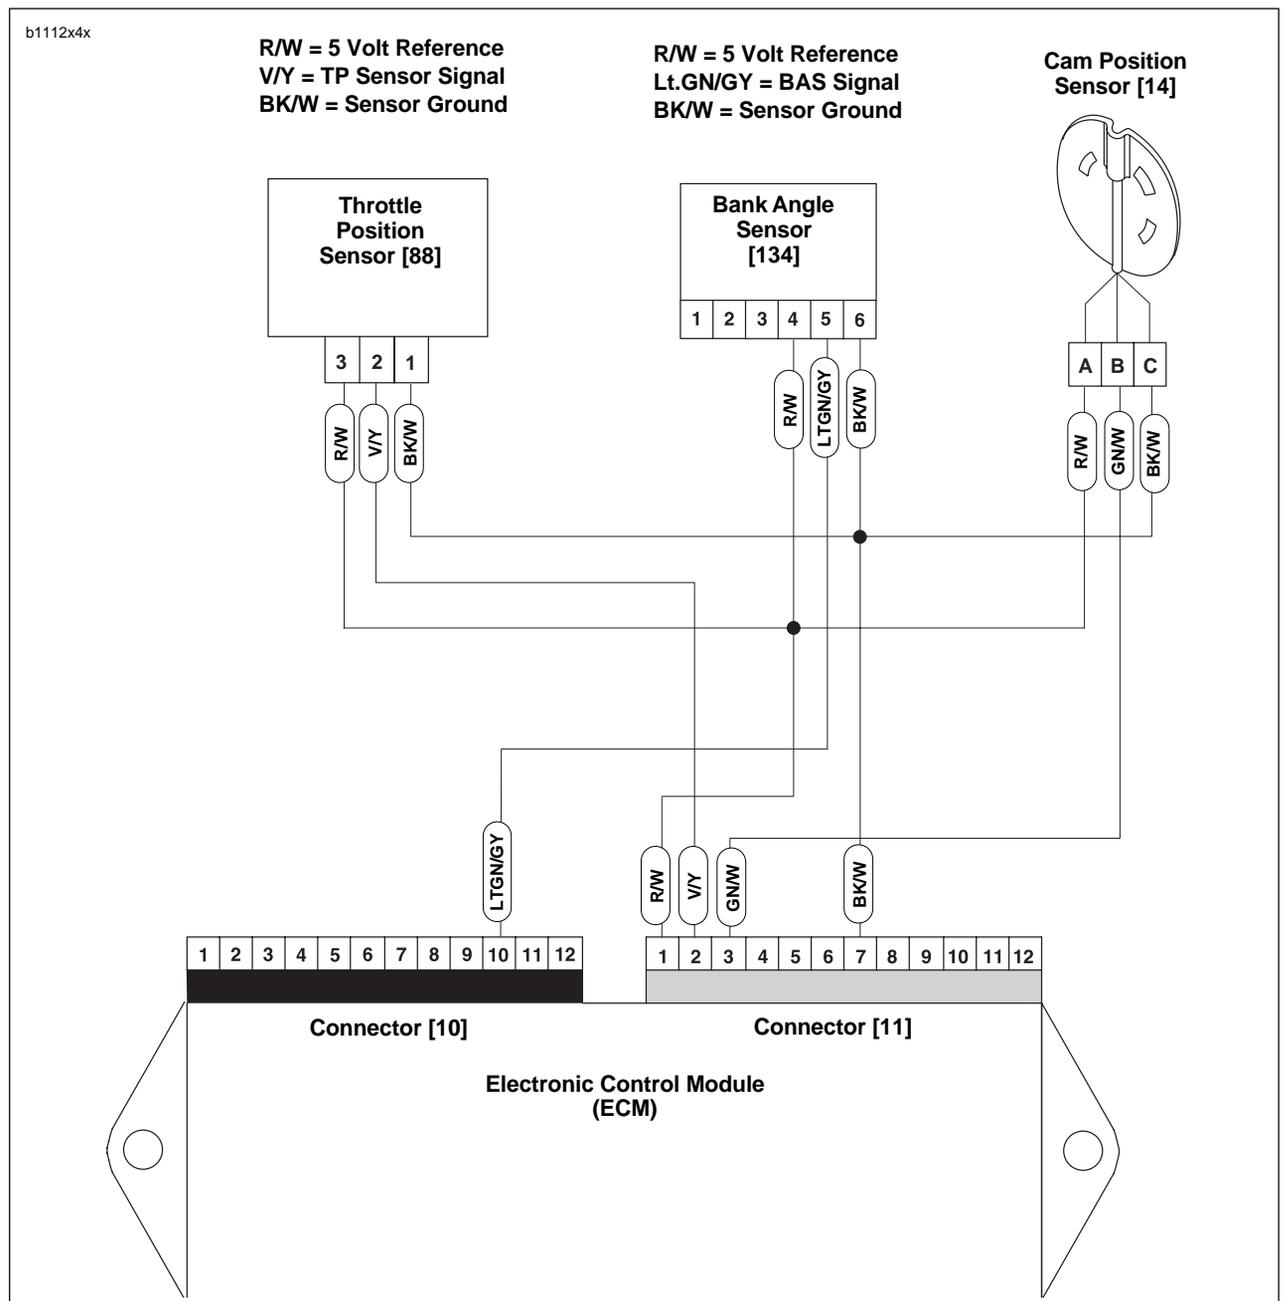


Figure 4-60. Bank Angle Sensor Circuit


Table 4-32. Wire Harness Connectors in Figure 4-60.

| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|--------------------------|------------------|--|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [14] | cam position sensor | 3-place Deutsch | under sprocket cover |
| [88] | throttle position sensor | 3-place Packard | right side of engine between cylinders |
| [134] | bank angle sensor | 6-place Sumitomo | in fairing |

Code 44 Test (Part 1 of 2)

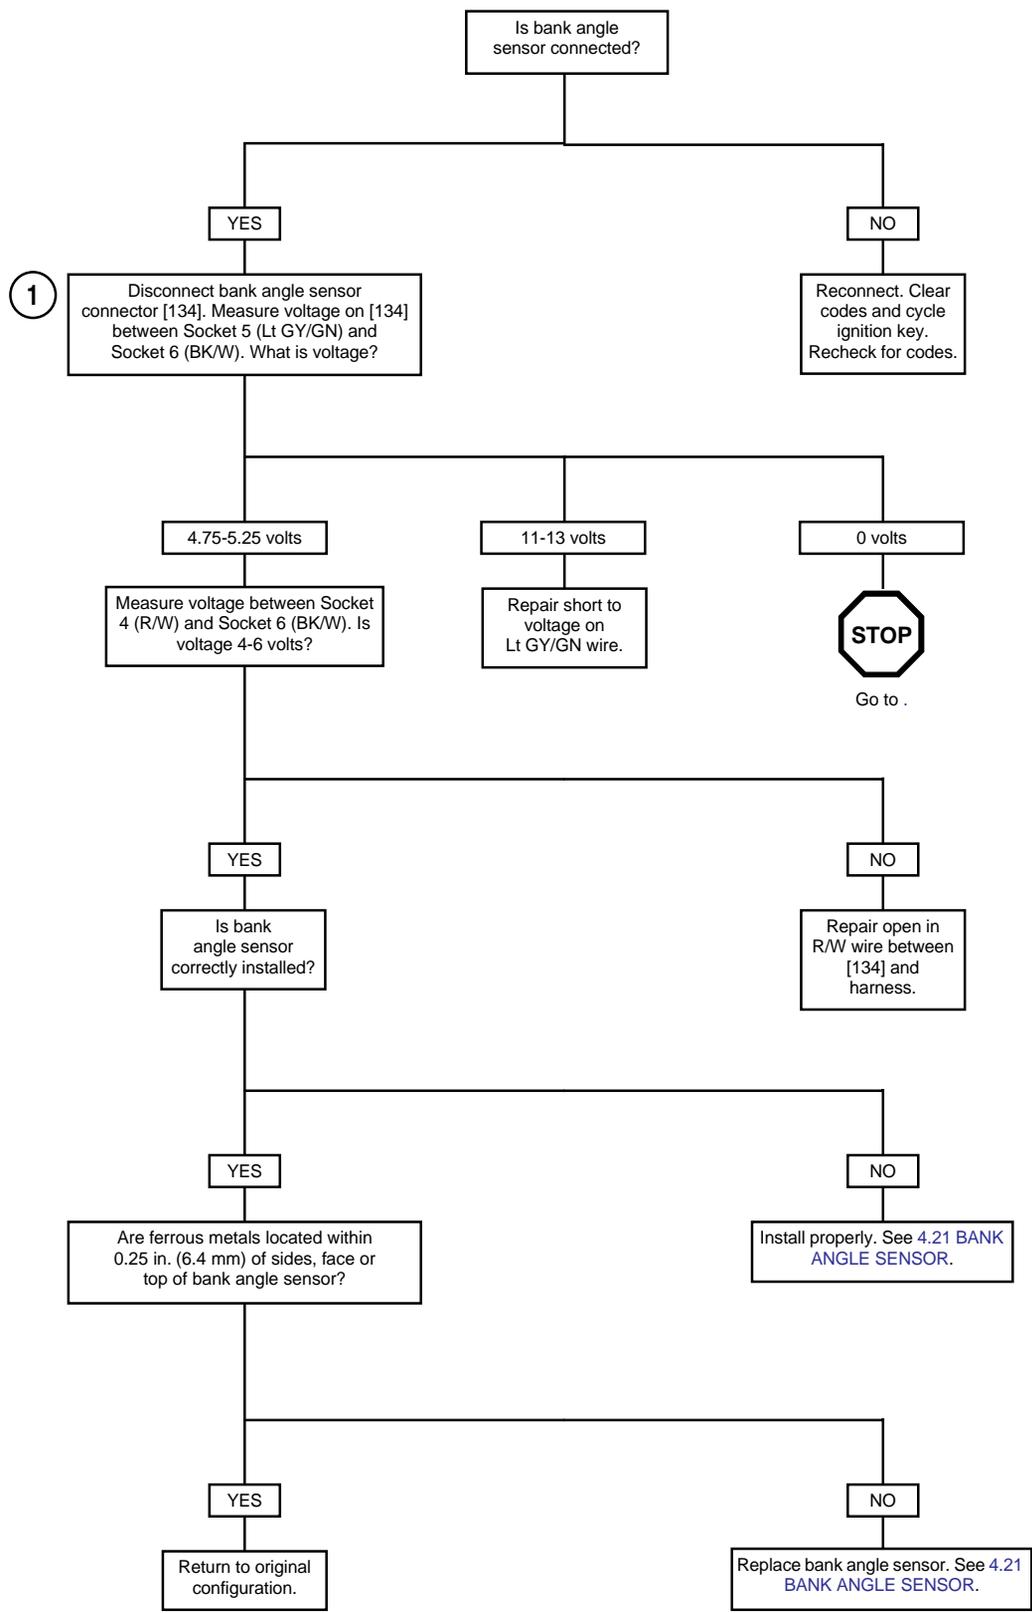

Code 44 Test (Part 2 of 2)

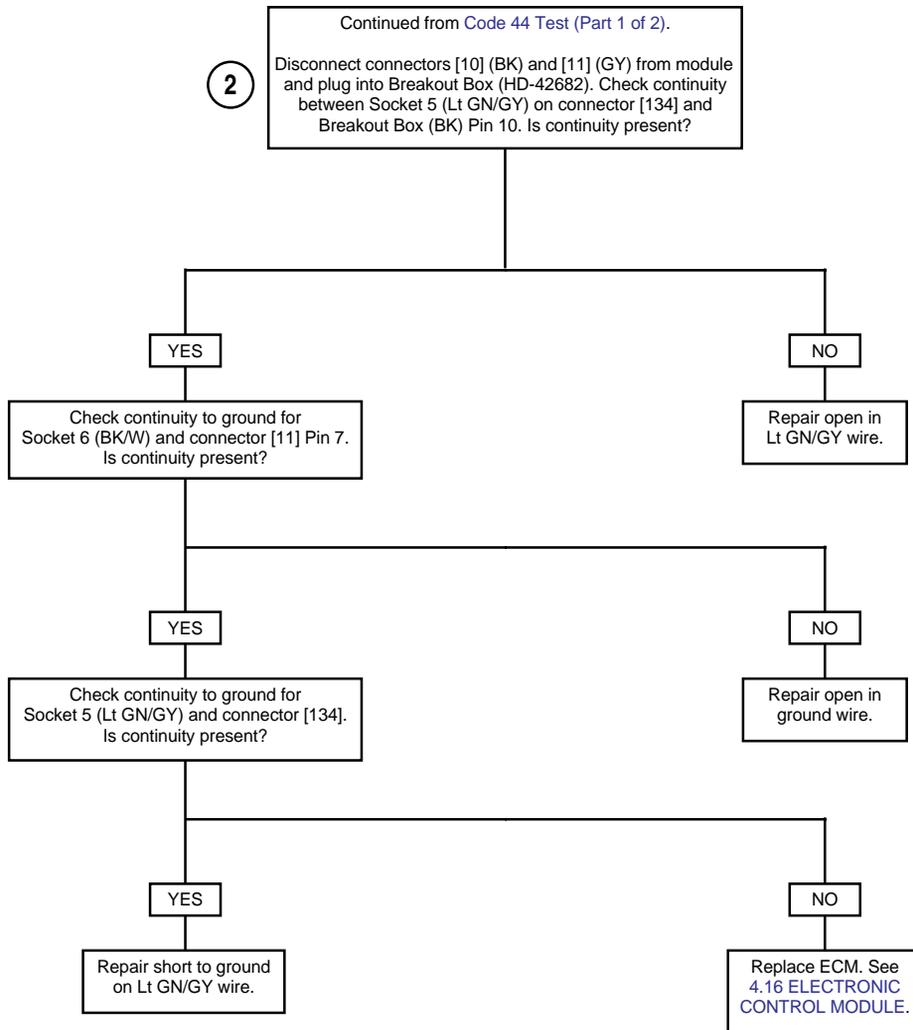

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

GENERAL

ECM Failure

All of the following codes indicate a failure which requires replacement of the ECM. See [4.16 ELECTRONIC CONTROL MODULE](#).

- Code 52 - RAM failure.
- Code 53 - ROM failure.
- Code 54 - EE PROM failure.
- Code 55 - Microprocessor failure.

GENERAL

Cam Sync Failure

This code occurs only when the engine is running if the electronic control module either receives an intermittent (extra or missing) signal from the cam position sensor or receives an unexpected signal. The motorcycle may continue to run, not run normally or stop running altogether.

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the Code 56 flow charts.

1. Connect BREAKOUT BOX (Part No. HD-42682) to ECM. See [4.6 BREAKOUT BOX](#).
2. Use HARNESS CONNECTOR TEST KIT (Part No. HD-41404), black pin probes and patch cord.
3. See [4.17 CAM POSITION SENSOR AND ROTOR](#).

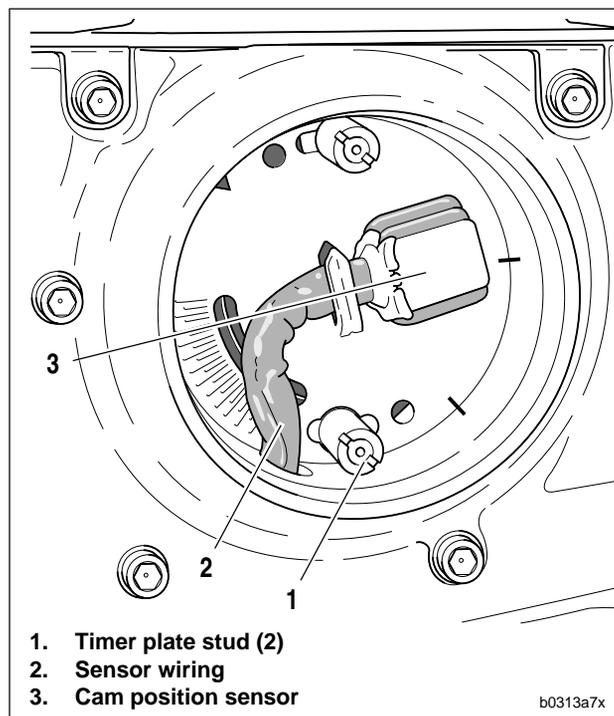


Figure 4-61. Cam Position Sensor

b1112x4x


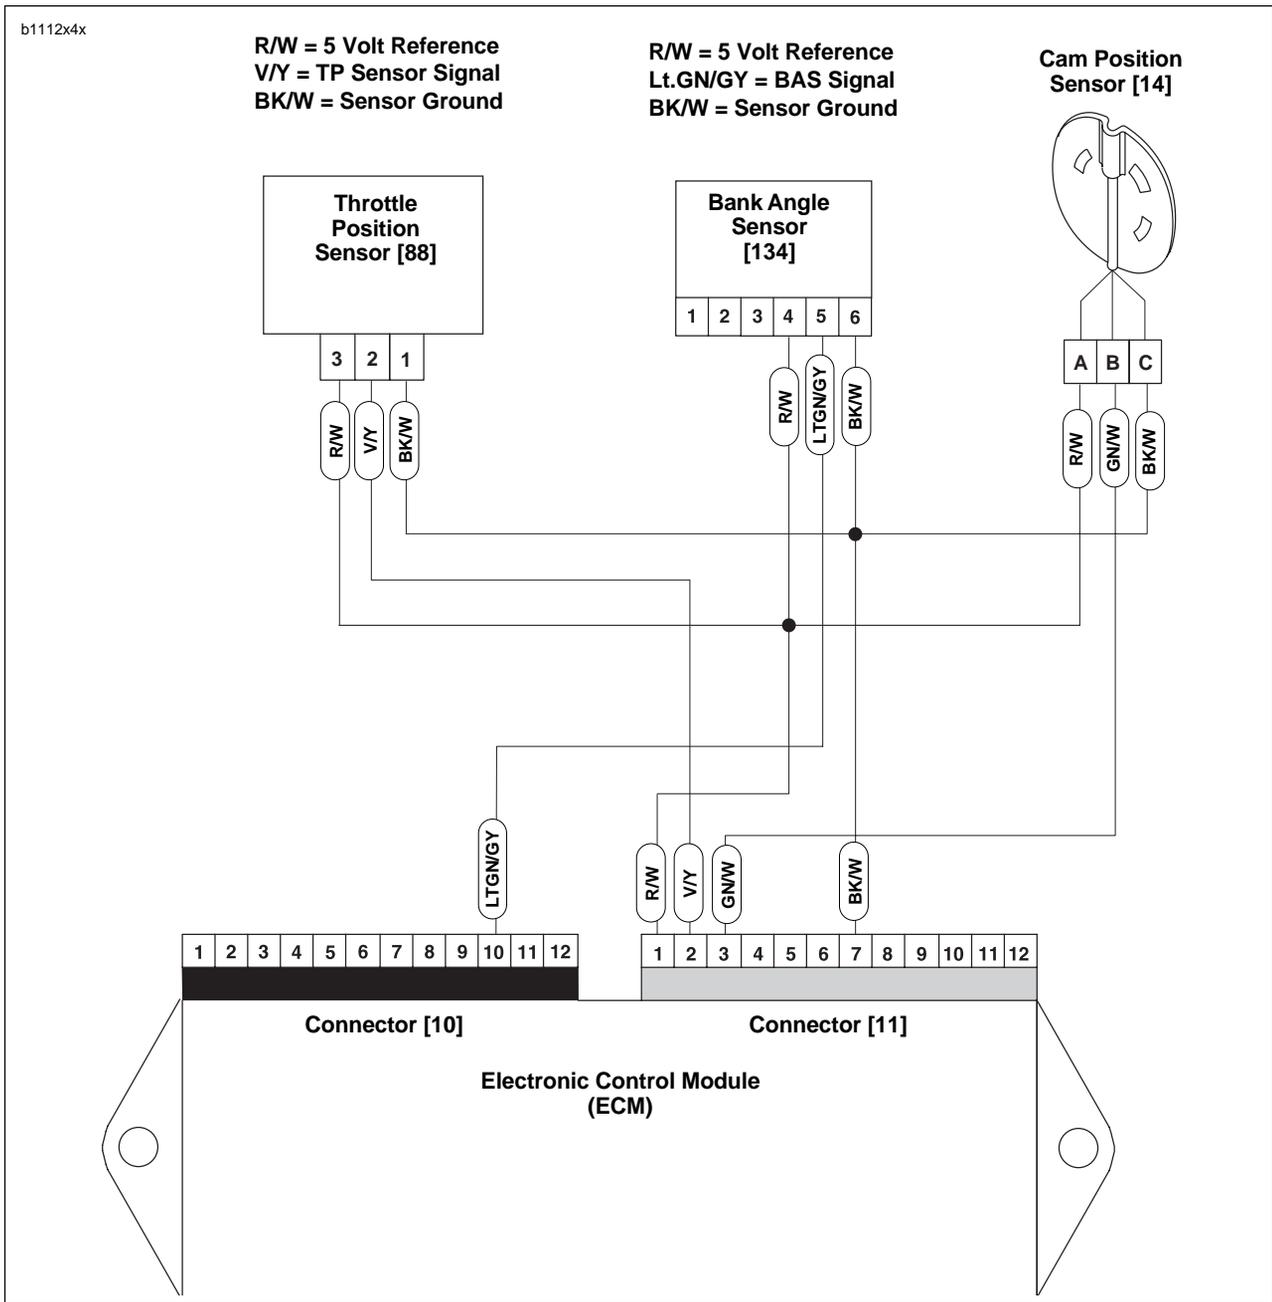


Figure 4-62. Cam Position Sensor Circuit

Table 4-33. Wire Harness Connectors in Figure 4-62.


| NO. | DESCRIPTION | TYPE | LOCATION |
|-------|--------------------------|------------------|--|
| [10] | ECM (black) | 12-place Deutsch | in fairing |
| [11] | ECM (gray) | 12-place Deutsch | in fairing |
| [14] | cam position sensor | 3-place Deutsch | under sprocket cover |
| [88] | throttle position sensor | 3-place Packard | right side of engine between cylinders |
| [134] | bank angle sensor | 6-place Sumitomo | in fairing |

Code 56 (Part 1 of 2)

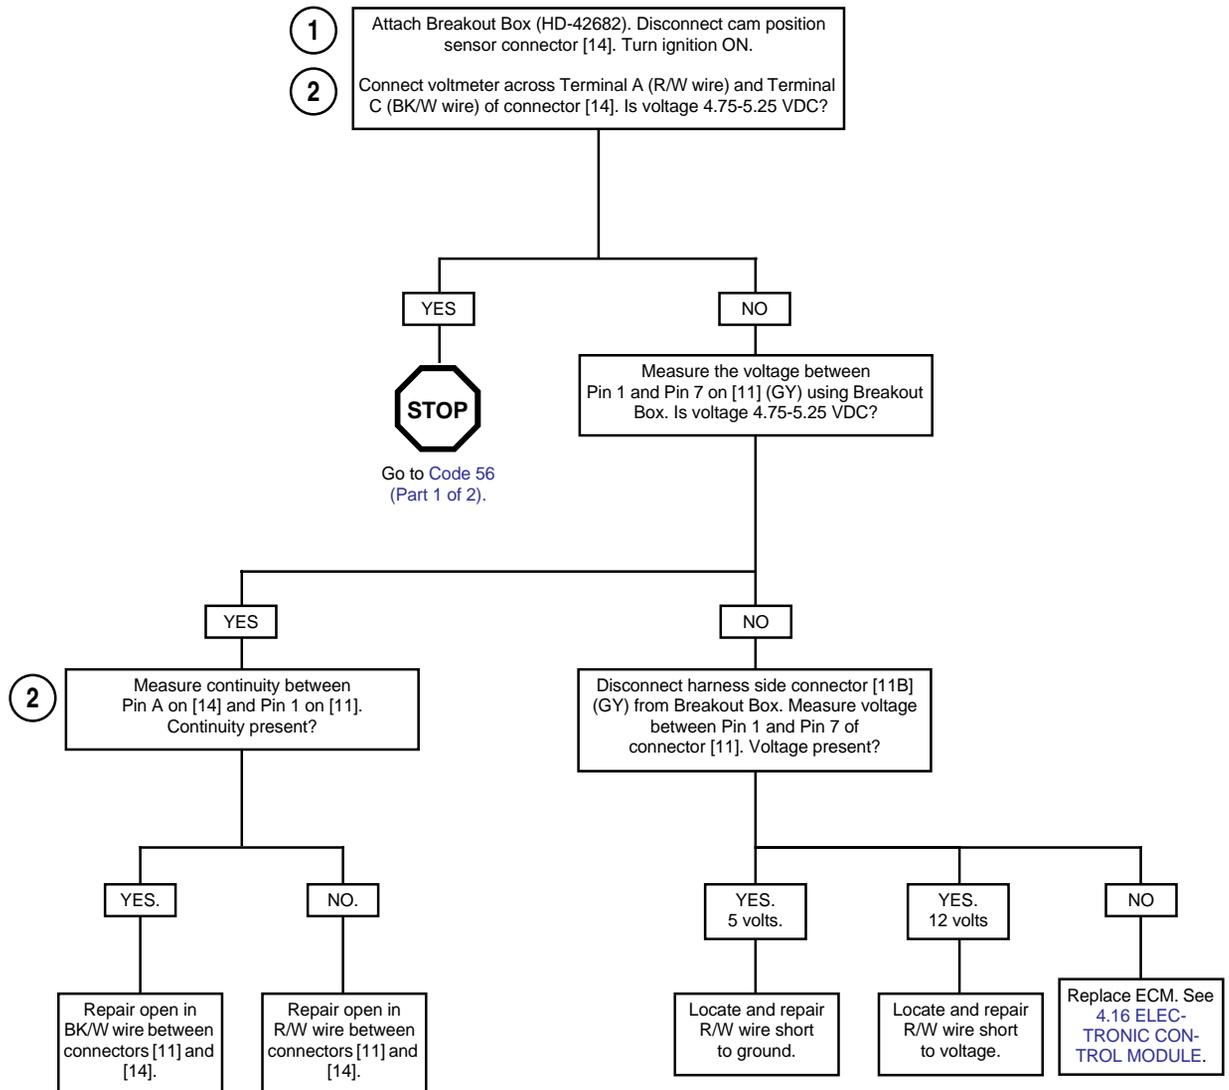

Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

Code 56 (Part 2 of 2)

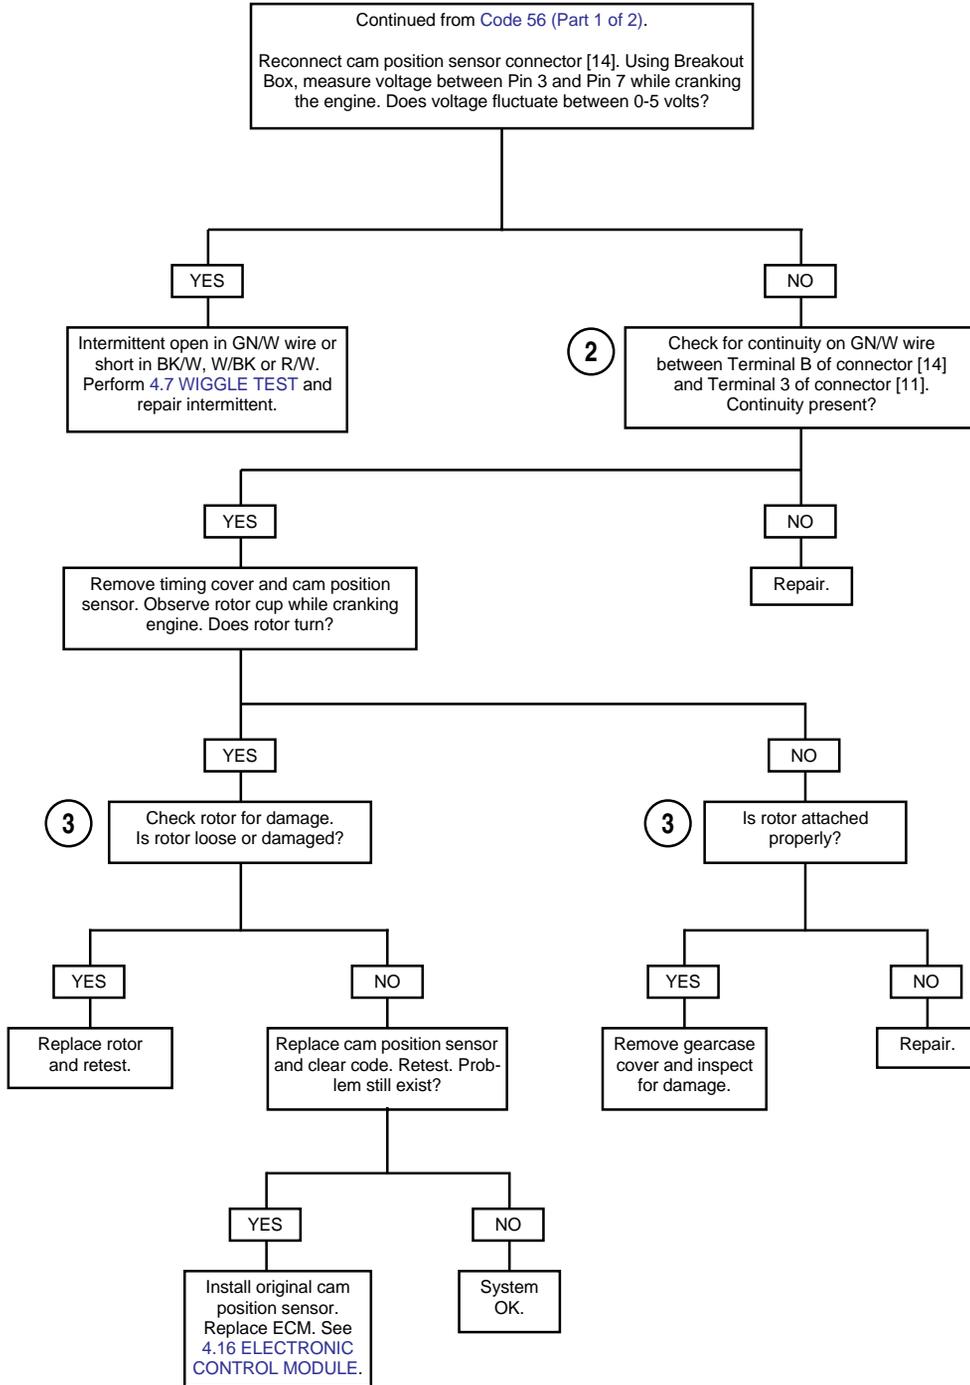


Clear codes and confirm proper operation with no check engine lamp. Codes can be cleared using DIGITAL TECHNICIAN (Part No. HD-44750).

REMOVAL

1. Remove front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
2. Remove Electronic Control Module (ECM). See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#) but do not disconnect sensors.
3. Disconnect ECM black connector [10] and gray connector [11].

INSTALLATION

1. Attach ECM connectors [10] and [11].
2. Locate ECM between fairing and headlight bracket.
3. Install headlight bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
4. Install front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
5. Recalibrate throttle position sensor using DIGITAL TECHNICIAN (Part No. HD-44750).

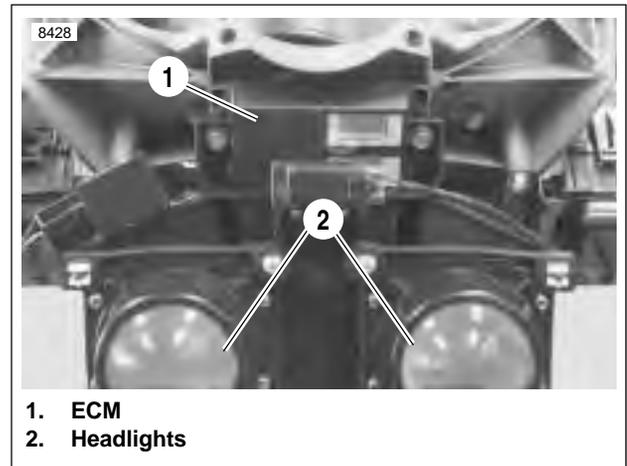**Figure 4-31. ECM**

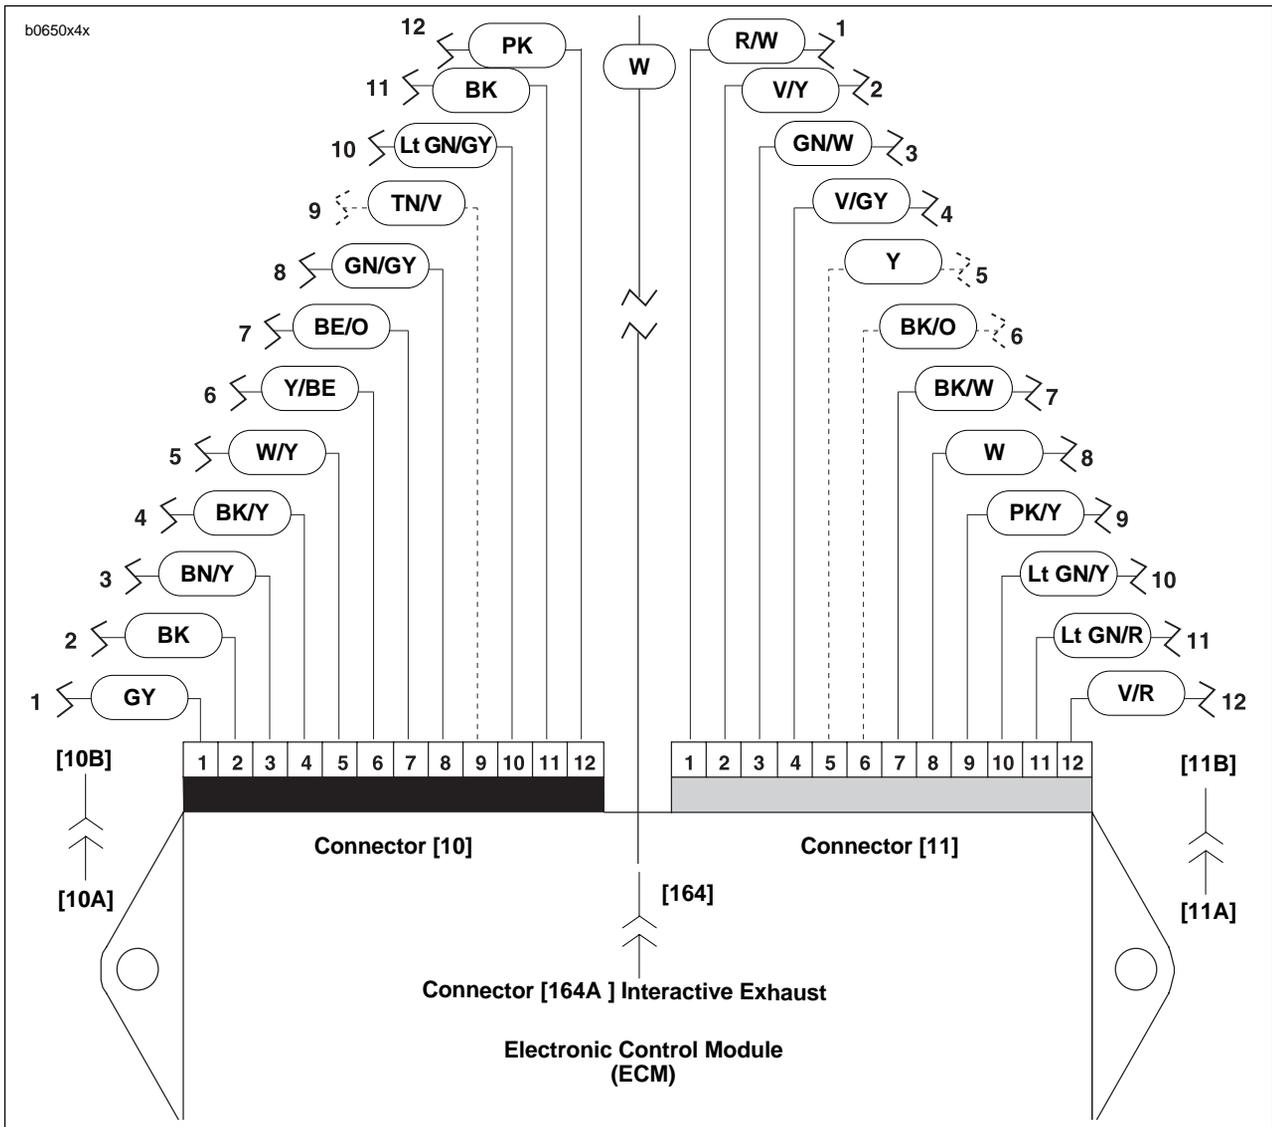


Figure 4-32. ECM Wiring (Interactive Muffler Connector [164] XB12R Only)

Table 4-17. Pin Table for ECM Connector [10] (Black)

| PIN | FUNCTION |
|-----|--------------------------------------|
| 1 | Switched ignition |
| 2 | System ground A (module) |
| 3 | Fuel pump |
| 4 | Check engine lamp |
| 5 | Injector front |
| 6 | Front coil primary |
| 7 | Rear coil primary |
| 8 | Injector rear |
| 9 | Interactive Muffler control feedback |
| 10 | Bank angle sensor input |
| 11 | System ground B (coil) |
| 12 | Tachometer |

Table 4-18. Pin Table for ECM Connector [11] (Gray)

| PIN | FUNCTION |
|-----|--------------------------|
| 1 | 5 volt sensor power |
| 2 | Throttle position sensor |
| 3 | Camshaft position sensor |
| 4 | Oxygen sensor |
| 5 | Memory |
| 6 | Fan control |
| 7 | Sensor ground 1 |
| 8 | Vehicle speed sensor |
| 9 | Engine temperature |
| 10 | Intake air temperature |
| 11 | Serial data receive |
| 12 | Serial data transmit |

REMOVAL

WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove sprocket cover. See [2.30 SPROCKET COVER](#).

NOTES

- Make note of cable strap positions and wire routing during disassembly.
- For more information about the wiring located underneath the sprocket cover see [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#).

3. Cut cable straps holding cam position sensor wiring.
4. See [Figure 4-33](#). Disconnect cam position sensor wiring at connector [14].
5. Note position of each cam position sensor wiring terminal in plug end of connector.
6. See [Figure 4-35](#). Remove connector terminal pins (7). See [B.2 DEUTSCH ELECTRICAL CONNECTORS](#) under [B.1 AMP MULTILOCK ELECTRICAL CONNECTORS](#).
7. Remove timer cover.
 - a. Drill off heads of outer timer cover pop rivets (1) using a 3/8 in. drill bit.
 - b. Tap remaining rivet shafts inboard through holes in timer cover (2) and inner cover (20).
 - c. Remove timer cover. Remove inner cover screws (3) and inner cover (20).
 - d. Carefully remove any remaining pieces of rivets from gearcase cover timer bore.
8. See [Figure 4-34](#). To obtain approximate ignition timing during installation, scribe alignment marks (4) across cam position sensor (3) in two places.
9. See [Figure 4-35](#). Remove timer plate studs (4). Carefully remove cam position sensor. Remove bolt (18) and trigger rotor (17).
10. Carefully remove camshaft oil seal (16) if damaged or if there is any evidence of oil leakage past the seal.


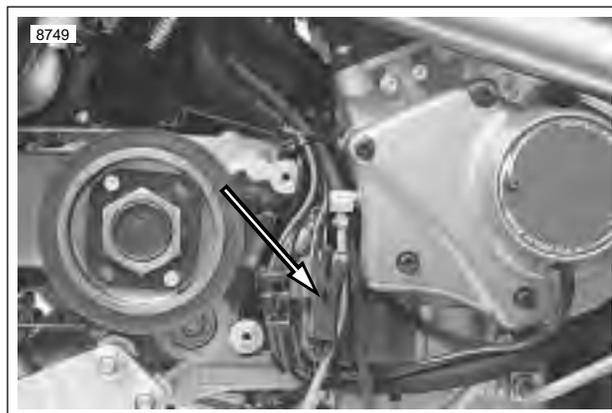


Figure 4-33. Cam Position Sensor Connector [14] (stator connector disconnected)

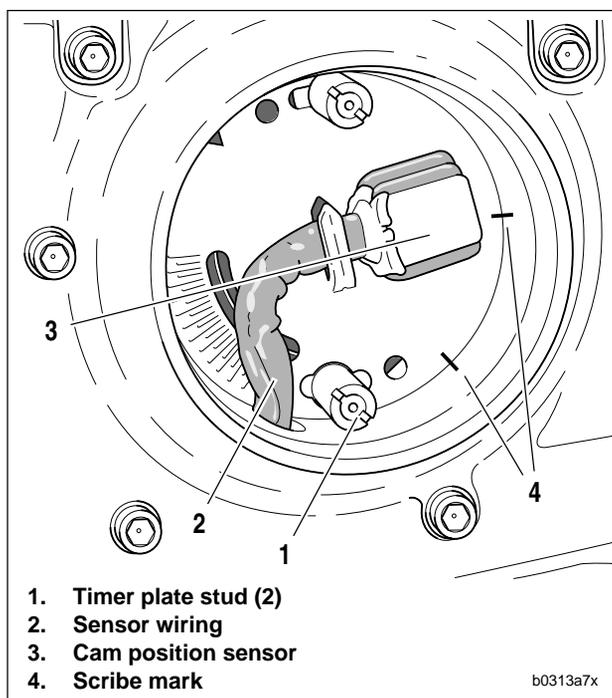


1. Timer plate stud (2)
2. Sensor wiring
3. Cam position sensor
4. Scribe mark

b0313a7x

Figure 4-34. Marking Ignition Timing

1. Pop rivet (2)
2. Timer cover
3. Screw (2)
4. Timer plate stud (2)
5. Cam position sensor connector [14]
6. Terminal pin
7. Electronic control module (ECM)
8. Connector, interactive exhaust system
9. Spark plug (2)
10. Rear spark plug cable
11. Mounting fastener
12. Wireform, cable guide
13. Ignition coil
14. Front spark plug cable
15. Engine mount
16. Seal
17. Trigger rotor
18. Trigger rotor bolt
19. Cam position sensor
20. Inner cover

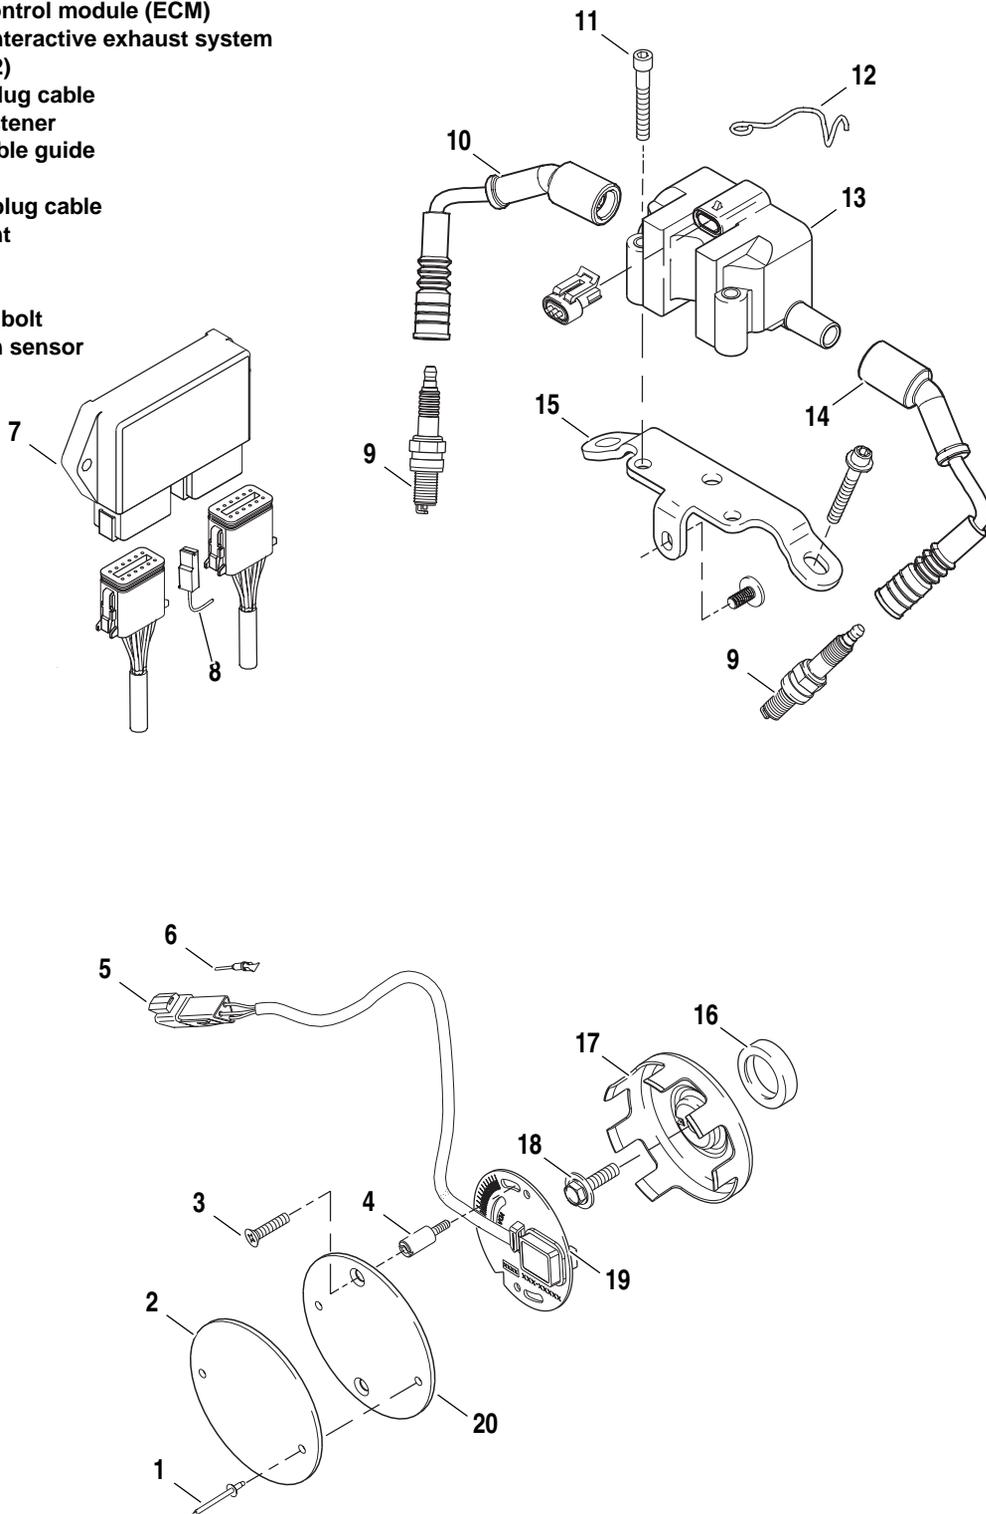

b1164x4x

Figure 4-35. Ignition Components

INSTALLATION

1. See [Figure 4-35](#). Coat lip of seal with a thin film of **clean** engine oil. With the lipped side facing inboard, install **new** camshaft oil seal (16) into gearcase cover (15), if removed. Press seal into position until flush with surface of timer bore.
2. Install trigger rotor (17).
 - a. Apply LOCTITE THREADLOCKER 243 (blue) to threads of bolt (18).
 - b. Position trigger rotor (17) onto end of camshaft aligning notch with camshaft slot.
 - c. Install bolt to secure rotor. Tighten to 43-53 **in-lbs** (5-6 Nm).
3. Install cam position sensor (19) and timer plate studs (4). Rotate cam position sensor to its previously marked position to obtain approximate ignition timing.
4. Route sensor wiring leads and install cable straps. See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#).
5. See [Figure 4-37](#). Install sensor wiring terminals into correct positions in plug end of connector [14]. R/W, GN/W and BK/W wires of plug end (from cam position sensor) must match same color wires in receptacle end of connector (from ignition module wiring harness). Install pin terminals. See [B.2 DEUTSCH ELECTRICAL CONNECTORS](#) under [B.1 AMP MULTILOCK ELECTRICAL CONNECTORS](#).
6. See [Figure 4-35](#). Attach connector [14] (6).
7. Check ignition timing. See [1.18 IGNITION TIMING](#).
8. Tighten timer plate studs (4) to 15-30 **in-lbs** (2-3 Nm).
9. Install inner cover (20) using screws (3). Tighten to 12-20 **in-lbs** (1-2 Nm).

CAUTION

Use only H-D Part No. 8699 rivets to secure outer timing cover. These rivets are specially designed so that no rivet end falls off into the timing compartment. Use of regular rivets can damage ignition system components and allow water to enter the timing compartment.

10. Secure timer cover (2) to inner cover using **new** rivets (1).
11. Connect negative battery cable.

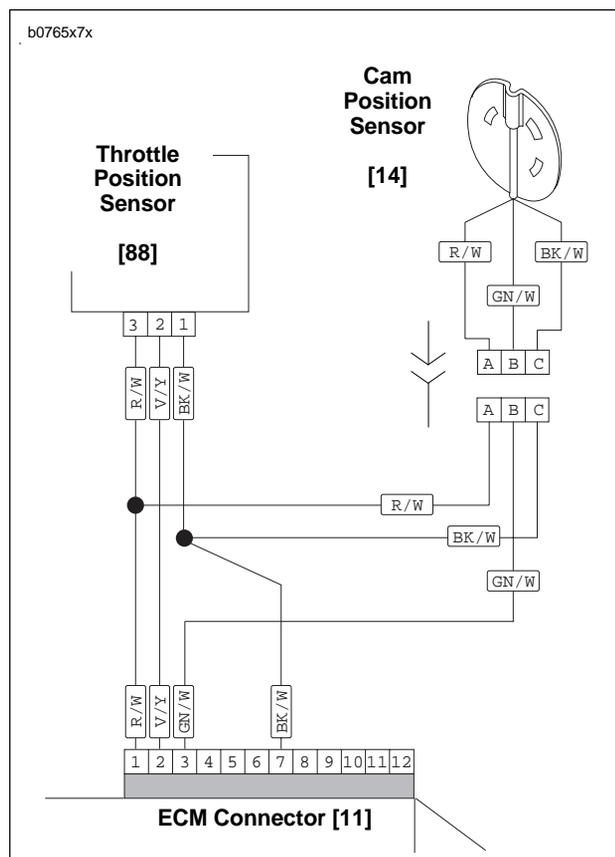


Figure 4-37. Connecting Sensor Wires

TROUBLESHOOTING

Follow the troubleshooting procedures listed under [4.8 INITIAL DIAGNOSTIC CHECK](#) if the engine will not start, is difficult to start or runs roughly. Also check condition of spark plug cables. Insulation on cables may be cracked or damaged allowing high tension current to short to metal parts. This problem is most noticeable when cables are wet.

If poor starting/running condition persists, check resistance of ignition coil primary and secondary windings using an ohmmeter.

Ignition Coil Primary Circuit Test

1. Remove ignition coil. See [REMOVAL](#) which follows.
2. Set ohmmeter scale to RX1.
3. See [Figure 4-38](#). Place multimeter wires on primary coil windings (1).
4. Check for primary coil winding resistance.
 - a. Normal resistance range is 0.5-0.7 ohms.
 - b. See [TEST RESULTS](#) if resistance is not within normal operating range.

Ignition Coil Secondary Circuit Test

1. Remove ignition coil. See [REMOVAL](#) which follows.
2. Set ohmmeter scale to RX1K.
3. See [Figure 4-38](#). Place multimeter wires on secondary coil windings (2).
4. Check for secondary coil winding resistance.
 - a. Normal resistance range is 5.5-7.5K ohms.
 - b. See [TEST RESULTS](#) if resistance is not within normal operating range.

Test Results

1. A low resistance value indicates a short in the coil winding. Replace coil.
2. A high resistance value might indicate that there is some corrosion/oxidation of the coil terminals. Clean the terminals and repeat resistance test. If resistance is still high after cleaning terminals, replace coil.
3. An infinite ohms (∞ or no continuity) resistance value indicates an open circuit (a break in the coil winding). Replace coil.

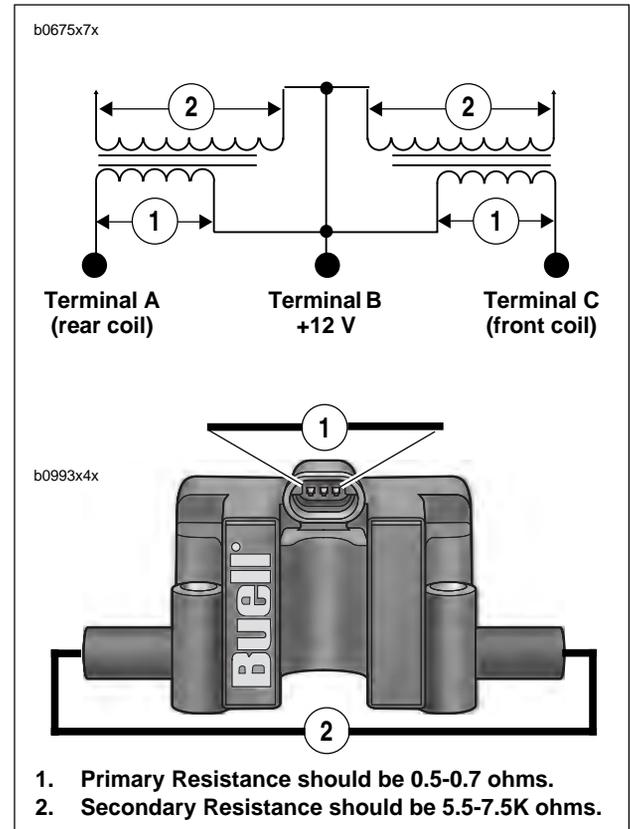


Figure 4-38. Ignition Coil Testing

Ignition Coil Substitution

If a coil tester is not available, use the following test.

NOTE

Coil will function without being attached to frame.

1. Substitute a **new** ignition coil by attaching it to any convenient point near the old coil. Transfer terminal wires to **new** coil.
2. Attach **new** spark plug cables to coil and plugs.
3. Test system. If ignition trouble is eliminated by the temporary installation of a **new** coil, carefully inspect old coil and cables for damage. The insulation on the cables may be cracked or otherwise damaged allowing high tension current to short to metal parts. This is most noticeable in wet weather or after the motorcycle has been washed.

REMOVAL

⚠ WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
3. Remove airbox. See [4.30 AIRBOX](#).
4. See [Figure 4-39](#). Disconnect the spark plug cables from the coil plug posts (1, 5).
5. Detach connector (3) [83].
6. Remove coil fasteners (2).

INSTALLATION

NOTE

To ease installation, install spark plug cables to ignition coil first.

1. Connect spark plug cables to ignition coil.
2. See [Figure 4-39](#). Attach coil to frame with fasteners (2). Tighten to 120-144 **in-lbs** (13.6-16.3 Nm).
3. Attach front and rear spark plug cables to ignition coil posts.
4. Attach connector (3) [83].
5. Install ram air scoop assembly. See [2.35 AIR SCOOPS](#).
6. Install airbox. See [4.30 AIRBOX](#).
7. Install intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
8. Connect negative battery cable.

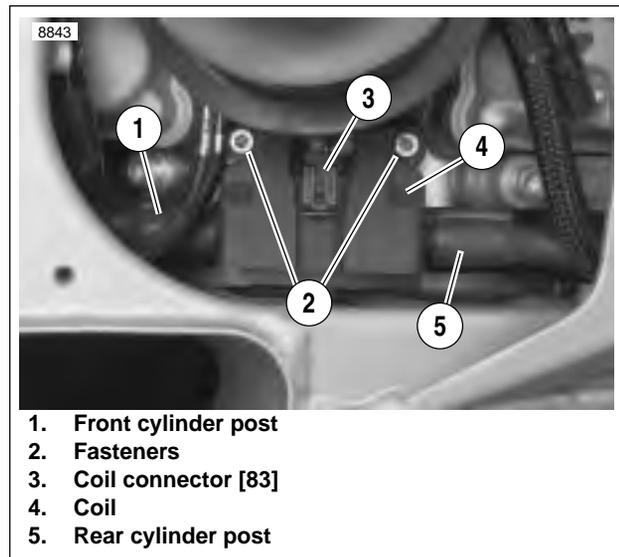


Figure 4-39. Ignition Coil Location

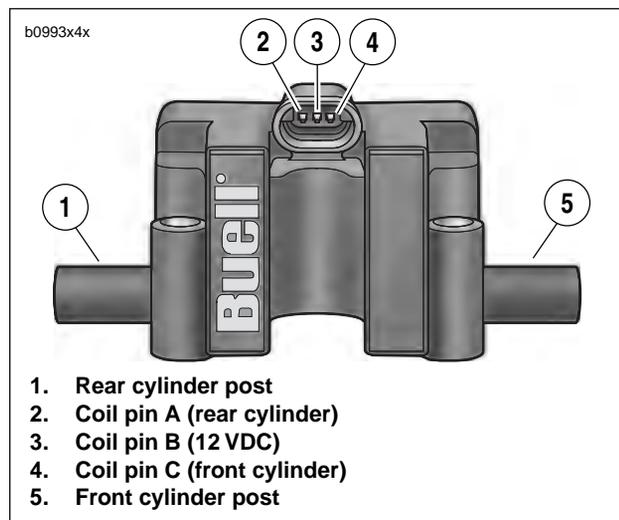


Figure 4-40. Ignition Coil

GENERAL

The oxygen sensor, located in the rear header pipe, monitors oxygen content in the exhaust gas and converts it to a voltage reading. This voltage reading is used by the ECM to maintain the proper air/fuel ratio during closed loop operation.

REMOVAL

⚠ WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
3. Remove airbox assembly. See [4.30 AIRBOX](#).
4. Remove shock absorber. See [2.22 REAR SHOCK ABSORBER](#).
5. Remove cooling fan. See [4.24 COOLING FAN](#)
6. See [Figure 4-42](#). Remove cable straps (2). Unplug 1-place connector [137] (1).
7. Remove oxygen sensor from exhaust header using Snap-on Part No. YA8875.

INSTALLATION

1. Apply LOCTITE ANTI-SEIZE LUBRICANT to threads of sensor. Make sure anti-seize is marked as safe for use with O² sensors.
2. See [Figure 4-41](#). Thread sensor into exhaust header. Tighten sensor to 40-45 ft-lbs (54-61 Nm).
3. Install cooling fan. See [4.24 COOLING FAN](#).
4. Install shock absorber. See [2.22 REAR SHOCK ABSORBER](#).
5. See [Figure 4-42](#). Connect 1-place connector [137] (1) to wiring harness.
6. Install cable straps (2).
7. Install airbox assembly. See [4.30 AIRBOX](#).
8. Install intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
9. Connect negative battery cable.


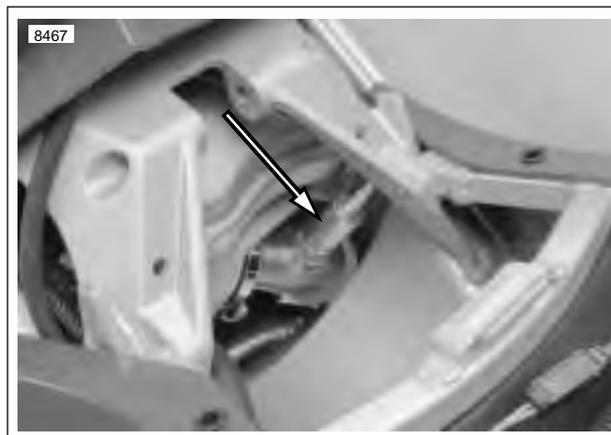


Figure 4-41. Installed Oxygen Sensor (shock absorber removed)

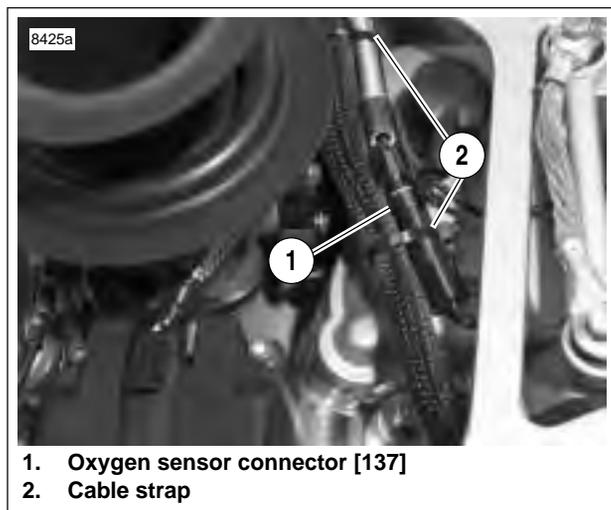

1. Oxygen sensor connector [137]
2. Cable strap

Figure 4-42. Oxygen Sensor Connector [137]

GENERAL

The Engine Temperature Sensor (ET Sensor), located in the rear cylinder head, monitors the engine temperature close to the combustion chamber. In addition to aiding the ECM in monitoring the operation of the engine, it is also used to warn the operator of potentially damaging temperatures by causing the CHECK ENGINE lamp to blink during operation.

REMOVAL

WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
3. Remove airbox. See [4.30 AIRBOX](#).
4. See Figure 4-44. Remove right upper tie bar fastener (2). Rotate tie bar to provide access to sensor.

CAUTION

Do not pull on engine temperature sensor wiring. Excess strain to sensor wiring will cause sensor damage.

5. Unplug 1-place ET Sensor connector (1) [90] above rear cylinder head.
6. Slide rubber boot up ET sensor wire.
7. Remove sensor from rear cylinder head using Snap-on socket M3503B.


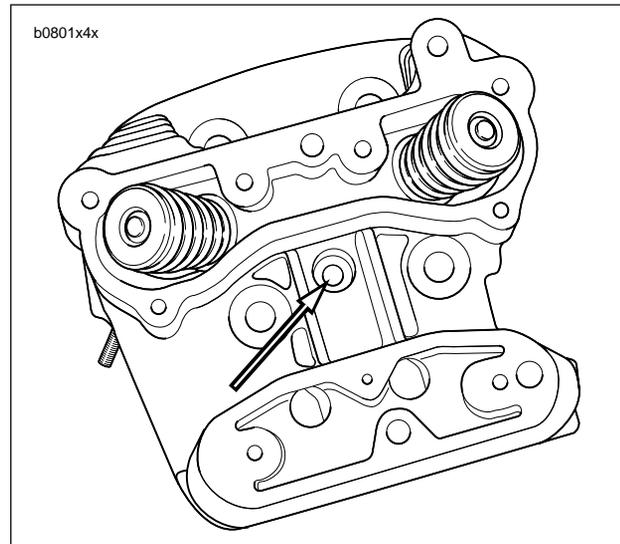


Figure 4-43. Engine Temperature Sensor Location (rear cylinder)

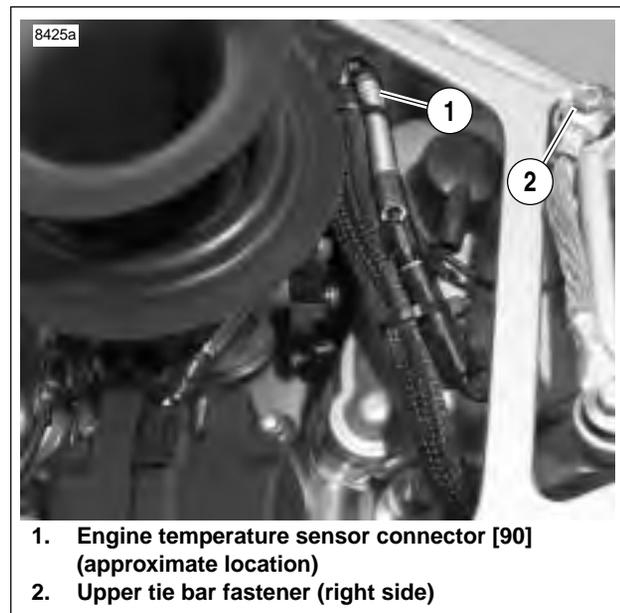

1. Engine temperature sensor connector [90] (approximate location)
2. Upper tie bar fastener (right side)

Figure 4-44. Engine Temperature Sensor Connector Approximate Location [90]

INSTALLATION

CAUTION

Do not pull on engine temperature sensor wiring. Excess strain to sensor wiring will cause sensor damage.

1. See [Figure 4-43](#). Screw sensor into rear cylinder head.

NOTE

In next step, make sure wire is in cutout portion (slot) of socket to prevent damage.

2. Secure sensor with Snap-on socket M3503B. Tighten ET sensor to 120-168 **in-lbs** (13.6-19 Nm).

NOTE

Orient the rubber boot so the flat on the boot is towards the left side of the motorcycle.

3. Push rubber boot down sensor wire towards cylinder head until it seats in hole on top of ET sensor.
4. See [Figure 4-44](#). Connect ET sensor 1-place connector [90] to wiring harness.
5. Install right upper tie bar fastener (2). Tighten fastener to 25-27 ft-lbs (33.9-36.6 Nm).
6. Install airbox. See [4.30 AIRBOX](#).
7. Install intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
8. Connect negative battery cable.

GENERAL

The bank angle sensor (BAS), located inside the fairing on the headlight bracket, provides input to the ECM on vehicle lean angle. If vehicle lean angle exceeds predetermined bank angle limit, the Bank Angle Sensor will shut off power to the ignition and fuel pump.

REMOVAL

⚠ WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
3. See [Figure 4-45](#). Unplug bank angle sensor connector [134].
4. Remove screws and washers to detach sensor from headlight bracket.

INSTALLATION

1. Position bank angle sensor on headlight bracket. Make sure locating post on sensor engages hole in mounting tab.
2. Install bank angle sensor to mounting tab with fasteners and **new** locknuts. Tighten fastener to 12-36 **in-lbs** (1.4-4.1 Nm).
3. See [Figure 4-45](#). Install bank angle sensor connector [134].
4. Install front fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
5. Connect negative battery cable.

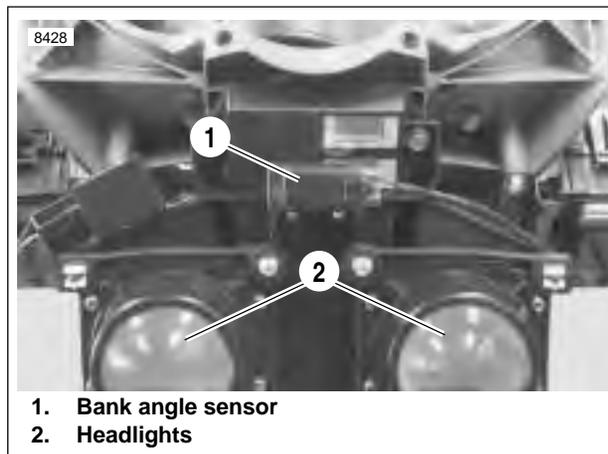


Figure 4-45. Bank Angle Sensor

GENERAL

The intake air temperature sensor (IAT Sensor), located on the airbox baseplate, measures the air temperature allowing the ECM to calculate the density of the air entering the manifold. The IAT is a thermistor type sensor.

REMOVAL

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. See [Figure 4-46](#). Remove airbox cover, filter. Remove fasteners securing base. See [4.30 AIRBOX](#).
3. Raise base and pull IAT sensor from sensor grommet.
4. Disconnect connector [89] from intake air temperature sensor.
5. Inspect sensor grommet for damage and replace as required.

INSTALLATION

1. Connect IAT sensor connector [89] to wiring harness.
2. Install IAT sensor into grommet on air cleaner base from underneath.
3. Install airbox. See [4.30 AIRBOX](#).
4. Install negative battery cable.



Figure 4-46. Intake Air Temperature Sensor Installed

REMOVAL

1. Remove airbox. See 4.30 AIRBOX.
2. See Figure 4-47. Disconnect throttle position sensor connector [88].
3. See Figure 4-48. Remove two screws and washers to detach TP sensor.

INSTALLATION

1. See Figure 4-48. Apply LOCTITE THREADLOCKER 222 (purple) to threads of fasteners.
2. Install fastener into lower mounting hole of sensor prior to installation.
3. Attach TP sensor with both fasteners and washers. Tighten to 13-23 **in-lbs** (1.5-2.6 Nm).
4. See Figure 4-49. Attach throttle position sensor connector [88]. Slots on female connector [88B] must fully engage tabs on male connector housing [88A].

NOTE

- Throttle position sensor can only be calibrated using DIGITAL TECHNICIAN (Part No. HD-44750).
 - See Figure 4-47. For the XB12R, the throttle position sensor is located on the opposite side of the throttle body assembly as on the XB9R.
5. Calibrate throttle position sensor.

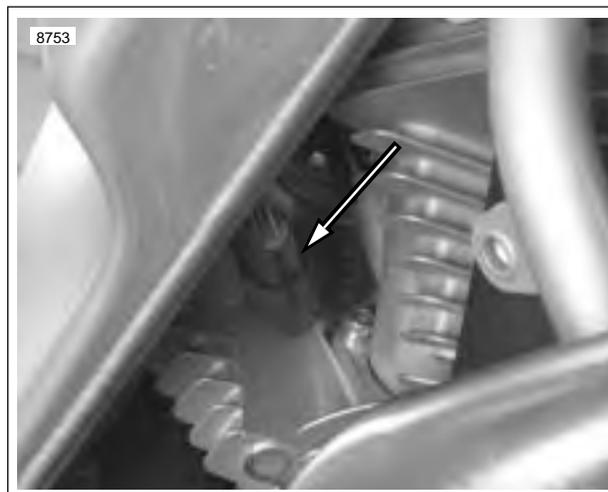


Figure 4-47. Throttle Position Sensor Location

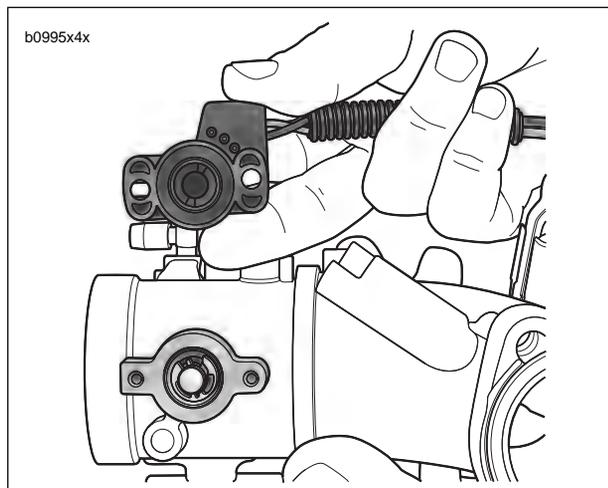


Figure 4-48. Throttle Position Sensor

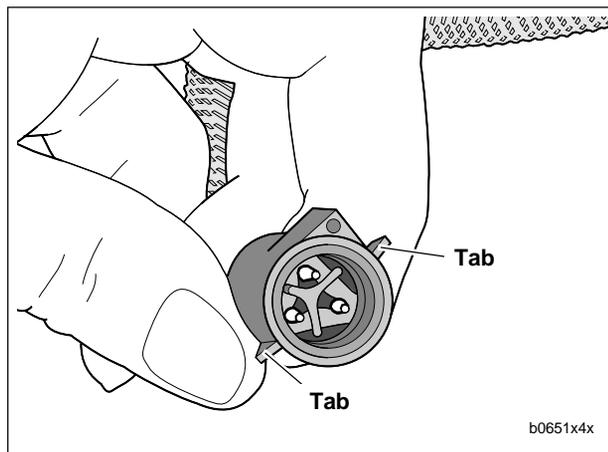


Figure 4-49. Tabs on TP Sensor Connector [88A]

GENERAL

A computer-controlled cooling fan assists engine cooling during operation in high temperatures. Fan actuation is controlled by the ECM. See [Table 4-19. Cooling Fan Specifications](#).

Table 4-19. Cooling Fan Specifications

| | FAN ON | FAN OFF |
|---------|-----------------|-----------------|
| Key ON | 220° C (428° F) | 180° C (356° F) |
| Key OFF | 170° C (338° F) | 150° C (302° F) |

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

⚠ WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable.
3. Remove shock absorber. See [2.22 REAR SHOCK ABSORBER](#).
4. See [Figure 4-50](#). Remove cooling fan fasteners (1).
5. Rotated fan clockwise (looking towards front of vehicle) to remove.
6. See [Figure 4-51](#). Disconnect cooling fan connector [97].

INSTALLATION

1. See [Figure 4-51](#). Connect cooling fan connector [97].

NOTES

- When installing cooling fan (3), be sure wiring, transmission vent hose and fuel line are routed through notch (2) in fan body.
 - On California models, both fuel tank and canister vent hoses are routed through notch in fan body.
2. Install fan and rotate counter-clockwise into position.
 3. Install cooling fan fasteners. Tighten to 12-36 in-lbs (1.4-4.1 Nm).
 4. Install shock absorber. See [2.22 REAR SHOCK ABSORBER](#).
 5. Connect negative battery cable.

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

6. Install seat. See [2.38 SEAT](#).

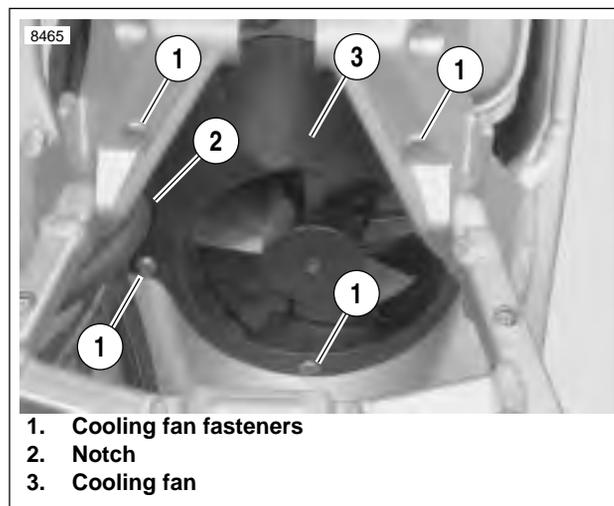


Figure 4-50. Cooling Fan



Figure 4-51. Cooling Fan Connector [97]

GENERAL

The fuel pump is located inside the left rear portion of the fuel tank/frame.

DRAINING FUEL TANK

WARNING

The gasoline in the fuel supply line downstream of the fuel pump is under high pressure (49 psi [338 kPa]). To avoid an uncontrolled discharge or spray of gasoline, always purge the system of high pressure gas before servicing fuel pump. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

1. Purge the fuel supply line of high pressure gasoline.
 - a. See [Figure 4-52](#). Disconnect the 4-place fuel pump connector (2) [86]. Connector is located inside the left rear portion of the fuel tank/frame.
 - b. With the motorcycle in neutral, start the engine and allow vehicle to run.
 - c. When the engine stalls, press the starter button for 3 seconds to remove any remaining fuel from fuel line.

WARNING

An open flame or spark may cause a fuel tank explosion if all traces of fuel are not purged from the tank. Use extreme caution when servicing fuel tanks. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

2. Remove drain plug (5) and drain fuel into appropriate container. Discard plug.
3. When fuel tank is empty, replace with **new** drain plug. Tighten to 84-108 **in-lbs** (9.5-12.2 Nm).

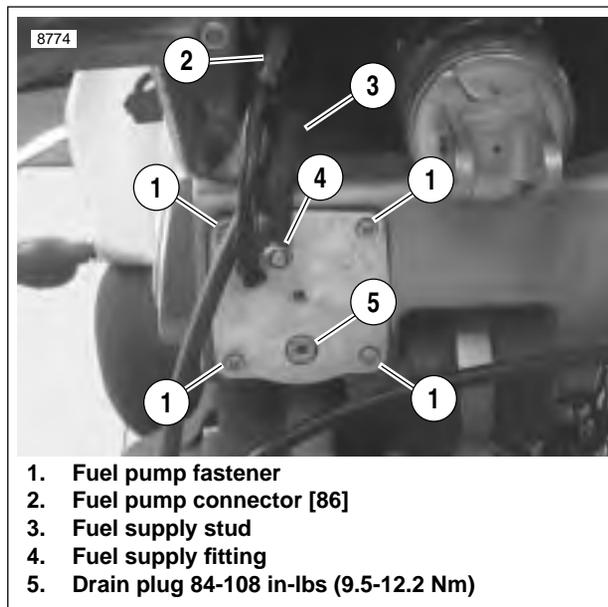


Figure 4-52. Fuel Pump Location

REMOVAL

| PART NO. | SPECIALTY TOOL |
|----------|------------------|
| B-45657 | Fuel pump puller |

1. Remove rider footpeg mounts. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
2. Remove swingarm. See [2.19 SWINGARM AND BRACE](#).
3. Drain fuel tank. See [DRAINING FUEL TANK](#) under [4.25 FUEL PUMP](#).

WARNING

A small amount of gasoline will drain from the fuel supply fitting, fuel line and fuel pump when removed. Thoroughly wipe up any spilt fuel immediately. Dispose of rags in a suitable manner. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

4. See [Figure 4-52](#). Remove fuel line from fuel supply fitting (4).
5. Remove four fuel pump fasteners (1).
6. See [Figure 4-53](#). Assemble fuel pump puller.
 - a. Thread nut (3) onto bolt (4).
 - b. Slide washer (2) onto bolt.
 - c. Insert bolt assembly into hole in main body (1).
7. See [Figure 4-54](#). Place the main body of the fuel pump puller over the fuel pump assembly.
8. Thread bolt into the threaded hole in the center of the fuel pump assembly until snug.
9. Thread the nut down the shaft of the bolt until it makes contact with the main body of the fuel pump puller.
10. Place wrench onto nut and another wrench onto the bolt. Hold the bolt stationary and turn nut clockwise until fuel pump is pulled free from frame.

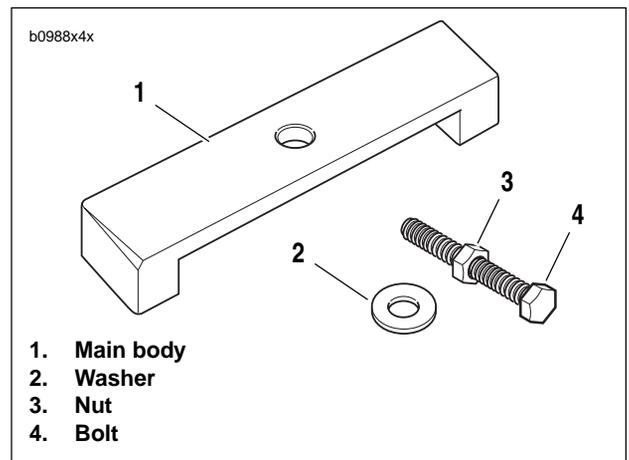


Figure 4-53. Fuel Pump Puller

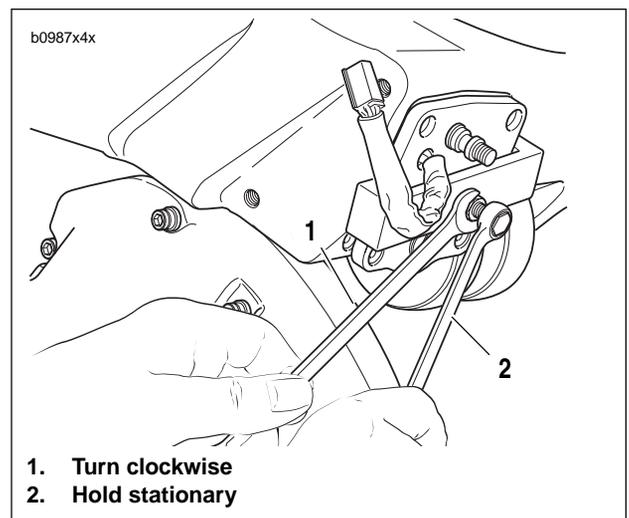


Figure 4-54. Fuel Pump Removal

REPAIR

Fuel Pressure Regulator Replacement

1. Remove fuel pump assembly from tank. See [REMOVAL](#) in this section.
2. See [Figure 4-55](#). Pry four tabs of clip holding fuel pressure regulator (8) in place. Detach regulator from regulator housing.
3. Remove and discard O-rings from regulator.
4. Install **new** O-rings on regulator. Press **new** regulator into place.
5. Install **new** regulator clip.
6. Install fuel pump assembly. See [INSTALLATION](#) in this section.

Low Fuel Level Sensor Replacement

1. Remove fuel pump assembly from tank. See [REMOVAL](#) in this section.
2. See [Figure 4-56](#). Disconnect low fuel level sensor connector (4).
3. Remove clamp (5) securing low fuel level sensor (6) in place.
4. Install **new** sensor.
5. Install new clamp over sensor.
6. Attach wire connector.
7. Install fuel pump assembly. See [INSTALLATION](#) in this section.

Fuel Filter Replacement

1. Remove fuel pump assembly from tank. See [REMOVAL](#) in this section.
2. See [Figure 4-56](#). Remove fuel pump clamps (3, 7).
3. See [Figure 4-57](#). Remove fuel pump clips (1).
4. Pull regulator housing (2) from fuel pump assembly.
5. See [Figure 4-58](#). Discard regulator housing o-rings (2).
6. See [Figure 4-56](#). Remove fuel filter hose from fitting (2) and remove fuel filter (1).
7. Install **new** clamps on fuel filter hose.
8. Install **new** fuel filter hose with 90° bend towards fitting (2).
9. See [Figure 4-58](#). Install **new** regulator housing o-rings.
10. Install regulator housing onto fuel pump assembly.
11. See [Figure 4-56](#). Tighten fuel filter clamps (3, 7).
12. See [Figure 4-57](#). Install clips (1) into center grooves.
13. Install fuel pump assembly. See [INSTALLATION](#) in this section.

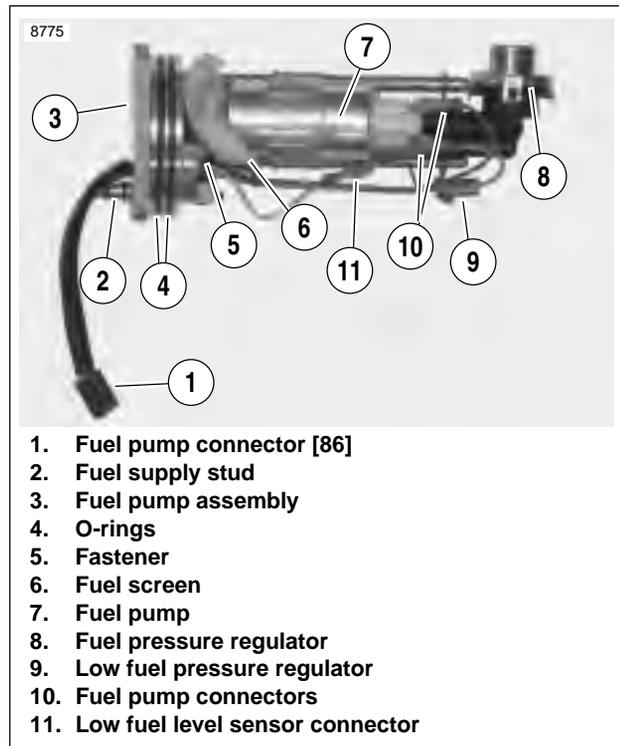


Figure 4-55. Fuel Pump Assembly (left side)

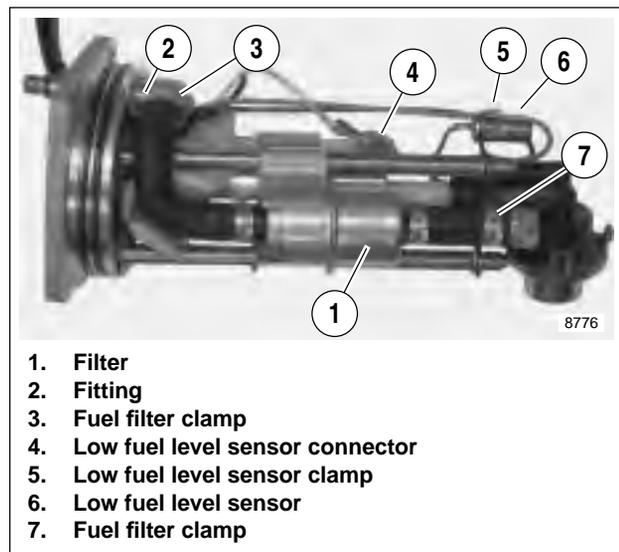


Figure 4-56. Fuel Pump Assembly (right side)

Fuel Screen Replacement

1. Remove fuel pump assembly from tank. See [REMOVAL](#) in this section.
2. See [Figure 4-56](#). Remove fuel filter clamp (3). Disconnect hose from fitting (2).
3. See [Figure 4-57](#). Remove clips (1).
4. See [Figure 4-55](#). Disconnect fuel pump connectors (10) and low fuel level sensor connector (11).
5. Slide fuel pump and fuel filter off of fuel pump assembly.
6. Pry fuel screen (6) from fuel pump (7).

NOTE

In next step, make sure that section of screen with most material faces towards inside of fuel pump assembly.

7. Install **new** fuel screen on fuel pump.
8. Without damaging fuel screen, slide fuel pump onto fuel pump assembly.
9. See [Figure 4-56](#). Attach fuel filter hose to fitting (2) with clamp (3).
10. See [Figure 4-57](#). Install clips (1) into middle grooves.
11. See [Figure 4-55](#). Connect low fuel level sensor wiring (11).
12. Connect fuel pump connectors (10). Connectors are two different sizes.
13. Install fuel pump assembly. See [INSTALLATION](#) in this section.

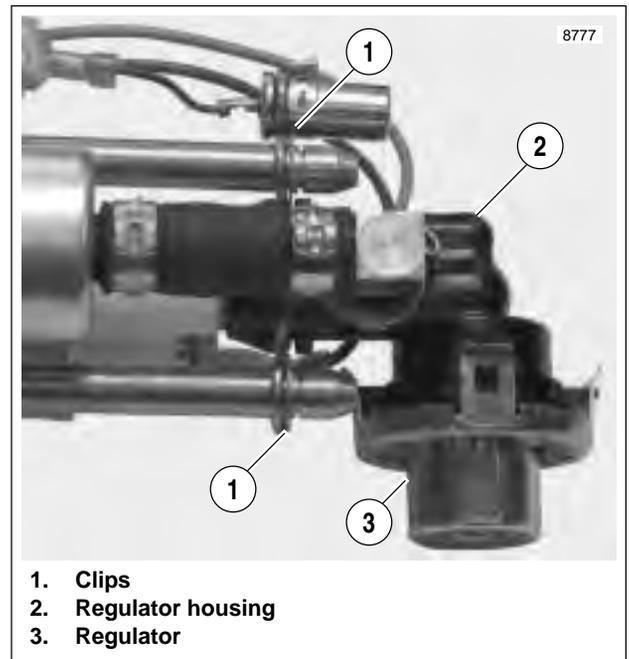


Figure 4-57. Fuel Pump Clips

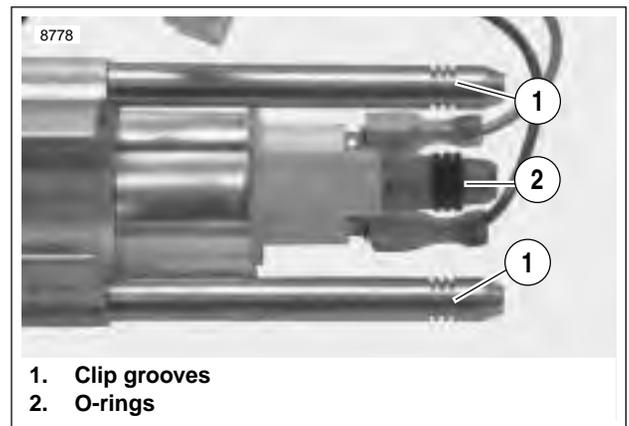


Figure 4-58. Regulator Housing O-rings

Table 4-20. Fuel Pump Specifications

| SPECIFICATION | DATA |
|-------------------|---------------------------|
| Pressure Setting | 49 PSI |
| Operating Voltage | 13.2 volts |
| Fuel Delivery | 60 LPH @ 45 PSI [310 kPa] |
| Current Draw | 6.0 amps |

Fuel Pump Wire Harness Replacement

1. Remove fuel pump assembly from tank. See [REMOVAL](#) in this section.
2. See [Figure 4-56](#). Remove fuel filter clamp (3). Disconnect hose from fitting (2).
3. See [Figure 4-57](#). Remove fuel pump clips (1).
4. See [Figure 4-55](#). Disconnect fuel pump connector (10) and low fuel level sensor connector (11).
5. Slide fuel pump and fuel filter off of fuel pump assembly.
6. Remove terminals from fuel pump connector [86].

NOTE

Note positions of wires in connector for correct assembly.

7. Disassemble fuel pump connector [86].
 - a. See [Figure 4-59](#). Remove connector clips (3).
 - b. Insert push pin/safety pin (1), into connector as shown.
 - c. Bend terminal tab towards connector pin and pull wire from opposite side of connector.
 - d. Repeat for all wires.
8. See [Figure 4-55](#). Remove screw (5).
9. See [Figure 4-60](#). From outer side of fuel pump assembly, push wire harness through assembly.
10. Lubricate **new** o-rings with **clean** engine oil. From inner side of fuel pump assembly, push new wire harness into assembly.
11. See [Figure 4-55](#). Insert **new** fastener (5), through ground wire terminal and secure to fuel pump assembly. Tighten to 18-22 **in-lbs** (2.0-2.5 Nm).

NOTE

After installing terminals, pull slightly on wire to make sure it is seated. If necessary, bend tab on terminal to aid in seating wire.

12. Install terminals into proper locations of fuel pump connector [86]. Install connector clips.
13. Without pinching fuel screen, slide fuel pump onto fuel pump assembly.
14. See [Figure 4-56](#). Attach fuel filter hose to fitting (2) with clamp (3).
15. See [Figure 4-57](#). Install clips (1) into middle grooves.
16. See [Figure 4-55](#). Connect low fuel level sensor connector (11).
17. Connect fuel pump connectors (10). Connectors are two different sizes.
18. Install fuel pump assembly. See [INSTALLATION](#) in this section.

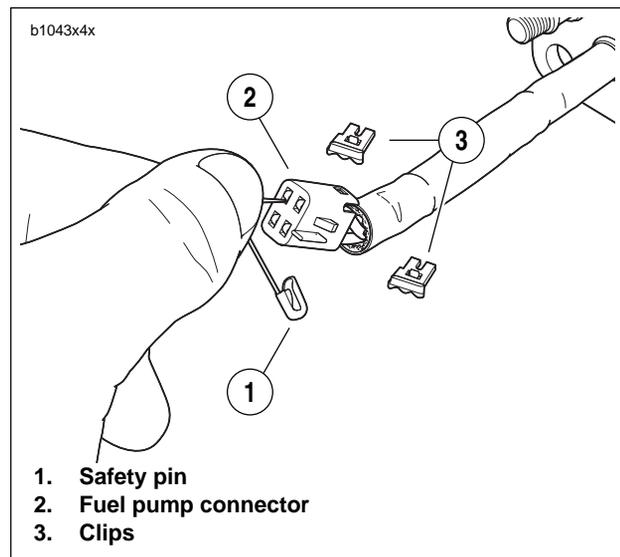


Figure 4-59. Fuel Pump Connector Disassembly

INSTALLATION

1. See Figure 4-55. Replace o-rings (4). Lubricate **new** o-rings with **clean** engine oil.
2. Install **new** o-rings on fuel supply stud (2). Larger o-ring is located in groove closer to fuel pump.
3. See Figure 4-61. Insert fuel pump into frame until resistance is felt.
4. Insert four screws (1) through fuel pump and into frame.

CAUTION

Use all four screws to draw fuel pump into frame. Using less than four screws will damage fuel pump o-rings.

5. Using crosswise pattern, draw fuel pump into frame by tightening screws. Final tighten screws to 48-51 **in-lbs** (5.4-5.8 Nm).

WARNING

Do NOT overtighten fuel fitting nuts. Overtightening fasteners may result in excessive compression of sealing components and fuel leakage which could result in death or serious injury.

6. Install fuel supply line (3) banjo fitting over fuel supply stud (4). Install **new** fastener. Tighten to 84-108 **in-lbs** (9.5-12.2 Nm).
7. Fill tank with a small amount of fuel. Check for leaks.
8. Connect fuel pump connector [86] (2) and push cable strap tab into hole in frame.


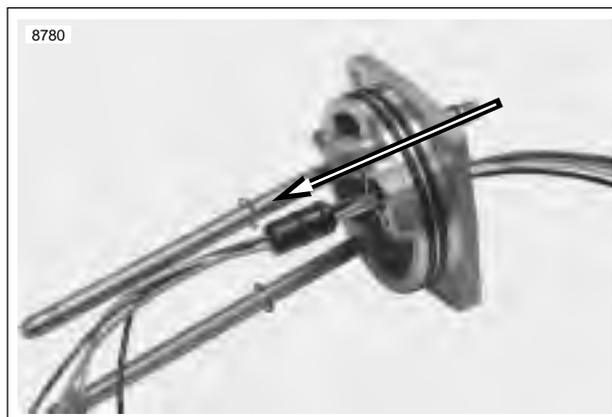


Figure 4-60. Wire Harness Removal Direction

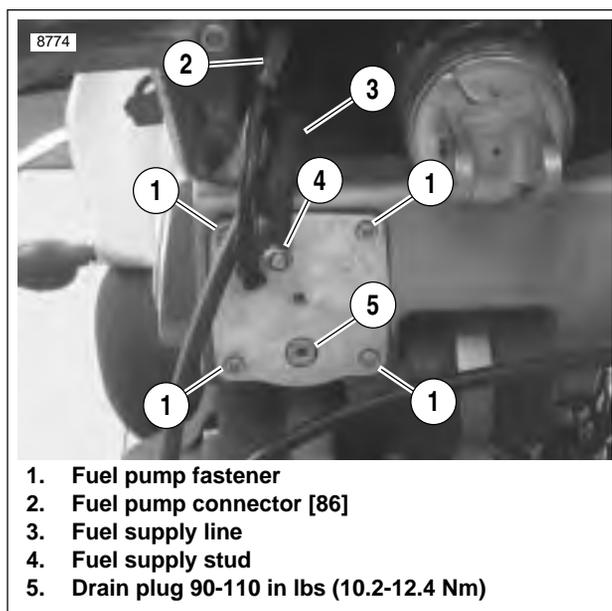

1. Fuel pump fastener
2. Fuel pump connector [86]
3. Fuel supply line
4. Fuel supply stud
5. Drain plug 90-110 in lbs (10.2-12.4 Nm)

Figure 4-61. Fuel Pump Installation

GENERAL

The vent valve opens to allow gas vapor to escape the fuel tank and either vent to the atmosphere or to the charcoal canister on California Models (EVAP-equipped) and closes to prevent gasoline from leaking out of the fuel tank if the vehicle is tipped at an extreme angle.

NOTE

The fuel tank must be drained to perform this service.

REMOVAL

1. Drain fuel tank. See [DRAINING FUEL TANK](#) under [4.25 FUEL PUMP](#).
2. Remove fuel tank vent line from vent valve.
3. See [Figure 4-63](#). Remove vent valve fasteners (5).
4. Remove bracket (4), vent valve (3) and o-ring (2) from fuel tank/frame (1).


INSTALLATION

1. See [Figure 4-63](#). Install **new** vent valve o-ring (2).
2. Install vent valve (3) into fuel tank/frame. Vent valve nozzle should be at approximately the 7:00 position.
3. Install bracket over vent valve. Slot in bracket should line up with notch in valve.
4. Loosely install vent valve fasteners (5).
5. Tighten fasteners to 39-41 **in-lbs** (4.4-4.6 Nm).
6. Connect fuel tank vent line to vent valve.
7. Install airbox. See [4.30 AIRBOX](#).
8. Install intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
9. Connect negative battery cable. Tighten battery terminal hardware to 72-96 **in-lbs** (8-11 Nm).

WARNING


After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

10. Install seat. See [2.38 SEAT](#).

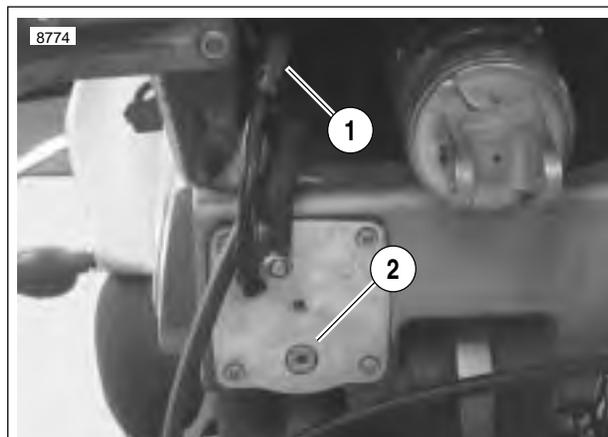

1. Fuel pump connector [86]
2. Fuel pump drain plug

Figure 4-62. Fuel Pump Drain Screw (swingarm removed for illustration)

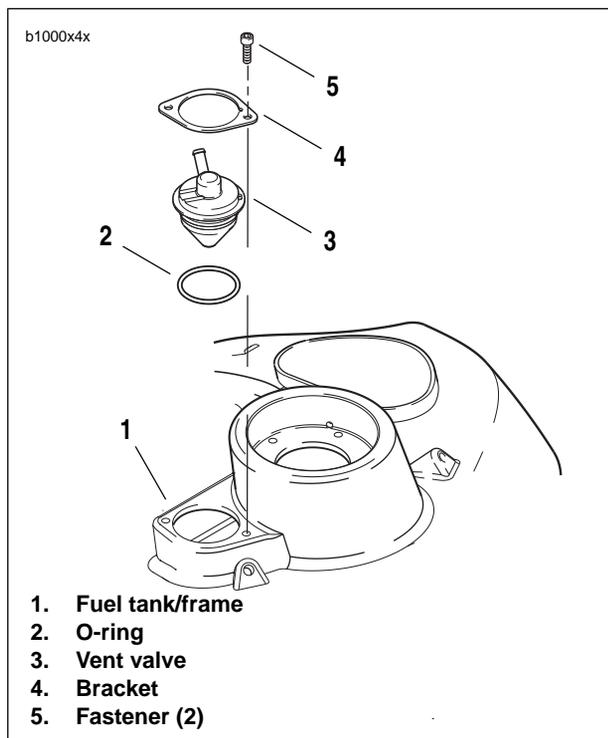

1. Fuel tank/frame
2. O-ring
3. Vent valve
4. Bracket
5. Fastener (2)

Figure 4-63. Fuel Tank Vent Valve

REMOVAL

NOTE

The fuel tank must be drained to perform this service.

1. Drain fuel tank. See [DRAINING FUEL TANK](#) under 4.25 [FUEL PUMP](#).
2. Remove fuel filler cap.
3. See [Figure 4-65](#). Remove fasteners (4) securing fuel cap retaining ring (3) to fuel filler neck (1).
4. Remove fuel cap retaining ring and o-ring (2). Discard o-ring.

INSTALLATION

1. Coat **new** o-ring (2) with thin film of clean engine oil.
2. Place o-ring into groove in underside of fuel cap retaining ring (3).

NOTE

Be sure o-ring remains in groove of fuel cap retaining ring during installation.

3. Insert fuel cap retaining ring into fuel filler neck.
4. Install fasteners (4). Tighten to 17-70 **in-lbs** (1.9-7.9 Nm).
5. Install fuel filler cap.

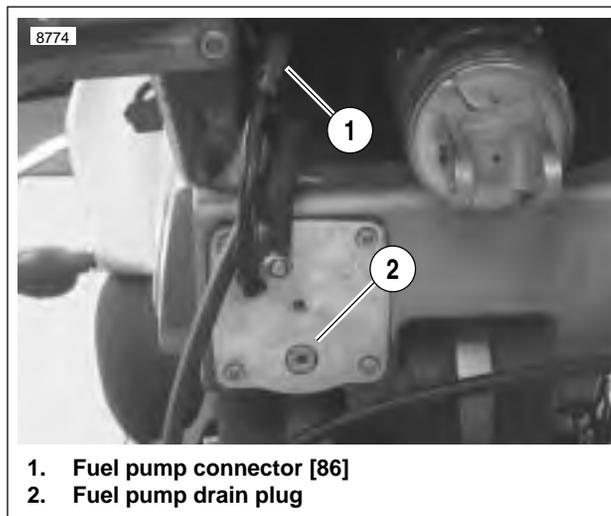


Figure 4-64. Fuel Pump Drain Screw (swingarm removed for illustration)

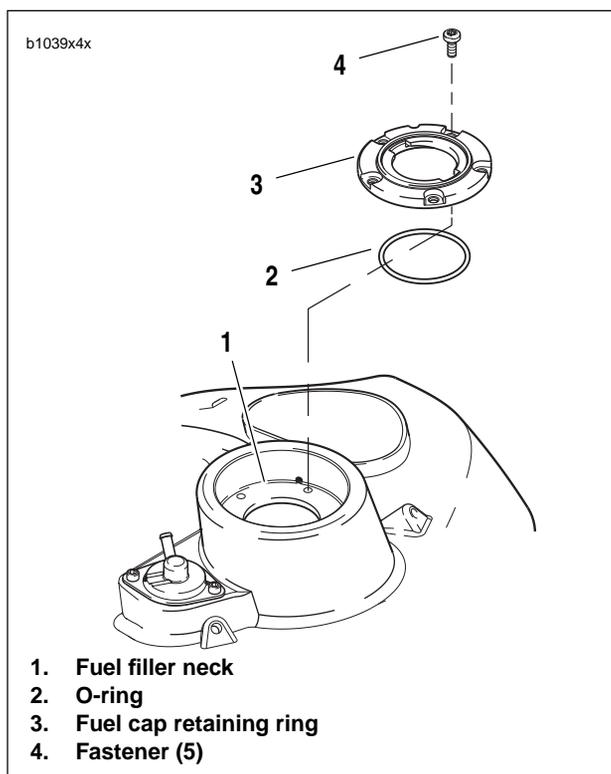


Figure 4-65. Fuel Cap Retaining Ring

GENERAL

See [Figure 4-67](#). The throttle body consists of the following components:

- Fuel supply fitting.
- Idle speed adjustment screw.
- Cable bracket.
- Throttle position sensor.
- Throttle lever.

REMOVAL

WARNING

The gasoline in the fuel supply line downstream of the fuel pump is under high pressure (49 psi [338 kPa]). To avoid an uncontrolled discharge or spray of gasoline, always purge the system of high pressure gas before servicing throttle body. Gasoline is extremely flammable and highly explosive. Inadequate safety precautions could result in death or serious injury.

1. Purge the fuel supply line of high pressure gasoline.
 - a. See [Figure 4-66](#). Disconnect the 4-place fuel pump connector [86]. Connector is located on the left side, above the fuel pump.
 - b. With the motorcycle in neutral, start the engine and allow vehicle to run.
 - c. When the engine stalls, press the starter button for 3 seconds to remove any remaining fuel from fuel line.
 - d. Reconnect fuel pump connector.
2. Label and detach throttle cables. See [2.23 THROTTLE CONTROL](#).
3. See [Figure 4-69](#). On California models, pull EVAP hose from fitting (1).
4. Rotate engine for service. See [3.3 ENGINE ROTATION FOR SERVICE](#).

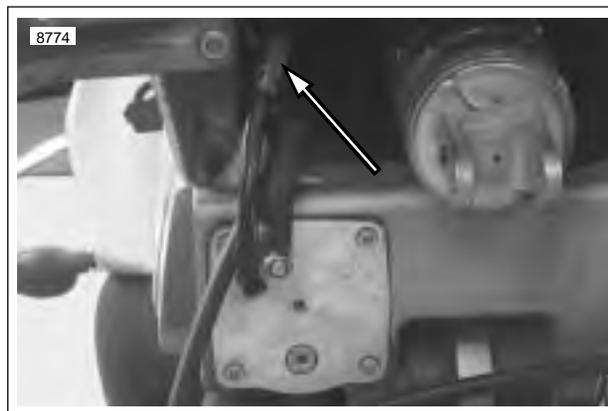


Figure 4-66. Fuel Pump connector [86] (swingarm removed for illustration)

1. Front fuel injector
2. Rear fuel injector
3. Fuel rail fastener (2)
4. Fuel rail
5. Throttle position sensor
6. Throttle position sensor fastener (2)
7. Washer
8. Velocity stack
9. Throttle body 45mm
10. Velocity stack fastener (2)
11. Ring seal
12. Intake manifold
13. Intake flange fastener (2)
14. Intake flange (2)
15. Intake seal (2)
16. Intake flange fastener (2, socket)


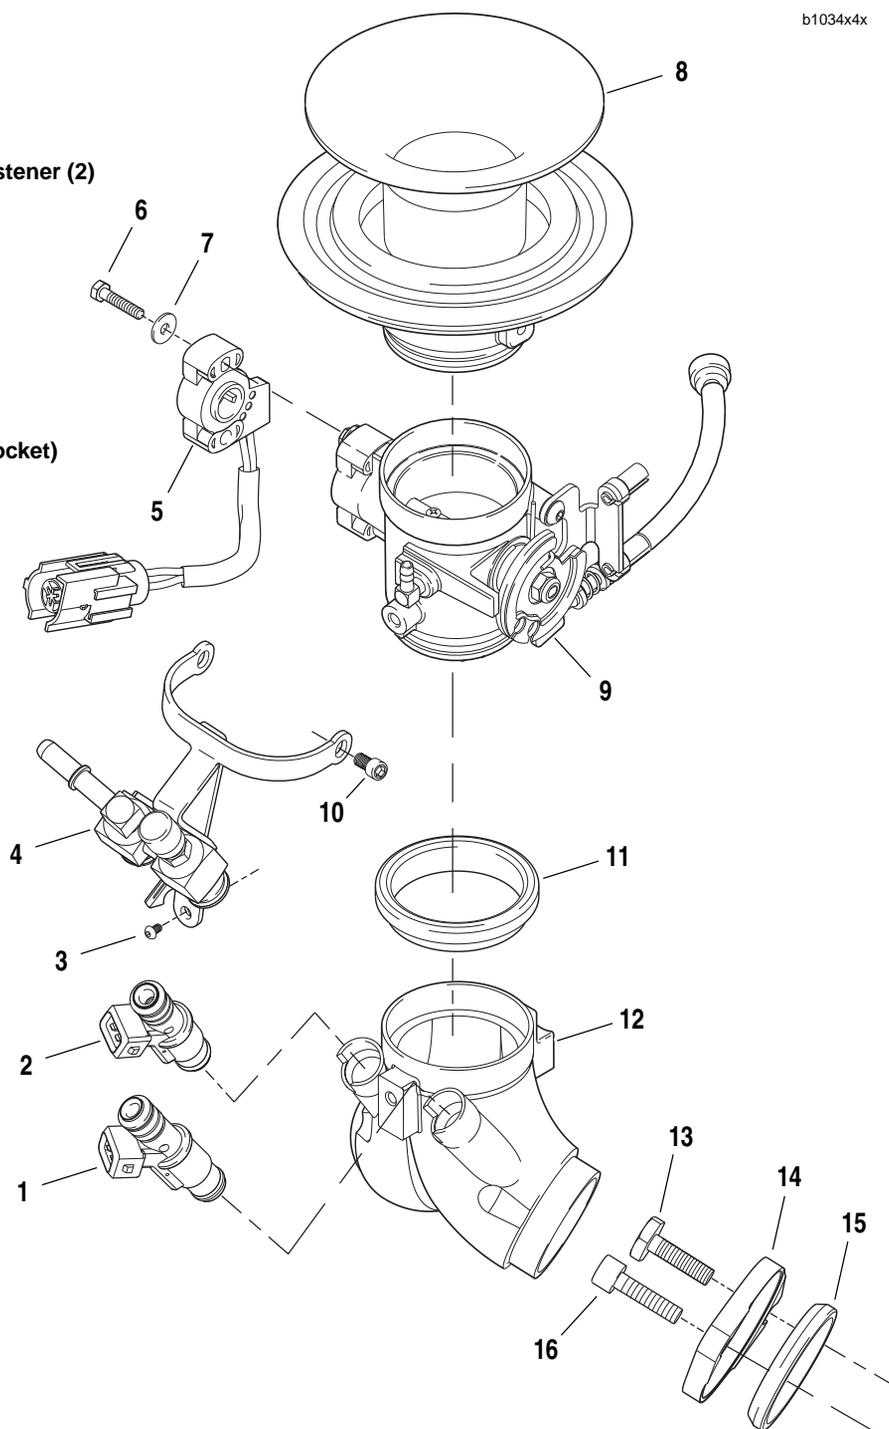


Figure 4-67. Throttle Body/Intake Manifold Assembly

b0063

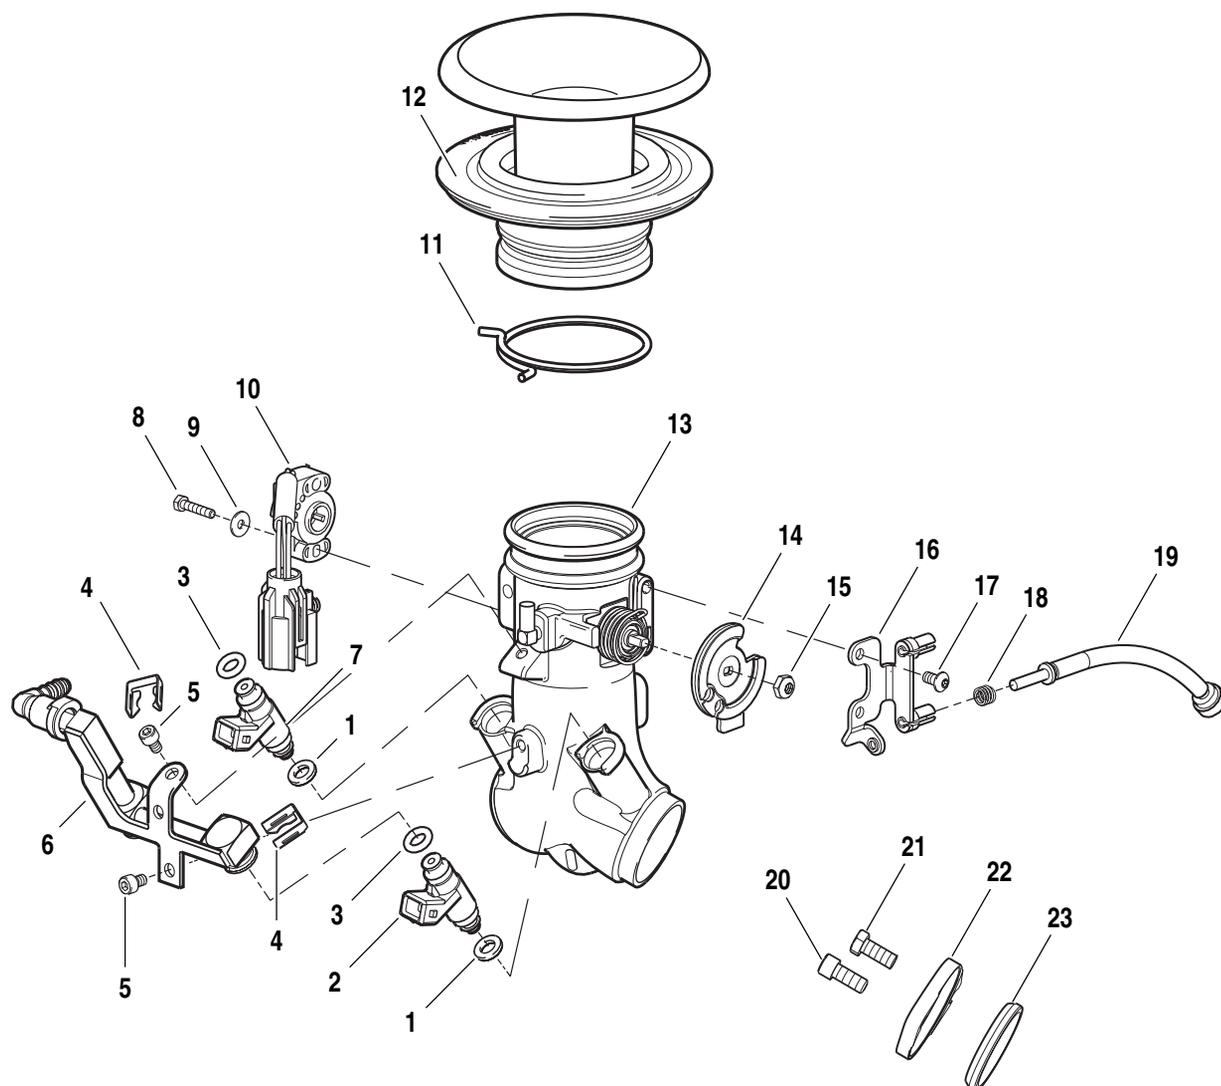

- | | |
|----------------------------------|---|
| 1. O-ring, fuel injector, outlet | 13. Throttle body manifold assembly |
| 2. Fuel Injector, front | 14. Throttle lever assembly |
| 3. O-ring, fuel injector, inlet | 15. Nylock |
| 4. Clip, injector (2) | 16. Cable Bracket |
| 5. Screw (2) | 17. Screw (2) |
| 6. Fuel Rail | 18. Spring, idle adjuster |
| 7. Fuel injector, rear | 19. Idle adjuster |
| 8. Screw (2) | 20. Bolt (2) |
| 9. Washer, flat (2) | 21. Bolt (2) |
| 10. Throttle position sensor | 22. Mounting flange, intake (1 front, 1 rear) |
| 11. Clamp, wire spring, 49mm | 23. Seal, intake manifold (2) |
| 12. Velocity stack, 49mm | |

Figure 4-68. One Piece Throttle Body/Intake Manifold Assembly (XB12 Model)

5. Remove assembly from motorcycle.
 - a. See [Figure 4-70](#). On primary cover side, loosen but do not remove the two front and rear intake flange fasteners (2).
 - b. Remove fastener (1) holding manifold to engine mount.
 - c. See [Figure 4-71](#). On gearcase cover side, remove both intake flange fasteners from cylinder heads.
 - d. Slide the throttle body and manifold assembly through top of bike frame.
6. See [Figure 4-67](#). Remove intake flanges (14) from manifold. Remove and discard seals (15).

REPAIR

Throttle Position Sensor

See [4.23 THROTTLE POSITION SENSOR](#) for removal, installation and calibration information.

Intake Manifold

1. See [Figure 4-72](#). Remove upper fuel rail fastener (1).
2. See [Figure 4-67](#). Separate intake manifold (12) from throttle body (9). Discard ring seal (11).
3. Install **new** ring seal on intake manifold.
4. Install intake manifold on throttle body.
5. See [Figure 4-72](#). Apply a drop of LOCTITE THREAD-LOCKER 222 (purple) to threads of fuel rail fastener (1).
6. Install fastener. Tighten to 24-28 **in-lbs** (2.7-3.2 Nm).

Fuel Injectors

1. Remove throttle body. See [REMOVAL](#) in this section.
2. Separate fuel rail assembly from intake manifold.
 - a. See [Figure 4-72](#). Remove both injector clips (4).
 - b. Remove fuel rail fasteners (1, 6) that hold the fuel rail to the throttle body and manifold.
 - c. Separate fuel rail from injectors (2, 5) by gently rocking the fuel rail and pulling it away from the injectors.
3. Remove fuel injectors (2, 5) from manifold by gently rocking and pulling it away from the manifold.

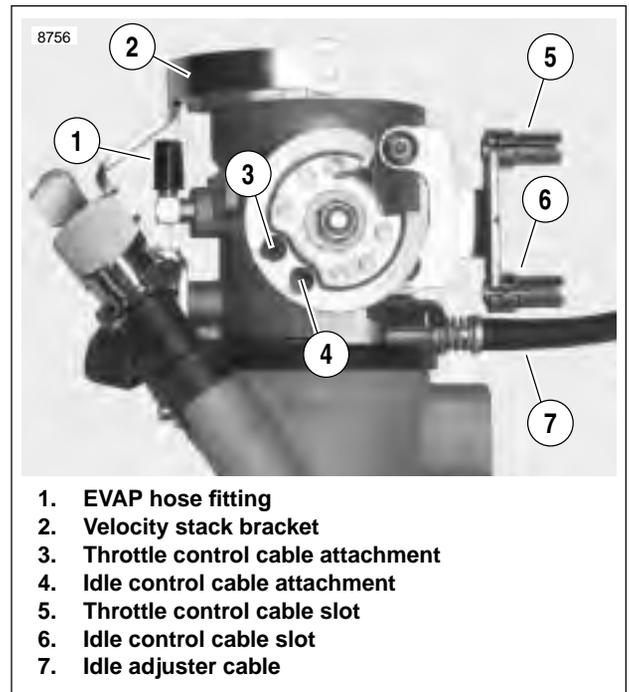


Figure 4-69. Throttle Cable Bracket (typical)

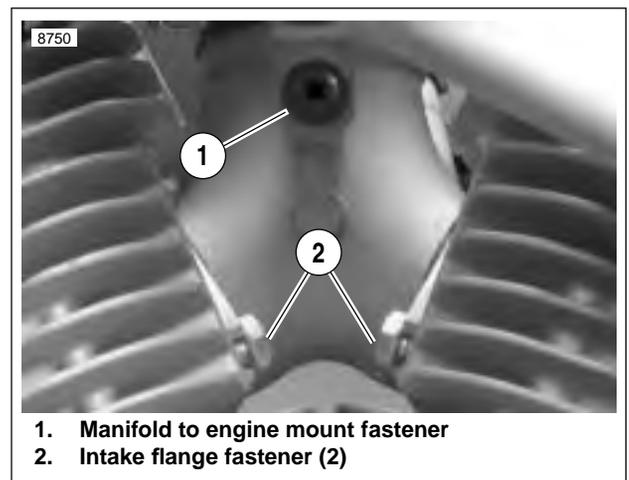


Figure 4-70. Intake Manifold (primary side)

WARNING

Do not use any injector that has damaged or deformed O-rings. Damaged O-rings may leak gasoline. Gasoline is extremely flammable and highly explosive. Use of damaged O-rings could result in death or serious injury.

4. Inspect all injector O-rings for cuts, tears or general deterioration. Replace injector if O-rings have been damaged or have taken a definite set.
5. Apply a thin coat of clean engine oil to top and bottom injector O-rings.
6. See [Figure 4-72](#). Install fuel injectors.
 - a. Install both injectors (2, 5) into intake manifold.
 - b. Press the fuel rail assembly (3) onto the top of the injectors.
 - c. Apply a drop of LOCTITE THREADLOCKER 222 (purple) to threads of fuel rail fasteners (1, 6).
 - d. Secure the fuel rail to the throttle body and manifold with fasteners. Tighten to 24-28 **in-lbs** (2.7-3.2 Nm).
7. Snap the injector clips (4) over the flange on the fuel rail outlet and into the top groove in the injector.

Testing

1. Remove intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
2. Remove airbox cover. See [4.30 AIRBOX](#).
3. Conduct test.
 - a. Turn key ON for two seconds.
 - b. Turn key OFF for two seconds.
 - c. Repeat Steps A and B five consecutive times.
 - d. Open throttle, replace fuel injectors if there is any evidence of raw fuel in throttle body manifold.
4. Install airbox cover. See [4.30 AIRBOX](#).
5. Install intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).

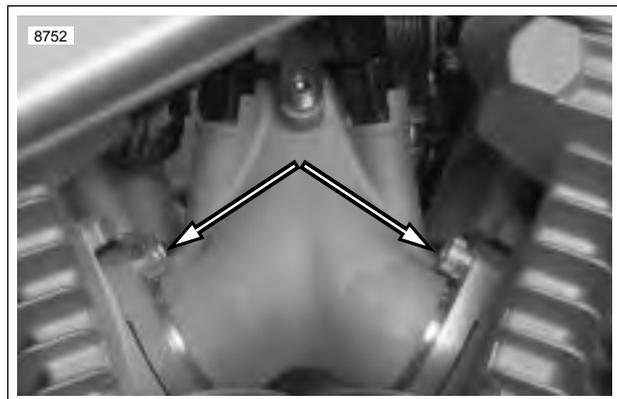


Figure 4-71. Intake Manifold Fasteners (gearcase cover side)

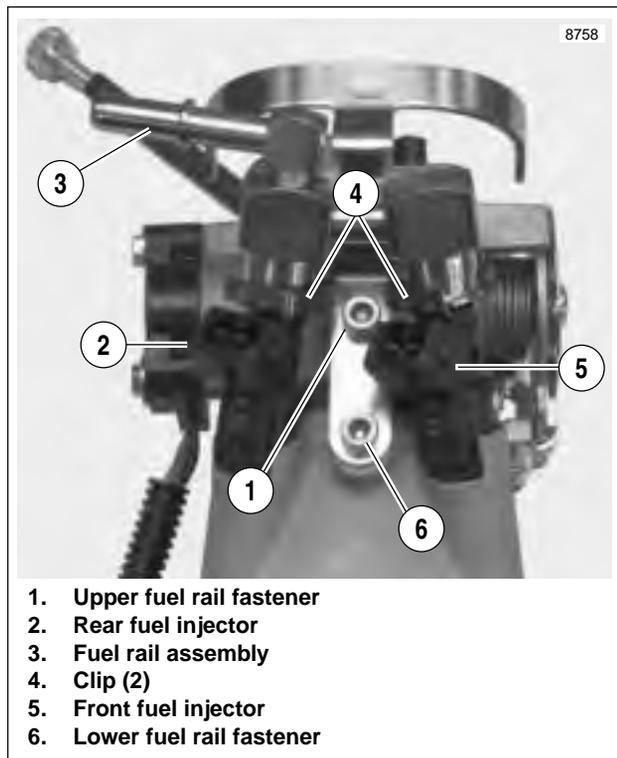


Figure 4-72. Fuel Injectors

INSTALLATION

1. See [Figure 4-73](#). Install front and rear intake flanges onto manifold with the counterbore facing out. Each intake flange is labeled and the pieces are not interchangeable.
2. Place a **new** seal in each intake flange with the beveled side against the counterbore.
3. Install throttle body/intake manifold assembly.
 - a. See [Figure 4-70](#). Slide the assembly toward installed position. Manifold should slide over fasteners (2) on primary cover side of engine.
 - b. Align holes in intake flanges with those in cylinder heads and start screws.
 - c. Make sure throttle body is centered between cylinders and tighten all intake flange screws to 96-120 **in-lbs** (10.8-13.6 Nm).
4. Rotate engine into installed position. See [3.3 ENGINE ROTATION FOR SERVICE](#).
5. Attach throttle cables. See [2.23 THROTTLE CONTROL](#).
6. Attach wiring.
 - a. Injector cables are tagged F(ront) and R(ear) for ease of assembly. Push connector halves together until latches “click.” Grooves in female connector must align with the tabs in male housing.
 - b. Connect throttle position sensor by pushing the connector halves together. Slots on female connector must fully engage tabs on male connector housing.
7. Connect EVAP hose to port at bottom of throttle body (California models only).
8. Calibrate throttle position sensor if removed or replaced. See [4.23 THROTTLE POSITION SENSOR](#).
9. Install airbox. See [4.30 AIRBOX](#).
10. Check throttle cable adjustment. See [2.23 THROTTLE CONTROL](#).

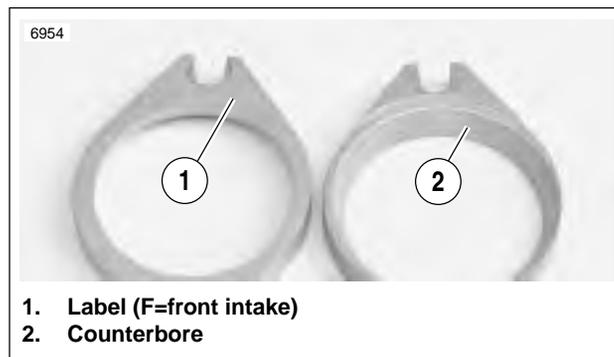


Figure 4-73. Intake Flanges

GENERAL

⚠ DANGER

Propane is an extremely flammable liquid and vapor. Vapor may cause flash fire. Keep away from heat, sparks and flame. Keep container closed. Use only with adequate ventilation.

⚠ WARNING

Read all directions and warnings on propane bottle. Failure to follow all directions and warnings on bottle could result in death or serious injury.

- To prevent false readings, keep airbox cover installed when performing test.
- Do not direct propane into air scoop, false readings will result.

LEAK TESTER

Parts List

- Standard 14oz. propane cylinder.
- SNAP-ON YA7148 Propane Enrichment Kit.
- 12 in. (304 mm) long-1/4 in. (6mm) diameter copper tubing.

Tester Assembly

1. Cut rubber hose from kit to 18 in. (457 mm) in length.
2. See [Figure 4-74](#). Flatten one end of copper tube to form a nozzle.
3. Insert round side of copper tube into end of tubing.


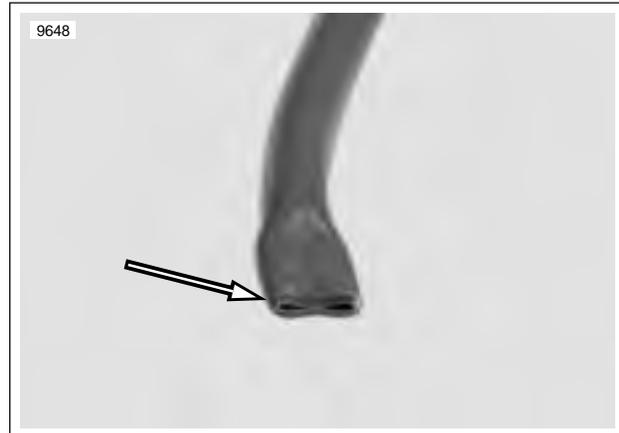


Figure 4-74. Nozzle

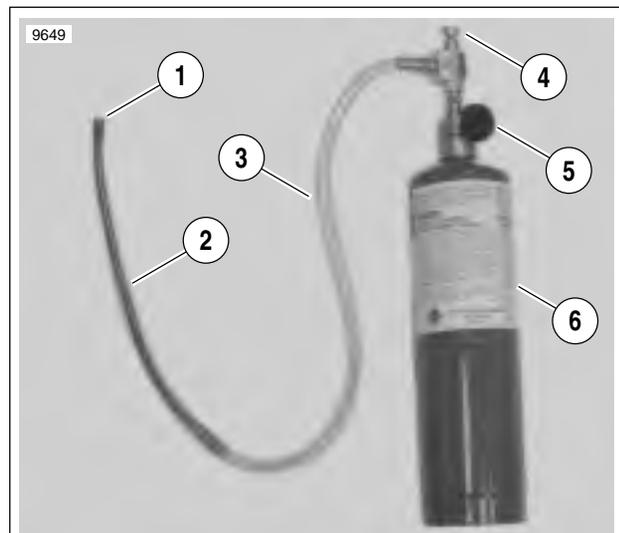

1. Nozzle
2. Copper tube
3. Hose
4. Valve
5. Knob
6. Propane bottle

Figure 4-75. Leak Tester

INTAKE LEAK TEST

1. Start engine.
2. Warm engine to operating temperature.
3. See [Figure 4-75](#). Turn knob (5) counterclockwise to open propane bottle (6).



Propane is an extremely flammable liquid and vapor. Vapor may cause flash fire. Keep away from heat, sparks and flame. Keep container closed. Use only with adequate ventilation.

NOTE

Do not direct propane stream toward front of engine. If propane enters air scoop a false reading will be obtained.


4. Aim nozzle toward possible sources of leak such as fuel injectors and intake tract.
5. Push valve (4) to release propane. Tone of engine will change when propane enters source of leak.

REMOVAL

1. Remove intake cover assembly. [2.34 INTAKE COVER ASSEMBLY](#).
2. See [Figure 4-76](#). Remove fuel vent tube (3) from fuel vapor valve (4) and groove on top of airbox cover (2).
3. Unlatch six lock tabs (1) and remove airbox cover from baseplate.
4. Remove the filter element from baseplate. Inspect and replace if necessary.
5. See [Figure 4-78](#). Remove air box baseplate.
 - a. Remove four fasteners (1) and raise baseplate (4).
 - b. Disconnect longer breather hose from baseplate (pull out from bottom).
 - c. Disconnect shorter breather hose from PVC valve located on top of rear cylinder.
 - d. Remove IAT sensor (2) from grommet on bottom of baseplate.
 - e. Lift baseplate off of frame, carefully disengaging baseplate from rubber sealing ring (8) on velocity stack (7).
 - f. Remove baseplate from motorcycle.


INSPECTION

1. Inspect air cleaner. Check for dirt, torn filter material and general condition. Replace if necessary.
2. Inspect inside of backing plate and cover. Remove any dirt or debris.
3. Inspect condition of velocity stack and velocity stack sealing ring. If torn or damaged, replace.
4. Inspect IAT sensor and replace if faulty. See [4.22 INTAKE AIR TEMPERATURE SENSOR](#)
5. Inspect breather hoses, intake air temperature sensor grommet and baseplate gasket (3). Replace as necessary.

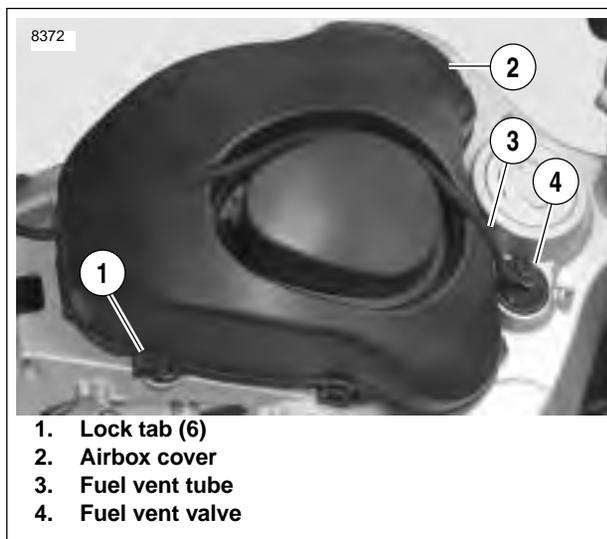

1. Lock tab (6)
2. Airbox cover
3. Fuel vent tube
4. Fuel vent valve

Figure 4-76. Airbox Cover (XB9R)

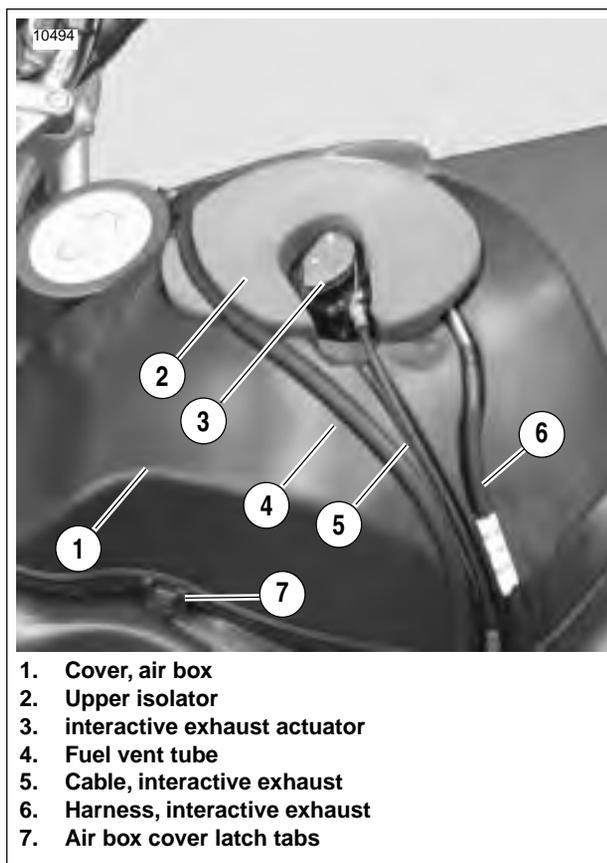

1. Cover, air box
2. Upper isolator
3. interactive exhaust actuator
4. Fuel vent tube
5. Cable, interactive exhaust
6. Harness, interactive exhaust
7. Air box cover latch tabs

Figure 4-77. Air box cover, Fuel Vent Tube and Fuel Vapor Valve (XB12R)

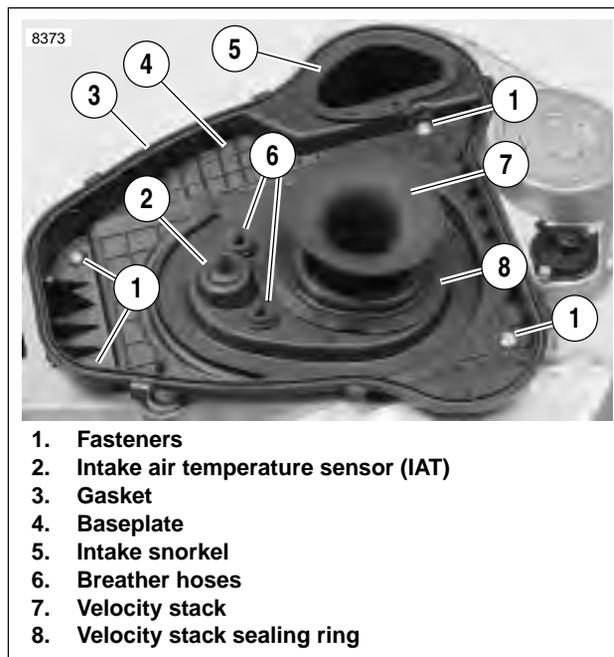


Figure 4-78. Baseplate

INSTALLATION

1. See [Figure 4-78](#). Hold baseplate above mounting position.
2. Insert IAT sensor into grommet on baseplate from underside.

NOTE

A small amount of soapy water applied to the inside diameter of grommet will make breather hose installation easier.

CAUTION

In next step, be sure breather hoses do not extend past Intake air temperature sensor tower. If hoses extend past tower, damage to sensor may occur.

3. Insert longer breather hose into right baseplate grommet from underside.
4. Attach shorter breather hose onto crankcase breather located on top of rear cylinder.
5. Carefully lower baseplate into mounting position. Ensure rubber sealing ring on velocity stack completely engages baseplate. Baseplate should be sandwiched between upper and lower rubber sealing rings.

6. Install baseplate to frame with four fasteners and washers (5). Tighten fasteners to 84-120 in-lbs (9.5-13.6 Nm).
7. Position air box filter on baseplate.
8. Install airbox to baseplate and latch six latches to secure.
9. Route vent hose through groove on airbox to vent valve.

NOTE

For XB12R model see 7.6 INTERACTIVE EXHAUST SYSTEM (XB12R).

10. Install intake cover assembly. See 2.34 INTAKE COVER ASSEMBLY.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

11. Install seat. See 2.38 SEAT.

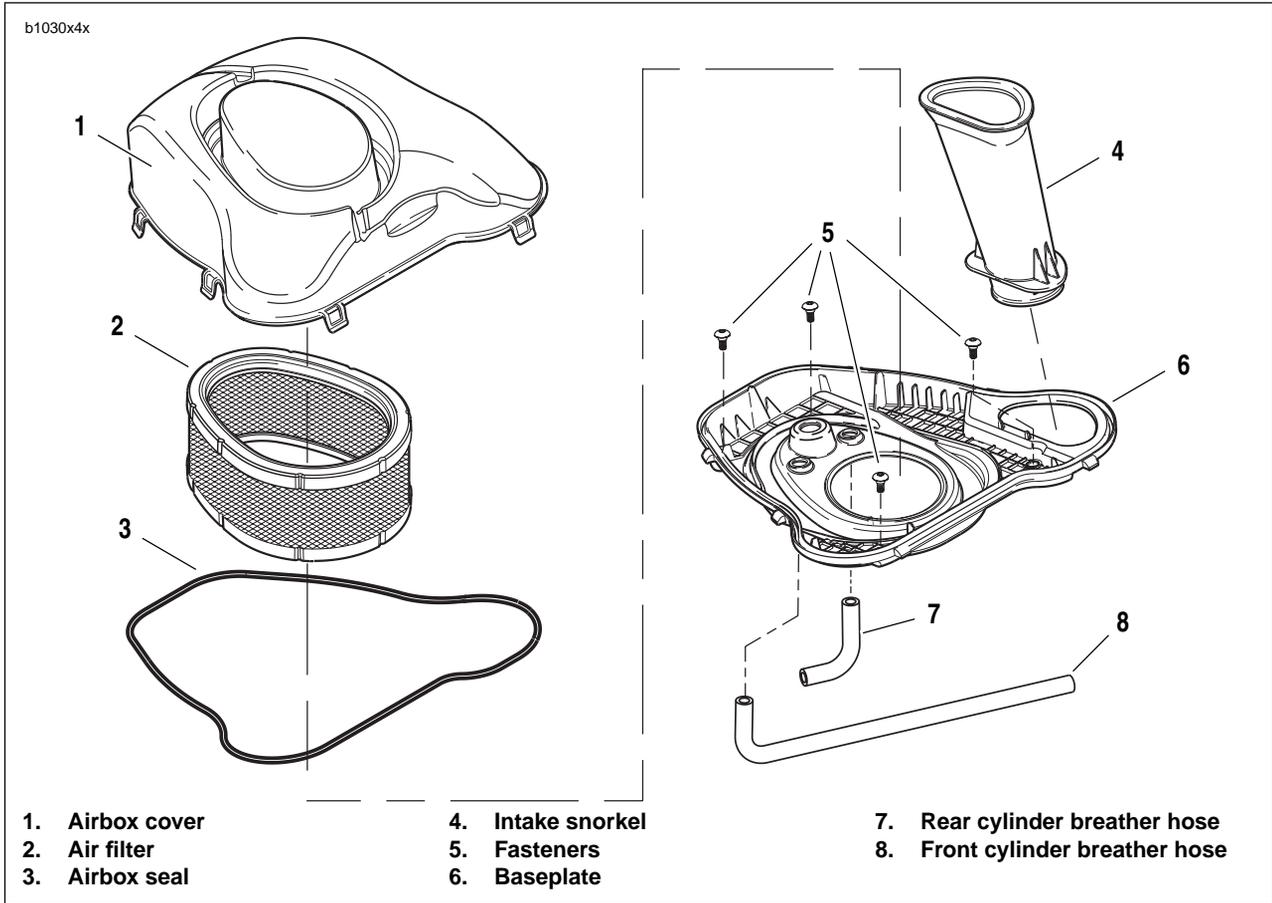


Figure 4-79. Airbox

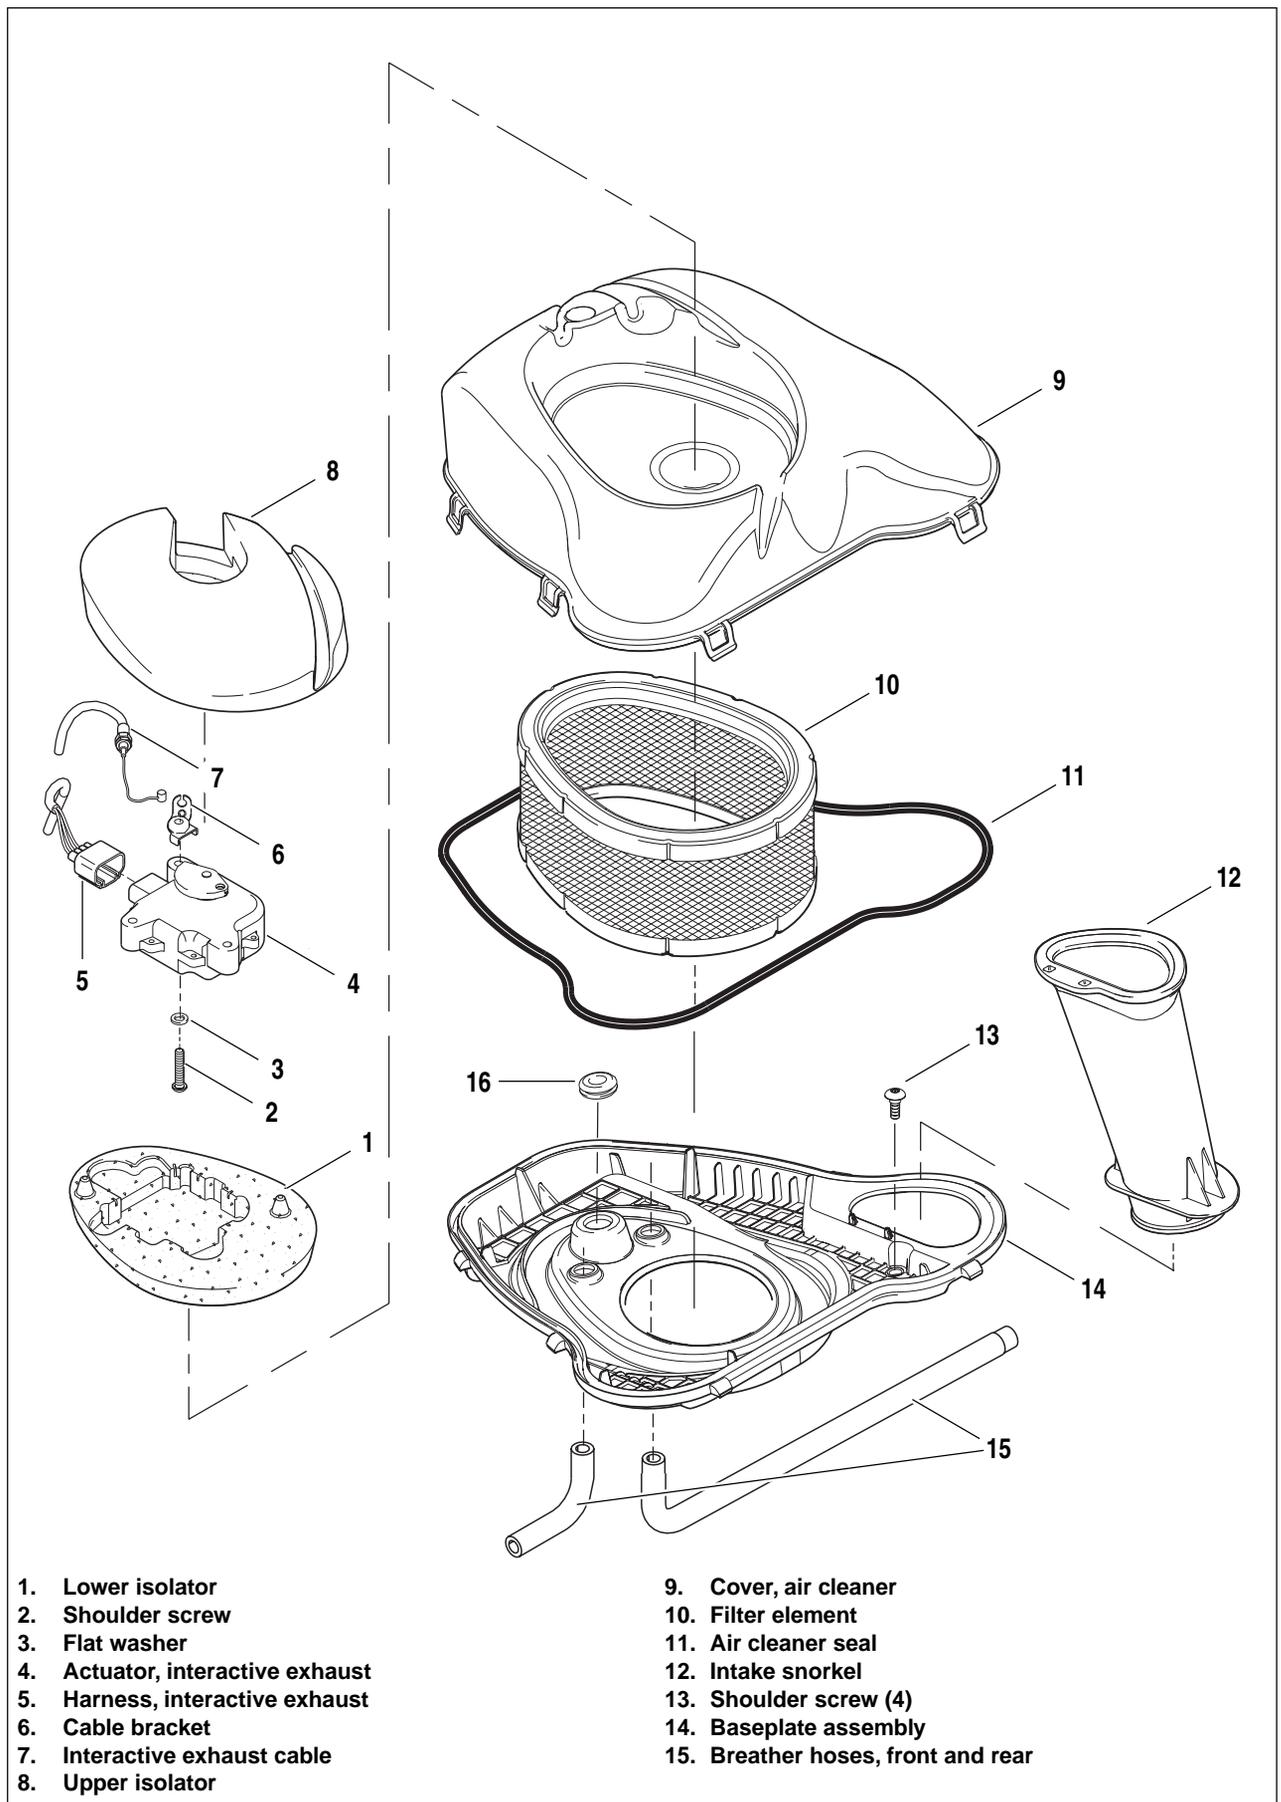


Figure 4-80. Air Cleaner Assembly (XB12) with Interactive Exhaust Components

GENERAL

Buell motorcycles sold in the state of California are equipped with an evaporative (EVAP) emissions control system. The EVAP system prevents fuel hydrocarbon vapors from escaping into the atmosphere and is designed to meet the California Air Resource Board (CARB) regulations in effect at the time of manufacture.

The EVAP functions in the following manner:

- Hydrocarbon vapors in the fuel tank are directed through the vent valve and stored in the carbon canister. If the vehicle is tipped at an abnormal angle, the vent valve closes to prevent liquid gasoline from leaking out of the fuel tank through the fuel tank vent hose.
- When the engine is running, manifold venturi negative pressure (vacuum) slowly draws off the hydrocarbon vapors from the carbon canister through the canister vent hose. These vapors pass through the throttle body manifold and are burned as part of normal combustion in the engine.

TROUBLESHOOTING

WARNING

Verify that the evaporative emissions system hoses do not contact hot exhaust or engine parts. The hoses contain flammable vapors that can be ignited if damaged, which could result in death or serious injury.

The system has been designed to operate with a minimum of maintenance. Check that all hoses are properly routed and connected and are not pinched or kinked.

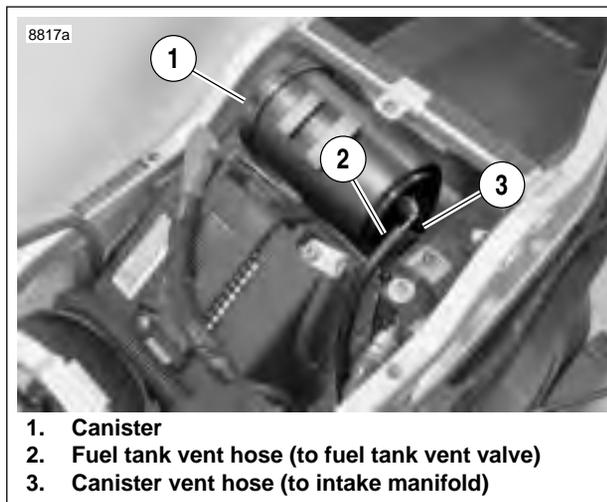


Figure 4-81. Carbon Canister Installation.

REMOVAL

Vent Valve

1. Remove vent valve. See [4.26 FUEL TANK VENT VALVE](#).
2. If necessary, label fuel tank vent hose at canister fitting and remove.

Canister

1. Remove upper tail body work. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).
2. See [Figure 4-81](#). The canister assembly mounts behind the battery in the tail section.
3. Label and disconnect the fuel tank vent hose (2) and canister vent hose (3) from the canister.
4. See [Figure 4-83](#). Remove rear shock absorber reservoir fasteners (2). Move reservoir assembly away from canister.
5. Slide canister towards left side of vehicle to disengage from mounting plate (1).

INSTALLATION

Vent Valve

⚠ WARNING

Verify that the fuel tank vent hose does not contact hot exhaust or engine parts. The hose contains flammable vapors that can be ignited if damaged, which could result in death or serious injury.

1. Install vent valve. See [4.26 FUEL TANK VENT VALVE](#).
2. See [Figure 4-81](#). Attach fuel tank vent hose (2) to canister if disconnected.

Canister

NOTE

In next step, be sure canister hose barbs are facing left side of vehicle and barb holes are facing toward front of vehicle.

1. See [Figure 4-83](#). Slide canister into position on canister mounting plate (1).
2. Place rear shock reservoir assembly (3) into position.

NOTE

See [Figure 4-84](#). To ensure proper reservoir mounting, temporarily place upper body work onto tail section and adjust reservoir placement so adjuster screw (1) aligns with alignment hole (2).

3. See [Figure 4-83](#). Install reservoir mounting fasteners (2). Tighten fasteners to 120-144 **in-lbs** (13.6-16.3 Nm).


⚠ WARNING

Always make sure fuel hoses are seated against the component they connect to and that hose clamps are properly tightened and positioned on straight section of fitting and not on the fitting barb. Failure to comply may result in fuel leakage which could result in death or serious injury.

NOTE


The barb is the larger outside diameter portion (bump) on the fuel fitting.

4. See [Figure 4-81](#). Connect two hoses to the canister. Make sure to push hoses all the way on to carbon canister fittings.
5. Install upper tail body work. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).

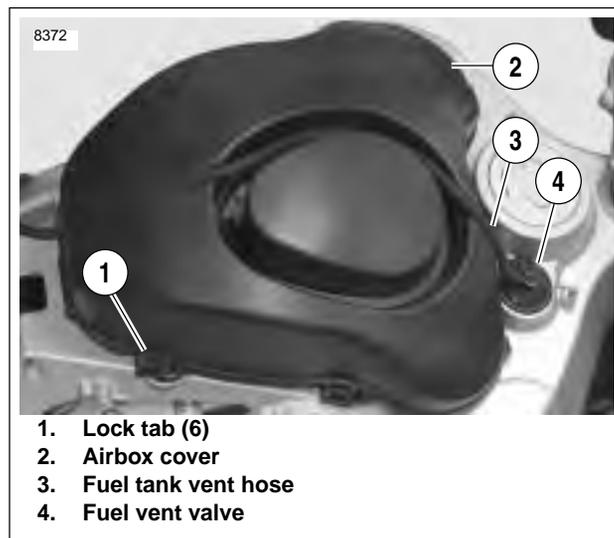


1. Lock tab (6)
2. Airbox cover
3. Fuel tank vent hose
4. Fuel vent valve

Figure 4-82. Airbox Cover

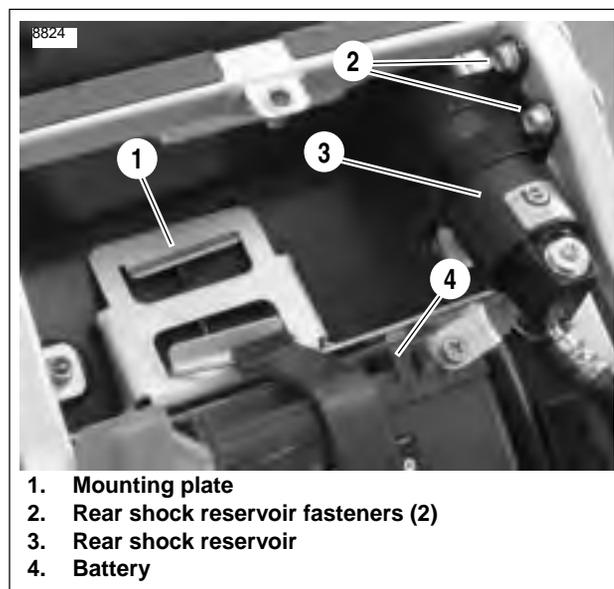

1. Mounting plate
2. Rear shock reservoir fasteners (2)
3. Rear shock reservoir
4. Battery

Figure 4-83. Carbon Canister Mounting

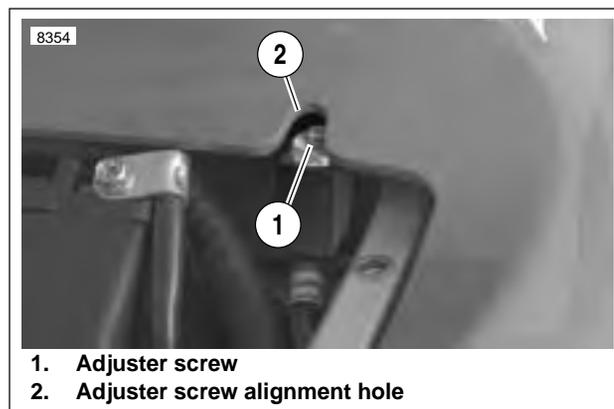

1. Adjuster screw
2. Adjuster screw alignment hole

Figure 4-84. Adjuster Screw Alignment

HOSE ROUTING

Both fuel tank and canister vent hoses are routed through notch in fan body.

NOTE

For information on vent hose routing, see [D.1 HOSE AND WIRE ROUTING](#).

⚠ WARNING

Always make sure fuel hoses are seated against the component they connect to and that hose clamps are properly tightened and positioned on straight section of fitting and not on the fitting barb. Failure to comply may result in fuel leakage which could result in death or serious injury.

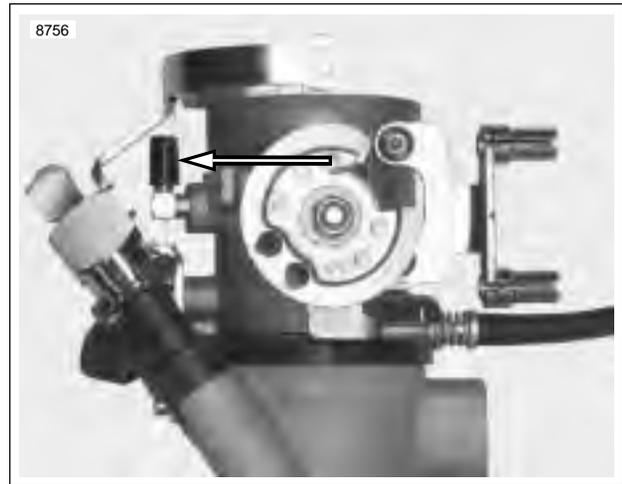


Figure 4-85. Emissions Hose Attachment, California Models Only

| SUBJECT | PAGE NO. |
|---------------------------------------|-----------------|
| 5.1 Specifications | 5-1 |
| 5.2 Electric Starter System | 5-2 |
| 5.3 Starting System Diagnosis | 5-4 |
| 5.4 Starter Activation Circuits | 5-8 |
| 5.5 Diagnostics/Troubleshooting | 5-9 |
| 5.6 Starter System Testing | 5-11 |
| 5.7 Starter | 5-12 |
| 5.8 Starter Solenoid | 5-21 |

Table 5-1. Starter Specifications

| STARTER | |
|----------------|---------------------------------|
| Free speed | 3000 RPM (min.) @ 11.5 V |
| Free current | 90 amp (max.) @ 11.5 V |
| Stall current | 400 amp (max.) @ 2.4 V |
| Stall Torque | 8 ft-lbs (11 Nm) (min.) @ 2.4 V |

Table 5-2. Service Wear Specifications

| SERVICE WEAR LIMITS | IN. | MM |
|-------------------------------|------------|-----------|
| Brush length (minimum) | 0.433 | 11.0 |
| Commutator diameter (minimum) | 1.141 | 28.981 |

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|------------------------------------|---------------------|----------|--------------|
| Starter battery positive cable nut | 60-85 in-lbs | 7-10 Nm | page 5-19 |
| Starter mounting bolts | 13-20 ft-lbs | 18-27 Nm | page 5-19 |

GENERAL

The starter is made up of an armature, field winding assembly, solenoid, drive assembly, idler gear and drive housing.

The starter motor torque is increased through gear reduction. The gear reduction consists of the drive pinion on the armature, an idler gear and a clutch gear in the drive housing. The idler gear is supported by rollers. The clutch gear is part of the overrunning clutch/drive assembly.

The overrunning clutch is the part which engages and drives the clutch ring gear. It also prevents the starter from overrunning. The field windings are connected in series with the armature through brushes and commutator segments.

Wiring Diagrams

For additional information concerning the starting system circuit, see the wiring diagram at the end of Section 7, ELECTRICAL.

Starter Relay

The starter relay is not repairable. Replace the unit if it fails.

Starter Interlock

See [7.5 STARTER INTERLOCK](#) for operation and troubleshooting information.

OPERATION

See [Figure 5-1](#). When the starter switch is pushed, the starter relay is activated and battery current flows into the pull-in winding (10) and the hold-in winding (11), to ground.

The magnetic forces of the pull-in and hold-in windings in the solenoid push the plunger (7) causing it to shift to the left. This action engages the pinion gear (1) with the clutch ring gear (13). At the same time, the main solenoid contacts (8) are closed, so battery current flows directly through the field windings (3) to the armature (4) and to ground. Simultaneously, the pull-in winding (10) is shorted.


The current continues flowing through the hold-in winding (11) keeping the main solenoid contacts (8) closed. At this point, the starter begins to crank the engine.

After the engine has started, the pinion gear (1) turns freely on the pinion shaft through the action of the overrunning clutch (12). The overrunning clutch prevents the clutch ring gear (13) (which is now rotating under power from the engine) from turning the armature (4) too fast.

When the starter switch is released, the current of the hold-in winding (11) is fed through the main solenoid contacts (8) and the direction of the current in the pull-in winding (10) is reversed. The solenoid plunger (7) is returned to its original position by the return spring, which causes the pinion gear (1) to disengage from the clutch ring gear (13).


b0164a5x

Starter at moment
starter switch is closed

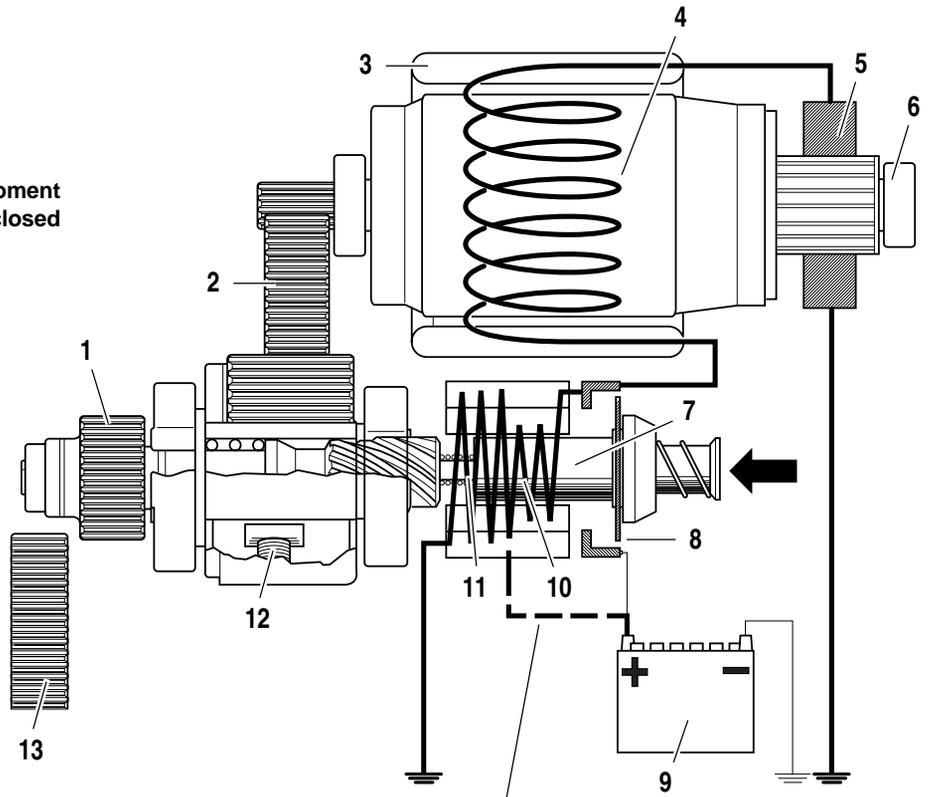

Starting circuit-see
wiring diagram

Starter during
cranking

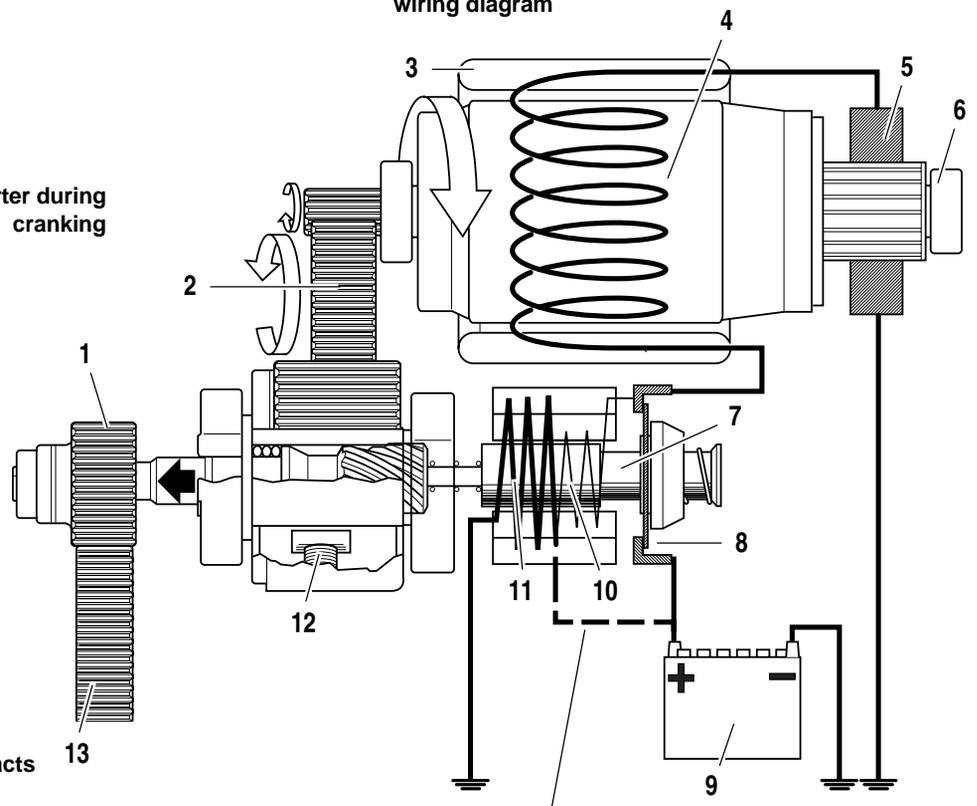

Starting circuit-see
wiring diagram

1. Pinion gear
2. Idler gear
3. Field winding
4. Armature
5. Brush
6. Ball bearing
7. Solenoid plunger
8. Main solenoid contacts
9. Battery
10. Pull-in winding
11. Hold-in winding
12. Overrunning clutch
13. Clutch ring gear

Figure 5-1. Starter Operation

DIAGNOSTICS

Diagnostic Notes

The reference numbers below correlate with the circled numbers on the starter system flow charts.

1. See [VOLTAGE DROPS](#) under [5.5 DIAGNOSTICS/TROUBLESHOOTING](#).
2. Remove starter motor and connect jumper wires as described in [FREE RUNNING CURRENT DRAW TEST](#) under [5.7 STARTER](#).
3. Take measurement with connector mated.
4. See [DIAGNOSTICS](#) in [7.5 STARTER INTERLOCK](#).
5. See [STARTER CURRENT DRAW TEST](#) under [5.6 STARTER SYSTEM TESTING](#).
6. See [FREE RUNNING CURRENT DRAW TEST](#).



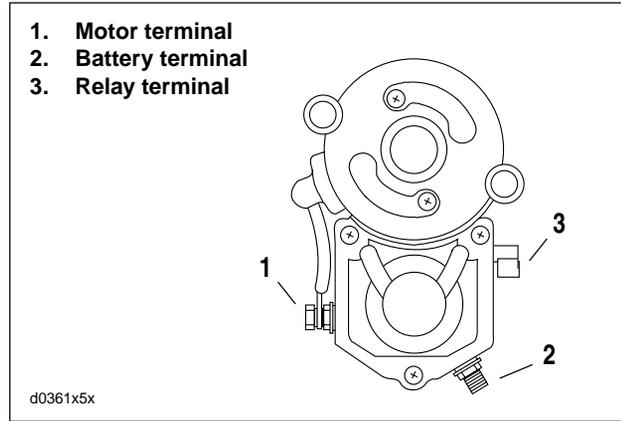


Figure 5-2. Starter Terminals


Starter Test 1

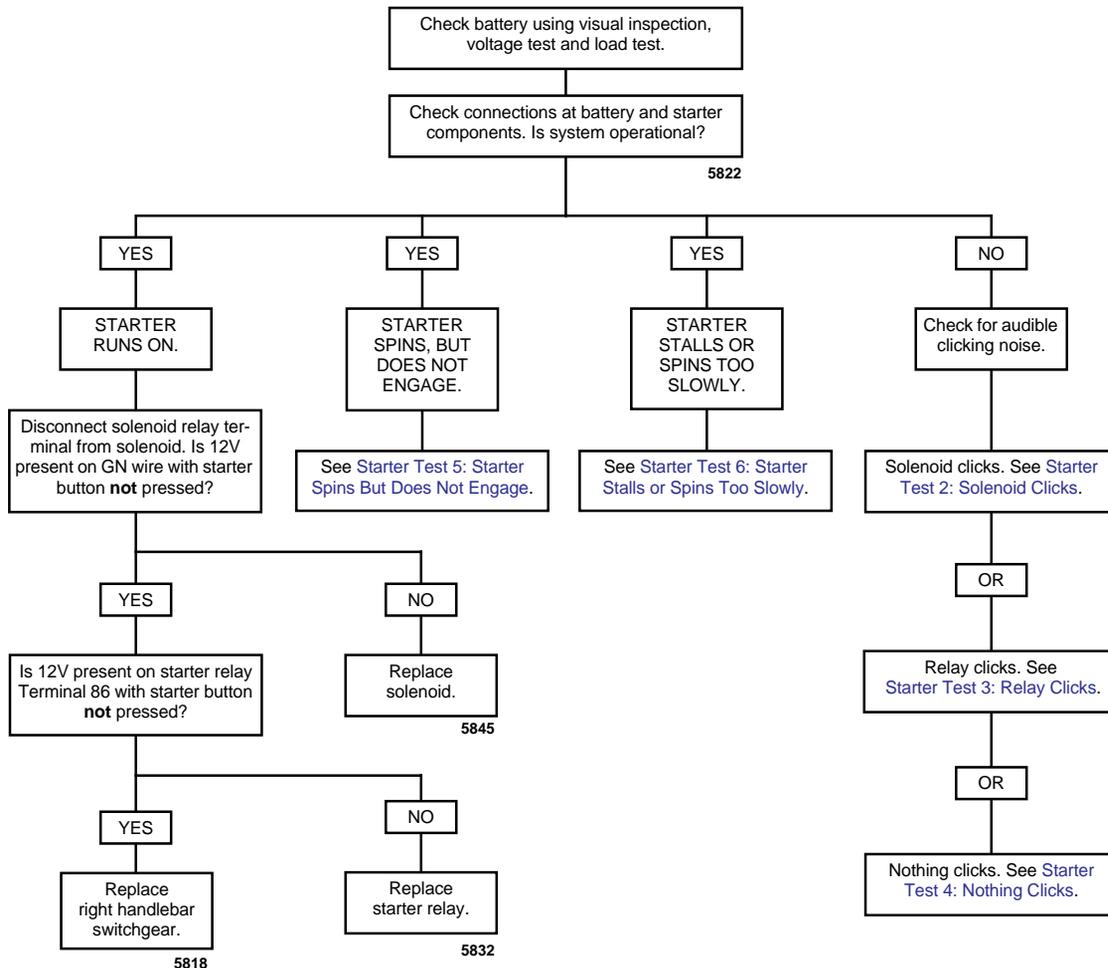


Starter Test 2: Solenoid Clicks

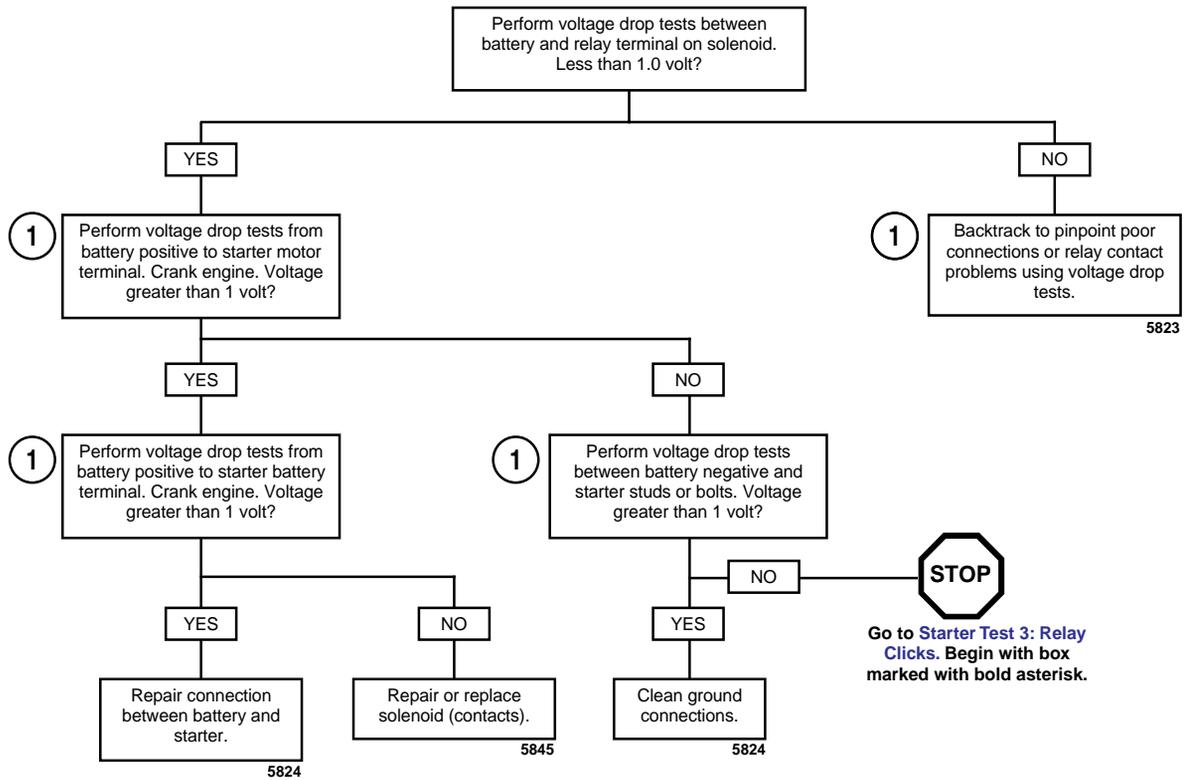


Starter Test 3: Relay Clicks

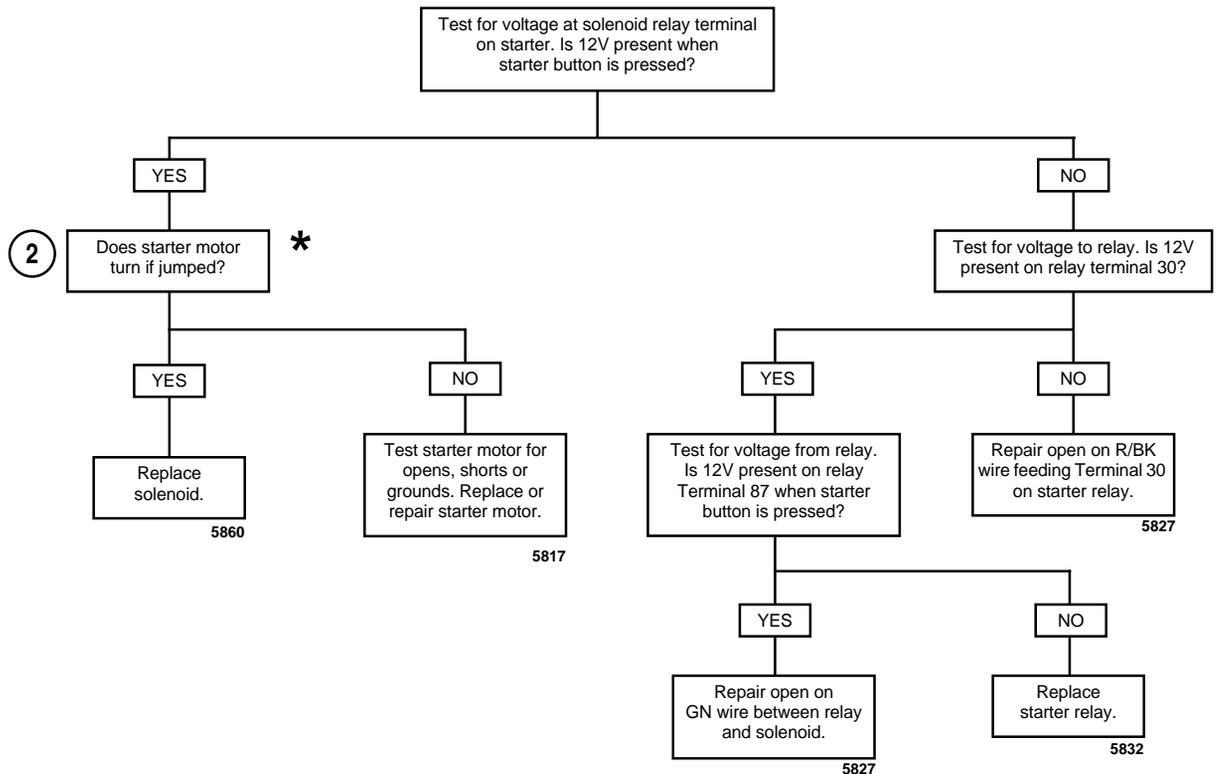


Starter Test 4: Nothing Clicks

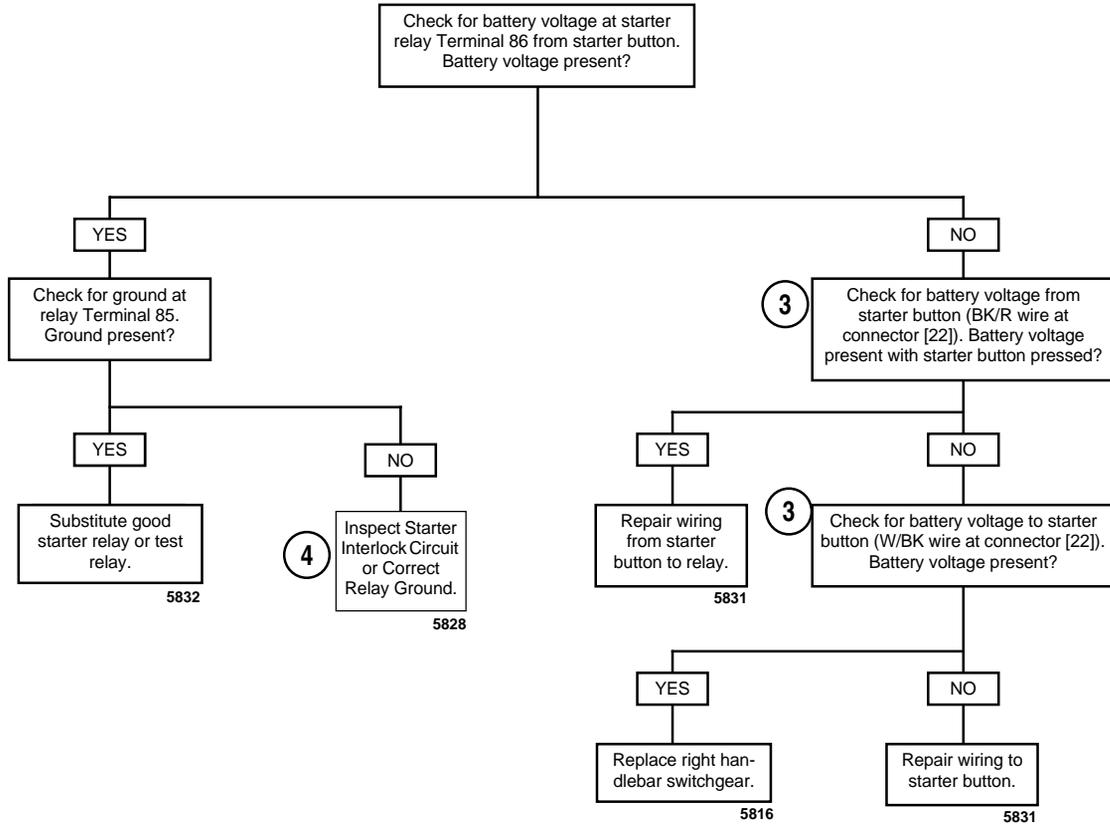

Starter Test 5: Starter Spins But Does Not Engage

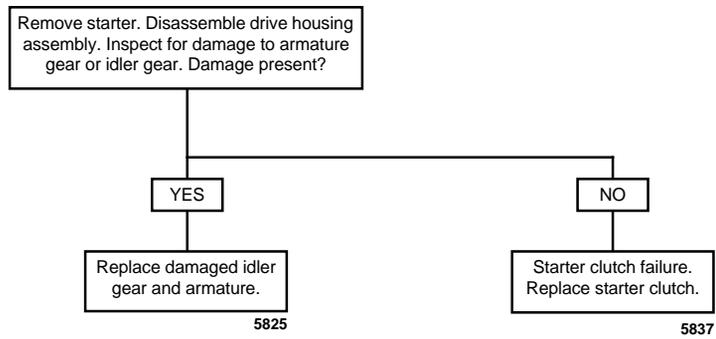

Starter Test 6: Starter Stalls or Spins Too Slowly

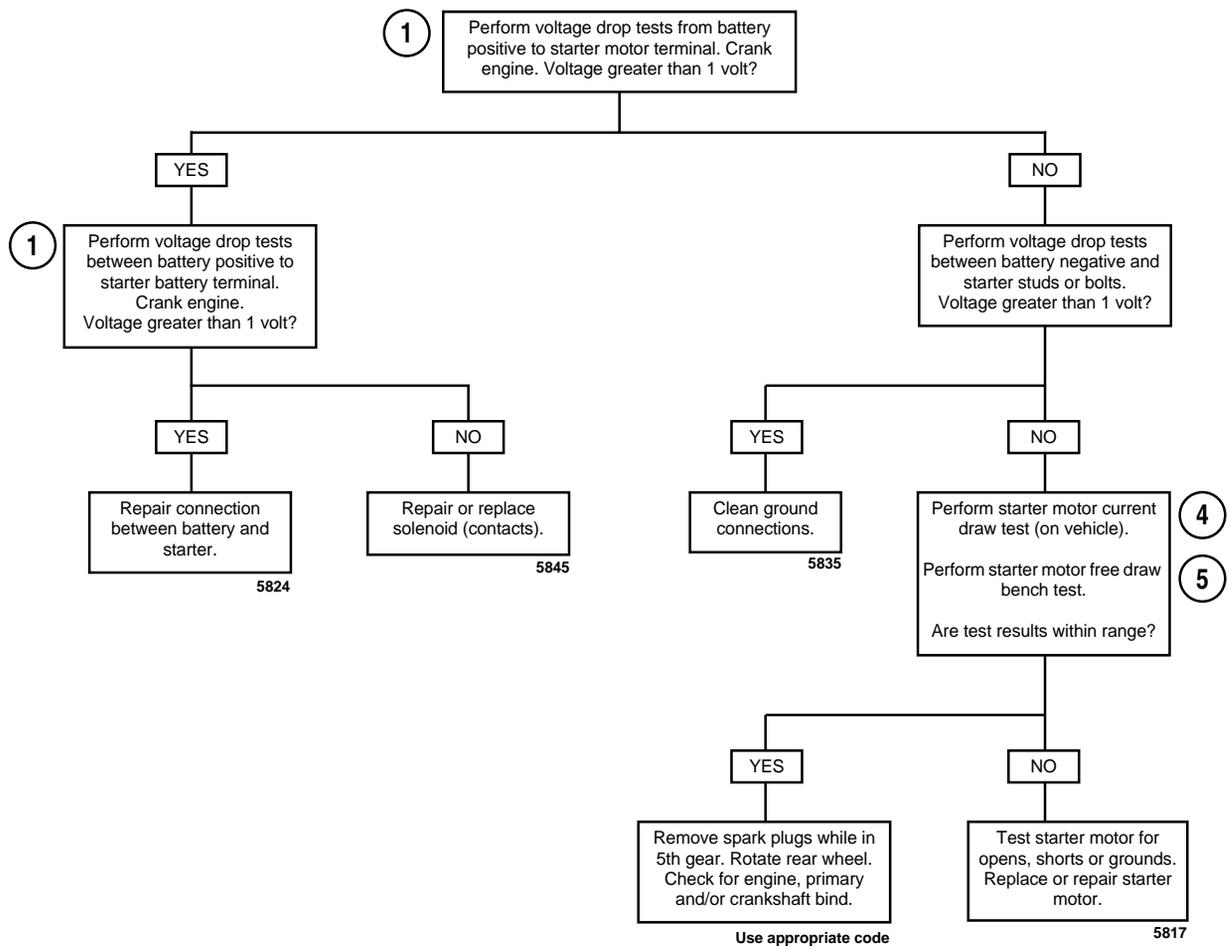

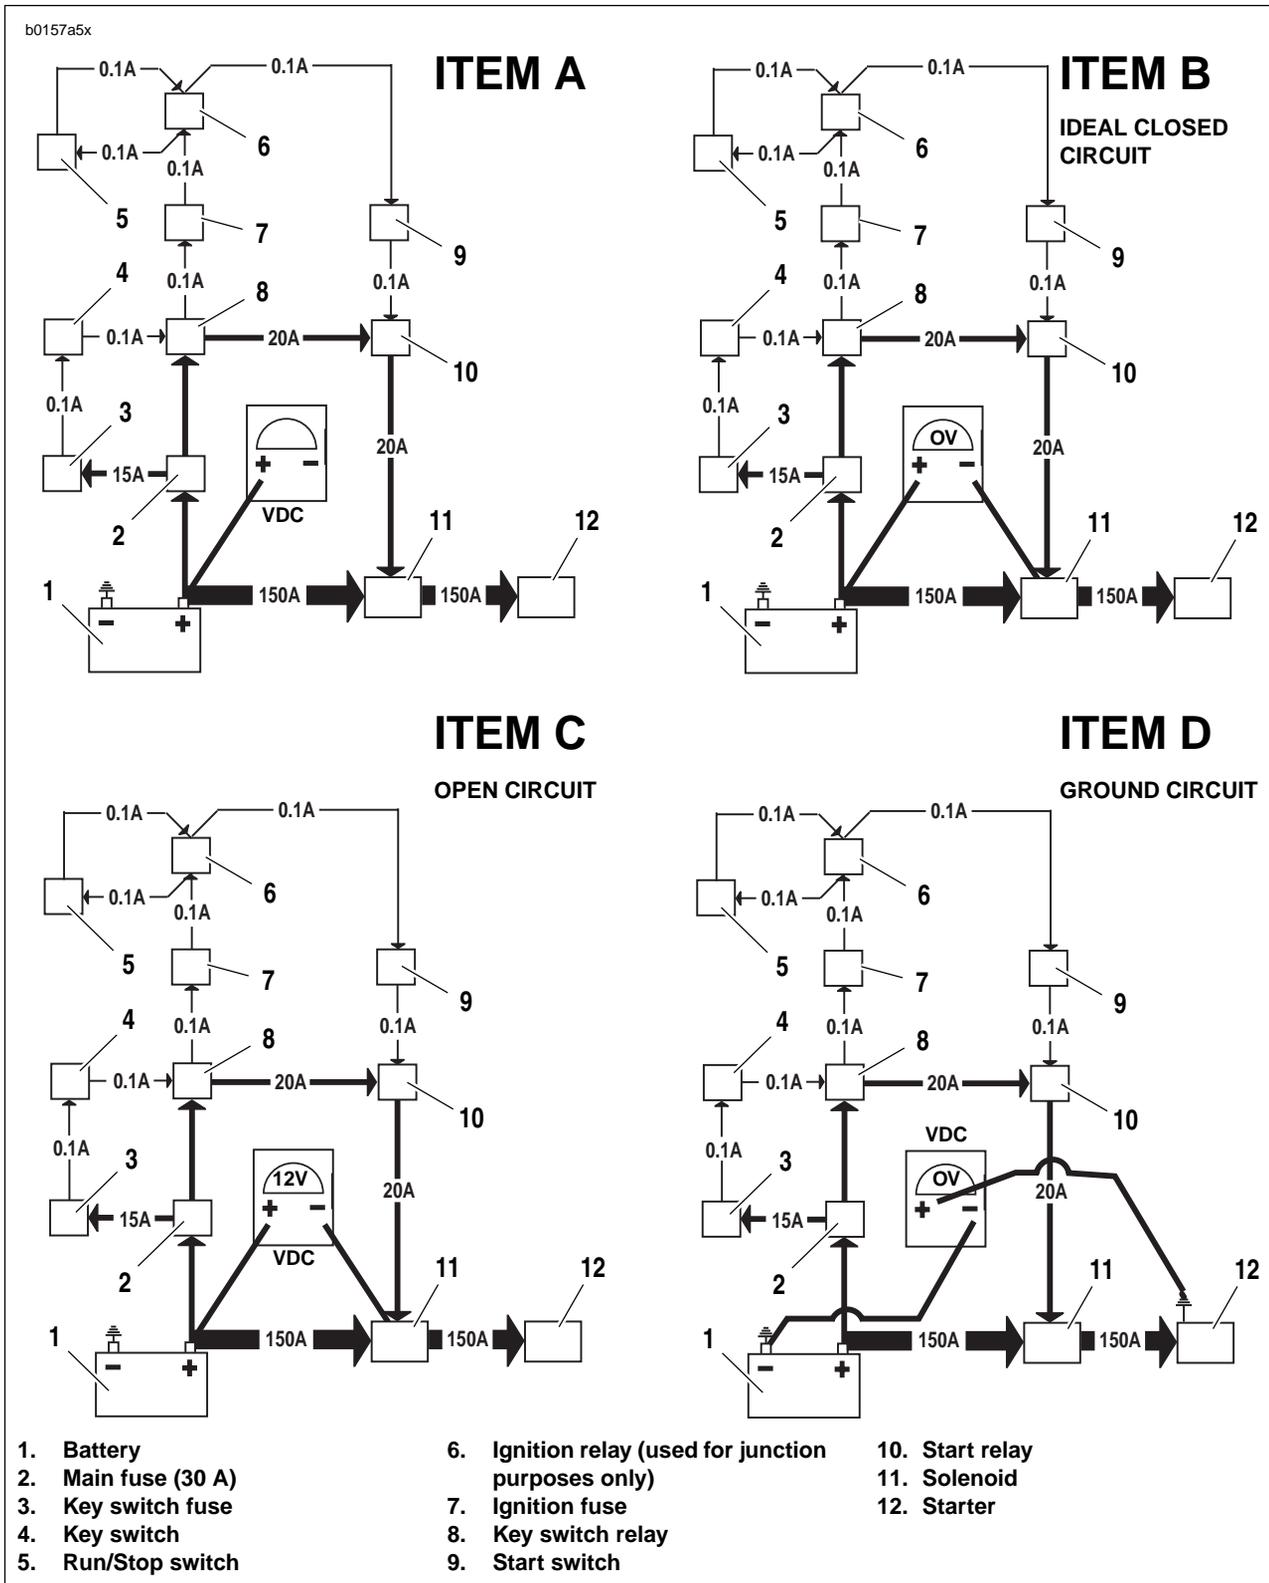


Figure 5-3. Typical Circuitry. Refer to wiring diagrams for more information.

GENERAL

Follow the [5.3 STARTING SYSTEM DIAGNOSIS](#) diagram to diagnose starting system problems. The [VOLTAGE DROPS](#) procedure below will help you to locate poor connections or components with excessive voltage drops.

VOLTAGE DROPS

Check the integrity of all wiring, switches, fuses and connectors between the source and destination.

The voltage drop test measures the difference in potential or the actual voltage dropped between the source and destination.

1. See [ITEM A](#) in [Figure 5-3](#). Attach your red meter lead to the most positive part of the circuit, which in this case would be the positive post of the battery (1).
2. See [ITEM B](#) in [Figure 5-3](#). Attach the black meter lead to the final destination or component in the circuit (solenoid terminal from relay).
3. Activate the starter and observe the meter reading. The meter will read the voltage dropped or the difference in potential between the source and destination.
4. An ideal circuit's voltage drop would be 0 volts or no voltage dropped, meaning no difference in potential.
5. See [ITEM C](#) in [Figure 5-3](#). An open circuit should read 12 volts, displaying all the voltage dropped, and the entire difference in potential displayed on the meter.
6. Typically, a good circuit will drop less than 1 volt.
7. If the voltage drop is greater, back track through the connections until the source of the potential difference is found. The benefit of doing it this way is speed.
 - a. Readings aren't as sensitive to real battery voltage.
 - b. Readings show the actual voltage dropped, not just the presence of voltage.
 - c. This tests the system as it is actually being used. It is more accurate and will display hard to find poor connections.
 - d. This approach can be used on lighting circuits, ignition circuits, etc. Start from most positive and go to most negative (the destination or component).
8. See [ITEM D](#) in [Figure 5-3](#). The negative or ground circuit can be checked as well.
 - a. Place the negative lead on the most negative part of the circuit (or the negative battery post). Remember, there is nothing more negative than the negative post of the battery.
 - b. Place the positive lead to the ground you wish to check.
 - c. Activate the circuit. This will allow you to read the potential difference or voltage dropped on the negative or ground circuit. This technique is very effective for identifying poor grounds due to powdered paint. Even the slightest connection may cause an ohmmeter to give a good reading. However, when sufficient current is passed through, the resistance caused by the powdered paint will cause a voltage drop or potential difference in the ground circuit.

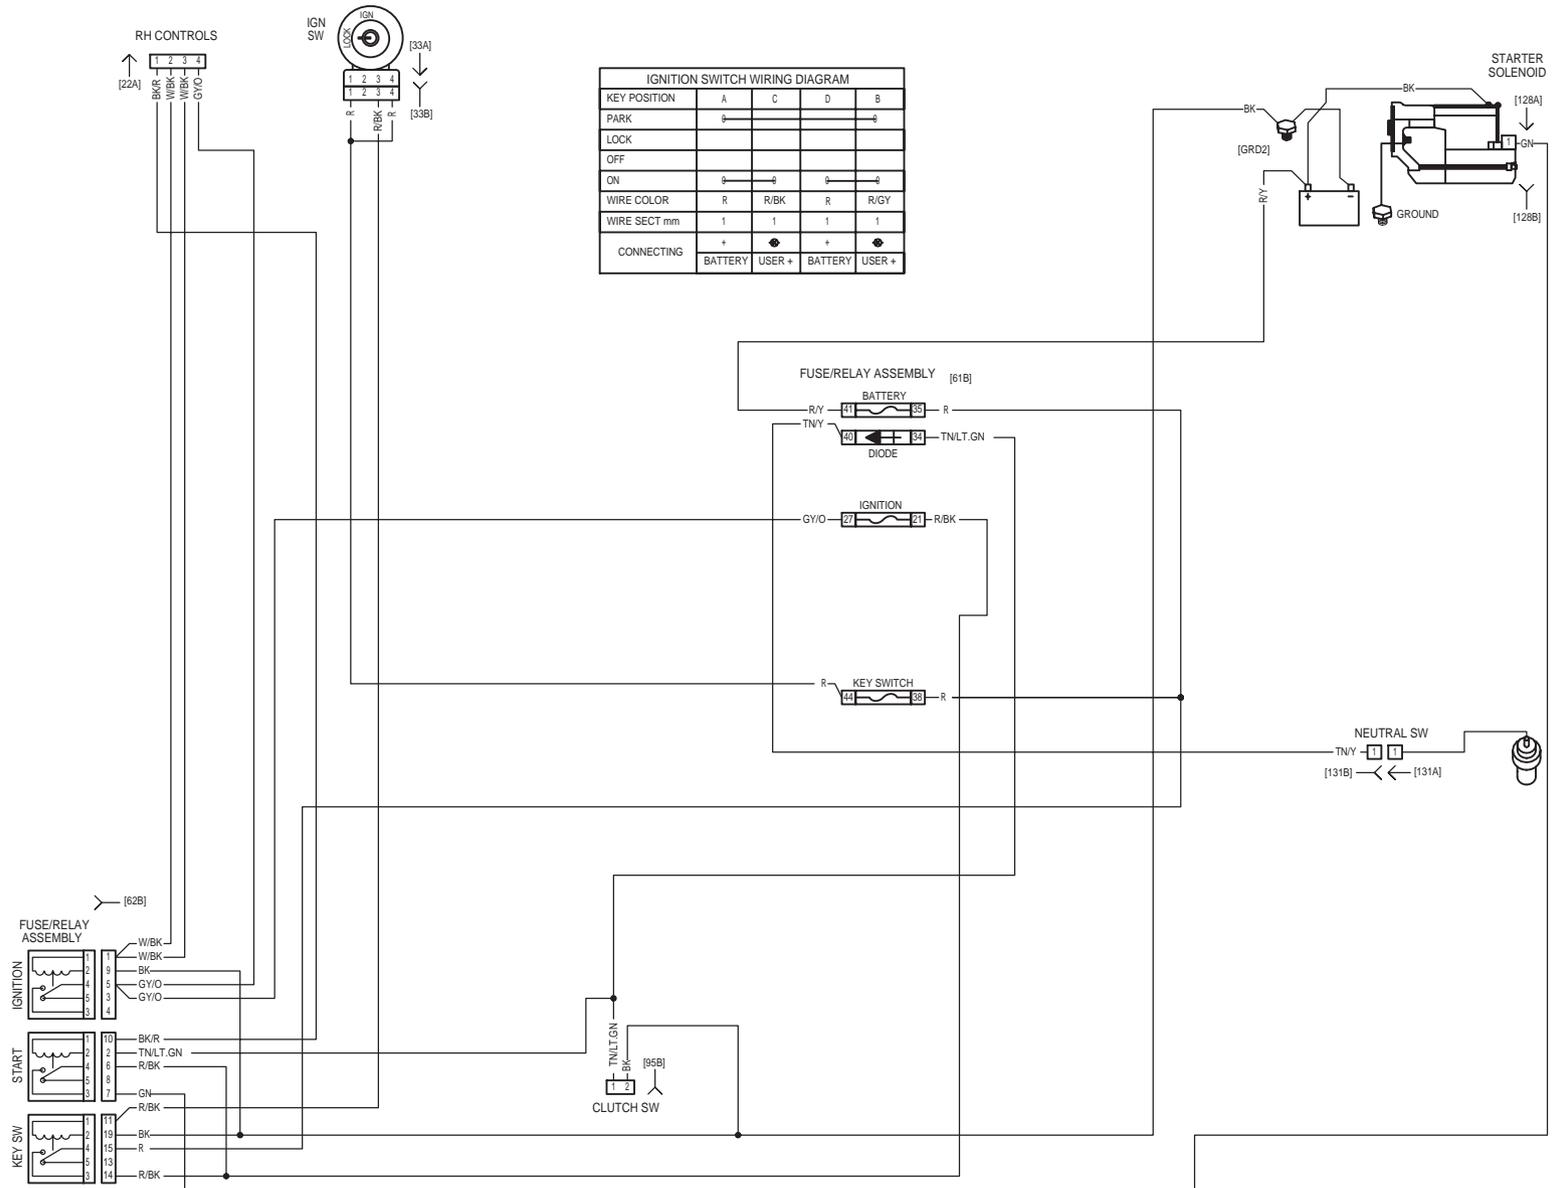


Figure 5-4. Electric Starting System Circuit

“ON-MOTORCYCLE” TESTS

Starter Relay Test

NOTE

Starter relay test also applies to ignition and key switch relays.

1. See [Figure 5-5](#). Locate starter relay. The relay is attached to the relay block left of instrument console.
2. To test relay, proceed to Step 3. If installing a **new** starter relay, remove old relay. Install **new** relay into relay block.
3. See [Figure 5-6](#). Obtain a 12 volt battery and a continuity tester or ohmmeter.
 - a. Pull relay from relay block.
 - b. Connect positive battery lead to the 86 terminal.
 - c. Connect negative battery lead to the 85 terminal to energize relay.
 - d. Check for continuity between the 30 and 87 terminals. A good relay shows continuity (continuity tester lamp “on” or a zero ohm reading on the ohmmeter). A malfunctioning relay will not show continuity and must be replaced.
4. If starter relay is functioning properly, proceed to [STARTER CURRENT DRAW TEST](#).

Starter Current Draw Test

NOTES

- Engine temperature should be stable and at room temperature.
- Battery should be fully charged.

See [Figure 5-7](#). Check starter current draw with an induction ammeter before disconnecting battery. Proceed as follows:

1. Verify that transmission is in neutral. Disconnect spark plug wires from spark plug terminals.
2. Clamp induction ammeter over positive battery cable next to starter.
3. With ignition key switch ON, turn engine over by pressing starter switch while taking a reading on the ammeter. Disregard initial high current reading which is normal when engine is first turned over.
 - a. Typical starter current draw will range between 140-180 amperes.
 - b. If starter current draw exceeds 180 amperes, then the problem may be in the starter or starter drive. Remove starter for further tests. See [5.7 STARTER](#).

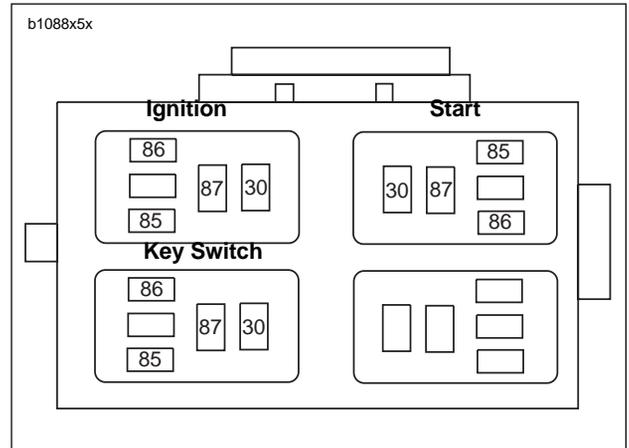


Figure 5-5. Relay Block (top view)

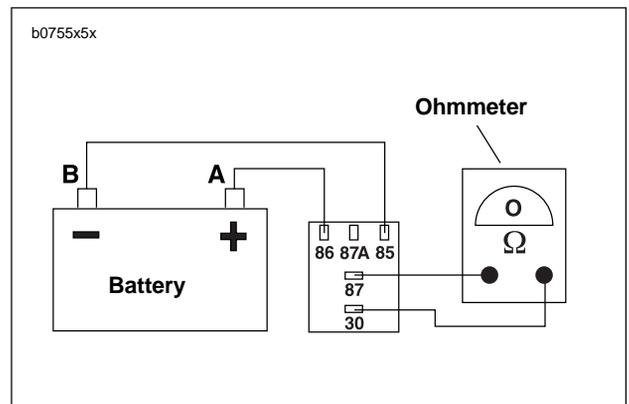


Figure 5-6. Starter Relay Test

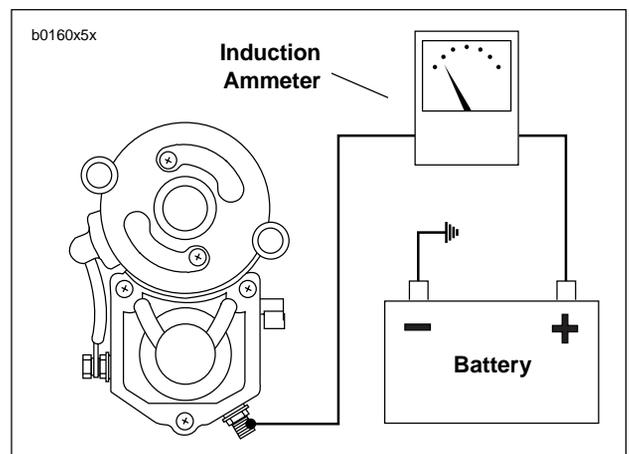


Figure 5-7. Starter Draw Test

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

WARNING

Always disconnect the negative battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

2. Disconnect battery. See [1.5 BATTERY MAINTENANCE](#).
3. Remove primary cover. See [REMOVAL](#) under [6.2 PRIMARY COVER](#).
4. Remove sprocket cover. See [2.30 SPROCKET COVER](#).

NOTE

A ball hex driver may be required to gain access to the starter mounting bolts.

5. See [Figure 5-8](#). Remove two starter mounting bolts and washers (1).
6. See [Figure 5-9](#). Remove fastener with washer (1) (metric).
 - a. Remove protective boot.
 - b. Remove positive battery cable ring terminal (2).
 - c. Detach solenoid wire (3).
7. Remove starter and gasket from the gearcase cover side.

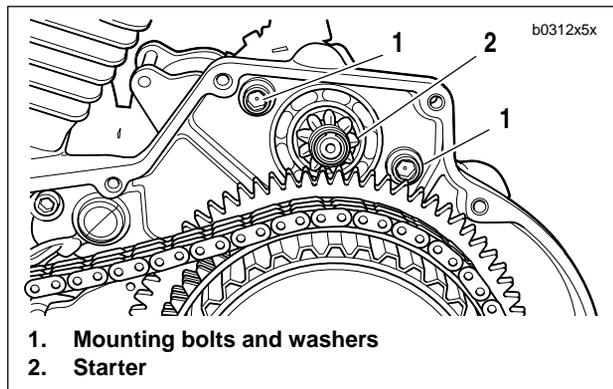


Figure 5-8. Starter Mounting

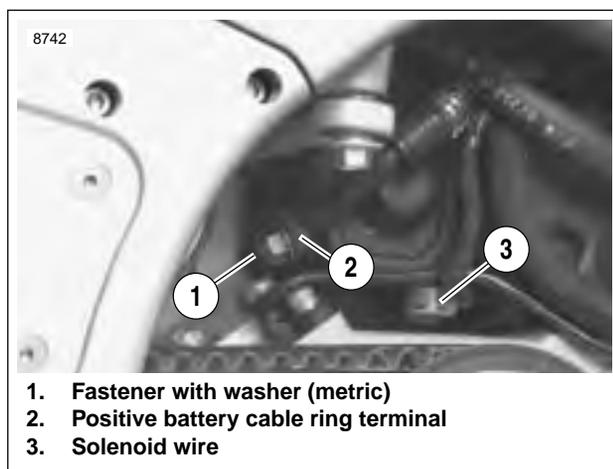


Figure 5-9. Starter Wires (Protective Boot Not Shown)

TESTING ASSEMBLED STARTER

Free Running Current Draw Test

- Place starter in vise, using a clean shop towel to prevent scratches or other damage.
- See [Figure 5-10](#). Attach one heavy jumper cable (6 gauge minimum).
 - To the starter mounting flange (1).
 - To the negative (-) terminal of a fully charged battery.
- Connect a second heavy jumper cable (6 gauge minimum).
 - To the positive (+) terminal of the battery (2).
 - To an inductive ammeter (3). Continue on to the battery terminal (4) on the starter solenoid.
- Connect a smaller jumper cable (14 gauge minimum).
 - To the positive (+) terminal of the battery (2).
 - To the solenoid relay terminal (5).
- Check ammeter reading.
 - Ammeter should show 90 amps maximum.
 - If reading is higher, disassemble starter for inspection. See [5.7 STARTER](#).
 - If starter current draw on vehicle was over 200 amps and this test was within specification, there may be a problem with engine or primary drive.

Starter Solenoid

NOTE

Do not disassemble solenoid. Before testing, disconnect field wire from motor terminal as shown in [Figure 5-11](#).

CAUTION

Each test should be performed for only 3-5 seconds to prevent damage to solenoid.

NOTE

The solenoid Pull-in, Hold-in, and Return tests must be performed together in one continuous operation. Conduct all three tests one after the other in the sequence given without interruption.

Solenoid Pull-in Test

- See [Figure 5-11](#). Using a 12 volt battery, connect three separate test leads as follows:
 - Solenoid housing to negative battery post.
 - Solenoid motor terminal to negative battery post.
 - Solenoid relay terminal to positive battery post.
- Observe starter pinion.
 - If starter pinion pulls in strongly, solenoid is working properly.
 - If starter pinion does not pull in, replace the solenoid.

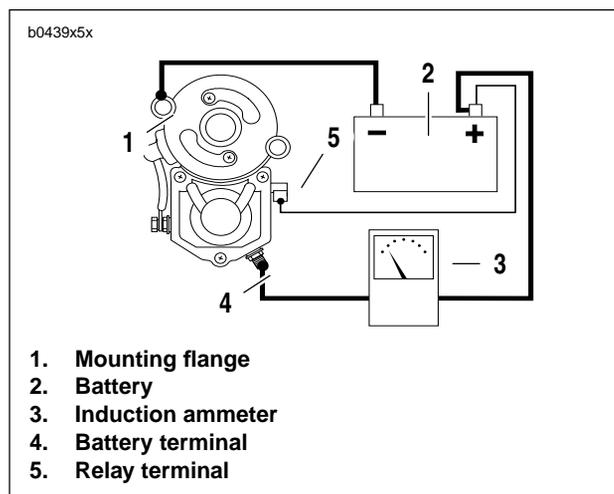


Figure 5-10. Free Running Current Draw Test

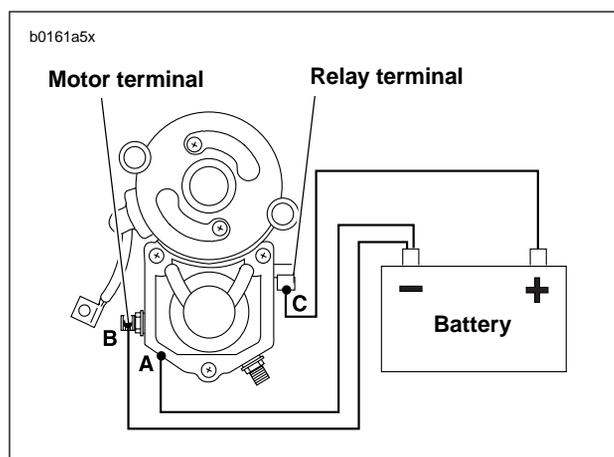


Figure 5-11. Pull-In Test

Solenoid Hold-in Test

1. See Figure 5-12. With test leads still connected in the manner specified in the previous **SOLENOID PULL-IN TEST**, **disconnect solenoid motor terminal/battery negative test lead (B) at negative battery post only; reconnect loose end of this test lead to positive battery post instead.**
2. Observe starter pinion.
 - a. If starter pinion remains in pull-in position, solenoid is working properly.
 - b. If starter pinion does not remain in pull-in position, replace the solenoid.

Solenoid Return Test

1. See Figure 5-13. With test leads still connected in the manner specified at the end of the previous **SOLENOID HOLD-IN TEST**, **disconnect solenoid relay terminal/positive battery post test lead (C) at either end.**
2. Observe starter pinion.
 - a. If starter pinion returns to its original position, solenoid is working properly.
 - b. If starter pinion does not return to its original position, replace the solenoid.

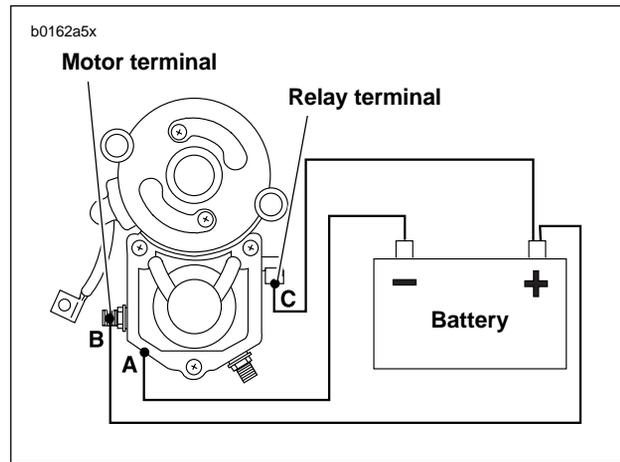


Figure 5-12. Hold-In Test

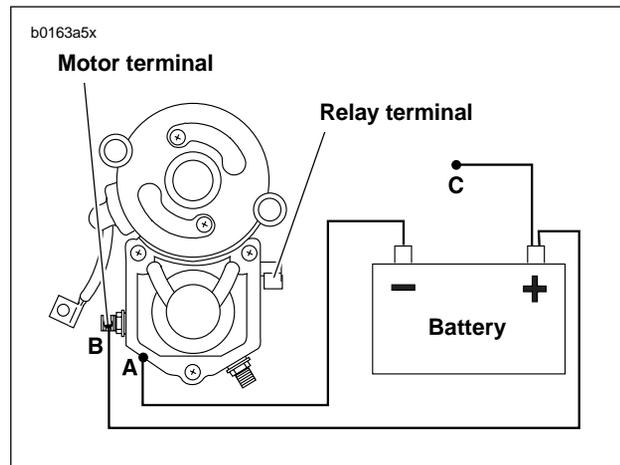


Figure 5-13. Return Test

DISASSEMBLY, INSPECTION AND REPAIR

1. See [Figure 5-14](#). Lift rubber boot (1). Remove field wire nut with washer (2) (metric) to detach field wire (3).
2. See [Figure 5-15](#). Remove both thru-bolts (1, 3).
3. Remove both end cover screws with O-rings (2) and end cover (4).
4. See [Figure 5-16](#). Use a wire hook to pull upward on brush springs (3), and lift brushes out of holder (2). Remove brush holder.
5. Check brush length. Replace all four brushes if length of any one brush is less than 0.433 in. (11.0 mm).

NOTE

Brushes not available separately. Purchase a **new** field frame (1) and brush holder (2) to replace brushes.

6. Remove armature (4) and field frame (1).
7. Place armature in lathe or truing stand and check commutator runout and diameter.
 - a. Commutators with more than 0.016 in. (0.406 mm) of runout should be replaced or machined on a lathe.
 - b. Replace commutators when diameter is less than 1.141 in. (28.981 mm)
 - c. Check armature bearings. Replace if necessary.

CAUTION

Do not use sandpaper or emery cloth to remove burrs on commutator. Otherwise, abrasive grit may remain on commutator segments; this could lead to excessive brush wear. Use only the recommended crocus cloth.

NOTE

See [Figure 5-17](#). If an undercutting machine is not available, undercutting can be done satisfactorily using a thin hacksaw blade. After undercutting, lightly sand the commutator with crocus cloth to remove any burrs.

8. Check depth of mica on commutator. If undercut is less than 0.008 in. (0.203 mm), use an undercutting machine to undercut the mica to 1/32 in. (0.794 mm) deep. The slots should then be cleaned to remove any dirt or copper dust.

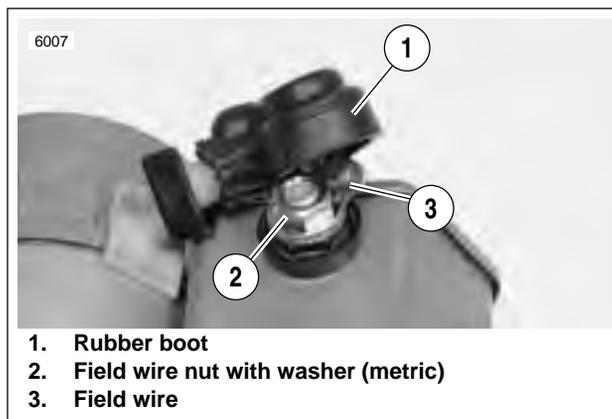


Figure 5-14. Field Wire

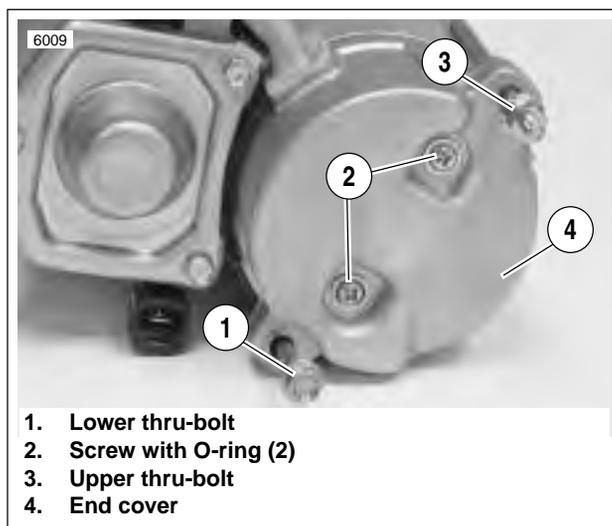


Figure 5-15. Removing the Thru-Bolts


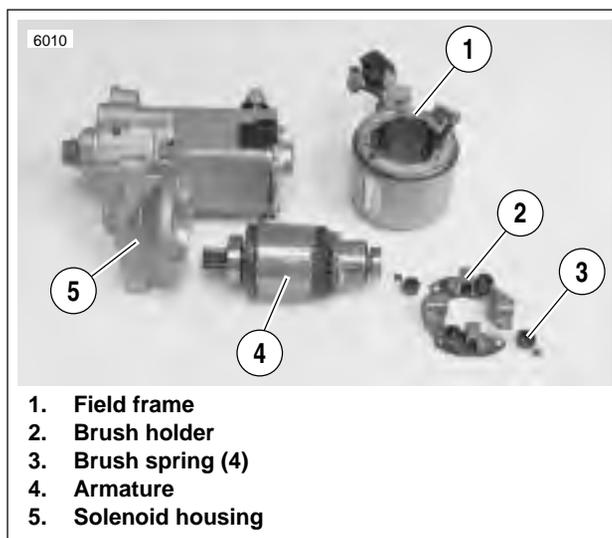


Figure 5-16. Starter Components

b0136x5x

Starting groove in mica
with 3 cornered file

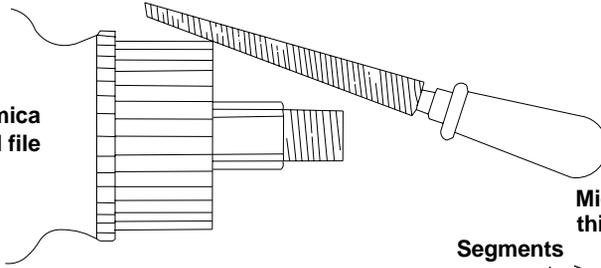

Undercutting mica
with piece of hacksaw blade

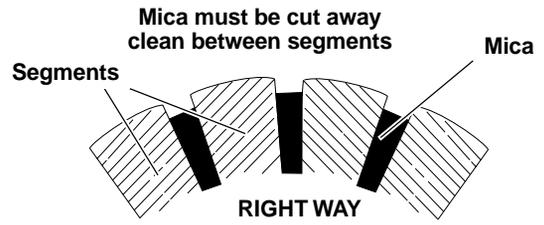
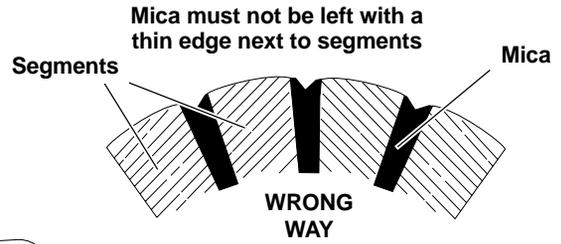
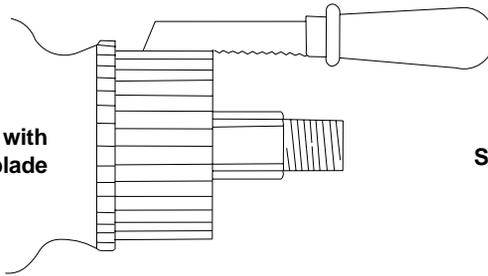


Figure 5-17. Undercutting Mica Separators

9. See [Figure 5-18](#). Check for SHORTED ARMATURE with a growler.
 - a. Place armature on growler (1).
 - b. Hold a thin steel strip (2) (hacksaw blade) against armature core and slowly turn armature.
 - c. A shorted armature will cause the steel strip to vibrate and be attracted to the core. Replace shorted armatures.
10. See [Figure 5-19](#). Check for a GROUNDED ARMATURE with an ohmmeter or continuity tester.
 - a. Touch one probe to any commutator segment (1).
 - b. Touch the other probe to the armature core (2).
 - c. There should be no continuity (infinite ohms). If there is continuity, then the armature is grounded. Replace grounded armatures.
11. See [Figure 5-20](#). Check for OPEN ARMATURE with an ohmmeter or continuity tester.
 - a. Check for continuity between all commutator segments (1).
 - b. There should be continuity (0 ohms) at all test points. No continuity at any test point indicates armature is open and must be replaced.

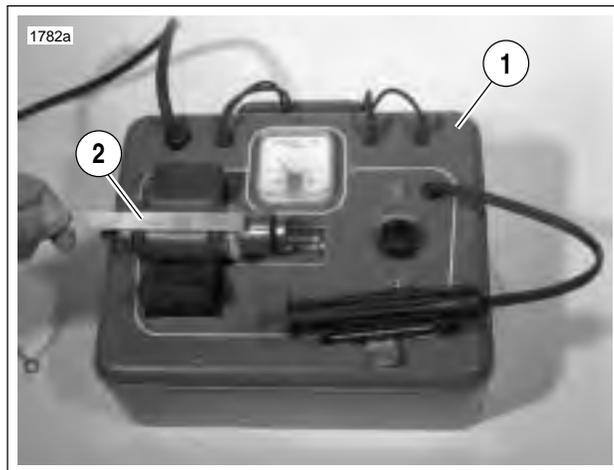


Figure 5-18. Shorted Armature Test Using Growler

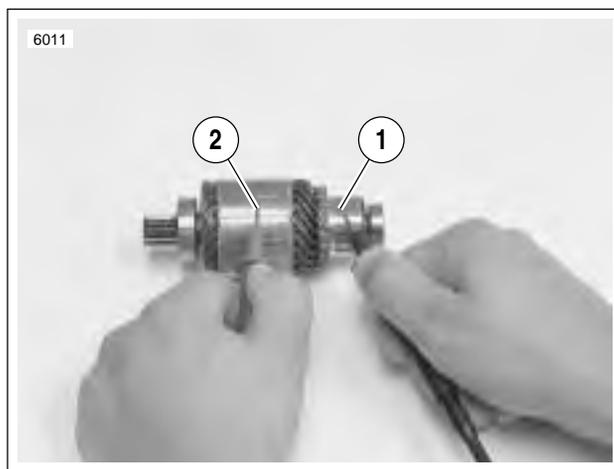


Figure 5-19. Grounded Armature Test

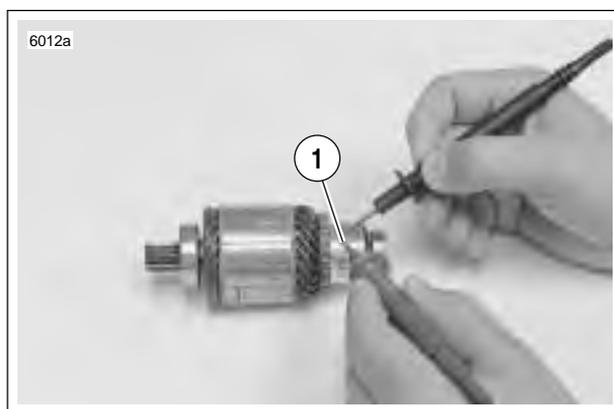


Figure 5-20. Open Armature Test

12. See [Figure 5-21](#). Check for GROUNDED FIELD COIL with an ohmmeter or continuity tester.
 - a. Touch one probe to the frame (1).
 - b. Touch the other probe to each of the brushes (2) attached to the field coil.
 - c. There should be no continuity (infinite ohms). If there is any continuity at either brush, then the field coil(s) are grounded and the field frame must be replaced.
13. See [Figure 5-22](#). Check for OPEN FIELD COILS with an ohmmeter or continuity tester.
 - a. Touch one probe to the field wire (1).
 - b. Touch the other probe to each of the brushes attached to the field coil(s) (2).
 - c. There should be continuity (0 ohms). If there is no continuity at either brush, then the field coil(s) are open and the field frame must be replaced.
14. See [Figure 5-23](#). Test BRUSH HOLDER INSULATION with an ohmmeter or continuity tester.
 - a. Touch one probe to holder plate (1).
 - b. Touch the other probe to each of the positive (insulated) brush holders (2).
 - c. There should be no continuity (infinite ohms). If there is continuity at either brush holder, replace the brush holder assembly.
15. See [Figure 5-24](#). Remove two drive housing mounting screws (6). Remove drive housing (5) from solenoid housing.
16. Remove drive (1), idler gear (2), idler gear bearing (3), and O-ring (4) from drive housing (O-ring is located in drive housing groove).

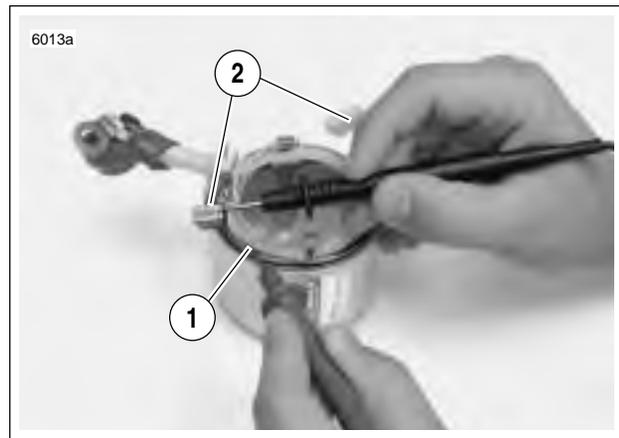


Figure 5-21. Grounded Field Test

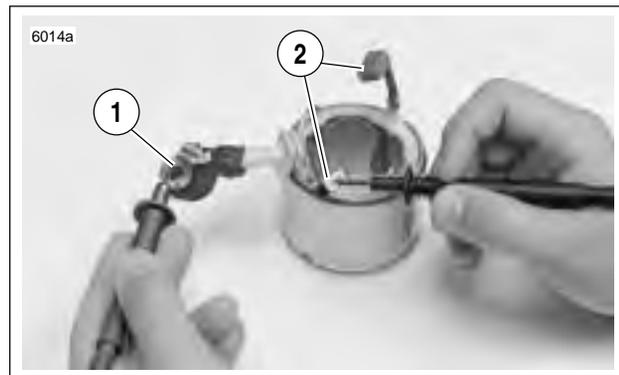


Figure 5-22. Open Field Test

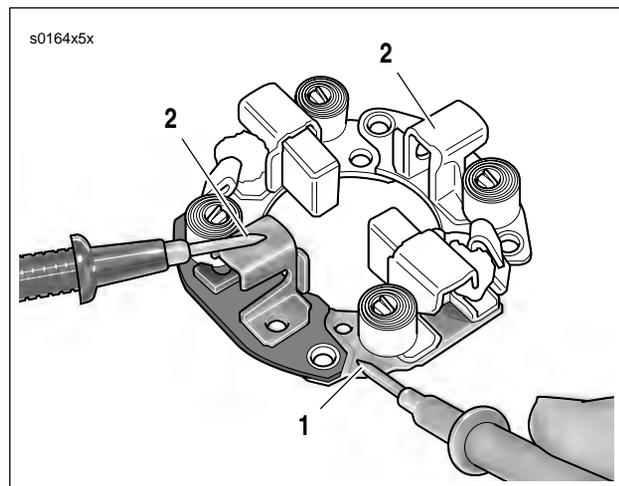


Figure 5-23. Brush Holder Insulation Test

ASSEMBLY

1. See [Figure 5-24](#). Clean, inspect and lubricate drive assembly components. Lubricate parts with high temperature grease, such as LUBRIPLATE 110.
2. See [Figure 5-27](#). When installing drive assembly components, open end of idler bearing cage (15) faces toward solenoid.
3. When installing drive housing (10) to solenoid housing (11), use **new** O-ring (16). Be sure to install return spring (17) and ball (18).
4. Lubricate armature bearings (8) with high temperature grease, such as LUBRIPLATE 110. Install armature (6) and field frame (7) to solenoid housing (11).
5. Install brushes and brush holder (4).
6. Install O-rings (23). Attach end cover (3) with end cover screws and O-rings (2).
7. Install thru-bolts (1).
8. Attach field wire (22) to solenoid housing (11) with field wire nut and washer (24) (metric). Replace rubber boot.

INSTALLATION

1. Install starter and starter gasket from the gearcase cover side.
2. See [Figure 5-25](#). Connect wiring to starter.
 - a. Connect solenoid wire (3).
 - b. Attach positive battery cable ring terminal (2) to stud with fastener and washer.
 - c. Install nut and washer (1) (metric). Tighten nut to 60-85 **in-lbs** (7-10 Nm).
 - d. Replace protective boot.
3. See [Figure 5-26](#). Install both starter mounting bolts and washers. Tighten to 13-20 ft-lbs (18-27 Nm).
4. Install sprocket cover. See [2.30 SPROCKET COVER](#).
5. Install primary cover. See [6.2 PRIMARY COVER](#).

⚠ WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

6. Install positive battery cable (red) to positive terminal of battery. Tighten to 72-96 **in-lbs** (8-11 Nm).
7. Connect negative battery cable. Tighten to 72-96 **in-lbs** (8-11 Nm).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

8. Install seat. See [2.38 SEAT](#).

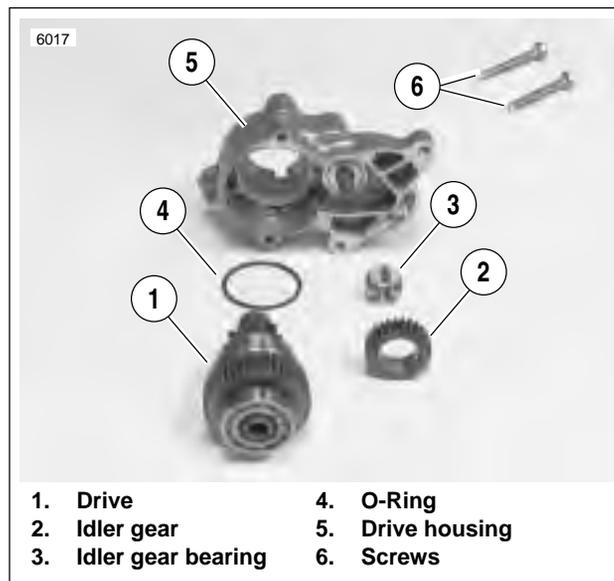


Figure 5-24. Starter Drive Assembly

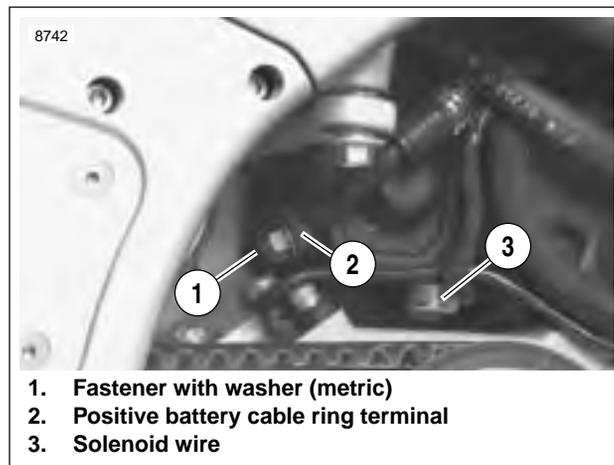


Figure 5-25. Starter Wires (Protective Boot Not Shown)


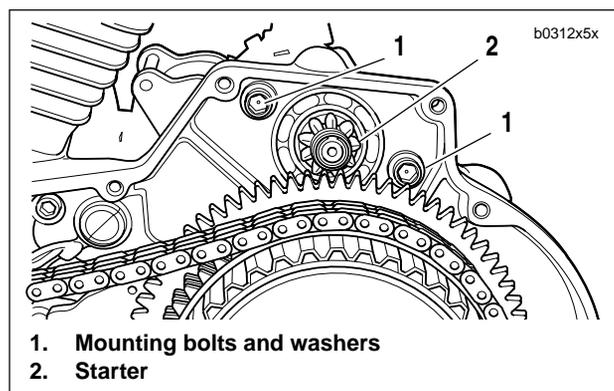


Figure 5-26. Starter Mounting

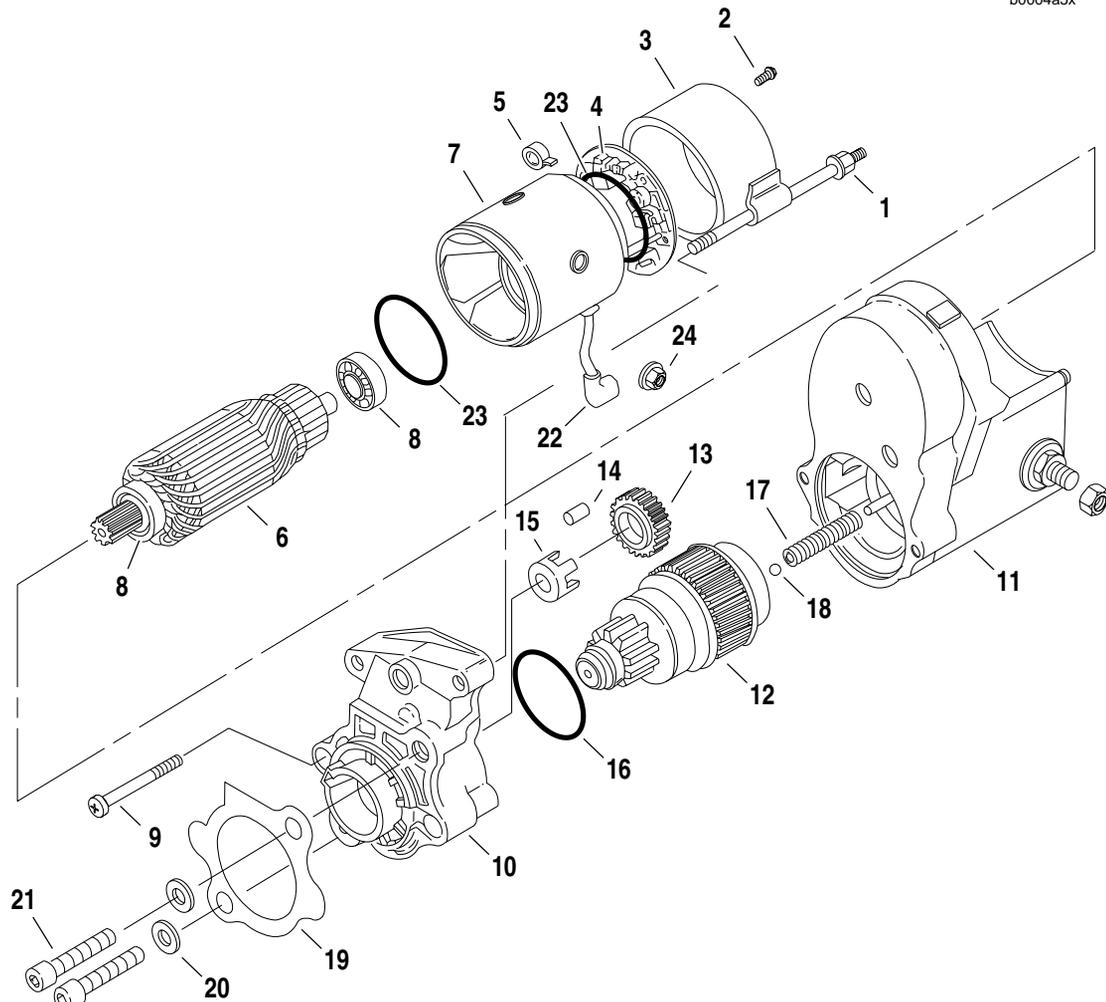

1. Thru-bolt (2)
2. End cover screw and O-ring (2)
3. End cover
4. Brush holder
5. Brush spring (4)
6. Armature
7. Field frame
8. Armature bearing (2)
9. Drive housing Mounting bolt
10. Drive housing
11. Solenoid housing
12. Drive assembly/Overrunning clutch
13. Idler gear
14. Idler gear roller (5)
15. Idler gear
Bearing cage
16. O-ring
17. Return spring
18. Ball
19. Gasket
20. Washer (2)
21. Mounting bolt (2)
22. Field wire
23. O-ring (2)
24. Field wire nut
with washer (metric)

Figure 5-27. Starter Assembly

GENERAL

CAUTION

See [Figure 5-28](#). Do not tighten nut (7) without removing items (1) through (5). Movement will cause damage to the contact.

The starter solenoid is a switch that is designed to open and close the starting circuit electromagnetically. The switch consists of contacts and a winding around a hollow cylinder containing a movable plunger.

DISASSEMBLY

1. See [Figure 5-28](#). Remove screws (1) and clip (2).
2. Remove cover (3) and gasket (4). Discard gasket.
3. Remove plunger (5) from solenoid housing (6).

ASSEMBLY

1. See [Figure 5-28](#). Replace wire connection hardware as necessary.
2. Install plunger (5) in solenoid housing (6).
3. Install **new** gasket (4) onto cover (3).
4. Position cover with gasket onto solenoid housing. Install clip (2) and screws (1).

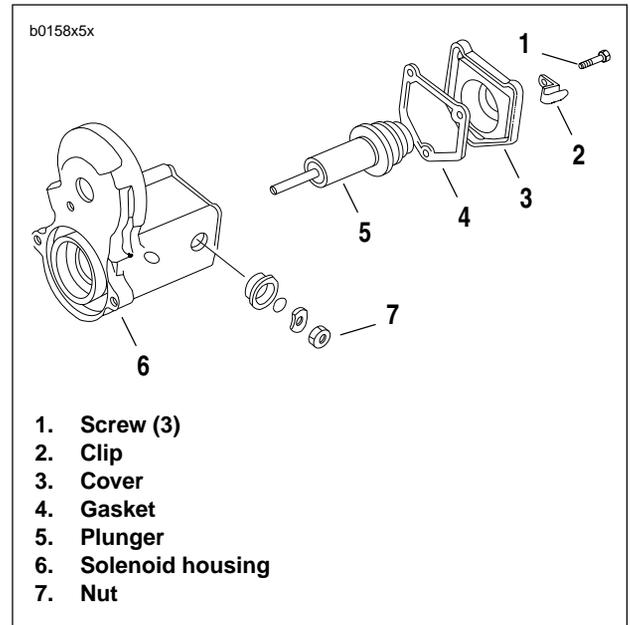


Figure 5-28. Starter Solenoid

NOTES

[Table Of Contents](#)

DRIVE/TRANSMISSION 6

| SUBJECT | PAGE NO. |
|---|-----------------|
| 6.1 Specifications | 6-1 |
| 6.2 Primary Cover | 6-3 |
| 6.3 Clutch Release Mechanism | 6-7 |
| 6.4 Clutch | 6-9 |
| 6.5 Primary Chain | 6-16 |
| 6.6 Drive Belt System | 6-21 |
| 6.7 Transmission | 6-25 |
| 6.8 Case Disassembly For Transmission Removal | 6-26 |
| 6.9 Transmission Disassembly | 6-29 |
| 6.10 Transmission Assembly | 6-36 |
| 6.11 Main Drive Gear | 6-38 |
| 6.12 Transmission Right Case Bearings | 6-41 |
| 6.13 Transmission Left Case Bearings | 6-43 |
| 6.14 Transmission Installation | 6-44 |
| 6.15 Shifter Shaft Installation | 6-48 |
| 6.16 Transmission Sprocket | 6-49 |

NOTE

Service wear limits are given as a guideline for measuring components that are not new. For measurement specifications not given under SERVICE WEAR LIMITS, see NEW COMPONENTS.

Table 6-1. Primary Drive (Engine-to-Transmission)

| ITEM | NEW COMPONENTS (XB9R) | NEW COMPONENTS (XB12R) |
|-----------------------------------|--------------------------|---------------------------|
| Engine sprocket – number of teeth | 34 | 38 |
| Clutch sprocket – number of teeth | 57 | 57 |

Table 6-2. Final Drive (Transmission-to-Rear Wheel)

| ITEM | NEW COMPONENTS | SERVICE WEAR LIMITS |
|---|----------------|-------------------------------------|
| Transmission sprocket – number of teeth | 27 | Inspect at 25,000 mi (40,000 km) |
| Rear wheel sprocket – number of teeth | 65 | Inspect at 25,000 mi (40,000 km) |
| Secondary drive belt – number of teeth | 155 | Replace at 25,000 mi (40,000 km) |

Table 6-3. Transmission

| ITEM | NEW COMPONENTS (XB9R) | NEW COMPONENTS (XB12R) |
|---|-----------------------------------|---------------------------|
| Primary drive / transmission lubricant capacity (approximately) | Approximately 32 fl. oz. (946 ml) | |
| Overall gear ratios | | |
| First gear (low) | 10.85 | 9.71 |
| Second gear | 7.47 | 6.67 |
| Third gear | 5.78 | 5.17 |
| Fourth gear | 4.76 | 4.26 |
| Fifth gear (high) | 4.04 | 3.61 |

Table 6-4. Wet Clutch Multiple Disc-Clutch Plate Thickness

| ITEM | NEW COMPONENTS | SERVICE WEAR LIMITS |
|------------------------|--|---------------------------------|
| Friction plate (fiber) | 0.0866 + 0.0031 in. (2.200 + 0.079 mm) | N/A |
| Steel plate | 0.0629 + 0.0020 in. (1.598 + 0.051 mm) | N/A |
| Clutch pack (in.) | N/A | 0.661 in. (16.789 mm) (minimum) |

Table 6-5. Wet Clutch Multiple Disc-maximum Allowable Warpage

| ITEM | NEW COMPONENTS | SERVICE WEAR LIMITS |
|------------------------|----------------|-----------------------|
| Friction plate (fiber) | N/A | 0.0059 in. (0.150 mm) |
| Steel plate | N/A | 0.0059 in. (0.150 mm) |

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|--|----------------------|----------------|---|
| | | | |
| Axle pinch fastener, rear | 40-45 ft-lbs | 54-61 Nm | page 6-53 |
| Axle, rear | Special procedure | | ANTI-SEIZE, page 6-24, 6-25, 6-26, 6-53 |
| Chin fairing fasteners | 36-48 in-lbs | 4-5 Nm | page 6-26 |
| Clutch inspection cover fasteners | 84-108 in-lbs | 9.5-12.2 Nm | Tighten in crosswise pattern, page 6-6, 6-8 |
| Clutch mainshaft nut | 70-80 ft-lbs | 94.9-108.5 Nm | LOCTITE 262 (red), left hand threads, page 6-20 |
| Crankcase 5/16 in. fasteners | 15-19 ft-lbs | 20.3-25 Nm | LOCTITE 262 (red), page 6-49 |
| Engine sprocket nut | 190-210 ft-lbs | 257.6-284.7 Nm | page 6-19 |
| Front sprocket cover fasteners | 12-36 in-lbs | 1.4-4.0 Nm | page 6-24 |
| Front sprocket cover fasteners | 12-36 in-lbs | 1.4-4.0 Nm | page 6-25 |
| Idler pulley wheel fastener | 20-23 ft-lbs | 27.1-31.2 Nm | page 6-26 |
| Negative battery cable at battery terminal | 72-96 in-lbs | 8-11 Nm | page 6-6 |
| Negative battery cable to battery terminal | 72-96 in-lbs | 8-11 Nm | page 6-8 |
| Primary cover fasteners | 80-110 in-lbs | 9-12.4 Nm | Follow torque sequence, page 6-6 |
| Primary cover magnetic drain plug | 14-21 ft-lbs | 19-28.5 Nm | LOCTITE 565 THREAD SEALANT, page 6-6 |
| Retention collar screw | 13-17 ft-lbs | 18-23 Nm | LOCTITE 243 (blue), page 6-50 |
| Shift lever pinch screw | 48-60 in-lbs | 5.4-6.8 Nm | LOCTITE 272 (red), Page 6-6 |
| Transmission sprocket nut | Special procedure | | LOCTITE 262 (red), left hand threads, special torque turn method, page 6-52 |
| Transmission sprocket screws | 90-110 in-lbs | 10.2-12.4 Nm | Replace after 3 removals, page 6-52 |

REMOVAL

1. Remove seat. See 2.38 SEAT.

⚠ WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable from battery.
3. Remove chin fairing. See 2.33 CHIN FAIRING.

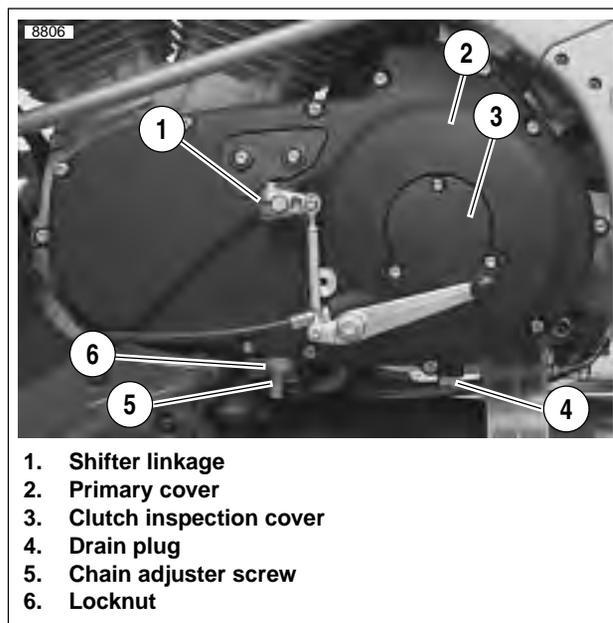


Figure 6-1. Removing Primary Cover

4. See Figure 6-1. Place a drain pan under the engine/primary area. Remove drain plug (4) and drain lubricant from primary drive.
5. Remove shifter lever assembly and rubber washer. Do not scratch primary cover.

NOTE

It is recommended that the shifter shaft seal be replaced whenever the primary cover is removed.

6. Add free play to clutch cable. See ADJUSTMENT under 1.9 CLUTCH.
7. See Figure 6-1. Loosen locknut (6). Turn chain adjuster screw (5) counterclockwise to remove tension on primary chain.
8. Remove three TORX screws with washers and clutch inspection cover.

9. See Figure 6-1. Remove clutch inspection cover (3).

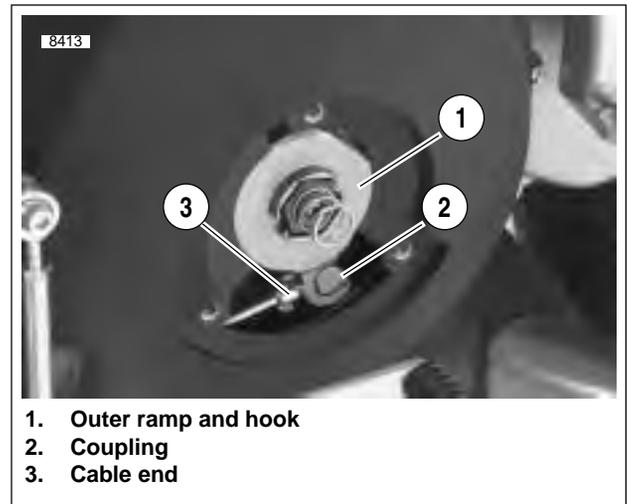


Figure 6-2. Clutch Release Mechanism


10. See Figure 6-2. Remove the outer ramp and hook (1) from the cable end (3) and coupling (2). Remove cable end from slot in coupling. See 6.3 CLUTCH RELEASE MECHANISM
11. Remove screws which secure primary cover. Remove cover and gasket.
12. Discard gasket.
13. Remove and discard shifter lever oil seal.
14. Clean all parts in a non-volatile cleaning solution or solvent.

⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

15. Blow parts dry with low pressure compressed air.

b1050x6x

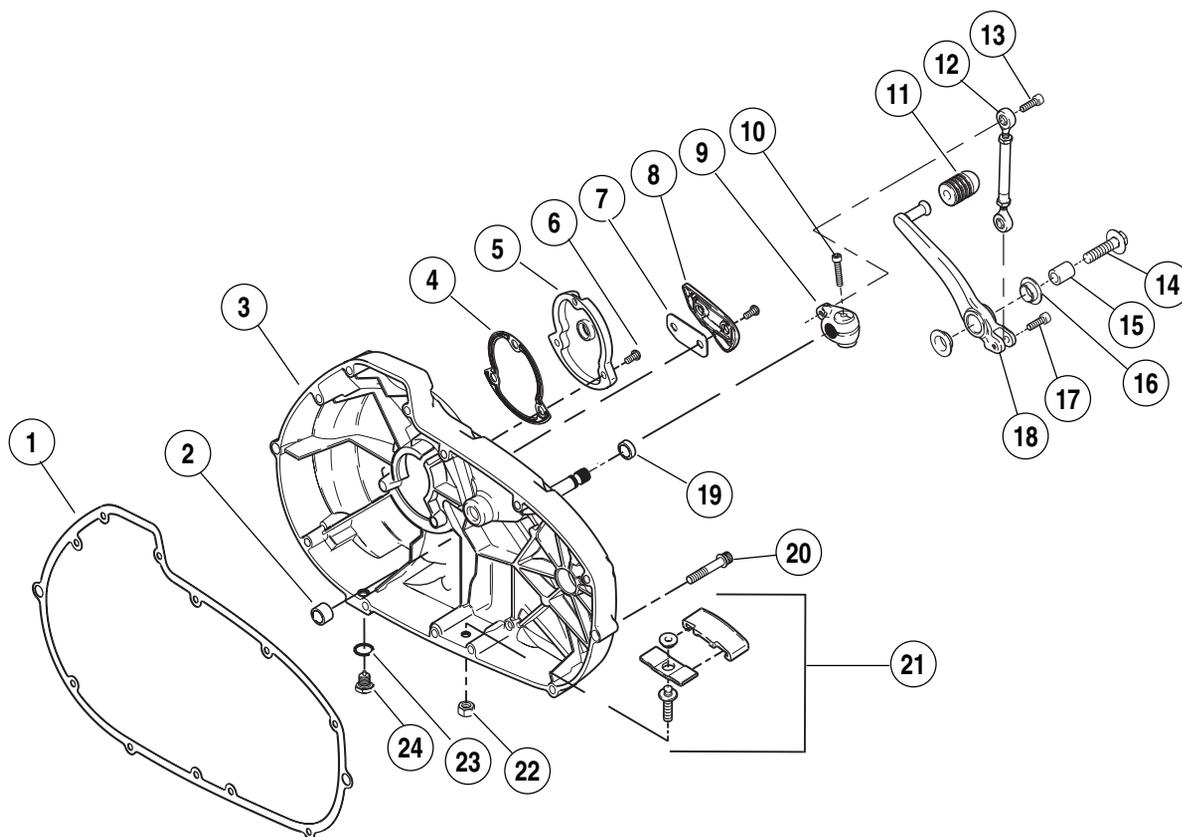

1. Gasket
2. Shifter bushing
3. Primary cover
4. Gasket
5. Clutch dove
6. Sems Screws (5)
7. Inspection cover gasket
8. Cover, inspection
9. Engine lever
10. Screw
11. Rubber shift lever pad
12. Shifter linkage assembly
13. Bolt
14. Flange bolt
15. Sleeve
16. Pedal bearing
17. Bolt
18. Shifter lever
19. Oil seal
20. Sems screw,
21. Adjuster assembly
22. Chain adjustment nut
23. O-ring
24. Drain plug

Figure 6-3. Primary Cover, Primary Chain Adjuster and Shifter Assembly

PRIMARY CHAIN ADJUSTER REPLACEMENT

1. See Figure 6-4. Remove locknut (3) from adjuster screw (2). Turn adjuster screw out of threaded boss in primary cover (4).
2. Slide shoe (1) off plate (2) (shoe must be slid off plate toward closed or blind side of shoe).
3. See Figure 6-4. Inspect primary chain adjuster shoe (1). If badly worn or damaged, it must be replaced.
4. Place plate (2) into slot at open end of shoe. Slide shoe over plate until plate is against closed (blind) side of shoe.
5. Position adjuster inside primary cover (4) with closed side of shoe against cover. Thread adjuster screw (2) all the way into tapped boss at bottom of primary cover.
6. At outside of cover, thread locknut (3) onto adjuster screw with nylon sealing surface toward cover. A 1/4-inch allen wrench may be inserted into end of adjuster screw to hold it while threading lock nut.

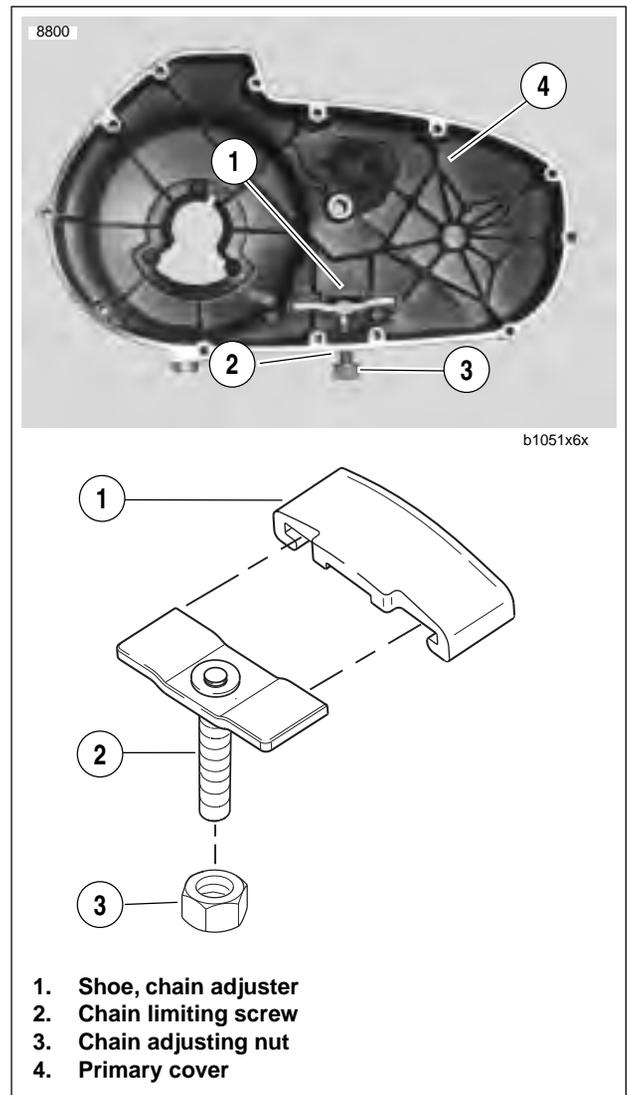


Figure 6-4. Primary Chain Adjuster

INSTALLATION

1. Remove foreign material from magnetic drain plug. Apply LOCTITE 565 thread sealant and install plug and tighten to 14-21 ft-lbs (19-28.5 Nm).
2. Wipe gasket surface clean. Install **new** gasket on primary cover.
3. Install primary cover and gasket onto left crankcase half using mounting bolts.

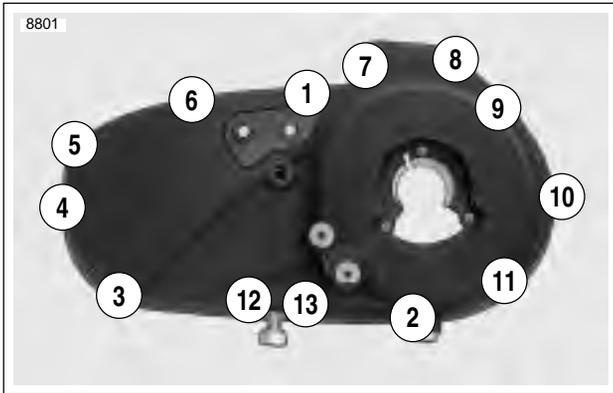


Figure 6-5. Primary Cover Tightening Sequence

4. See Figure 6-5. Tighten fasteners to 80-110 in-lbs (9-12.4 Nm) in sequence shown.
5. See Figure 6-3. Install **new** shifter lever oil seal.


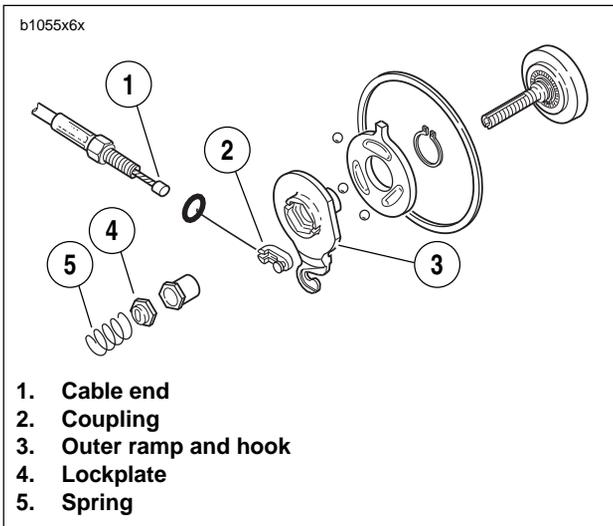


Figure 6-6. Clutch Release Mechanism

6. See Figure 6-6. Fit coupling (2) over cable end (1) with rounded side inboard and the ramp connector button outboard. With retaining ring side of ramp assembly facing inward, place hook of ramp (3) around coupling button and rotate assembly counterclockwise until tang on inner ramp fits in slot of primary cover.
7. Thread nut on adjustment screw until slot of screw is accessible with a screwdriver. Fit nut hex into recess of outer ramp and turn adjustment screw counterclockwise.
8. Adjust clutch. See [ADJUSTMENT](#) under [1.9 CLUTCH](#).

9. Adjust primary chain tension. See [1.11 PRIMARY CHAIN](#).
10. Fill transmission to proper level with fresh lubricant. See [1.9 CLUTCH](#).

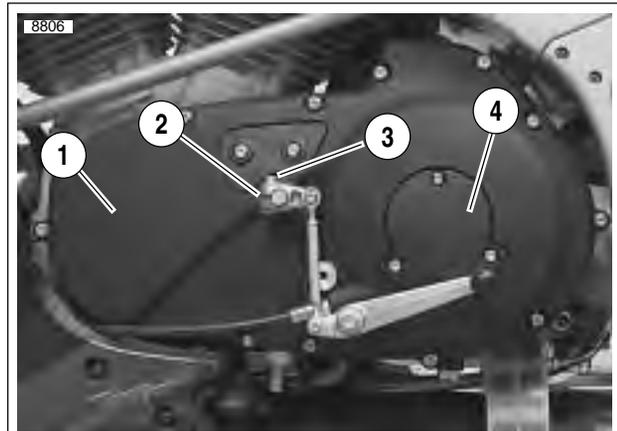

1. Primary cover
2. Lever, engine
3. Engine lever pinch screw
4. Clutch inspection cover

Figure 6-7. Installing Primary Cover

11. See Figure 6-7. Install clutch inspection cover (4) with **new** gasket and three TORX screws with washers. Tighten screws in a crosswise pattern to 84-108 in-lbs (9.5-12.2 Nm).
12. Install rubber washer and shifter lever assembly (2).
13. After applying LOCTITE 272 (red), tighten engine lever pinch screw (3) to 48-60 in-lbs (5.4-6.8 Nm).
14. Install left footpeg support bracket. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
15. Install chin fairing. See [2.33 CHIN FAIRING](#).

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury. (68)

16. Connect negative battery cable to battery terminal. Tighten fastener to 72-96 in-lbs (8-11 Nm)

WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury. (70)

17. Install seat. See [2.38 SEAT](#).

DISASSEMBLY

NOTE

For clutch adjustment procedure, See 1.9 CLUTCH.

1. Remove seat. See 2.38 SEAT.

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury. (48)

2. Disconnect negative battery cable.
3. Slide rubber boot on clutch cable adjuster upward to expose adjuster mechanism. Loosen jam nut from adjuster. Turn adjuster to shorten cable housing until there is a large amount of free play at clutch hand lever. See 1.9 CLUTCH.
4. See Figure 6-8. Remove three TORX screws with washers and clutch inspection cover.
5. Slide spring (4) with attached screw lockplate (5) from flats of adjusting screw.

6. Turn adjusting screw clockwise to release ramp and coupling mechanism (7). As the adjusting screw is turned, ramp assembly moves forward. Unscrew nut (6) from end of adjusting screw.
7. Remove hook of ramp from cable end coupling (10). Remove cable end from slot in coupling.
8. Remove and discard retaining ring from ramp assembly to separate inner and outer halves. Remove three balls from ramp sockets.

CLEANING AND INSPECTION

1. Thoroughly clean all parts in cleaning solvent.
2. See Figure 6-8. Inspect three balls of release mechanism and ball socket surfaces of inner and outer ramps for wear, pitting, surface breakdown and other damage. Replace parts as necessary.
3. Check hub fit of inner and outer ramps. Replace ramps if excessively worn.
4. Check clutch cable for frayed or worn ends. Replace cable if damaged or worn.
5. Change or add transmission fluid if necessary. See 1.9 CLUTCH.

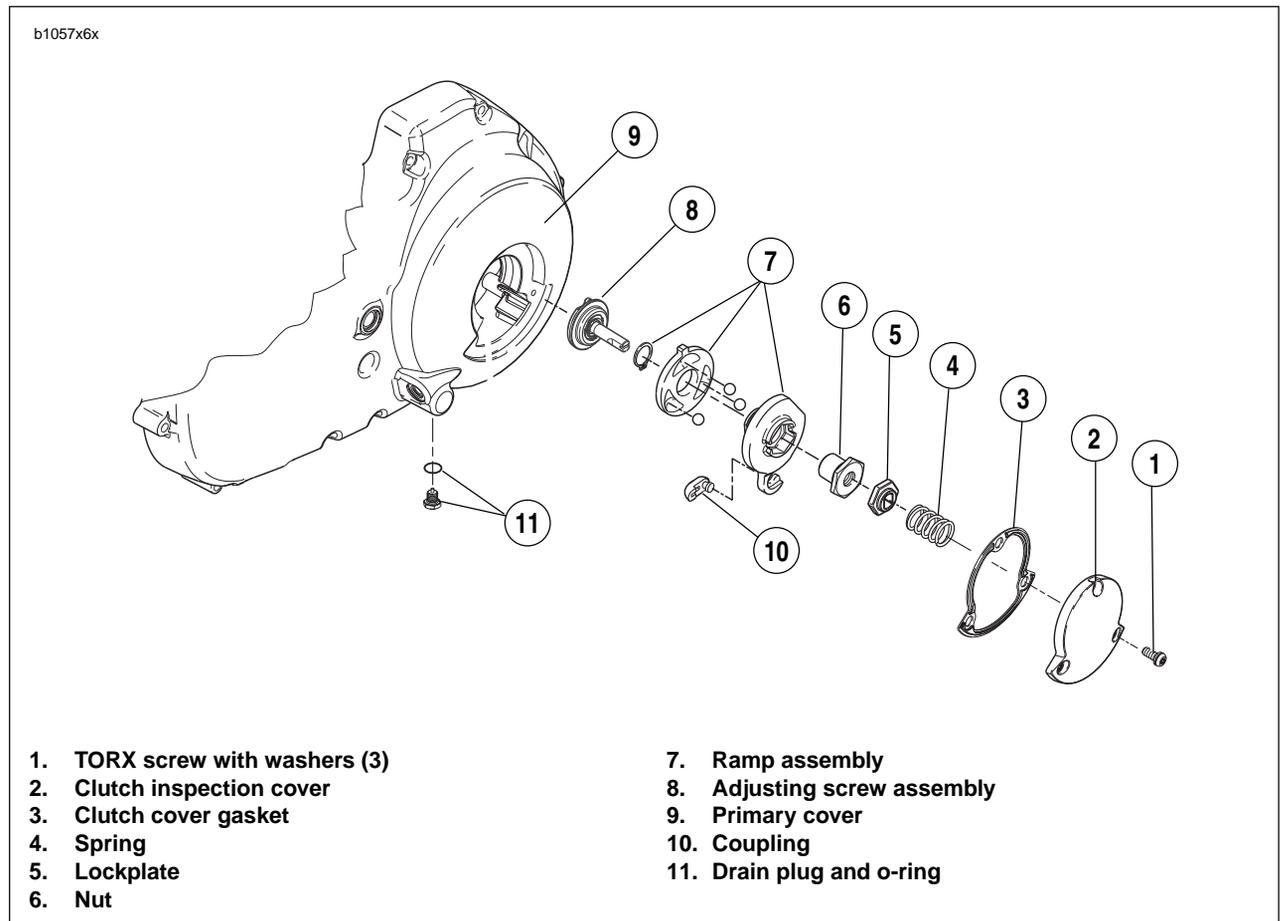


Figure 6-8. Clutch Release Mechanism

ASSEMBLY

1. See [Figure 6-9](#). Assemble inner and outer ramps.
 - a. Apply multi-purpose grease to balls and ramps.
 - b. Insert balls in sockets of outer ramp.
 - c. Install inner ramp on hub of outer ramp with tang 180° from hook of outer ramp.
 - d. Install **new** retaining ring in groove of outer ramp hub.
2. See [Figure 6-10](#). Install ramp assembly.
 - a. Fit coupling over cable end with rounded side inboard, the ramp connector button outboard.
 - b. With retaining ring side of ramp assembly facing inward, place hook of ramp around coupling button.
 - c. Rotate assembly counterclockwise until tang on inner ramp fits in slot of primary cover.
3. Secure assembly in place.
 - a. Thread nut on adjusting screw until slot of screw is accessible with a screwdriver.
 - b. Turn adjusting screw counterclockwise until resistance is felt.
 - c. Adjust clutch release mechanism. See [6.3 CLUTCH RELEASE MECHANISM](#).
 - d. Fit nut hex into recess of outer ramp.
 - e. Install clutch adjusting lockplate and spring.
4. Install clutch inspection cover and **new** gasket with three TORX screws with washers. Tighten in a crosswise pattern to 84-108 **in-lbs** (9.5-12.2 Nm).
5. Adjust clutch cable. See [1.9 CLUTCH](#).

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury. (70)

6. Connect negative battery cable to battery terminal. Tighten fastener to 72-96 **in-lbs** (8-11 Nm).
7. Install seat. See [2.38 SEAT](#).

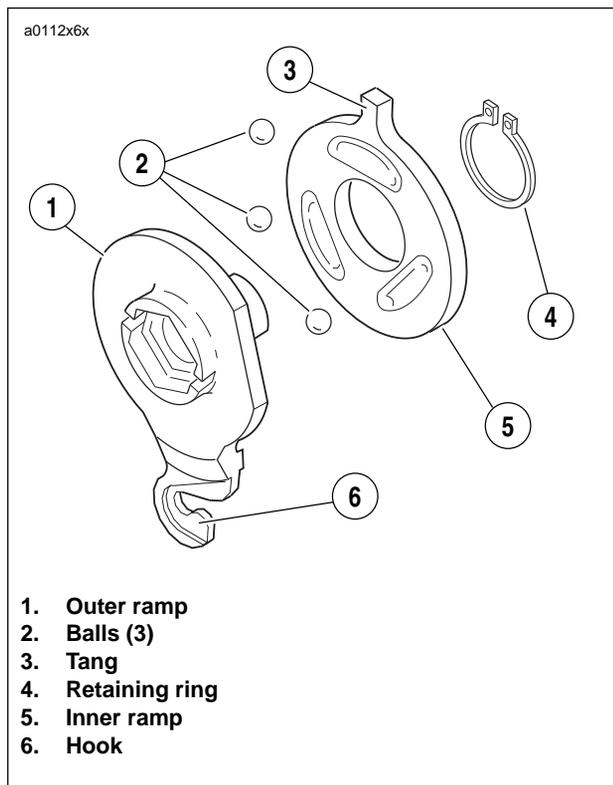


Figure 6-9. Inner & Outer Ramp

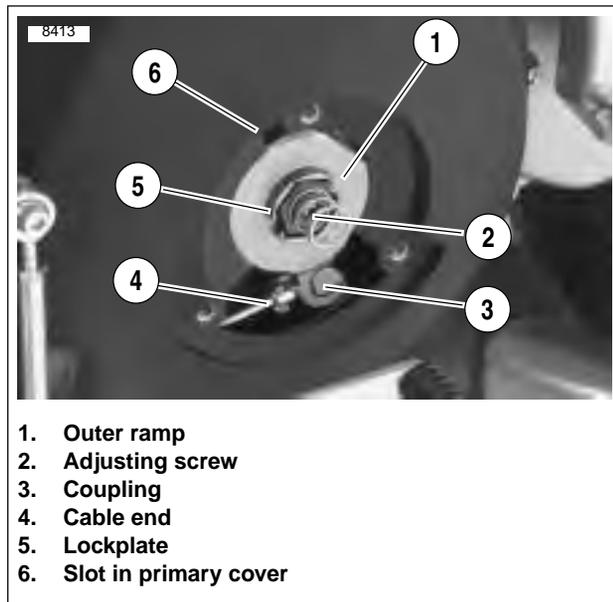


Figure 6-10. Nut and Outer Ramp

GENERAL

The purpose of the clutch is to smoothly disengage and engage the engine from the rear wheel for starting, stopping and shifting gears.


See [Figure 6-11](#). The clutch is a wet, multiple-disc clutch with steel plates and fiber (friction) plates stacked alternately in the clutch shell. The pack consists of seven fiber plates, seven steel plates, one narrow fiber plate, one damper spring and one damper spring seat. The fiber plates (clutch driving plates) are keyed to the clutch shell, which is driven by the engine through the primary chain. The steel plates (clutch driven plates) are keyed to the clutch hub, which drives the rear wheel through the transmission and secondary drive belt.

When the clutch is engaged (clutch lever released), the diaphragm spring applies strong force against the pressure plate. The pressure plate then presses the clutch plates together causing the plates to turn as a single unit. The result is that the rotational force of the clutch shell is transmitted through the clutch plates to the clutch hub. As long as the transmission is set in a forward gear, power from the engine will be transmitted to the rear wheel.

When the clutch is disengaged (clutch lever pulled to left handlebar grip), the pressure plate is pulled outward (by clutch cable action) against the diaphragm spring, thereby compressing the diaphragm spring. With the pressure plate retracted, strong inward force no longer squeezes the clutch plates together. The fiber plates are now free to rotate at a different relative speed than that of the steel plates (i.e. Slippage between the clutch plates occurs). The result is that the rotational force of the clutch shell is no longer fully transmitted through the “unlocked” clutch plates to the clutch hub. The engine is free to rotate at a different speed than the rear wheel.

Table 6-6. Troubleshooting

| SYMPTOM | CHECK ORDER | CAUSE | REMEDY |
|---------------|-------------|--|--|
| Clutch slips. | 1 | Incorrect clutch release adjustment. | Check and adjust clutch release mechanism. |
| | 2 | Worn clutch plates. | Check service wear limits. Replace plates. |
| Clutch drags. | 1 | Incorrect clutch release adjustment. | Check and adjust clutch release mechanism. |
| | 2 | Worn clutch release ramps or balls | Replace release ramps and/or balls. |
| | 3 | Warped clutch steel plates. | Replace clutch steel plates. |
| | 4 | Blade worn or damaged clutch gear splines. | Replace clutch gear or hub as required. |
| | 5 | Overfilled primary. | Drain lubricant to correct level. |

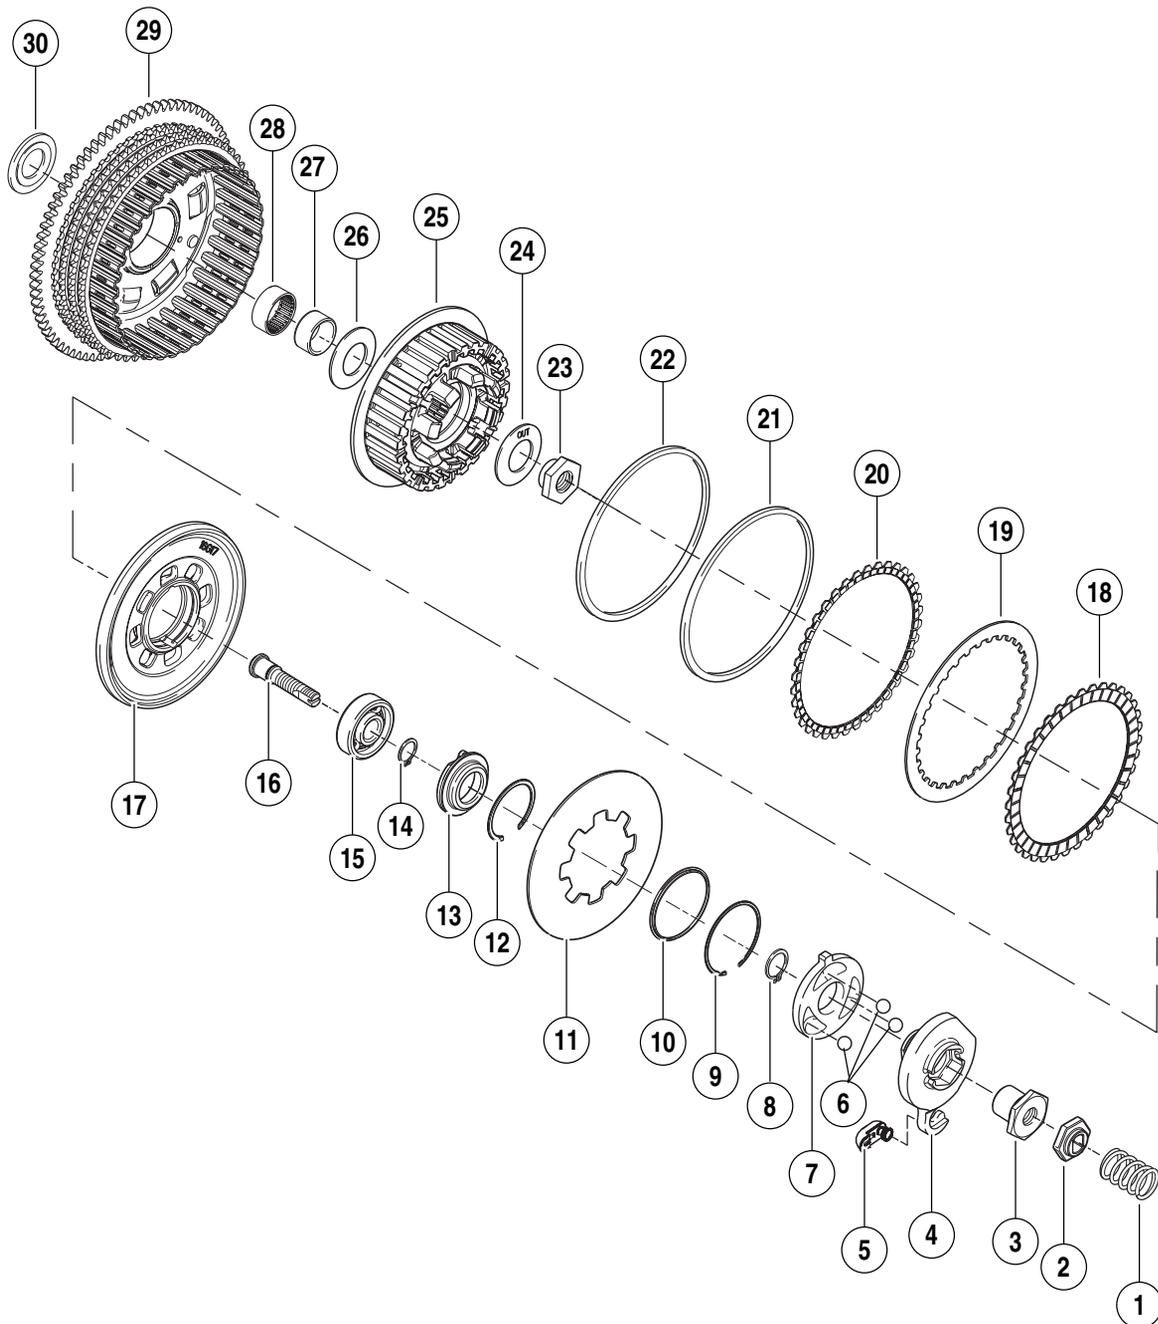

- | | | |
|-------------------|---|-------------------------------|
| 1. Spring | 11. Diaphragm spring (separate spring for XB9R & XB12R) | 20. Friction plate, narrow |
| 2. Lockplate | 12. Retaining ring | 21. Damper spring |
| 3. Nut | 13. Release plate | 22. Damper spring seat |
| 4. Outer ramp | 14. Retaining ring | 23. Mainshaft nut |
| 5. Coupling | 15. Bearing | 24. Washer |
| 6. Ball (3) | 16. Adjusting screw | 25. Clutch hub |
| 7. Inner ramp | 17. Pressure plate | 26. Inner thrust washer |
| 8. Retaining ring | 18. Friction plate, paper (7) | 27. Needle bearing Inner race |
| 9. Retaining ring | 19. Steel plate (7) | 28. Needle bearing |
| 10. Spring seat | | 29. Clutch shell and sprocket |
| | | 30. Outer thrust washer |

Figure 6-11. Clutch Assembly

REMOVAL

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Remove negative battery cable from battery.
2. Drain the transmission fluid. See [TRANSMISSION FLUID](#) under [1.9 CLUTCH](#).
3. Remove primary cover. See [6.2 PRIMARY COVER](#).

WARNING

Do not attempt to disassemble the clutch without **SPRING COMPRESSING TOOL** (Part No. HD-38515-A), **CLUTCH SPRING FORCING SCREW** (Part No. HD-38515-91) and proper eye protection. Otherwise, the highly compressed diaphragm spring could fly out with great force which could result in death or serious injury.

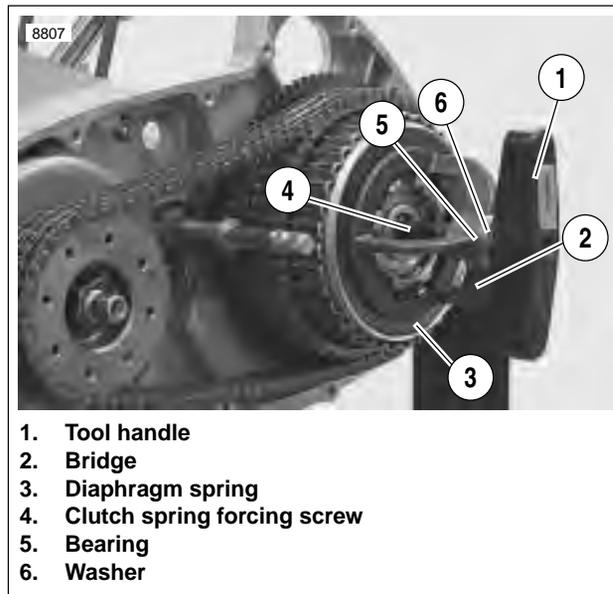


Figure 6-12. Compressing Clutch Diagram Spring

4. See [Figure 6-12](#). Attach tools to compress clutch diaphragm spring.
 - a. Thread the CLUTCH SPRING FORCING SCREW (Part No. HD-38515-91) onto the clutch adjusting screw.
 - b. Place the bridge of SPRING COMPRESSING TOOL (Part No. HD-38515-A) against diaphragm spring.
 - c. Install bearing and washer.
 - d. Thread the tool handle onto end of forcing screw.

CAUTION

See [Figure 6-13](#). Turn compressing tool handle only the amount required to release spring seat and remove snap ring. Excessive compression of diaphragm spring could damage clutch pressure plate.



Figure 6-13. Pressure Plate Assembly

5. See [Figure 6-13](#). Remove pressure plate assembly.
 - a. Place a wrench on the clutch spring forcing screw flats to prevent the forcing screw from turning.
 - b. Turn compressing tool handle clockwise until tool relieves pressure on retaining ring and spring seat. Remove and discard retaining ring.
 - c. Unseat spring seat from the groove in clutch hub prongs.
 - d. Remove pressure plate assembly.
6. Remove the clutch pack from the shell/hub assembly.

ADJUSTING SCREW DISASSEMBLY/ASSEMBLY

1. See [Figure 6-14](#). Remove adjusting screw assembly.
 - a. Remove large retaining ring.
 - b. Remove adjusting screw assembly from pressure plate.
2. If necessary, disassemble adjusting screw assembly.
 - a. Remove and discard small retaining ring (6).
 - b. Separate the adjusting screw (8) from the bearing (7) and release plate (5).
 - c. Remove bearing (7) from release plate (5).

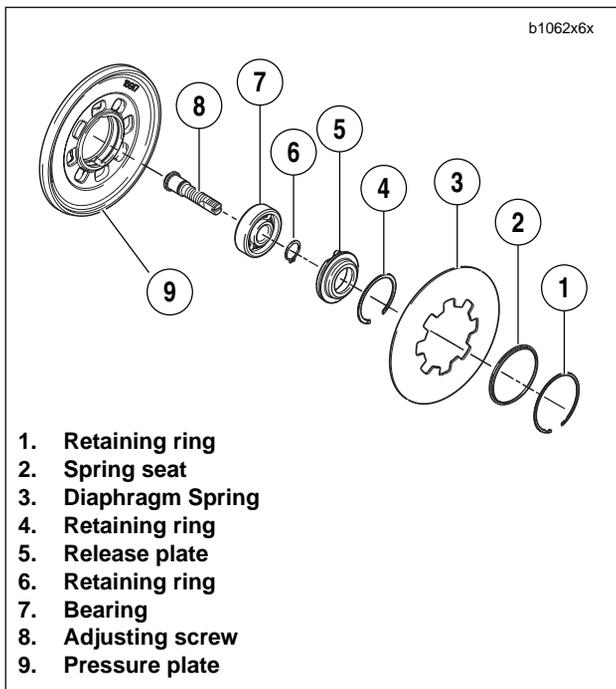


Figure 6-14. Adjusting Screw Assembly

3. Replace components as required and reassemble adjusting screw assembly in reverse order.
4. Install adjusting screw assembly into pressure plate.
 - a. See [Figure 6-36](#). Align two tabs on perimeter of release plate with corresponding recesses (3) in pressure plate.
 - b. Secure the adjusting screw assembly with **new** retaining ring.

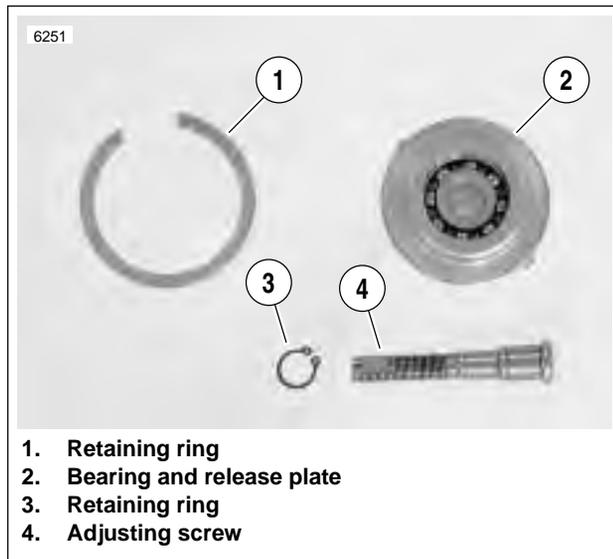


Figure 6-15. Adjusting Screw Assembly

CLUTCH PACK CLEANING AND INSPECTION


⚠ WARNING

Low pressure compressed air can blow debris into your face and eyes. Always wear eye protection or a face shield when using pressurized air. Failure to take adequate safety precautions could result in death or serious injury.

1. Separate the pack in to the following components:
 - a. Seven fiber plates.
 - b. Seven steel plates.
 - c. One narrow fiber plate.
 - d. One damper spring.
 - e. One damper spring seat
2. Wash all parts, except fiber (friction) plates and bearing in the clutch hub/shell, in cleaning solvent. Blow dry with compressed air.
3. Examine the clutch components as follows:
 - a. Check all clutch plates for wear and discoloration.
 - b. Inspect each steel (drive) plate for grooves.
 - c. Place each steel plate on a flat surface. Using a feeler gauge, check for flatness in several places. Replace any plates that are damaged or are warped more than 0.006 in. (0.15 mm).
4. Inspect the damper spring for cracks or distortion. Install a **new** spring if either condition exists.
5. See [Figure 6-16](#). Check fiber plates for thickness.
 - a. Wipe the lubricant from the eight fiber plates (7 regular and 1 narrow) and stack them on top of each other.
 - b. Measure the thickness of the eight stacked fiber plates with a dial caliper or micrometer. The minimum thickness must be 0.661 in. (16.789 mm).
 - c. If the thickness is less than specified, discard the fiber plates and steel plates. Install a **new** set of both friction and steel plates.



Figure 6-16. Measuring Friction Plates

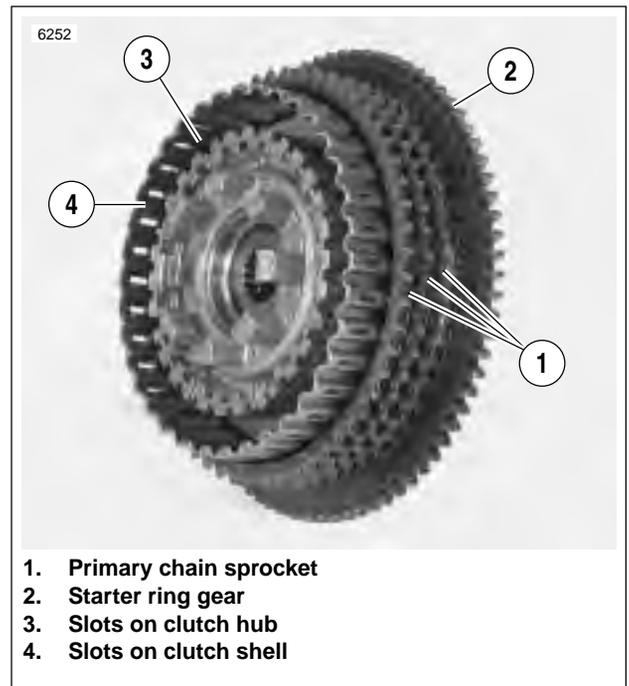

1. Primary chain sprocket
2. Starter ring gear
3. Slots on clutch hub
4. Slots on clutch shell

Figure 6-17. Checking Clutch Shell
(Shell Removed from Primary Shaft)

6. See [Figure 6-17](#). Inspect primary chain sprocket and the starter ring gear on the clutch shell. If either sprocket or ring gear are badly worn or damaged, replace the clutch shell. See [6.5 PRIMARY CHAIN](#).
7. Inspect slots that mate with the clutch plates on both clutch shell and hub. If slots are worn or damaged, replace shell and/or hub. See [6.5 PRIMARY CHAIN](#).

ASSEMBLY AND INSTALLATION

1. Submerge and soak all friction and steel plates in SPORT-TRANS FLUID for at least five minutes.
2. See Figure 6-18. Install narrow friction plate on the clutch hub engaging tabs on plate with slots in clutch shell.
3. See Figure 6-19. Install damper spring seat (5) on clutch hub so that it seats inboard of narrow friction plate (4).
4. Install damper spring (1) on clutch hub with the concave side up (facing opposite damper spring seat).
5. Install a steel plate and then a friction plate on the clutch hub. Install six remaining sets in the same manner, alternating between steel plates and friction plates.

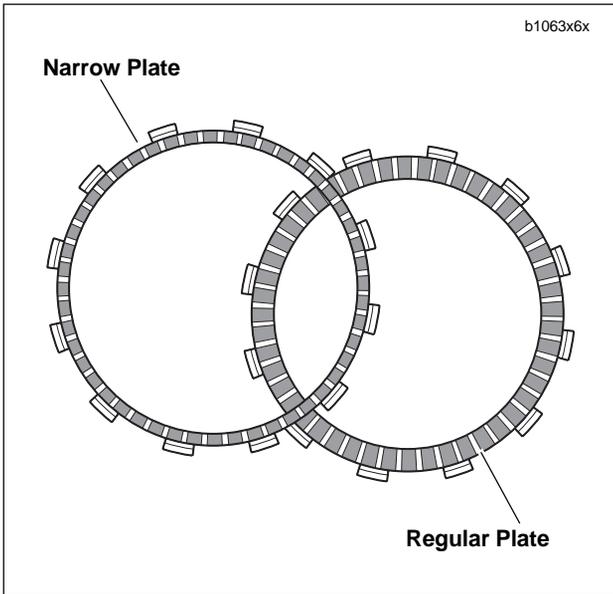


Figure 6-18. Friction Plates

6. Place pressure plate, diaphragm spring, adjusting screw assembly with **new** retaining ring and spring seat onto clutch pack.
 - a. See Figure 6-20. Align square openings of pressure plate and diaphragm spring so that the assembly can be installed over prongs on clutch hub.

CAUTION

Position spring seat with its larger outer diameter side toward diaphragm spring. See Figure 6-13. Turn compressing tool handle **only the amount required to install spring seat and snap ring**. Excessive compression of diaphragm spring could damage clutch pressure plate.

- b. See Figure 6-21. Install SPRING COMPRESSING TOOL (Part No. HD-38515-A) onto clutch hub against diaphragm spring.
- c. Place a wrench on the clutch spring forcing screw flats to prevent the forcing screw from turning.
- d. Turn compressing tool handle clockwise until diaphragm spring compresses just enough to install **new** retaining ring into the groove in clutch hub prongs.
- e. With retaining ring fully seated in groove of clutch hub, carefully loosen and remove compression tool.

NOTE

When the compressing tool is removed, the diaphragm spring will move outward forcing the spring seat up into the inside of the retaining ring. The spring seat provides an operating surface for the diaphragm spring at the same time preventing the retaining ring from coming out during operation.

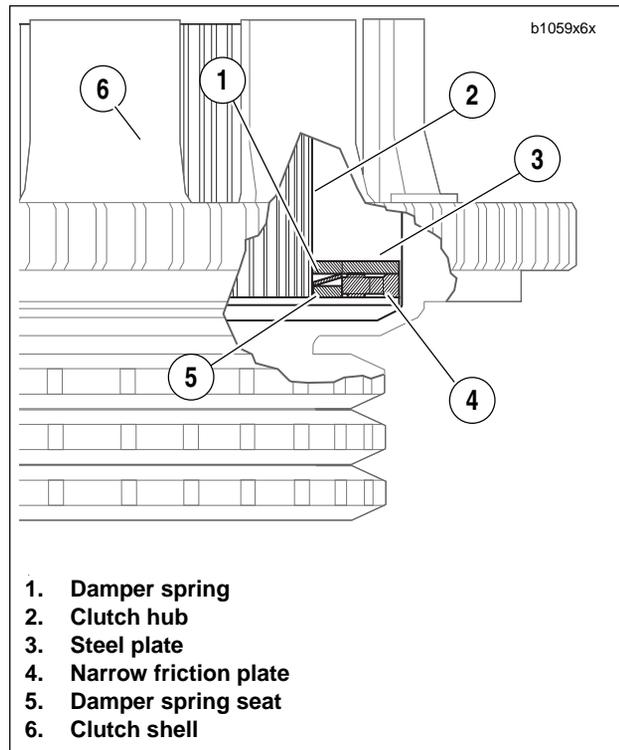


Figure 6-19. Clutch Pack Stack-Up (Cut-Away View)

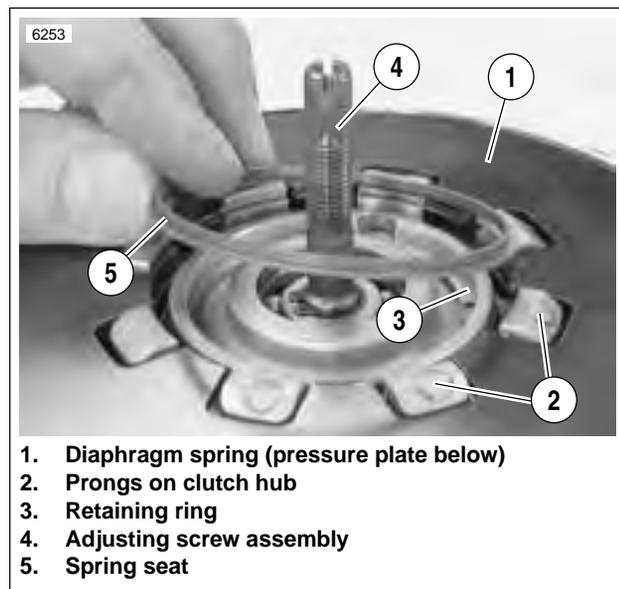


Figure 6-20. Spring Seat Installation



Figure 6-21. Pressure Plate Assembly

7. Install primary cover. See [6.2 PRIMARY COVER](#).
8. Adjust Clutch. See [1.9 CLUTCH](#).
9. Fill with SPORT-TRANS FLUID. See [1.9 CLUTCH](#).

⚠ WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

10. Connect negative battery cable to battery terminal. Tighten fastener to 76-96 **in-lbs** (8.6-10.9 Nm).

⚠ WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury.

11. Install seat. See [2.38 SEAT](#).

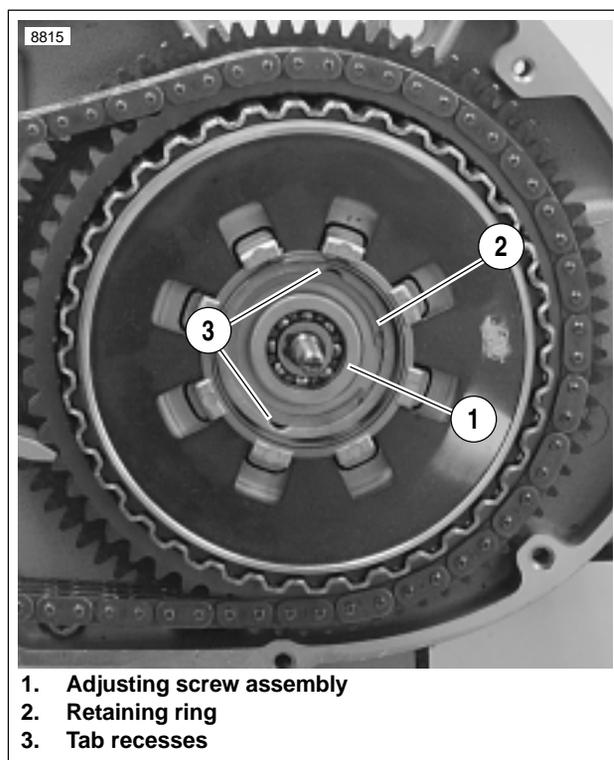


Figure 6-22. Clutch Adjusting Screw Assembly and Retaining Ring

GENERAL

Since the primary chain runs in lubricant, little service will be required other than checking lubricant level and chain tension. If, through hard usage, the primary chain does become worn and cannot be adjusted to within specifications, it must be replaced. See [1.11 PRIMARY CHAIN](#).

An opening between the primary drive and transmission compartments allows the same lubricant supply to lubricate moving parts in both areas.

REMOVAL

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Remove negative battery cable from battery.
2. Drain the transmission fluid. See [TRANSMISSION FLUID](#) under [1.9 CLUTCH](#).
3. Remove primary cover. See [6.2 PRIMARY COVER](#).



Figure 6-23. Sprocket Locking Link Tool (Part No. HD-38362) for XB9R models and (Part No. HD-46283) for XB12R models.

4. Loosen engine sprocket.
 - a. See [Figure 6-23](#). Install SPROCKET LOCKING LINK (Part No. HD-38362).
 - b. Remove the engine sprocket nut.
 - c. Loosen but do not remove engine sprocket. If necessary, use the slotted portion of TWO CLAW PULLER (Part No. HD-97292-61) and two bolts to loosen the engine sprocket.
5. See [Figure 6-15](#). Remove adjusting screw assembly.
 - a. Remove large retaining ring.
 - b. Remove adjusting screw assembly from pressure plate.

CAUTION

See [Figure 6-24](#). Mainshaft nut has left-hand threads. To prevent damage, turn nut clockwise to loosen and remove from mainshaft.

6. See [Figure 6-24](#). Remove mainshaft nut and washer.
7. Remove the clutch, clutch shell/hub, primary chain and engine sprocket as a unit.

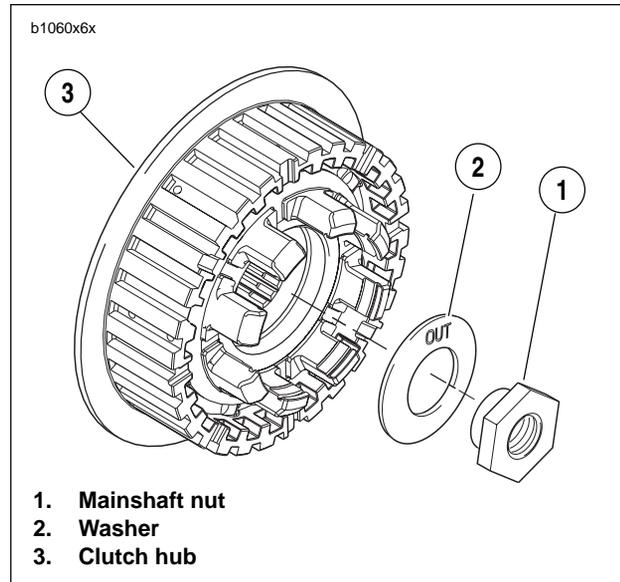


Figure 6-24. Mainshaft Nut and Washer

CLUTCH SHELL/HUB INSPECTION

1. Separate primary chain, engine sprocket and clutch shell/hub assembly.
2. Inspect engine sprocket for damage or excessive wear. Replace as required.
3. Attach tools to compress clutch diaphragm spring and remove pressure plate assembly. See [6.4 CLUTCH](#).

CAUTION

The clutch hub and clutch shell are no longer pressed together. There are no retaining rings securing the clutch hub to the clutch shell. Once the pressure plate assembly has been removed the clutch hub will slide out of the clutch shell.

4. Remove clutch pack. Disassemble, clean and inspect clutch pack. See [CLUTCH PACK CLEANING and INSPECTION](#) under [6.4 CLUTCH](#).
5. Disassemble adjusting screw assembly and inspect bearing, release plate, and adjusting screw. See [ADJUSTING SCREW DISASSEMBLY/ASSEMBLY](#) under [6.4 CLUTCH](#).
6. Remove clutch hub from clutch shell. Inspect primary chain sprocket and the starter ring gear on the clutch shell.
7. Inspect slots that mate with the clutch plates on both clutch shell and hub.
8. See [Figure 6-25](#). Inspect the clutch shell compensating spring set.
9. See [Figure 6-26](#). Inspect clutch shell needle bearing for smoothness. Rotate the clutch shell while holding the clutch hub. If bearing is rough or binds, it must be replaced. See [CLUTCH SHELL BEARING REPLACEMENT](#).
1. See [Figure 6-27](#). Inspect clutch shell bearing inner race on the back side of the clutch hub for pitting and wear. If the inner race shows any of these signs the complete hub assembly must be replaced.
10. Replace damaged parts as necessary.

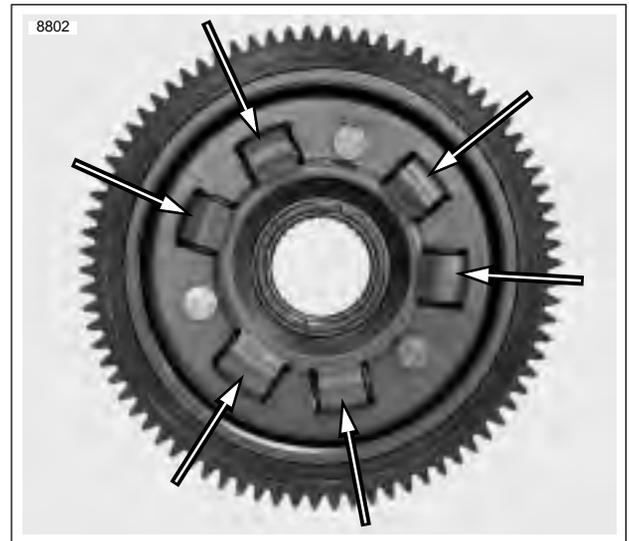


Figure 6-25. Compensating Spring Set

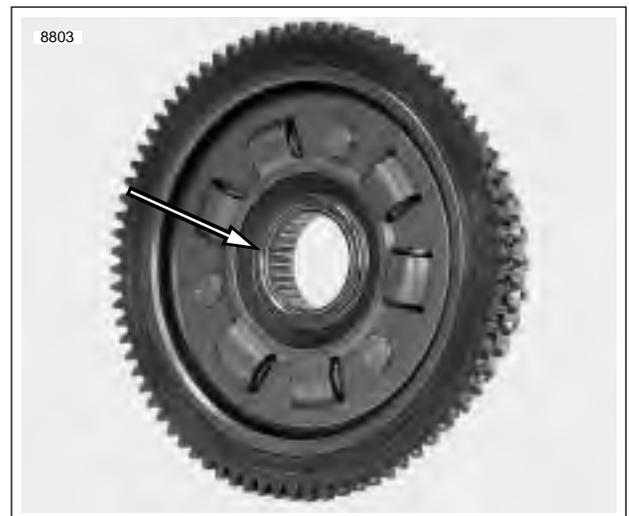


Figure 6-26. Needle Bearing in Clutch Shell



Figure 6-27. Clutch Hub Bearing Race

CLUTCH SHELL BEARING REPLACEMENT

NOTE


The clutch shell uses a caged needle bearing that corresponds to an inner race installed on the clutch hub.

1. See Figure 6-29. Place clutch shell on support blocks with sprocket side facing up.

NOTE

The CLUTCH SHELL BEARING REMOVER/INSTALLER (Part No. B-45926) is clearly marked for removal and installation purposes.

2. See Figure 6-29. Insert removal end of tool into bearing assembly and remove bearing from clutch shell.
3. See Figure 6-30. Remove bearing guide from end of CLUTCH SHELL BEARING REMOVER/INSTALLER (Part No. B-45926).

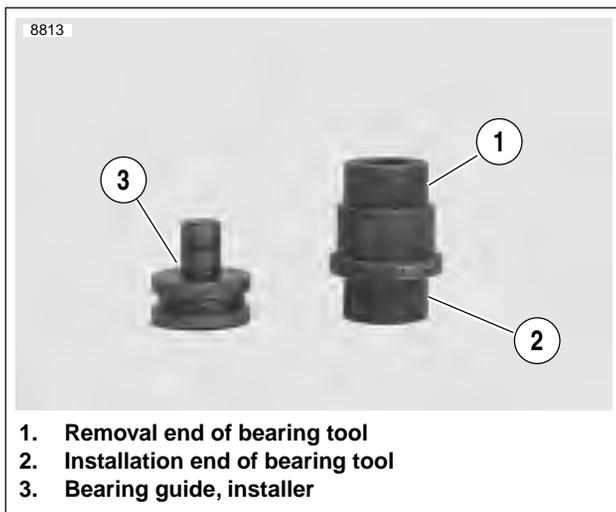


1. Removal end of bearing tool
2. Installation end of bearing tool
3. Bearing guide, installer

Figure 6-28. Clutch Shell Bearing Remover/Installer B-45926



Figure 6-29. Removing Clutch Shell Needle Bearing

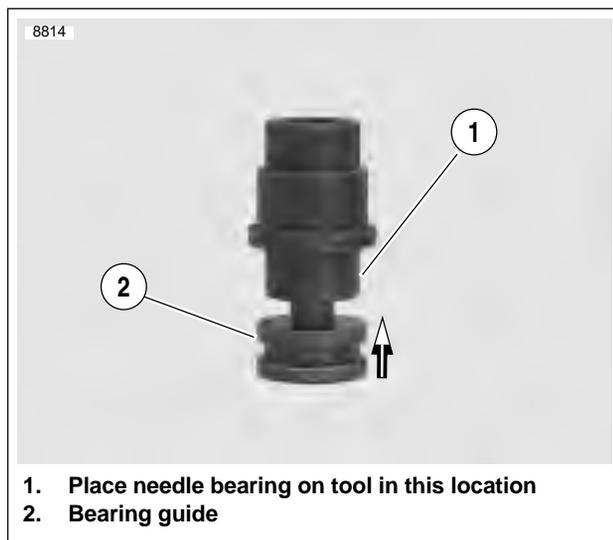

1. Place needle bearing on tool in this location
2. Bearing guide

Figure 6-30. Bearing Installer

4. Place **new** needle bearing onto installer end of tool and insert the bearing guide to prevent the bearing from falling off during installation and to align bearing with clutch shell.
5. See Figure 6-31. Place clutch shell on support blocks with sprocket side facing up.
6. Press bearing into clutch shell until tool bottoms on the shell. This will be the correct installed height.

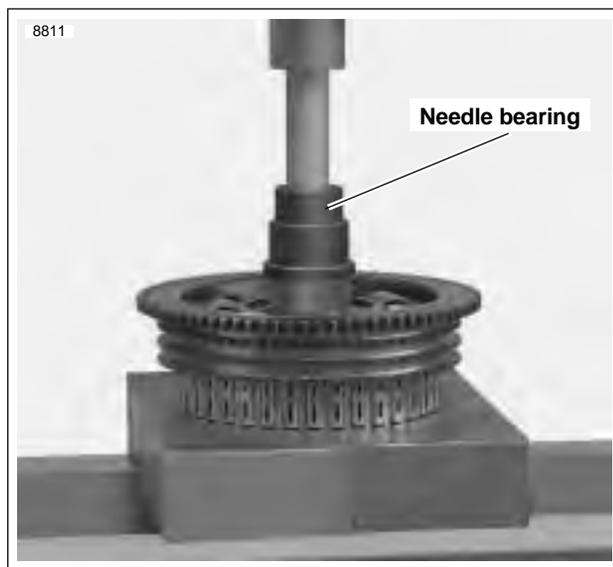


Figure 6-31. Installing Clutch Shell Needle Bearing Clutch Shell Bearing Remover/Installer B-45926

INSTALLATION

NOTE

Prior to installing engine sprocket nut and the clutch hub nut, the threads on the sprocket shaft, sprocket nut, mainshaft and clutch hub nut must be thoroughly cleaned to remove any oil that might contaminate and interfere with the locking agent.

1. See [Figure 6-32](#). Assemble clutch hub (1) and shell (3) by sliding inboard end of clutch hub into shell bearing(2) by hand. No tools are required.
2. Submerge and soak all friction and steel plates in SPORT-TRANS FLUID for at least five minutes and assemble clutch pack in sequence in the clutch hub. See [ASSEMBLY](#) and [INSTALLATION](#) under 6.4 CLUTCH.
3. Verify that outer thrust washer (4) is installed on transmission shaft.
4. Install the engine sprocket, clutch assembly and primary chain as a unit into primary chaincase.
5. See [Figure 6-33](#). Install the engine sprocket nut.
 - a. Install SPROCKET LOCKING LINK (Part No. HD-38362).
 - b. Apply two or three drops of LOCTITE 262 (red) onto threads of sprocket shaft.
 - c. Install engine sprocket nut. Tighten to 190-210 ft-lbs (257.6-284.7 Nm).

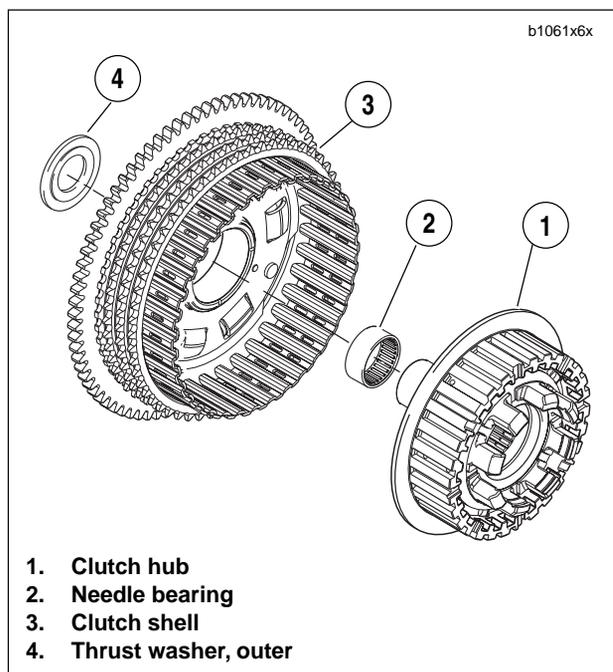


Figure 6-32. Clutch Hub and Shell Assembly

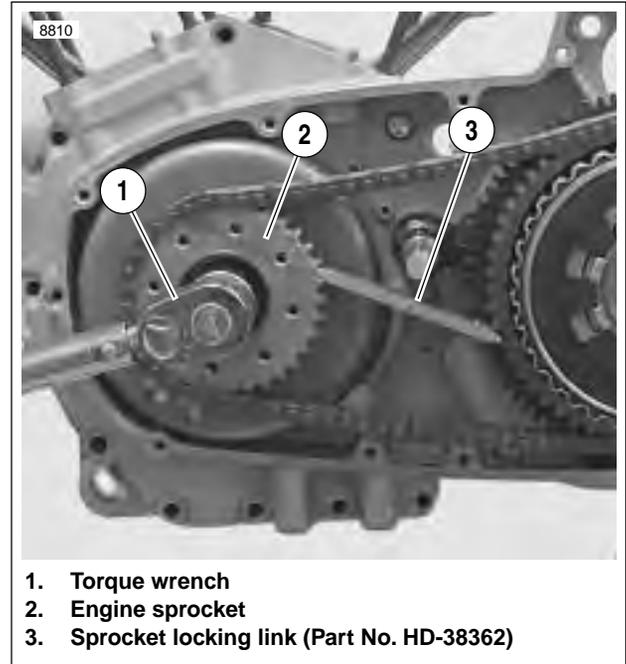


Figure 6-33. Sprocket Locking Link Tool (Part No. HD-38362) for XB9R models and (Part No. HD-46283) for XB12R models.

CAUTION

See [Figure 6-34](#). Washer must be installed with the word "out" facing the mainshaft nut or transmission may be damaged.

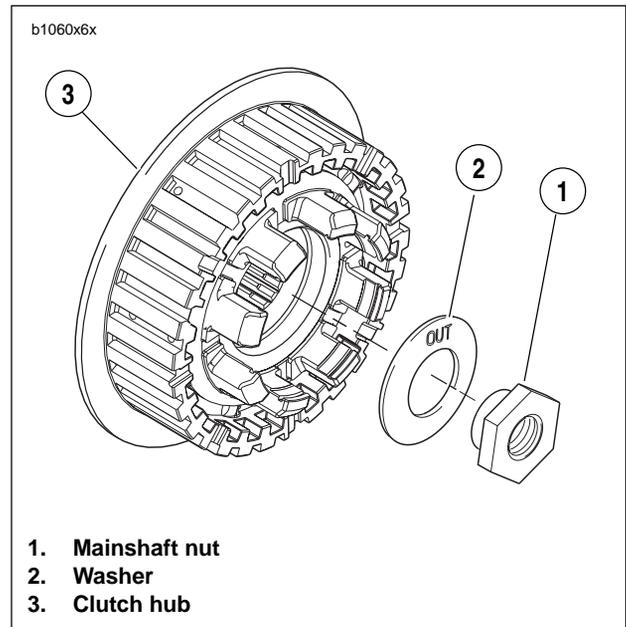


Figure 6-34. Mainshaft Nut and Washer

6. See [Figure 6-34](#). Install mainshaft washer (2) and nut (1).
 - a. Apply two or three drops of LOCTITE 262 (red) onto threads on end of mainshaft.
 - b. Place washer (2) on mainshaft with the word “out” facing away from clutch hub.
 - c. Install nut (**left-hand threads**) (1). Tighten to 70-80 ft-lbs (94.9-108.5 Nm).
7. Remove SPROCKET LOCKING LINK.
8. Install the pressure plate assembly. See [6.4 CLUTCH](#).
9. Install adjusting screw assembly into pressure plate.
 - a. See [Figure 6-36](#). Align two tabs on perimeter of release plate with corresponding recesses (3) in pressure plate.
 - b. Secure the adjusting screw assembly with **new** retaining ring.
10. Install primary cover. See [6.2 PRIMARY COVER](#).
11. Adjust Clutch. See [1.9 CLUTCH](#).
12. Add SPORT-TRANS FLUID. See [TRANSMISSION FLUID](#) under [1.9 CLUTCH](#).

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

13. Connect negative battery cable to battery terminal. Tighten fastener to 72-96 in-lbs (8.1-10.9 Nm).

WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury.

14. Install seat. See [2.38 SEAT](#).

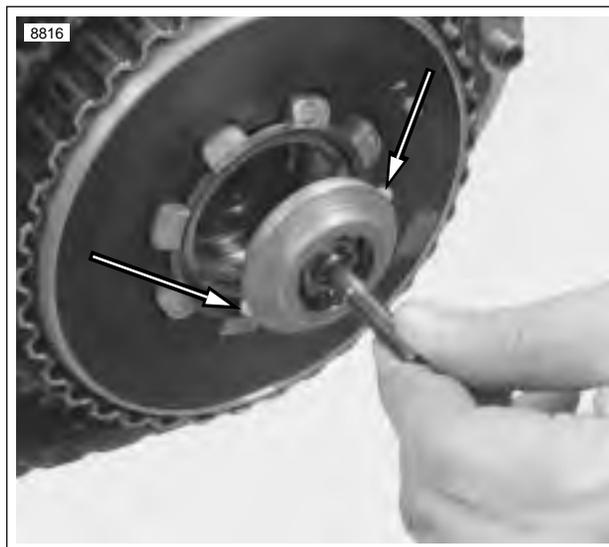


Figure 6-35. Adjusting Screw Assembly Aligning Tabs

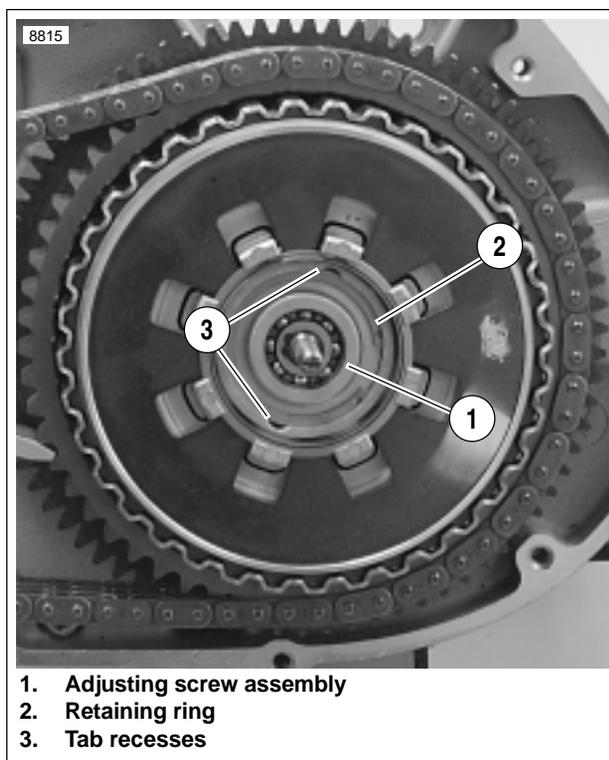


Figure 6-36. Clutch Adjusting Screw Assembly and Retaining Ring

GENERAL

There is no drive belt adjustment required for the Buell Firebolt. The system utilizes a fixed idler pulley that maintains the desired tension throughout suspension travel and life of the belt.

INSPECTION & CLEANING

See 1.10 DRIVE BELT.

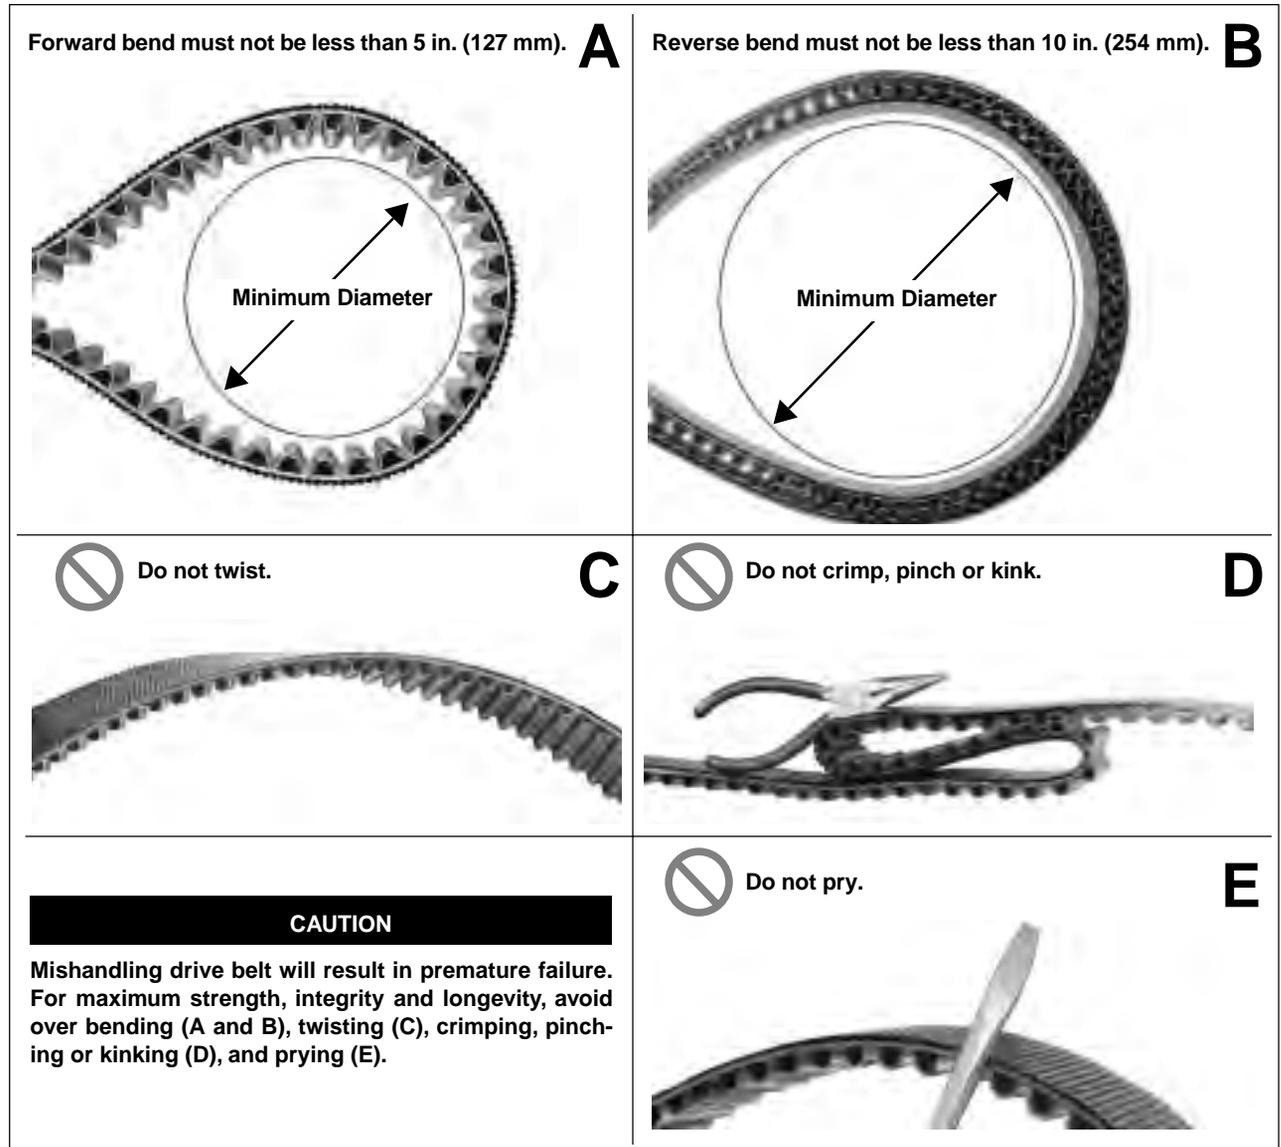


Figure 6-37. Proper Drive Belt Handling

DRIVE BELT REMOVAL

1. Place a scissor jack under jacking point and raise rear wheel off ground. For location of jacking point see [2.28 EXHAUST SYSTEM](#).
2. Remove right side rider footpeg support bracket. See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).

NOTE

The right rear chin fairing fasteners must be removed to access the front sprocket cover.

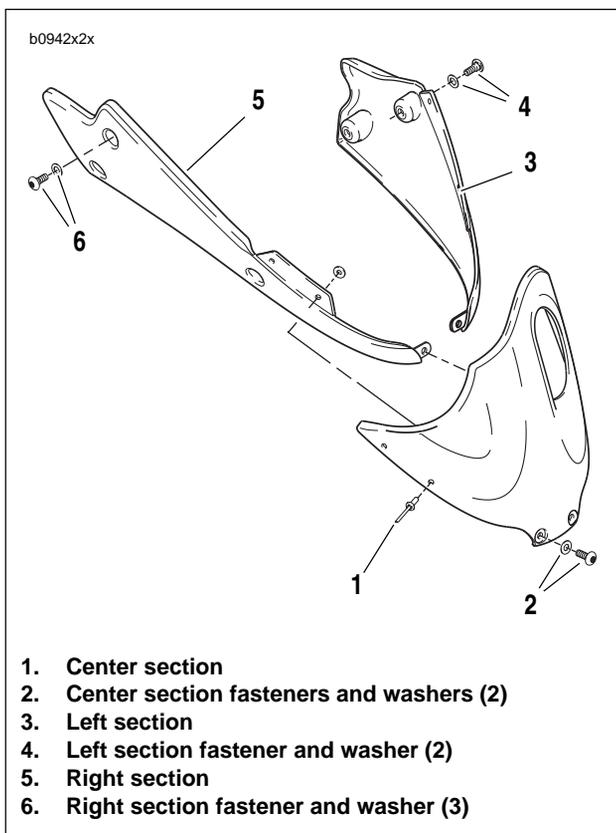


Figure 6-38. Chin Fairing Assembly

3. Remove right rear chin fairing fasteners. See [2.33 CHIN FAIRING](#).

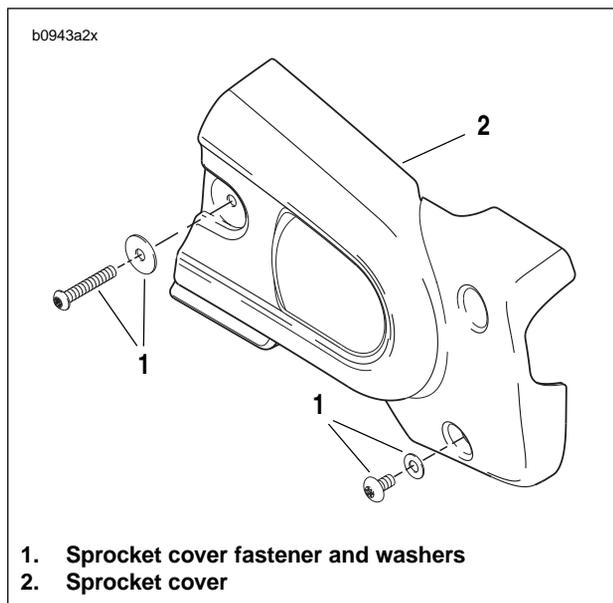


Figure 6-39. Sprocket Cover

4. See Figure 6-39. Remove sprocket cover. See [2.30](#).

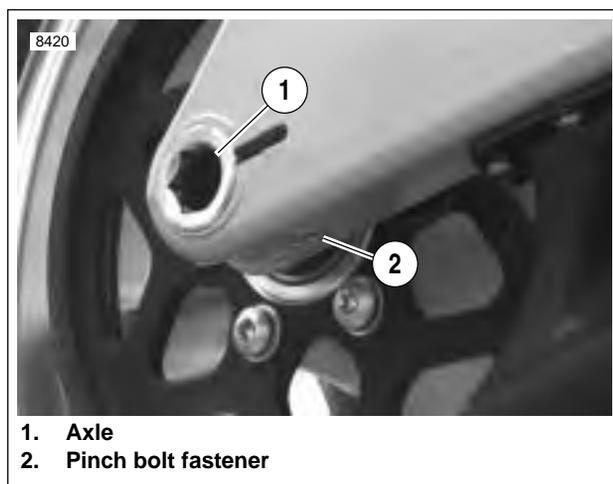


Figure 6-40. Rear Wheel Mounting, Right Side

5. See [Figure 6-40](#). Loosen rear axle pinch fastener (2).
6. Loosen rear axle (1) approximately 15 rotations to allow partial tension to be removed from rear drive system.
7. Remove idler pulley assembly by removing nuts and washers. See [IDLER PULLEY REMOVAL](#) in [6.6 DRIVE BELT SYSTEM](#).
8. Remove swingarm brace. See [2.19 SWINGARM AND BRACE](#).

CAUTION

When removing or installing belt, do not bend or twist belt, partially slide belt onto sprocket and “roll” wheel or belt damage will occur.

9. Slide belt from sprocket and remove.
10. Remove rear axle.

DRIVE BELT INSTALLATION

CAUTION

When removing or installing belt, do not bend or twist belt, partially slide belt onto sprocket and "roll" wheel or belt damage will occur.

1. Slide belt onto sprocket.
2. Install swingarm brace and tighten fasteners to 25-27 ft-lbs (34-37 Nm). See [2.19 SWINGARM AND BRACE](#).
3. Apply ANTI-SEIZE LUBRICANT to hole in right side of swingarm where rear axle slides through.

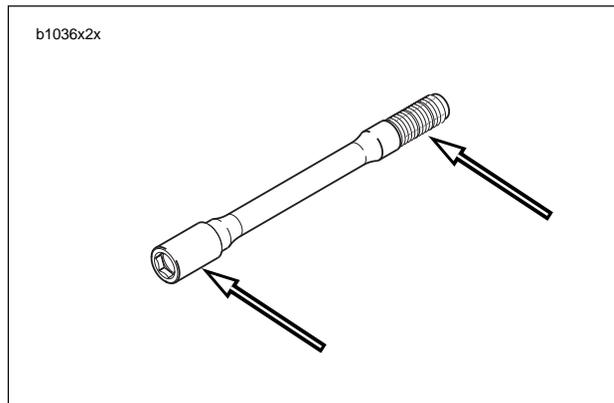



Figure 6-41. Anti-Seize Lubricant Location

4. See [Figure 6-41](#). Coat rear axle with ANTI-SEIZE LUBRICANT.
5. Slide axle through right side of swing arm and wheel hub and thread partially into swingarm on left side.

NOTE

See [Figure 6-42](#). Occasionally the drive belt is not fully seated in rear sprocket making it difficult to install the idler pulley. It will be necessary to follow the outlined procedure in order to easily install idler pulley.

6. See [Figure 6-42](#). Grasp top and bottom of drive belt and squeeze together until belt teeth are fully seated in rear sprocket.
7. While keeping tension on lower belt, install idler pulley assembly tightening washers and nuts to 33-35 ft-lbs (45-47 Nm). See [IDLER PULLEY REMOVAL](#) in [6.6 DRIVE BELT SYSTEM](#).
8. See [Figure 6-40](#). Tighten rear axle (1) to 23-27 ft-lbs (31.2-36.6 Nm), back off two full turns and then retighten to 48-52 ft-lbs (65.1-70.5 Nm).
9. Tighten rear axle pinch fastener (2) to 40-45 ft-lbs (54-61 Nm).
10. See [Figure 6-39](#). Install front sprocket cover (2) by tightening fasteners to 12-36 in-lbs (1-4 Nm). See [2.30 SPROCKET COVER](#).
11. Install chin fairing fasteners and tighten to 36-48 in-lbs (4-5 Nm). See [2.33 CHIN FAIRING](#).
12. Install right side rider footpeg mount and tighten fasteners to 108-132 in-lbs (12-15 Nm). See [2.29 FOOTPEG, HEEL GUARD AND MOUNT](#).
13. Remove scissor jack from motorcycle.

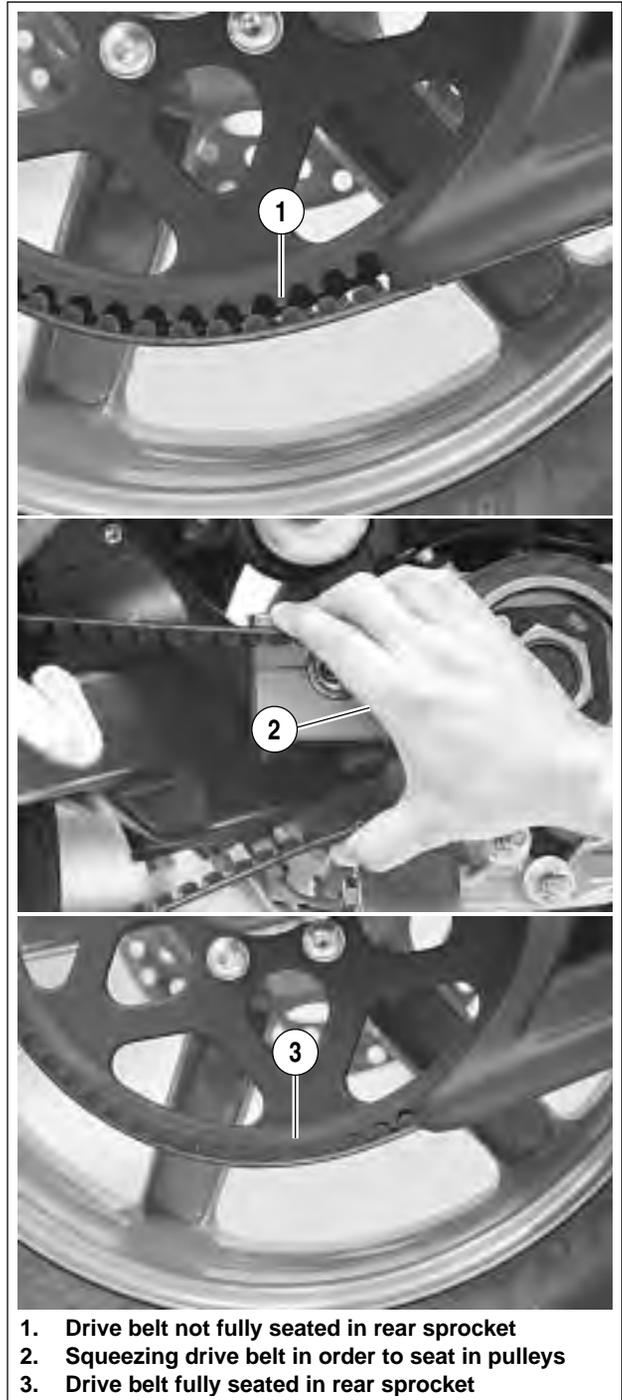

1. Drive belt not fully seated in rear sprocket
2. Squeezing drive belt in order to seat in pulleys
3. Drive belt fully seated in rear sprocket

Figure 6-42. Seating Drive Belt Into Pulley Teeth

IDLER PULLEY REMOVAL

1. See [Figure 6-43](#). Loosen rear axle pinch fastener (2).
2. Unthread axle approximately 15 rotations to release tension from drive belt.
3. Remove chin fairing fasteners. See [2.33 CHIN FAIRING](#).
4. Remove front sprocket cover. See [2.30 SPROCKET COVER](#).
5. See [Figure 6-44](#). Remove idler pulley bracket nuts and washers (5) from studs (3).
6. Slide idler pulley bracket (4) off studs (3).
7. See [Figure 6-44](#). Inspect pulley by spinning wheel (1) and checking for wheel bearing wear. See [INSPECTION](#) under [1.10 DRIVE BELT](#).
8. If pulley wheel needs replacement, remove fastener (6), washer and nut (2) from idler pulley bracket (4) and discard wheel. Replace with **new** pulley wheel (1).

NOTE

The pulley wheel bearings can not be replaced separately.

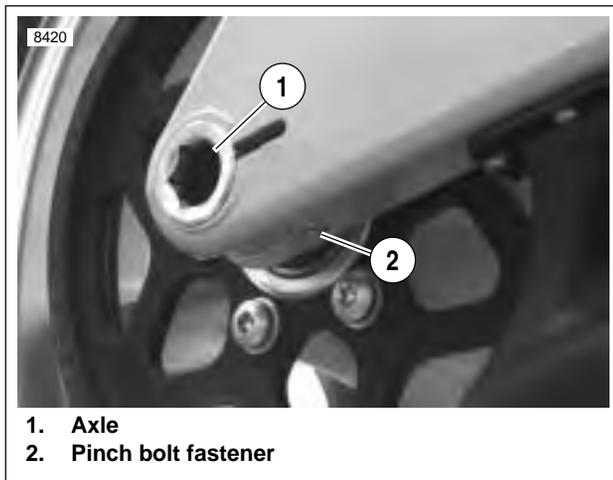


Figure 6-43. Rear Wheel Mounting, Right Side

IDLER PULLEY INSTALLATION

1. See [Figure 6-44](#). Install new or existing pulley wheel (1), if removed, and tighten washer and nut (2) wheel fastener (6) to 20-23 ft-lbs (27.1-31.2 Nm).
2. Slide idler pulley bracket (4), washer and nuts (5) on to studs (3) and tighten to 33-35 ft-lbs (45-47 Nm). See [DRIVE BELT INSTALLATION](#).
3. Install front sprocket cover. See [2.30 SPROCKET COVER](#).
4. Install chin fairing fasteners and tighten to 36-48 in-lbs (4-5 Nm). See [2.33 CHIN FAIRING](#).

CAUTION

Never tighten rear axle with swingarm brace removed.

5. See [Figure 6-43](#). Install and tighten rear axle (1) to 23-27 ft-lbs (31.2-36.6 Nm), back off two full turns and then retighten to 48-52 ft-lbs (65.1-70.5 Nm). See [6.6 DRIVE BELT SYSTEM](#).
6. Tighten rear axle pinch fastener (2) to 40-45 ft-lbs (54-61 Nm).

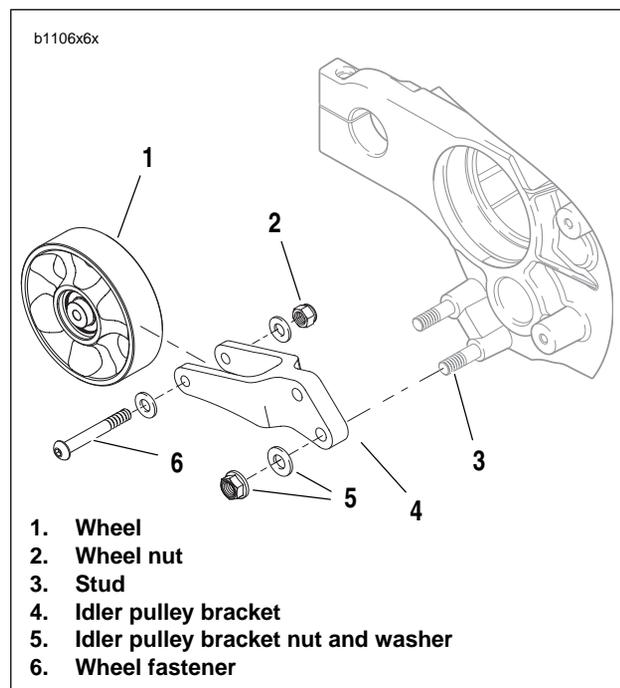


Figure 6-44. Idler Pulley Assembly

GENERAL

See Figure 6-45. The transmission is a five-speed constant-mesh type housed in an extension of the crankcase.

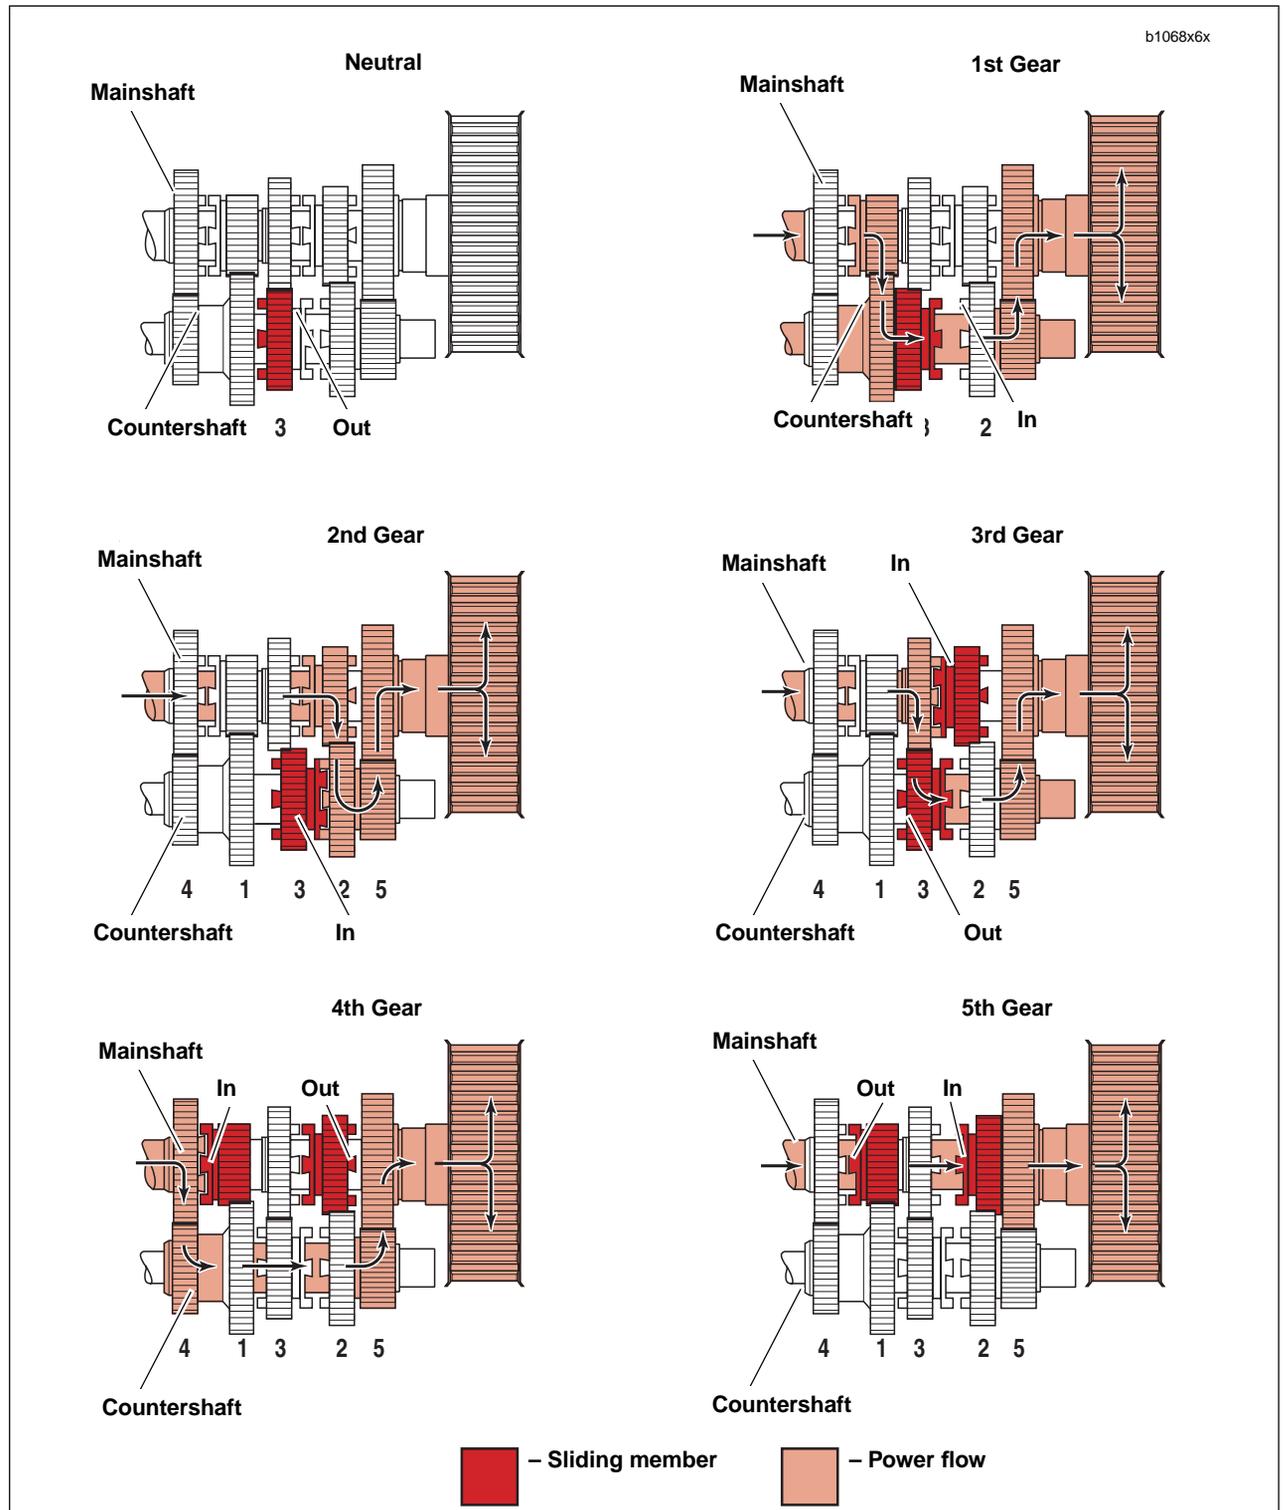


Figure 6-45. Transmission Power Flow

CASE DISASSEMBLY FOR TRANSMISSION REMOVAL 6.8

GENERAL

The rear compartment of the left and right crankcase halves form the transmission case. Servicing of transmission components requires removing the engine and disassembling (splitting) the crankcase.

RIGHT CRANKCASE REMOVAL

1. Remove transmission sprocket. See [6.16 TRANSMISSION SPROCKET](#).
2. Remove engine from chassis. See [3.4 STRIPPING MOTORCYCLE FOR ENGINE SERVICE](#).
3. Support engine using ENGINE SUPPORT STAND (Part No. HD-42310/HD-43646 or HD-43682).
4. Disassemble top end. See [3.6 CYLINDER HEAD](#).
5. Disassemble gearcase. See [3.16 GEARCASE COVER AND CAM GEARS](#).
6. Remove primary cover. See [6.2 PRIMARY COVER](#).
7. Remove clutch assembly, primary chain and engine sprocket. See [6.4 CLUTCH](#).


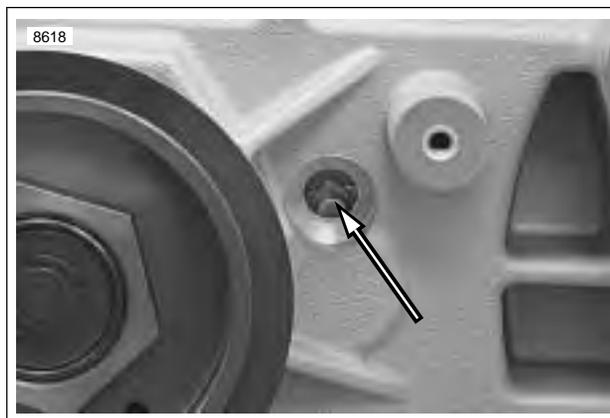


Figure 6-47. Shifter Drum Neutral Detent

9. See [Figure 6-47](#). Place transmission in neutral. Remove neutral switch to ensure shifter drum detent is visible indicating transmission is in correct location.

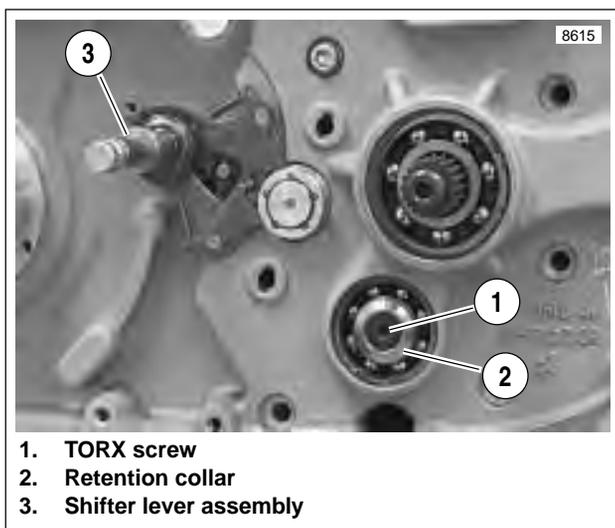

1. TORX screw
2. Retention collar
3. Shifter lever assembly

Figure 6-46. Countershaft Retainer

8. See [Figure 6-46](#). Place transmission in 1st gear. Remove countershaft TORX screw (1) and retention collar (2).


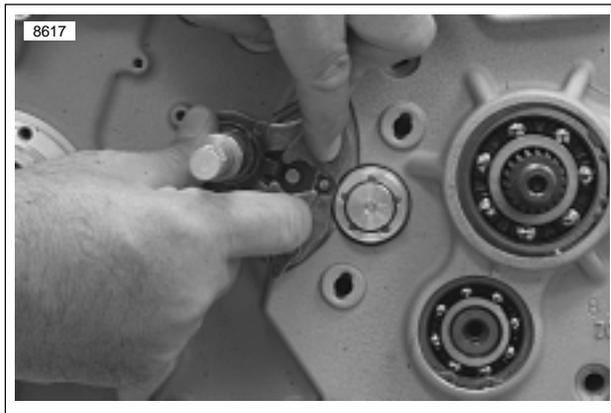


Figure 6-48. Removing Shifter Shaft Assembly

10. See [Figure 6-49](#). Remove shifter shaft assembly.

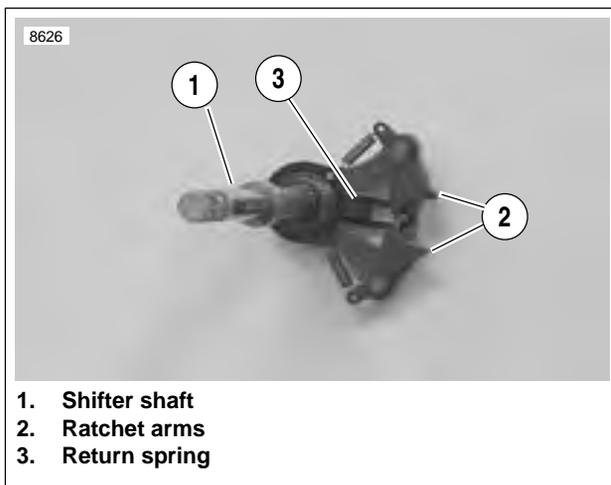

- 1. Shifter shaft
- 2. Ratchet arms
- 3. Return spring

Figure 6-49. Shifter Shaft Assembly

11. See [Figure 6-48](#). Depress ratchet arms in order to clear the shifter drum and remove shifter shaft assembly from left crankcase half.

12. Remove starter. See [5.7 STARTER](#).



Figure 6-50. Rear Isolator Assembly

13. See [Figure 6-50](#). Remove rear isolator assembly by removing the forward two fasteners first and then the two rear fasteners (re-install with **new** fasteners).

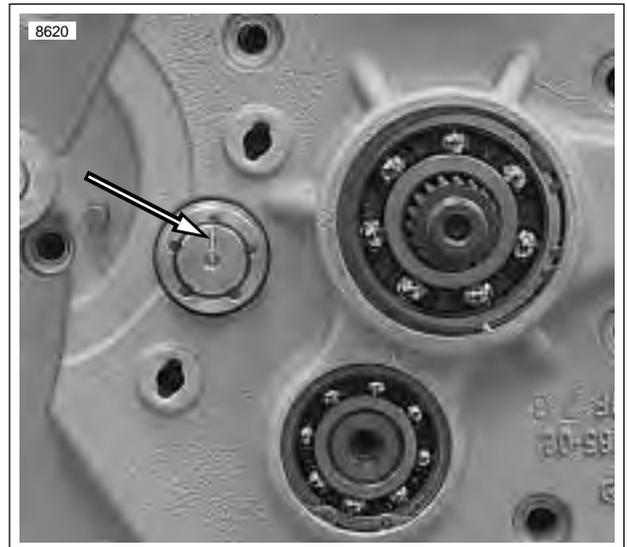


Figure 6-51. Scribed Line on Shifter Drum at 12 o'clock (Transmission in Neutral)

14. See [Figure 6-51](#). Scribe a line on the end of the shifter drum at the 12 o'clock position for later reference.

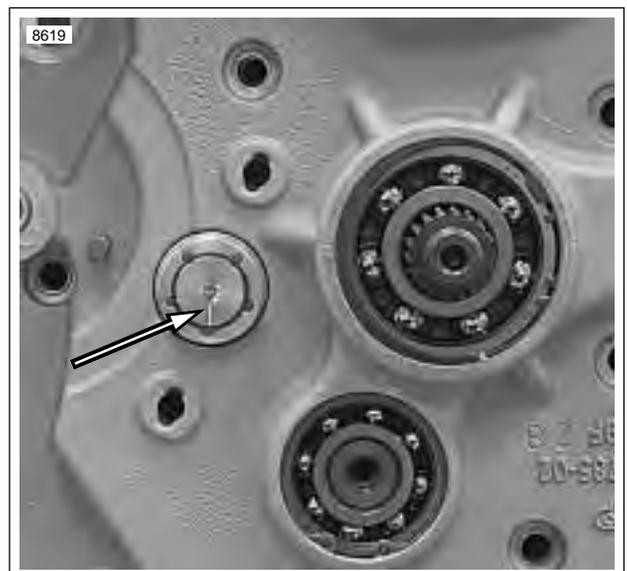


Figure 6-52. Scribed Line on Shifter Drum at 6 O'clock (Transmission in 4th Gear)

15. See [Figure 6-52](#). Place transmission in 4th gear. The scribed line should now be at the 6 o'clock position.

NOTE

Transmission can be easily shifted by rotating the mainshaft and shifter drum at the same time by hand.

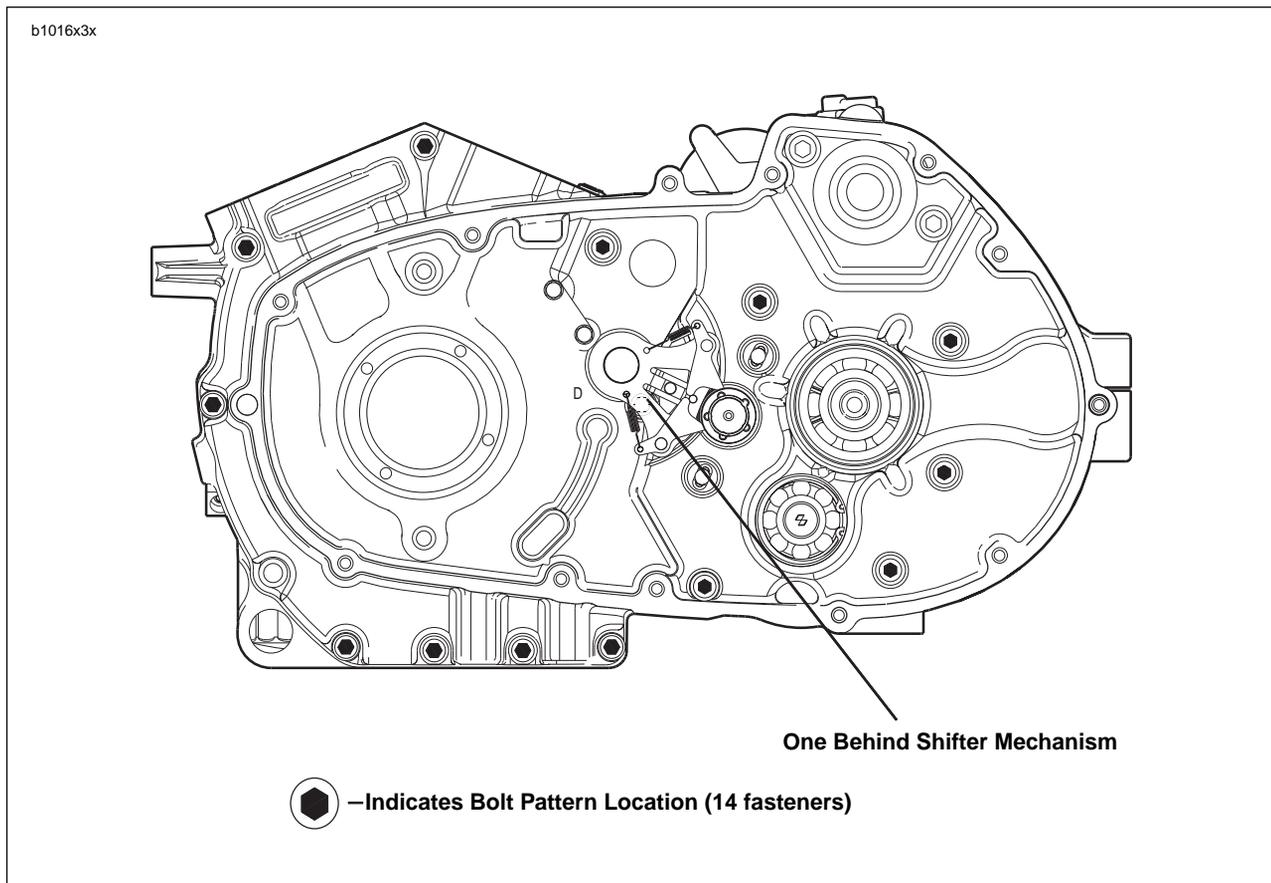


Figure 6-53. Crankcase Fasteners

16. See Figure 6-53. Remove crankcase bolt set (14 fasteners).

NOTE

Flywheel assembly slides out of the left main bearing by hand. No tools are required for this operation.

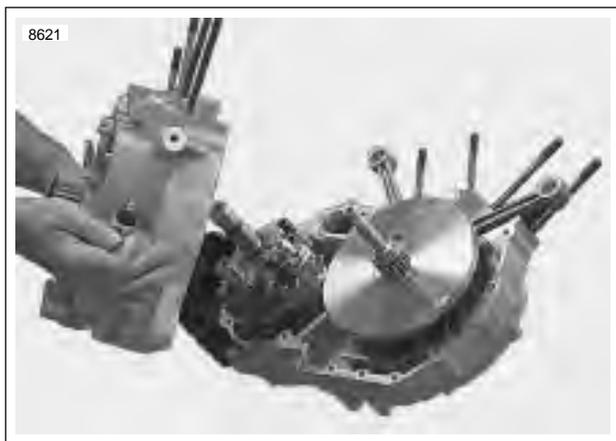


Figure 6-54. Separating Crankcase Halves

17. See Figure 6-54. Separate crankcase halves.




Figure 6-55. Removing Flywheels from Left Case Half

18. See Figure 6-55. Remove the flywheel assembly from left crankcase half.

TRANSMISSION REMOVAL FROM LEFT CRANKCASE

NOTE

See [Figure 6-58](#). Shifter design allows for one common part number for all three shifter forks. As the transmission runs, each shifter fork develops a certain wear pattern with its mating parts. For this reason, it is important that each shifter fork be reinstalled in its original location.

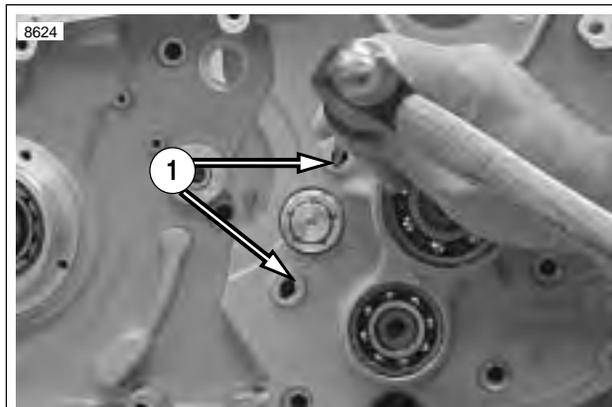

1. Slots for removing the shifter fork shafts

Figure 6-56. Removing Shifter Fork Shafts

1. See [Figure 6-56](#). Remove shifter fork shafts.

NOTE

Carefully tap on alternate sides of the shaft using the provided slots.



Figure 6-57. Transmission Assembly

2. See [Figure 6-57](#). Remove shifter drum and shifter forks.
3. Remove mainshaft 2nd gear from mainshaft.


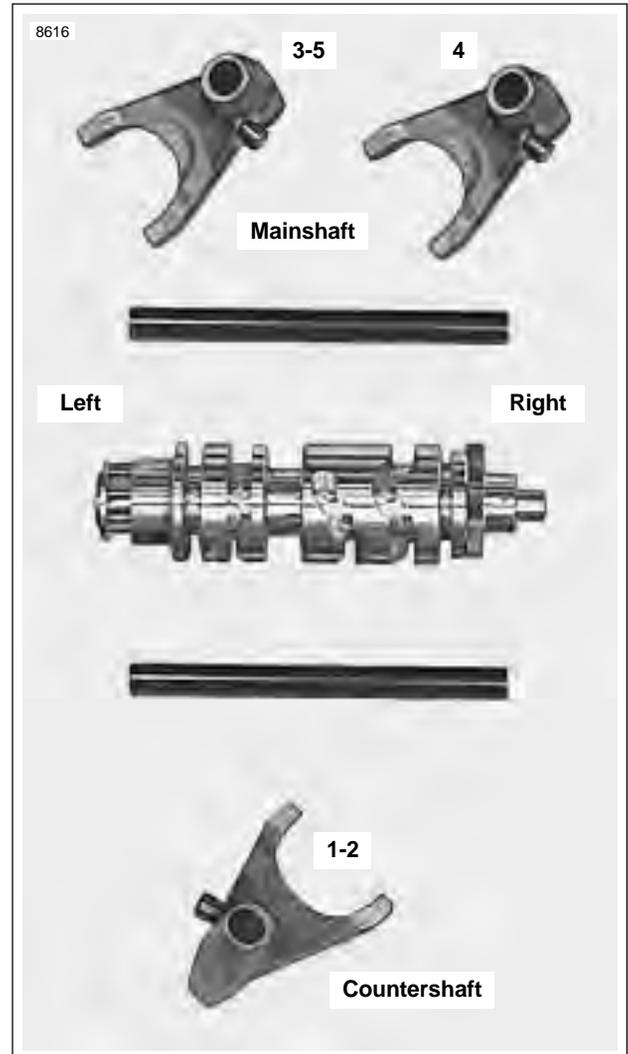


Figure 6-58. Shifter Forks, Drum and Shafts

b1015x6x

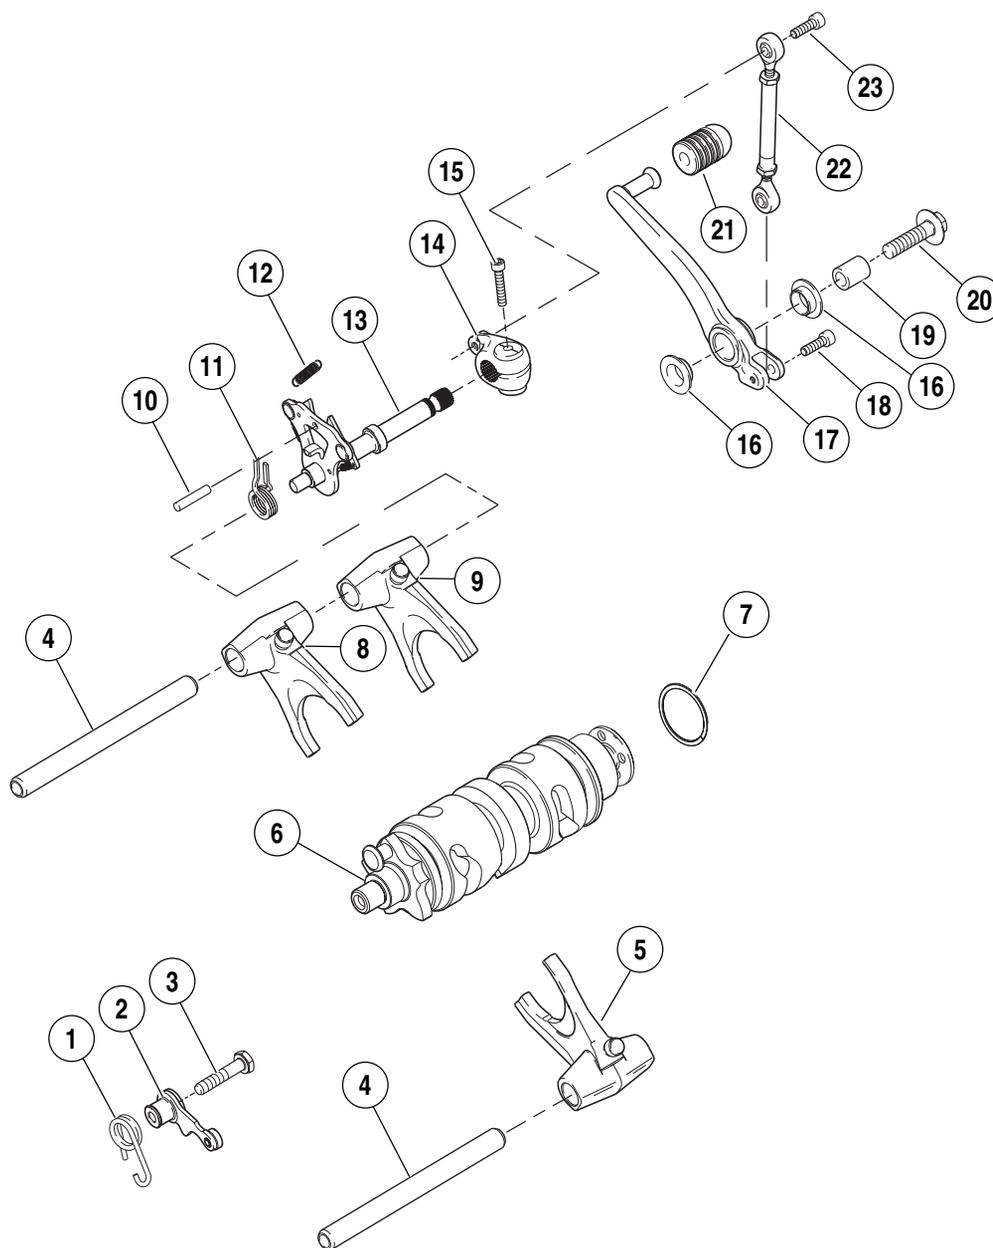

- | | |
|-------------------------------------|---------------------------------------|
| 1. Spring, detent | 13. Shifter lever assembly |
| 2. Detent spring sleeve assembly | 14. Lever, engine |
| 3. Screw, detent assembly | 15. Bolt, engine lever |
| 4. Shaft, shifter forks (2) | 16. Bearing, shift lever assembly (2) |
| 5. Fork assembly, shifter (1st-2nd) | 17. Shift lever |
| 6. Shifter cam assembly | 18. Bolt, linkage assembly |
| 7. Retaining ring | 19. Sleeve, shift/brake lever |
| 8. Fork assembly, shifter (3rd-5th) | 20. Bolt, shift lever |
| 9. Fork assembly, shifter (4th) | 21. Pad, rubber, shift lever |
| 10. Pin, shifter stop | 22. Linkage assembly, shifter |
| 11. Spring, shifter return | 23. Bolt, linkage assembly |
| 12. Spring, extension | |

Figure 6-59. Shifter Mechanism

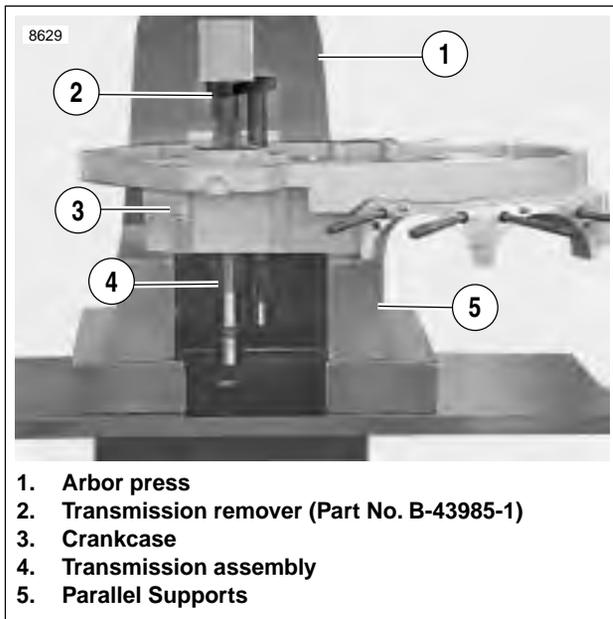


Figure 6-60. Removing Transmission Assembly from Left Case Half

⚠ WARNING

Always wear proper eye protection when installing retaining rings. Use the correct retaining ring pliers. Verify that the tips of the pliers are not damaged or excessively worn. Slippage may propel the ring with enough force to cause eye injury.

4. See [Figure 6-60](#). Remove left crankcase half and transmission assembly (4) from engine stand.
 - a. Place crankcase half (3) and transmission assembly (4) on arbor press (1) and support transmission assembly on parallel supports (5).
 - b. Press transmission assembly using TRANSMISSION REMOVER (2) (Part No. B-43895-1) to remove transmission assembly from crankcase half.
 - c. Remove crankcase from press.

MAINSHAFT/COUNTERSHAFT

NOTES

- As the transmission runs, each part develops a certain wear pattern and a kind of “set” with its mating parts. For this reason, it is important that each component be reinstalled in its original location and facing its original direction.
- See [Figure 6-61](#). As each component is removed, place it on a clean surface in the exact order of removal.

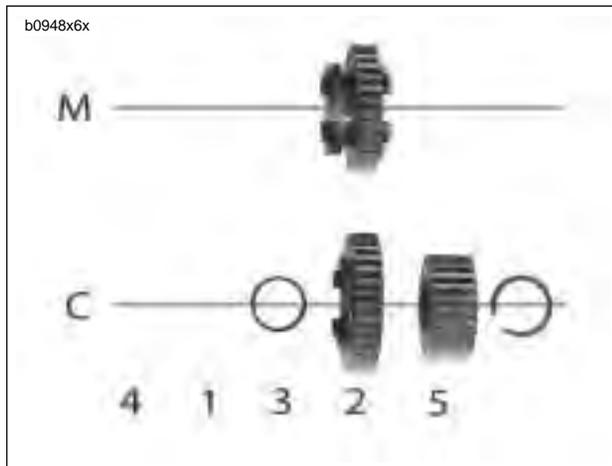


Figure 6-61. Transmission Parts Identification

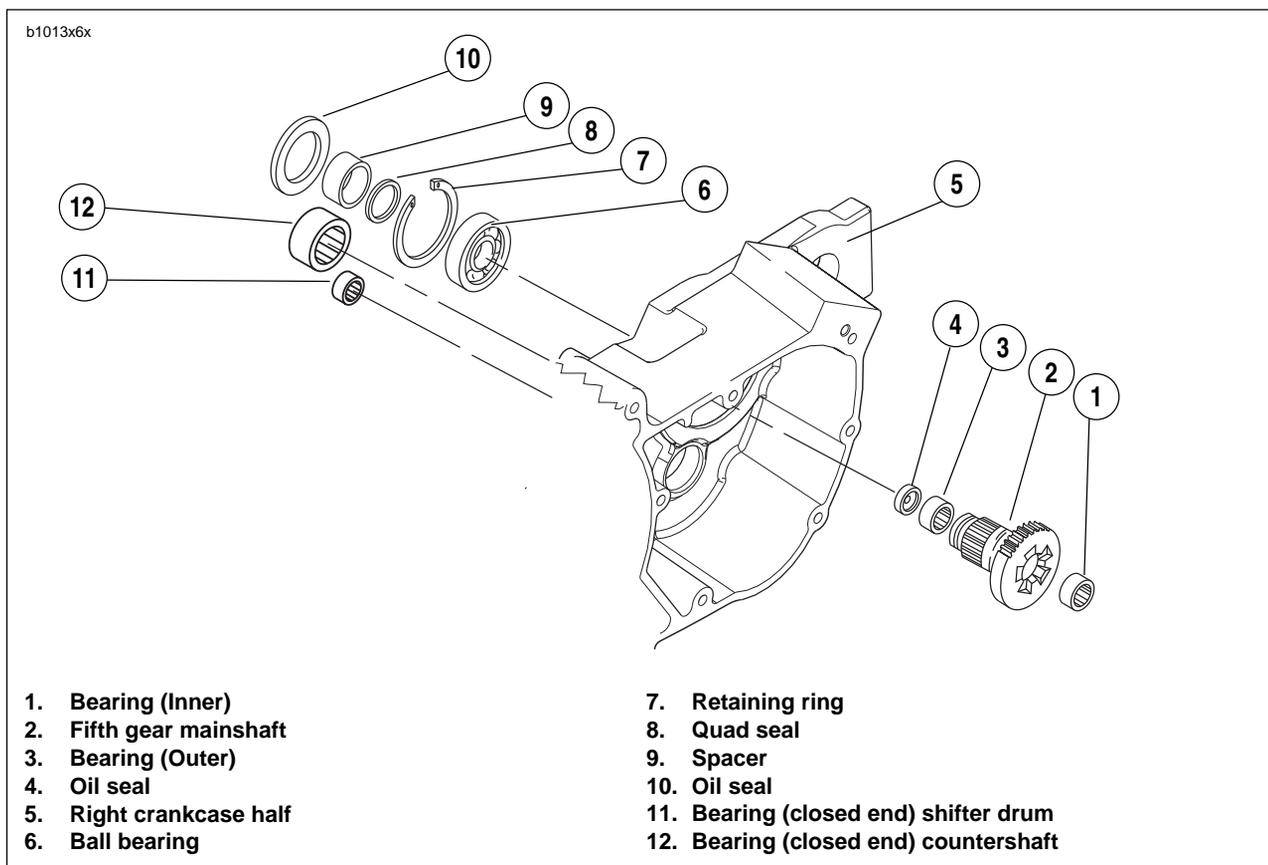


Figure 6-62. Transmission Assembly-Right Crankcase Half

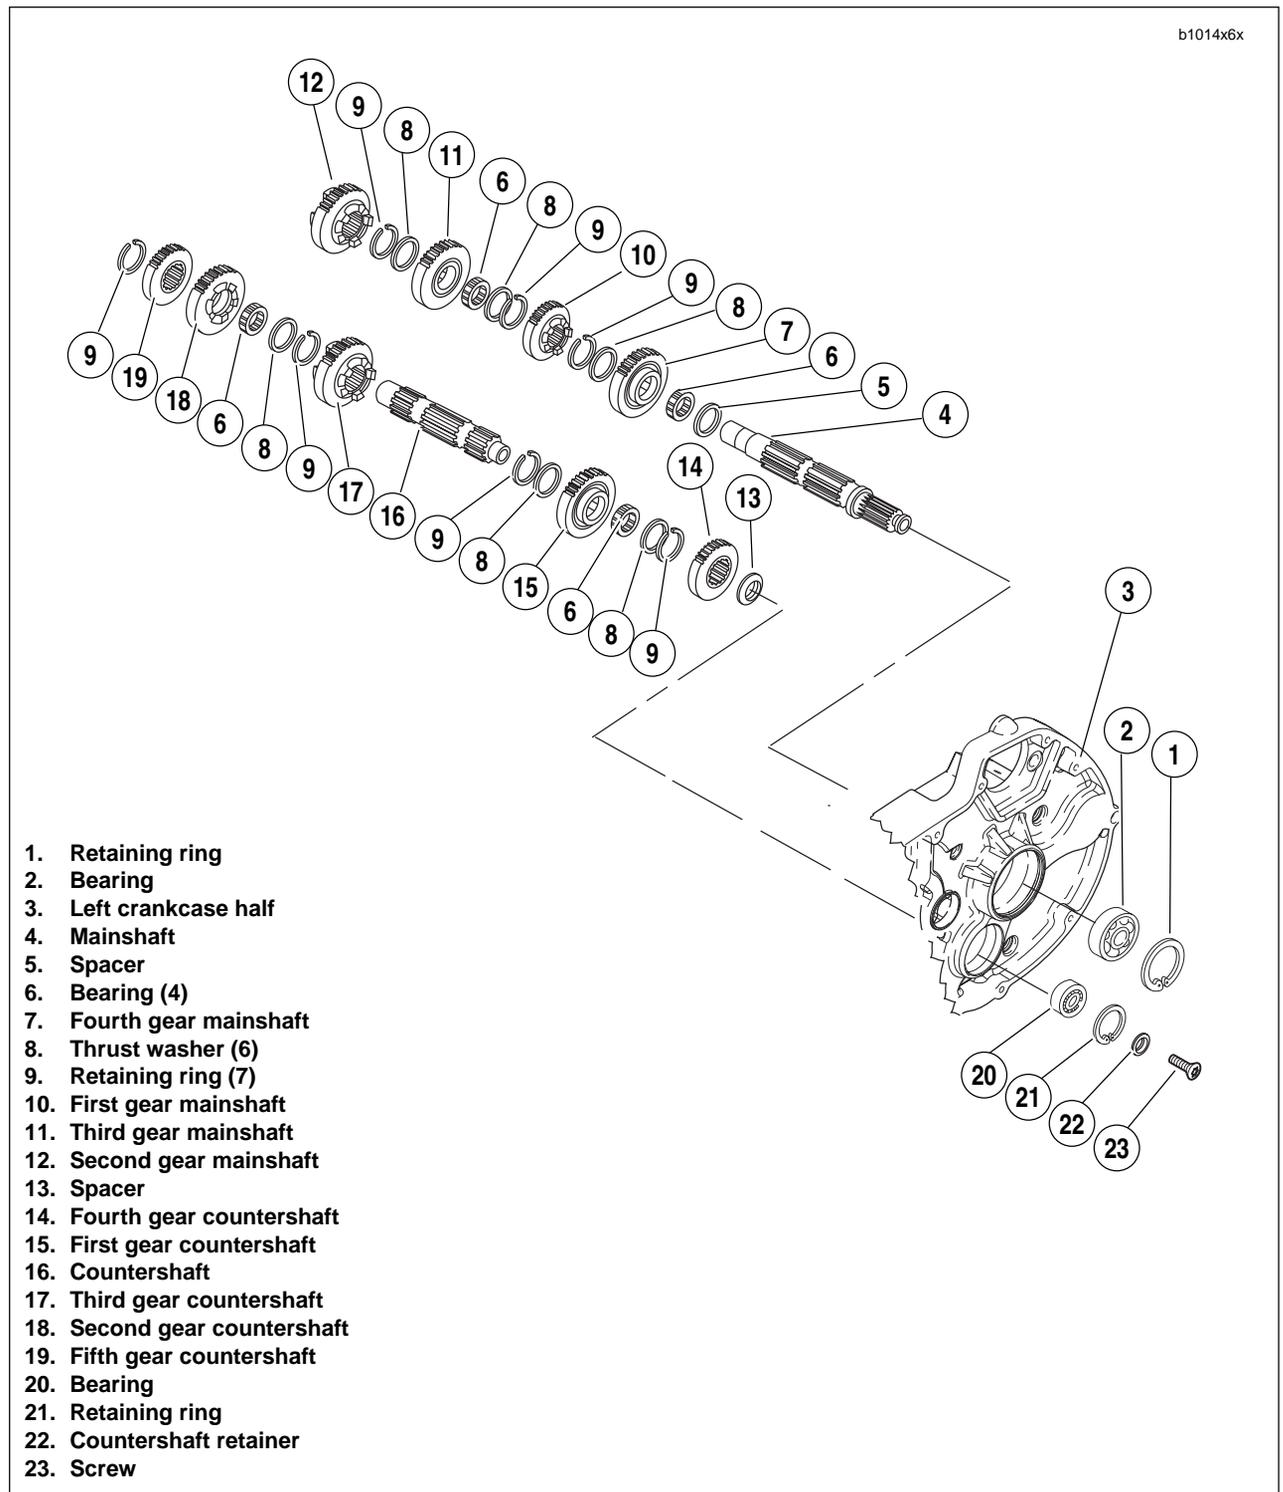


Figure 6-63. Transmission Assembly-Left Crankcase Half

MAINSHAFT DISASSEMBLY

NOTES

- Once the transmission assembly has been pressed out of the left crankcase half, the mainshaft and countershaft assemblies can be serviced separately.
- All thrust washers are one common part number. There is no shimming required with this transmission.

⚠ WARNING

Always wear proper eye protection when removing retaining rings. Use the correct retaining ring pliers. Verify that the tips of the pliers are not damaged or excessively worn. Slippage could propel the ring with enough force to cause death or serious injury.

- See Figure 6-64. Remove spacer (1), mainshaft 4th gear (3), split bearing (2) and thrust washer (4) from the threaded end of the mainshaft.
- On the mainshaft, between mainshaft 1st gear (6) and mainshaft 3rd gear (10), use RETAINING RING PLIERS (Part No. J-5586) to expand retaining ring (7) and move next to mainshaft 1st gear along with thrust washer (8).
 - Move mainshaft 3rd gear (10) as far as possible toward mainshaft 1st gear (6).
 - Expand retaining ring (12) at opposite side of mainshaft 3rd gear (10) and slide off end of mainshaft with thrust washer (11).
 - Remove mainshaft 3rd gear (10) and its split bearing (9).

- Slide thrust washer (8) off end of mainshaft.
- Expand retaining ring (7), which is next to mainshaft 1st gear (6), and slide off end of shaft.
- Remove mainshaft 1st gear (6).
- Expand retaining ring (5) and remove.

Cleaning And Inspection

⚠ WARNING

Never use compressed air to “spin-dry” bearings. Spinning bearings with compressed air can also cause a bearing to fly apart, which could result in death or serious injury.

- Clean all parts (except bearings) in cleaning solvent and blow dry with compressed air.
- Check gear teeth for damage. If gears are pitted, scored, rounded, cracked or chipped, they should be replaced.
- Inspect the engaging dogs on the gears. Replace the gears if dogs are rounded, cracked, battered, chipped or dimpled.
- Discard all retaining rings that were removed.

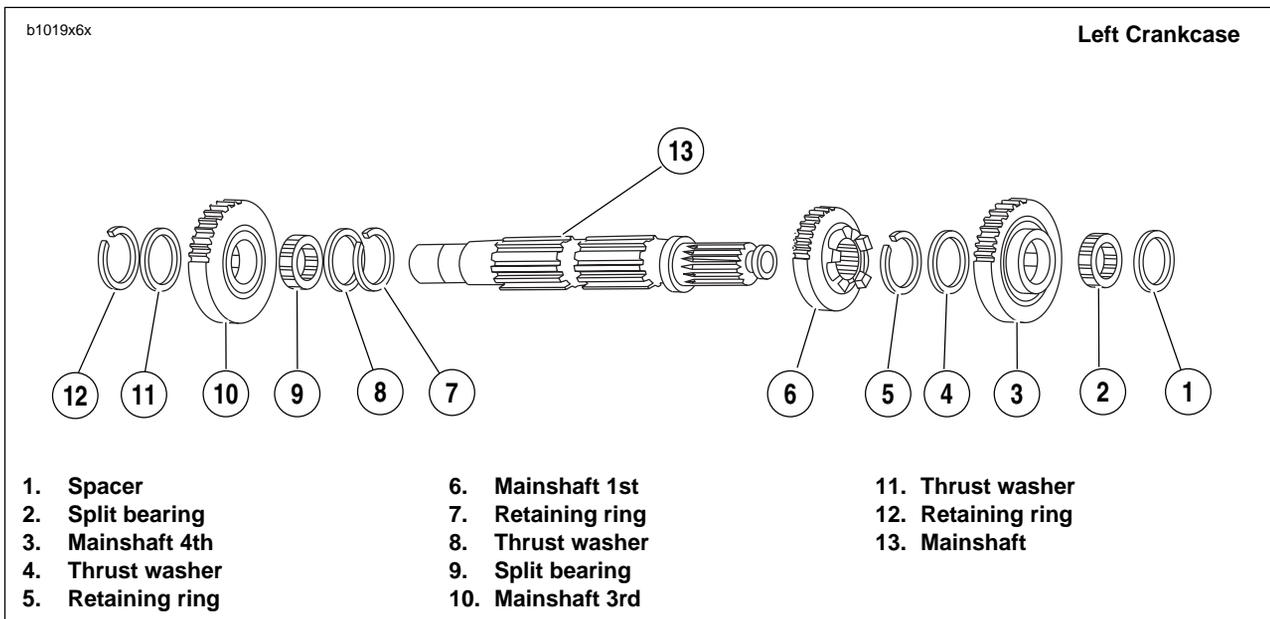


Figure 6-64. Transmission Mainshaft Assembly Once Removed from Left Crankcase/Disassembly

COUNTERSHAFT DISASSEMBLY

NOTES

- Once the transmission assembly has been pressed out of the left crankcase half, the mainshaft and countershaft assemblies can be serviced separately.
- All thrust washers are one common part number. There is no shimming required with this transmission.

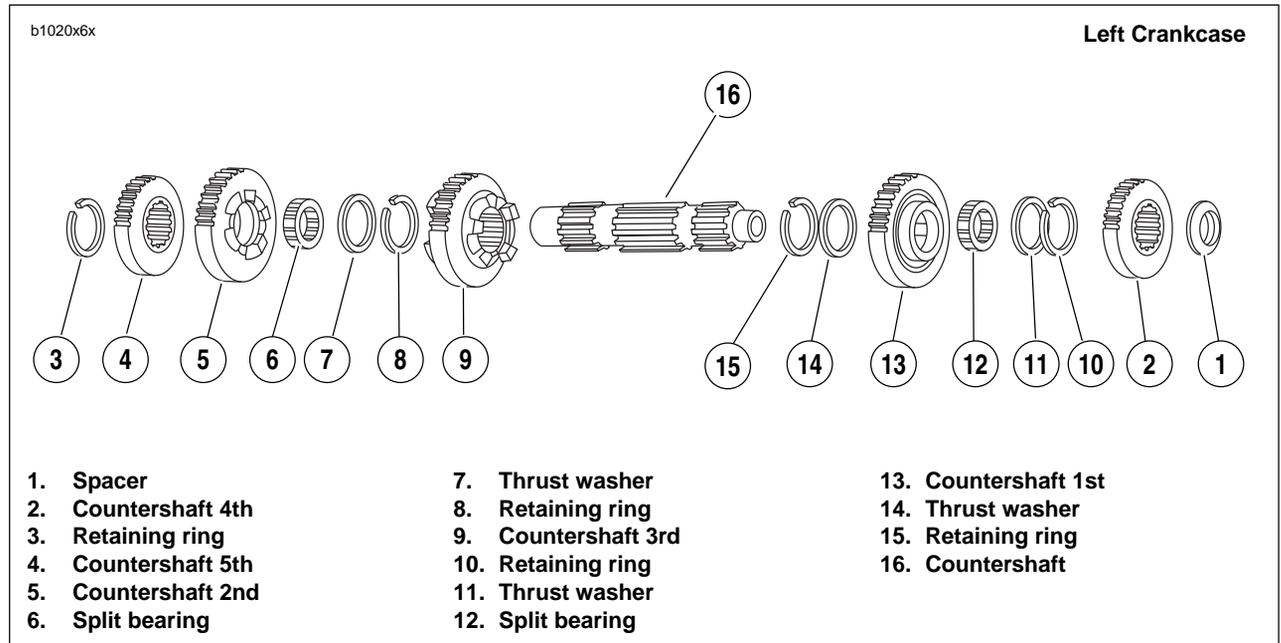


Figure 6-65. Transmission Countershaft Assembly Once Removed from Left Crankcase/Disassembly

1. See Figure 6-65. Remove spacer (1) and countershaft 4th gear (2) from the end of the of the countershaft with internal threads.
2. Using RETAINING RING PLIERS (Part No. J-5586), remove and discard retaining ring (3) next to countershaft 5th gear (4).
 - a. Slide countershaft 5th (4), and countershaft 2nd (5) off end of countershaft.
 - b. Remove split bearing (6) that was under countershaft 2nd gear (5) and thrust washer (7).
 - c. Remove retaining ring (8) on the countershaft and slide countershaft 3rd gear (9) off free end of countershaft.
3. Expand retaining ring (10) located next to countershaft 1st gear (11). Remove retaining ring (10) and thrust washer (11).
 - a. Slide countershaft 1st gear (13) off end of shaft.
 - b. Remove split bearing (12).
4. Remove thrust washer (14). Expand remaining retaining ring (15) and slide off countershaft.

⚠ WARNING

Always wear proper eye protection when removing retaining rings. Use the correct retaining ring pliers. Verify that the tips of the pliers are not damaged or excessively worn. Slippage could propel the ring with enough force to cause death or serious injury.

Cleaning And Inspection

⚠ WARNING

Never use compressed air to “spin-dry” bearings. Spinning bearings with compressed air can also cause a bearing to fly apart, which could result in death or serious injury.

1. Clean all parts (except bearings) in cleaning solvent and blow dry with compressed air.
2. Check gear teeth for damage. If gears are pitted, scored, rounded, cracked or chipped, they should be replaced.
3. Inspect the engaging dogs on the gears. Replace the gears if dogs are rounded, cracked, battered, chipped or dimpled.
4. Discard all retaining rings that were removed.

MAINSHAFT ASSEMBLY

WARNING

Always wear proper eye protection when removing retaining rings. Use the correct retaining ring pliers. Verify that the tips of the pliers are not damaged or excessively worn. Slippage could propel the ring with enough force to cause death or serious injury.

CAUTION

During assembly, the split bearings and the internal bores of the gears must be lubricated with **SPORT-TRANS FLUID** prior to assembly. Leaving these parts dry could accelerate wear at start-up.

1. See [Figure 6-67](#). Install **new** retaining ring (1) onto mainshaft in the first ring groove from the threaded end of the mainshaft.
2. Slide mainshaft 1st gear (2), identified by two grooves in gear teeth, onto mainshaft with the fork groove facing mainshaft 4th gear (10).

NOTE

See [Figure 6-66](#). The shifting fork groove on mainshaft 1st gear has been made 0.020 (0.51 mm) wider than existing mainshaft first gear (Part No. 35762-89A) to accommodate the new style shifting fork and has a new part number.

3. See [Figure 6-67](#). Install **new** retaining ring (3).
 - a. Install thrust washer (4) onto mainshaft.
 - b. Install split bearing (5) onto mainshaft.
 - c. Install mainshaft 3rd gear (6) onto shaft over bearing (5). 3rd gear is installed with shifting lugs away from 1st gear mainshaft.

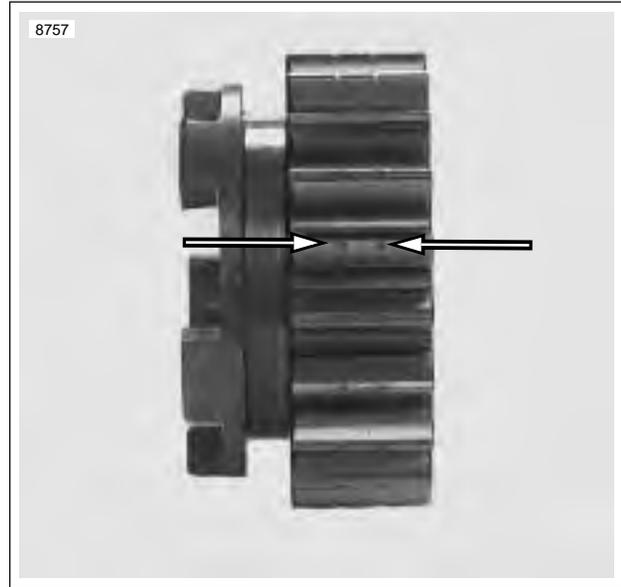


Figure 6-66. New Mainshaft 1st Gear with Identification Grooves

4. Install thrust washer (7) and **new** retaining ring (8) next to mainshaft 3rd gear (6).
5. Install thrust washer (9) on threaded end of mainshaft next to retaining ring (1).
6. Install split bearing (10) onto mainshaft next to thrust washer (9).
7. Install mainshaft 4th gear (11), which can be identified by the two radial grooves on one side, onto mainshaft over split bearing (10) and against thrust washer (9).
8. Install spacer (12) onto end of mainshaft.

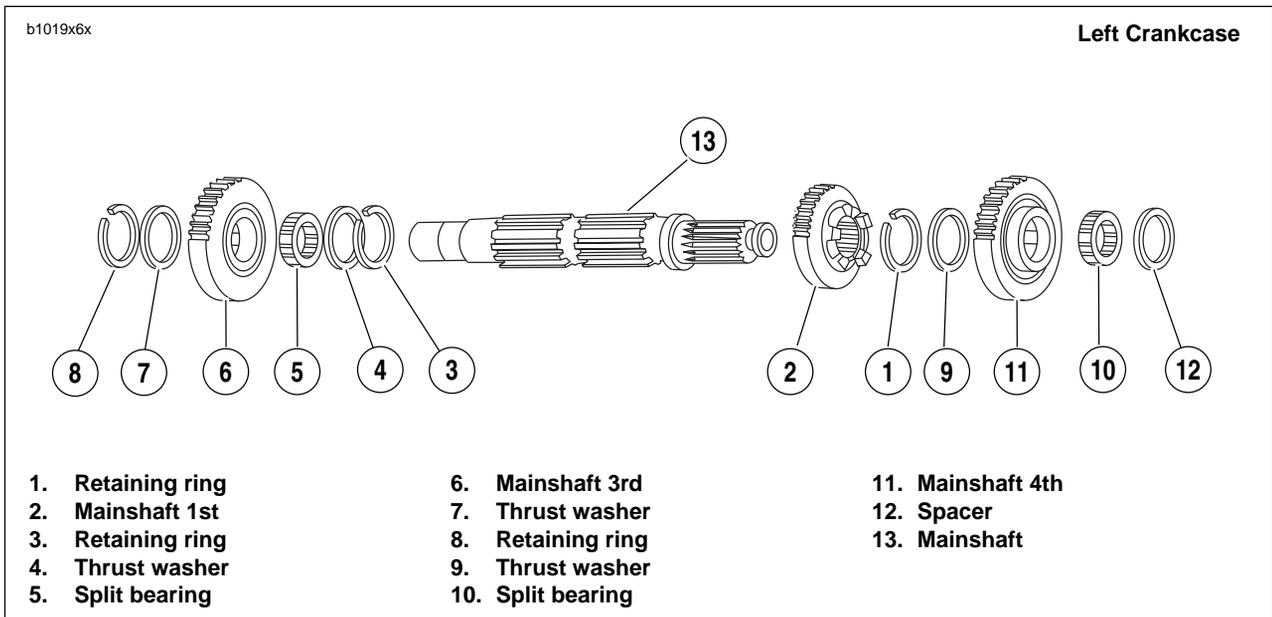


Figure 6-67. Transmission Mainshaft Assembly/Reassembly

COUNTERSHAFT ASSEMBLY

WARNING

Always wear proper eye protection when removing retaining rings. Use the correct retaining ring pliers. Verify that the tips of the pliers are not damaged or excessively worn. Slippage could propel the ring with enough force to cause death or serious injury.

CAUTION

During assembly, the split bearings and the internal bores of the gears must be lubricated with **SPORT-TRANS FLUID** prior to assembly. Leaving these parts dry could accelerate wear at start-up.

1. See Figure 6-68. Install **new** retaining ring (1) and thrust washer (2) onto countershaft in the second ring groove from the end with internal threads.
2. Install split bearing (4) onto countershaft.
3. Locate countershaft 1st gear (3), identified by one radial groove at one side, and slide gear onto shaft. Position gear over bearing (4).

4. Install thrust washer (5) and **new** retaining ring (6) next to countershaft 1st gear (3).
5. Install countershaft 3rd gear (7) on countershaft with fork groove facing away from countershaft 1st gear (3).
6. Install **new** retaining ring (8) on countershaft. Position **new** retaining ring in the second ring groove from the end. Install thrust washer (9) next to retaining ring (8). Install split bearing (10) in seat next to washer (9).
5. Install countershaft 2nd gear (11) with the locking dogs facing countershaft 3rd gear (7).
6. Install countershaft 5th gear (12) on countershaft.
7. Install **new** retaining ring (13) on countershaft.
8. Locate countershaft 4th gear (14). This flat, shoulder less gear is splined and has a single radial groove at one side. Position gear next to retaining ring (6) on countershaft. Place beveled spacer (15) over end of shaft with beveled side away from countershaft 4th gear (14).

NOTE

At this point both mainshaft and countershaft sub-assemblies are ready to be pressed into the left crankcase half.

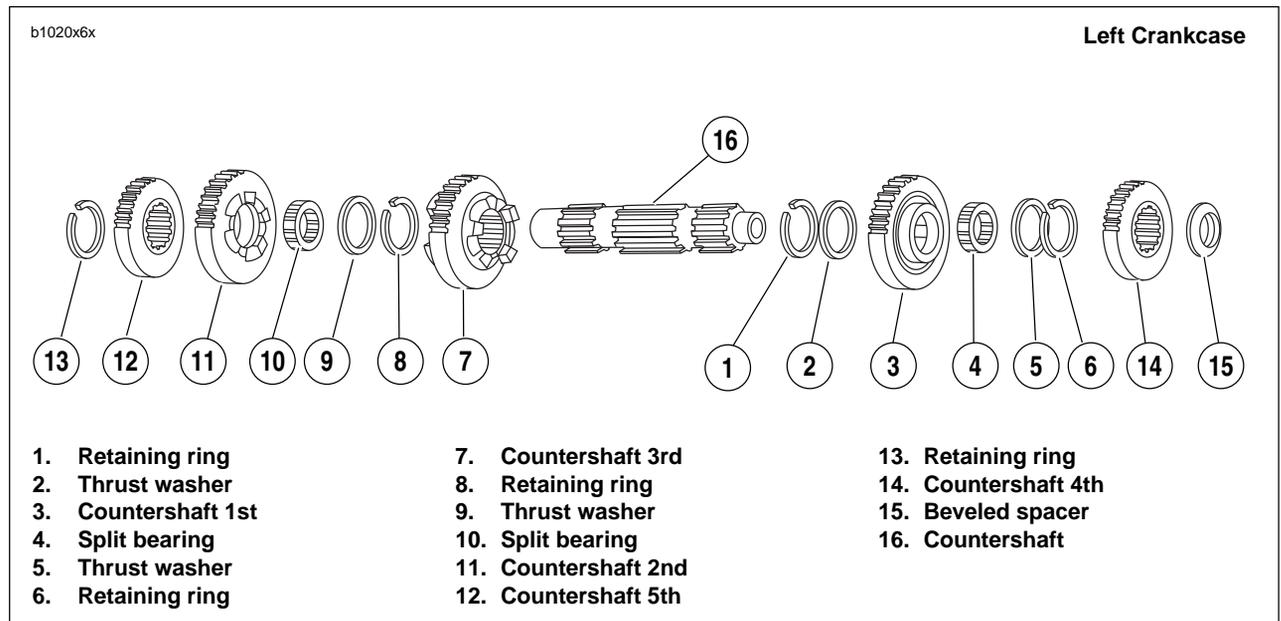


Figure 6-68. Transmission Countershaft Assembly/Reassembly

REMOVAL

1. Split crankcases in half. See 6.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL.
2. Remove transmission as an assembly. See 6.9 TRANSMISSION DISASSEMBLY.

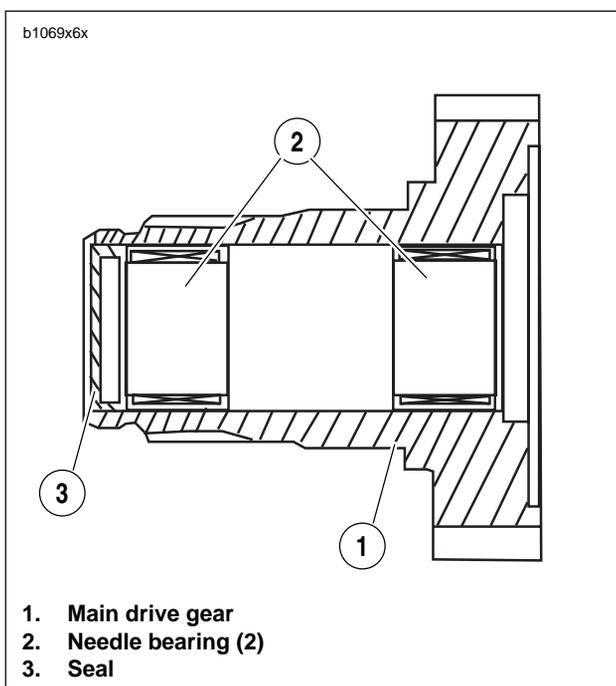


Figure 6-69. Main Drive Gear Assembly

3. See Figure 6-69. From inside case tap out seal at end of mainshaft 5th gear. Discard seal.

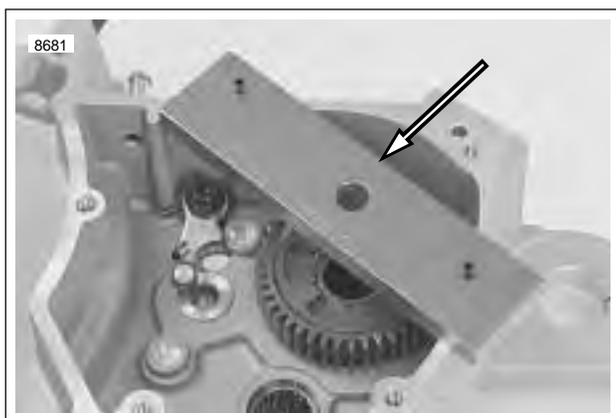


Figure 6-70. Bearing Remover Cross Plate Mounting (Part No. B-45847)

4. See Figure 6-70. Place cross plate on crankcase as shown.

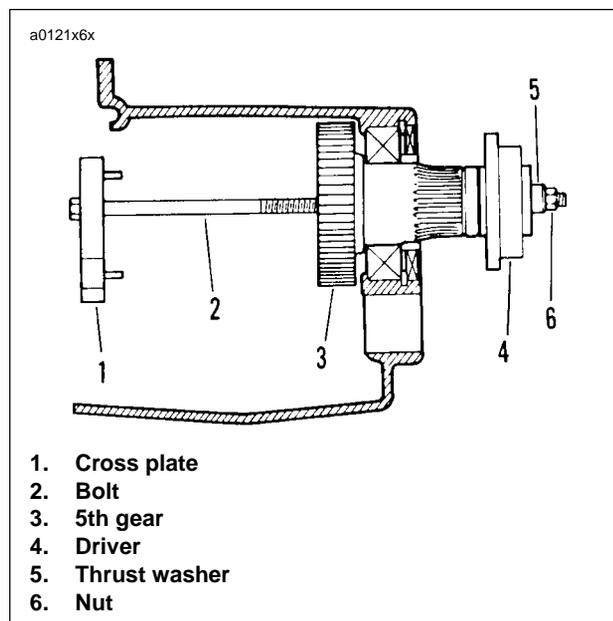


Figure 6-71. Removing Main Drive Gear

5. See Figure 6-71. Assemble MAIN DRIVE GEAR REMOVER AND INSTALLER (Part No. HD-35316A) with CROSS PLATE (Part No. B-45847).
6. Insert bolt (2) through cross plate (1) and 5th gear (3).

CAUTION

When removing the main drive gear, the gear is pressed out against the resistance of the bearing inner race. Without any support at the inner race, the bearing is destroyed. Whenever the main drive gear is removed the main drive gear bearing will also have to be replaced.

7. At outside of case, place driver (4) and thrust washer (5) over end of bolt (2). Install and tighten nut (6) until 5th gear (3) is free.

DISASSEMBLY

Drive out needle bearings from inside bore of main drive gear. Do not reuse bearings after removal.

ASSEMBLY

1. See [Figure 6-72](#). Use INNER/OUTER MAIN DRIVE GEAR NEEDLE BEARING INSTALLATION TOOL (Part No. HD-37842-A) for assembly. Select which end of tool to use.
 - a. The end stamped 0.080 in. (2.032 mm) is for driving the bearing into the inner end.
 - b. The end stamped 0.315 in. (8.001 mm) is for the outer end bearing.

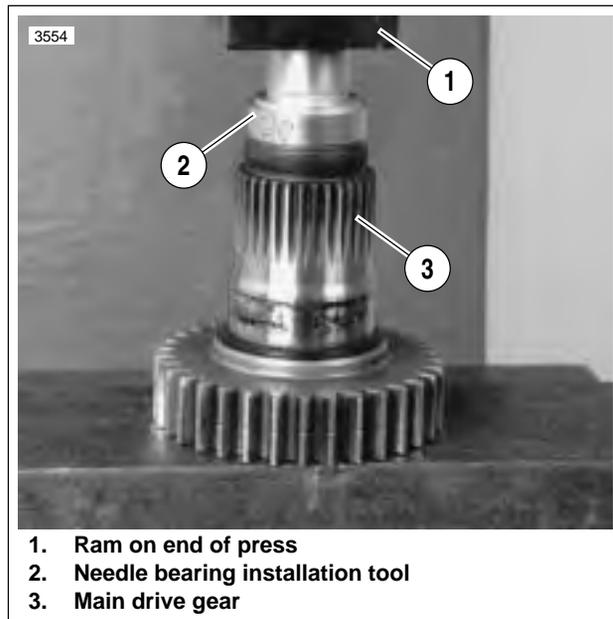


Figure 6-72. Needle Bearing Installation Tool

2. Assemble parts. The installation tool will automatically bottom on the gear when the correct depth is reached.
 - a. Place main drive gear on a press.
 - b. Press in the outer bearing to a depth of 0.315-0.285 in. (8.001-7.239 mm).
 - c. Press in the inner bearing to a depth of 0.080 in. (2.032 mm).

INSTALLATION

1. Replace main drive gear bearing.

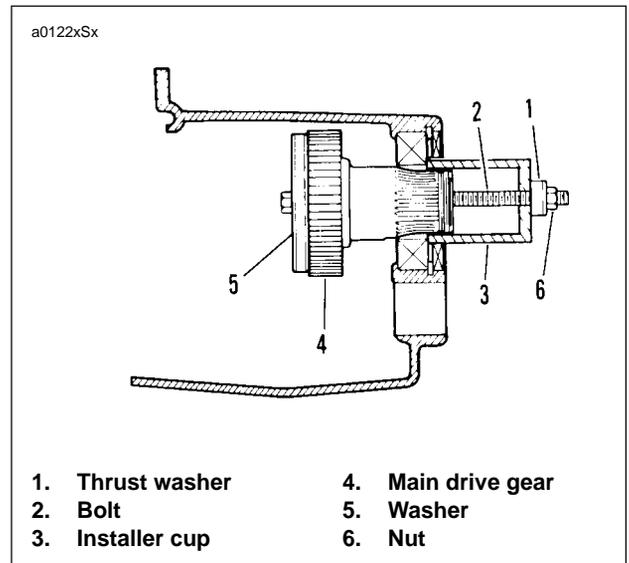


Figure 6-73. Main Drive Gear Installation

2. See [Figure 6-73](#). Use MAIN DRIVE GEAR REMOVER AND INSTALLER (Part No. HD-35316-A) for assembly.
 - a. Take bolt (2) and place washer (5) followed by main drive gear (4) over end of bolt.
 - b. From inside of case insert bolt and main drive gear through inner race of ball bearing.
 - c. Insert threaded end of bolt (2) through installer cup (3) and thrust washer (1).
 - d. Thread nut (6) onto end of bolt (2). Tighten nut (6) until shoulder on gear (4) bottoms against inner race of bearing.

3. See Figure 6-74. Tap in **new** seal (3) at threaded end of 5th gear to a depth of 0.060-0.030 in. (1.524-0.762 mm).
4. See Figure 6-75. Place **new** quad ring over threaded end of fifth gear, and position next to the gear taper. Install spacer over threaded end of fifth gear with chamfered end toward quad ring. Slide spacer up against bearing.
5. Install large seal.
 - a. Coat lips of seal with SPORT-TRANS FLUID.
 - b. Position seal over spacer with lips of seal toward case.
 - c. Use MAIN DRIVE GEAR SEAL INSTALLER (Part No. HD-41496) to gently tap seal into bore of case until the outside of seal is flush with outer edge of bore.

NOTE

It is acceptable to recess seal to about 0.030 in. (0.762 mm) below outer edge of bore. Seal will be controlled by tool.

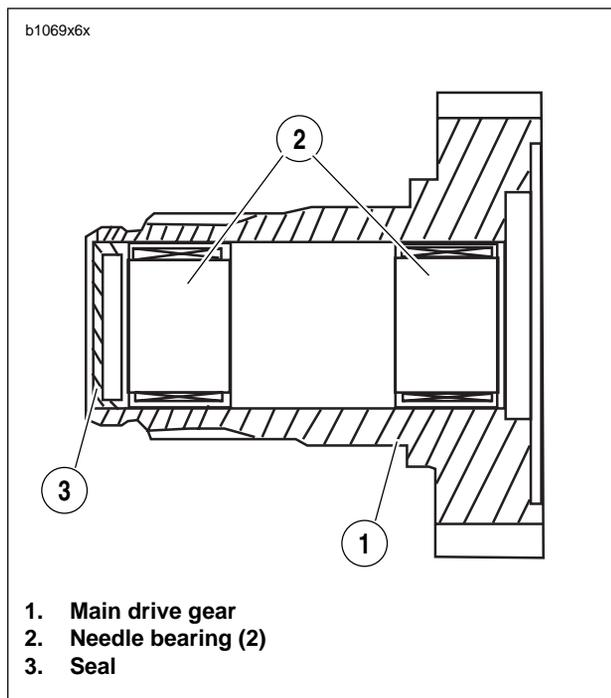


Figure 6-74. Main Drive Gear Assembly

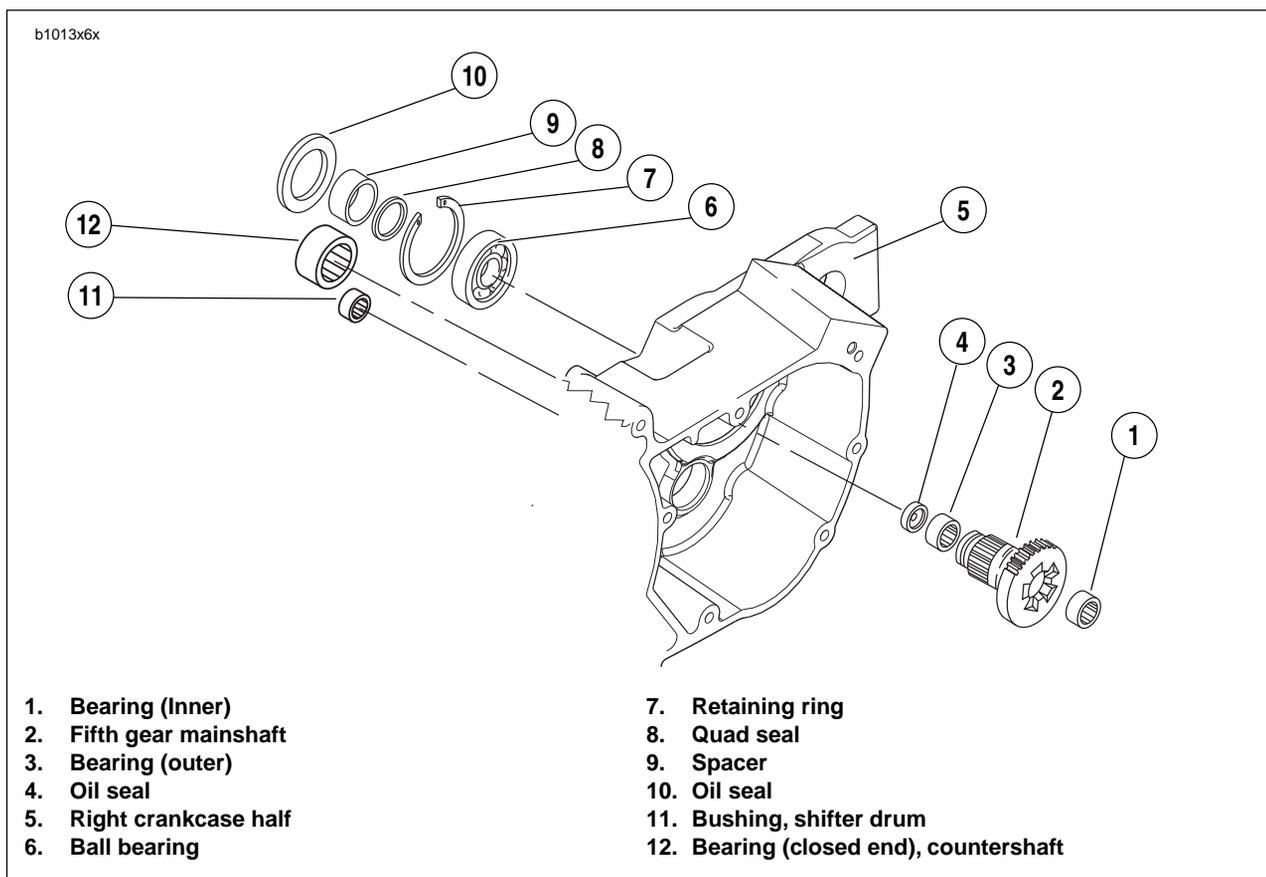


Figure 6-75. Transmission Assembly Right Crankcase Half

REMOVAL

NOTE

See [Figure 6-75](#). Refer to *Transmission assembly right crankcase half*, for location of items discussed on this page.

1. Remove transmission assembly. See [6.9 TRANSMISSION DISASSEMBLY](#).
2. See [Figure 6-75](#). Remove main drive 5th gear. Use MAIN DRIVE GEAR REMOVER AND INSTALLER (Part No. HD-35316A). See [6.11 MAIN DRIVE GEAR](#).
3. At outside of case remove seal next to 5th gear bearing retainer. Remove retaining ring.
4. From inside transmission case drive bearings (5th gear, countershaft or shifter shaft) out of bores. Carefully tap bearings free by working around bearing diameter to keep bearing from skewing.

INSTALLATION

Mainshaft 5th Gear Ball Bearing

1. See [Figure 6-76](#). Locate MAIN DRIVE GEAR REMOVER AND INSTALLER (Part No. HD-35316-A). Place cross-plate pins in appropriate holes in transmission case.
2. See [Figure 6-77](#). Insert bolt (2) through cross plate (1), **new** bearing (3), driver (4) and thrust bearing (5). Thread nut (6) on end of bolt. Tighten nut carefully until bearing is started in bore squarely. Tighten nut (6) until bearing is seated against shoulder in bore.
3. At outside of case install beveled retaining ring in groove inside bearing bore with beveled side facing outside of case.
4. Lubricate bearing with SPORT-TRANS FLUID.

Countershaft Needle Bearing

1. Find a suitable bearing driver 1-1/4 in. (31.75 mm) in diameter.
2. See [Figure 6-75](#). From the outside of the case place the needle bearing open end first next to the bearing bore. Hold the driver squarely against the closed end of the bearing and tap the bearing into place. The bearing is properly positioned when it is driven inward flush or 0.030 in. (0.762 mm) below the outside surface of the case.
3. Lubricate bearing with SPORT-TRANS FLUID.

Shifter Drum Bushing

4. See [Figure 6-75](#). The shifter drum bushing (11) is a press fit in the right crankcase half. Inspect the bushing against the corresponding end of the shifter drum for proper fit and wear.
5. If bushing is to be replaced, use a BUSHING AND BEARING PULLER (Part No. HD-95760-69A) with a 1/2 in. collet (Part No. HD-95765-69A) to remove bushing from right crankcase half.

6. To install new bushing, use SNAP-ON BUSHING DRIVER SET (Part No. A-157C) with a 1/2 inch adapter (Part No. A157-8).
7. Lubricate bushing with SPORT-TRANS FLUID.

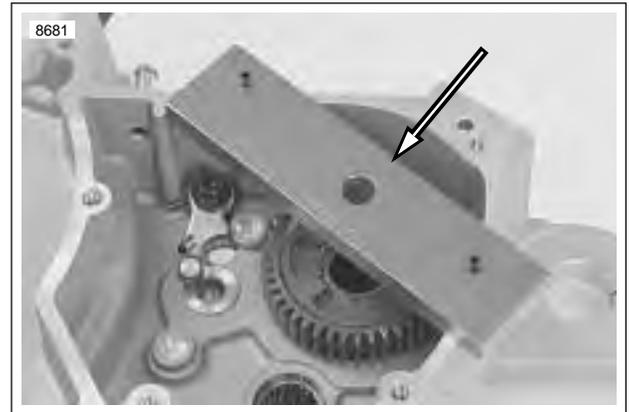


Figure 6-76. Bearing Remover Cross Plate Mounting (Part No. B-45847)

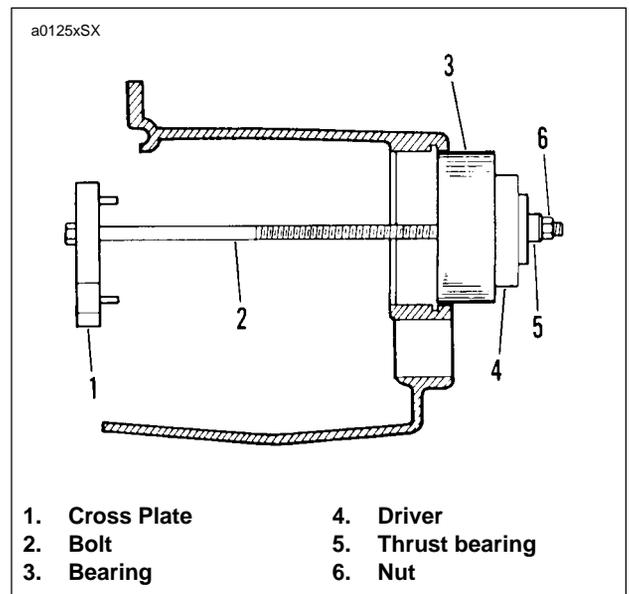


Figure 6-77. Installing Mainshaft Ball Bearing

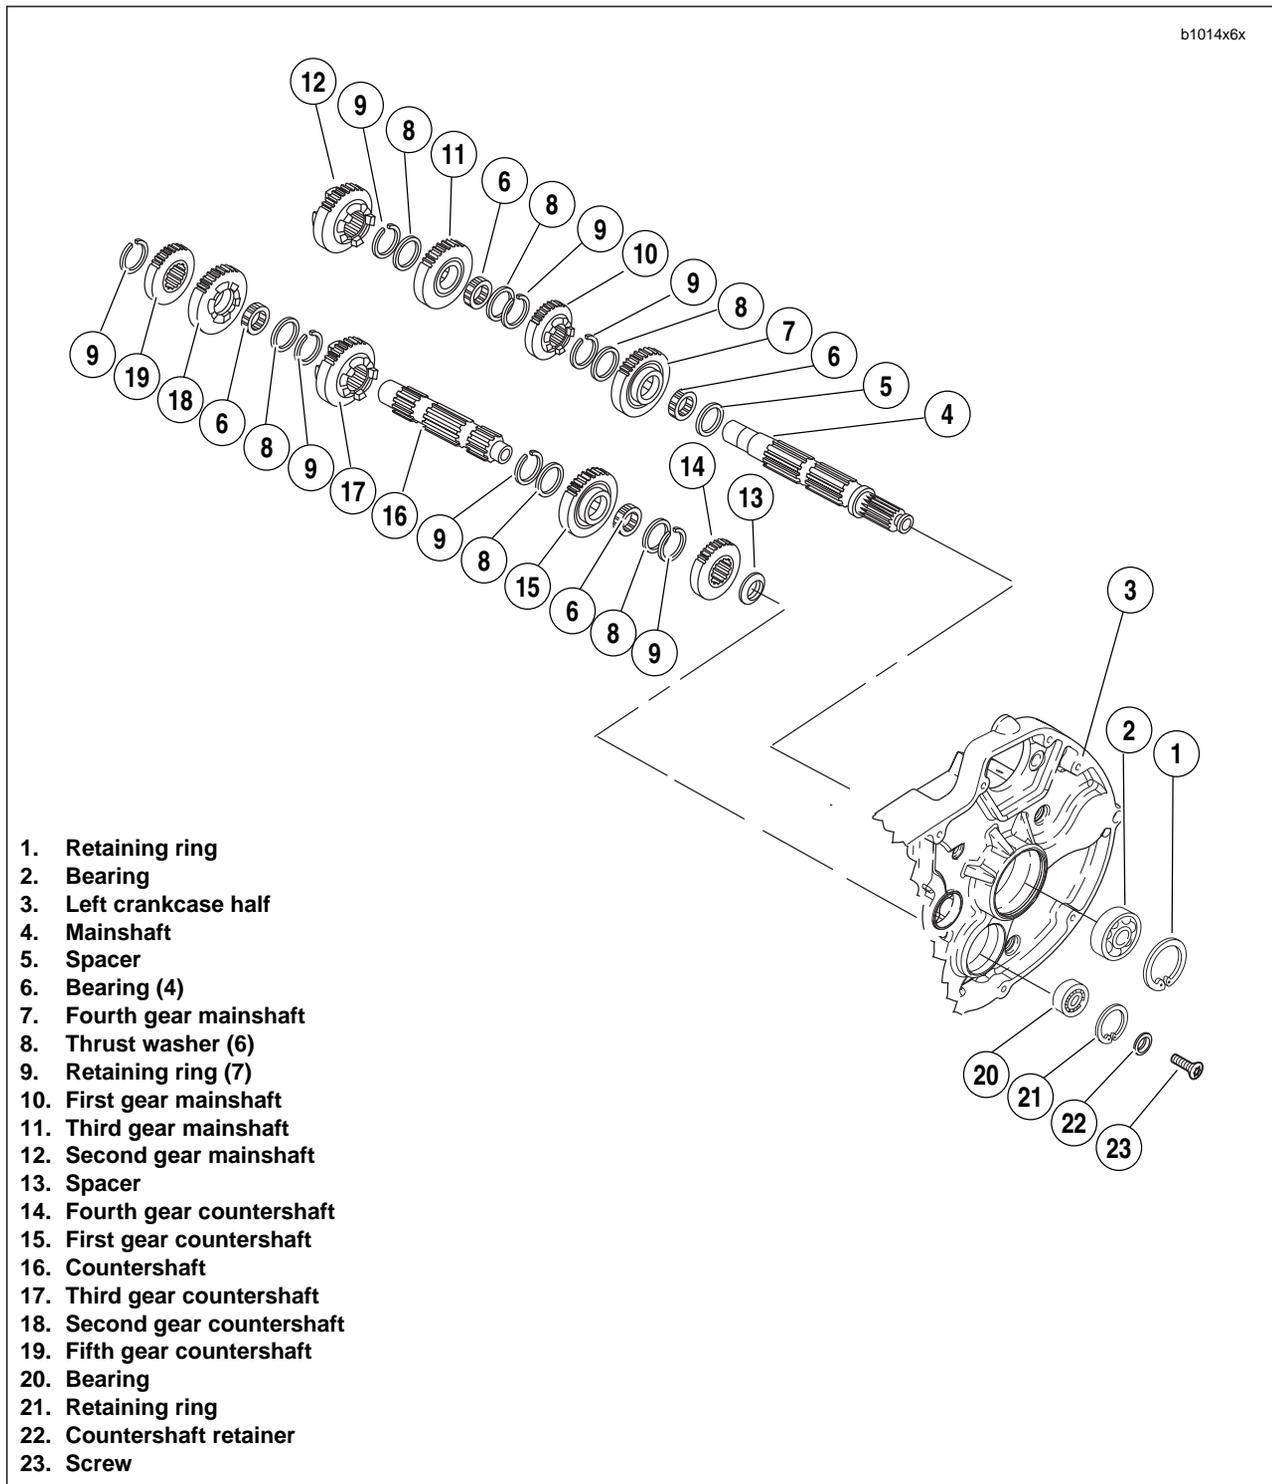


Figure 6-78. Transmission Assembly Left Crankcase Half

REMOVAL

NOTE

See [Figure 6-78](#). Refer to *Transmission assembly left crankcase half*, for location of items discussed on this page.

Mainshaft and Countershaft Bearings

1. Split crankcases in half. See [6.8 CASE DISASSEMBLY FOR TRANSMISSION REMOVAL](#).
2. Remove shifter forks and drum. See [6.10 TRANSMISSION ASSEMBLY](#) under [6.9 TRANSMISSION DISASSEMBLY](#).
3. Remove countershaft and mainshaft. See [6.9 TRANSMISSION DISASSEMBLY](#).
4. Inspect the mainshaft and countershaft ball bearings for pitting, scoring, discoloration or other damage.
5. See [Figure 6-79](#). If bearing replacement is required, remove retaining rings (1, 2) using snap ring pliers (Snap-On Part No. PR-36). Press out bearings (3, 4) from the inside of the crankcase.

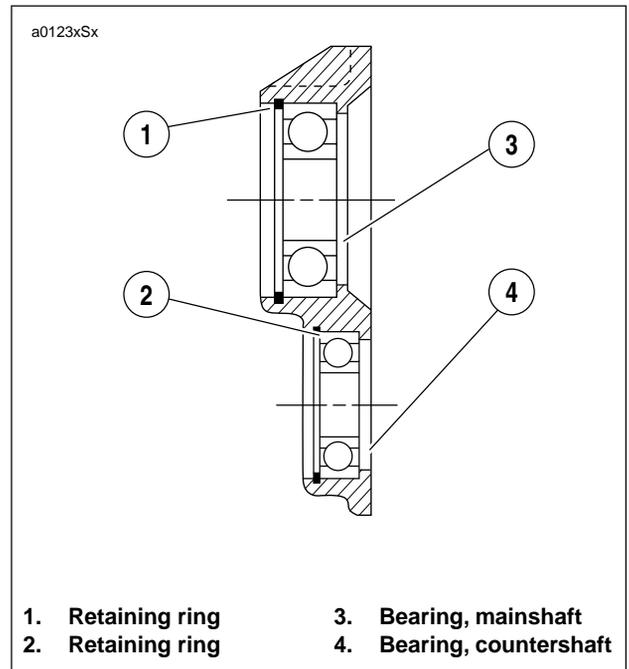


Figure 6-79. Ball Bearing Assembly

Shift Drum Bushing

Inspect the shifter drum bushing for pitting, scoring, discoloration or excessive wear. If bushing requires replacement press bushing out of crankcase from either side.

INSTALLATION

Mainshaft and Countershaft Bearings

1. Place crankcase on press with inside surface of crankcase downward.
2. Lay bearing squarely over bore with printed side of bearing upward. Place a pressing tool (slightly smaller than outside diameter of bearing) against outer race. Press bearing into bore until bearing bottoms against shoulder.
3. Install **new** retaining ring with beveled side facing away from bearing.

Shift Drum Bushing

1. Place crankcase on press with outside surface of crankcase downward.
2. See [Figure 6-80](#). Lay bushing squarely over bore. Using a pressing tool larger than diameter of bushing, press bushing into bore until bushing contacts shoulder in left crankcase half. If using a pressing tool larger than diameter of bushing, the pressing tool will bottom against crankcase when bushing is flush with top surface.

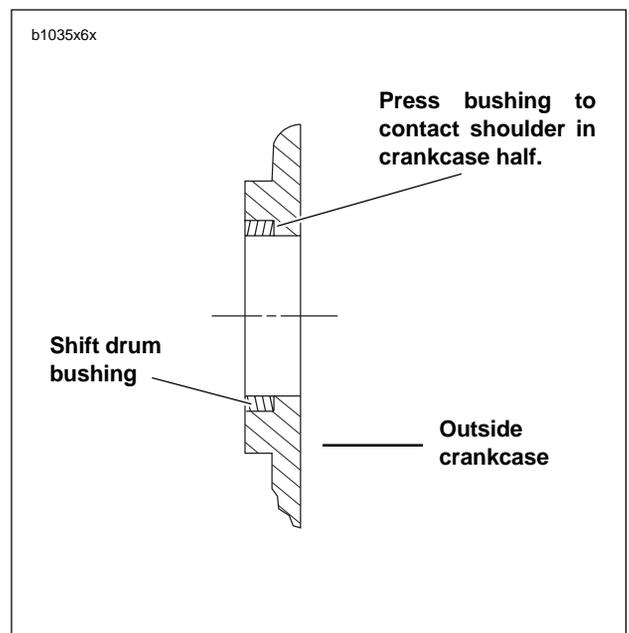



Figure 6-80. Shift Drum Bushing Assembly

INSTALLATION

NOTE

After re-installing the transmission assembly, verify that all parts have been properly installed. See [Figure 6-78](#).


- 6.11 MAIN DRIVE GEAR
- 6.10 TRANSMISSION ASSEMBLY
- 6.13 TRANSMISSION LEFT CASE BEARINGS
- 6.12 TRANSMISSION RIGHT CASE BEARINGS

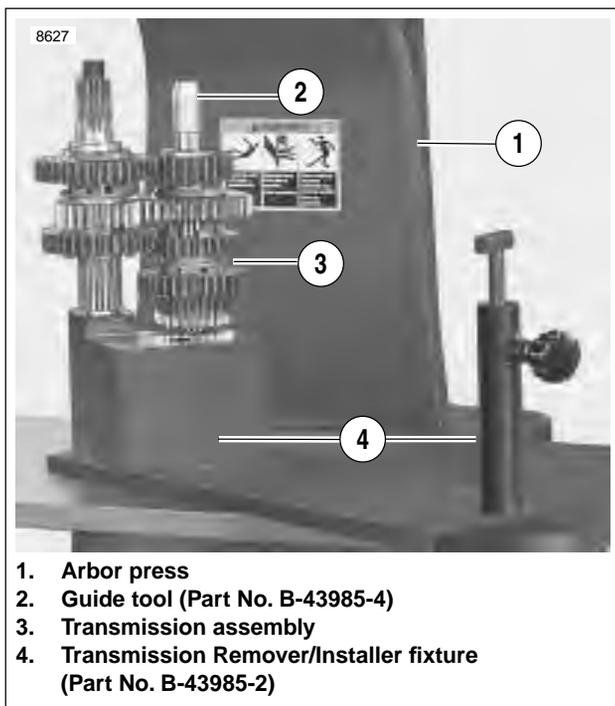

1. Arbor press
2. Guide tool (Part No. B-43985-4)
3. Transmission assembly
4. Transmission Remover/Installer fixture (Part No. B-43985-2)

Figure 6-81. Transmission Assembly in Fixture

1. See [Figure 6-81](#). Place transmission assembly onto TRANSMISSION REMOVER/INSTALLER FIXTURE (Part No. B-43985-2) on arbor press.
2. Install COUNTERSHAFT GUIDE ADAPTER (Part No. B-43985-4).

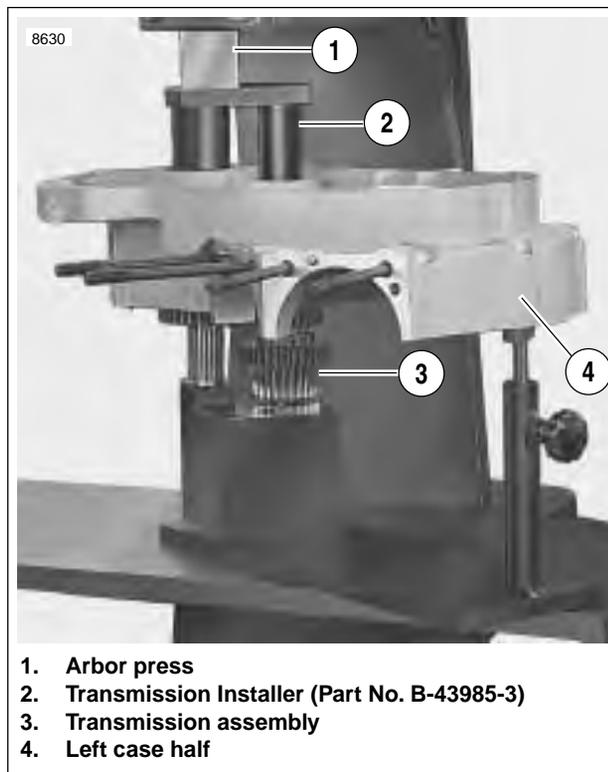

1. Arbor press
2. Transmission Installer (Part No. B-43985-3)
3. Transmission assembly
4. Left case half

Figure 6-82. Installing Transmission in Left Case Half

3. See [Figure 6-82](#). Place left case half over transmission assembly and install TRANSMISSION INSTALLER (Part No. B-43985-3) into crankcase.
4. See [Figure 6-82](#). Press crankcase onto transmission assembly into until it bottoms out.
5. Remove COUNTERSHAFT GUIDE ADAPTER (Part No. B-43985-4).
6. Remove transmission assembly and left crankcase half from fixture.
7. Re-install transmission assembly and left crankcase half in engine stand.
8. Install mainshaft 2nd gear with shifter fork groove towards mainshaft 3rd gear.
9. Install shifter forks, shafts and shifter drum. See [6.10 TRANSMISSION ASSEMBLY](#).

SHIFTER FORKS AND DRUM ASSEMBLY

NOTES

- See [Figure 6-83](#). Shifter fork design allows for one common part number for all three shifter forks. As the transmission runs, each shifter fork develops a certain wear pattern with its mating parts. For this reason, it is important that each shifter fork be reinstalled in its original location.
- Always lubricate the shaft bore in each shifting fork with Sport Transmission Lube before assembly.

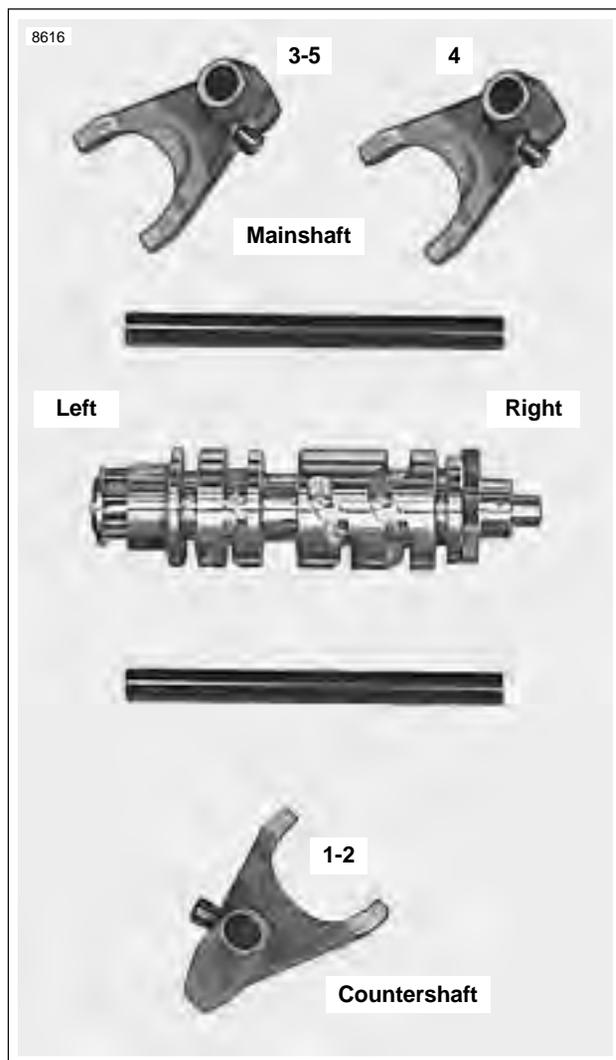


Figure 6-83. Shifter Forks, Drum and Shafts

1. Place the 4th gear shifter fork on the appropriate mainshaft sliding gear.
2. Install the shifter drum into the left case half with the previously scribed line at the 6 o'clock position. This will place the shifter drum in the 4th gear position.
3. See [Figure 6-84](#). Place the 3rd and 5th gear shifter fork on the appropriate mainshaft sliding gear and install the shifter fork shaft through the two installed shifter forks and into the left case half.
4. Install the 1st and 2nd gear shifter fork on the appropriate countershaft sliding gear and install the remaining shifter fork shaft through the last installed shifter fork and into the left case half.

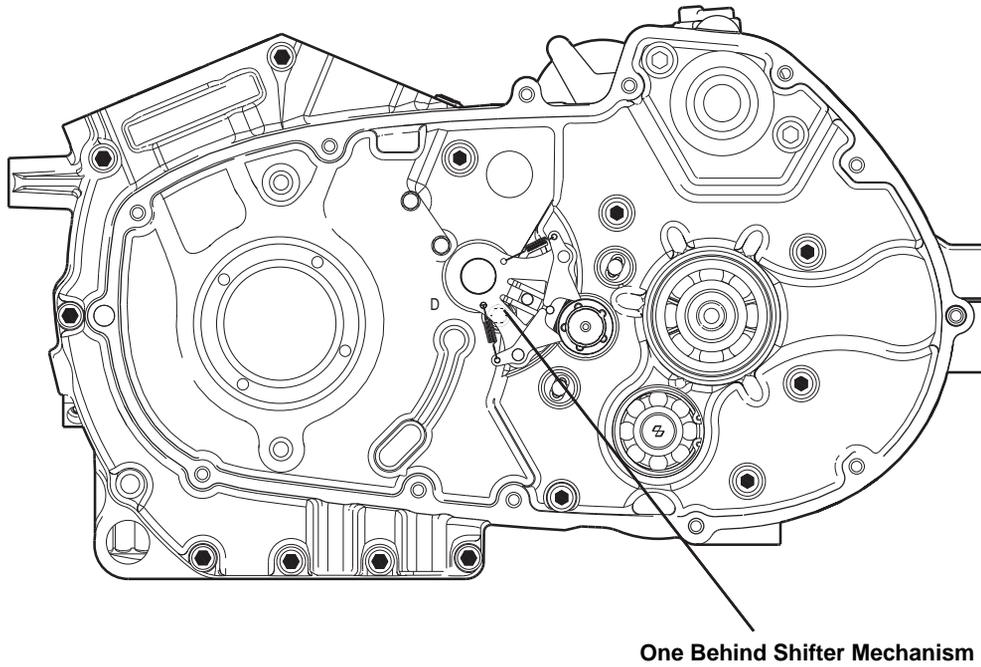


Figure 6-84. Installing Shift Fork Shafts

NOTE

See [Figure 6-84](#). Install shifter fork shafts in the left case half by lightly tapping on the end with a brass hammer until seated in bore.

b1016x3x



One Behind Shifter Mechanism

 -Indicates Bolt Pattern Location

Figure 6-85. Crankcase Fasteners

INSTALLING RIGHT CRANKCASE

1. See [Figure 6-86](#). Install the flywheel assembly into the left crankcase half using CRANKSHAFT GUIDE TOOL Part No. HD-42326.

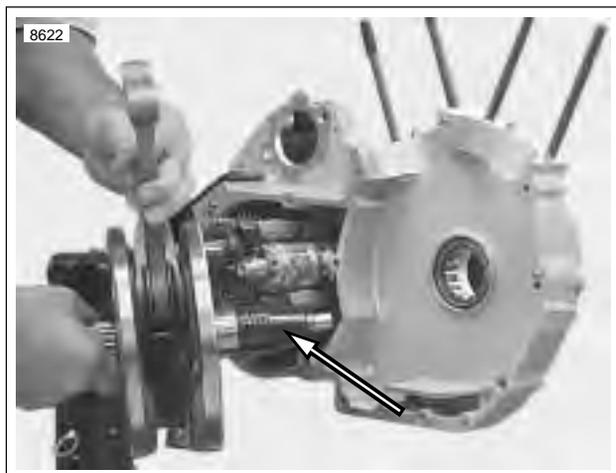


Figure 6-86. Installing Flywheel Assembly Using Crankshaft Guide Tool (Part No. HD-42326)

NOTE

The Gear Detent Assembly Aid is used to move the gear detent lever clear of the shifter drum for assembly purposes.

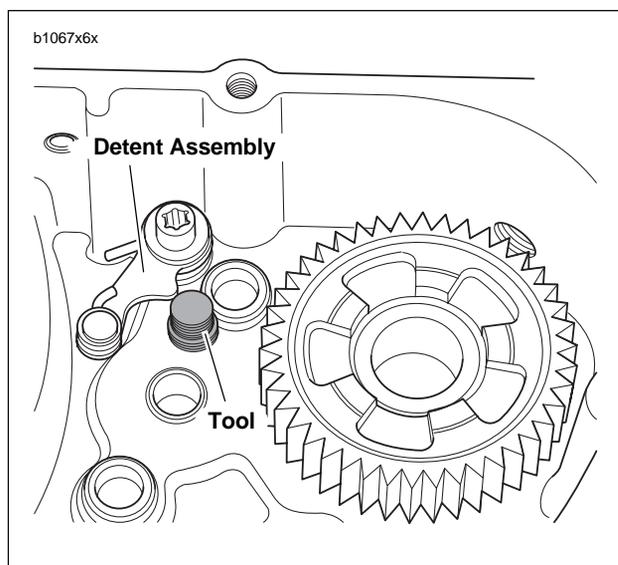


Figure 6-87. Gear Detent Assembly Aid (Part No. B-45520)

2. See [Figure 6-87](#). Retract detent assembly in right case half and install GEAR DETENT ASSEMBLY AID (Part No. B-45520) until it has bottomed in right case half.

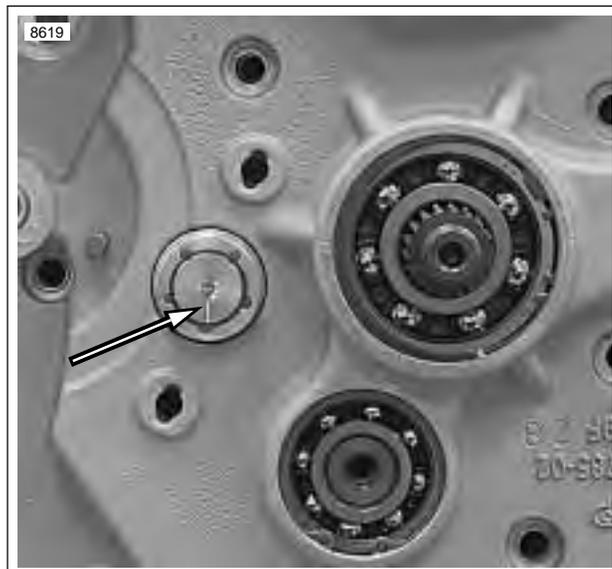


Figure 6-88. Scribed Line on Shifter Drum at 6 O'clock (Transmission in 4th Gear)

3. See [Figure 6-88](#). Place Transmission in the 4th gear position. The scribed line on the shifting drum should be at 6 o'clock.


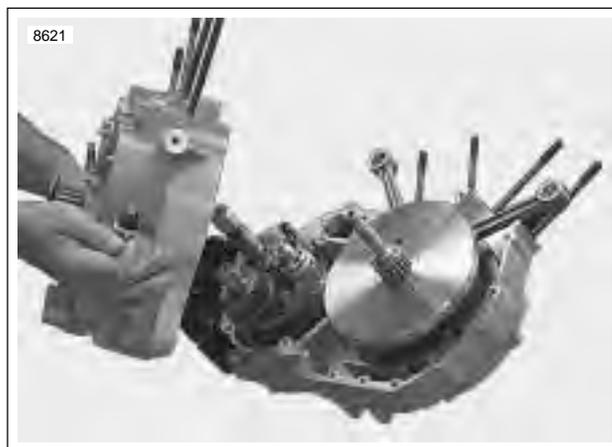


Figure 6-89. Crankcase Halves

4. See [Figure 6-89](#). Assemble crankcase halves together.
 - a. Apply a thin coat of DOW CORNING SILASTIC #732 clear sealant to crankcase joint faces
 - b. Apply several drops of LOCTITE 262 (red) to last few threads.
 - c. See [Figure 6-85](#). Tighten 5/16-in. fasteners to 15-19 ft-lbs (20.3-25 Nm).

INSTALLATION


1. See [Figure 6-90](#). Correctly install shifter return spring onto the reverse side of the shifter shaft assembly before placing shaft in left crankcase half.

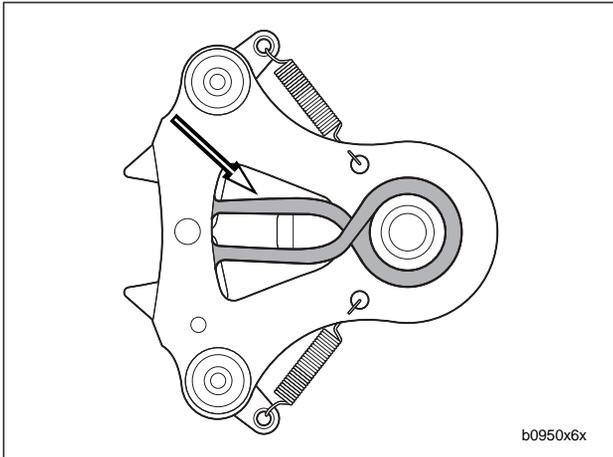

**Figure 6-90. Shifter Shaft Return Spring
(Correctly Installed)**

CAUTION

See [Figure 6-91](#). The shifter shaft return spring can be installed incorrectly and then assembled in the left crankcase half. Failure to install the spring properly will result in improper shifting.

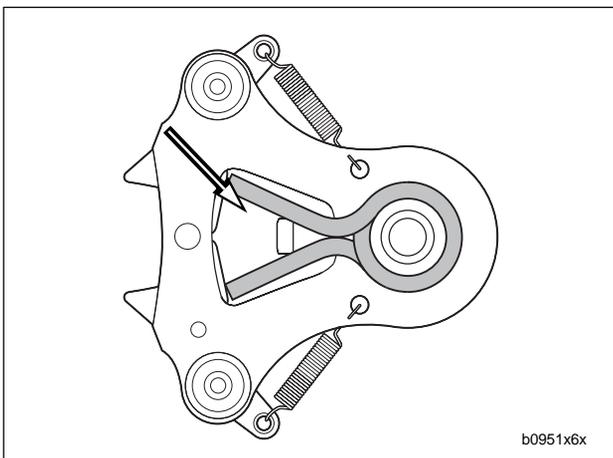

**Figure 6-91. Shifter Shaft Return Spring
(Incorrectly Installed)**


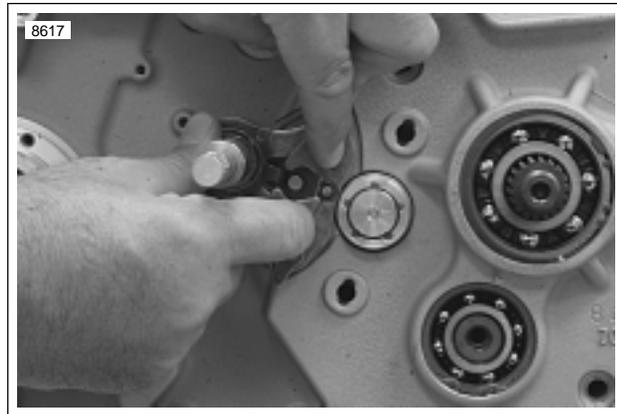


Figure 6-92. Installing Shifter Shaft Assembly

2. See [Figure 6-92](#). Depress ratchet arms and insert shaft assembly into the bushing in the left case half and release. Ratchet arms should now be inside the end plate of the shifter drum contacting the shifter drum pins.

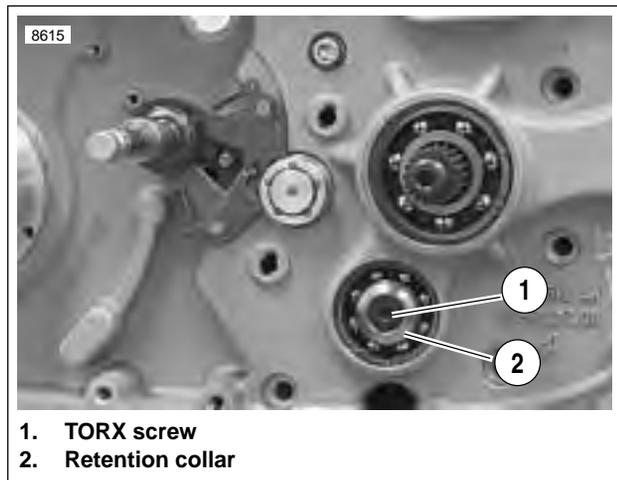

1. TORX screw
2. Retention collar

Figure 6-93. Countershaft Retainer

3. See [Figure 6-93](#). Position retention collar (2) next to end of countershaft with beveled side facing outward.
 - a. Apply several drops of LOCTITE 243 (blue) to last few threads.
 - b. Insert screw (1) through retention collar (2) and thread into end of shaft.
 - c. Place transmission in gear and tighten TORX screw (1) to 13-17 ft-lbs (18-23 Nm).

REMOVAL

| PART NO. | SPECIALTY TOOL |
|--------------|------------------------------------|
| B-45659 | Transmission sprocket locking tool |
| HD-94660-37B | Mainshaft locknut wrench |

1. Loosen rear axle pinch fastener. See [INSPECTION](#) in [1.10 DRIVE BELT](#).
2. Unthread axle approximately 15 threads to release tension from drive belt.
3. Remove front sprocket cover. See [2.30 SPROCKET COVER](#).

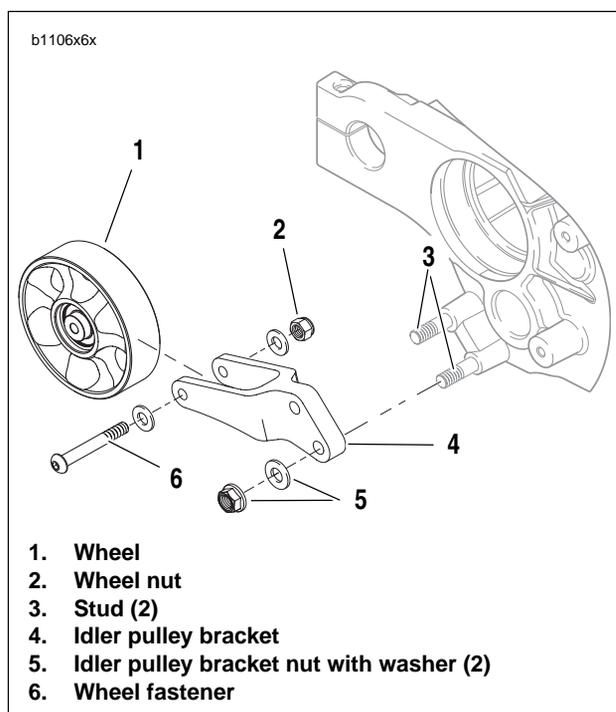


Figure 6-94. Idler Pulley Assembly

4. See [Figure 6-94](#). Remove both bracket nuts with washers (5) attaching idler pulley bracket (4) to studs (3).
5. Slide idler pulley assembly off studs.
6. Inspect pulley by spinning wheel (1) and checking for wheel bearing wear. See [INSPECTION](#) under [1.10 DRIVE BELT](#).
7. If pulley wheel needs replacement, remove fastener (6) and washer (3) from idler pulley bracket (4) and discard. Replace with **new** pulley wheel (1).

NOTE

The pulley wheel bearings can not be replaced separately. A new pulley wheel must be installed.

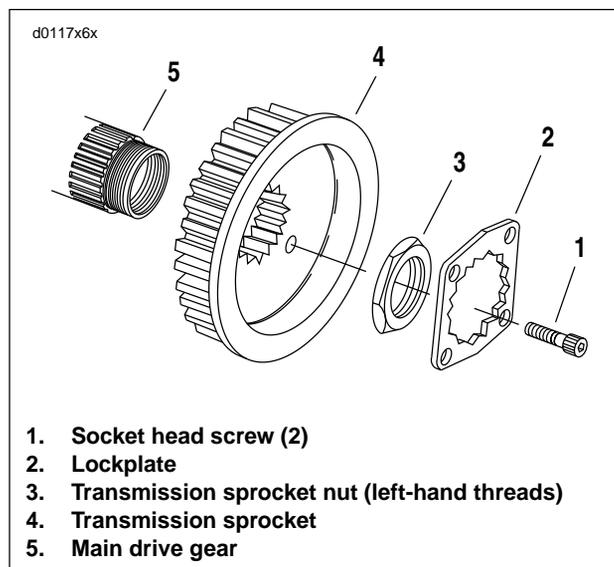


Figure 6-95. Transmission Sprocket

8. See [Figure 6-95](#). Place transmission in first gear. Remove two socket head screws (1) and lockplate (2).

CAUTION

Transmission sprocket nut has left-hand threads. Turn nut clockwise to loosen and remove from main drive gear shaft.

9. Remove transmission sprocket nut (3) from main drive gear (5) using MAINSHAFT LOCKNUT WRENCH (Part No. HD-94660-37B). Use an air impact wrench for best results.
10. Remove secondary drive belt from transmission sprocket. Remove transmission sprocket (4) from main drive gear (5).

INSTALLATION

1. See [Figure 6-95](#). Install transmission sprocket (4) with secondary drive belt onto main drive gear (5).
2. Place transmission in neutral.
3. Apply a few drops of LOCTITE 262 (red) to the **left-hand threads** of transmission sprocket nut (3) and lightly coat the washer-faced side with clean H-D 20W50 engine oil. Wipe off any excess oil.
4. Position nut with washer-faced side facing transmission sprocket. Turn the nut **counterclockwise** to install it onto main drive gear.

NOTE

The drive on 2004 Lightning models is a 14mm belt. Use the P3/Blast SPROCKET HOLDING TOOL with the spacer and fastener from the 2003 Firebolt SPROCKET LOCKING TOOL to hold the sprocket.

5. See [Figure 6-96](#). Install the P3/Blast SPROCKET HOLDING TOOL (Part No. B-43982) as shown.
6. Using MAINSHAFT LOCKNUT WRENCH (Part No. HD-94660-37B) and a torque wrench, tighten sprocket nut to 50 ft-lbs (67.8 Nm) INITIAL TORQUE ONLY.
7. See [Figure 6-97](#). Scribe a line on the transmission sprocket nut and continue the line on the transmission sprocket as shown.
8. Tighten the transmission sprocket nut an additional 30°-40°.

CAUTION

Maximum allowable tightening of sprocket nut is 45° of counterclockwise rotation, after initially tightening to 50 ft-lbs. Do not loosen sprocket nut while attempting to align the screw holes. If you cannot align lockplate and sprocket screw holes, nut may be additionally tightened 45° as specified above. Tightening too much or too little may cause the nut to come loose during vehicle operation. If you cannot align lockplate and sprocket screw holes, nut may be additionally tightened until screw holes align.

9. See [Figure 6-95](#). Install lockplate over nut so that two of lockplate's four drilled holes (diagonally opposite) align with sprocket's two tapped holes.


NOTE

The lockplate has four screw holes and can be turned to either side, so you should be able to find a position without having to additionally tighten the nut. If you cannot align the screw holes properly, the nut may be additionally **TIGHTENED** until the screw holes line up, **but do not exceed 45°**. NEVER LOOSEN nut to align the screw holes.

10. See [Figure 6-95](#). Install two socket head screws through aligned holes of lockplate and into tapped holes of sprocket. Tighten to 90-110 **in-lbs** (10.2-12.4 Nm).


NOTE

The original equipment socket head screws (1) have thread-locking compound applied to them. Since this compound remains effective for about three removal/installation cycles, the original screws may be reused up to three times. After the third removal/installation cycle, replace both screws with **new** screws identical to the original.

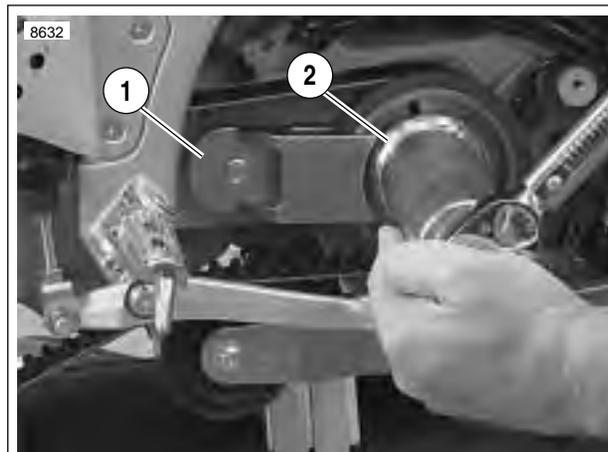

1. P3/Blast sprocket holding tool (Part No. B-43982)
2. Mainshaft locknut wrench (Part No. HD-94660-37B)

Figure 6-96. Transmission Sprocket Tightening

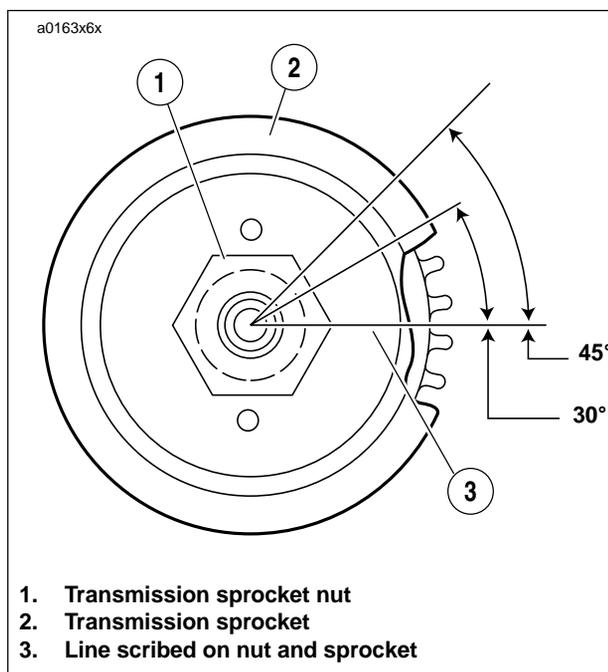

1. Transmission sprocket nut
2. Transmission sprocket
3. Line scribed on nut and sprocket

Figure 6-97. Aligning Transmission Sprocket

11. Center rear wheel in the swingarm at the same time sliding the drive belt onto the rear sprocket.
12. With wheel centered in swingarm, lower bike to align swingarm and wheel hub.
13. Apply ANTI-SEIZE LUBRICANT to hole in right side of swingarm where rear axle slides through.

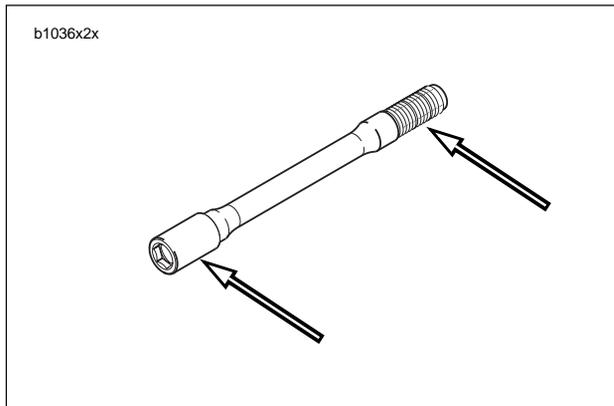


Figure 6-98. Anti-Seize Lubricant Location

14. See [Figure 6-98](#). Coat the axle with ANTI-SEIZE LUBRICANT.
15. Slide axle through right side of swing arm and wheel hub and thread partially into swingarm on left side.
16. Install idler pulley. See [DRIVE BELT INSTALLATION](#) under [6.6 DRIVE BELT SYSTEM](#).

CAUTION

Never tighten rear axle with swingarm brace removed.

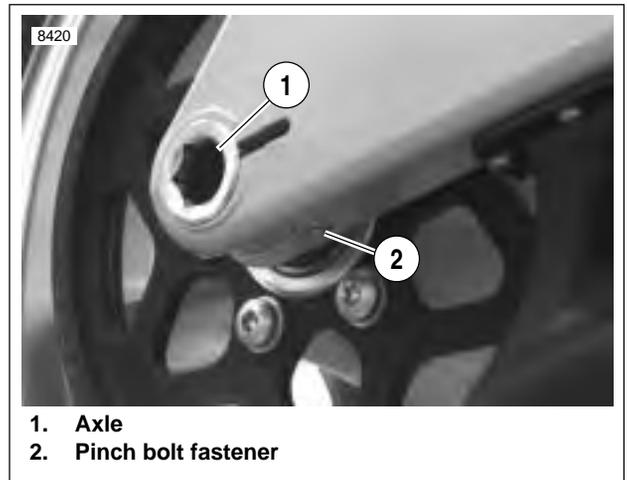


Figure 6-99. Rear Wheel Mounting, Right Side

17. See [Figure 6-99](#). Tighten rear axle (1) to 23-27 ft-lbs (31.2-36.6 Nm), back off two full turns and then retighten to 48-52 ft-lbs (65.1-70.5 Nm).
18. Tighten pinch fastener (2) on right side of swingarm to 40-45 ft-lbs (54-61 Nm).

NOTES

Table Of Contents

| SUBJECT | PAGE NO. |
|--|-----------------|
| 7.1 Specifications | 7-1 |
| 7.2 Ignition System | 7-3 |
| 7.3 Ignition/Headlight Key Switch | 7-5 |
| 7.4 Spark Plug Cables | 7-9 |
| 7.5 Starter Interlock | 7-11 |
| 7.6 Interactive Exhaust System (XB12R) | 7-18 |
| 7.7 Charging System | 7-23 |
| 7.8 Alternator | 7-30 |
| 7.9 Voltage Regulator | 7-32 |
| 7.10 Battery Cables | 7-33 |
| 7.11 Battery | 7-35 |
| 7.12 Headlight | 7-41 |
| 7.13 Tail Lamp | 7-43 |
| 7.14 Turn Signals | 7-44 |
| 7.15 Turn Signal Flasher | 7-47 |
| 7.16 Handlebar Switches | 7-48 |
| 7.17 Speedometer Sensor | 7-50 |
| 7.18 Instrument Module | 7-52 |
| 7.19 Speedometer Performance Check | 7-53 |
| 7.20 Horn | 7-58 |
| 7.21 Neutral Indicator Switch | 7-60 |
| 7.22 Main Fuse and Fuses | 7-61 |
| 7.23 Main Wire Harness | 7-62 |
| 7.24 Interactive Exhaust Harness | 7-67 |
| 7.25 Sprocket Cover Wiring | 7-69 |

Table 7-1. Battery Specifications

| BATTERY | |
|---------|---------------------|
| Size | 12 VDC/12 AH/200CCA |
| Type | Sealed, AGM |

Table 7-2. Spark Plug Specifications

| SPARK PLUGS | | |
|-----------------------------------|------------------|----------|
| Size | 12 mm | |
| Type | 10R12A | |
| Gap | 0.035 in. | 0.9mm |
| Torque | 11-18 ft-lbs | 15-24 Nm |
| Cable resistance (front and rear) | 1,350-3,465 ohms | |

Table 7-3. Alternator Specifications

| ALTERNATOR | |
|------------------------|-------------------------------|
| AC voltage output | 16-20 VAC per 1000 engine RPM |
| Stator coil resistance | 0.1-0.3 Ohms |

Table 7-4. Regulator Specifications

| REGULATOR | |
|---------------------------|-------------------------------|
| Voltage output @ 3600 RPM | 14.3-14.7 VDC @ 75° F (24° C) |
| Amperes @ 3600 RPM | 34-38 Amps |

Table 7-5. Ignition Coil Specifications

| IGNITION COIL RESISTANCE | |
|--------------------------|----------------|
| Primary winding | 0.5-0.7 ohms |
| Secondary winding | 5500-7500 ohms |

Table 7-6. Electrical System Specifications

| ELECTRICAL SYSTEM | AMPERES |
|---|---------|
| Main fuse | 30 |
| Ignition fuse | 15 |
| Light fuse | 15 |
| Accessory fuse | 7.5 |
| Brake/horn/active muffler fuse (XB12R only) | 15 |
| ECM fuse | 7.5 |
| Key switch fuse | 15 |
| Cooling fan fuse | 7.5 |

Table 7-7. Specifications

| BULB CHART | | BULBS REQUIRED | WATTS | AMPS | PART NUMBER |
|--|---|----------------|-------|-----------|-------------|
| Headlights | Bulb (H3) | 2 | 55 | 4.58 | 68918-98 |
| | Position lamp (European models only) | 2 | 3 | 0.25 | Y0026.02A8 |
| Marker lamps | Tail/Stop Lamp | 1 | 5/21 | 0.42/1.75 | Y0401B.2U |
| | Turn signal lamp (front and rear (1 bulb each) | 4 | 10.0 | 0.84 | Y0042.K |
| Indicator lamps, speedometer and tachometer illumination | Indicator, Speedometer and Tachometer LED's are part of the instrument module and are not replaceable. Entire assembly must be replaced if LED fails. | | | | |

TORQUE VALUES

| ITEM | TORQUE | | NOTES |
|---|----------------------|--------------|---|
| | | | |
| Battery (+) to starter fastener | 60-85 in-lbs | 7-10 Nm | page 7-34 |
| Battery ground cable/actuator ground wire | 48-60 in-lbs | 5.4- 6.7 Nm | page 7-68 |
| Battery terminal fastener | 72-96 in-lbs | 8-11 Nm | page 7-33, 7-39, 7-65 |
| Fork clamp, upper | 17-19 ft-lbs | 23-26 Nm | LOCTITE 272 (red), page 7-8 |
| Fuse block mounting fasteners | 72-96 in-lbs | 8.1-10.8 Nm | page 7-64 |
| Handlebar control housing screws (left side) | 25-33 in-lbs | 3-4 Nm | page 7-49 |
| Handlebar control housing screws (right side) | 25-33 in-lbs | 3-4 Nm | longer screw on bottom, page 7-49 |
| Horn fastener | 72-96 in-lbs | 8.1-10.8 Nm | page 7-58 |
| Ignition switch body fastener | 12-36 in-lbs | 1.4-4.0 Nm | page 7-7 |
| Instrument module fastener | 12-36 in-lbs | 1.4-4.0Nm | page 7-52 |
| Main battery ground | 48-72 in-lbs | 5.4-8.1 Nm | page 7-34 7-65 |
| Negative battery cable at battery terminal | 72-96 in-lbs | 8-11 Nm | page 7-68 |
| Neutral indicator switch | 36-60 in-lbs | 4-6.8 Nm | LOCTITE 243 (blue), page 7-60 |
| Relay block mounting fasteners | 72-96 in-lbs | 8.1-10.8 Nm | page 7-64 |
| Rotor mounting fasteners | 90-110 in-lbs | 10-12 Nm | LOCTITE 243 (blue), page 7-31 |
| Spark plugs | 11-18 ft-lbs | 15-24 Nm | page 7-1 |
| Stator TORX mounting screws | 30-40 in-lbs | 3-4 Nm | T-27 TORX with retaining compound, replace with new after each removal, page 7-31 |
| Steering head wiring clamp | 16-18 ft-lbs | 21.7-24.4 Nm | page 7-64 |
| Steering stem cap | 38-42 ft-lbs | 52-57 Nm | page 7-8 |
| Steering stem pinch fastener | 17-19 ft-lbs | 23-26 Nm | LOCTITE 272 (red), page 7-8 |
| Turn signal fastener (rear) | 25-28 in-lbs | 2.8-3.2 Nm | page 7-46 |
| Turn signal fasteners (front) | 25-28 in-lbs | 2.8-3.2 Nm | page 7-46 |
| Turn signal flasher fastener | 30-40 in-lbs | 3.4-4.5 Nm | page 7-47 |
| Voltage regulator mounting screws | 48-60 in-lbs | 5.4-6.8 Nm | use new fasteners, page 7-32 |

GENERAL

The vehicle uses a breakerless inductive-discharge ignition system. The system has both a primary and secondary circuit. The primary circuit consists of the battery, main fuse, ignition switch, primary coil windings, computerized ignition timer and associated wiring. The secondary circuit consists of the secondary coil, spark plugs and associated wiring. See Figure 7-1.

DIGITAL TECHNICIAN (Part No. HD-44750) can access the information received by and stored in the electronic control module.

The electronic control module (ECM) is located in the fairing. The module has three primary functions. First, it computes the spark advance for proper ignition timing based on sensor input. Second, it controls the independent, primary windings of the spark coil and is thus able to provide sequential and independent firing of the spark plugs (non waste spark). Third, it calculates the correct air/fuel ratio based on input from the sensors.

The electronic control module contains all the solid-state components used in the ignition system. The dwell time for the ignition coil is also calculated by the ECM microprocessor and is dependent upon battery voltage. The programmed dwell is an added feature to keep battery drain to a minimum and to adequately charge the coil at all speeds. The ECM has added protection against transient voltages, continuous reverse voltage protection and damage due to jump starts. The ECM is fully enclosed to protect it from vibration, dust, water and oil. The module is not repairable. Replace the unit if it fails.

The ECM uses six or seven different sensors to monitor rider demands and engine conditions. These sensors are:

- Throttle Position (TP) Sensor
- Cam Position (CMP) Sensor
- Intake Air Temperature (IAT) Sensor
- Engine Temperature (ET) Sensor
- Oxygen (O₂) Sensor
- Bank Angle Sensor (BAS)
- Interactive Muffler Valve Position Sensor (XB12R)
(Built-in to the actuator)

The ECM uses the information provided by the throttle position and cam position sensors to calculate how much air is entering the engine. The throttle position sensor monitors the amount of air entering the engine by how far the throttle is open, whether it is opening or closing and how fast it is opening or closing. The IAT sensor measures the temperature of the air entering the engine, providing the rest of the information necessary to determine the density of the air entering the engine. The ECM also monitors the cam position sensor to determine the exact position of both cylinders in the combustion cycle and the engine speed.

The ET sensor provides the ECM the current engine temperature. Proper fuel and spark delivery are dependent on the temperature of the engine. The ECM will provide a richer fuel mixture on start up and a higher degree of spark advance. As the vehicle warms up to operating temperature the fuel mixture will lean and the spark advance will decrease.

On the XB12R, an interactive exhaust system utilizes an actuator valve in the muffler which is connected to a servo motor via a cable. The valve position automatically adjusts to enhance engine performance.

Cooling fan actuation is controlled by the ECM. With key ON, fan turns on when engine cylinder head temperature reaches 220° C (428° F) and shuts off when temperature reaches 180° C (356° F). With key OFF, fan turns on when engine temperature reaches 170° C (338° F) and shuts off when temperature reaches 150° C (302° F).

The information provided by the O₂ sensor allows the ECM to ensure a proper air/fuel mixture by monitoring the final combustion efficiency in the exhaust system. This ensures optimum engine performance at any altitude or barometric pressure. The O₂ sensor input to the ECM is required to ensure a stoichiometric (14.7:1) air/fuel ratio during closed loop operation.

The Bank Angle Sensor (BAS) provides input to the ECM on whether the vehicle lean is greater than predetermined bank angle limit. As long as lean angle does not exceed limit, fuel supply and ignition operation are unaffected. If the vehicle exceeds the predetermined bank angle limit, the BAS will interrupt the operation of the ignition system and fuel supply. To reset system, return vehicle to the upright position and switch key OFF.

The ECM-controlled ignition coil fires each spark plug independently on the compression stroke of each cylinder (no waste spark). The spark plug in the front cylinder fires at the end of that cylinder's compression stroke, thereby igniting the air/fuel mixture. The same sequence occurs at the end of the rear cylinder's compression stroke (thereby igniting the air/fuel mixture in the rear cylinder).

The rotor and cam position sensor are located in the gearcase cover on the right side of the motorcycle. The Cam position sensor consists of a Hall-effect device, magnet and plate. The plate is mounted over a rotating cup ("rotor cup"). The rotor cup is mounted on the camshaft and operates at one-half crankshaft speed. As the rotor cup turns inside the gearcase, six asymmetrical teeth on the rotor cup sequentially break the magnetic field between the magnet and the Hall-effect device. The edges of these teeth are cut to correspond to specific positions of the camshaft during the engine cycle such as TDC for the front cylinder. The output of the cam position sensor is used by the ECM to not only determine engine position, but also to calculate engine speed. This method of measuring camshaft position provides accurate information on engine position down to zero engine speed.


For more information on the sensors used in conjunction with the ECM see Section 4 Fuel System.

See the wiring diagrams in the Appendix for additional information on ignition system circuits.

TROUBLESHOOTING

See Section 4 Fuel System for troubleshooting information.

1. Pop rivet (2)
2. Timer cover
3. Screw (2)
4. Timer plate stud (2)
5. Cam position sensor connector [14]
6. Terminal pin
7. Electronic control module (ECM)
8. Connector, interactive exhaust system
9. Spark plug (2)
10. Rear spark plug cable
11. Mounting fastener
12. Wireform, cable guide
13. Ignition coil
14. Front spark plug cable
15. Engine mount
16. Seal
17. Trigger rotor
18. Trigger rotor bolt
19. Cam position sensor
20. Inner cover

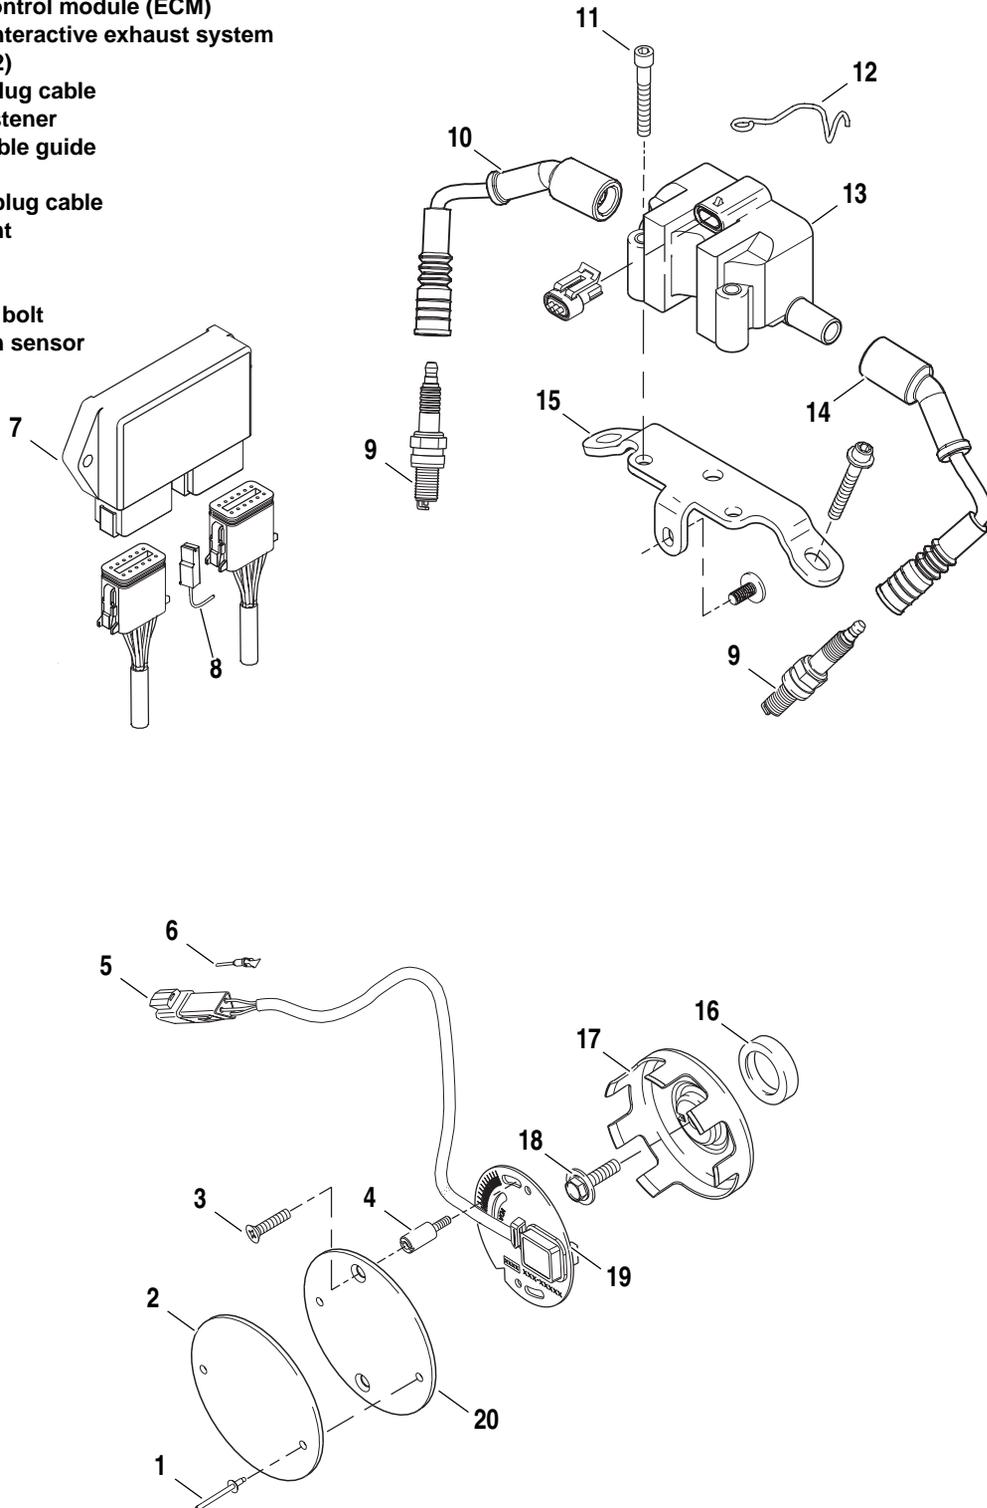

b1164x4x

Figure 7-1. Ignition Components

GENERAL

⚠ WARNING

DO NOT modify the ignition/headlight switch wiring to circumvent the automatic-on headlight feature. Visibility is a major concern for motorcyclists. Failure to have proper headlight operation could result in death or serious injury.

Switch positions are explained in [Table 7-8](#).

CAUTION

When turning off the ignition, verify that the key is removed in the OFF position and that the lights are not left on. If the rider stops the engine and inadvertently removes the key in the P position, the battery will be drained of its charge if the vehicle is left standing too long.

NOTE

The key locks the ignition system and is removable in both the LOCK and P positions. The P position is located counter-clockwise from the LOCK position and allows the rider to remove the key while leaving the lights on. When the key is placed in the P position, several indicator markers are or can be activated. See [Table 7-9](#).

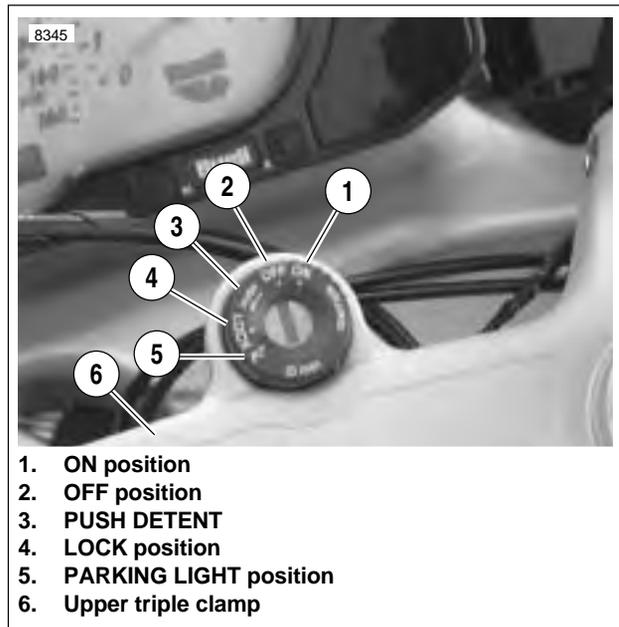


Figure 7-2. Ignition/Headlight Key Switch

Table 7-8. Ignition Key Switch Positions

| LABEL | IGN. | LAMPS | REMOVE KEY |
|-------|------|--|------------|
| OFF | off | off | yes |
| P | off | See note & Table 7-9 . | yes |
| ON | on | | no |
| LOCK | off | off | yes |

Table 7-9. Indicator Markers

| ITEM | P | ON |
|--|---------------------|------------------|
| Headlight position marker lamps (European models only) | on | on |
| Headlight high beam | off | can be activated |
| Headlight low beam | off | on |
| Instrument module illumination lamps | on | on |
| Stop lamp | can be activated | |
| Front and rear turn signals | can be activated | |
| Horn | cannot be activated | can be activated |

REMOVAL

1. Remove seat. See [2.38 SEAT](#).


WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable.
3. See [Figure 7-6](#). Cut cable strap (2) holding ignition switch, fuse block and right handlebar switch wires.
4. Disconnect ignition switch connector [33] (3).
5. See [Figure 7-3](#). Remove cable straps attached to the upper fork clamp.
6. Remove airbox cover. See [2.34 INTAKE COVER ASSEMBLY](#).
7. See [Figure 7-4](#). Remove steering stem pinch fastener (2).
8. Remove upper fork clamp pinch fasteners (1).
9. See [Figure 7-4](#). Hold or brace the lower fork clamp and remove steering stem cap (3).
10. Remove the upper fork clamp (4) from forks.
11. See [Figure 7-5](#). Use Snap-on Tamper-Resistant T45 Torx driver, Part No FTXR45E to remove ignition switch fasteners (3) securing ignition switch (4) to upper fork clamp. Slide ignition switch out of upper fork clamp.



Figure 7-3. Cable Straps On Upper Fork Clamp

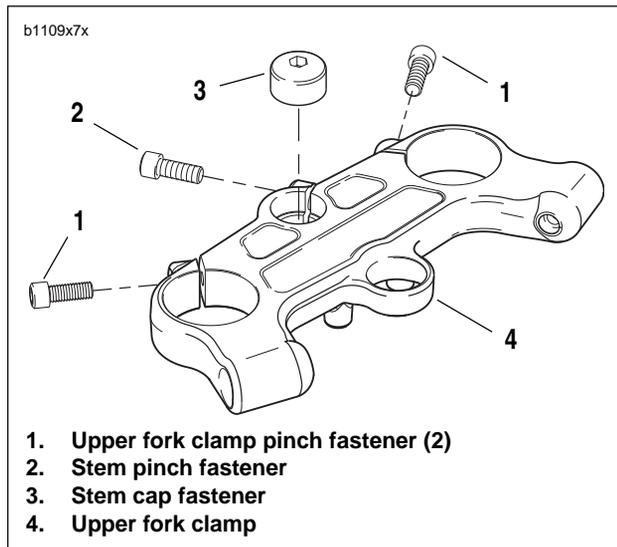

1. Upper fork clamp pinch fastener (2)
2. Stem pinch fastener
3. Stem cap fastener
4. Upper fork clamp

Figure 7-4. Upper Fork Clamp

DISASSEMBLY

1. See [Figure 7-5](#). Remove ignition switch housing (5) from ignition switch (4) by prying tabs on side of housing
2. Remove ignition switch body fasteners (1). Separate ignition switch body (2) from ignition switch (4).

ASSEMBLY

NOTE

See [Figure 7-5](#). In next step, be sure wide slot in ignition switch housing (5) is installed over wide boss on ignition switch (4).

1. Push ignition switch housing (5) on to ignition switch (4).

NOTE

In next step, do not force ignition switch (4) into ignition switch body (2). If ignition switch does not easily slide into ignition switch body, rotate slot in ignition switch body with screwdriver until proper installation can be achieved.

2. Mate ignition switch to ignition switch body.
3. Install ignition switch body fasteners (1). Tighten to 12-36 in-lbs (1.4-4.0 Nm).

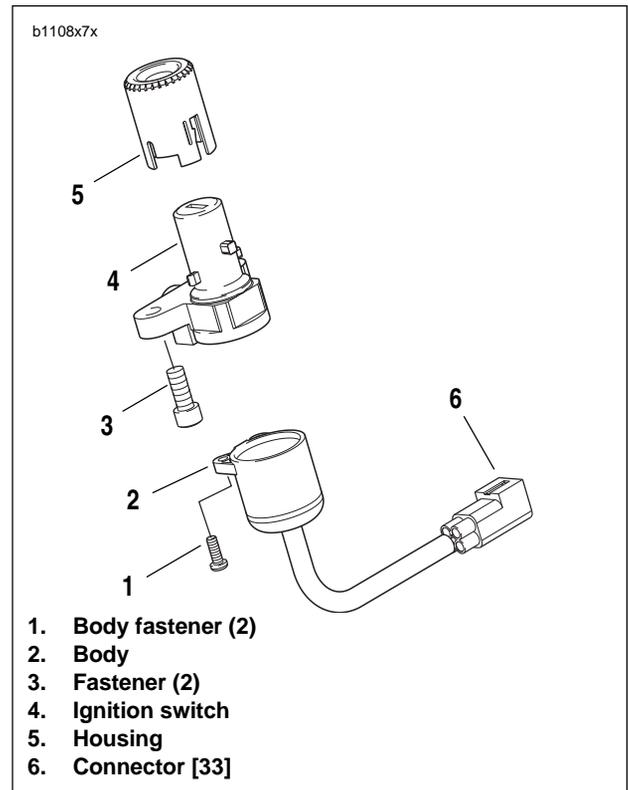


Figure 7-5. Ignition Switch Assembly

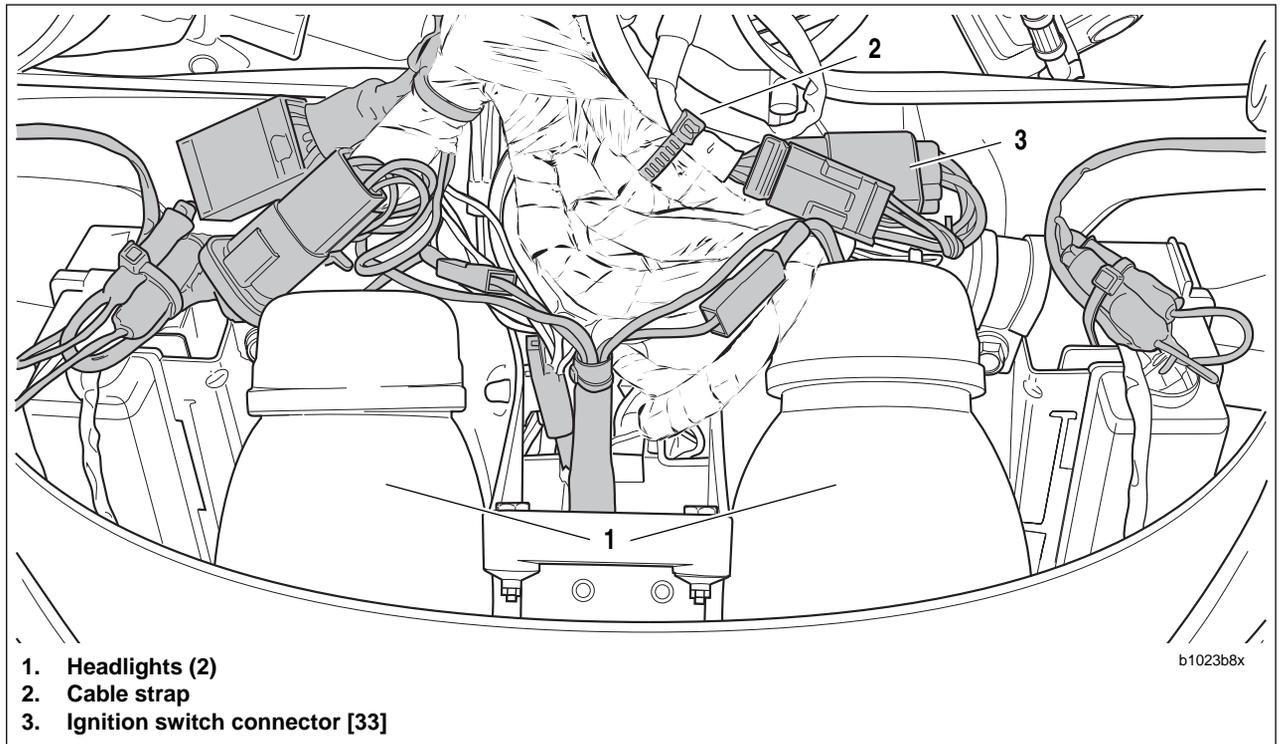


Figure 7-6. Ignition Switch Connector (viewed from underneath fairing)

INSTALLATION

1. See [Figure 7-4](#). From underneath upper triple clamp (4), insert ignition switch assembly into hole. The word "OFF" stamped on the switch housing should face front of vehicle.
2. See [Figure 7-5](#). Attach ignition switch assembly to upper triple clamp using ignition switch fasteners (3). USE LOCTITE 272 (red) on fasteners. Tighten to 18-20 ft-lbs (24.4-27.1 Nm).
3. See [Figure 7-4](#). Install steering stem cap (3). Tighten but do not torque.
4. Install upper clamp on fork assembly.
 - a. Apply LOCTITE 272 to upper fork clamp pinch fasteners (1).
 - b. Tighten but do not torque upper fork clamp pinch fasteners.
 - c. Tighten steering stem cap to 38-42 ft-lbs (52-57 Nm).
 - d. Install steering stem pinch fastener (2) applying LOCTITE 272 and tightening to 17-19 ft-lbs (23-26 Nm).
 - e. Tighten upper fork clamp fasteners to 17-19 ft-lbs (23-26 Nm).
 - f. Repeat torque sequence in steps d and e.
5. See [Figure 7-6](#). Connect ignition key switch connector (3) to wiring harness. Install cable strap (2) around ignition switch, fuse block and right handlebar switch wires.
6. Install airbox assembly. See [4.30 AIRBOX](#).
7. See [Figure 7-3](#). Attach cable straps to upper fork clamp.
 - a. Install cable strap to the right of ignition switch securing right hand switch and brake line wires to upper fork clamp.
 - b. Install cable strap to the left of ignition switch securing left hand switch and clutch cable wires to upper fork clamp.
8. Install negative battery cable.

WARNING

Check for proper headlight operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper headlight operation could result in death or serious injury.

9. Check ignition key switch for proper operation. If operation fails, reread procedure and verify that all steps were performed.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

10. Install seat. See [2.38 SEAT](#).

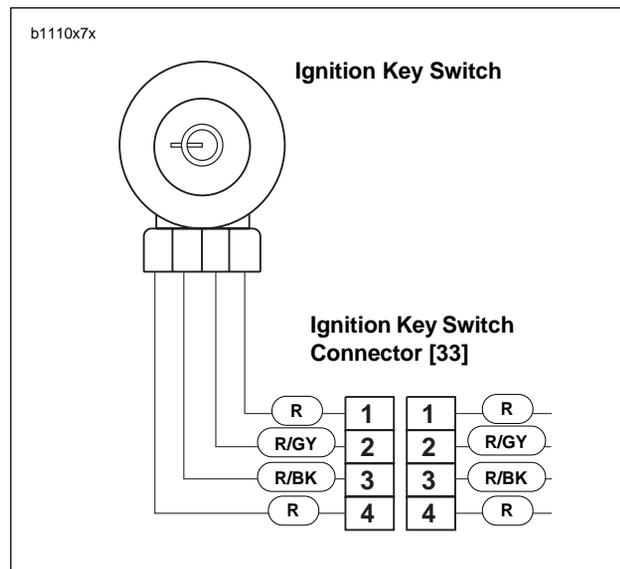


Figure 7-7. Ignition Key Switch Wiring

GENERAL

Resistor-type high-tension spark plug cables have a carbon-impregnated fabric core, instead of solid wire, for radio noise suppression and improved reliability of electronic components. Use the exact replacement cable for best results.

REMOVAL

WARNING

Never disconnect a spark plug cable with the engine running. If you disconnect a spark plug cable with the engine running, you may receive a potentially fatal electric shock from the ignition system which could result in death or serious injury.

CAUTION

When disconnecting each spark plug cable from its spark plug terminal, always grasp and pull on the rubber boot at the end of the cable assembly (as close as possible to the spark plug terminal). Do not pull on the cable portion itself. Pulling on the cable will damage the cable's carbon core.

1. Remove airbox assembly. See [4.30 AIRBOX](#).
2. See [Figure 7-8](#). Disconnect spark plug cables from ignition coil and spark plug terminals. Inspect cables for damage.

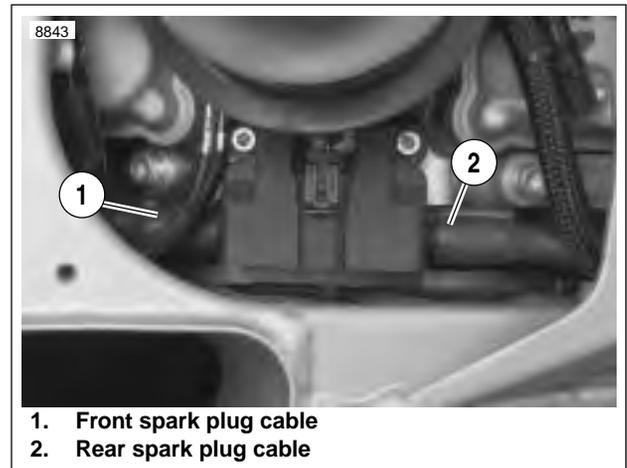


Figure 7-8. Spark Plug Cable Location

INSPECTION

1. Inspect spark plug cables. Replace cables that are worn or damaged.
 - a. Check for cracks or loose terminals.
 - b. Check for loose fit on ignition coil and spark plugs.
2. Check cable boots/caps for cracks or tears. Replace boots/caps that are worn or damaged.

NOTE

Both cables are the same length.

3. See [Figure 7-9](#). Check spark plug cable resistance with an ohmmeter. Replace cables not meeting resistance specifications.

Table 7-10. Spark Plug Cables

| SPECIFICATION | FRONT & REAR |
|-------------------|--------------------------|
| Length-in. (mm) | 5.70 ± 0.25 (146) |
| Resistance - ohms | 1,350-3,465 |

INSTALLATION

NOTES

- To ease installation, install spark plug cables to ignition coil first after applying **ELECTRICAL CONTACT GREASE** (Part No. 99861-90) to the inside of spark plug boot.
 - See [Figure 7-10](#). When assembling the spark plug boots onto the spark plugs, make sure the boot is slid all the way down over the spark plug insulator. The gap should not exceed 1/8 in. (3.2 mm).
 - For spark plug information see [1.14 SPARK PLUGS](#).
1. Connect spark plug cables to ignition coil and spark plugs. Fasten boots/caps securely. Tight connections provide the necessary moisture-proof environment for the ignition coil and spark plug terminals.
 2. Install airbox assembly. See [4.30 AIRBOX](#).

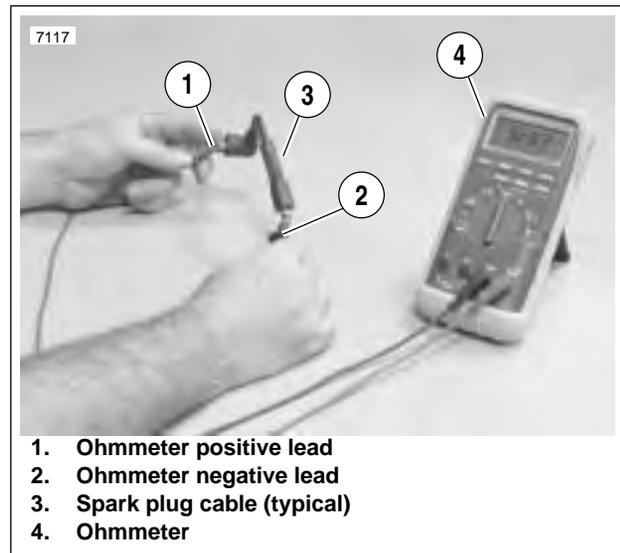


Figure 7-9. Testing Resistance

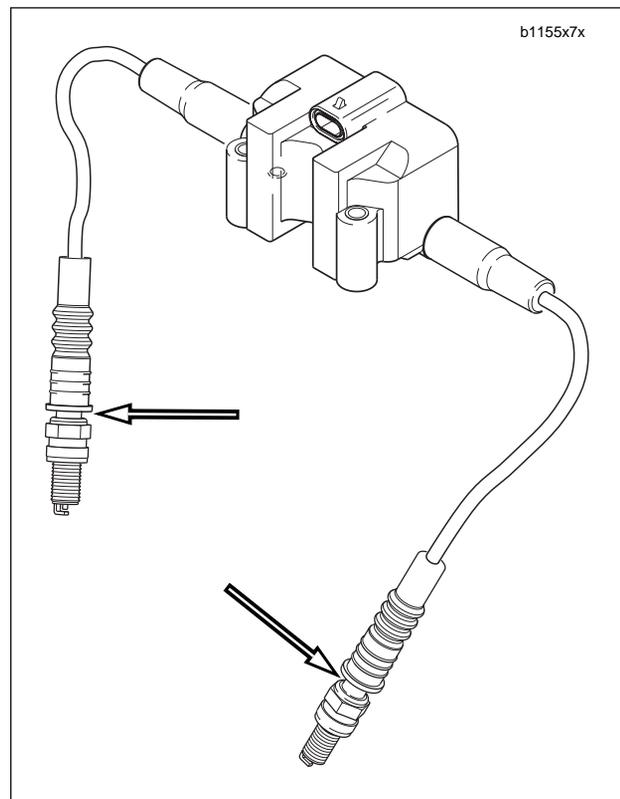


Figure 7-10. Boot Gap Should Not exceed 1/8 in. (3.2 mm)

GENERAL

The starter interlock system is designed to prevent unintended start-up.

Two circuits make up the starter interlock system.

Starter Circuit

The starter circuit prevents the motorcycle from being started unless a ground has been established at the starter relay. This ground may come from one of two sources.

- By placing the motorcycle in neutral and grounding through the neutral switch.
- By disengaging the clutch and grounding through the clutch lever switch.

Once the starter circuit is grounded and the starter button pushed, the starter relay can be energized. The energized relay then permits the starter motor to crank the engine.

Table 7-11. Starter Interlock Troubleshooting

| PROBLEM | CHECK FOR | CORRECTION |
|--|------------------------------|---------------------------|
| Electric starter will not crank. | Battery problems. | See 7.11 BATTERY. |
| | Inappropriate gear selected. | Place vehicle in neutral. |
| | Clutch lever not disengaged. | Pull in clutch lever. |
| | Starter relay problems. | |
| Follow starter troubleshooting in Section 5. | | |

DIAGNOSTICS

The reference numbers below correlate with the circled numbers in the 7.5 STARTER INTERLOCK flow charts.

1. Check diode with an ohmmeter as shown in Figure 7-12.
2. Check diode polarity as shown in Figure 7-11.

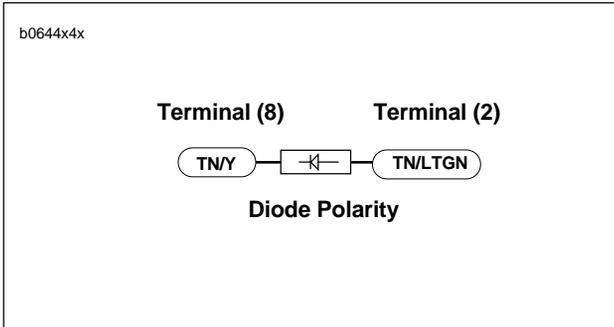


Figure 7-11. Diode Polarity

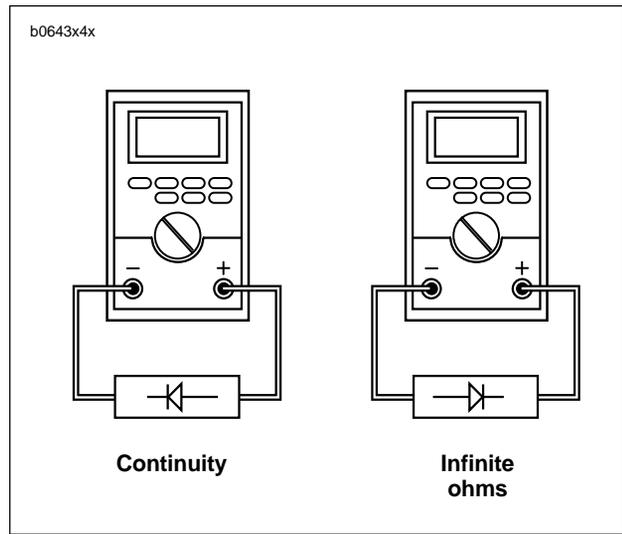


Figure 7-12. Ohmmeter Diode Test


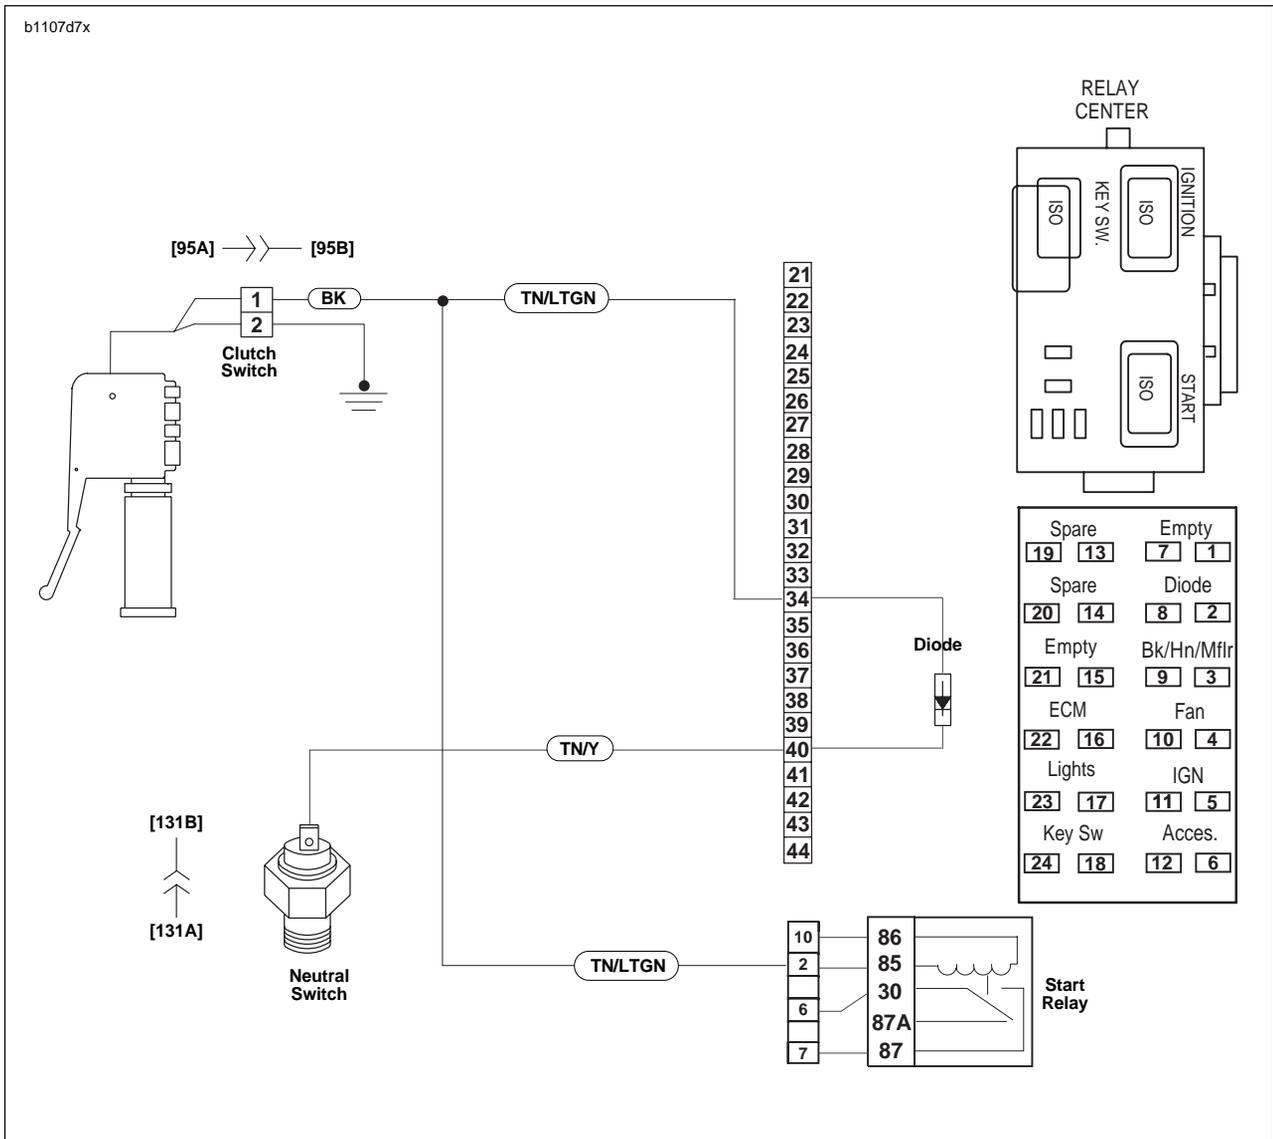


Figure 7-13. Diode Wiring


Starter Test (Part 1 of 2)

CONDITION: Key ON, transmission in neutral and clutch engaged

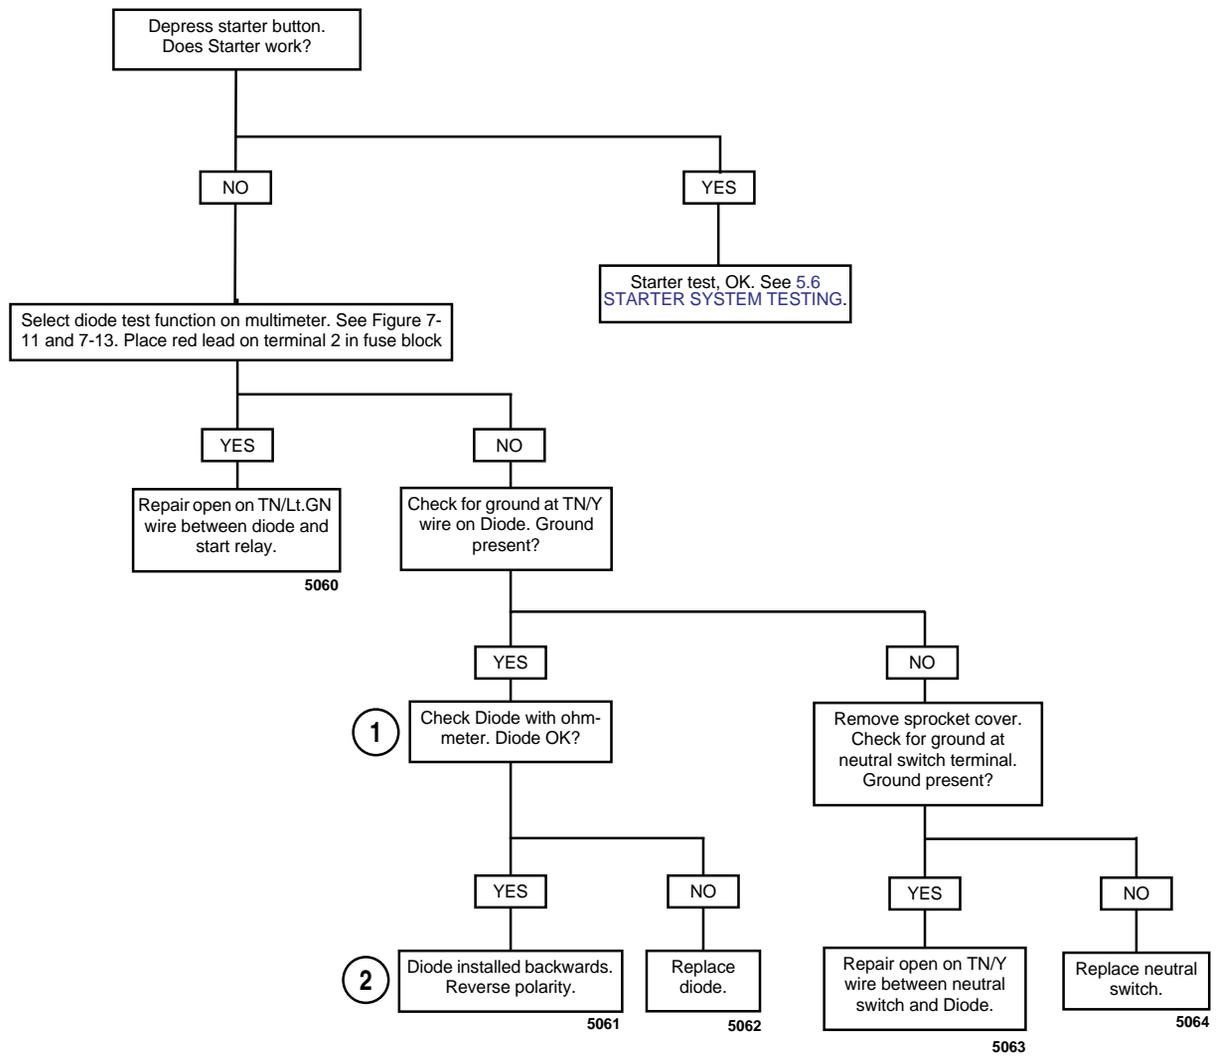

Starter Test (Part 2 of 2)

CONDITION: Key ON, transmission in gear and clutch disengaged

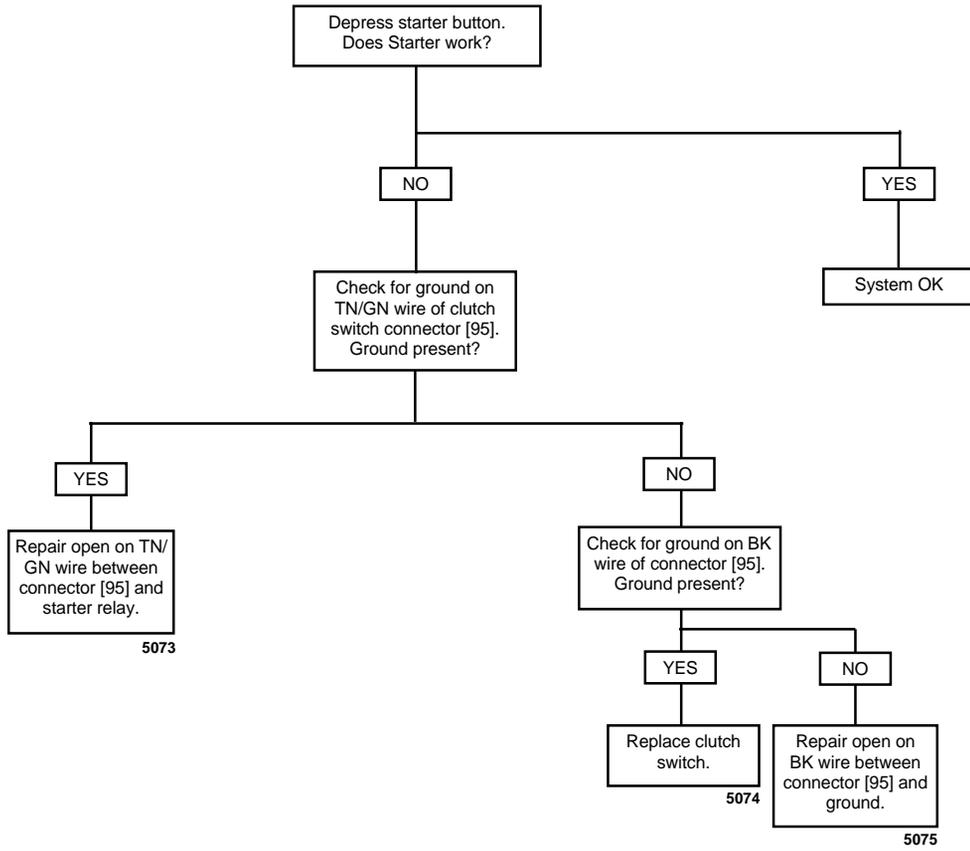

TESTING/REPLACEMENT

Clutch Switch

See [Figure 7-14](#). The clutch switch attaches to the clutch control lever bracket. The switch completes a path to ground for the ignition relay and the starter relay when the clutch is disengaged. Test the switch as follows:

1. Unplug the 2-place clutch switch connector [95].
2. Test the switch using an ohmmeter.
 - a. With clutch engaged (1) (switch open), the switch should show ∞ ohms (infinite ohms).
 - b. With clutch disengaged (2) (switch closed), the switch should show 0 ohms or little resistance.
3. Replace the assembly with a **new** switch if necessary. See [2.24 CLUTCH HAND LEVER](#).

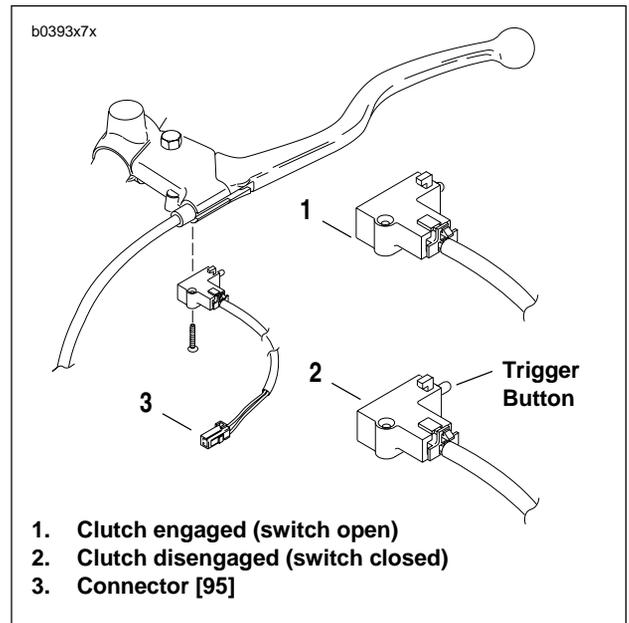


Figure 7-14. Clutch Switch

Ignition Relay

The ignition relay is located on the left side of the vehicle behind the fairing. Test the relay as follows:

1. See [Figure 7-15](#). Locate ignition relay (2) within relay block.
2. To test relay, proceed to Step 3. If installing a **new** starter relay, remove old relay. Install **new** relay into relay block.
3. See [Figure 7-16](#). Obtain a 12 volt battery and a continuity tester or ohmmeter.
 - a. Pull relay from relay block.
 - b. Connect positive battery lead to the 86 terminal.
 - c. Connect negative battery lead to the 85 terminal to energize relay.
 - d. Check for continuity between the 30 and 87 terminals. A good relay shows continuity (continuity tester lamp "on" or a zero ohm reading on the ohmmeter). A malfunctioning relay will not show continuity and must be replaced.
4. Replace the relay with a **new** relay if necessary.

Key Switch Relay

See [Figure 7-15](#). The key switch relay (1) is located on the left side of the vehicle behind the fairing. See [Ignition Relay](#) under [7.5 STARTER INTERLOCK](#) for testing procedure.

Main Fuse

A 30 Amp main fuse links the ignition key switch and the battery. The 30 Amp main fuse is located under the rider's seat. See [7.22 MAIN FUSE AND FUSES](#) for more information.

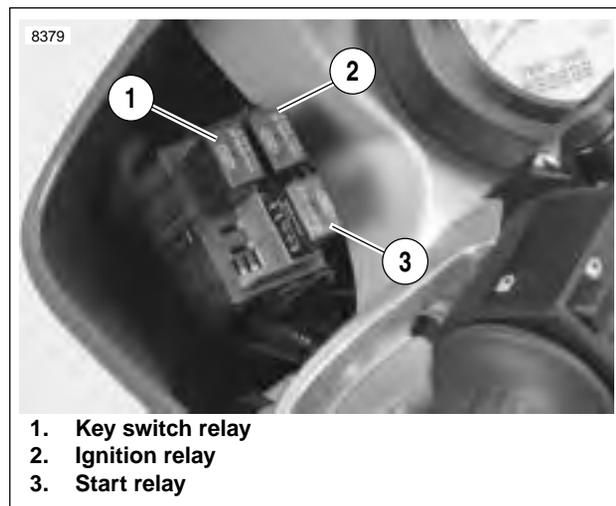


Figure 7-15. Relay Block

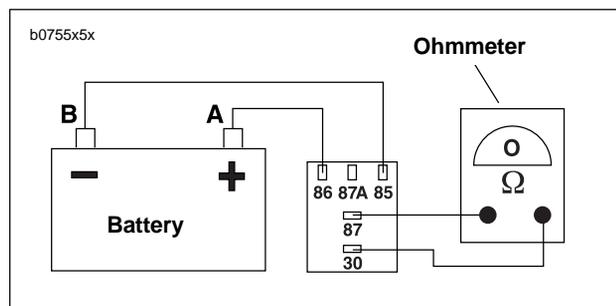


Figure 7-16. Starter Relay Test

Diodes

See [Figure 7-17](#). The diode is located on the right side of the vehicle behind the fairing.

1. See [Figure 7-18](#). Locate diode within fuse block.
2. Test diode using Starter Test flow charts under [DIAGNOSTICS](#).
3. Replace the diode by pulling it straight out. Ensure it is installed in the correct direction.

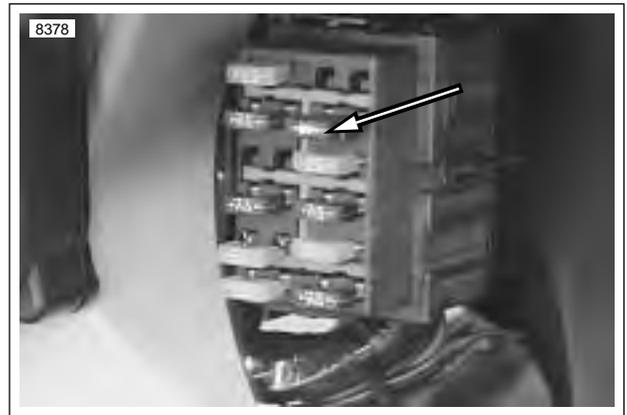


Figure 7-17. Fuse Block (contains diode)

b1165x4x

| | |
|---------------------|--------------------|
| Spare | Empty |
| 19 13 | 7 1 |
| Spare | Diode |
| 20 14 | 8 2 |
| Empty | Bk/Hn/Mflr |
| 21 15 | 9 3 |
| ECM | Fan |
| 22 16 | 10 4 |
| Lights | IGN |
| 23 17 | 11 5 |
| Key Sw | Acces. |
| 24 18 | 12 6 |

Figure 7-18. Fuse Block

GENERAL

NOTE

The interactive exhaust system is standard equipment on the XB12R only.

See Figure 7-19. An electronically controlled actuator opens or closes a butterfly valve (1) that controls exhaust flow in a multi-chamber muffler.

The ECM monitors engine speed and throttle position while alternating flow paths between the chambers to adjust back-pressure optimizing torque and horsepower for the riding condition.

For example:

1. At low RPM with a wide-open throttle, the valve (1) is opened to reduce back-pressure so the engine can gain RPM quickly. The exhaust enters (2) the muffler and flows (3) through the open valve (1) into chamber C (7) and then exits (8).
2. In the mid-range, the valve is closed to increase acceleration torque. The exhaust flows (4) through chamber A, around to chamber B and then through chamber C and exits.
3. At high RPM, the valve opens again to maximize horsepower. The exhaust enters (2) the muffler and flows (3) through the open valve (1) into chamber C (7) and then exits (8).


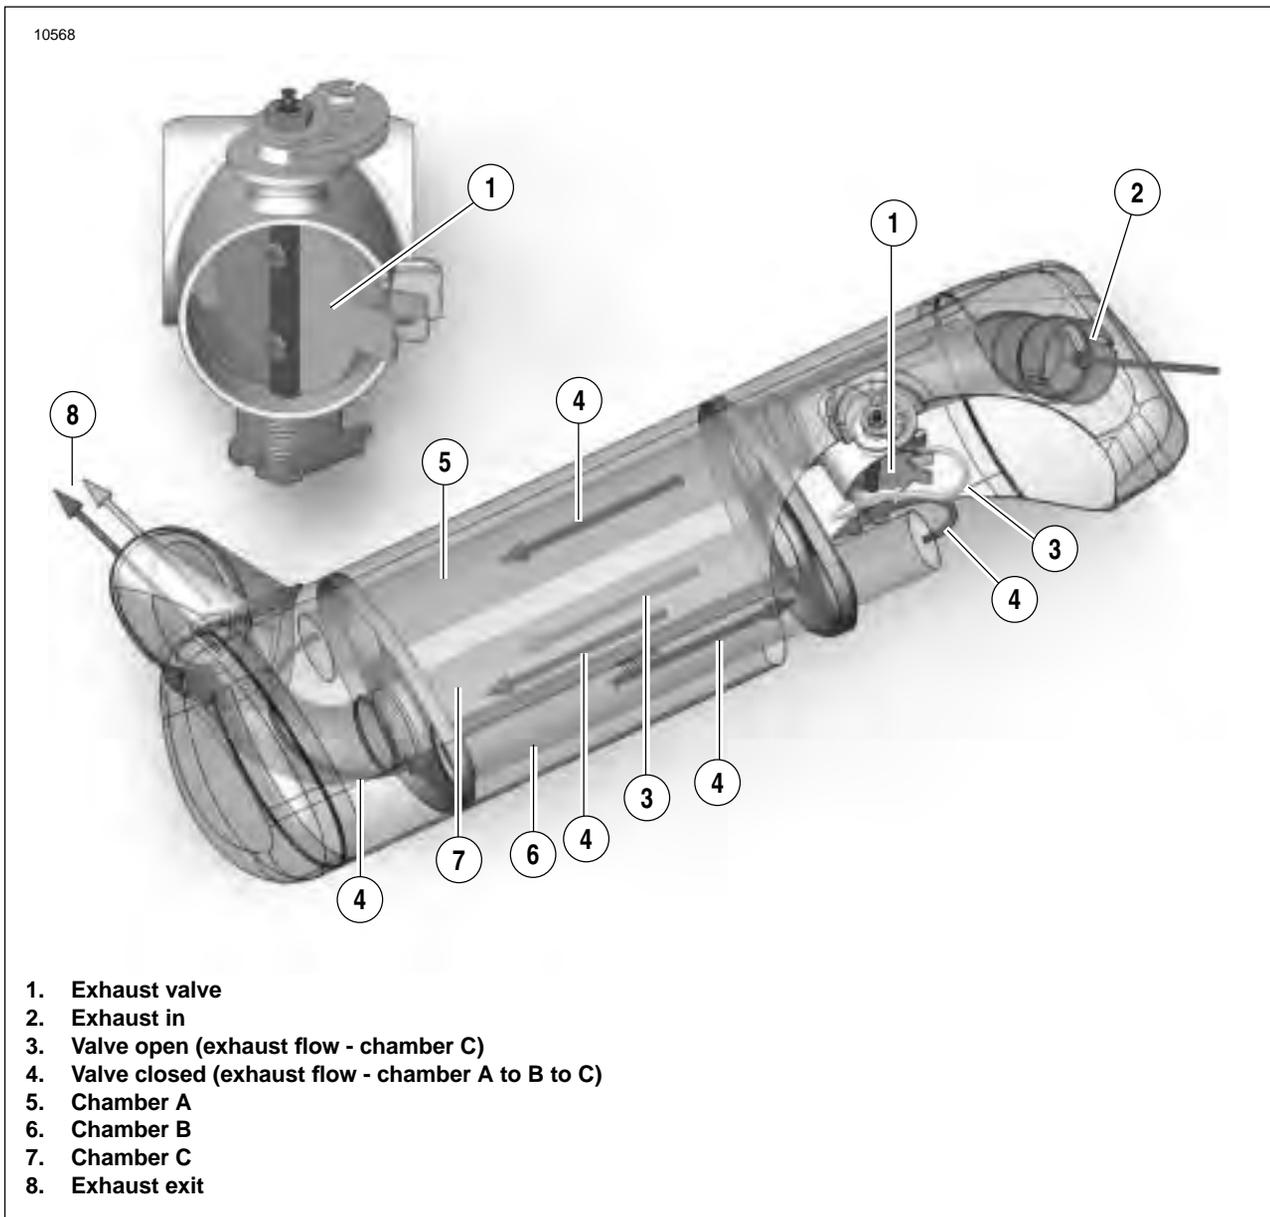


Figure 7-19. Interactive Exhaust System Muffler

8899

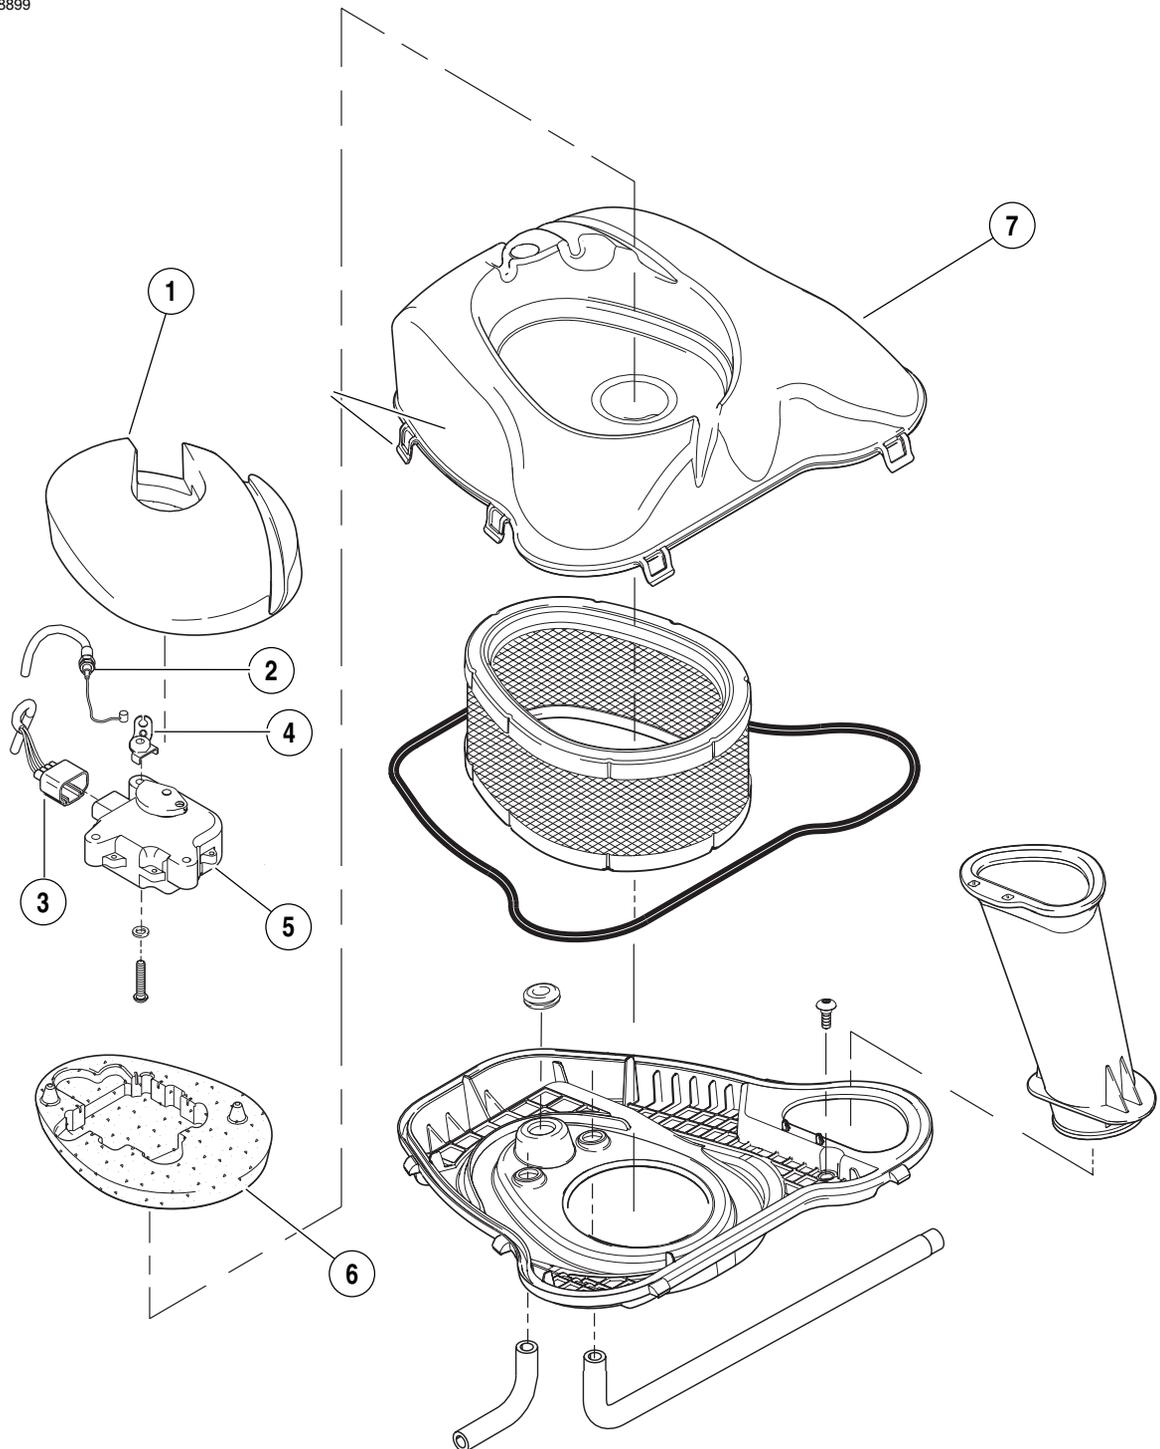

1. Upper EVA isolator
2. Interactive exhaust cable
3. Harness with connector [161B]
4. Interactive exhaust cable bracket
5. Actuator
6. Lower EVA Isolator
7. Air cleaner cover

Figure 7-20. Interactive Control System (XB12R)

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable.
3. Remove chin fairing. See [2.33 CHIN FAIRING](#).
4. Remove front sprocket cover. See [2.30 SPROCKET COVER](#).
5. Remove intake cover assembly. See [4.30 AIRBOX](#).

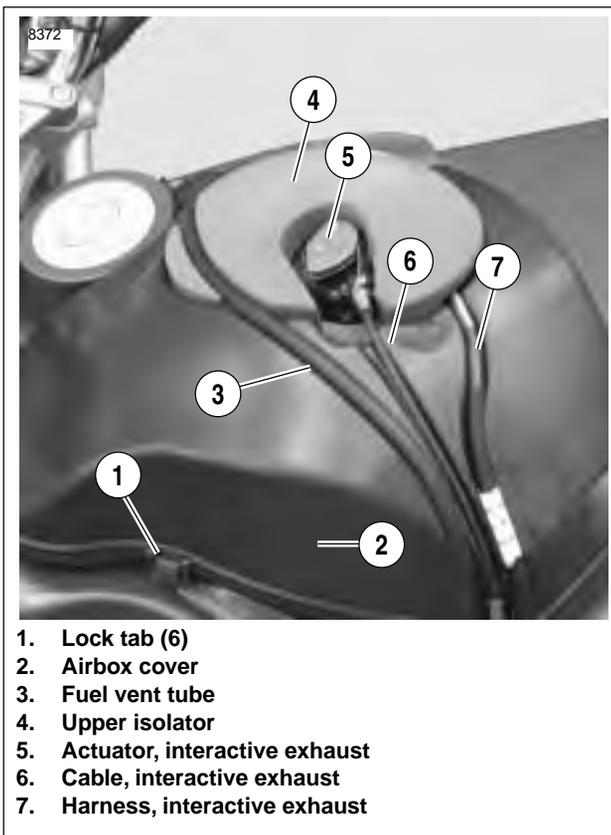


Figure 7-21. Airbox Cover (XB12R Only)

6. See [Figure 7-21](#). Remove fuel vent tube (3) from fuel cell vent and groove on top of airbox cover (2).
7. Move upper isolator (4) out of the way.

8. Disconnect harness connector [161B] from actuator (5).
9. Add free play to interactive exhaust cable (6), loosen jam nut and remove cable from bracket on actuator (5).
10. Remove interactive exhaust cable from cable wheel on actuator.
11. Remove actuator.
12. Remove tree fastener securing interactive exhaust cable to inside of muffler bracket on right side.

NOTE

It is necessary to remove interactive exhaust cable from muffler with muffler only partially removed.

13. Loosen jam nut and remove interactive exhaust cable from bracket on muffler.
14. Remove interactive exhaust cable from cable wheel on muffler.
15. Remove muffler. See [2.28 EXHAUST SYSTEM](#).

INSTALLATION

⚠ WARNING

Never reuse front muffler strap. Always replace front muffler strap with a new strap when removed from system.

NOTE

It is necessary to install interactive exhaust cable to muffler with muffler only partially installed.

1. Install muffler. See [2.28 EXHAUST SYSTEM](#).
2. Install interactive cable onto vehicle.
 - a. Slip end of hose over upper end of cable and attach with tape.
 - b. See [Figure 7-22](#). Gently pull cable assembly up through the wire harness strap and guide at the left rear corner of the frame/fuel tank assembly.



Figure 7-22. Interactive Exhaust Cable Behind Wire Harness Strap and Guide

3. Install actuator.
4. Attach interactive exhaust cable to cable wheel on actuator.
5. Connect interactive exhaust harness to actuator [161B].
6. Install upper isolator and route fuel vent line and install.
7. Attach interactive exhaust cable to bracket on actuator and adjust. See [1.17 INTERACTIVE EXHAUST CABLE \(XB12R\)](#).
8. Install intake cover assembly. See [4.30 AIRBOX](#).

⚠ WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion resulting in personal injury.

9. Install negative battery cable to battery terminal. Tighten fastener to 72-96 in-lbs (8.1-10.8 Nm).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

10. Install seat. See [2.38 SEAT](#).

NOTES

GENERAL

The charging system consists of the alternator and regulator. Charging system circuits are shown in [Figure 7-25](#).

CAUTION

Never install accessory wiring between battery post and battery cable. Installing wire between battery post and battery cable could cause damage to electrical system.

When installing electrical accessories, install longer battery post fasteners. Install wiring between battery cable and fastener.

Alternator

The alternator consists of two main components:

- The rotor which mounts to the engine sprocket shaft.
- The stator which bolts to the engine crankcase.

Voltage Regulator

See [Figure 7-23](#). The voltage regulator is a series regulator with shunt control. The voltage regulator combines the functions of rectifying (converting AC voltage to DC) and regulating (controlling voltage output).

TROUBLESHOOTING

When the charging system fails to charge or does not charge at a satisfactory rate, check the following:

Battery

Check for a weak or dead battery. See [7.11 BATTERY](#). Battery must be fully charged in order to perform any electrical tests.

Wiring

Check for corroded or loose connections in the charging circuit. See [Figure 7-25](#).

Voltage Regulator Inspection

See [Figure 7-24](#). The plug connector to stator must be clean and tight.

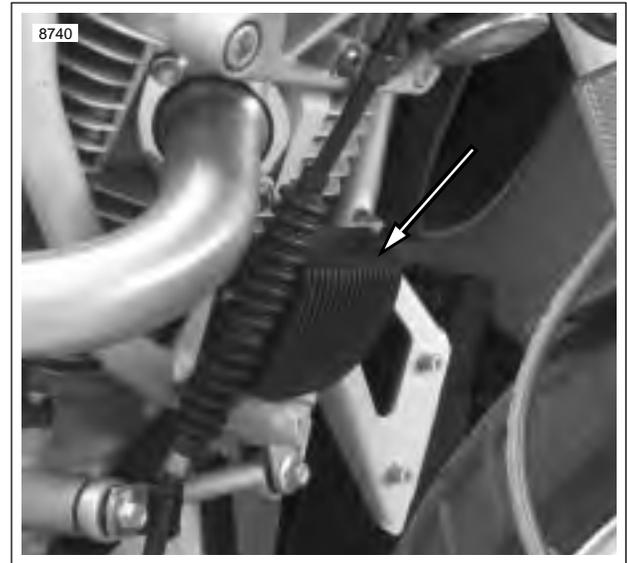


Figure 7-23. Voltage Regulator


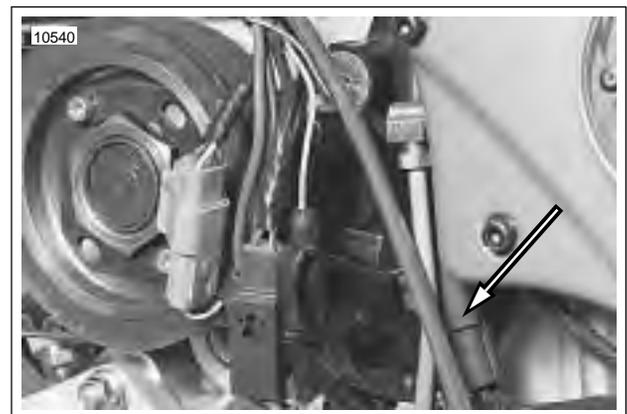


Figure 7-24. Stator Connector [46]

Test 7.7 (Part 1 of 2)

SYMPTOM: BATTERY BECOMES DISCHARGED

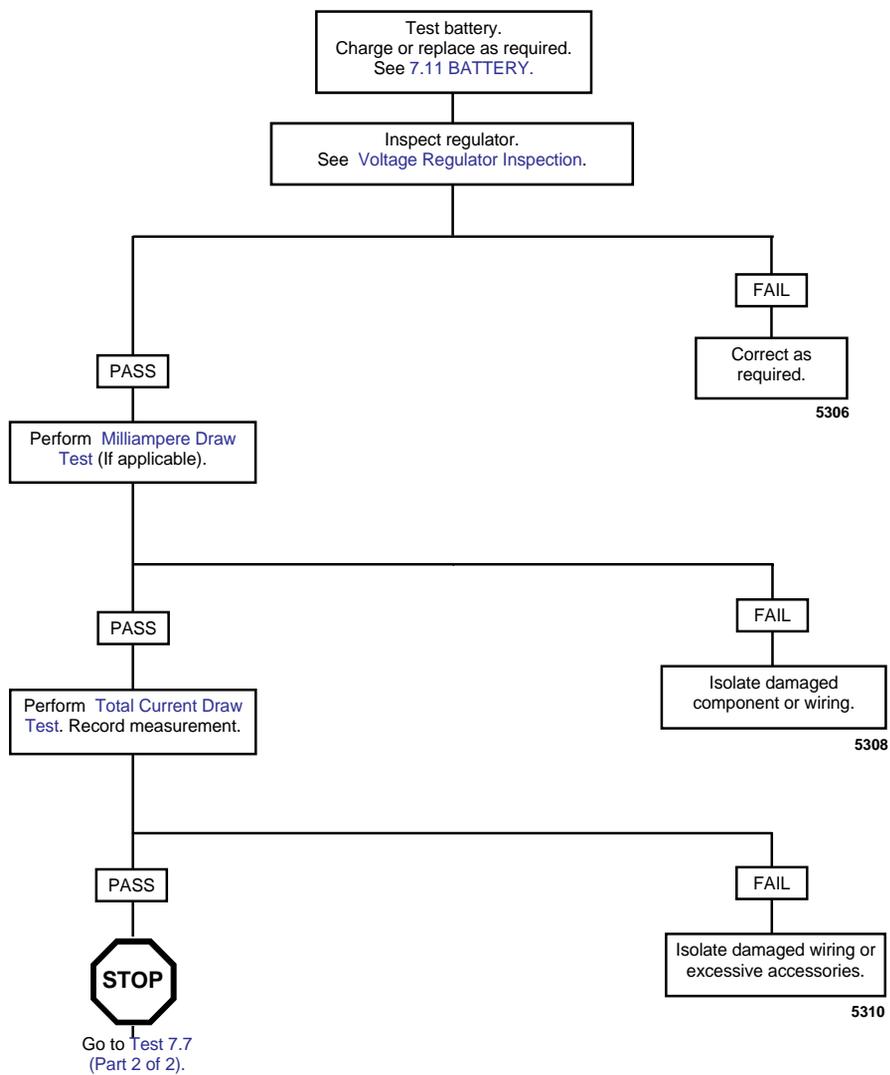


NOTE

Whenever a charging system component fails a test and is replaced, re-test the system to be sure the problem has been corrected.

Test 7.7 (Part 2 of 2)

SYMPTOM: BATTERY BECOMES DISCHARGED

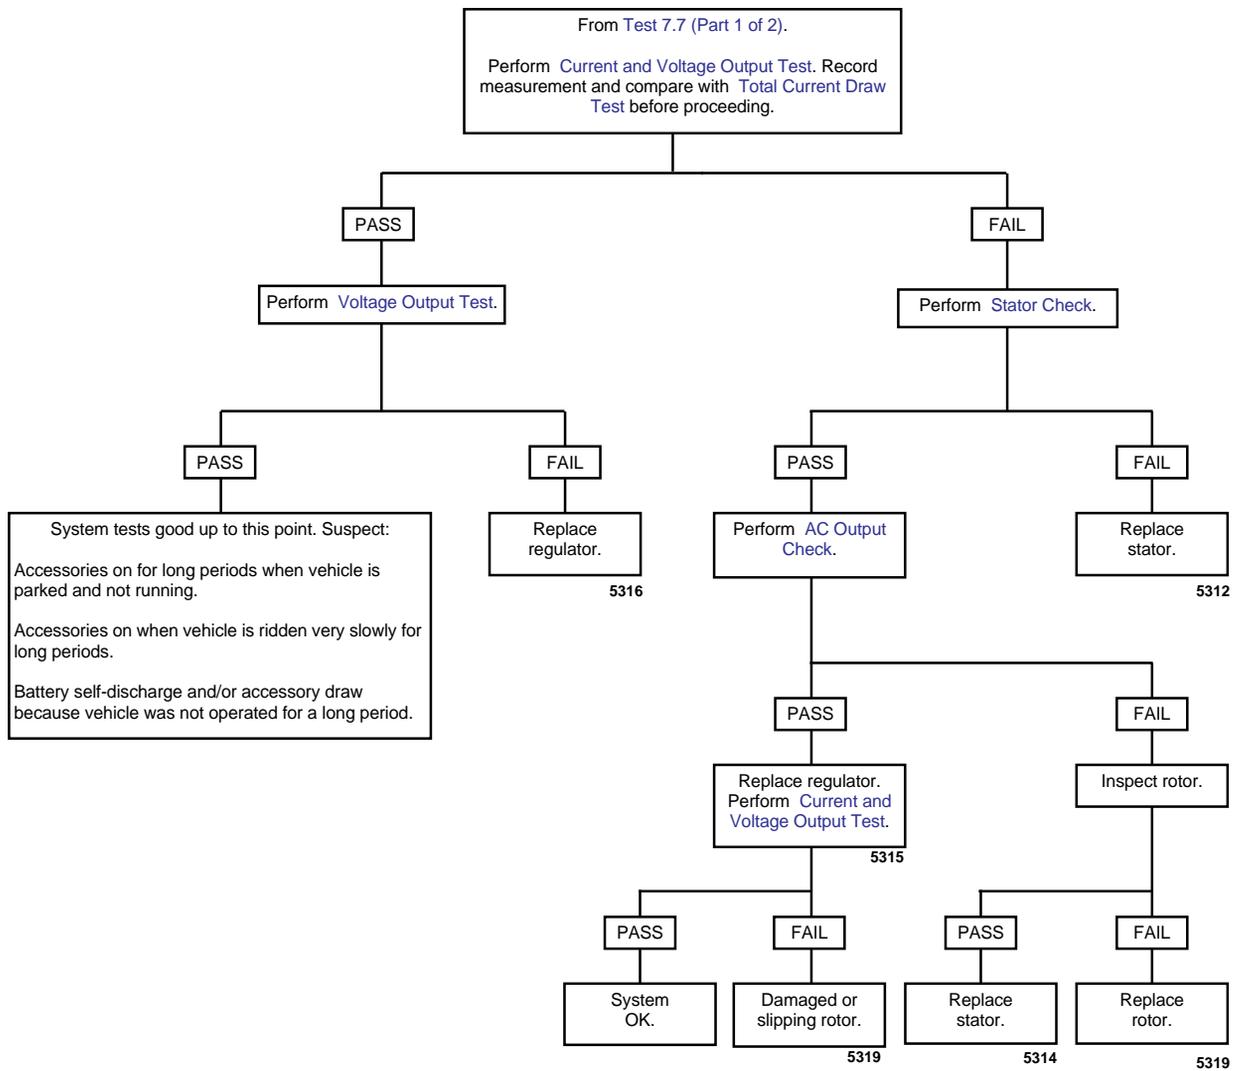

NOTE

Whenever a charging system component fails a test and is replaced, re-test the system to be sure the problem has been corrected.

bs0021ax

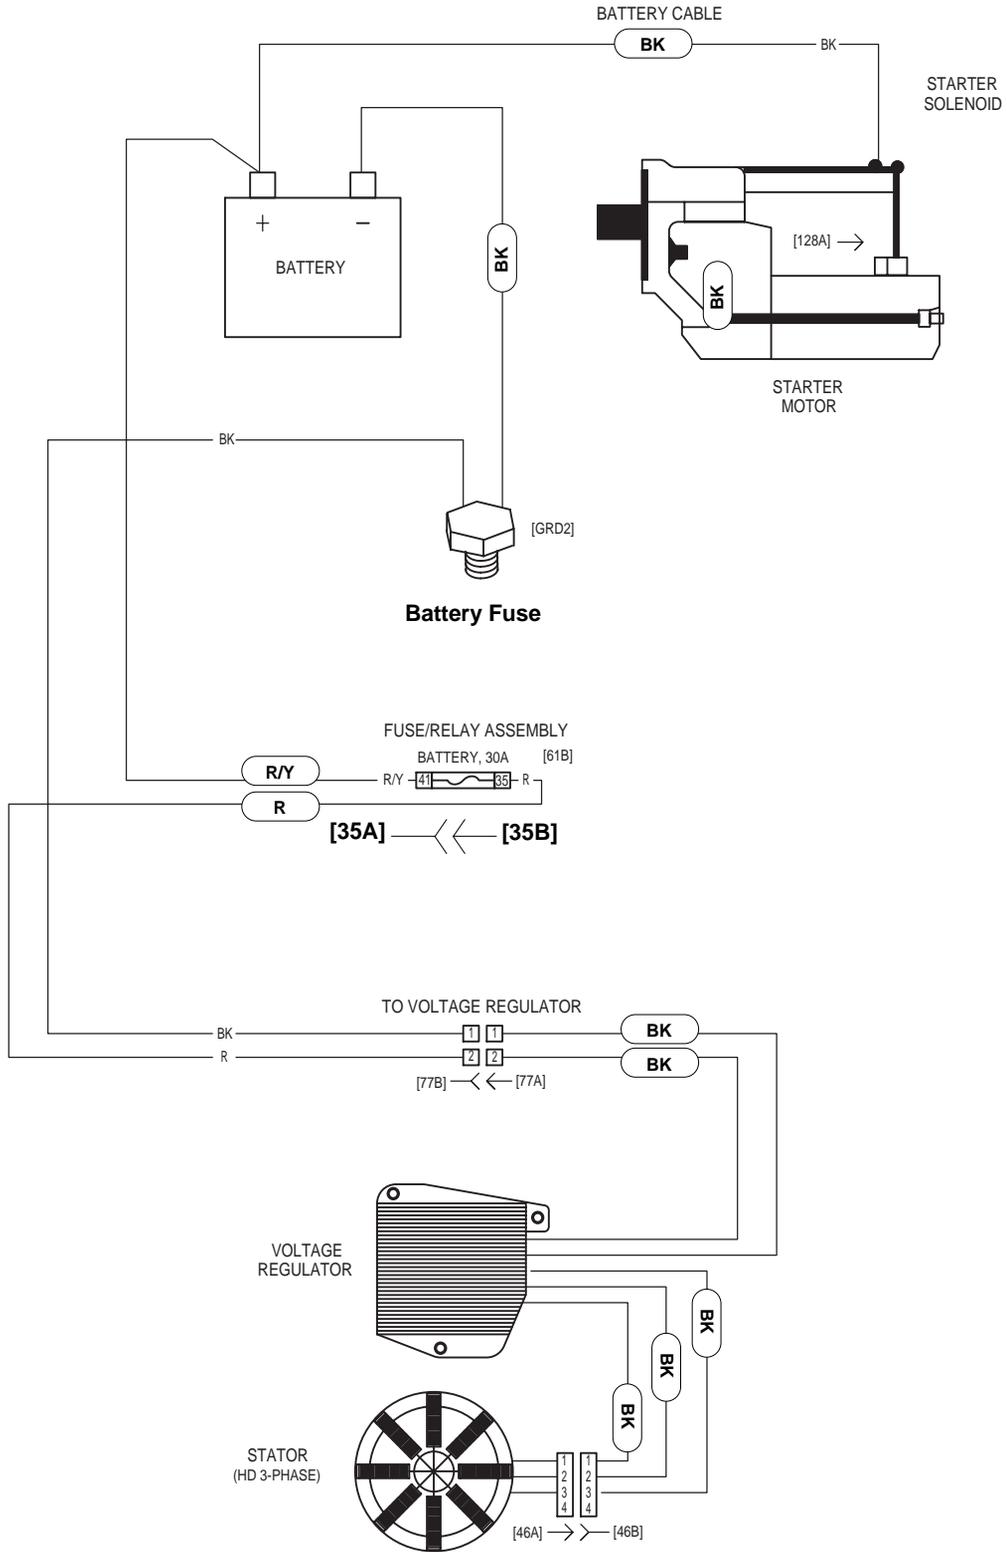


Figure 7-25. Charging System Circuit

TESTING

Milliampere Draw Test

NOTE

Be sure accessories are not wired so they stay on at all times. This condition could drain battery completely if vehicle is parked for a long time. Check for this by connecting ammeter between negative battery terminal and battery.

1. See [Figure 7-26](#). Connect ammeter between negative battery terminal and battery. With this arrangement, you will also pick up any regulator drain.
2. With ignition key switch turned to OFF and all lights and accessories off, observe amperage reading.
 - a. Maximum reading should be 1.0 milliamperes.
 - b. A higher reading indicates excessive current draw. Any accessories must be considered and checked for excessive drain.

NOTE

A battery with a surface discharge condition could suffer a static drain. Correct by cleaning battery case.

Total Current Draw Test

If battery runs down during use, the current draw of the motorcycle components and accessories may exceed output of the charging system.

WARNING

Always turn the battery load tester OFF before connecting tester cables to the battery terminals. Connecting tester cables with the load tester ON could cause a spark resulting in a battery explosion which could result in death or serious injury.

1. See [Figure 7-27](#). To check for this condition, place load tester induction pickup or current probe pickup over battery negative cable.
2. Disconnect stator wiring from voltage regulator wiring at the connector [46] under front sprocket cover See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#). Start the motorcycle and run the engine at 3000 RPM.
3. With ignition and all continuously running lights and accessories turned on (headlight on high beam), read the total current draw.

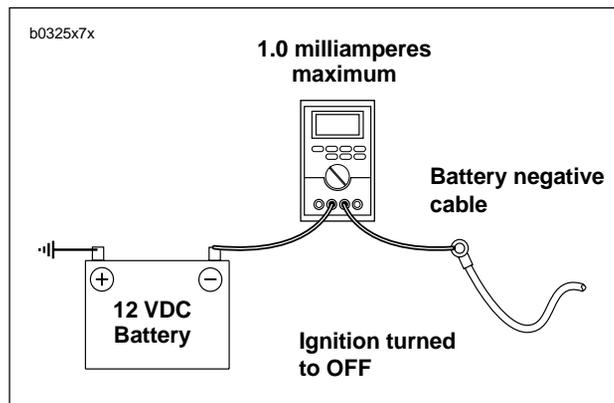


Figure 7-26. Milliampere Draw Test

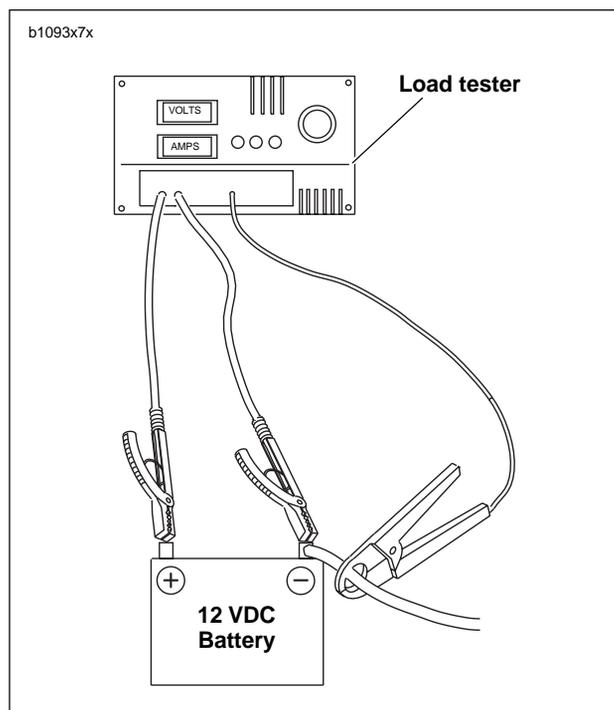


Figure 7-27. Check Current Draw (Ignition Switch On)

4. Compare this reading to the reading obtained after performing the [CURRENT AND VOLTAGE OUTPUT TEST](#).
 - a. The current output should exceed current draw by 3.5 amps minimum.
 - b. If output does not meet specifications, there may be too many accessories for the charging system to handle.
5. Reconnect regulator after testing.

Current and Voltage Output Test

1. Connect load tester.
 - a. Connect negative and positive leads to battery terminals.
 - b. See [Figure 7-28](#). Place load tester induction pickup over positive regulator cable.

CAUTION

Do not leave any load switch turned on for more than 20 seconds or overheating and tester damage are possible.

2. Run the engine at 3000 RPM. Increase the load as required to obtain a constant 13.0 VDC.
3. The current output should be 34-38 amps. Make note of measurement for use in [TOTAL CURRENT DRAW TEST](#).

NOTE

Rider's habits may require output test at lower RPM.

Voltage Output Test

1. See [Figure 7-28](#). After removing the load, read the load tester voltage meter.
 - a. If voltage to the battery is not more than 15 VDC, voltage output is within specifications. Investigate other possible problems. See [TROUBLESHOOTING](#) in this section.
 - b. If voltage is higher, regulator is not functioning properly.

Stator Check

1. Turn ignition key switch to OFF.
2. See [Figure 7-29](#). Connect an ohmmeter.
 - a. Locate voltage regulator connector [46] under sprocket cover. See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#). Disconnect from alternator stator wiring.
 - b. Insert one ohmmeter lead into a stator socket.
 - c. Attach the other lead to a suitable ground.
3. Test for continuity with ohmmeter set on the RX1 scale.
 - a. A good stator will show no continuity (∞ ohms) across **all** stator sockets and ground.
 - b. Any other reading indicates a grounded stator which must be replaced.
4. See [Figure 7-30](#). Remove ground lead. Check resistance across stator sockets 1-2, 2-3 and 3-1.
5. Test for resistance with ohmmeter set on the RX1 scale.
 - a. Resistance across the stator sockets should be 0.1-0.3 ohms.
 - b. If the resistance is lower, the stator is damaged and must be replaced.

NOTE

Verify that meter reads 0 ohms when probes are shorted together. If not, subtract lowest value to resistance value of stator.

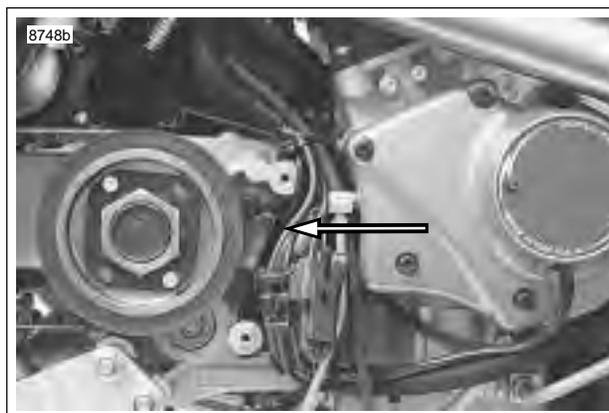


Figure 7-28. Positive Regulator Cable (red wire)

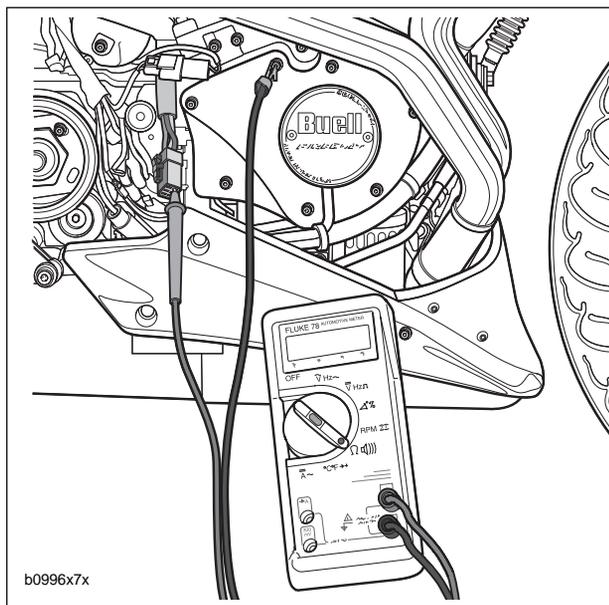


Figure 7-29. Test for Grounded Stator

AC Output Check

1. See [Figure 7-31](#). Test AC output.
 - a. Locate voltage regulator connector [46] under sprocket cover. See [7.25 SPROCKET COVER WIRING](#). Disconnect from alternator stator wiring.
 - b. Connect an AC voltmeter across stator sockets 1-2.
 - c. Run the engine at 2000 RPM. The AC output should be 32-40 volts AC. (approximately 16-20 volts per 1000 RPM).
 - d. Repeat test across stator sockets 2-3 and 1-3.
2. Compare test results to specifications.
 - a. If the output is below specifications, charging problem could be a faulty rotor or stator.
 - b. If output is good, charging problem might be faulty regulator/rectifier. Replace as required.
3. Check the output again as described under [CURRENT AND VOLTAGE OUTPUT TEST](#) on [page 7-30](#).

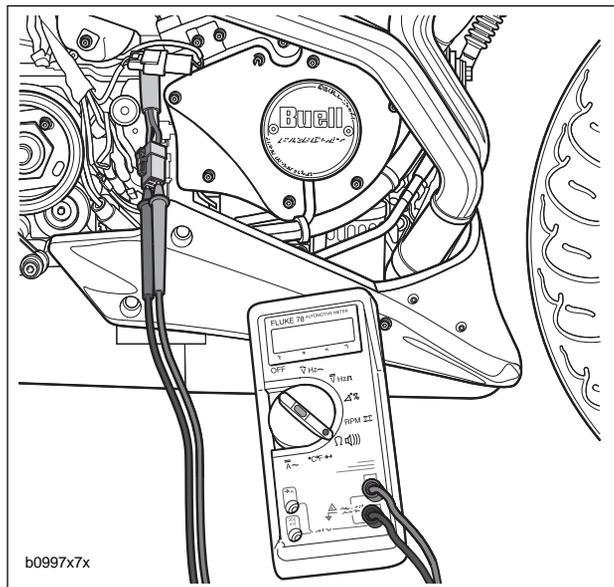


Figure 7-30. Check for Stator Resistance

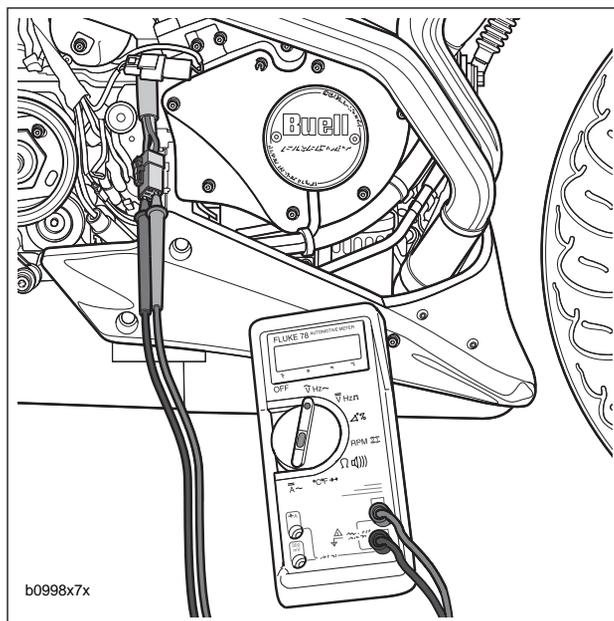


Figure 7-31. Check Stator AC Voltage Output

REMOVAL/DISASSEMBLY

WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove primary cover. See 6.2 PRIMARY COVER.
3. Remove clutch assembly, primary chain and engine sprocket/rotor assembly as a unit. See 6.4 CLUTCH.
4. Remove/disassemble rotor and/or stator, as required. Refer to the following procedures.

Rotor

1. See Figure 7-32. Remove the eight fasteners which secure alternator rotor to engine sprocket.
2. See Figure 7-33. Position blocking under rotor. Press sprocket free of rotor.

NOTE

Resistance to sprocket/rotor disassembly is due in part to the magnetic force of the permanent rotor magnets.

Stator

1. See Figure 7-34. Disconnect stator wiring (4) from voltage regulator wiring at connector (5) [46] under sprocket cover. See 7.24 INTERACTIVE EXHAUST HARNESS (XB12R).
2. Remove cable straps holding stator wire to wire harness.

CAUTION

Stator TORX screws contain a thread locking compound. Do not reuse existing screws. Always use new screws with the proper thread locking compound. Loss of torque on TORX fasteners could result in alternator damage.

3. Remove and discard the four TORX screws (1) which secure stator (2) to left crankcase half.
4. Remove stator wiring grommet (3) from left crankcase half.
5. Withdraw stator wiring (4) from grommet hole in left crankcase half. Remove stator.



Figure 7-32. Rotor Assembly



Figure 7-33. Removing Rotor From Sprocket

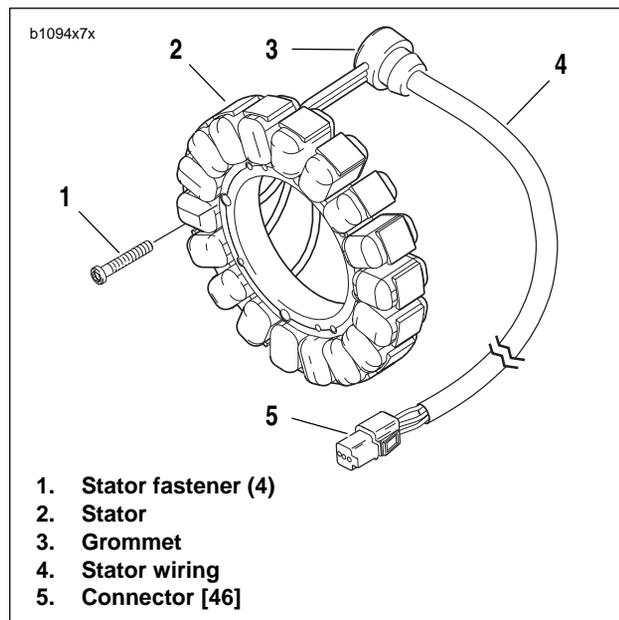


Figure 7-34. Stator Assembly

CLEANING AND INSPECTION

CAUTION

Do not strike or drop alternator rotor or damage to magnet adhesive may occur. Magnet adhesive damage can result in rotor failure.

1. Clean rotor with a petroleum-base solvent. Remove all foreign material from rotor magnets. Replace rotor if rotor magnets are cracked or loose.
2. Clean stator by wiping with a clean cloth.
3. Examine stator leads for cracked or damaged insulation.

NOTE

The rotor and stator can be replaced individually if either is damaged.

ASSEMBLY/INSTALLATION


Depending on whether the rotor, the stator, or both the rotor and stator were removed/disassembled, perform the applicable procedures which follow:

1. See [Figure 7-34](#). Feed stator wiring (4) with attached grommet (3) into open grommet hole in left crankcase half.
2. Apply a light coating of clean engine oil or chaincase lubricant to grommet. Install grommet into hole in left crankcase half.

CAUTION

Stator TORX screws contain a thread locking compound. Do not reuse existing screws. Always use new screws with the proper thread locking compound. Loss of torque on TORX fasteners could result in alternator damage.

3. Position stator (2) on left crankcase half. Secure stator using four **new** TORX screws (1). Tighten TORX screws to 30-40 **in-lbs** (3-4 Nm).
4. Route stator wiring (4) behind rear cylinder and in front of transmission breather hose. See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#) for remaining wire routing information.

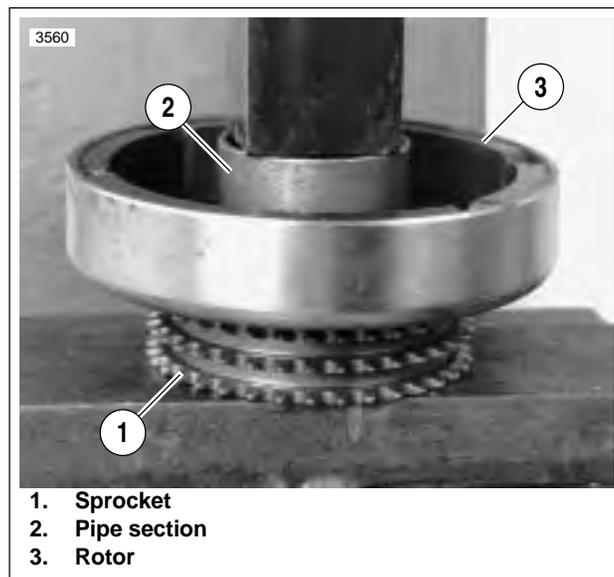

1. Sprocket
2. Pipe section
3. Rotor

Figure 7-35. Pressing Rotor onto Sprocket

5. See [Figure 7-35](#). Attach rotor to sprocket.
 - a. Position rotor (3) on sprocket (1). Align holes in sprocket with holes in rotor.
 - b. Insert the **new** eight mounting fasteners through rotor and start fasteners into tapped holes in sprocket.
 - c. Position a section of pipe (2) with an inside diameter larger than the sprocket mounting hub over center of rotor. Press rotor onto sprocket. Tighten fasteners to 90-110 **in-lbs** (10-12 Nm).
6. Install clutch assembly, primary chain and engine sprocket/rotor assembly as a unit. See [6.4 CLUTCH](#).
7. Install primary cover. See [6.2 PRIMARY COVER](#).
8. Connect negative battery cable.
9. Test charging system. See [7.7 CHARGING SYSTEM](#).

GENERAL

The voltage regulator is mounted to the front of the crankcase. The voltage regulator is not repairable. Replace the unit if it fails.

REMOVAL

1. Remove seat. See 2.38 SEAT.

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable from battery.

CAUTION

When disconnecting the alternator stator wiring, pull apart the connector by firmly grasping both connector halves. Do not pull on leads or damage to the wires and/or terminals may result.

3. See Figure 7-37. Disconnect stator connector [46] (1) and voltage regulator connector [77] (2) located under sprocket cover. See 7.24 INTERACTIVE EXHAUST HARNESS (XB12R).
4. Remove fasteners (5) and voltage regulator (4) from bracket (3).

INSTALLATION

1. See Figure 7-37. Attach new voltage regulator (4) to bracket (3). Tighten new fasteners (5) to 48-60 in-lbs (5.4-6.8 Nm).
2. Connect stator connector [46] (1) and voltage regulator connector [77] (2) located under sprocket cover. See 7.24 INTERACTIVE EXHAUST HARNESS (XB12R).
3. Connect negative battery cable to battery terminal.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

4. Install seat. See 2.38 SEAT.
5. Test charging system. See 7.7 CHARGING SYSTEM.


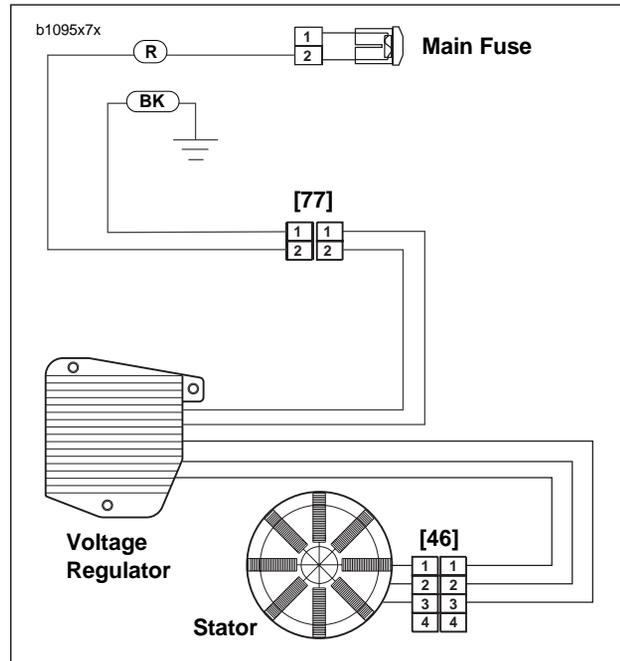



Figure 7-36. Voltage Regulator Connector [77]

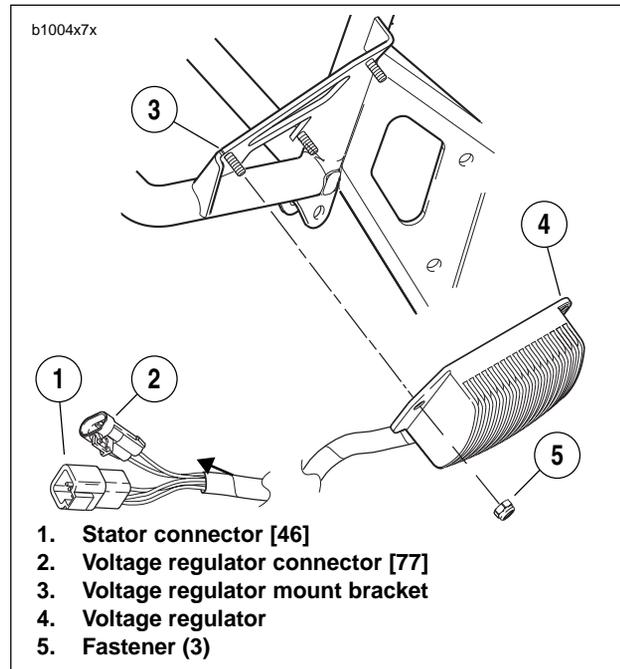

1. Stator connector [46]
2. Voltage regulator connector [77]
3. Voltage regulator mount bracket
4. Voltage regulator
5. Fastener (3)

Figure 7-37. Voltage Regulator

3. Connect cables to frame and starter.
 - a. See [Figure 7-40](#). First, connect positive cable to starter using fastener with washer. Tighten fastener to 60-85 **in-lbs** (7-10 Nm).
 - b. See [Figure 7-39](#). Attach negative cable to frame. Tighten to 48-72 **in-lbs** (5.4-8.1 Nm).
4. Apply light coat of petroleum jelly or corrosion-retardant material to both battery terminals.

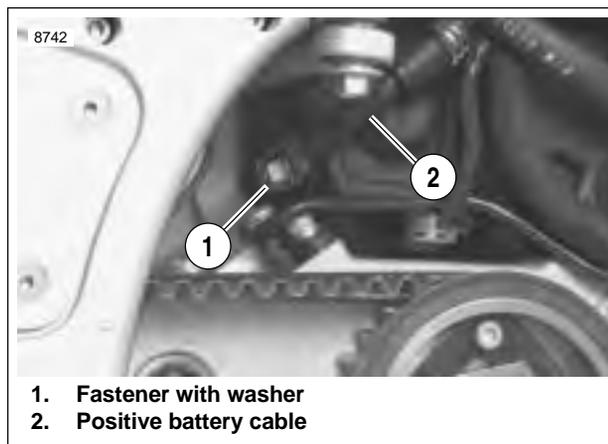

**Figure 7-40. Positive Battery Cable
(Protective Boot Not Shown)**

GENERAL

All Buell batteries are permanently sealed, maintenance-free, valve-regulated, lead/calcium and sulfuric acid batteries. The batteries are shipped pre-charged and ready to be put into service. Do not attempt to open these batteries for any reason.

WARNING

All batteries contain electrolyte. Electrolyte is a sulfuric acid solution that is highly corrosive and can cause severe chemical burns. Avoid contact with skin, eyes, and clothing. Avoid spillage. Always wear protective face shield, rubberized gloves and protective clothing when working with batteries. A warning label is attached to the top of the battery (00063a).

WARNING

See Figure 7-41. Never remove warning label from battery. Failure to read and understand all precautions contained in warning label before performing any service on batteries could result in death or serious injury. (00064a)

Table 7-12. Battery Electrolyte Antidotes

| CONTACT | SOLUTION |
|---------|--|
| Eyes | Flush with water, get immediate medical attention. |

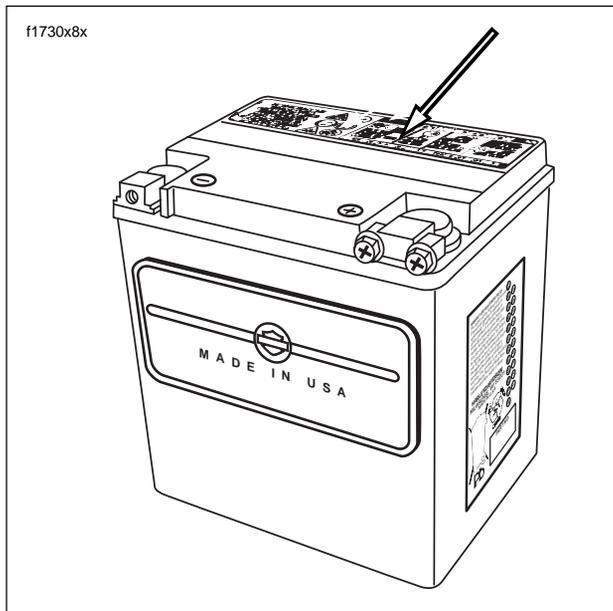


Figure 7-41. Battery Warning Label Location

Table 7-12. Battery Electrolyte Antidotes

| CONTACT | SOLUTION |
|----------|---|
| External | Flush with water. |
| Internal | Drink large quantities of milk or water, followed by milk of magnesia, vegetable oil or beaten eggs. Call doctor immediately. |

f2180x3x

1. Contents are corrosive.
2. Wear safety glasses.
3. Contents are explosive.
4. Keep flames away.
5. Read instructions.
6. Keep away from children.

Figure 7-42. Battery Warning Label

BATTERY TESTING

Voltmeter Test

See [Table 7-13](#). The voltmeter test provides a general indicator of battery condition. Check the voltage of the battery to verify that it is in a 100% fully charged condition. If the open circuit (disconnected) voltage reading is below 12.6V, charge the battery and then recheck the voltage after the battery has set for one to two hours. If the voltage reading is 12.8V or above, perform the load test.

Table 7-13. Voltmeter Test

| BATTERY CHARGE CONDITIONS | |
|---------------------------|------|
| 12.8 | 100% |
| 12.6 | 75% |
| 12.3 | 50% |
| 12.0 | 25% |
| 11.8 | 0% |

Load Test

The load test measures battery performance under full current load and is the best indicator of battery condition. To load test the battery, proceed as follows:

CAUTION

Load testing a discharged battery can result in permanent battery damage.

1. Always fully charge the battery before testing or test readings will be incorrect. See [BATTERY INSTALLATION AND CONNECTION](#). Load testing a discharged battery can also result in permanent battery damage.
2. After charging, allow battery to stand for at least one hour before testing.

WARNING

Always turn the battery load tester OFF before connecting the tester cables to the battery terminals. Connecting tester cables with the load tester ON could cause a spark resulting in a battery explosion which could result in death or serious injury.

3. Connect tester leads to battery posts and place induction pickup over negative (black) cable. See [Figure 7-44](#).

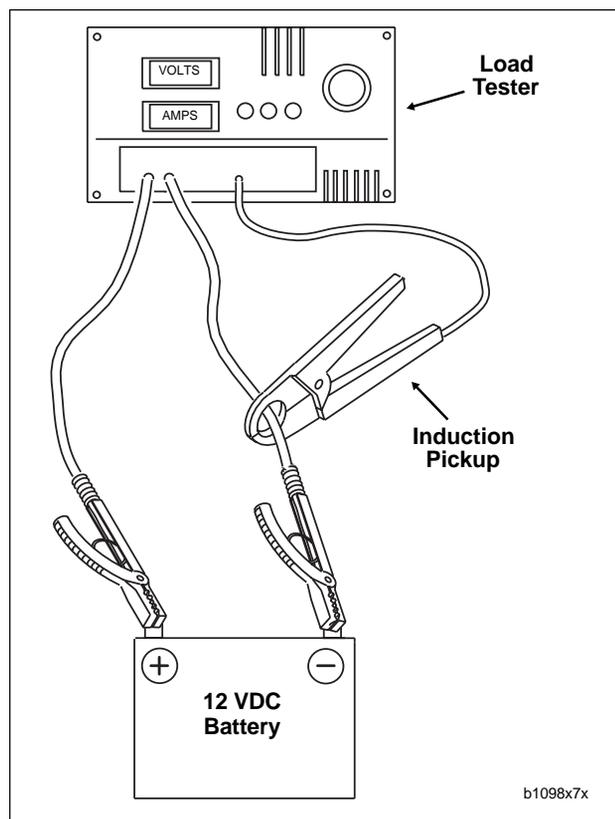


Figure 7-43. Load Test

CAUTION

To avoid load tester and/or battery damage, do not leave the load tester switch turned ON for more than 20 seconds.

4. See [Table 7-14](#). Load battery at 50% of CCA rating using the load tester. Voltage reading after 15 seconds should be 9.6V or more at 70° F. (21° C).

Table 7-14. Battery Load Test

| COLD CRANKING AMPERAGE (CCA) | 100% | 50% |
|------------------------------|------|-----|
| XB9R/XB12R | 200 | 100 |

WARNING

Always turn the battery load tester OFF before disconnecting the tester cables from the battery terminals. Disconnecting tester cables with the load tester ON could cause a spark resulting in a battery explosion which could result in death or serious injury.

5. Install the battery on the motorcycle. See [BATTERY INSTALLATION AND CONNECTION](#).

DISCONNECTION AND REMOVAL

1. Remove seat. See [2.38 SEAT](#).

 **WARNING**

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

 **WARNING**

Always disconnect the negative battery cable first. If the positive battery cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

2. Unthread fastener and remove battery negative cable (black) from battery negative (-) terminal.
3. Unthread fastener and remove battery positive cable (red) from battery positive (+) terminal.
4. Unhook battery strap from frame.
5. Remove battery.

CLEANING AND INSPECTION

1. Battery top must be clean and dry. Dirt and electrolyte on top of the battery can cause battery to self-discharge. Clean battery top with a solution of baking soda (sodium bicarbonate) and water (5 teaspoons baking soda per quart or liter of water). When the solution stops bubbling, rinse off the battery with clean water.
2. Clean cable connectors and battery terminals using a wire brush or sandpaper. Remove any oxidation.
3. Inspect the battery screws and cables for breakage, loose connections and corrosion. Clean clamps.
4. Check the battery posts for melting or damage caused by overtightening.
5. Inspect the battery for discoloration, raised top or a warped or distorted case, which might indicate that the battery has been frozen, overheated or overcharged.
6. Inspect the battery case for cracks or leaks.

BATTERY CHARGING

Safety Precautions

Never charge a battery without first reviewing the instructions for the charger being used. In addition to the manufacturer's instructions, follow these general safety precautions:

- Always wear proper eye, face and hand protection.
- Always charge batteries in a well-ventilated area.
- Turn the charger "OFF" before connecting the leads to the battery to avoid dangerous sparks.
- Never try to charge a visibly damaged or frozen battery.
- Connect the charger leads to the battery; red positive (+) lead to the positive (+) terminal and black negative (-) lead to the negative (-) terminal. If the battery is still in the vehicle, connect the negative lead to the chassis ground. Be sure that the ignition and all electrical accessories are turned off.
- Make sure that the charger leads to the battery are not broken, frayed or loose.
- If the battery becomes hot, or if violent gassing or spewing of electrolyte occurs, reduce the charging rate or turn off the charger temporarily.
- Always turn the charger "OFF" before removing charger leads from the battery to avoid dangerous sparks.

Charging Battery

Charge the battery if any of the following conditions exist:

- Vehicle lights appear dim.
- Electric starter sounds weak.
- Battery has not been used for an extended period of time.

WARNING

Charge the battery in a well ventilated area. Explosive hydrogen gas escapes from the battery during charging. Keep open flames, electrical sparks and smoking materials away from the battery at all times. Inadequate safety precautions could result in death or serious injury.

CAUTION

If the battery releases an excessive amount of gas during charging, decrease the charging rate. If the battery gets hotter than 110°F. (43°C) during charging, discontinue charging and allow the battery to cool. Overheating may result in plate distortion, internal shorting, dryout or other damage.

1. Perform a voltmeter test to determine the state of charge. See [BATTERY TESTING](#). If battery needs to be charged, proceed to step 2.

CAUTION

Always remove the battery from the motorcycle before charging. Accidental electrolyte leakage will damage motorcycle parts.

2. Remove the battery from the motorcycle. See [DISCONNECTION AND REMOVAL](#). Place the battery on a level surface.

WARNING

Always unplug or turn OFF the battery charger before connecting the charger clamps to the battery. Connecting clamps with the charger ON could cause a spark resulting in a battery explosion which could result in death or serious injury.

CAUTION

Do not reverse the charger connections described in the following steps or the charging system of the motorcycle could be damaged.

3. Connect the red battery charger lead to the positive (+) terminal of the battery.
4. Connect the black battery charger lead to negative (-) terminal of the battery.

NOTE

If the battery is still in the vehicle, connect the negative lead to the chassis ground. Be sure that the ignition and all electrical accessories are turned off.

5. Step away from the battery and turn on the charger. See the charging instructions in [Table 7-15](#).

WARNING

Always unplug or turn OFF the battery charger before disconnecting the charger clamps from the battery. Disconnecting clamps with the charger ON could cause a spark resulting in a battery explosion which could result in death or serious injury.

6. After the battery is fully charged, disconnect the black battery charger lead to the negative (-) terminal of the battery.
7. Disconnect the red battery charger lead to the positive (+) terminal of the battery.
8. Mark the charging date on the battery.
9. Perform a load test to determine the condition of the battery. See [BATTERY TESTING](#).

Table 7-15. Battery Charging Rates/Times

| Battery Amp-Hour | State of Charge | | 3 Amp Charger | 6 Amp Charger | 10 Amp Charger | 20 Amp Charger |
|---------------------|-----------------|-------------|------------------------|------------------------|----------------------|-------------------|
| | Voltage Reading | % of Charge | | | | |
| 12 | 12.8 V | 100% | - | - | - | - |
| | 12.6 V | 75% | 1 hour 20 minutes | 40 minutes | 25 minutes | 12 minutes |
| | 12.3 V | 50% | 2 hours 40 minutes | 1 hour 20 minutes | 40 minutes | 25 minutes |
| | 12.0 V | 25% | 4 hours | 2 hours | 1 hour 10 minutes | 40 minutes |
| | 11.8 V | 0% | 5 hours, 20 minutes | 2 hours, 40 minutes | 1 hour 40 minutes | 50 minutes |

The figures listed above assume that the battery is charging at room temperature. If warmer than room temperature, use a slightly shorter charging time. If colder, use a slightly longer charging time.

The use of constant current chargers to charge sealed maintenance-free batteries is not recommended. Any overcharge will cause dry-out and premature battery failure. If a constant current charger is the only type available, do **not** exceed the charge times listed above and do **not** continue charging the battery if it gets hot. When charging, never exceed 15 volts for more than 30 minutes.

BATTERY CABLE ROUTING

Positive battery cable runs from starter post to positive battery terminal. Negative battery cable runs from frame to negative battery terminal. See [Figure 7-44](#).

BATTERY INSTALLATION AND CONNECTION

- Place the fully charged battery into the battery box, terminal side up.

CAUTION

Connect the cables to the correct battery terminals or damage to the motorcycle electrical system will occur.

WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

CAUTION

Overtightening fasteners can damage battery terminals.

- Insert fastener through battery positive cable (red) into threaded hole of battery positive (+) terminal. Tighten fastener to 72-96 **in-lbs** (8-11 Nm).
- Insert fastener through battery negative cable (black) into threaded hole of battery negative (-) terminal. Tighten fastener to 72-96 **in-lbs** (8-11 Nm).

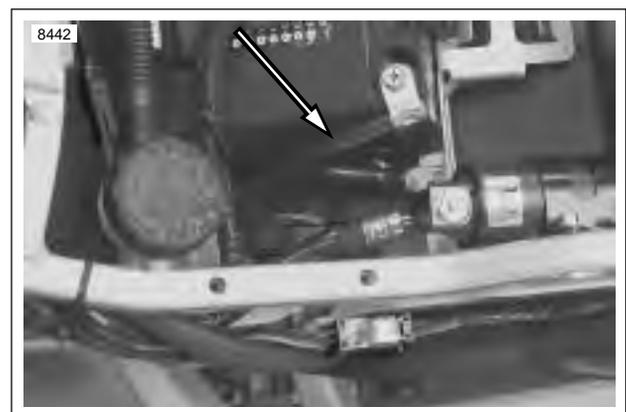


Figure 7-44. Negative Battery Cable

- Apply a light coat of petroleum jelly or corrosion retardant material to both battery terminals.
- Install battery strap.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

- Install seat. See [2.38 SEAT](#).

STORAGE

WARNING

Always store batteries where they cannot be reached by children. Contact with the battery's sulfuric acid could result in death or serious injury.

CAUTION

The electrolyte in a discharged battery will freeze if exposed to freezing temperatures. Freezing may crack the battery case and buckle battery plates.

If the motorcycle will not be operated for several months, such as during the winter season, remove the battery from the motorcycle and fully charge. See [BATTERY CHARGING](#).

Self-discharge is a normal condition and occurs continuously at a rate that depends on the ambient temperature and the battery's state of charge. Batteries discharge at a faster rate at higher ambient temperatures. To reduce the self-discharge rate, store battery in a cool (not freezing), dry place. See [Figure 7-45](#).

Charge the battery every month if stored at temperatures below 60° F. (16° C). Charge the battery more frequently if stored in a warm area above 60° F. (16° C).

NOTE

The H-D Battery Tender Automatic Battery Charger (Part No. 99863-93TA) may be used to maintain battery charge for extended periods of time without risk of overcharging or boiling.

When returning a battery to service after storage, refer to the instructions under [BATTERY CHARGING](#).

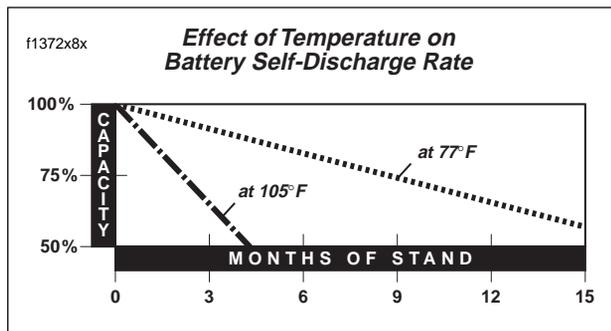


Figure 7-45. Battery Self-Discharge Rate

GENERAL

Dual headlights are equipped with replaceable bulbs. High beam headlight is located on the left side of vehicle.

- High beam headlight turns on and off with headlight switch.
- Low beam headlight is located on the right side of vehicle.
- Adjustment of individual headlight projection is accomplished by adjusting two screws located in the headlight support.

For information on headlight housing and bracket disassembly/assembly see [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).

HEADLIGHT BULBS

Removal

WARNING

To protect against accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.

CAUTION

The bulb contains Halogen gas under pressure. Handle bulb carefully and wear eye protection. Failure to follow adequate safety precautions could result in minor or moderate injury. (62)

CAUTION

Never touch the bulb with your fingers. Fingerprints will etch the glass and cause the bulb to fail. Always wrap the bulb in paper or a clean, dry cloth during handling.

2. See [Figure 7-46](#). Disconnect headlight connection (1).
3. Release wire retaining latch (5) from headlight housing clips.
4. Pull bulb housing from headlight housing.

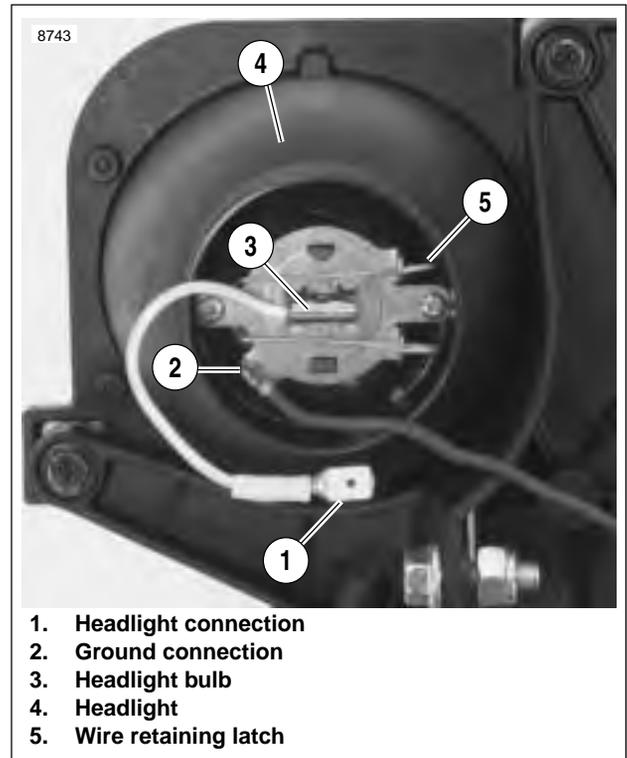


Figure 7-46. Headlight Bulb

Installation

NOTE

Not using the specified bulb may cause charging system problems.

CAUTION

The bulb contains Halogen gas under pressure. Handle bulb carefully and wear eye protection. Failure to follow adequate safety precautions could result in minor or moderate injury.

CAUTION


Never touch the bulb with your fingers. Fingerprints will etch the glass and cause the bulb to fail. Always wrap the bulb in paper or a clean, dry cloth during handling.

1. See [Figure 7-46](#). Align tabs on bulb (3) with tabs on headlight (4). Insert bulb.
2. Close the wire retaining latch (5).
3. Connect the headlight bulb connector.
4. Connect negative battery cable.

WARNING

Check for proper headlight operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper headlight operation could result in death or serious injury.

5. Check headlight for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to ON.
 - b. See [Figure 7-47](#). Check headlight LOW (3) and HIGH beam (2) settings.
 - c. Set headlight to LOW beam. Press passing lamp switch (1). Headlight should flash HIGH beam for as long as the switch is pressed.
 - d. Turn ignition key switch to OFF.
6. Align headlight. See [1.19 HEADLIGHTS](#).

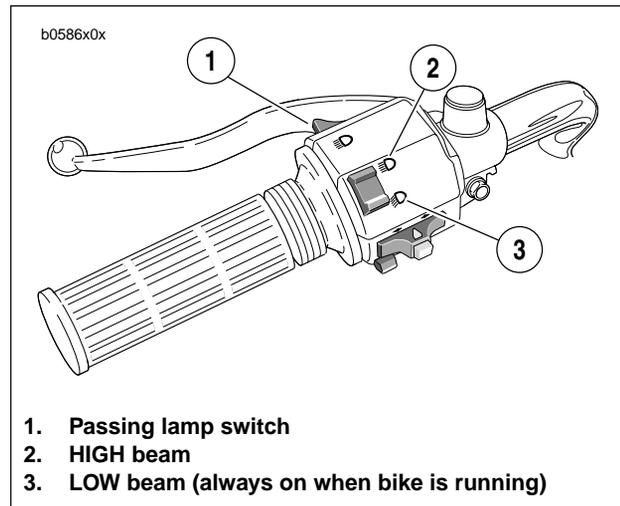

1. Passing lamp switch
2. HIGH beam
3. LOW beam (always on when bike is running)

Figure 7-47. Headlight Controls

REMOVAL/DISASSEMBLY

1. See [Figure 7-48](#). Remove two screws (3) to detach tail light lens (4) and tail light (5). If replacing bulb (2), turn counterclockwise and remove.
2. Remove pillion seat. See [2.38 SEAT](#).
3. Disconnect two connectors [93] from tail lamp harness (6).

ASSEMBLY/INSTALLATION

1. See [Figure 7-48](#). Attach the two tail light harness connectors [93] (6).
 - a. Single wire connector connects to single spade of tail lamp.
 - b. Dual wire connector connects to dual spades of tail lamp with red wire facing left side of vehicle.
2. If removed, install tail lamp bulb (2).
 - a. Turn bulb clockwise to install.
 - b. Install tail light lens (4) and tail light (5) with two fasteners (3).

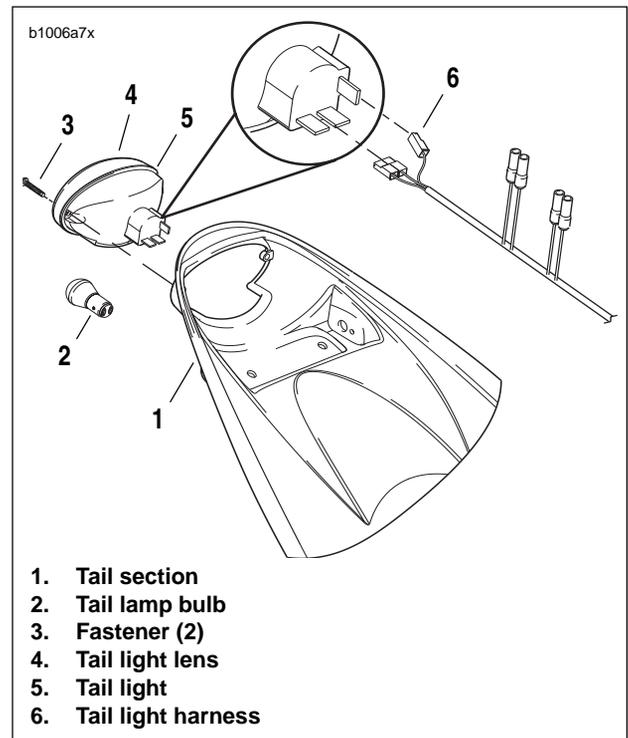


Figure 7-48. Tail Lamp Assembly

⚠ WARNING

Check for proper tail lamp operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper tail lamp operation could result in death or serious injury.

3. Check tail lamp for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to ON.
 - b. Check for tail lamp illumination.
 - c. Squeeze front brake hand lever. Check for brake lamp illumination. Release front brake hand lever.
 - d. Press rear brake pedal. Check for brake lamp illumination. Release rear brake pedal.
 - e. Turn ignition key switch to OFF.

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

4. Install pillion seat. See [2.38 SEAT](#).

REMOVAL

NOTE

To ensure correct installation, make note of wire routing and cable strap locations before removing turn signals.

Bulbs

Remove screw on back of housing to access turn signal bulbs.

Front

1. See [Figure 7-49](#). Disconnect bullet connectors on turn signal wires.
2. See [Figure 7-50](#). Remove fastener (3) and lockwasher (2) from fairing support bracket (4).
3. Pull bullet connectors and wiring through hole in fairing support bracket (4) and fairing (5).

Rear

1. Remove seat See [2.38 SEAT](#).
2. Remove tail frame upper body work. See [2.36 SUB-FRAME TAIL ASSEMBLY AND BODY WORK](#).
3. See [Figure 7-52](#). Disconnect bullet connectors on turn signal wires.
4. See [Figure 7-51](#). Remove fastener (6) and lockwasher (5).

NOTE

In next step, reflector bracket (3) will be removed with turn signal (1).

5. Remove turn signal from tail section (7) and license plate bracket (4).

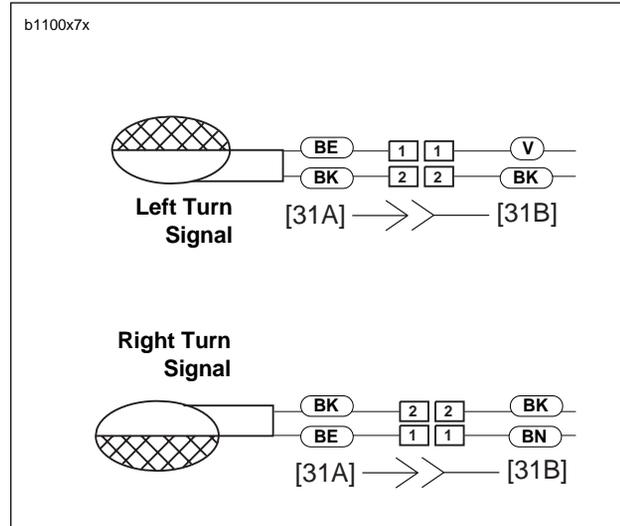


Figure 7-49. Front Turn Signal Connections


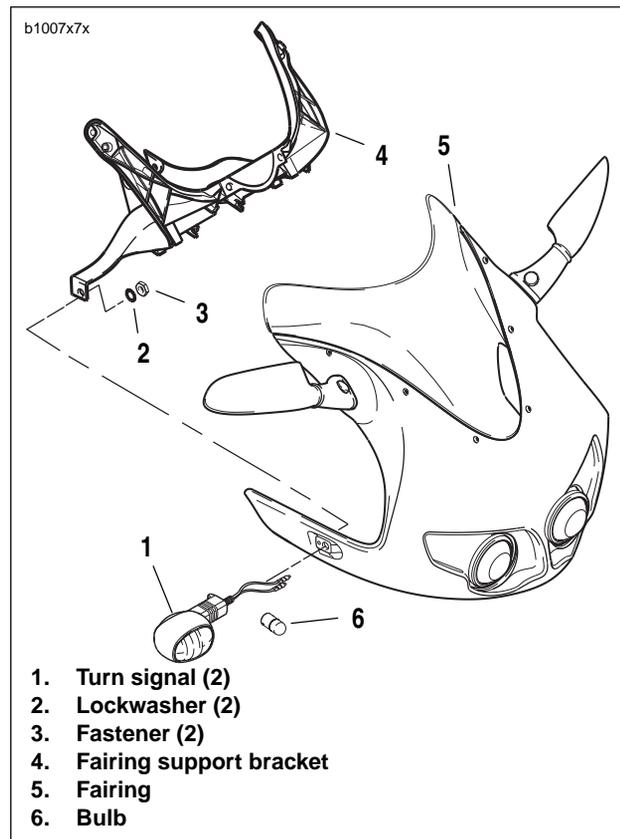


Figure 7-50. Front Turn Signals

b1008a7x

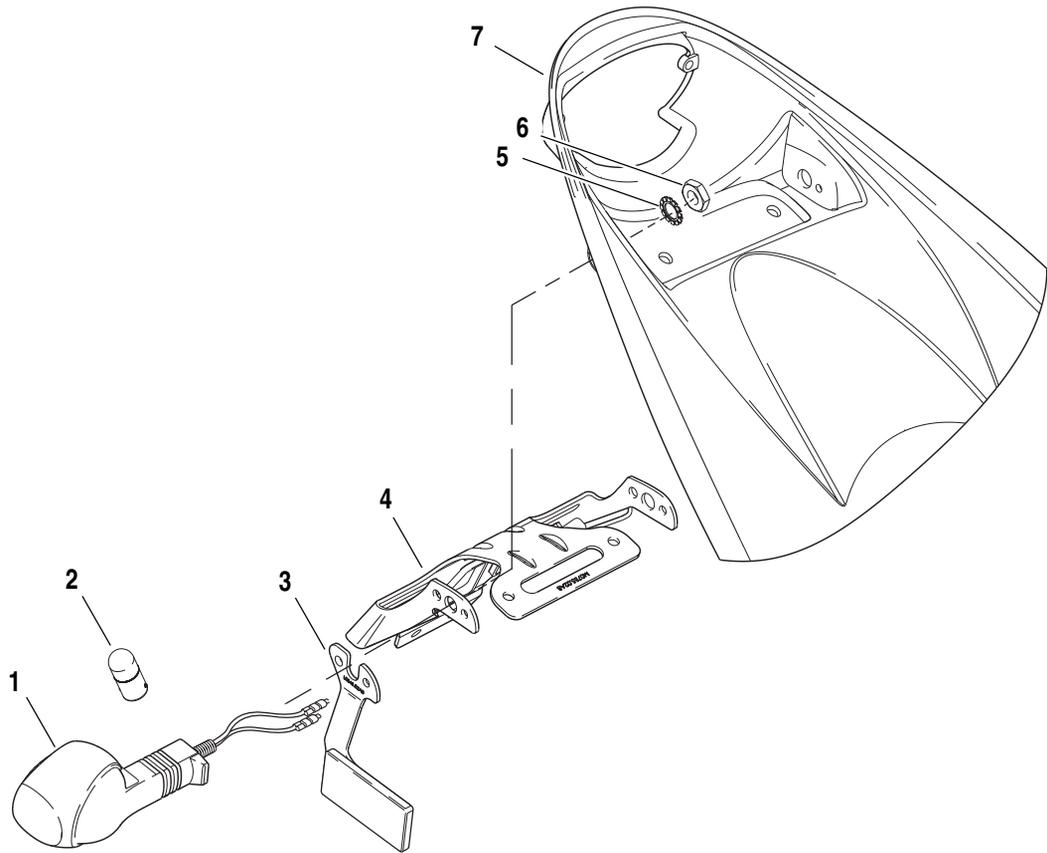

1. Turn signal
2. Turn signal bulb
3. Reflector bracket
4. License plate bracket
5. Washer (2)
6. Fastener (2)
7. Tail section

Figure 7-51. Rear Turn Signals

INSTALLATION

Front

1. See [Figure 7-50](#). Insert bullet connectors and wiring through hole in fairing (5) and fairing support bracket (4).
2. Install turn signal (1) using lockwasher (2) and fastener (3). Tighten fastener to 25-28 **in-lbs** (2.8-3.2 Nm).
3. Attach bullet connectors on turn signal wires as shown in [Figure 7-49](#).

WARNING

Check for proper turn signal operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper turn signal operation could result in death or serious injury.

4. Check turn signals for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to ON.
 - b. Activate left turn signals using switch on left handlebar. Front and rear left turn signals must flash.
 - c. Activate right turn signals using switch on left handlebar. Front and rear right turn signals must flash.
 - d. Turn ignition key switch to OFF.

Rear

1. See [Figure 7-52](#). Insert bullet connectors through license plate bracket (4) and tail section (7).
2. Install reflector bracket (3).
 - a. Place license plate bracket into position over threads on turn signal (1).
 - b. Be sure tab on turn signal fits into hole in reflector bracket and tab on reflector bracket fits into hole in license plate bracket.
3. Attach turn signal using lockwasher (5) and fastener (6). Tighten fastener to 25-28 **in-lbs** (2.8-3.2 Nm).
4. Attach bullet connectors on turn signal wires as shown in [Figure 7-52](#).

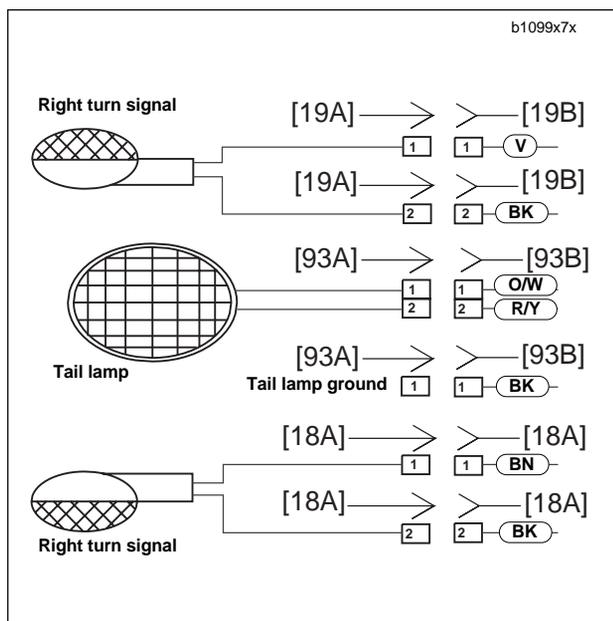


Figure 7-52. Rear Turn Signal Connections

WARNING

Check for proper turn signal operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper turn signal operation could result in death or serious injury.

5. Check turn signals for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to ON.
 - b. Activate left turn signals using switch on left handlebar. Front and rear left turn signals must flash.
 - c. Activate right turn signals using switch on left handlebar. Front and rear right turn signals must flash.
 - d. Turn ignition key switch to OFF.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

6. Install seat. See [2.38 SEAT](#).

REMOVAL

NOTE

The turn signal flasher is not repairable. Replace flasher upon failure.

1. Remove front fairing. See 2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS.
2. Remove fastener securing turn signal flasher to headlight support bracket.
3. Detach 3-place connector [30] from flasher body.

INSTALLATION

1. See Figure 7-53. Attach 3-place connector [30] to flasher.
2. Install turn signal to headlight support bracket. Tighten fastener to 30-40 in-lbs (3.4-4.5 Nm).
3. Install front fairing. See 2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS.

⚠ WARNING

Check for proper turn signal operation before riding motorcycle. Visibility is a major concern for motorcyclists. Failure to have proper turn signal operation could result in death or serious injury.

4. Check turn signals for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to IGN.
 - b. See Figure 7-54. Activate left turn signals using switch on left handlebar. Front and rear left turn signals must flash.
 - c. Activate right turn signals using switch on left handlebar. Front and rear right turn signals must flash.
 - d. Turn ignition key switch to OFF.


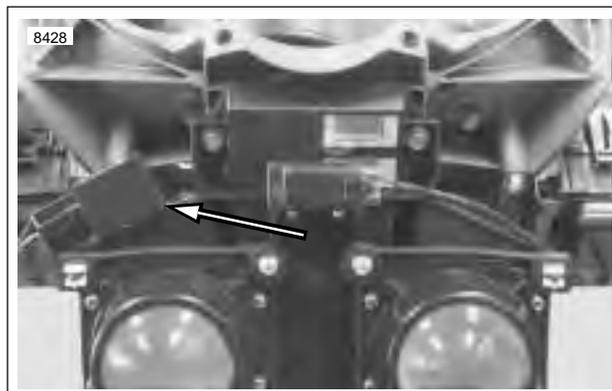


Figure 7-53. Turn Signal Flasher

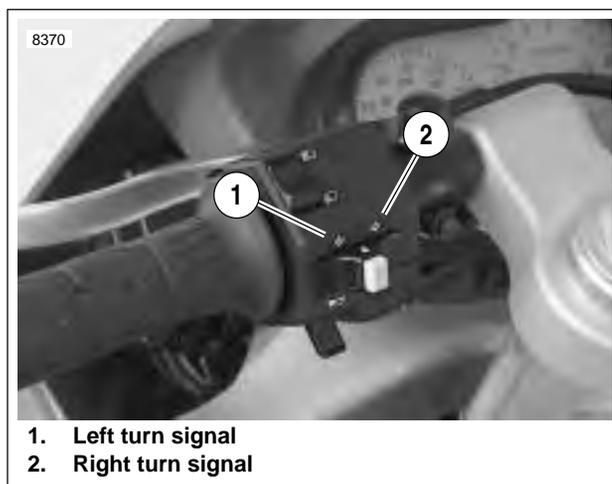

1. Left turn signal
2. Right turn signal

Figure 7-54. Turn Signal Controls

REMOVAL

NOTE

The individual handlebar switches are not repairable. Replace switch assembly upon switch failure.

Right Side

1. Remove throttle cables. See [2.23 THROTTLE CONTROL](#).
2. Access right handlebar switch connector [22] under fairing. Remove cable straps. Detach connector [22] from wiring harness.
3. Detach brake switch connector [121].

Left Side

1. Remove left switch housing mounting fasteners.
2. Unplug the clutch switch [95].
3. Access left handlebar switch connector [24] under fairing. Remove cable straps. Detach connector [24] from wiring harness.

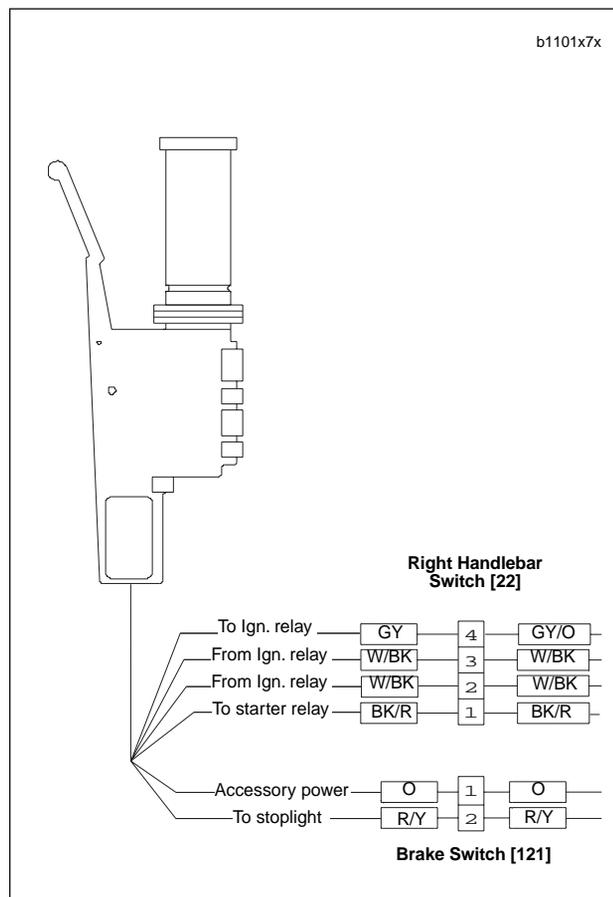


Figure 7-55. Right Handlebar Switch Connection

INSTALLATION

Right Side

1. Attach throttle cables to hand control. See [2.23 THROTTLE CONTROL](#).
2. Install right switch housing.
 - a. Position housing on right handlebar by engaging alignment pin on front housing with hole in handlebar.
 - b. Attach switch housing with two mounting fasteners and tighten to 25-33 **in-lbs** (3-4 Nm).
3. Attach brake switch connector [121].
4. Attach right handlebar switch connector [22] to wire harness. See [D.1 HOSE AND WIRE ROUTING](#) for wire routing information.

WARNING

Check all handlebar switch operations before riding motorcycle. Visibility is a major concern for motorcyclists. Handlebar switches not operating properly could result in death or serious injury.

5. Check handlebar switch for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to IGN.
 - b. Start motorcycle.
 - c. Turn ignition key switch to OFF.

Left Side

1. Install left switch housing.
 - a. Position housing on left handlebar by engaging alignment pin on front housing with hole in handlebar.
 - b. Attach switch housing with three mounting fasteners and tighten to 25-33 **in-lbs** (3-4 Nm).
2. Connect clutch switch [95].
3. Attach right handlebar switch connector [24] to wire harness. See [D.1 HOSE AND WIRE ROUTING](#) for wire routing information.

WARNING

Check all handlebar switch operations before riding motorcycle. Visibility is a major concern for motorcyclists. Handlebar switches not operating properly could result in death or serious injury.

4. Check handlebar switch for proper operation. If operation fails, reread procedure and verify that all steps were performed.
 - a. Turn ignition key switch to ON.
 - b. Check headlight LOW and HIGH beam settings.
 - c. Set headlight to LOW beam. Press passing lamp switch. Headlight should flash HIGH beam for as long as the switch is pressed.
 - d. Check left and right turn signals.
 - e. Activate horn by pressing horn switch.
5. Turn ignition key switch to OFF.

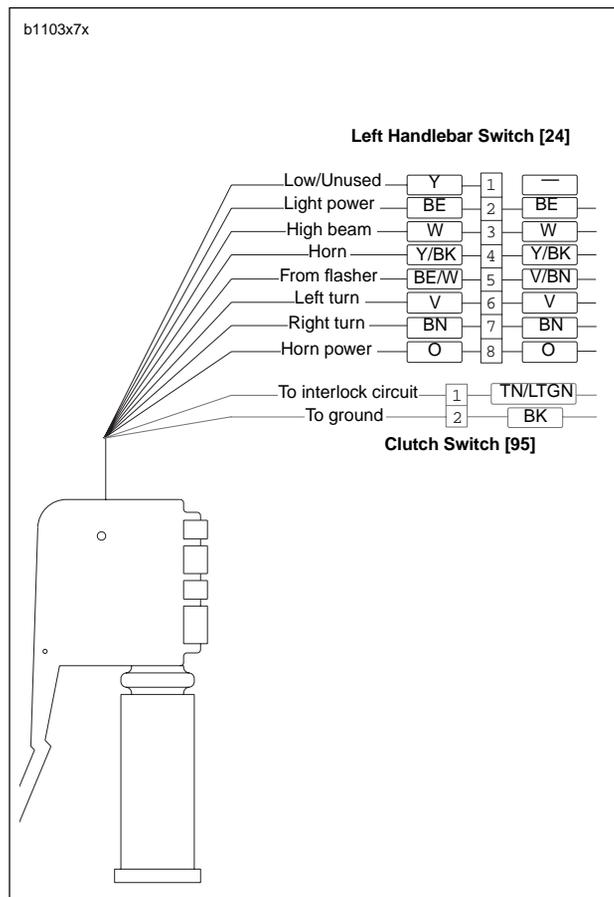


Figure 7-56. Left Handlebar Switch Connection

REMOVAL

1. See [Figure 7-57](#). Remove fastener (1) to detach vehicle speed sensor (2) from crankcase.
2. Remove cable strap (4).
3. Disconnect 3-place Deutsch connector [65] under sprocket cover. See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#).

INSTALLATION

1. See [Figure 7-57](#). Lube O-ring with engine oil and install fastener (1) to attach vehicle speed sensor (2) to crankcase.
2. Connect vehicle speed sensor connector [65] to wiring harness. See [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#).
3. Install cable strap (4).

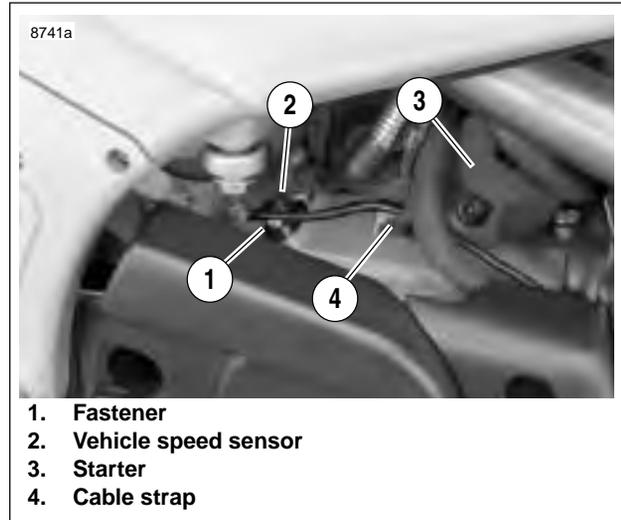


Figure 7-57. Speedometer Sensor

az

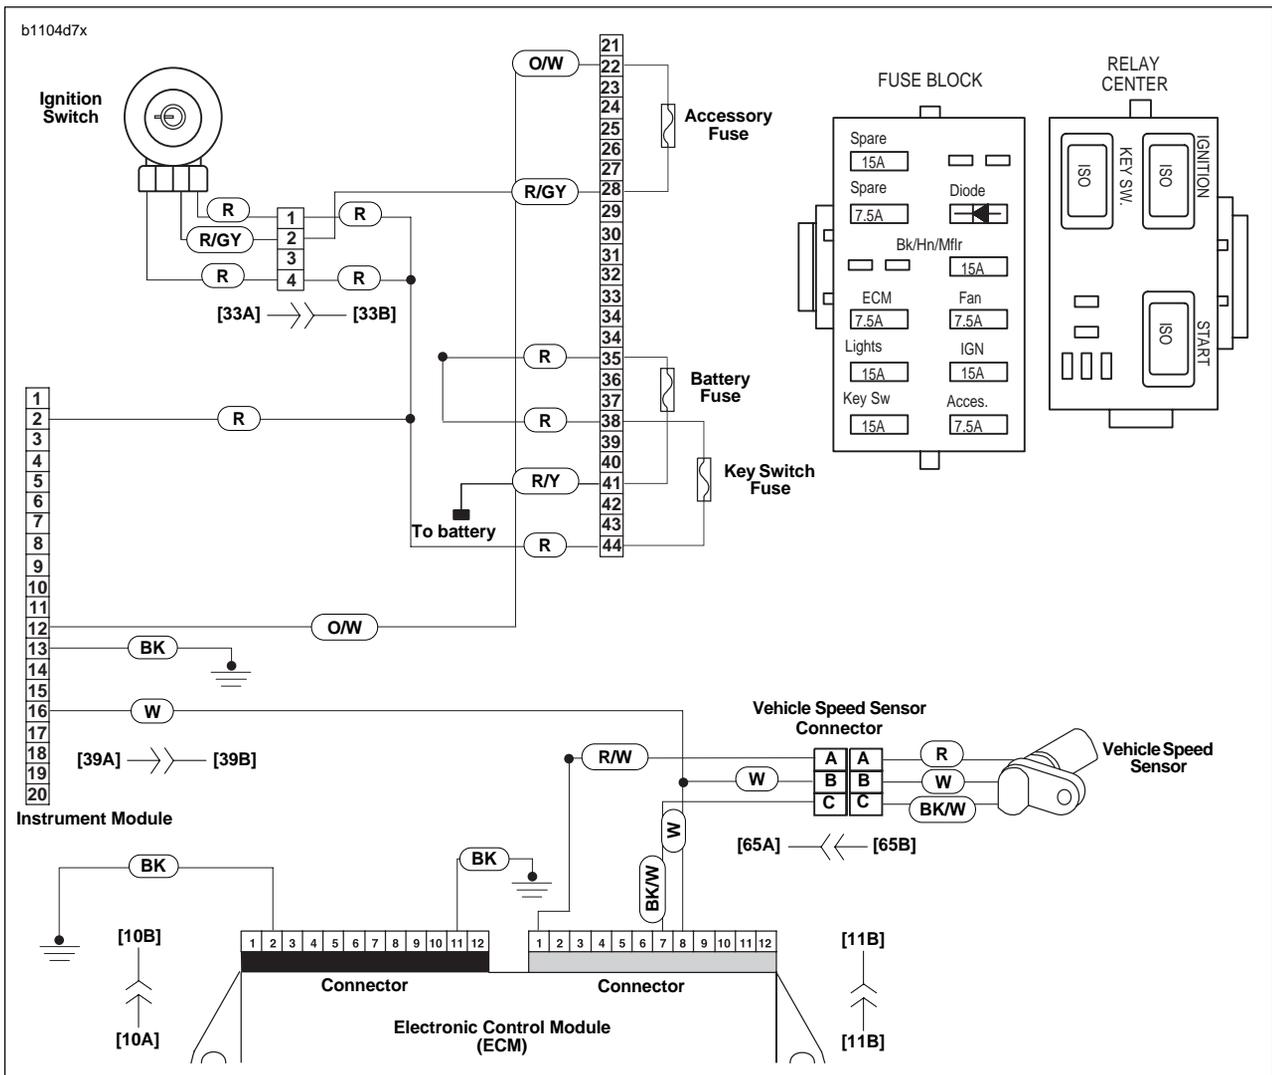


Figure 7-58. Vehicle Speed Sensor Wiring

GENERAL

Replace the instrument module if the unit is not working properly or if a lamp is inoperative. The module is not repairable. However, before replacing a component, check that the problem is not caused by a loose wire connection.

REMOVAL

⚠ WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

1. Disconnect negative battery cable.
2. Remove headlight support bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
3. See [Figure 7-61](#). Disconnect instrument module connector [39].
4. See [Figure 7-62](#). Remove fasteners (5) and washers (4).
5. Pull instrument module (2) from headlight support bracket (1).

INSTALLATION

1. See [Figure 7-62](#). Place instrument module (2) into position in headlight support bracket (1).
2. Install washers (4) and fasteners (5). Tighten fasteners to 12-36 **in-lbs** (1.4-4.0 Nm).
3. See [Figure 7-61](#). Connect instrument module connector [39].
4. Install headlight support bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
5. Install negative battery cable.



Figure 7-60. Instrument Module

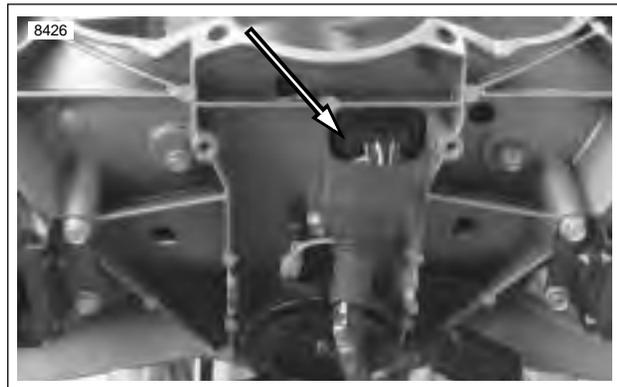


Figure 7-61. Instrument Module Connector [39]

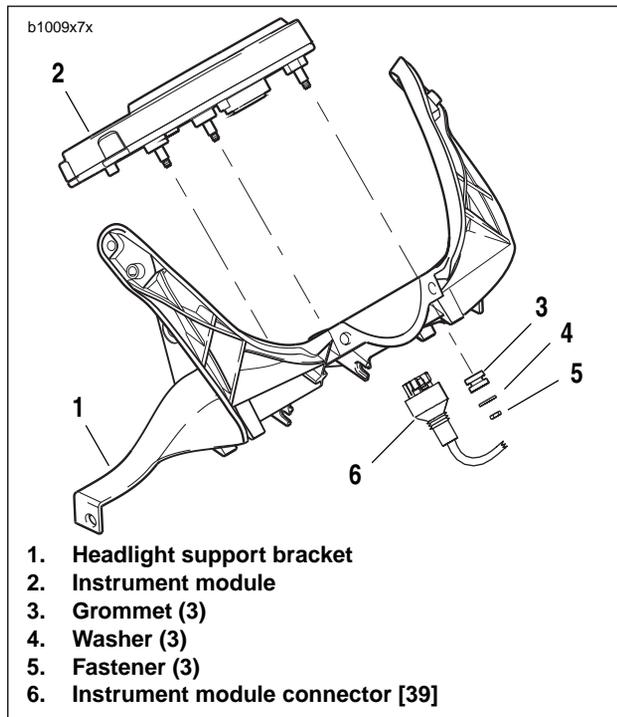


Figure 7-62. Instrument Module

GENERAL

See [Figure 7-63](#). Use the SPEEDOMETER TESTER (Part No. HD-41354) for speedometer diagnostics. These diagnostics may include:

- Checking speedometer operation.
- Testing speedometer needle sweeping action.

The tester generates a simulated speedometer sensor signal. This signal aids in determining whether speedometer replacement is necessary. It can also be used to simulate running engine conditions for ignition system troubleshooting.

NOTES

- Use the following procedures in conjunction with the manual supplied with the speedometer tester.
- Test results may be inaccurate if tester battery is low.

TESTING

NOTE

The SPEEDOMETER TESTER (Part No. HD-41354) cannot be used to verify the calibration of a speedometer and it will not verify the speedometer's function to support legal proceedings. Its purpose is to verify speedometer function when performing service diagnosis or repair. It can also assist in determining if speedometer replacement is necessary.

Speedometer Operation Test

NOTE

For information on the correct routing of vehicle speed sensor wiring see [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#).

1. See [Figure 7-64](#). Locate the 3-place vehicle speed sensor connector [65] under the sprocket cover. See [2.30 SPROCKET COVER](#).
2. Place speedometer tester power switch in the ON position. Place signal switch in the OUT position.
3. Turn vehicle ignition switch ON.
4. Begin test.
 - a. Press ENTER on the tester keypad.
 - b. Enter a frequency from [Table 7-16](#). Note that different markets use different frequencies.
 - c. Verify that speedometer display reads the corresponding speed. To change the test frequency, press CLEAR to cancel and enter the new frequency. Press ENTER to begin and reverify.

NOTE

The speedometer should be accurate within 0-5 MPH (0-8 KPH).

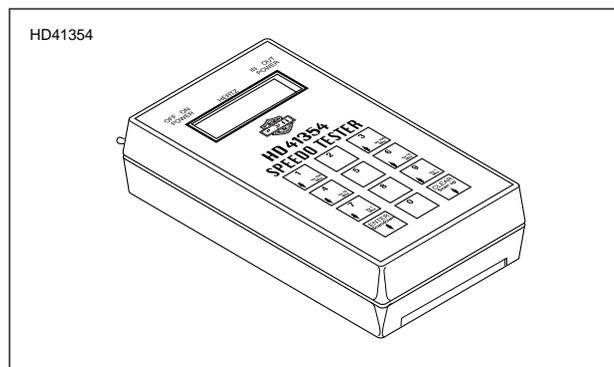


Figure 7-63. Speedometer Tester (Part No. HD-41354)

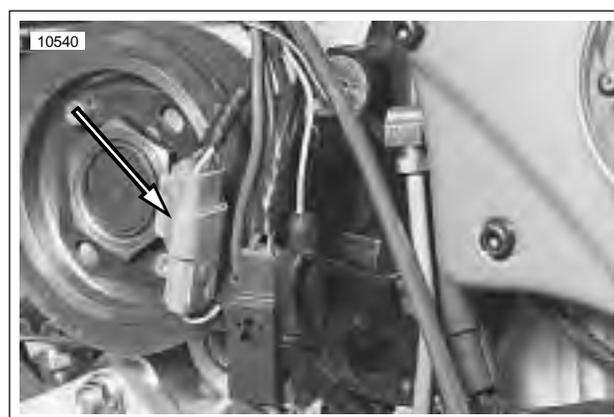


Figure 7-64. Vehicle Speed Sensor Connector [65]

Table 7-16. Speedometer Test Frequency in Hertz (Hz)

| MARKET | SPEED | FREQUENCY |
|----------------------------|---------|-----------|
| USA | 20 MPH | 461 |
| | 40 MPH | 923 |
| | 60 MPH | 1365 |
| | 80 MPH | 1847 |
| ENG, AUS, EUR, CAN, JPN | 40 KPH | 577 |
| | 60 KPH | 865 |
| | 80 KPH | 1154 |
| | 100 KPH | 1443 |

Speedometer Needle Sweep Test

NOTE

Speedometer needle sweep test works on the speedometer only. Use the diagnostics available with DIGITAL TECHNICIAN (Part No. HD-44750) to test a tachometer.

The tester's sweep function moves the speedometer needle through the full range of movement. This allows for testing the smoothness of operation and checking for hesitancy or a stuck needle.

1. See Figure 7-64. Disconnect vehicle speed sensor connector [65]. Attach speedometer tester connector to vehicle speed sensor connector.
2. Place speedometer tester power switch in the ON position. Place signal switch in the OUT position.
3. Turn vehicle ignition switch ON.
4. Begin test by pressing 0 on the tester keypad, then pressing ENTER. The tester will scan for two seconds, then the tester will put out a 1 Hz signal.
5. Select a test range.
 - a. Press 2 to select LO range (1-20 Hz).
 - b. Press 5 to select CEN range (21-999 Hz).
 - c. Press 8 to select HI range (1000-20,000 Hz).
6. After selecting a range, use the corresponding arrow keys to accelerate through the range. As you move through the speed range, check for smooth needle movement.
 - a. If testing LO range, press 1 or 3.
 - b. If testing CEN range, press 4 or 6.
 - c. If testing HI range, press 7 or 9.

5. Press ENTER on the tester keypad.
6. Rotate the motorcycle's rear wheel.
 - a. If reading on speedometer tester changes as wheel is rotated, speedometer sensor is OK.
 - b. If reading does not change, vehicle speed sensor is suspect. Install a known, good vehicle speed sensor and test again.

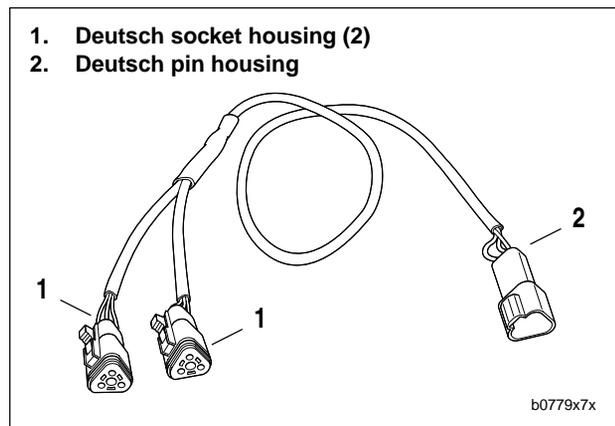


Figure 7-65. Test Harness

Speedometer Sensor Test


If the speedometer is inoperative, but backlighting and odometer work, the speedometer sensor may not be working.

See Figure 7-65. Fabricate a test harness using the following parts. This harness can also be used to test the tachometer.

- Two Deutsch 3-place socket housings (Part No. 72113-94BK) and six socket terminals (Part No. 72191-94).
 - Deutsch 3-place pin housing (Part No. 72103-94BK) and three pin terminals (Part No. 72080-99Y).
 - Six lengths of 18 gauge wire, each 6.0 in. (15 cm) long.
 - Test for voltage to sensor by checking for 4-6 VDC on red/white wire in connector [65].
 - Then check for continuity to ground on black wire in connector [65].
1. Install the test harness between the vehicle speed sensor connector halves [65].
 2. Raise rear wheel off floor using REAR WHEEL SUPPORT STAND (Part No. B-41174).
 3. Place speedometer tester power switch in the ON position. Place signal switch in the IN position.
 4. Plug the speedometer tester into the test harness. Turn vehicle ignition switch ON.


Speedometer Test: Chart 1

ODOMETER, TRIP ODOMETER AND RESET SWITCH TESTING

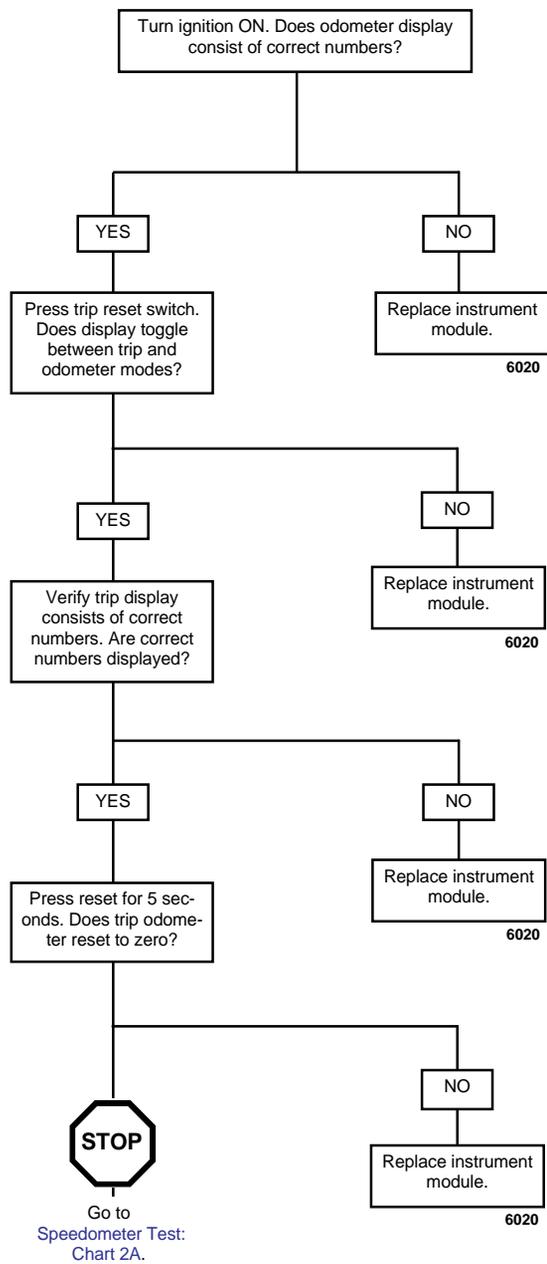

Speedometer Test: Chart 2A

INOPERATIVE, INACCURATE OR ERRATIC SPEEDOMETER

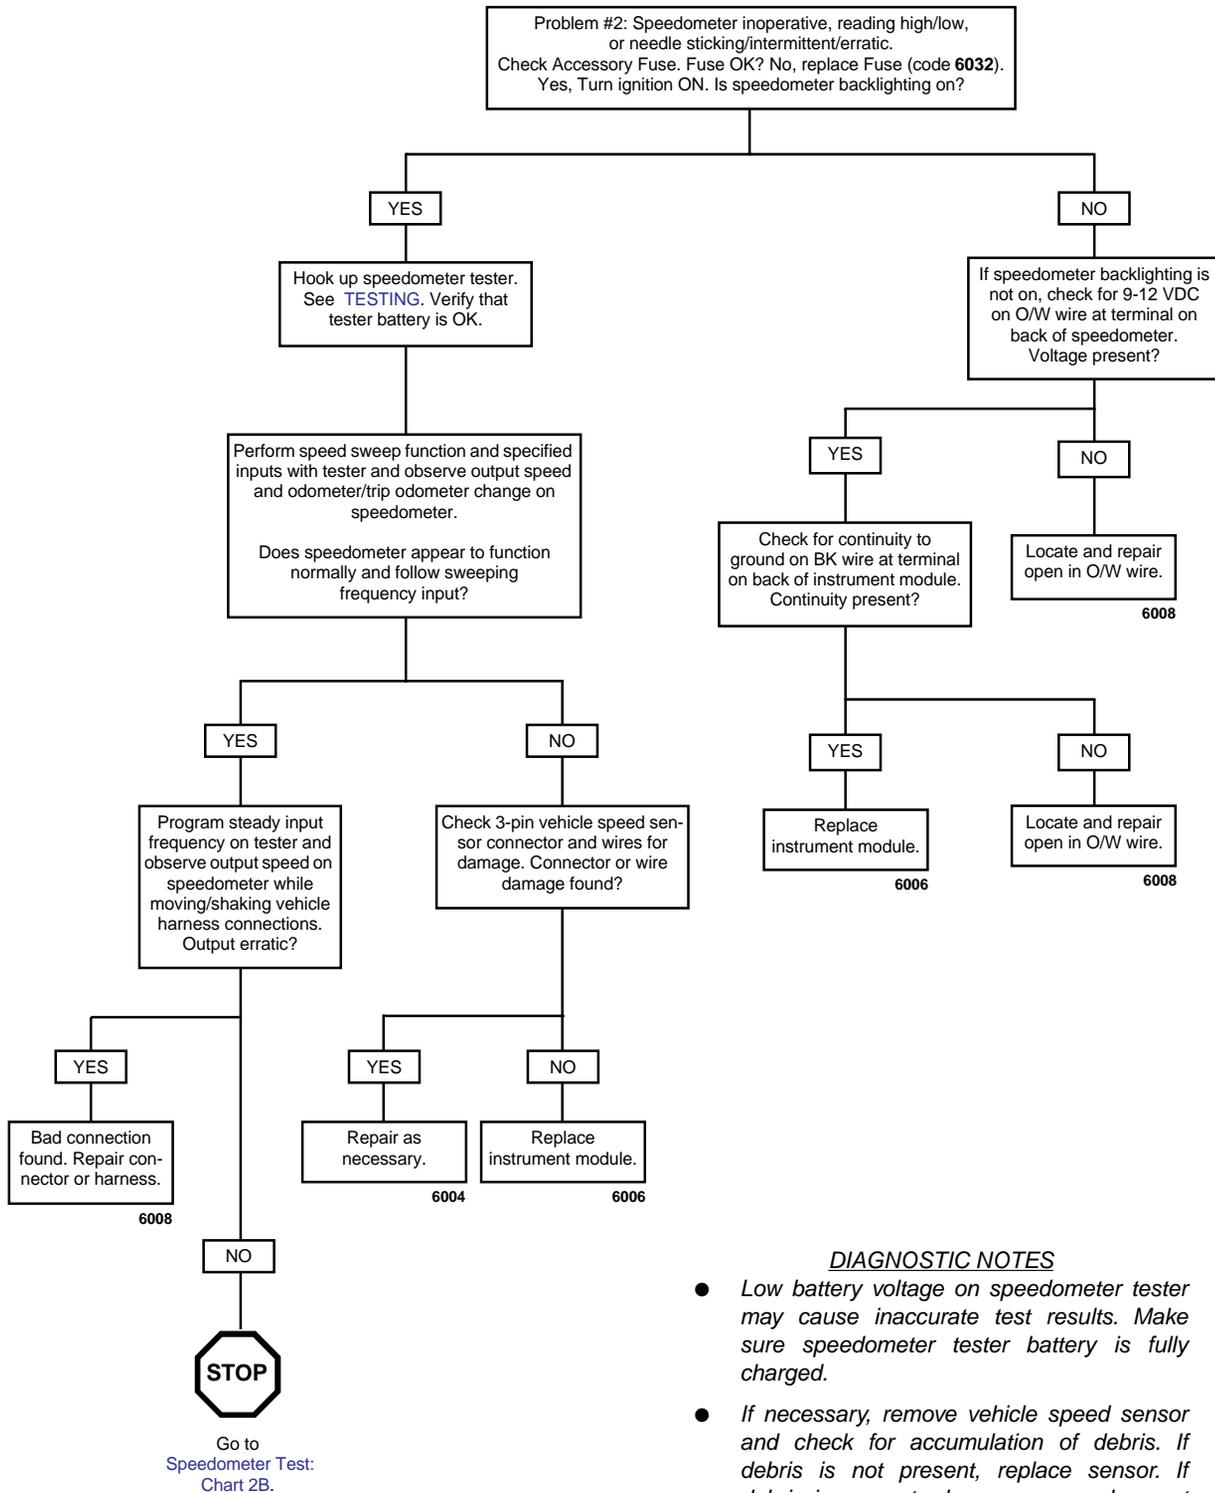


DIAGNOSTIC NOTES

- Low battery voltage on speedometer tester may cause inaccurate test results. Make sure speedometer tester battery is fully charged.
- If necessary, remove vehicle speed sensor and check for accumulation of debris. If debris is not present, replace sensor. If debris is present, clean sensor and repeat test. Replace if necessary.

Speedometer Test: Chart 2B

INOPERATIVE, INACCURATE OR ERRATIC SPEEDOMETER

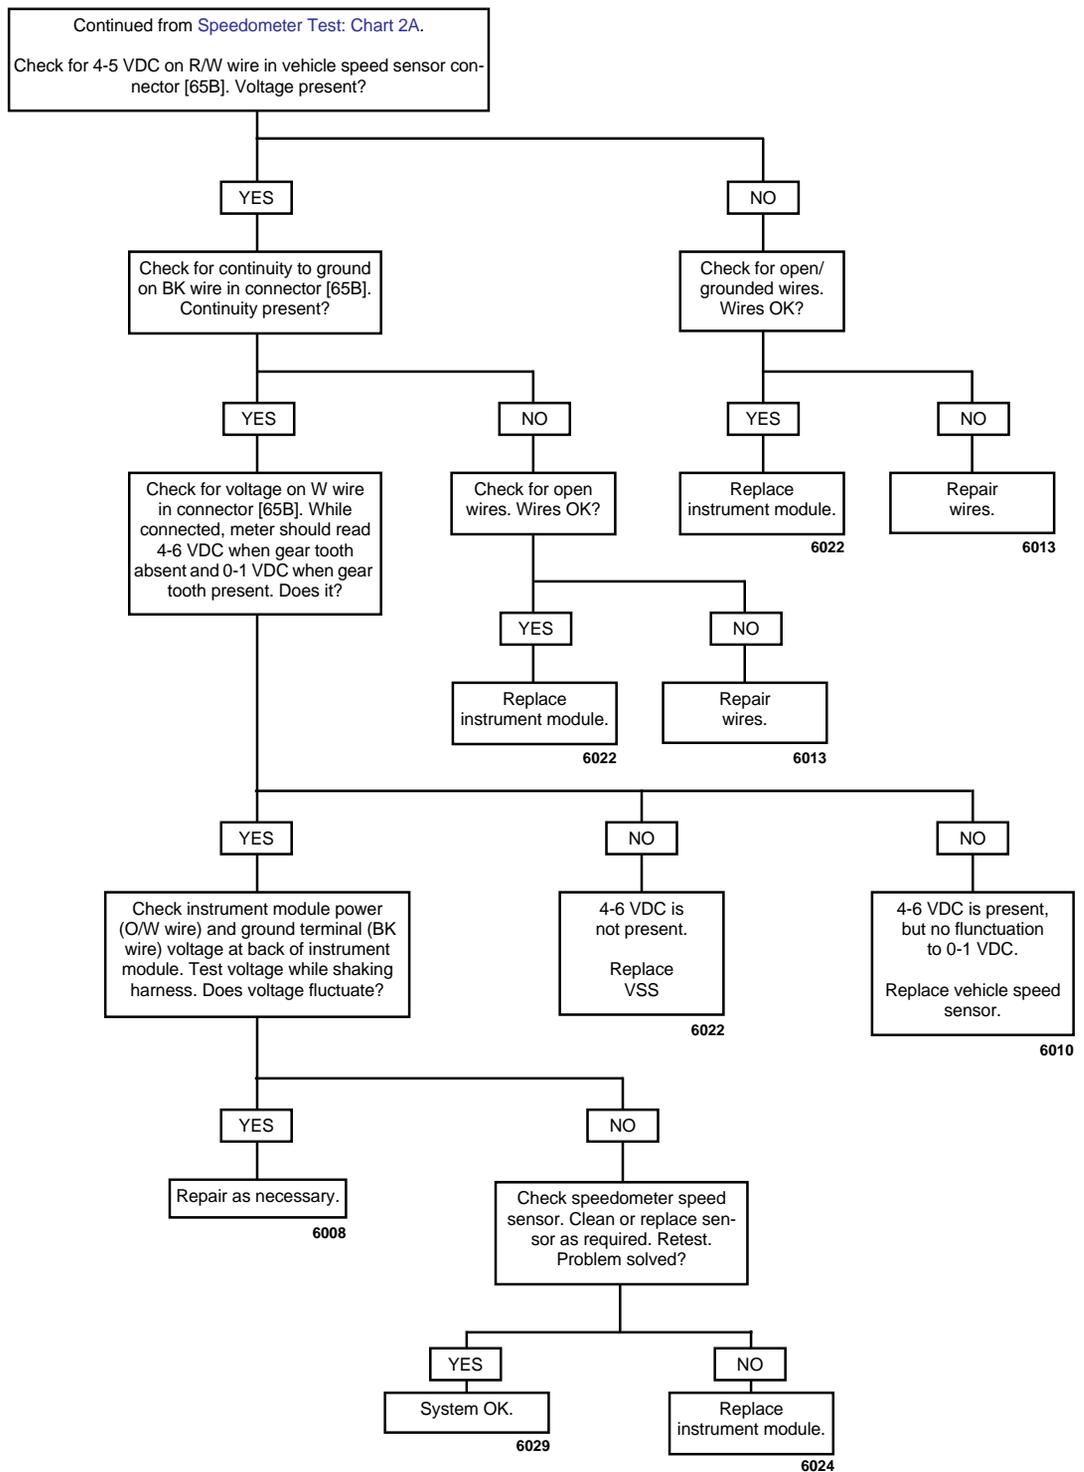

GENERAL

The horn is located inside fairing.

REMOVAL

1. Remove seat. See [2.38 SEAT](#).

WARNING

To protect against shock and accidental start-up of vehicle, disconnect the negative battery cable before proceeding. Inadequate safety precautions could result in death or serious injury.

2. Disconnect negative battery cable.
3. Remove headlight support bracket. See [2.25 HEADLIGHT ASSEMBLY AND SUPPORT BRACKET](#).
4. See [Figure 7-66](#). Remove fastener (3).
5. Remove horn (1) from fairing support bracket (4).
6. See [Figure 7-67](#). Detach Y/BK power wire and BK ground wire from terminal clips on horn.

INSTALLATION

1. See [Figure 7-67](#). Connect Y/BK power wire and BK ground wire to terminal clips on horn.
2. See [Figure 7-66](#). Attach horn (1) to fairing support bracket (4) using fastener (3). Tighten to 72-96 **in-lbs** (8.1-10.8 Nm).
3. Check horn operation. If horn does not sound or fails to function satisfactorily, see [TROUBLESHOOTING](#).
 - a. Turn ignition key switch ON.
 - b. Press horn switch to activate horn.
 - c. Turn ignition key switch OFF.
4. Install negative battery cable.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

5. Install seat. See [2.38 SEAT](#).

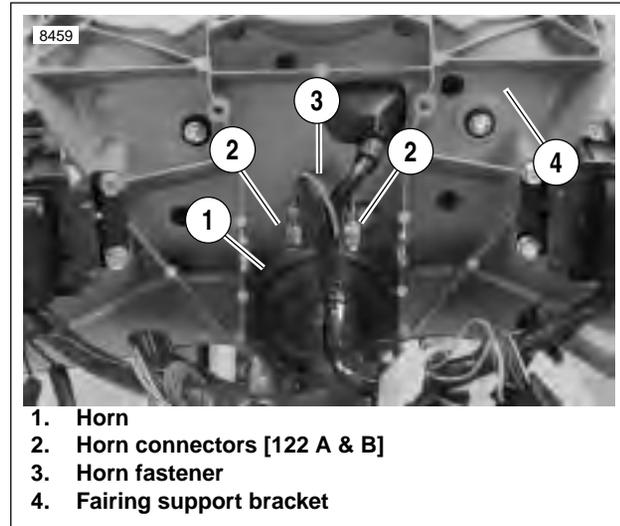


Figure 7-66. Horn Assembly

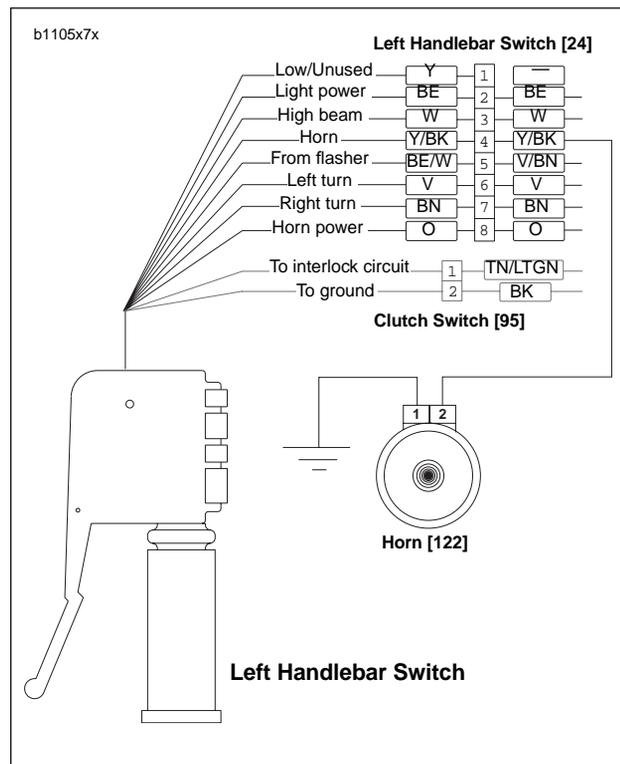


Figure 7-67. Horn Wiring

TROUBLESHOOTING

1. If the horn does not sound or fails to function satisfactorily, check for the following conditions:
 - a. Discharged battery.
 - b. Loose, frayed or damaged wiring leading to horn terminal.
2. If battery has a satisfactory charge and wiring appears to be in good condition, test horn grounds and switch using voltmeter.
 - a. See [Figure 7-67](#). Remove Y/BK power and BK ground wires from terminal clips.
 - b. Connect voltmeter positive (+) lead to Y/BK wire.
 - c. Connect voltmeter negative (-) lead to ground.
 - d. Turn ignition key switch ON.
3. See [Figure 7-68](#). Depress horn switch and observe voltmeter reading.
 - a. If battery voltage is present, horn or horn grounding is faulty. If horn is faulty, replace unit as an assembly. The horn is not repairable.
 - b. If battery voltage is not present, either horn switch or wiring to horn is faulty. If horn switch is faulty, replace left handlebar switch. See [7.16 HANDLEBAR SWITCHES](#).



Figure 7-68. Horn Switch

GENERAL

See [Figure 7-69](#). The neutral indicator switch (2) is threaded into the transmission portion of the right crankcase half. It is immediately forward of the transmission sprocket (1). The sprocket cover must be removed to test the switch.

A pin on the shifter drum contacts the neutral indicator switch plunger, completing the neutral indicator circuit. The switch is not repairable. Replace the switch if it malfunctions.

TESTING

1. Remove sprocket cover. See [2.30 SPROCKET COVER](#).
2. See [Figure 7-69](#). Disconnect wire lead from neutral indicator switch (2).
3. Turn ignition key switch to ON. Touch the neutral indicator wire lead to a suitable ground.
 - a. If indicator lamp lights, then problem is at indicator switch. Replace switch.
 - b. If indicator lamp does not light, then problem is elsewhere in circuit. Check for loose connections, burned out indicator lamps or faulty wiring.
 - c. After testing and repair, connect wire lead to indicator switch.
4. Install sprocket cover. See [2.30 SPROCKET COVER](#).


REMOVAL/INSTALLATION

1. Verify that the ignition key switch is turned to OFF.
2. Remove sprocket cover. See [2.30 SPROCKET COVER](#).

NOTE


If replacing neutral indicator switch wiring, see [7.24 INTERACTIVE EXHAUST HARNESS \(XB12R\)](#) for correct wire routing.

3. See [Figure 7-70](#). Remove wire lead (1) from neutral indicator switch (2).
4. Remove neutral indicator switch and washer (3).
5. Install **new** neutral indicator switch.
 - a. Apply a light coating of LOCTITE THREADLOCKER 243 (blue) to **new** neutral indicator switch (1) threads.
 - b. Install washer (3) over neutral indicator switch (2) threads.
 - c. Install switch in crankcase. Tighten switch to 36-60 **in-lbs** (4-6.8 Nm).
 - d. Connect wire lead (1) to switch.
6. Install sprocket cover. See [2.30 SPROCKET COVER](#).

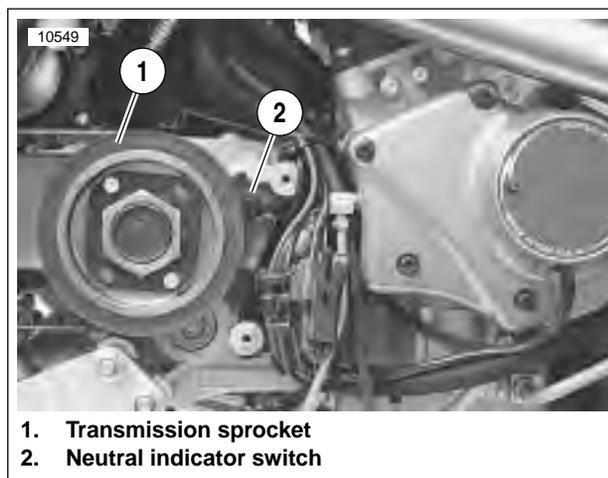

1. Transmission sprocket
2. Neutral indicator switch

Figure 7-69. Neutral Indicator Switch Location

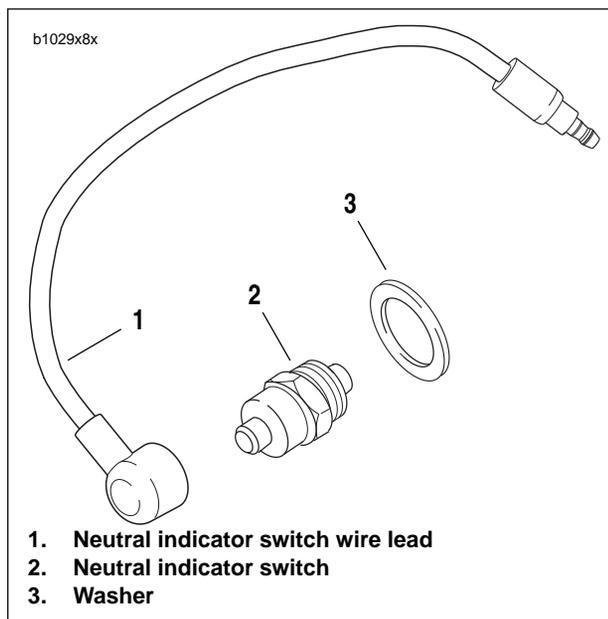

1. Neutral indicator switch wire lead
2. Neutral indicator switch
3. Washer

Figure 7-70. Neutral Indicator Switch

GENERAL

Buell motorcycles feature two components which protect the electrical system.

Fuses

See [Figure 7-71](#). The covered fuse block is behind the fairing on the right hand side of the motorcycle.

See [Figure 7-72](#). The lights, key switch, brake/horn and ignition fuses are rated at 15 Amps. The ECM, cooling fan and accessory fuses are rated at 7.5 Amps.

Always investigate the cause of blown fuses before replacing them.

Main Fuse

See [Figure 7-73](#). The 30 Amp main fuse is located under the seat.

To disable the motorcycle's ignition system, pull the main fuse up and out of the main fuse holder.



Figure 7-71. Fuse Block

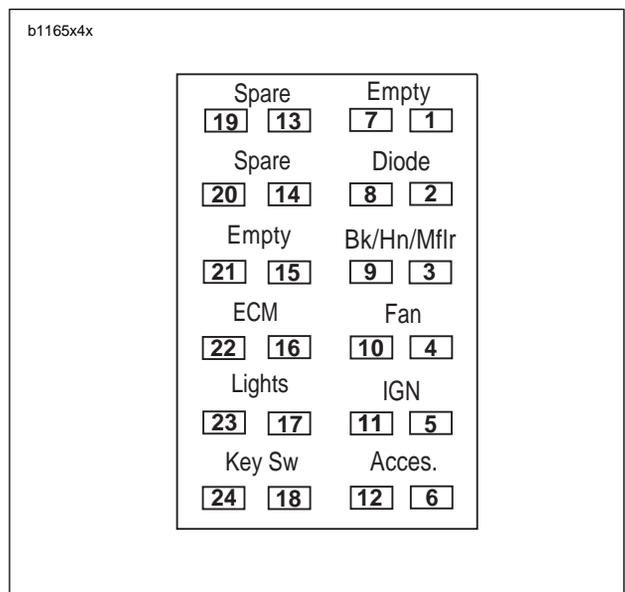


Figure 7-72. Fuse Block

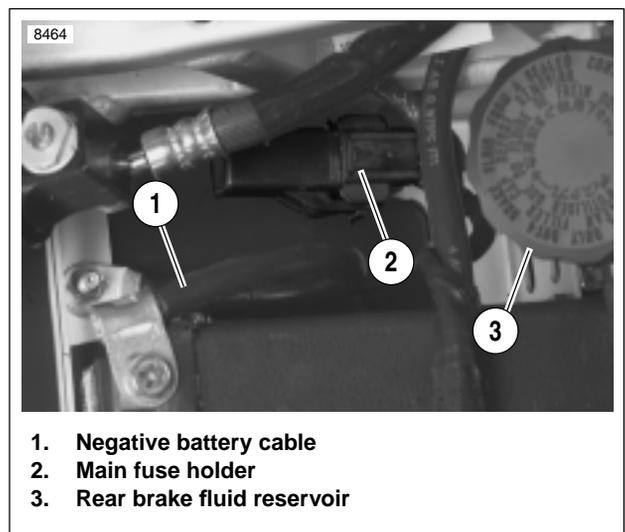


Figure 7-73. 30 A Main Fuse Location

GENERAL

The main wire harness runs from the front of the motorcycle to the tail section where it connects to the tail section mini-harness.

Always replace plastic tree fasteners when replacing main wire harness. Remove tree fasteners carefully. Do not leave any of fastener in frame.

REMOVAL

NOTES


- To ensure correct installation, make note of wire routing and cable strap locations before removing main wire harness.
- Main wire harness is removed from front of vehicle in between fork tube and frame.

1. Remove seat. See [2.38 SEAT](#).

WARNING


Always disconnect the negative battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

2. Unthread fastener and remove battery negative cable (black) from battery negative (-) terminal.
3. Pull back terminal cover boot.
4. Unthread fastener and remove battery positive cable (red) from battery positive (+) terminal.
5. Disconnect positive battery cable from starter.
6. Remove tail frame upper body work. [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).
7. See [Figure 7-74](#). Disconnect tail harness connector [7] (3).
8. See [Figure 7-75](#). Remove wire harness ground (2).
9. Remove main fuse case (3).
10. Disconnect foot brake light switch connector [121] (5).
11. Remove the rear shock absorber assembly and reservoir. See [2.22 REAR SHOCK ABSORBER](#).
12. Remove fan. See [4.24 COOLING FAN](#).

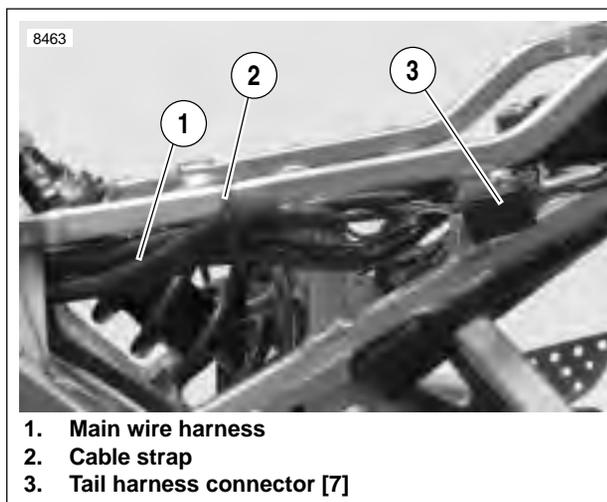

1. Main wire harness
2. Cable strap
3. Tail harness connector [7]

Figure 7-74. Tail Harness Connector

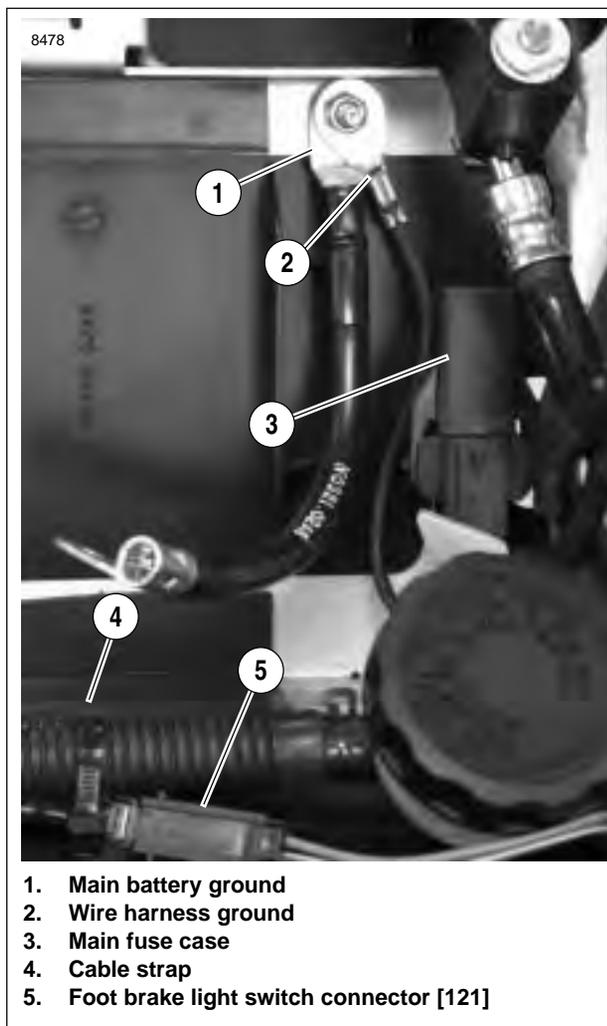

1. Main battery ground
2. Wire harness ground
3. Main fuse case
4. Cable strap
5. Foot brake light switch connector [121]

Figure 7-75. Battery Tray Wiring

[HOME](#)

13. Disconnect wiring located under sprocket cover. See [7.25 SPROCKET COVER WIRING](#).
14. Remove connector from oil pressure switch [120]. Oil pressure switch is located on front of engine.
15. Rotate engine. See [3.3 ENGINE ROTATION FOR SERVICE](#).
16. Disconnect intake air temperature sensor [89].
17. Disconnect throttle position sensor [88].
18. Remove fan connector [97]. Fan connector is located behind rear cylinder.
19. Remove upper fork clamp. [2.17 FORK CLAMPS, UPPER AND LOWER](#).
20. Remove fairing. See [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
21. Disconnect:
 - a. Flasher connector [30].
 - b. Bank angle sensor connector [134].
 - c. Electronic control module (ECM). [4.16 ELECTRONIC CONTROL MODULE](#).
 - d. Instrument module connector [39].
 - e. Horn connectors [122].
 - f. Ground terminals on front of steering head.
 - g. Left switch housing connector [24] and right switch housing connector [22].
 - h. Clutch switch [95] from left switch housing.
 - i. Front brake switch [121] from right switch housing.
 - j. headlight connector. [38].
22. Remove fuse block and relay block by removing fasteners securing them to fairing support bracket.
23. Remove fuse and relay bundle clamps.
24. Remove fuse block and relay block from their brackets.
25. Remove any remaining cable straps and clamps securing wire harness and remove harness from front of vehicle.

INSTALLATION

NOTE

For more information on wire harness and hose routing, see [D.1 HOSE AND WIRE ROUTING](#).

1. Feed rear portion of **new** harness between left front fork and frame.
2. Continue to feed rear and center portion of harness between left side of engine and frame.
3. Place connectors in general location of installation.
4. Secure plastic harness holder to left inside portion of frame using plastic tree fasteners.

NOTE

Fuel line is installed under engine connector portion of wire harness.

5. See [Figure 7-76](#). Install clamp over portion of harness that leads to engine connectors. Install clamp as shown using new plastic tree fastener.
6. See [Figure 7-77](#). Route portion of main wire harness that contains the positive battery cable (3), sprocket cover wiring (4) and transmission vent hose (2) through corner mounting tab (1) at rear of frame. Install **new** plastic tree fasteners.
7. Connect throttle position sensor [88].
8. Rotate motor into position. See [REASSEMBLY](#) under [3.3 ENGINE ROTATION FOR SERVICE](#).
9. Install sprocket cover wiring. See [7.25 SPROCKET COVER WIRING](#).
10. Install oil pressure switch connector to oil pressure switch.
11. See [Figure 7-78](#). Install cable straps:
 - a. Front cable strap (3) secures voltage regulator and oil pressure switch wiring.
 - b. Middle cable strap (2) secures voltage regulator, oil pressure switch and cam position sensor wiring.
 - c. Rear cable strap (1) secures conduit to voltage regulator wiring.


NOTE

Snap fuse and relay blocks into mounting brackets before installing blocks to fairing mounting bracket.

12. Place clamp (2) around fuse block wiring. Mount fuse block (1) and clamp to fairing support bracket using top fastener (4) and bottom fastener (3). Tighten fasteners to 72-96 **in-lbs** (8.1-10.8 Nm).
13. Repeat previous steps for relay block.
14. Install steering head clamp around wire harness and secure clamp to fairing support bracket with loop facing vehicle. Tighten fastener to 16-18 ft-lbs (21.7-24.4 Nm).



Figure 7-76. Wire Harness Clip

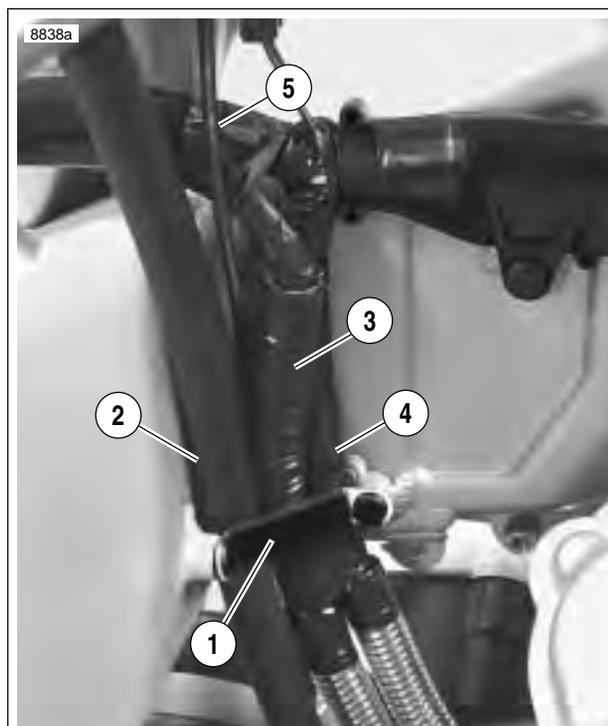

1. Mounting tab
2. Transmission vent hose
3. Positive battery cable
4. Sprocket cover wiring
5. Interactive exhaust cable (XB12R only)

Figure 7-77. Corner Mounting Tab

15. Install upper fork clamp. See [INSTALLATION](#) under [2.17 FORK CLAMPS, UPPER AND LOWER](#).
16. Connect:
 - a. headlight connector [38].
 - b. Front brake switch [121] to right switch housing.
 - c. Clutch switch [95] to left switch housing.
 - d. Left switch housing connector [24] and right switch housing connector [22].
 - e. Ignition switch [33].
 - f. Ground terminals on front of steering head.
 - g. Horn connectors [122].
 - h. Instrument module connector [39].
 - i. Install electronic control module. See [INSTALLATION](#) under [4.16 ELECTRONIC CONTROL MODULE](#).
 - j. Bank angle sensor connector [134].
 - k. Flasher connector [30].
17. See [Figure 7-80](#). Verify proper fairing wire routing and cable strap locations.
18. Verify that front forks can be turned from full left to full right lock without wire harness binding or pinching.
19. Install fairing. See [INSTALLATION](#) under [2.37 FRONT FAIRING, WINDSHIELD, AND MIRRORS](#).
20. Connect fan connector [97].
21. Install fan and tighten fasteners to 12-36 **in-lbs** (1.4-4.1 Nm). See [4.24 COOLING FAN](#).
22. Install rear shock absorber assembly. See [2.22 REAR SHOCK ABSORBER](#).
23. See [Figure 7-75](#). Connect foot brake light switch connector [121] (5). Install cable strap (4).
24. Install main fuse case (3).
25. Install main battery ground (1) and wire harness ground (2). Tighten fastener to 48-72 **in-lbs** (5.4-8.1 Nm).
26. See [Figure 7-74](#). Connect tail harness connector (3). Attach cable strap (2).
27. Install starter side of positive battery cable to starter.

⚠ WARNING

Always connect the positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

28. Install positive battery cable (red) to positive terminal of battery. Tighten to 72-96 **in-lbs** (8-11 Nm).
29. Connect negative battery cable. Tighten to 72-96 **in-lbs** (8-11 Nm).
30. Install tail frame upper body work. See [2.36 SUBFRAME TAIL ASSEMBLY AND BODY WORK](#).

⚠ WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift during vehicle operation and startle the rider, causing loss of control which could result in death or serious injury.

31. Install seat. See [2.38 SEAT](#).

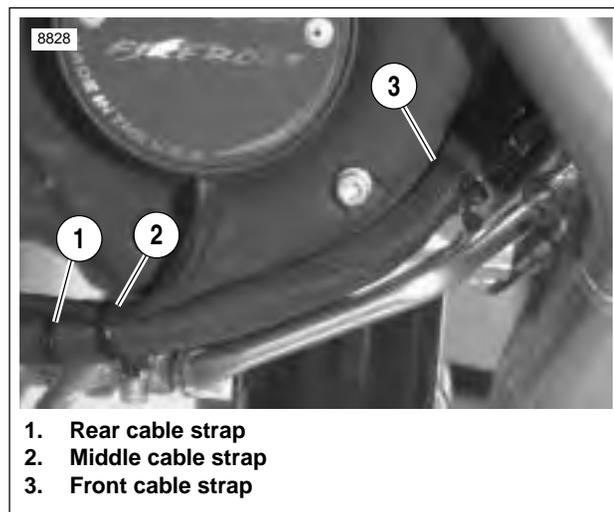


Figure 7-78. Cable Straps

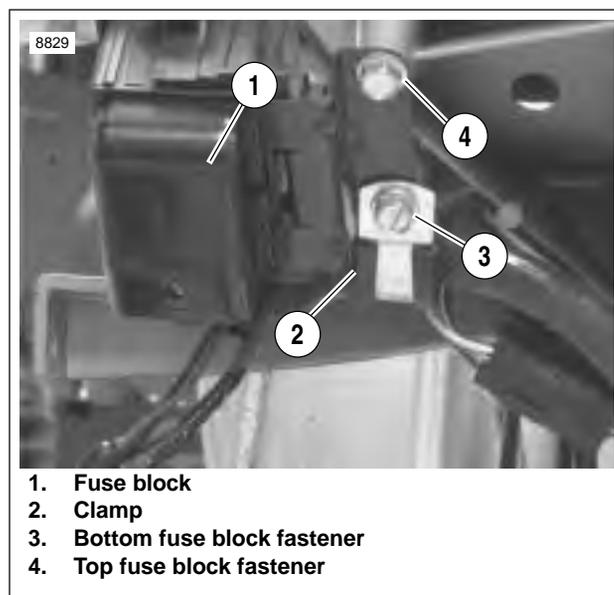


Figure 7-79. Fuse Block

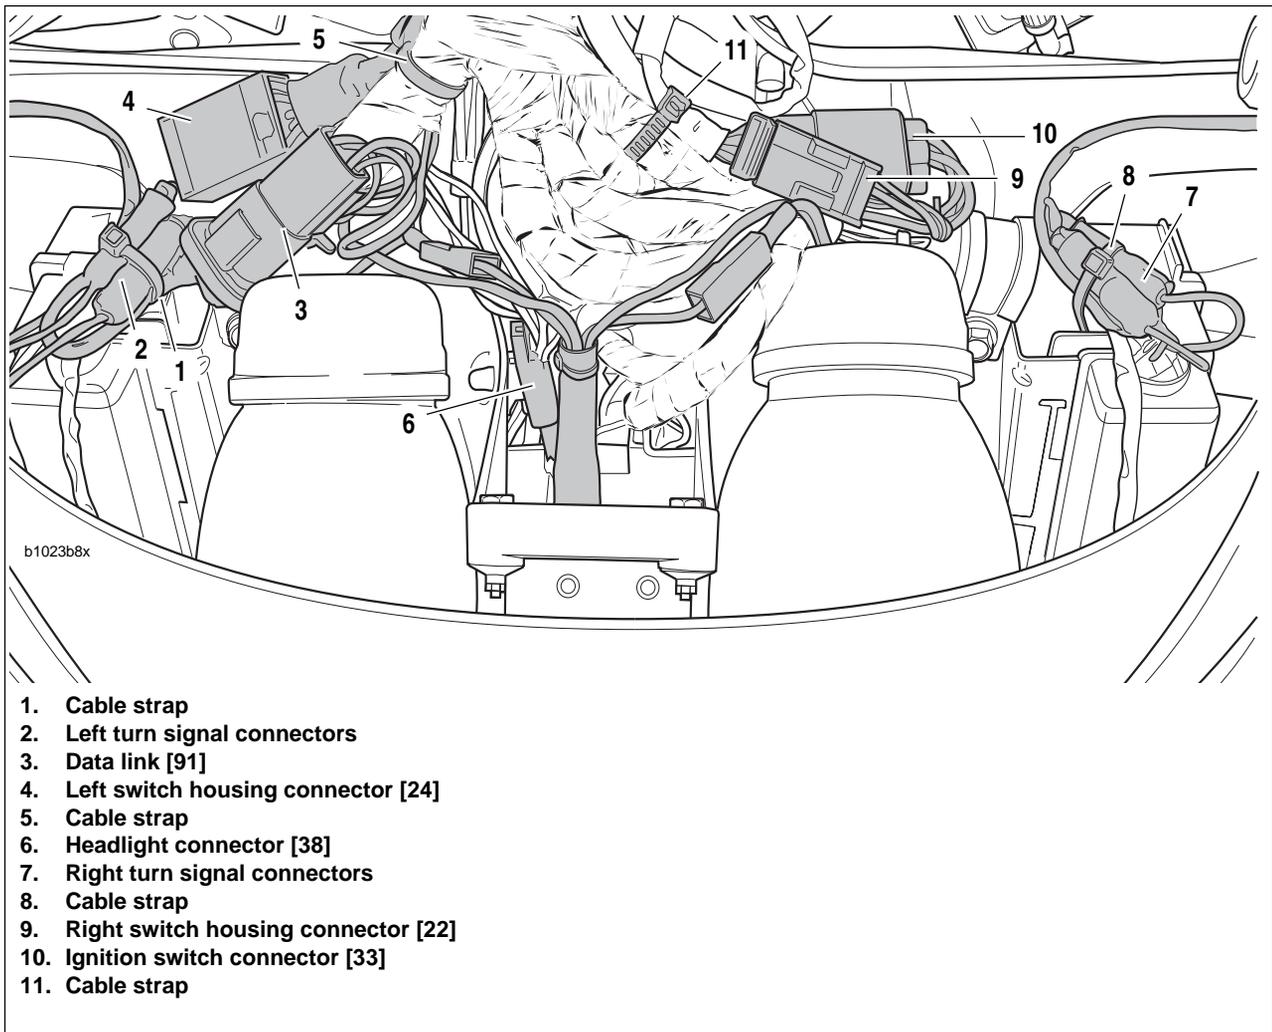


Figure 7-80. Fairing Wiring (viewed from underneath fairing)

REMOVAL

1. Remove seat and pillion. See [2.38 SEAT](#).
2. Remove four fasteners, nylon washers and intake cover assembly. See [2.34 INTAKE COVER ASSEMBLY](#).
3. Remove negative battery cable from battery.
4. Remove main battery ground and the exhaust actuator ground.
5. Remove the subframe tail body work. See [2.36 SUB-FRAME TAIL ASSEMBLY AND BODY WORK](#).
6. See [Figure 7-81](#). Separate exhaust actuator harness connector [165] (2) at main harness.
7. Note location of cable strap and cut as required.
8. Pull actuator harness through frame.
9. Move foam rubber isolator out of the way and disconnect connector [161B] from actuator.
10. If removing actuator:
 - a. Add free play to interactive exhaust cable, loosen jam nut and remove cable from bracket. See [7.6 INTERACTIVE EXHAUST SYSTEM \(XB12R\)](#).
 - b. Remove interactive exhaust cable from cable wheel.
 - c. Remove actuator.

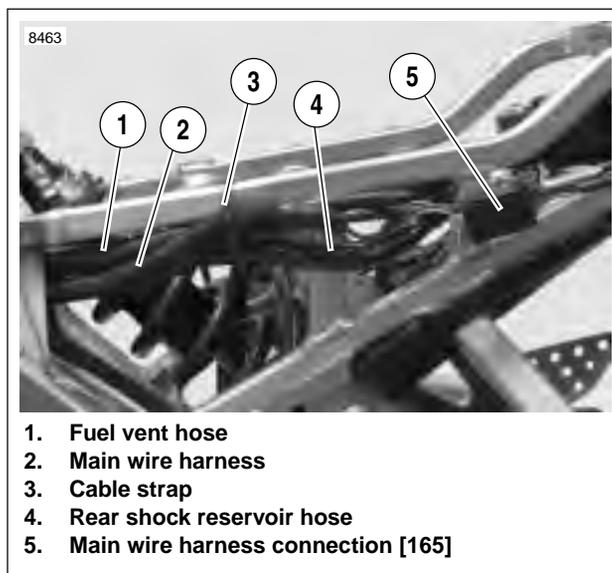


Figure 7-81. Left Side Subframe Hose and Wire Routing

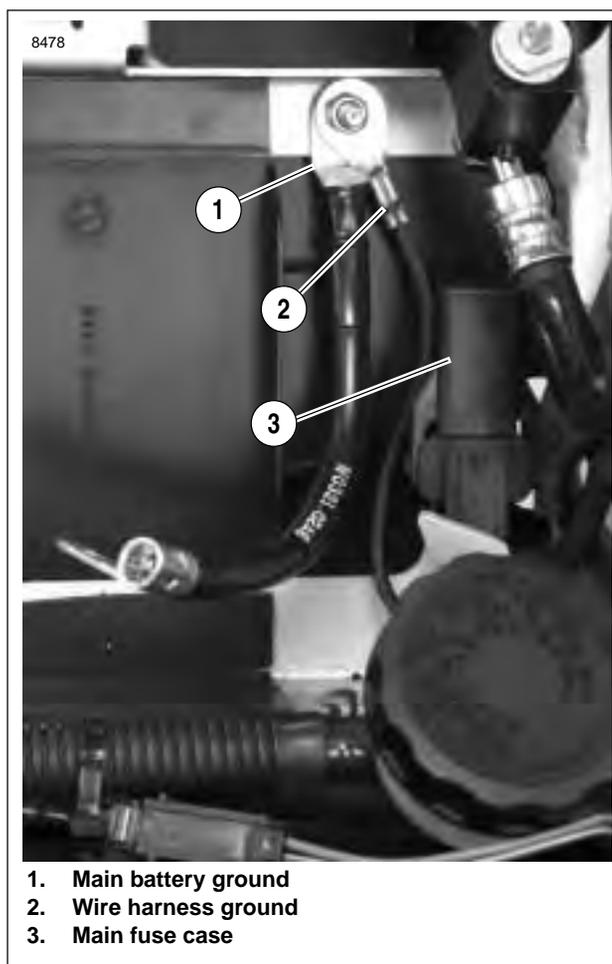


Figure 2-82. Battery and Harness Ground (battery removed for clarity)

INSTALLATION

1. Mate actuator connector[161B] to actuator.
2. See [Figure 7-83](#). If installing actuator:
 - a. Attach interactive exhaust cable (4) to cable wheel (3) on actuator.
 - b. Install foam rubber isolator (2) and actuator and fuel tank vent hose (1).
 - c. Adjust cable (4). See [1.17 INTERACTIVE EXHAUST CABLE \(XB12R\)](#).
3. Route harness along channel in airbox under frame and under main wiring harness.

CAUTION

If cable is routed in front of the frame lug it will cause the muffler valve to stay open not allowing it to work properly.

4. See [Figure 1-84](#). Verify that the interactive exhaust cable (2) is routed behind the frame lug (1) before installing air intake cover.
5. Route under battery cables.
6. Mate exhaust actuator harness connector halves [165].
7. Cable wrap were noted.
8. Install ground bolt through main battery ground cable and actuator ground wire. Tighten to 48-60 **in-lbs** (5.4-6.7 Nm).

WARNING

Always connect positive battery cable first. If the positive cable should contact ground with the negative cable installed, the resulting sparks may cause a battery explosion which could result in death or serious injury.

9. Connect negative battery cable to battery terminal. Tighten fastener to 72-96 **in-lbs** (8-11 Nm).
10. Install subframe tail body work.
11. Install intake cover. Tighten fasteners to 12-36 **in-lbs** (1.4-4.0 Nm).

WARNING

Pull up on seat to verify that it is properly secured, front and rear. A loose seat may shift during vehicle operation and startle the rider, possibly causing loss of vehicle control resulting in death or serious injury.

12. Install seat and pillion.

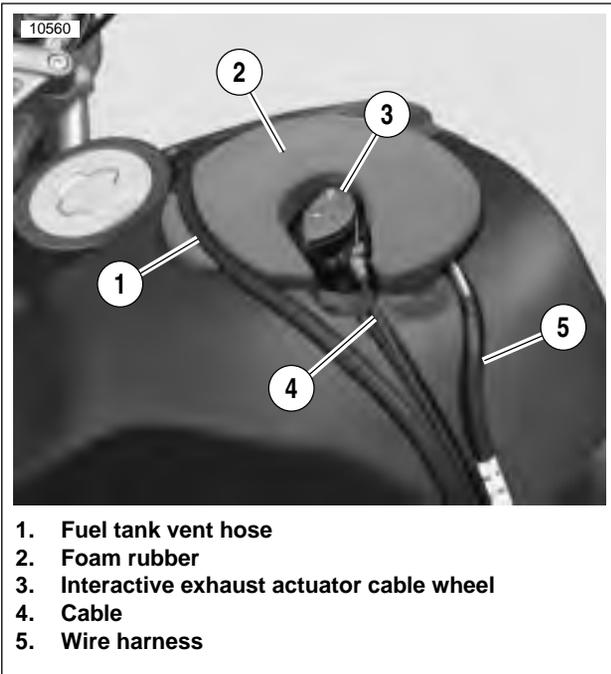


Figure 7-83. Interactive Exhaust Installation

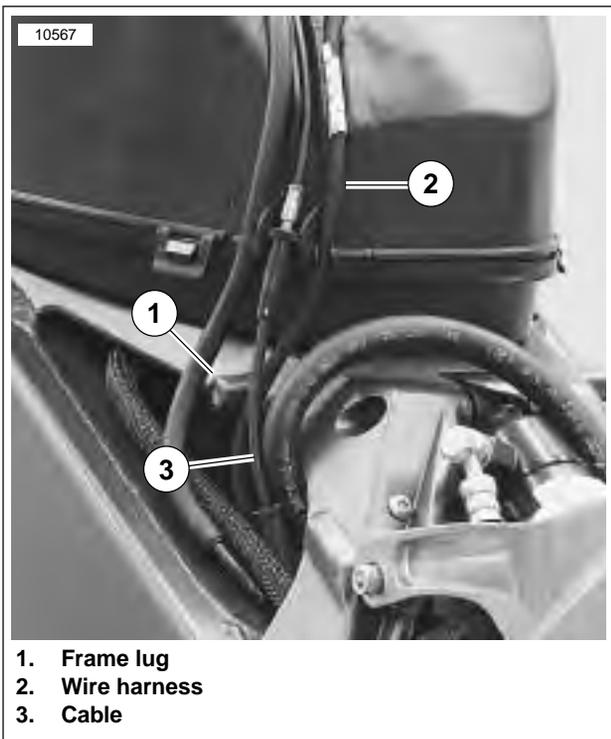


Figure 1-84. Correct Cable Routing Behind Frame Lug

GENERAL

Connectors for the stator [46], voltage regulator [77], vehicle speed sensor [65], cam position sensor [14] and neutral switch [131] are located under the sprocket cover.

REMOVAL

1. Remove sprocket cover. See 2.30 SPROCKET COVER.
2. See Figure 7-85. Disconnect appropriate connector(s).

INSTALLATION

NOTE


See Figure 7-85. All wiring under sprocket cover that gets routed from sprocket area towards front of vehicle is routed behind cam cover breather hose (8).

1. Route oil pressure switch wiring (10) from main harness (6), behind cam cover breather hose (8) to oil pressure switch located on front of engine.
2. Route sidestand switch wiring (not shown) from main harness, underneath engine and to sidestand switch [133].

NOTE


Stator connector wiring is installed over oil pressure and sidestand switch wiring.

3. Connect stator connector (9).
4. See Figure 7-86. Connect cam position sensor [14] (1). Form a loop (2) as shown using wiring leading to cam position sensor.
5. See Figure 7-87. Connect neutral switch connector.
6. See Figure 7-88. Form a loop (6) as shown using neutral switch wiring.

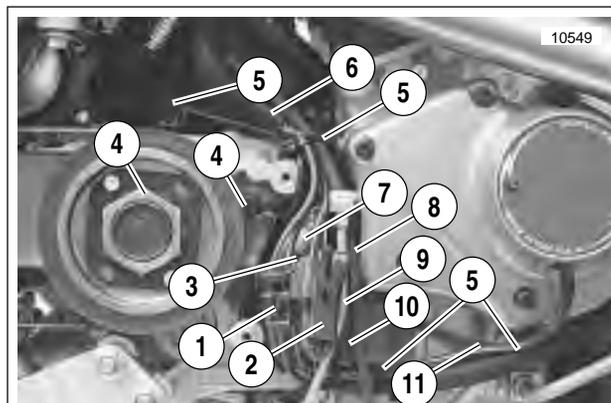

1. Voltage regulator connector [77]
2. Cam position sensor connector [14]
3. Neutral switch connector [131] (approximate location)
4. Neutral switch location
5. Cable strap
6. Main harness
7. Vehicle speed sensor connector [65]
8. Interactive exhaust cable
9. Cam cover breather hose
10. Stator connector [46]
11. Oil pressure switch wiring

Figure 7-85. Sprocket Cover Wiring

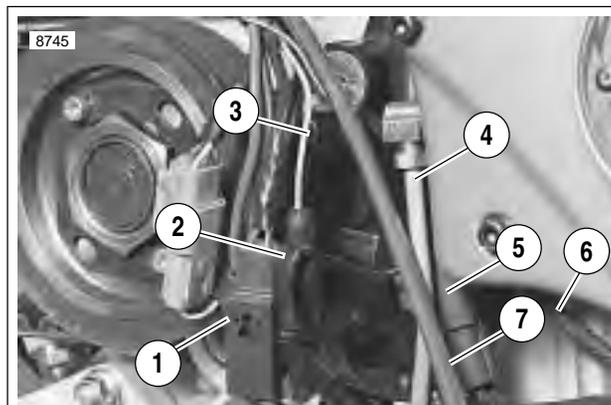

1. Cam position sensor [14]
2. Loop in voltage regulator wiring
3. Neutral switch location
4. Cam cover breather hose
5. Stator connector [46]
6. Oil pressure switch wiring
7. Interactive exhaust cable

Figure 7-86. Cam Position Sensor Wiring

NOTE

In next step, be sure loops in cam position sensor and neutral switch wiring are intact.

7. Use cable strap (5) to secure cam position sensor (1), cam position sensor wiring (3), neutral switch connector (4) and neutral switch connector wiring (6).
8. See [Figure 7-89](#). Connect vehicle speed sensor connector.

NOTE

See [Figure 7-90](#). In next step, be sure main harness (4) is routed around sprocket cover boss (2).

9. See [Figure 7-90](#). Connect voltage regulator connector [77] (1). Be sure connector latch faces inward and voltage regulator wires are positioned behind other wires in harness at sprocket cover boss (2).
10. Install cable strap (3) securing vehicle speed sensor wiring to starter connector [128] wiring.
11. Install cable strap (5) securing main harness wiring.
12. Install cable strap (6) securing stator, cam position sensor and oil pressure switch wiring.
13. Add cable strap (7) to secure cam position sensor and voltage regulator wiring.

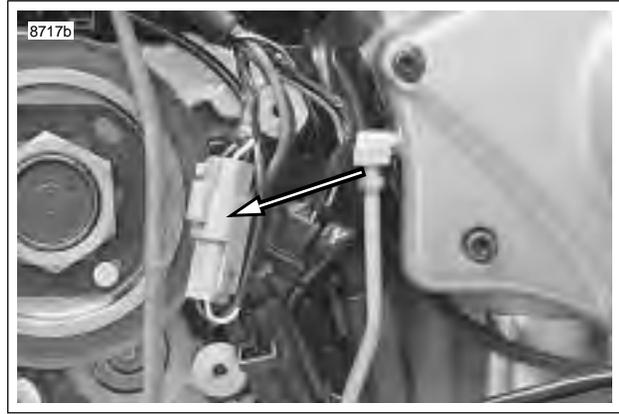


Figure 7-89. Vehicle Speed Sensor Connector [65]

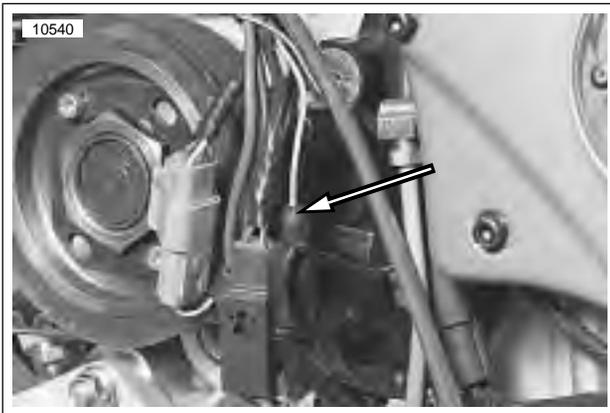


Figure 7-87. Neutral Switch Connector [131]

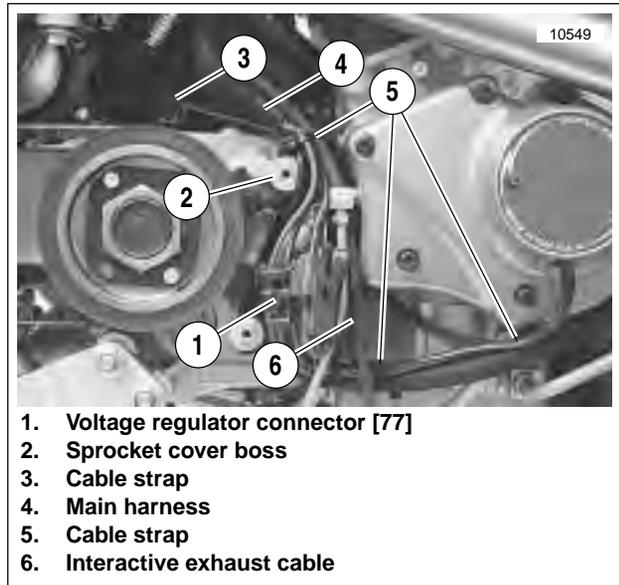


Figure 7-90. Assembled Wiring

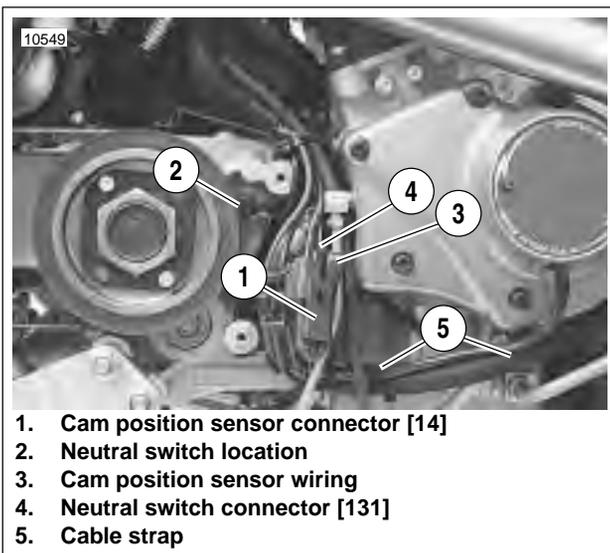


Figure 7-88. Neutral Switch Wiring

[Table Of Contents](#)

| SUBJECT | PAGE NO. |
|--|-----------------|
| APPENDIX A-TOOLS | A-1 |
| APPENDIX B-WIRING | B-1 |
| APPENDIX C-METRIC CONVERSIONS | C-1 |
| APPENDIX D-HOSE AND WIRE ROUTING | D-1 |

APPENDICES

